


INSTALLATION GUIDE

Please keep these instructions for future reference

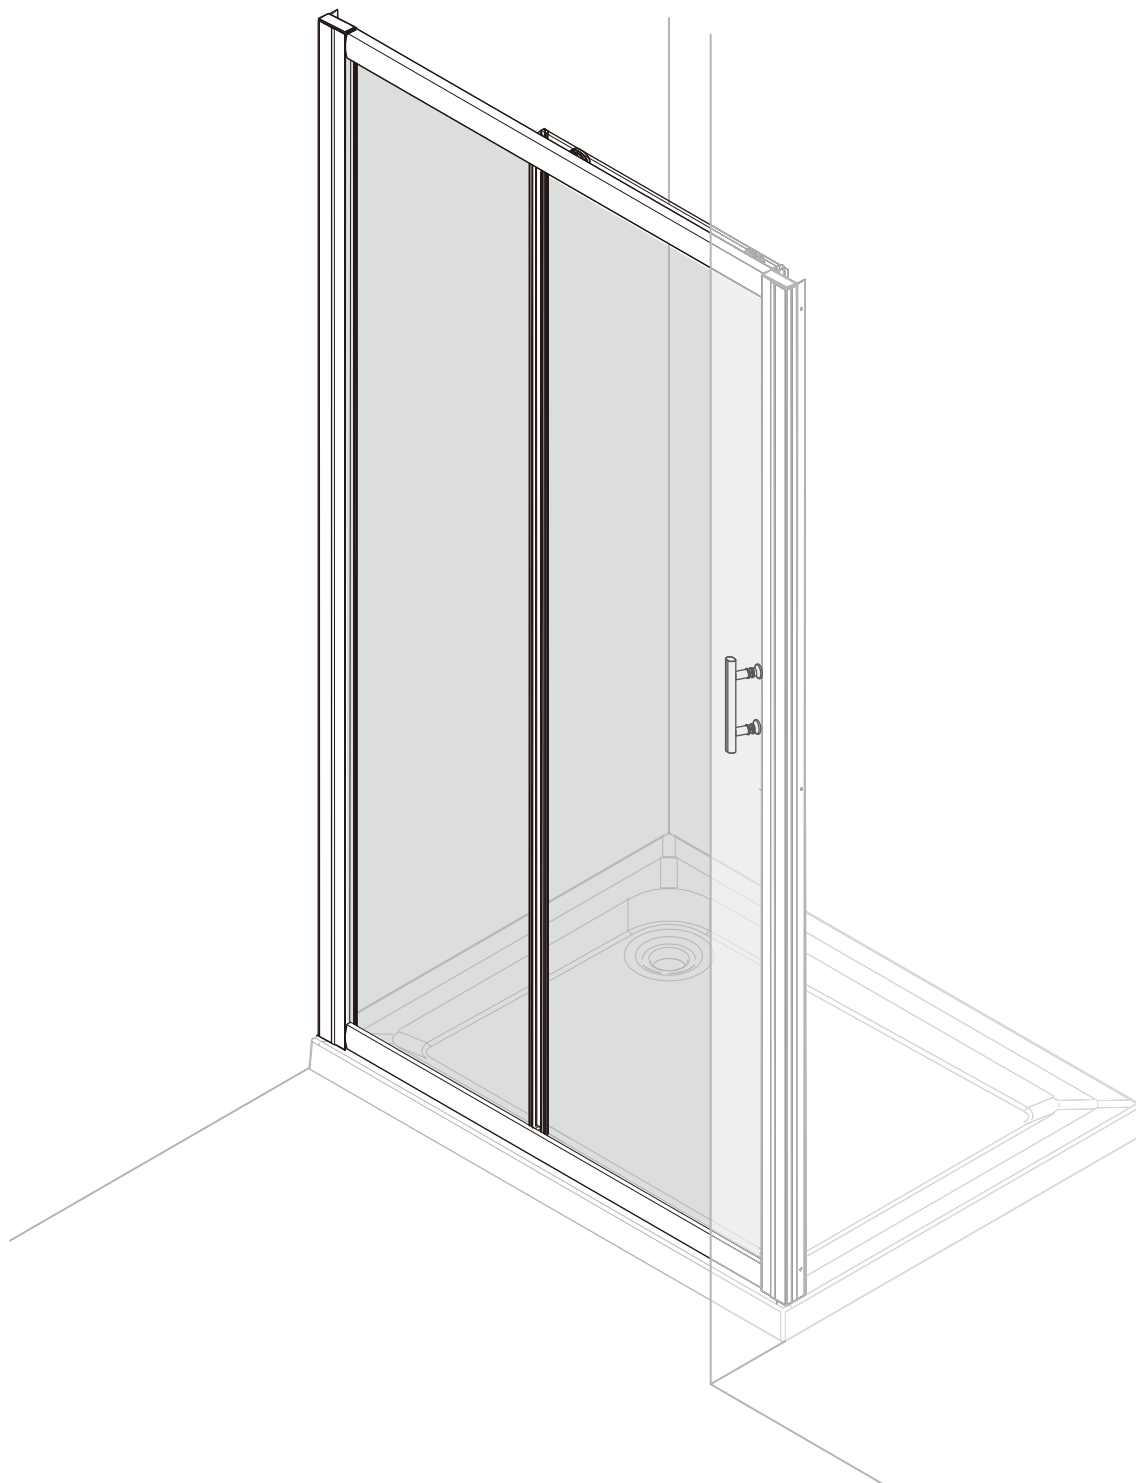

Suitable for:

1000x1900mm	1100x1900mm
1200x1900mm	1300x1900mm






IMPORTANT


- The toughened glass (EN12150-1) used in shower enclosures and bath screens is completely safe according to our guidelines with care installation.
- It is important to handle and install the glass with caution to prevent any impact or temperature fluctuations that could create stress points. For safety reasons, we recommend two people to perform the installation.
- Toughened glass is naturally stronger than standard glass to ensure that it is safe for use in the bathroom. In the unlikely event that the glass does break due to the above reasons then it will do so into small, thumbnail sized blunt fragments.

PRE-INSTALLATION CHECKS
















- Read all the instructions carefully and make sure you have all the parts from the box contents before you start installation.
- Please kindly take care when unpacking the items from the packaging, especially the toughened glass components.
- Carefully check all the components you have received for damage or defects before you start installation – we cannot accept responsibility for any defects or damage that you may find once installation has started.
- Ensure that there are no hidden pipes or cables before you carry out any drilling.
- Refrain from making any modifications to the toughened safety glass itself to avoid potential damage.

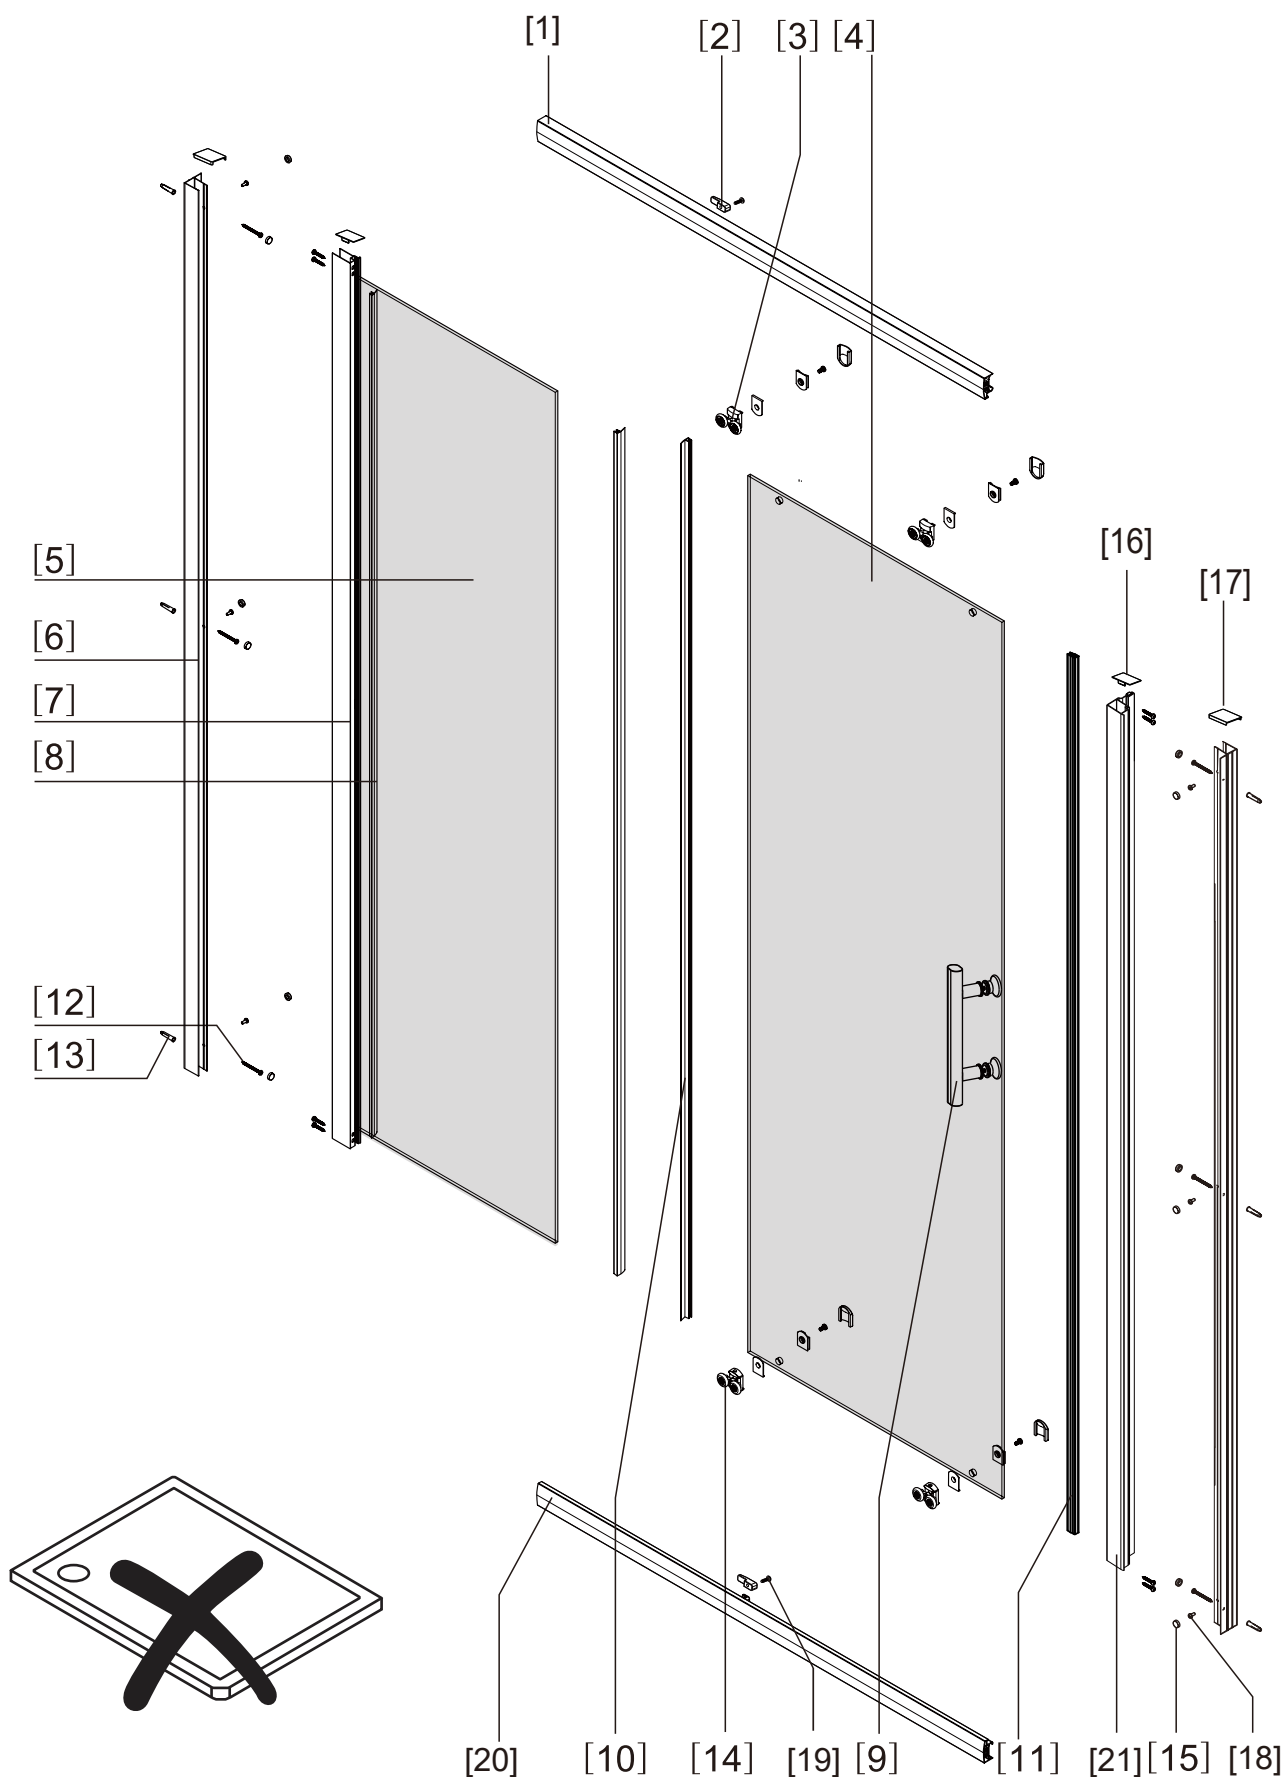


Tools required (not supplied) :

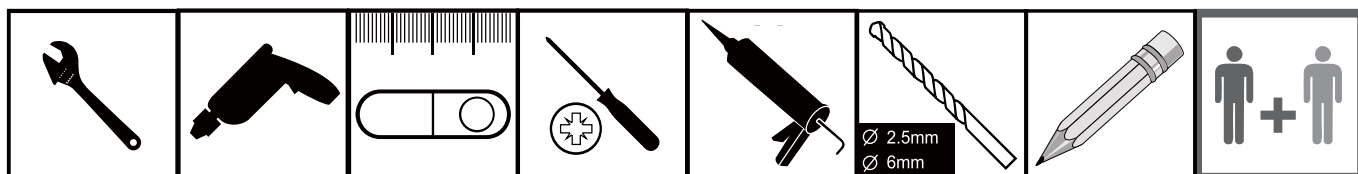


◆ Box Contents

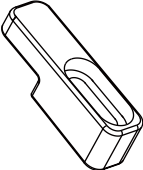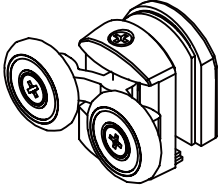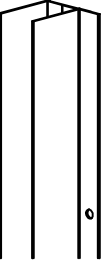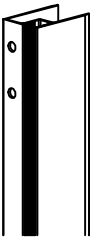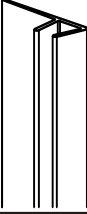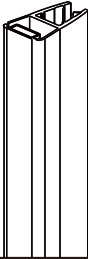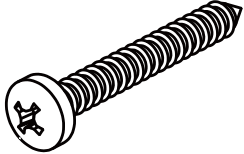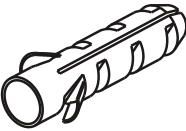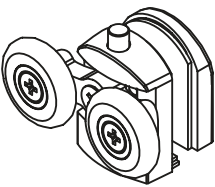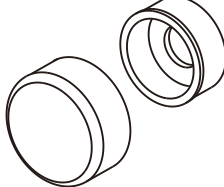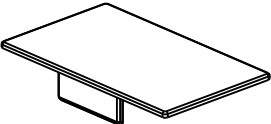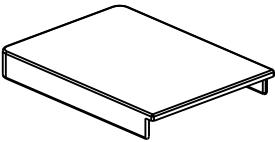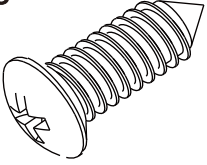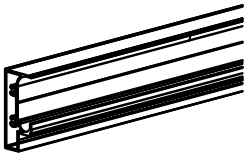1  X1	2  X2	3  X2	4  X1
5  X1	6  X2	7  X1	8  X1
9  X1	10  X2	11  X1	12  3.9X35 X14
13  X6	14  X2	15  X12	16  X2
17  X2	18  4X10 X6	19  3.9X13 X2	20  X1
21  X1			


1

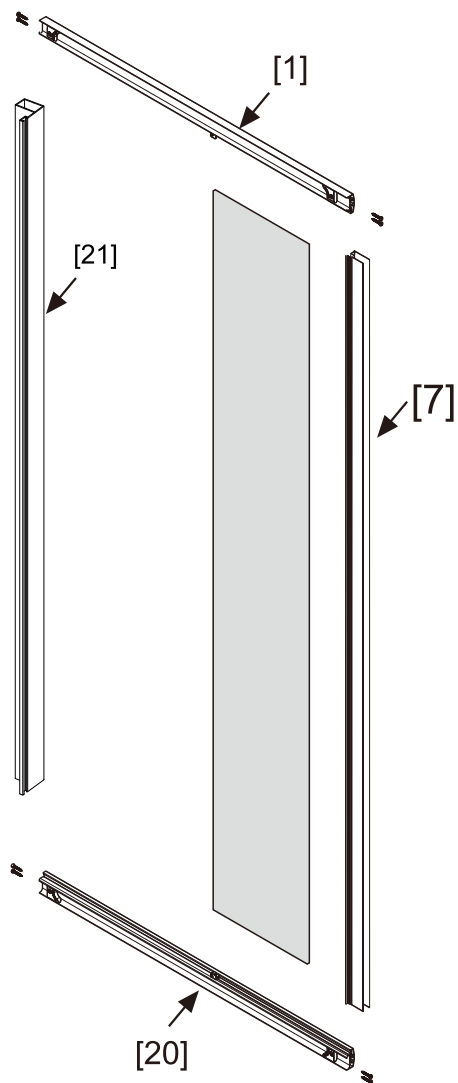


1.1

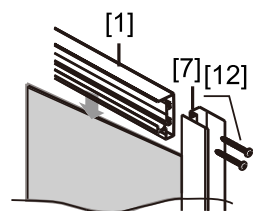


1.2

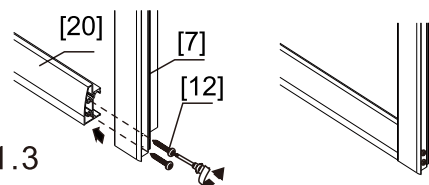


1.3

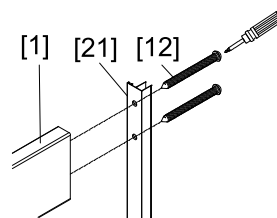



1.4

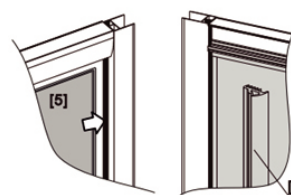


2

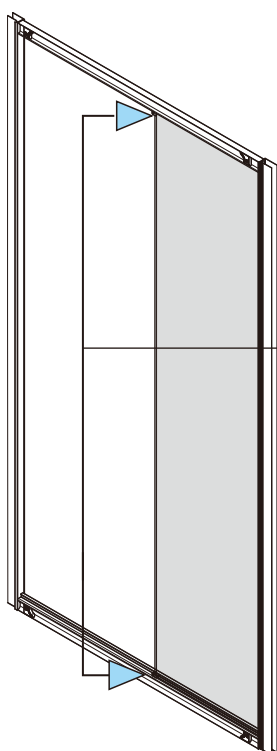

2.2

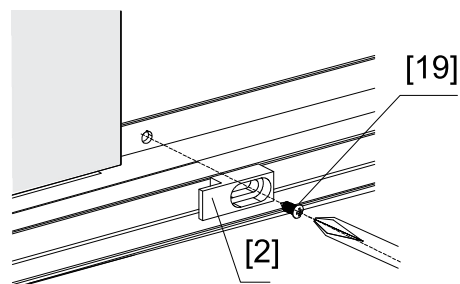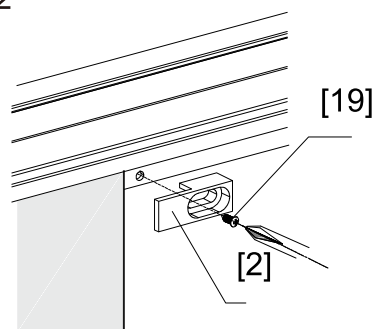


3

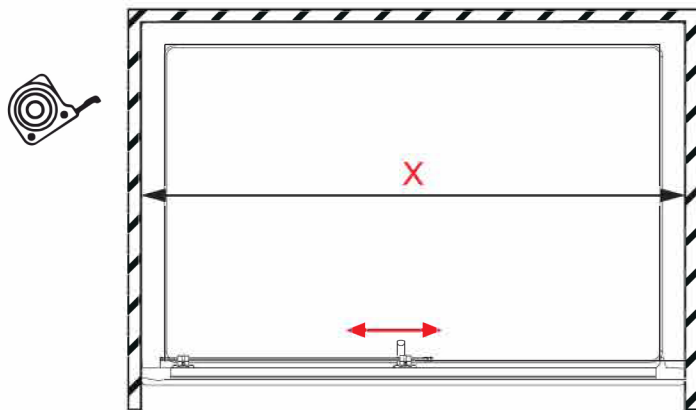


Size mm	X
1000x1900	980-1020
1100x1900	1080-1120
1200x1900	1180-1220
1300x1900	1280-1320

3.1

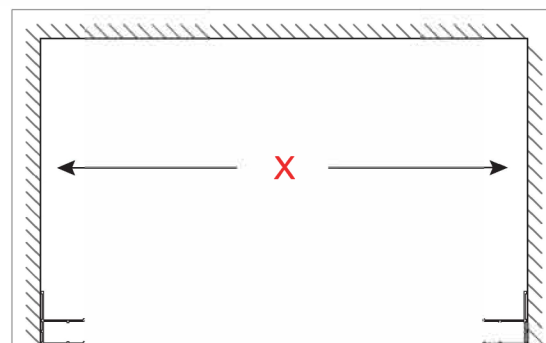


4

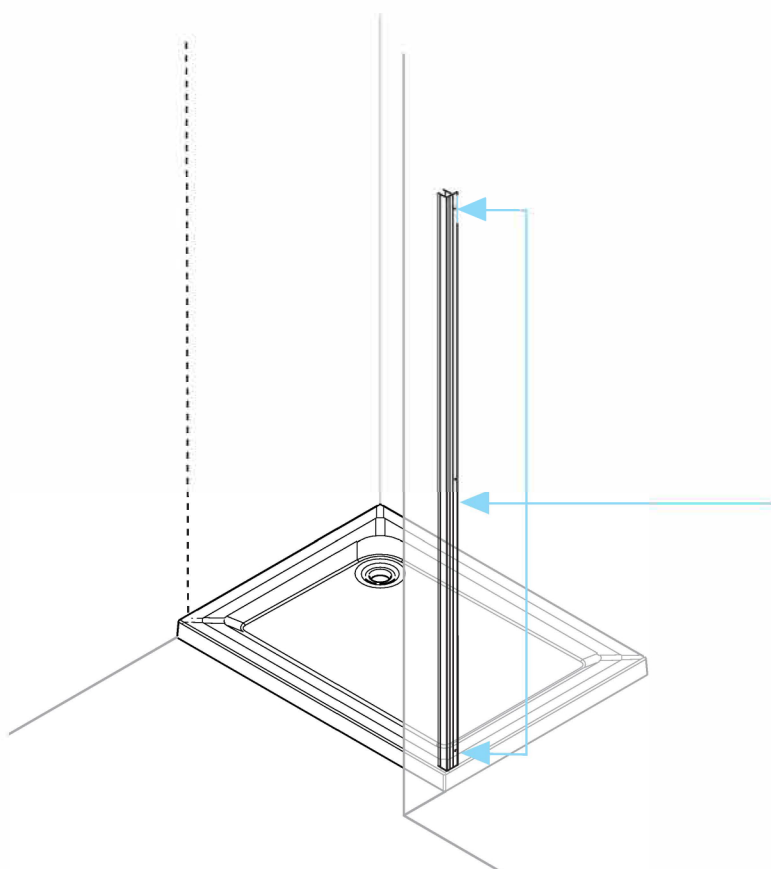


Notice: You need to fix one wall profile first at that moment.


4.1

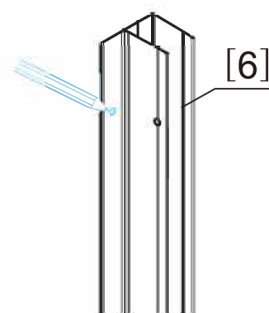


4.2

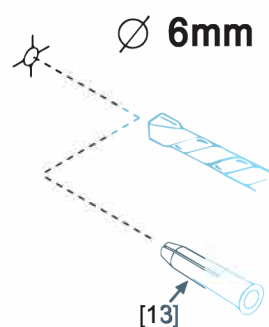


4.3

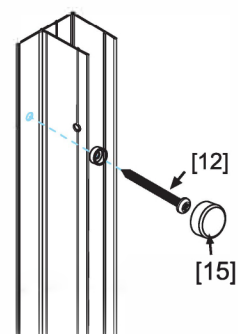


5

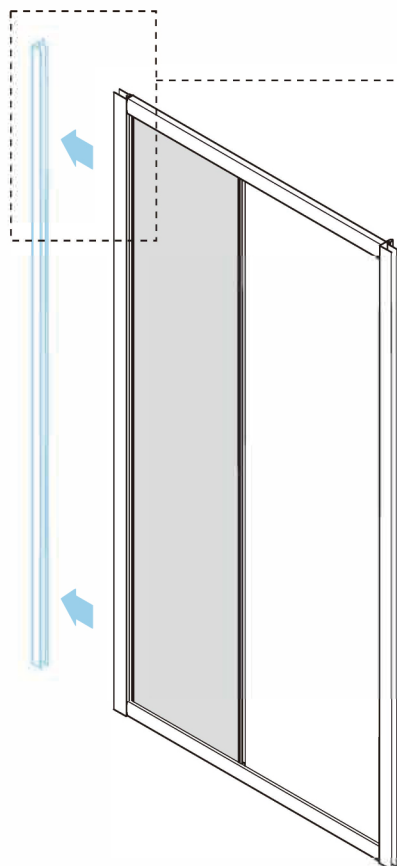



5.1

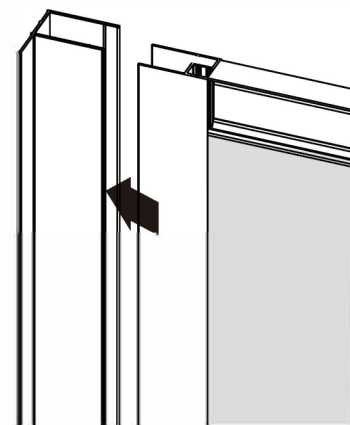


5.2

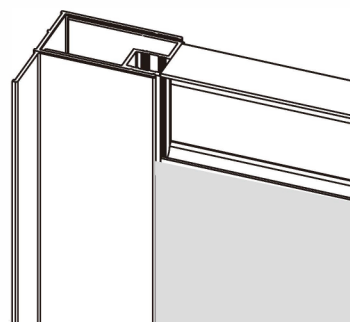


6

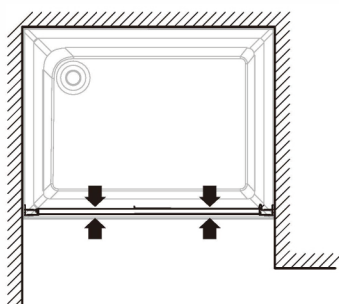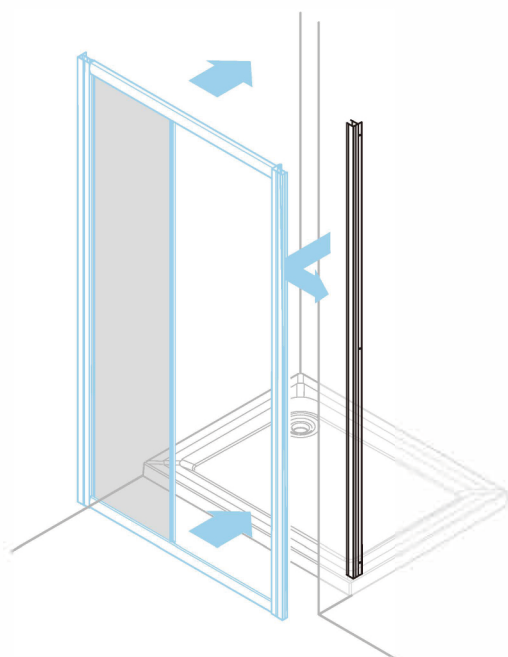


6.1

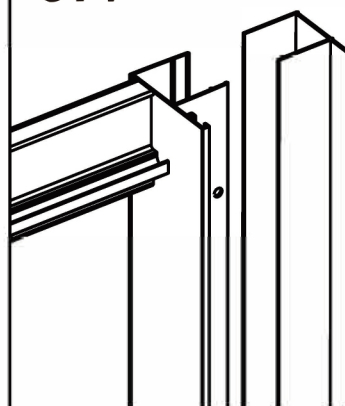


6.2

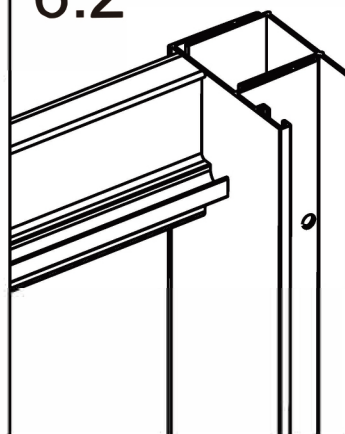


7

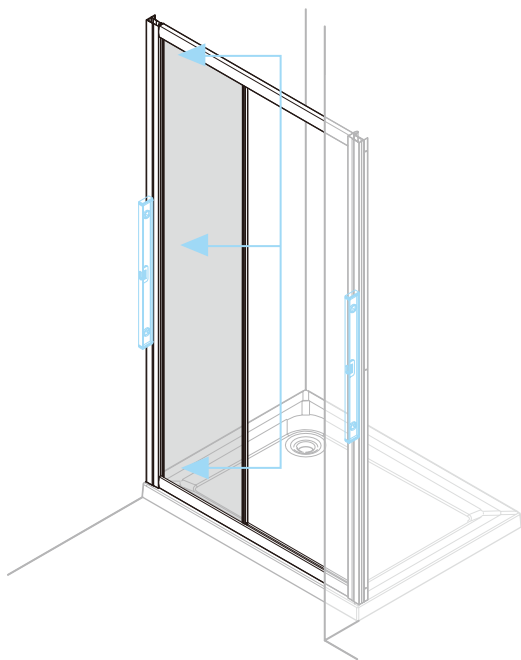


7.1

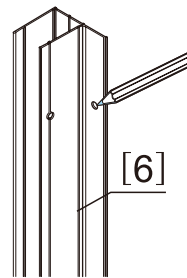


7.2

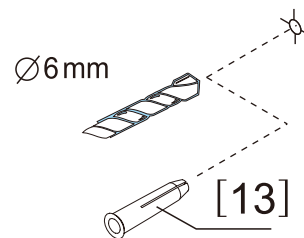


7.3

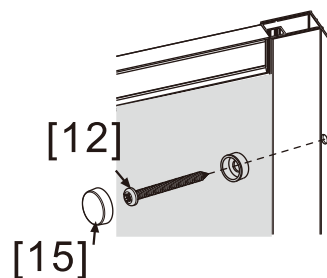


8

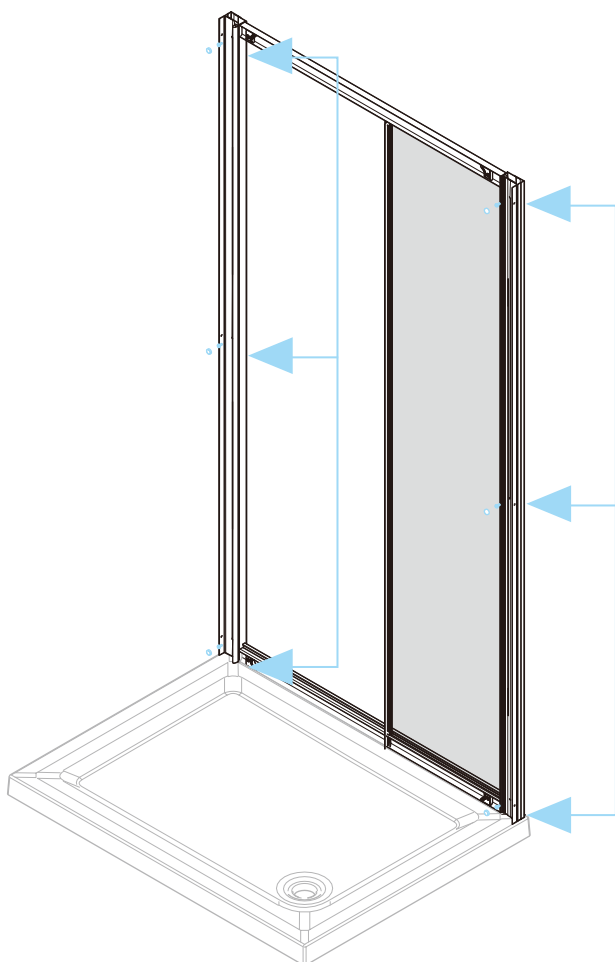


8.1

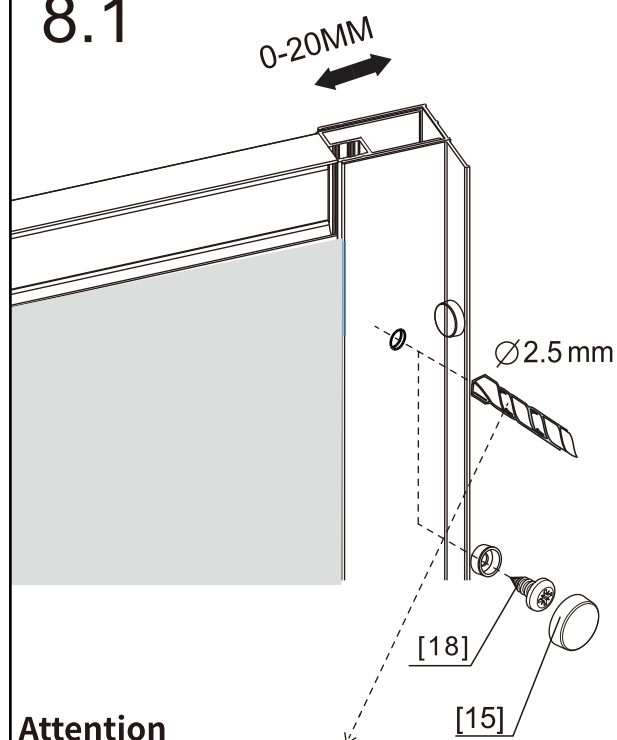


Attention

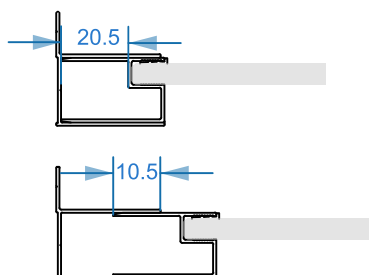


9

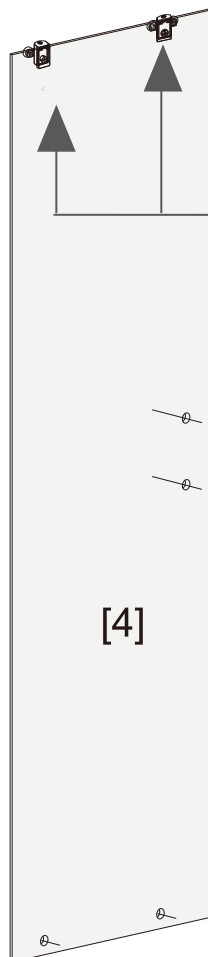


9.1

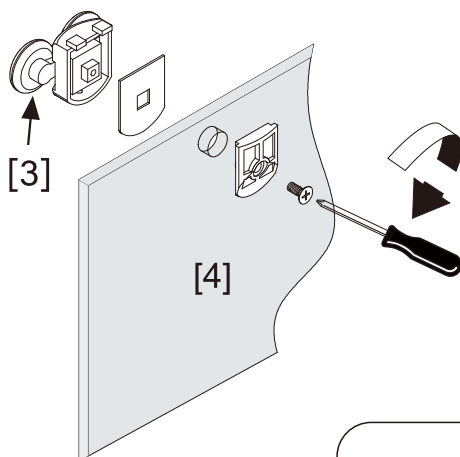


10

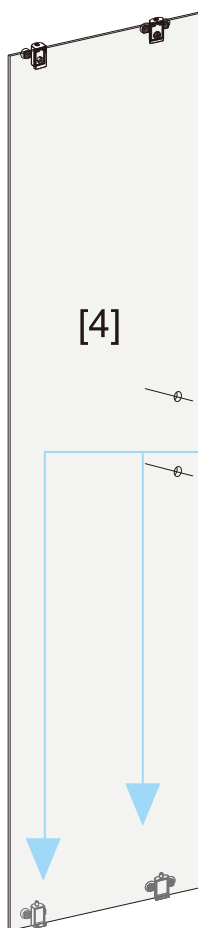


10.1

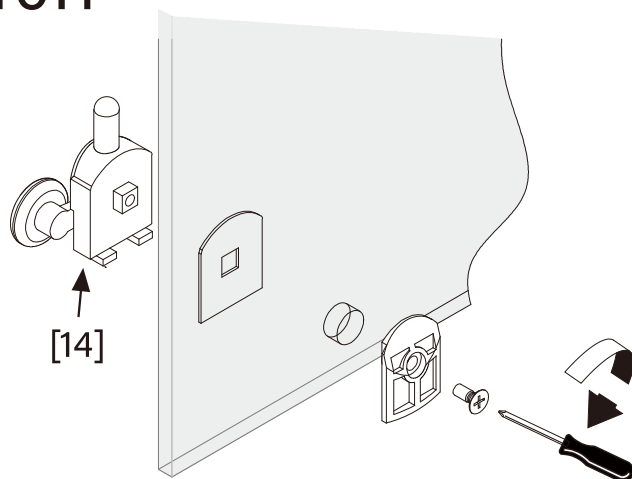


11

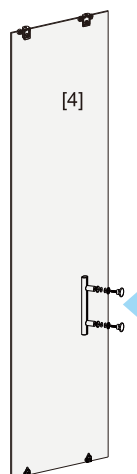


11.1

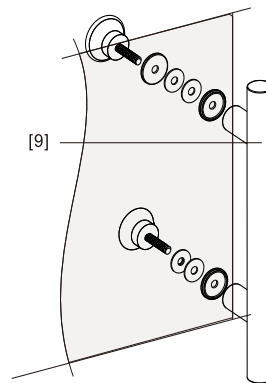


12

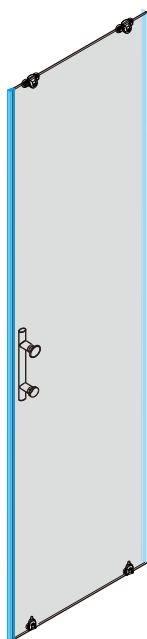


12.1

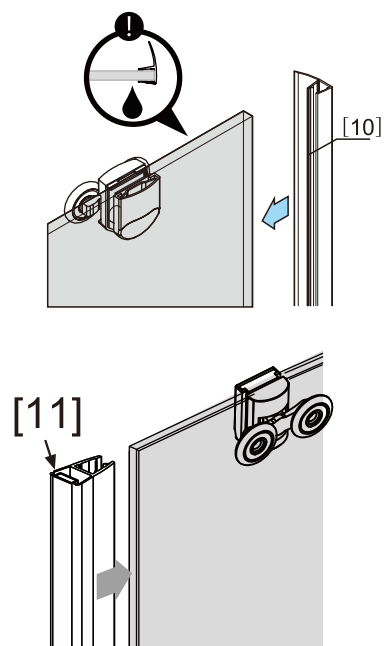


13

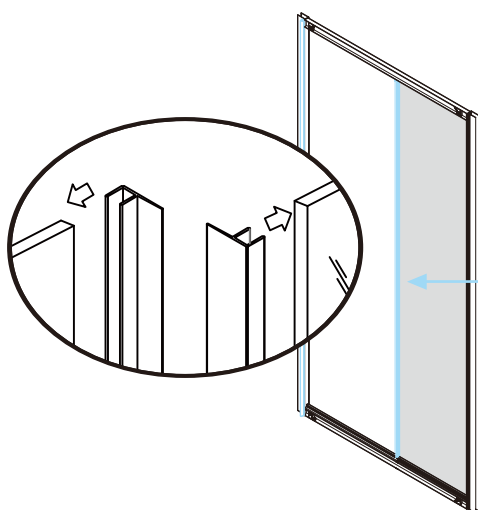


13.1

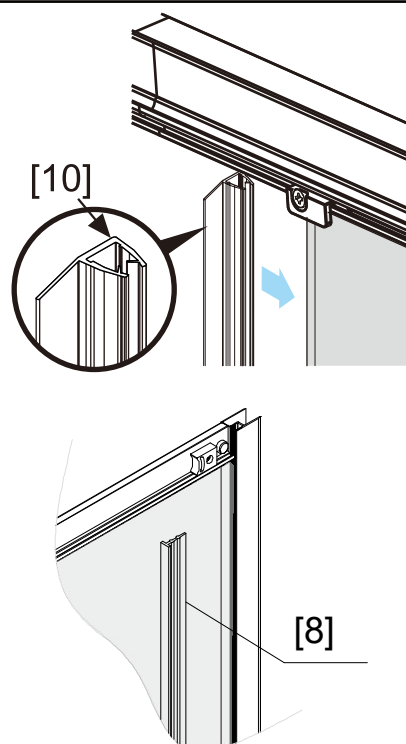


14

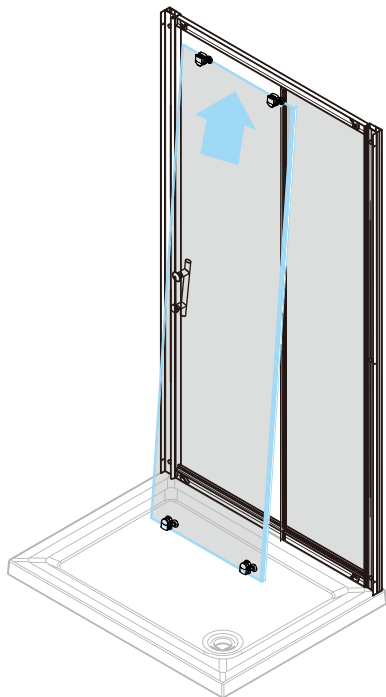


14.1

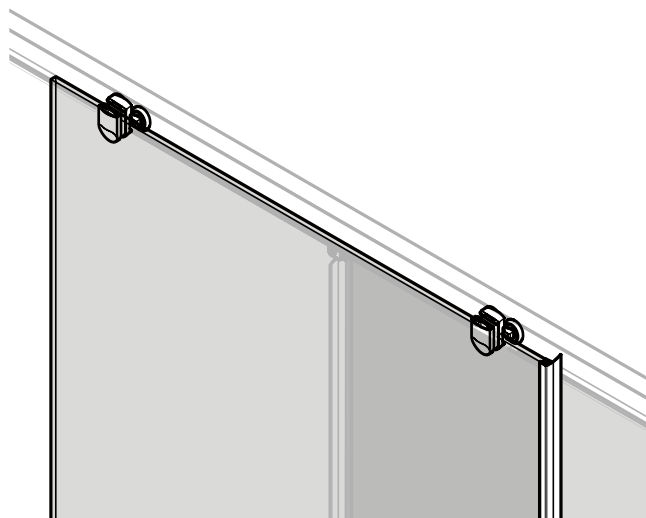


15

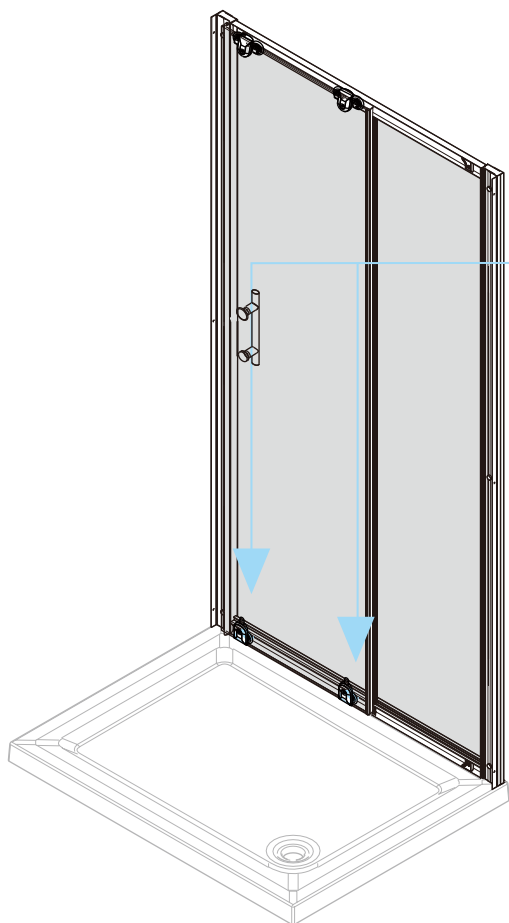


15.1

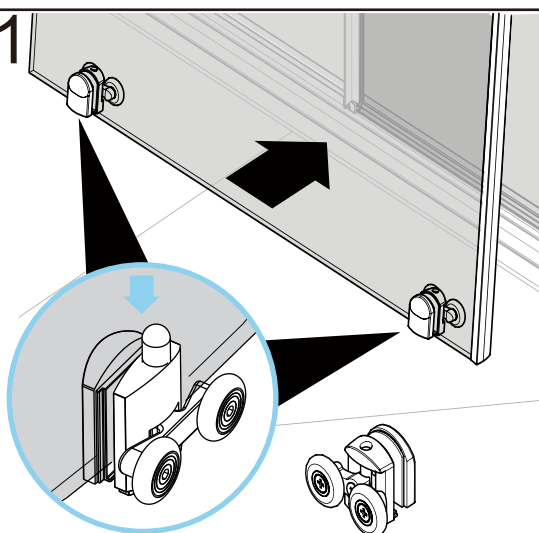



15.2

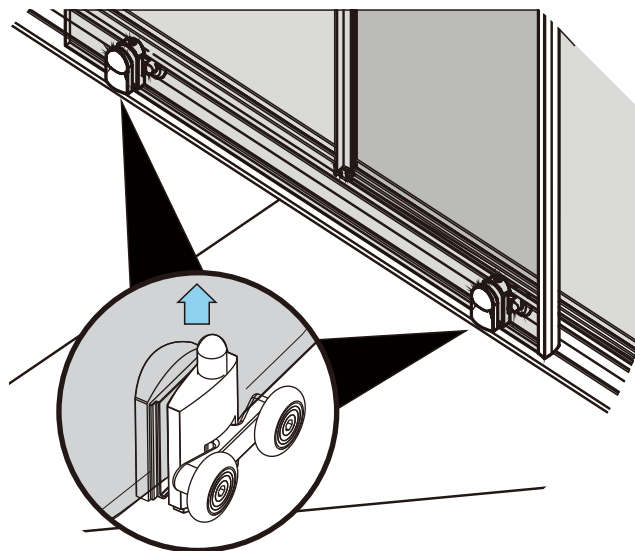

16

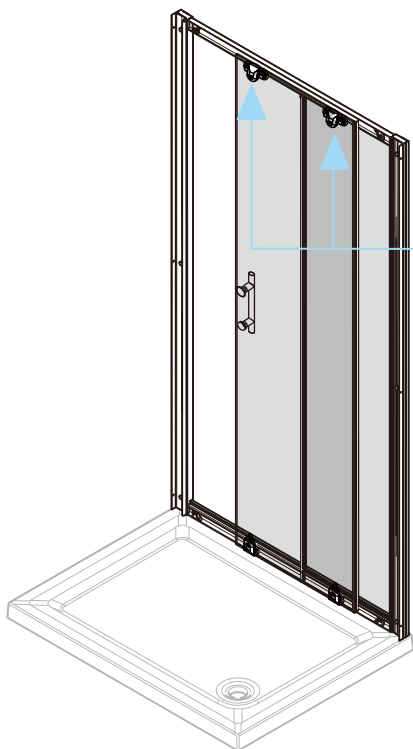


16.1

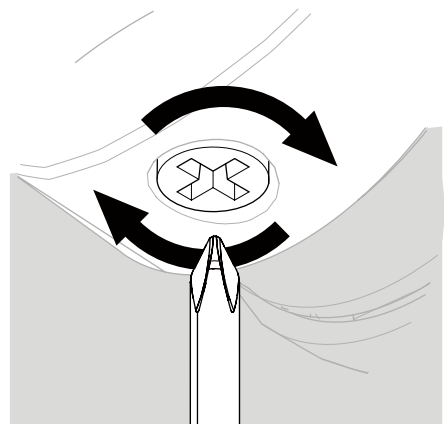
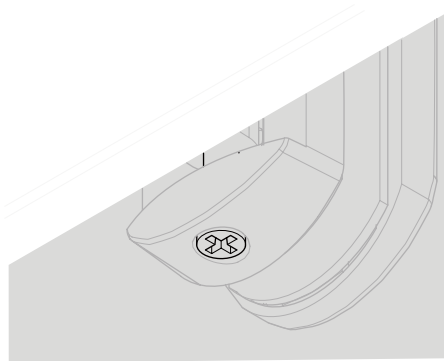







Please adjust the top roller up and down with the screw shown above using a screwdriver.


17

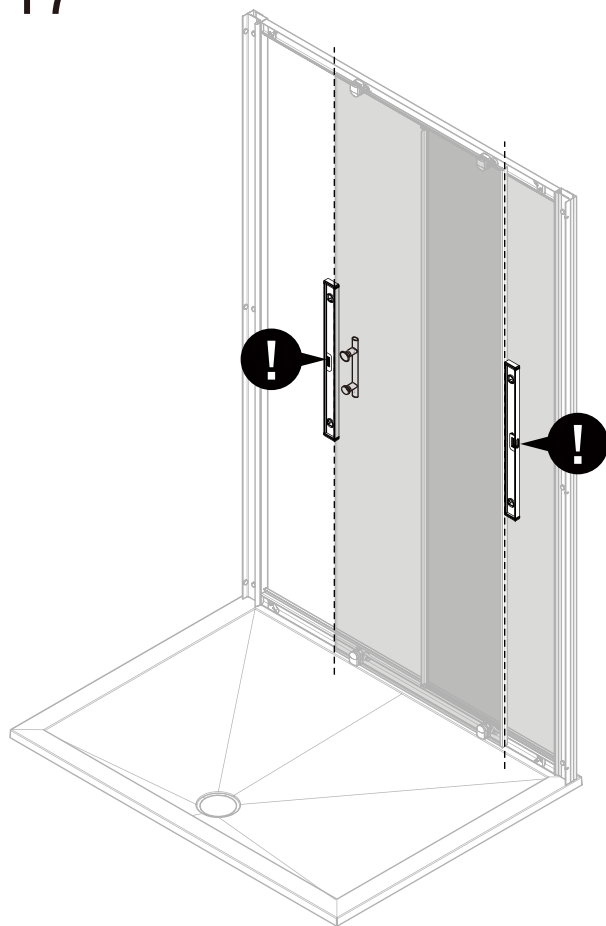

17.1

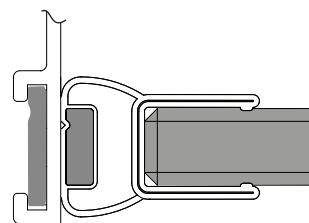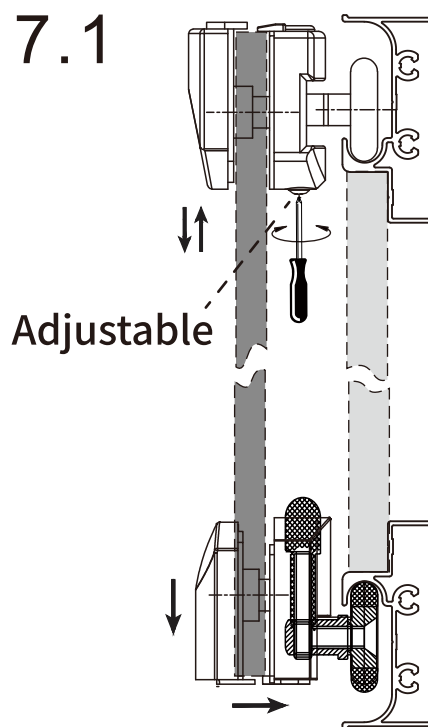

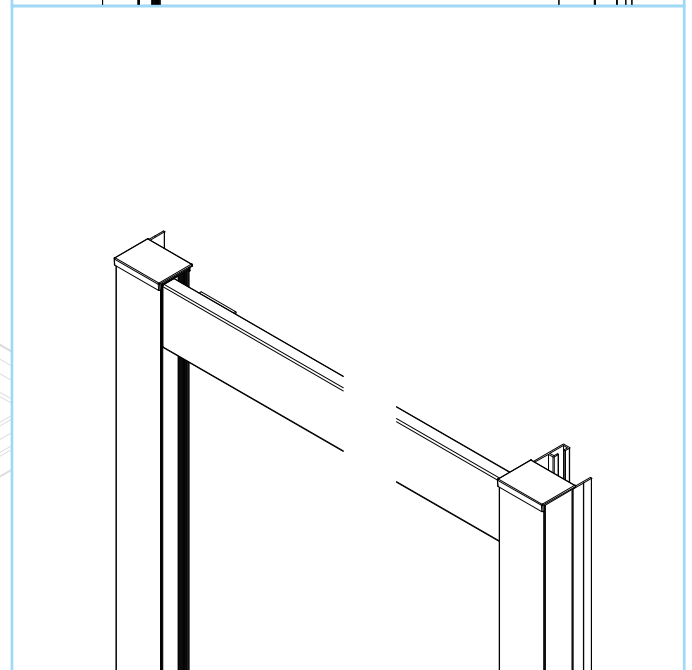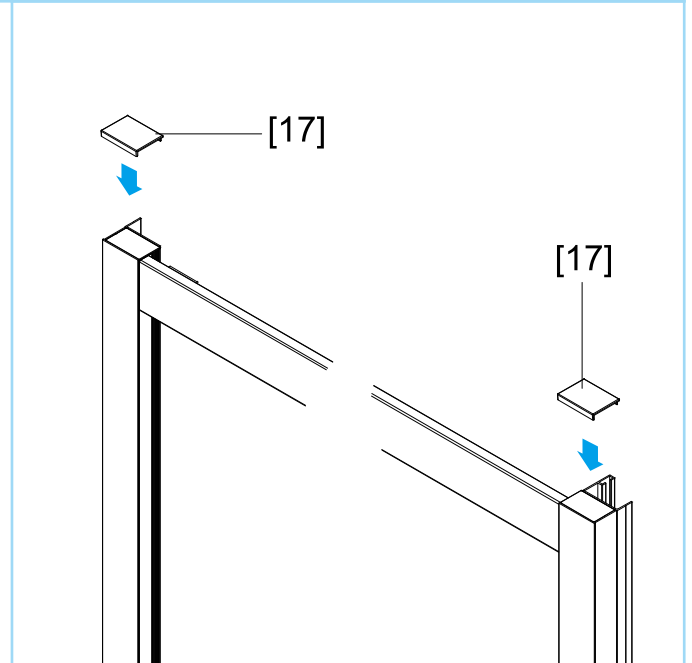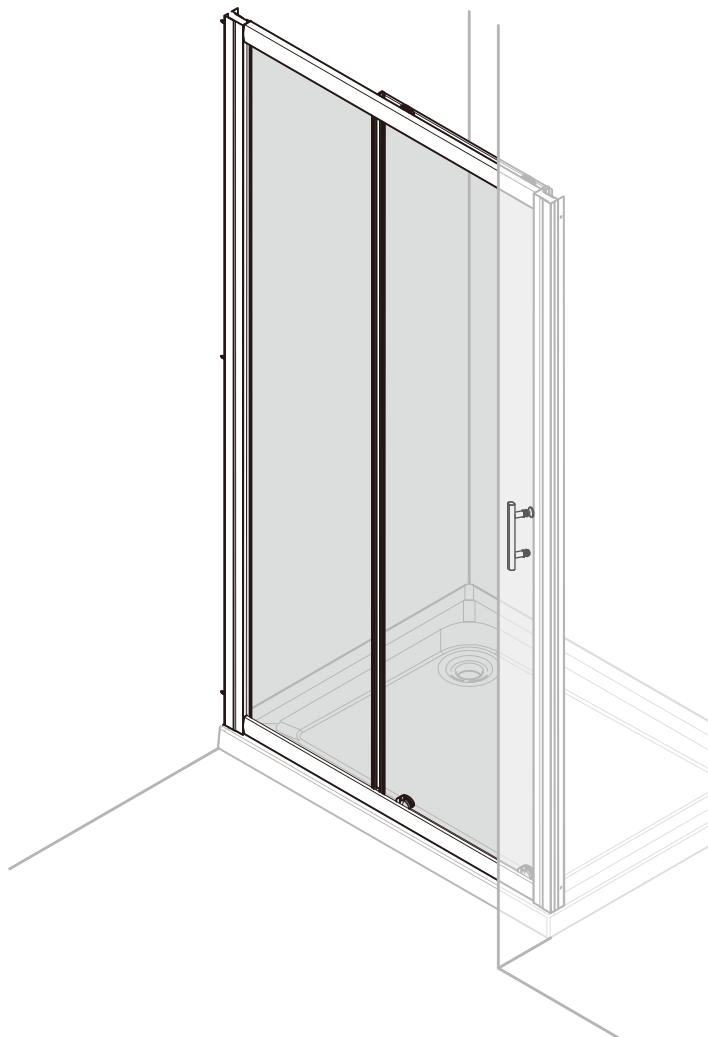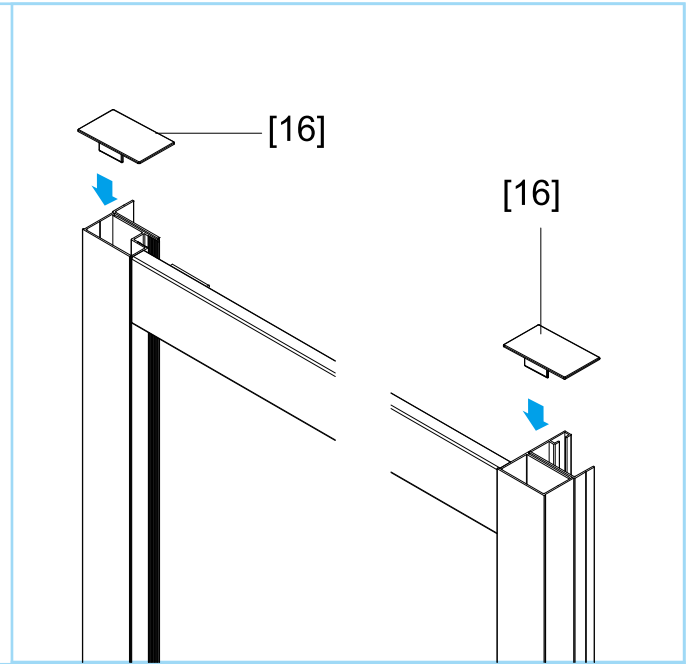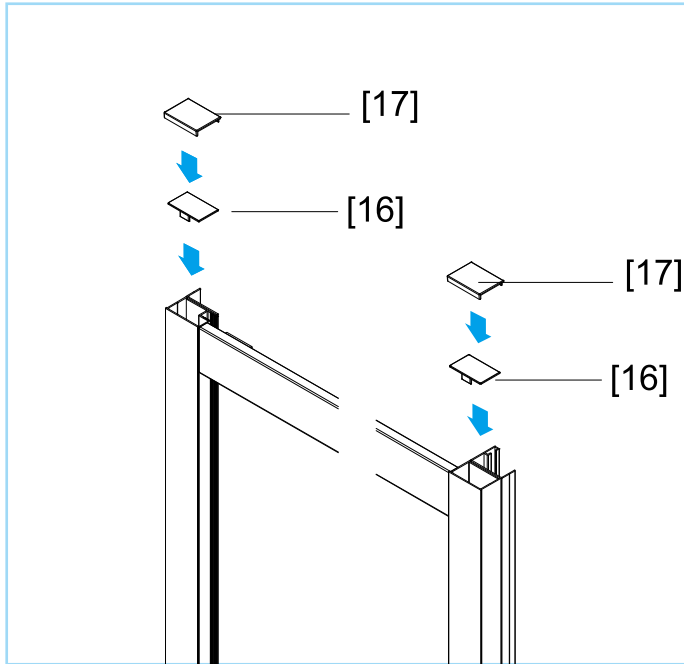

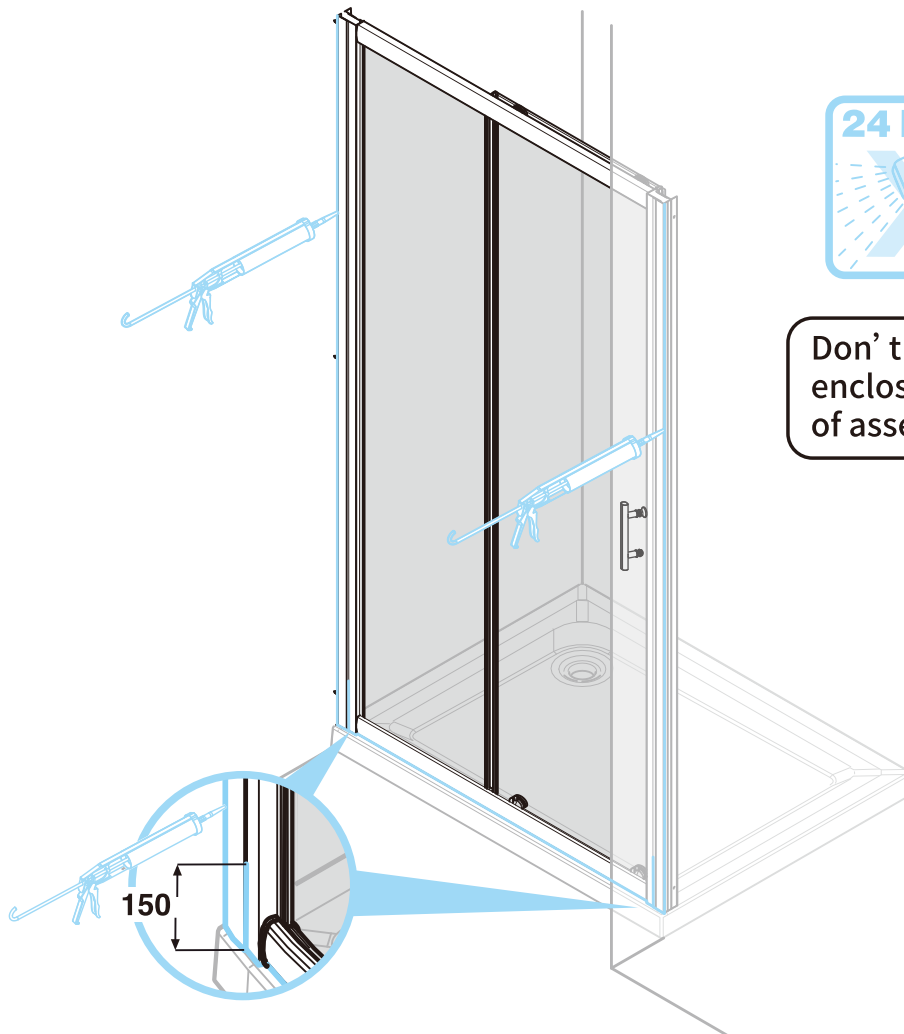

Don't use the shower enclosure within 24 hours of assembly.

- **All parts of the products should be cleaned with a cloth. Soaked in neutral detergent soapy water.**
- **Please do not use sharp tools such as blades, scissors to clean the shower door.**
- **Please do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.**
- **Please do not use any strong detergent, alcohol or abrasive cleaning substances to clean your shower enclosure.**
- **If you require any additional information or have any issues with this product please contact customer services.**