










ITEM NO.:V028B

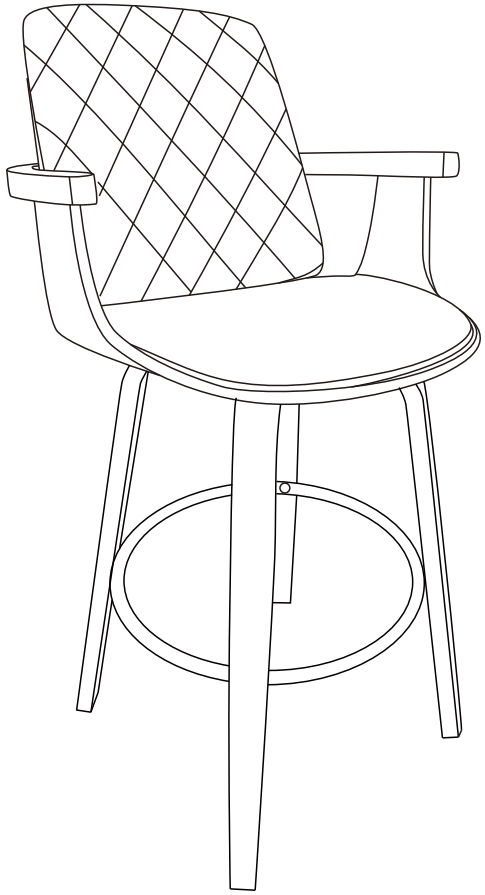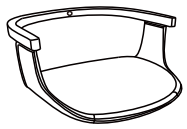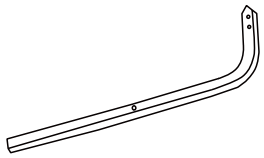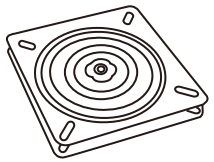


A×1 	B×1 	C×4 	D×1 	E×1 	F×1 	G×1+1EXT  M6×40mm
H×10+1EXT  M6×20mm	I×2+1EXT  M6×25mm	J×4+1EXT  M6×30mm	K×2  RUBBER WASHER	L×1+1EXT  PLASTIC CAP	M×1  M6	N×1  SPARE FOOTNAIL

1

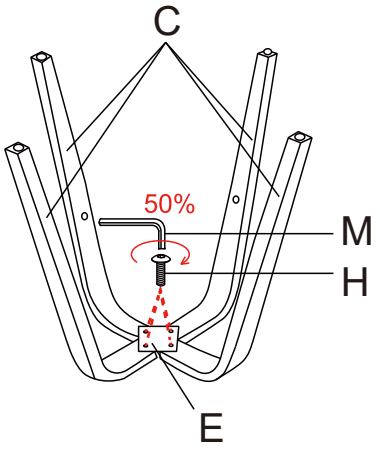


Note:DO NOT tighten the screws(H) in step 1

2

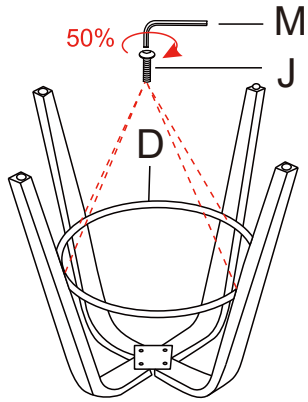


Note:DO NOT tighten the screws(J) in step 2

3

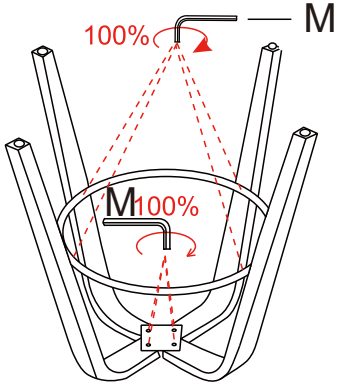


Note:Tighten the screws(H) and screws (J) in step 3

4

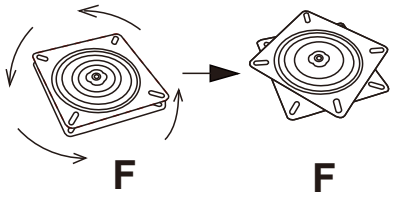


Note:Part F can be swival


5

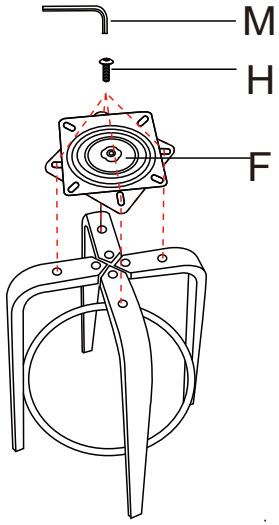


6

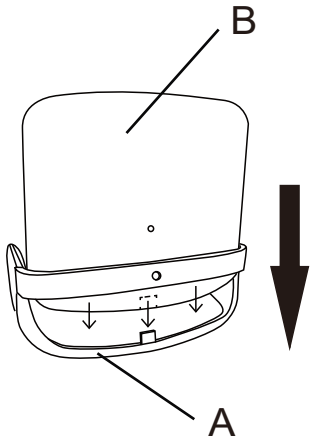


7

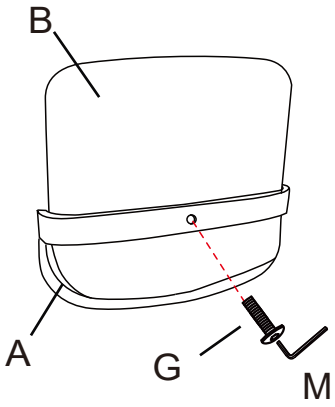


8

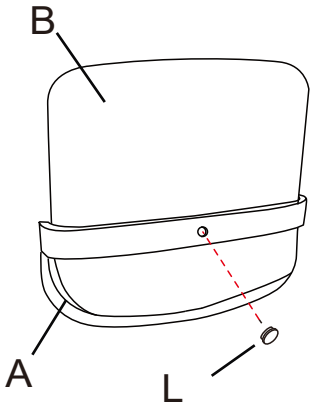


9

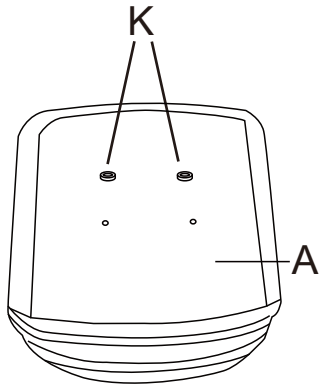

10

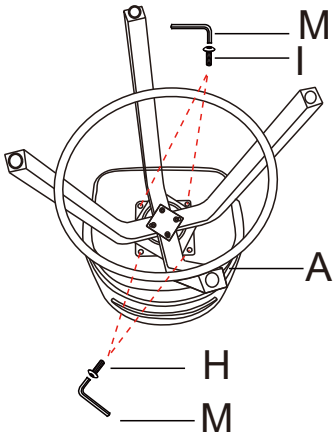

11

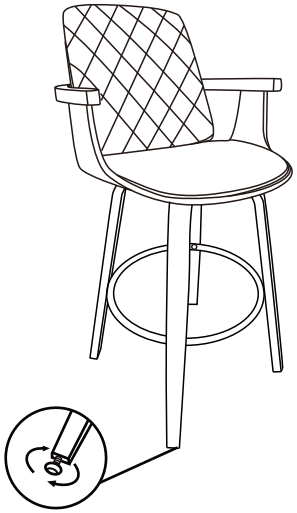

Note: if the installation of legs were not smooth and steady enough, please try to adjust the foot nails to make the chair balance.