


VANITY WITH STONE

Colors/Finishes: White, Navy Blue, Titanium Grey, Classic Blue
Nominal Dimension:36W*22D*35H inches

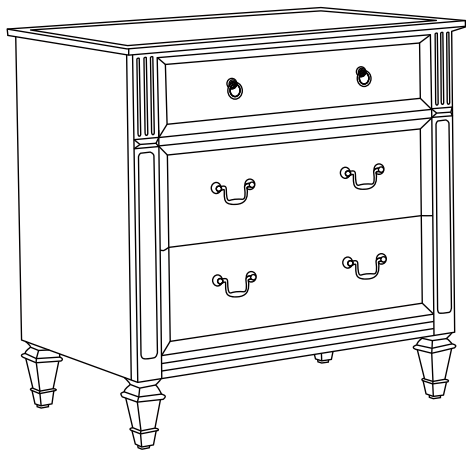


VANITY FEATURES:

- 1.Material: Solid popular wood frame, high-quality veneer plywood.
- 2.Drawers: 3 soft-close drawers, DTC concealed soft-close sliders
- 3.Hardware: Metal alloy with decorative porcelain
- 4.Installation Type: Freestanding
- 5.Built-in Adjusters: Adjustable height levelers
- 6.Vanity Top: High-quality quartz/marble with single undermount sink
- 7.Assemble required: No
- 8.Vanity top Included: Yes
- 9.Mirror Included: Optional
- 10.Medicine Cabinet Included: Optional

Contents

36"Vanity.....PAGE2
36"Vanity Top.....PAGE3
Vanity Installation.....PAGE4

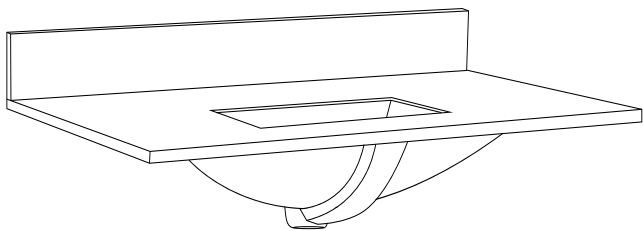

VANITY TOP FEATURES:


- 1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz,or natural white marble.
- 2.Top Color: Carrera white
- 3.Sink: 1*20"undermount rectangle sink
- 4.Faucet Holes: Top pre-drilled for 8"widspread faucet holes
- 5.Sink Certified: CUPC certified
- 6.Backsplash: 4"backsplash included
- 7.Faucet Included: No
- 8.Nominal Dimension(W*D*H): 36W*22D*0.79H inches

VANITY WITH STONE TOP

COMPONENTS:


Vanity	ALLEN36QZ-WT	ALLEN36QZ-NB	ALLEN36QZ-TG	ALLEN36QZ-CB
Vanity Top	QZ37CW20	QZ37CW20	QZ37CW20	QZ37CW20
	MB37CW20	MB37CW20	MB37CW20	MB37CW20
Wall Mirror	MR32YS1WT	MR32YS1NB	MR32YS1TG	— — — —
Medicine Cabinet	MED24YS1WT	MED24YS1NB	MED24YS1TG	— — — —

PRODUCT DIAGRAMS:

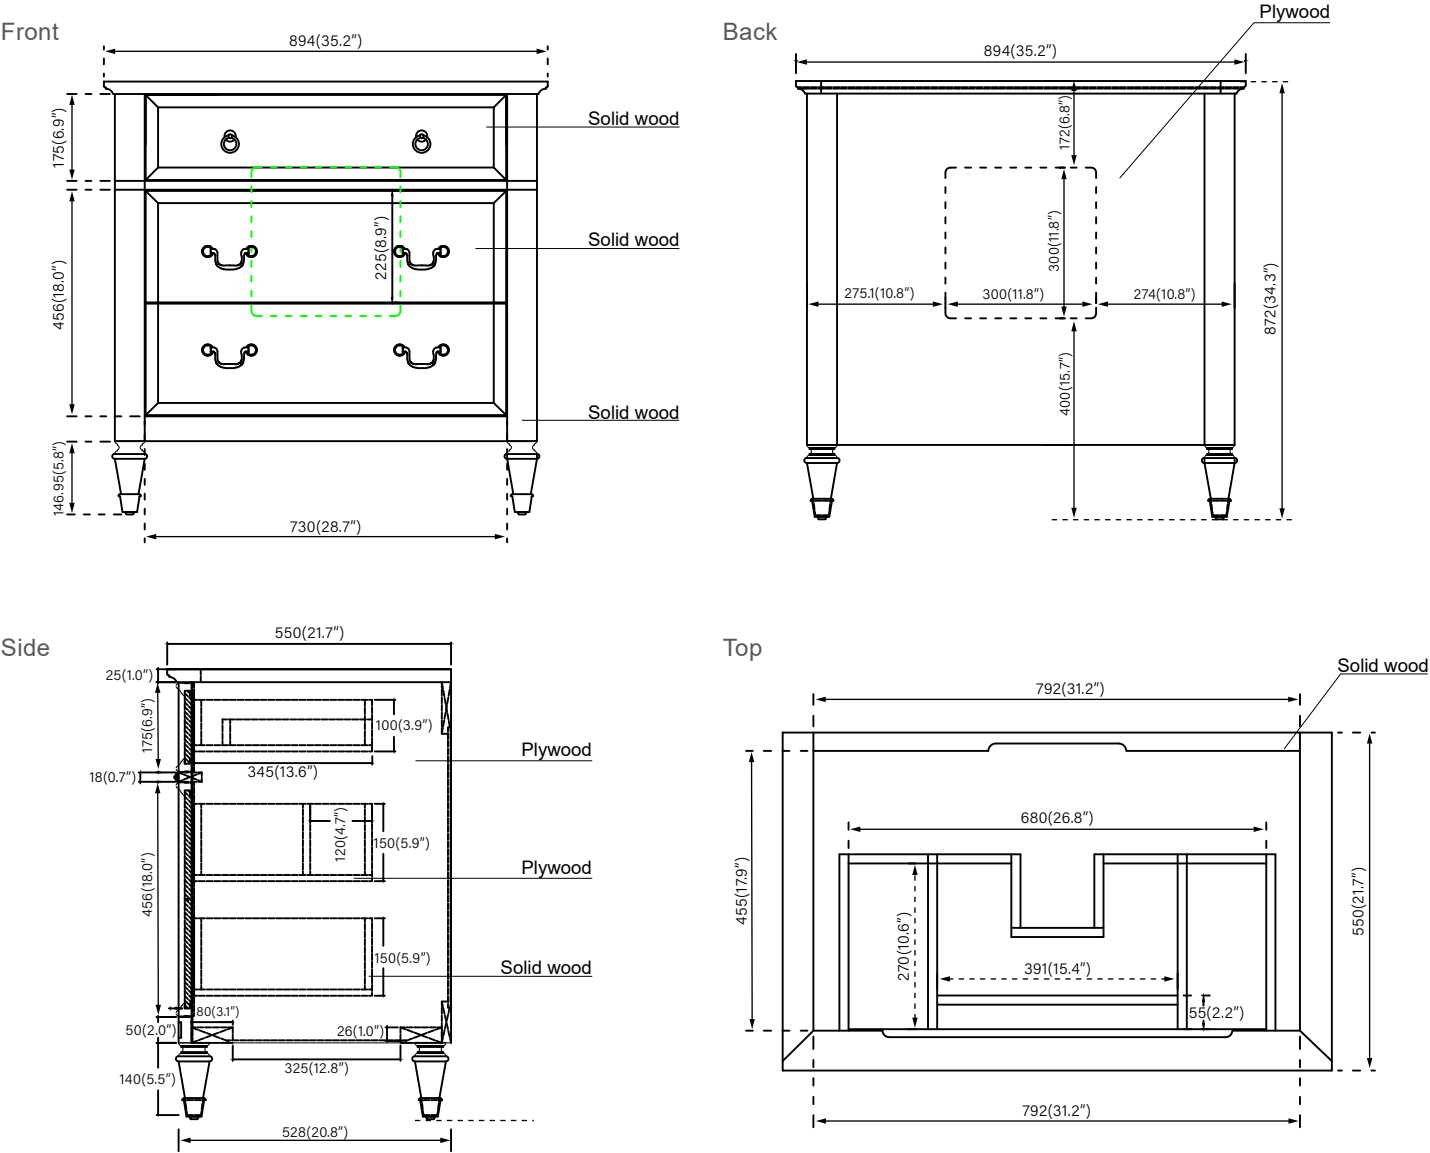


VANITY TOP

With rectangular undermount sink

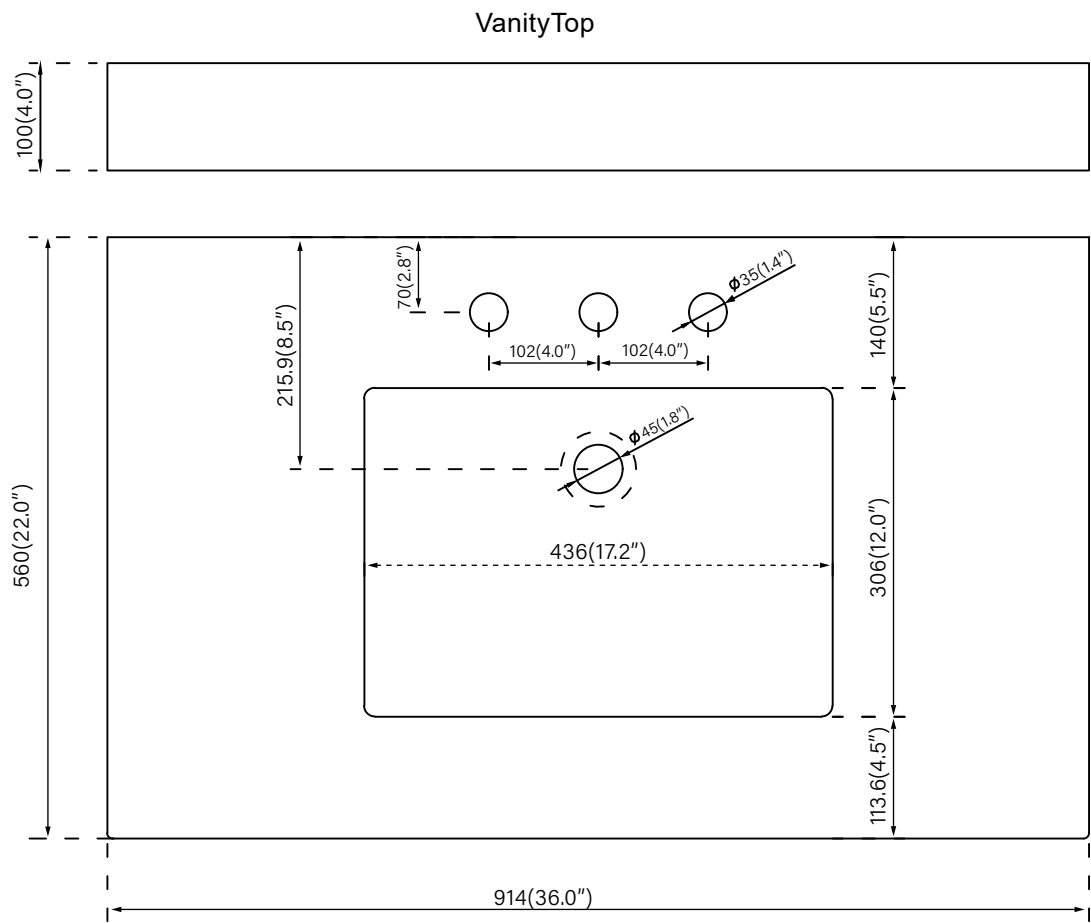

Undermount Sink

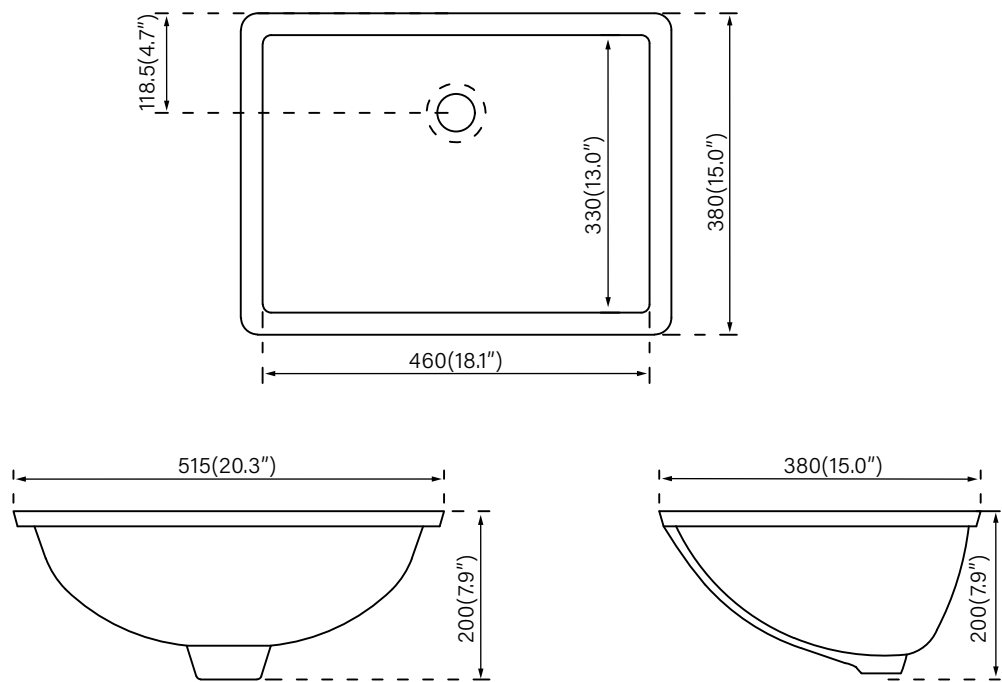

Vanity Installation

SUGGESTED TOOLS AND MATERIALS:



Sealant



Tape Measure




Safety Glasses

INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .WELLFOR accepts no liability for any damage to the floor,plumbing, vanity cabinet,sink, counter top,or personal injury during installation.

1

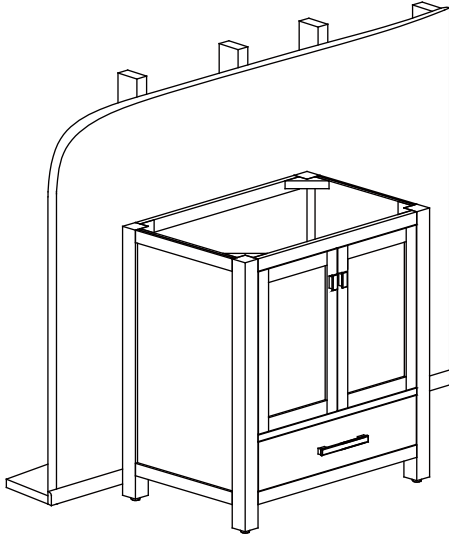


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

2

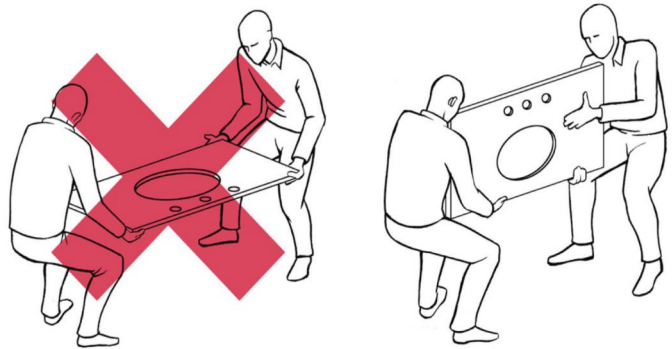


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

3

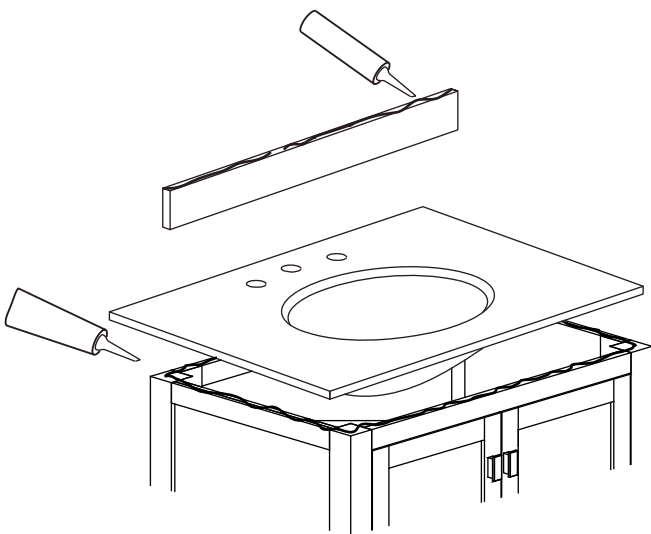

Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

4

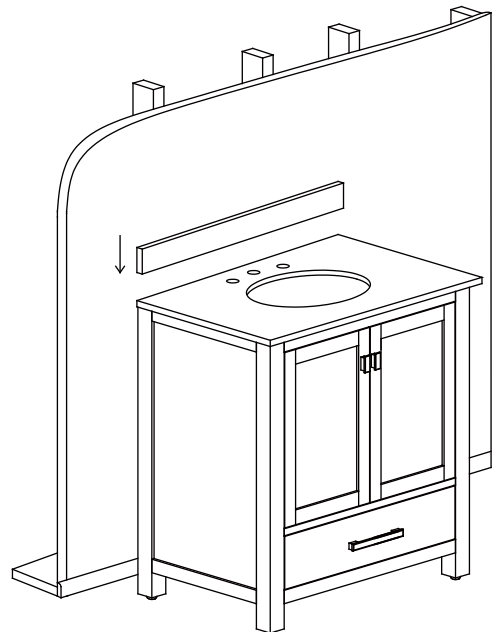

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.