


Installation Guide




Measure the length and position the bracket **1**



Attach the brackets to the wall
Tap the plastic expansion screw in to the hole of wall **2**

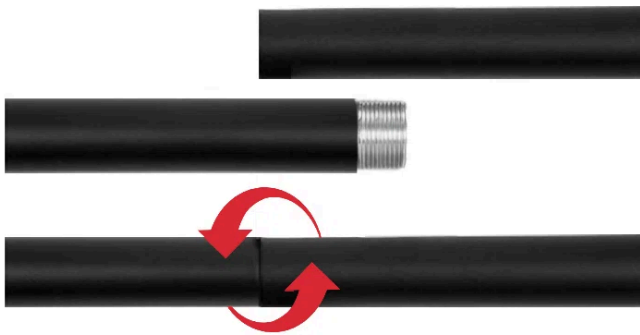

Connect the rod together **3**

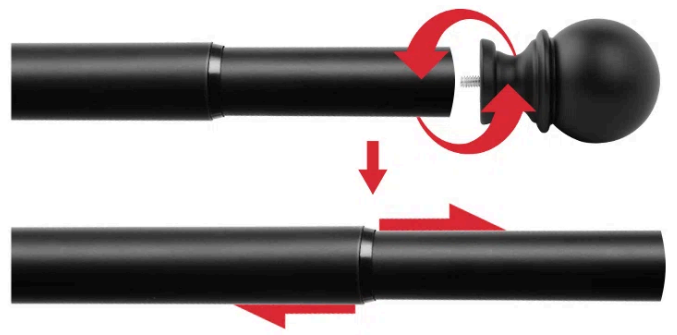

Pull out the telescopic tube and tighten the ends **4**



Hang the curtain on the rod **5**



Put the rod on the brackets
Lock the screws on the curtain rod bracket **6**