
ASSEMBLY INSTRUCTION

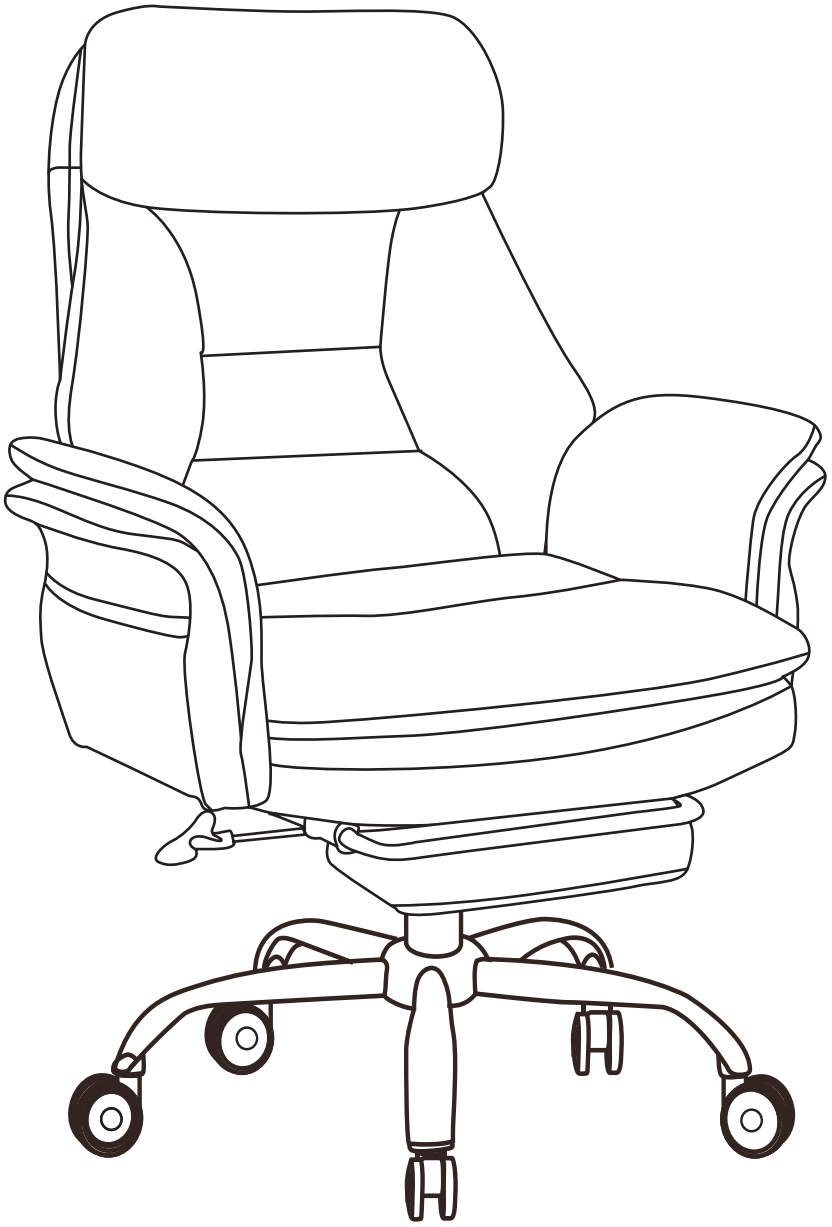

IMPORTANT NOTICE

INSTALLATION GUIDE

tools required: allen wrench (provided)

ASSEMBLY REQUIREMENT

1. Remove all packaging materials, staples and packing straps from the carton.

2. Refer to Parts Checklist and ensure they are complete before you start assembling.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.

2. Assemble the product on a surface that does not scratch or damage the exterior and finish of the furniture.

3. During assembly, do not over-tighten any fittings as this may cause damage.

4. Do not use power tools to assemble this product.





5. Do not sit or stand on the partially assembled product; use only installed products.

CARE AND USE


- Recommended for indoor and residential use only.
- Wipe with a soft, dry cloth. Do not use harsh abrasives or household cleaners as they may damage the finish.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.

Note: Original Box has to be kept for the return until you decide to keep the item.

PARTS LIST

No.	Description	QTY	No.	Description	QTY
1		5	7		1
2		5	8		1
3		1	9		1
4		1	10		1
5		1	11		2
6		1			


HARDWEAR LIST


No.	Description	QTY	No.	Description	QTY
A	 M6X20mm	14	D	 M5X8mm	1
B	 M8X20mm	3	H		1
C	 M6X35mm	18			

CAUTION: Please confirm the parts list before installation

1


Insert the Casters [1] into the Base Feet [2-2]. Attach the Base Legs [2-1], then insert the Gas Lift [3] into the center of the base. Use Screws [A] as shown.

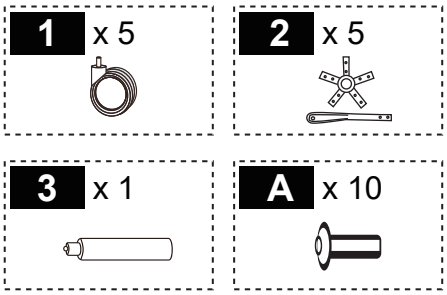


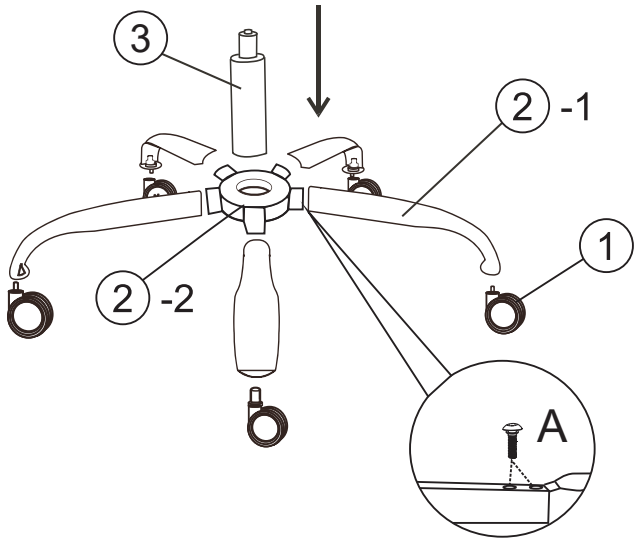

2

Attach the Left & Right Arm Pad [8] to the Seat [5] with Screws [C].

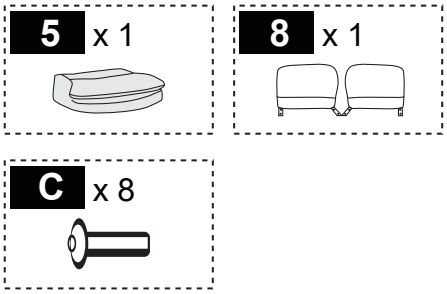

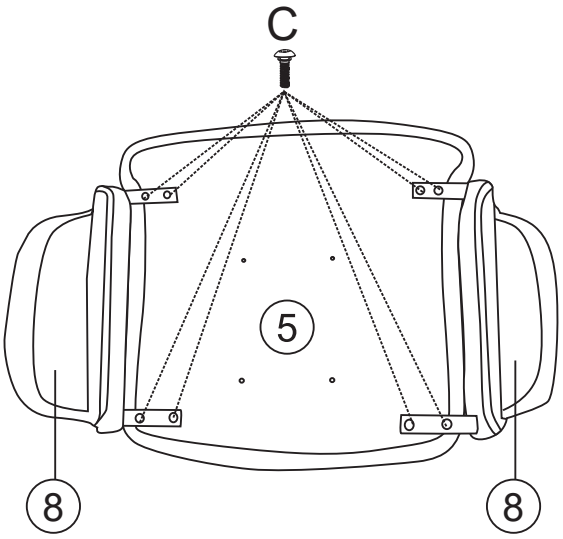

3


Attach the Footrest Connectors [11] to the Seat [5] with Screws [C].

11 x 2



C x 4




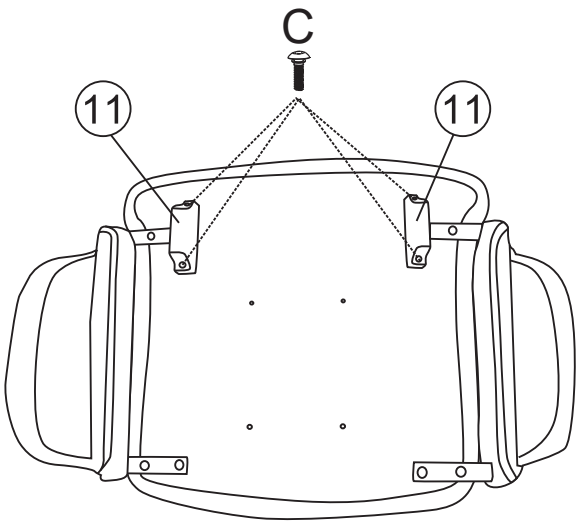

4


Attach the Mechanical Device [4] to the Seat [5] with Screws [A].

4 x 1



A x 4



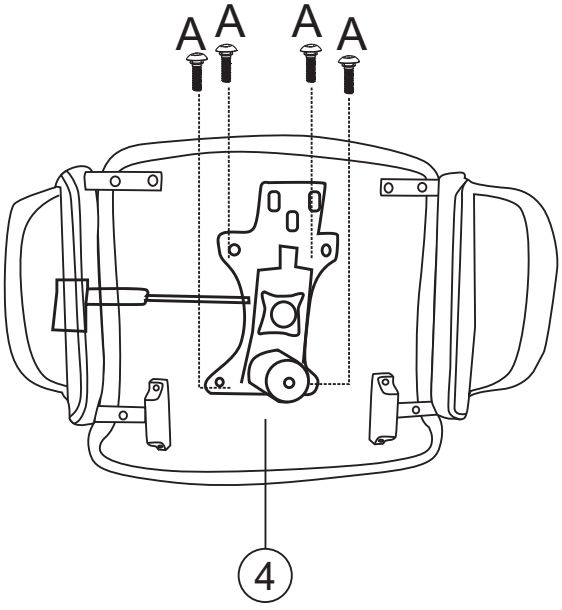

5


Attach the Back Iron Plate [10] to the Mechanical Device [4] with Screws [B].

10 x 1



B x 3



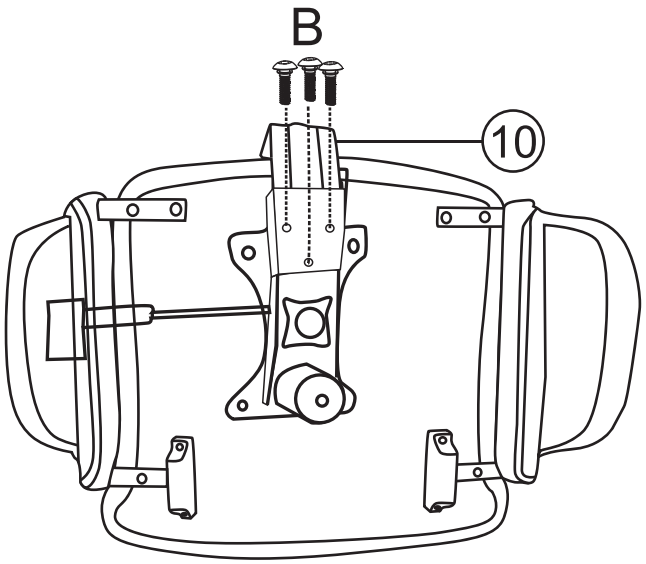

6

Attach the Footrest Bracket [7] and Footrest [9] to the assembly with Screws [C] and Screw [D].

7 x 1



9 x 1




C x 2





D x 1



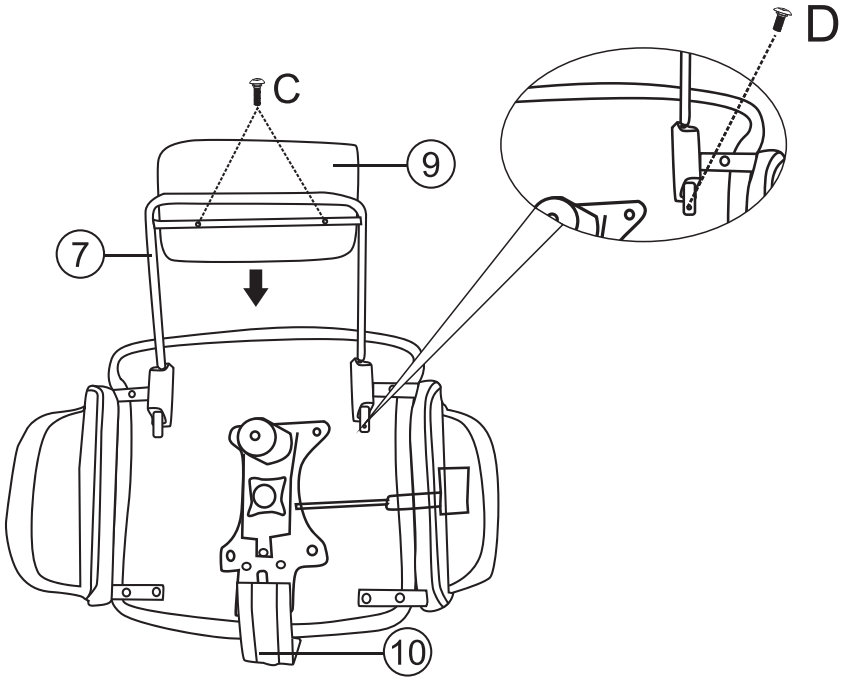


7 Attach the Backrest [6] to the seat assembly with Screws [C].

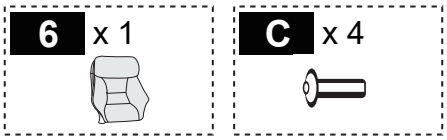

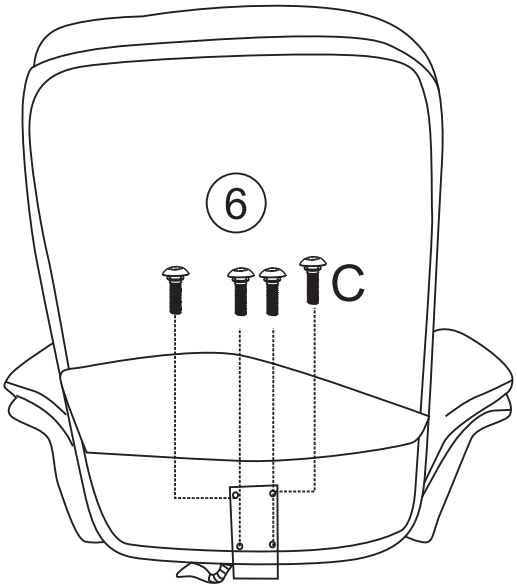

8 Attach the assembled seat to the assembled base by aligning the gas lift with the hole in the mechanism.

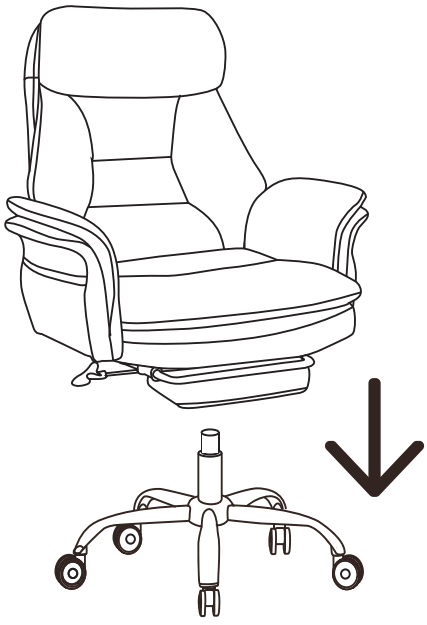

THANK YOU

Thank you for choosing our product. We sincerely hope that the assembly process has been smooth and enjoyable for you. If you have any questions or suggestions during the use of the product, please feel free to contact us.