



# ASSEMBLY INSTRUCTIONS

**B1248-115 LENNOX 6/6-6/0 EK/WK HEADBOARD, FOOTBOARD & SLAT KIT**  
**B1248-335 LENNOX 5/0-6/6 EK/Q PANEL SIDE RAILS**

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown.

## PARTS LIST


| NO | COMPONENT                             | DRAWING                                                                            | QTY    |
|----|---------------------------------------|------------------------------------------------------------------------------------|--------|
| A  | Headboard                             |   | 1 pc   |
| B  | Footboard                             |   | 1 pc   |
| C  | Right Side Facing (RSF) Headboard Leg |   | 1 pc   |
| D  | Left Side Facing (LSF) Headboard Leg  |   | 1 pc   |
| E  | Slat                                  |   | 5 pcs  |
| F  | Slat Support Leg                      |   | 10 pcs |
| G  | Rail                                  |  | 2 pcs  |

## HARDWARE LIST


| NO | COMPONENT                 | DRAWING                                                                             | QTY |
|----|---------------------------|-------------------------------------------------------------------------------------|-----|
| 1  | Bolt M6 X 1 3/8"          |  | 6   |
| 2  | Spring Washer Ø 1/4"      |  | 6   |
| 3  | Flat Washer Ø 1/4" x 1/2" |  | 6   |
| 4  | Allen Key M4 x 2 9/16"    |  | 1   |
| 5  | CSK Screw M4 x 1 1/4"     |  | 10  |

WEIGHT CAPACITY


800 LBS




**STEP 1 :** Assemble the Headboard Legs (C & D) to the Headboard (A) by using the Allen Key (4) with hardware 1, 2, and 3.

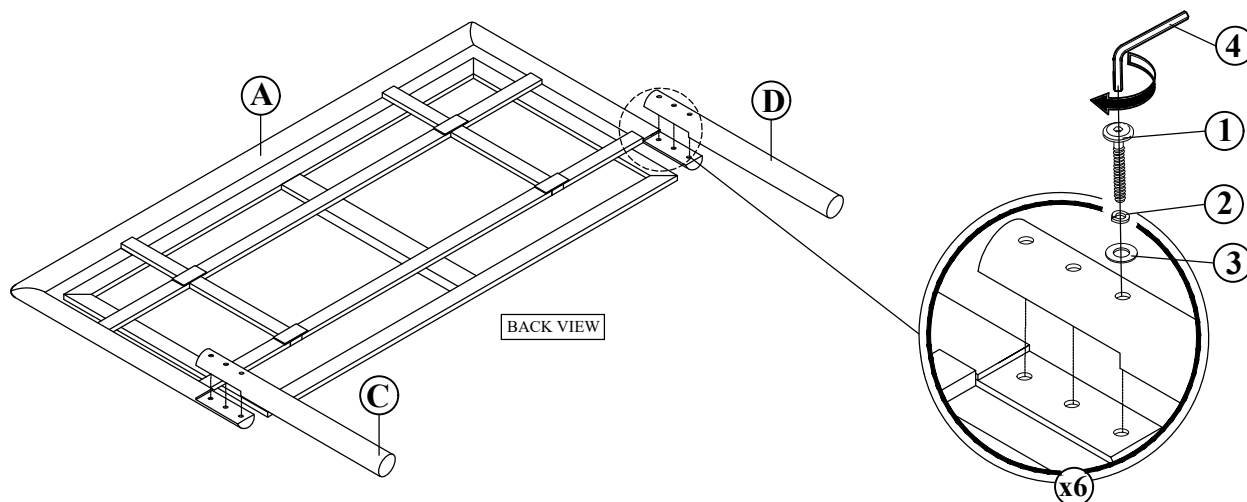


**STEP 2 :** Hook the Side Rails (G) on the iron pins in the Headboard Legs (C & D).Then repeat to hook the other end of Side Rail (G) on the iron pins in the Footboard (B).

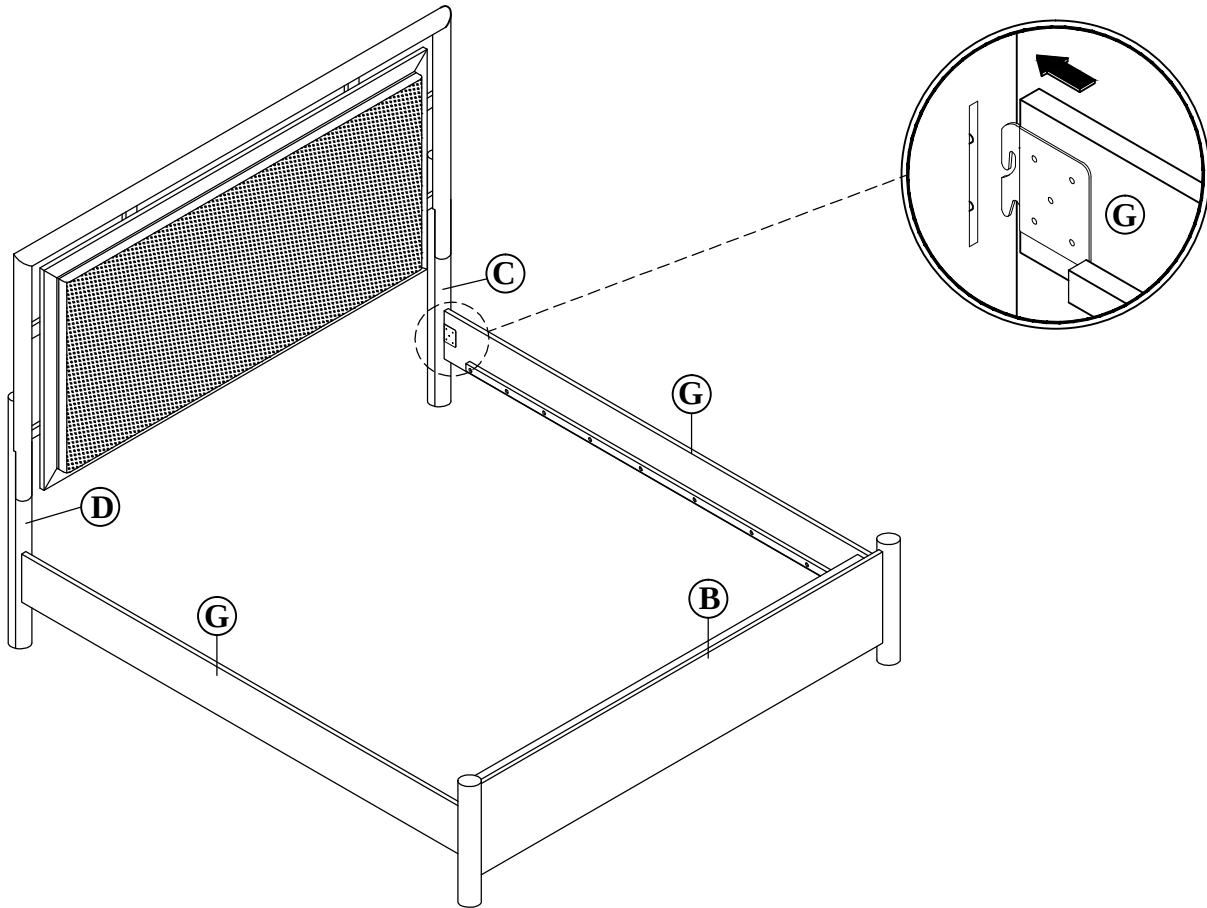


**STEP 3 :** Assemble the Slat Support Legs (F ) to the Slats (E).

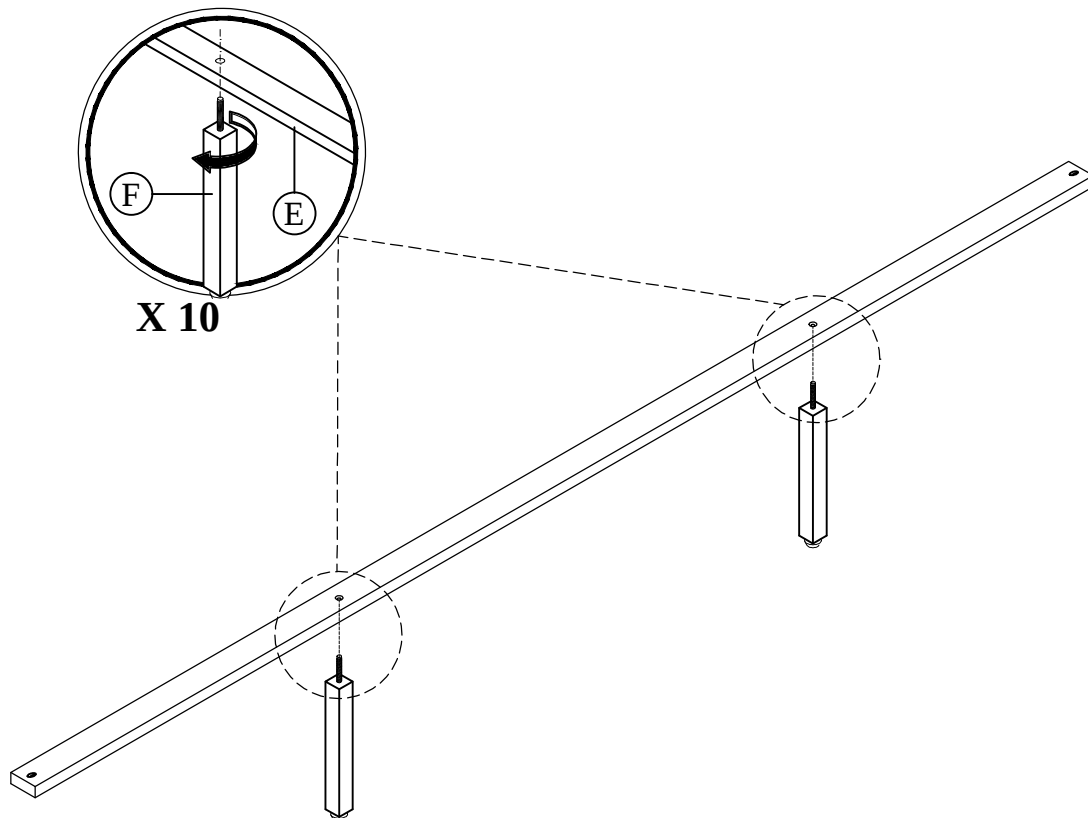

**STEP 4 :** Assemble the Slats (E) to Rails (G) by using a screwdriver with hardware 5.

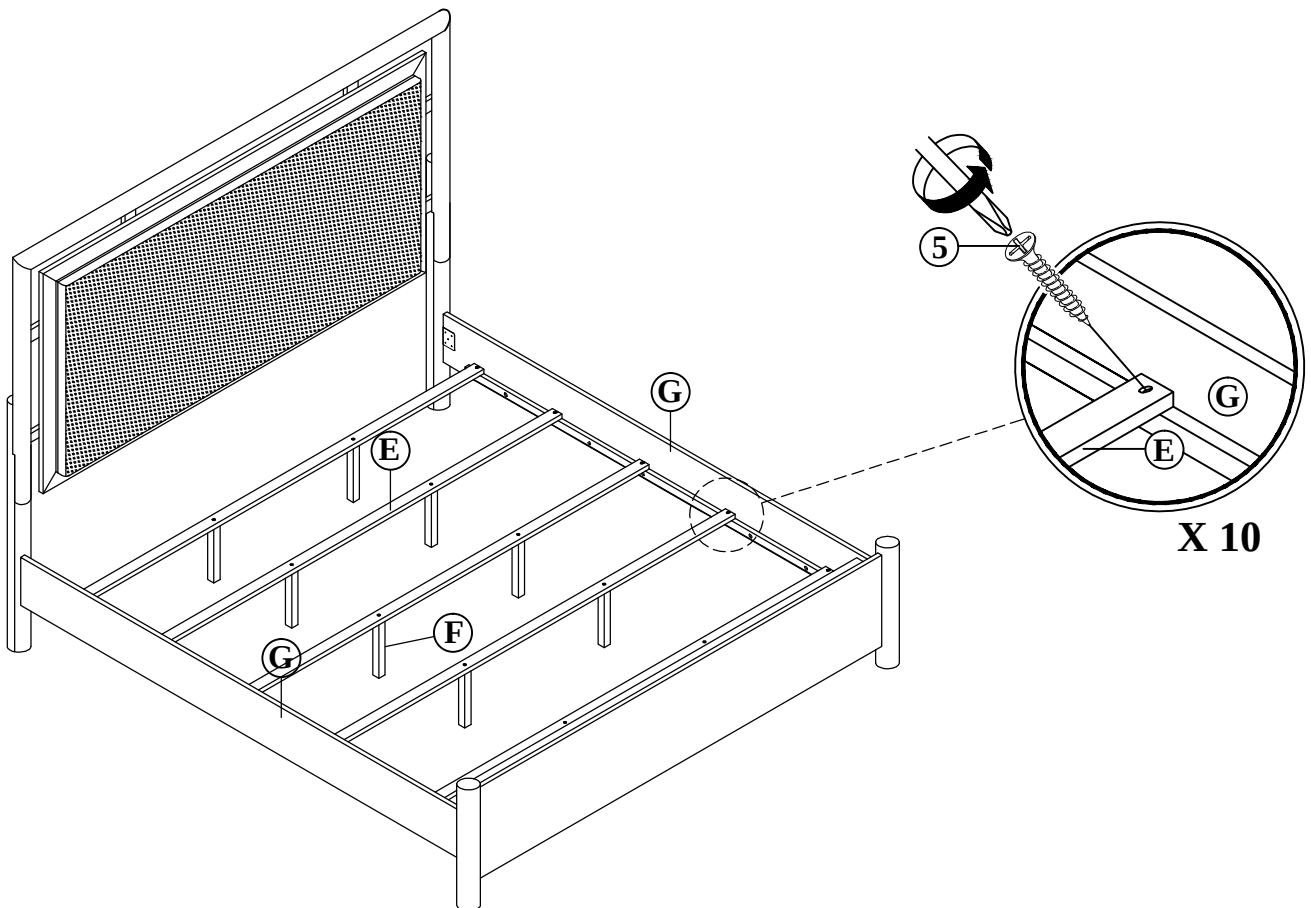

**STEP 5 :** Adjust the leveler on the Slat Support Legs (F) to level the bed.

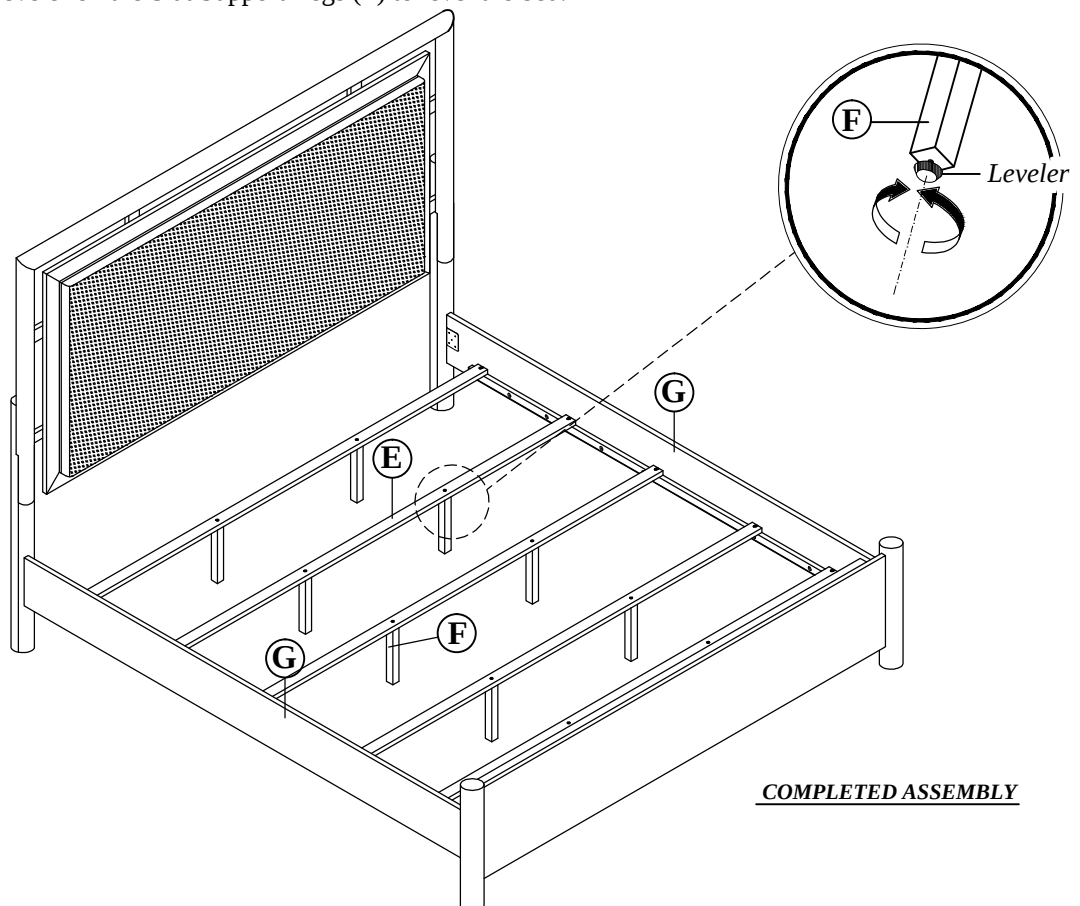

**NOTE :** MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

# ASSEMBLY INSTRUCTIONS

B1248-071 LENNOX DOOR CHEST W/SHOE STORAGE & LED LIGHT


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown.

## PARTS LIST


| NO | COMPONENT | DRAWING                                                                           | QTY   |
|----|-----------|-----------------------------------------------------------------------------------|-------|
| A  | Chest     |  | 1 pc  |
| B  | Leg       |  | 4 pcs |

## HARDWARE LIST


| NO | COMPONENT        | DRAWING                                                                             | QTY  |
|----|------------------|-------------------------------------------------------------------------------------|------|
| 1  | Anti-Tip Kit     |  | 1 pc |
| 2  | DC Adapter L.E.D |  | 1 pc |

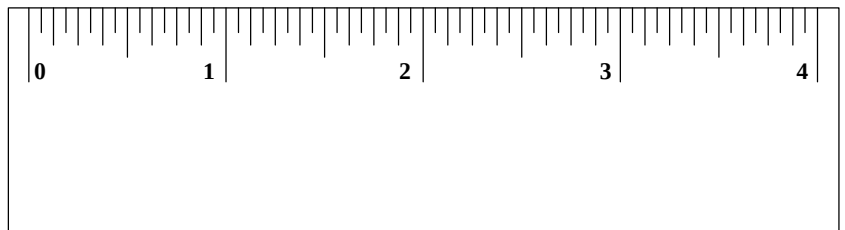


**STEP 1** : Locate the Legs (B) from the bottom drawer of the Chest (A).

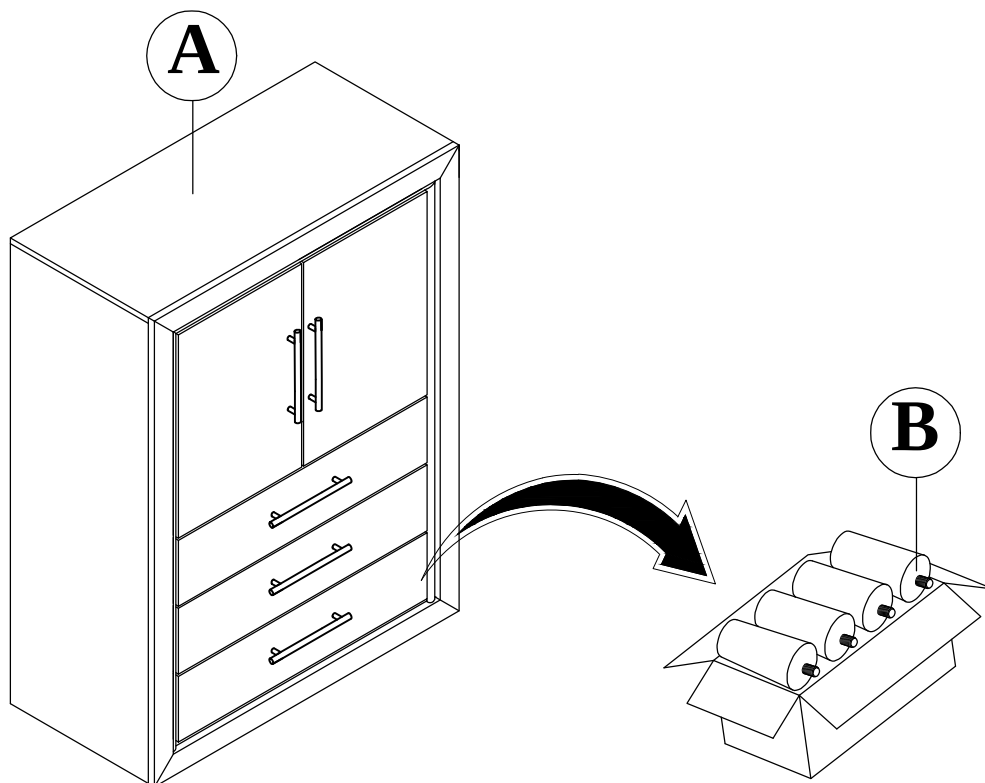


**STEP 2 :** Place the Chest (A) upside down on a clean and flat surface. Assemble the Leg (B) with Chest (A) by twisting each leg into the corresponding hole until securely tightened.

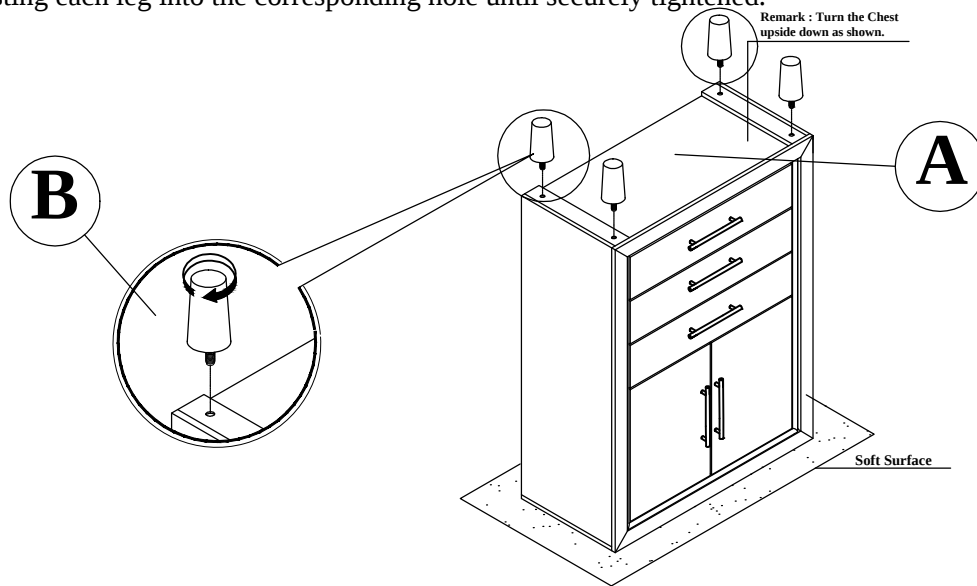

**STEP 3 :** Place the Chest (A) up right and connect the wire on the back of Chest (A) with the DC adapter (2).

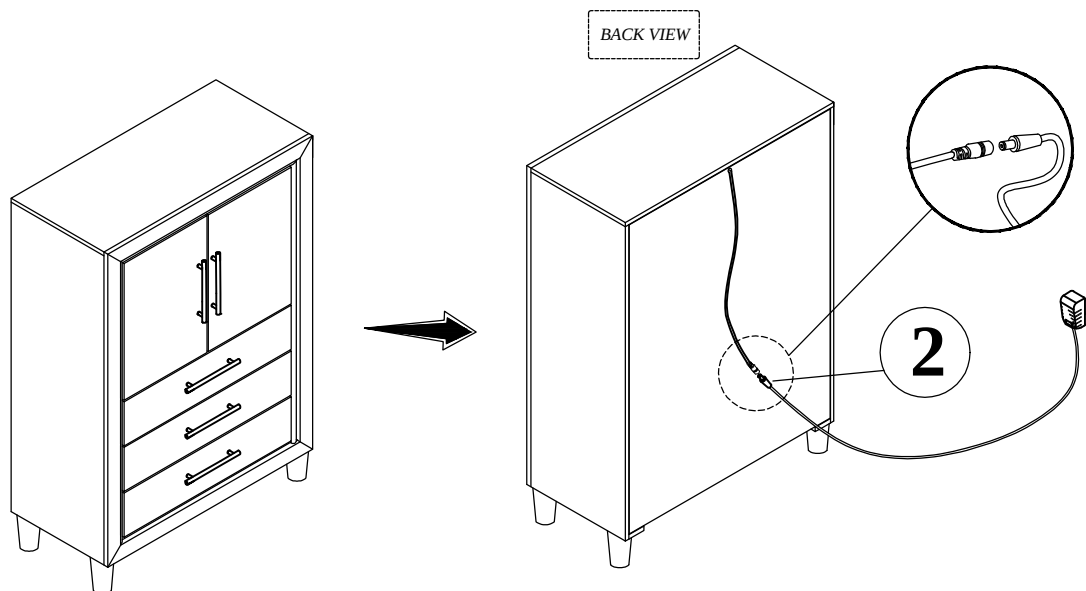

**STEP 4 :** Assembly the Anti-Tip Kit (1) to the Chest (A).

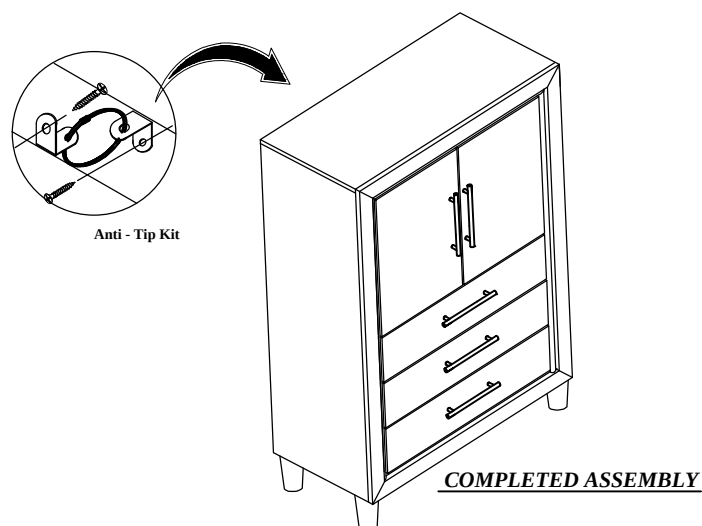

# ASSEMBLY INSTRUCTIONS

B1248-050 LENNOX 8 DRAWER DRESSER


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown.

## PARTS LIST


| NO | COMPONENT          | DRAWING                                                                           | QTY   |
|----|--------------------|-----------------------------------------------------------------------------------|-------|
| A  | Dresser            |  | 1 pc  |
| B  | Leg                |  | 4 pcs |
| C  | Center Support Leg |  | 1 pc  |

## HARDWARE LIST


| NO | COMPONENT    | DRAWING                                                                             | QTY  |
|----|--------------|-------------------------------------------------------------------------------------|------|
| 1  | Anti-Tip Kit |  | 1 pc |

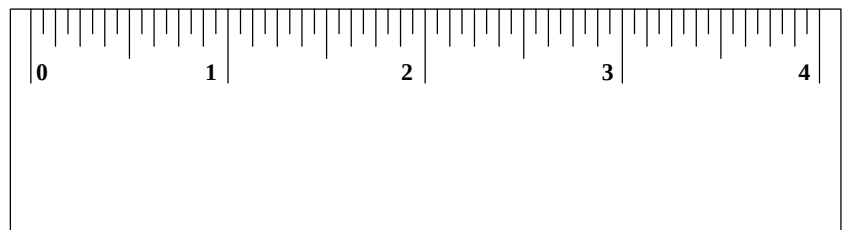


**STEP 1 :** Locate the Legs (B) and Center Support Leg (C) from the bottom drawer of the Dresser (A).

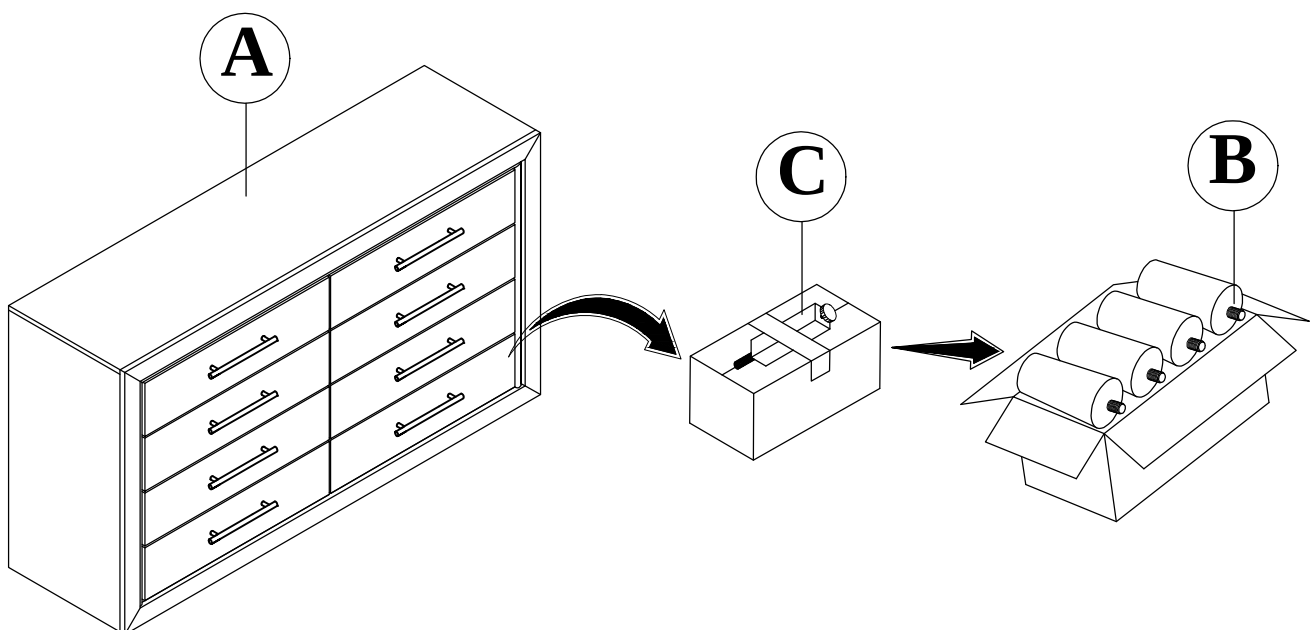


**STEP 2 :** Place the Dresser (A) upside down on a clean and flat surface. Assemble the Leg (B) with Dresser (A) by twisting each leg into the corresponding hole until securely tightened.

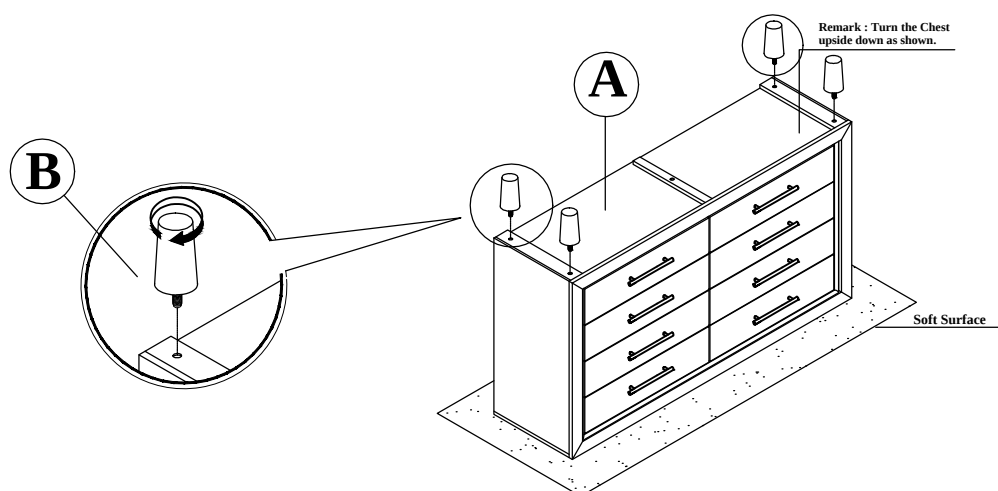

**STEP 3 :** Assemble the Center Support Leg (C) with Dresser (A) by twisting the support leg into the corresponding hole until securely tightened.

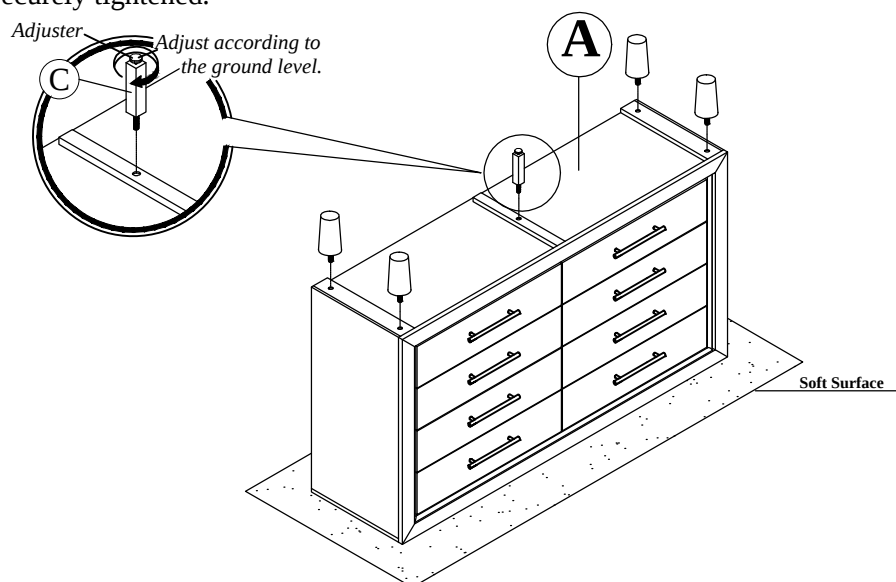

**STEP 4 :** Assembly the Anti-Tip Kit (1) to the Dresser (A).

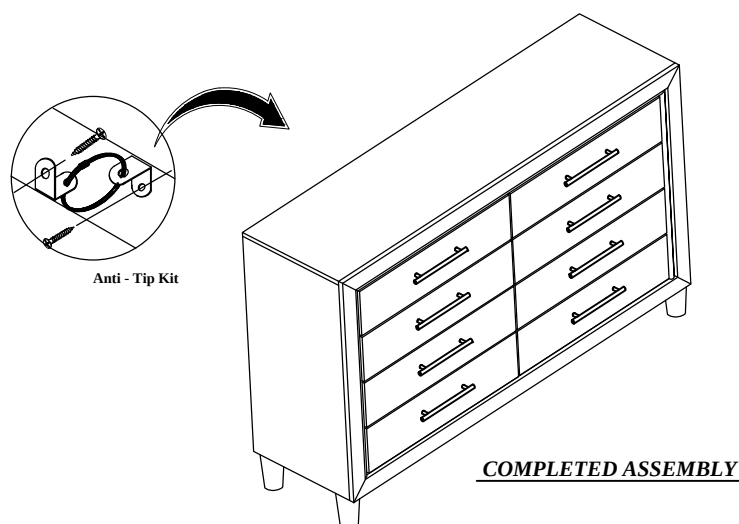

# ASSEMBLY INSTRUCTIONS

B1248-060 LENNOX MIRROR


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown.

## PARTS LIST


| NO | COMPONENT      | DRAWING                                                                           | QTY   |
|----|----------------|-----------------------------------------------------------------------------------|-------|
| A  | Mirror         |  | 1 pc  |
| B  | Mirror Support |  | 2 pcs |
| C  | Dresser        |  | 1 pc  |

## HARDWARE LIST



| NO | COMPONENT                 | DRAWING                                                                             | QTY   |
|----|---------------------------|-------------------------------------------------------------------------------------|-------|
| 1  | JCBC SCREW M6 X 1 3/8"    |  | 8 pcs |
| 2  | Spring Washer Ø 1/4"      |  | 8 pcs |
| 3  | Flat Washer Ø 1/4" x 4/5" |  | 8 pcs |
| 4  | Allen Key M4              |  | 1 pcs |

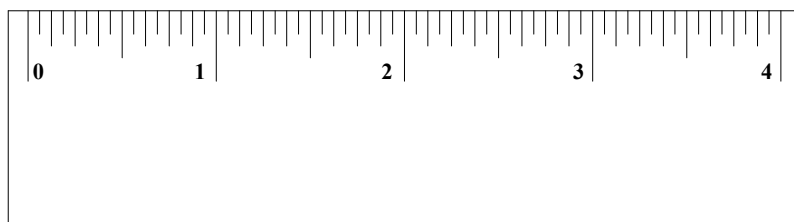

**STEP 1 :** Assemble the Mirror Support (B) with the Dresser (C) by using Allen Key (4) with hardware 1, 2, and 3.

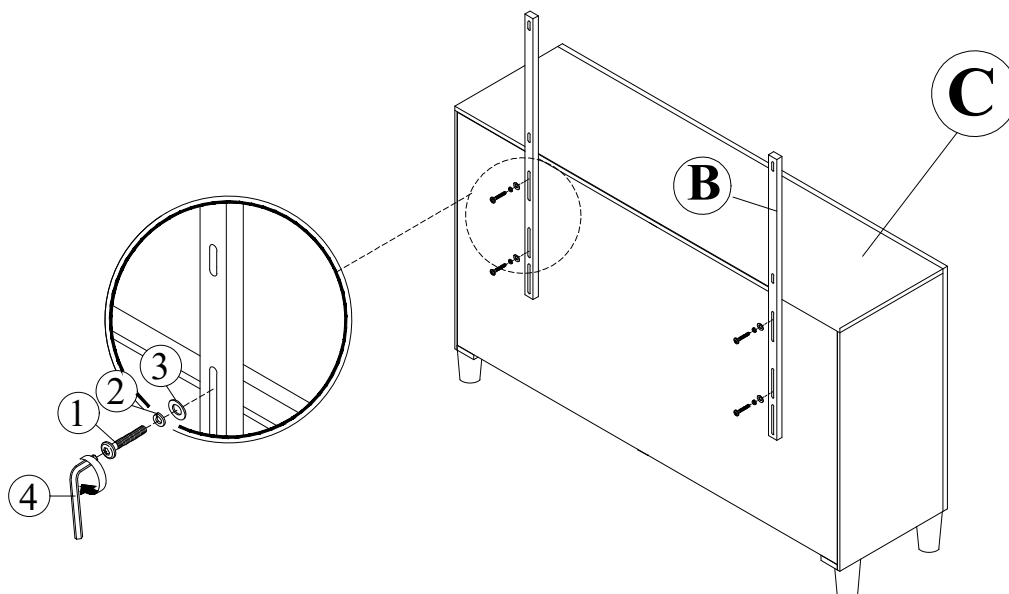

**STEP 2 :** Place the mirror on top of Dresser (C). Assemble the Mirror (A) with the Mirror Support (B) by using Allen Key (4) with hardware 1, 2, and 3.

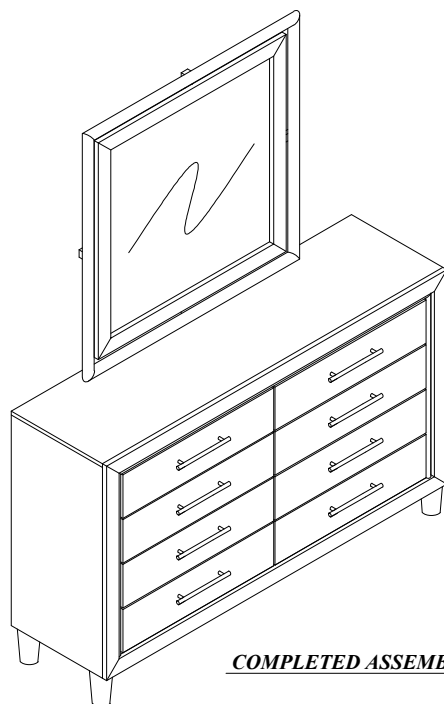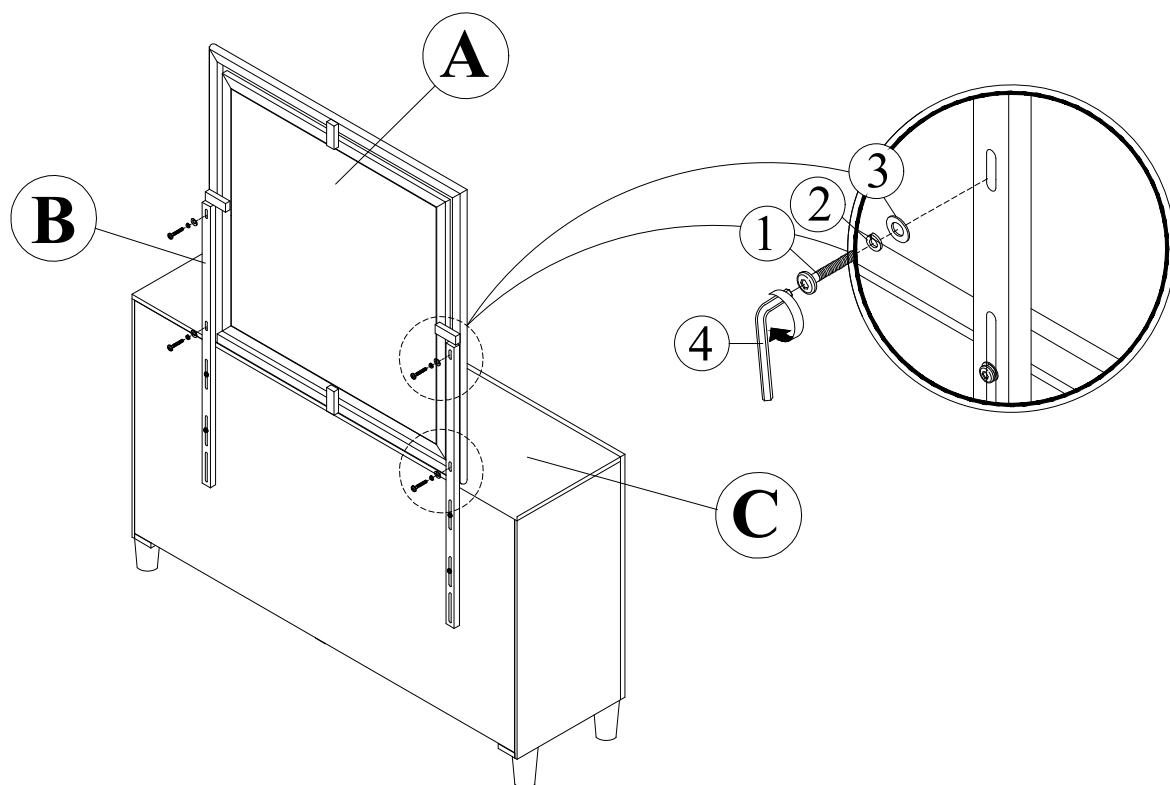

**COMPLETED ASSEMBLY**