


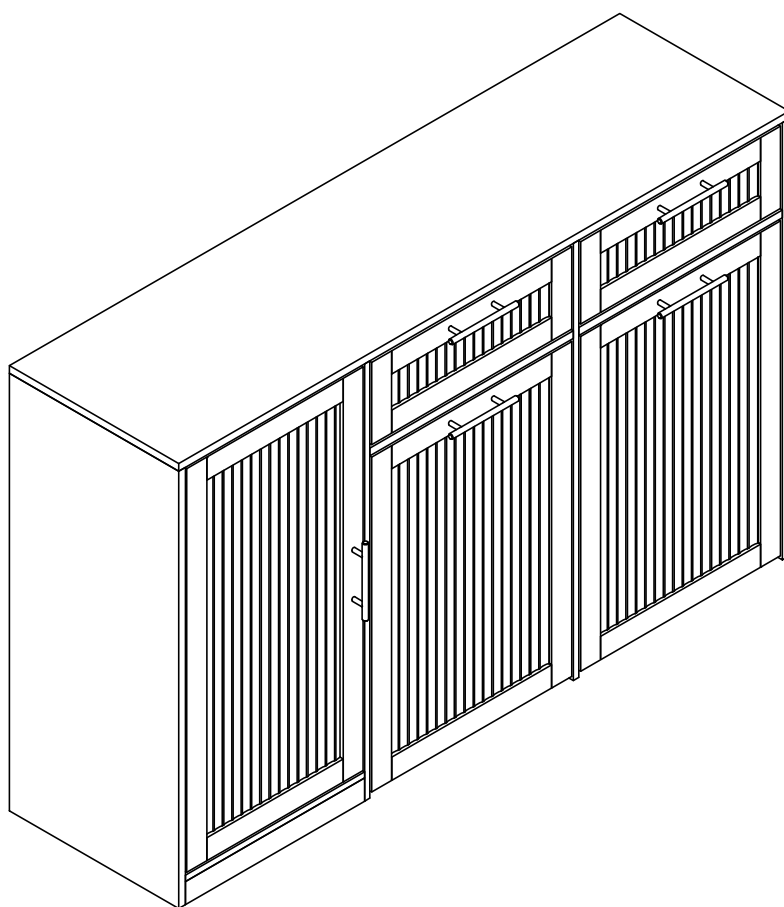




Please note: Items cannot be returned once assembled.

HLG223


Version:1.1



IT IS RECOMMENDED
TO USE POWER TOOLS

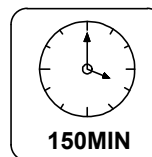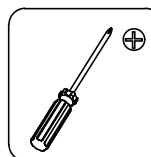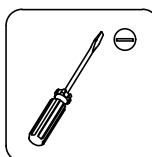

150MIN

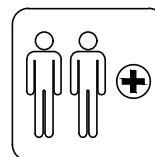

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.




WhatsApp

Email: support@anymaple.com


WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

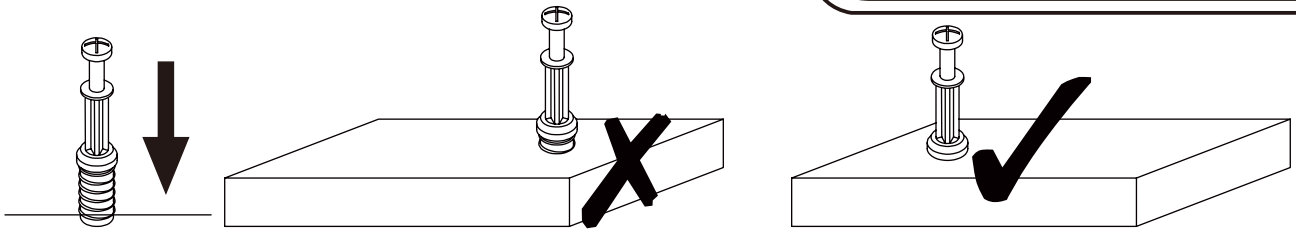


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

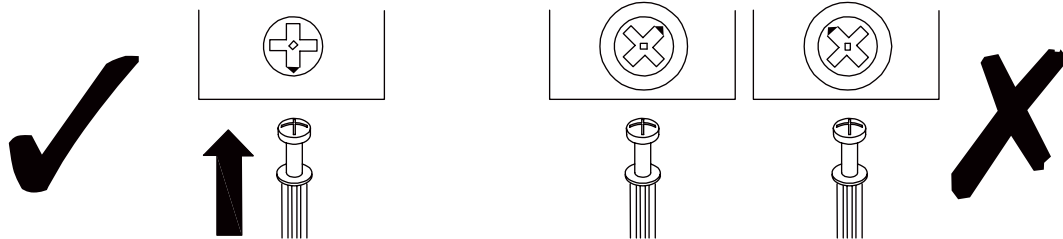











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










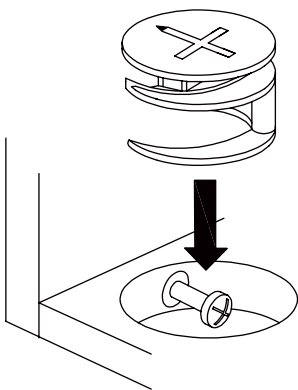







EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

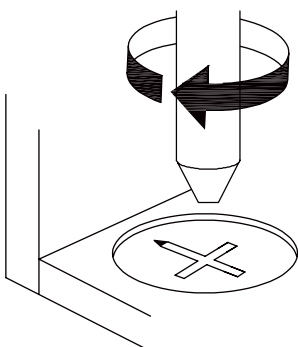













EN_Turn cam lock clockwise to tighten.

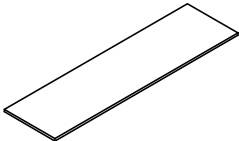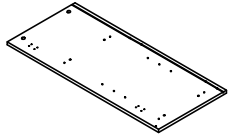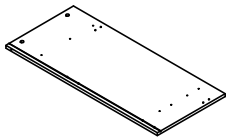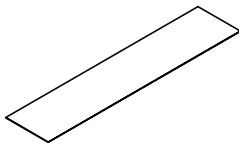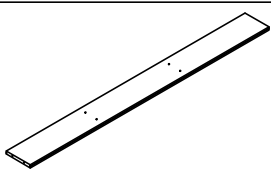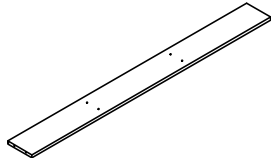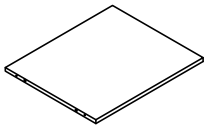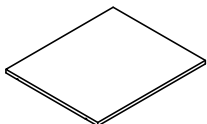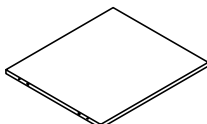NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x1	

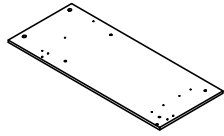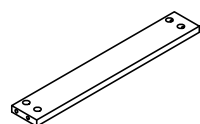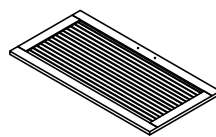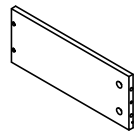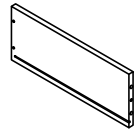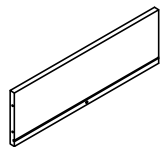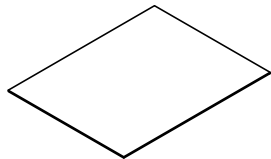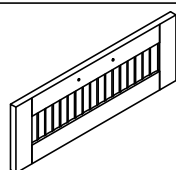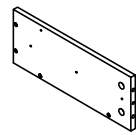NO.	PARTS	QTY	SPARE
11		x1	
12		x4	
13		x1	
14		x2	
15		x2	
16		x2	
17		x2	
18		x2	
19		x2	
20		x2	

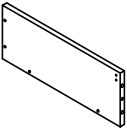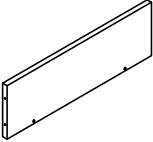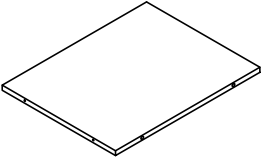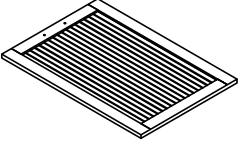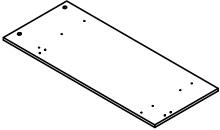NO.	PARTS	QTY	SPARE
21		x2	
22		x2	
23		x2	
24		x2	
25		x1	
	 Hardware Kit	x1	

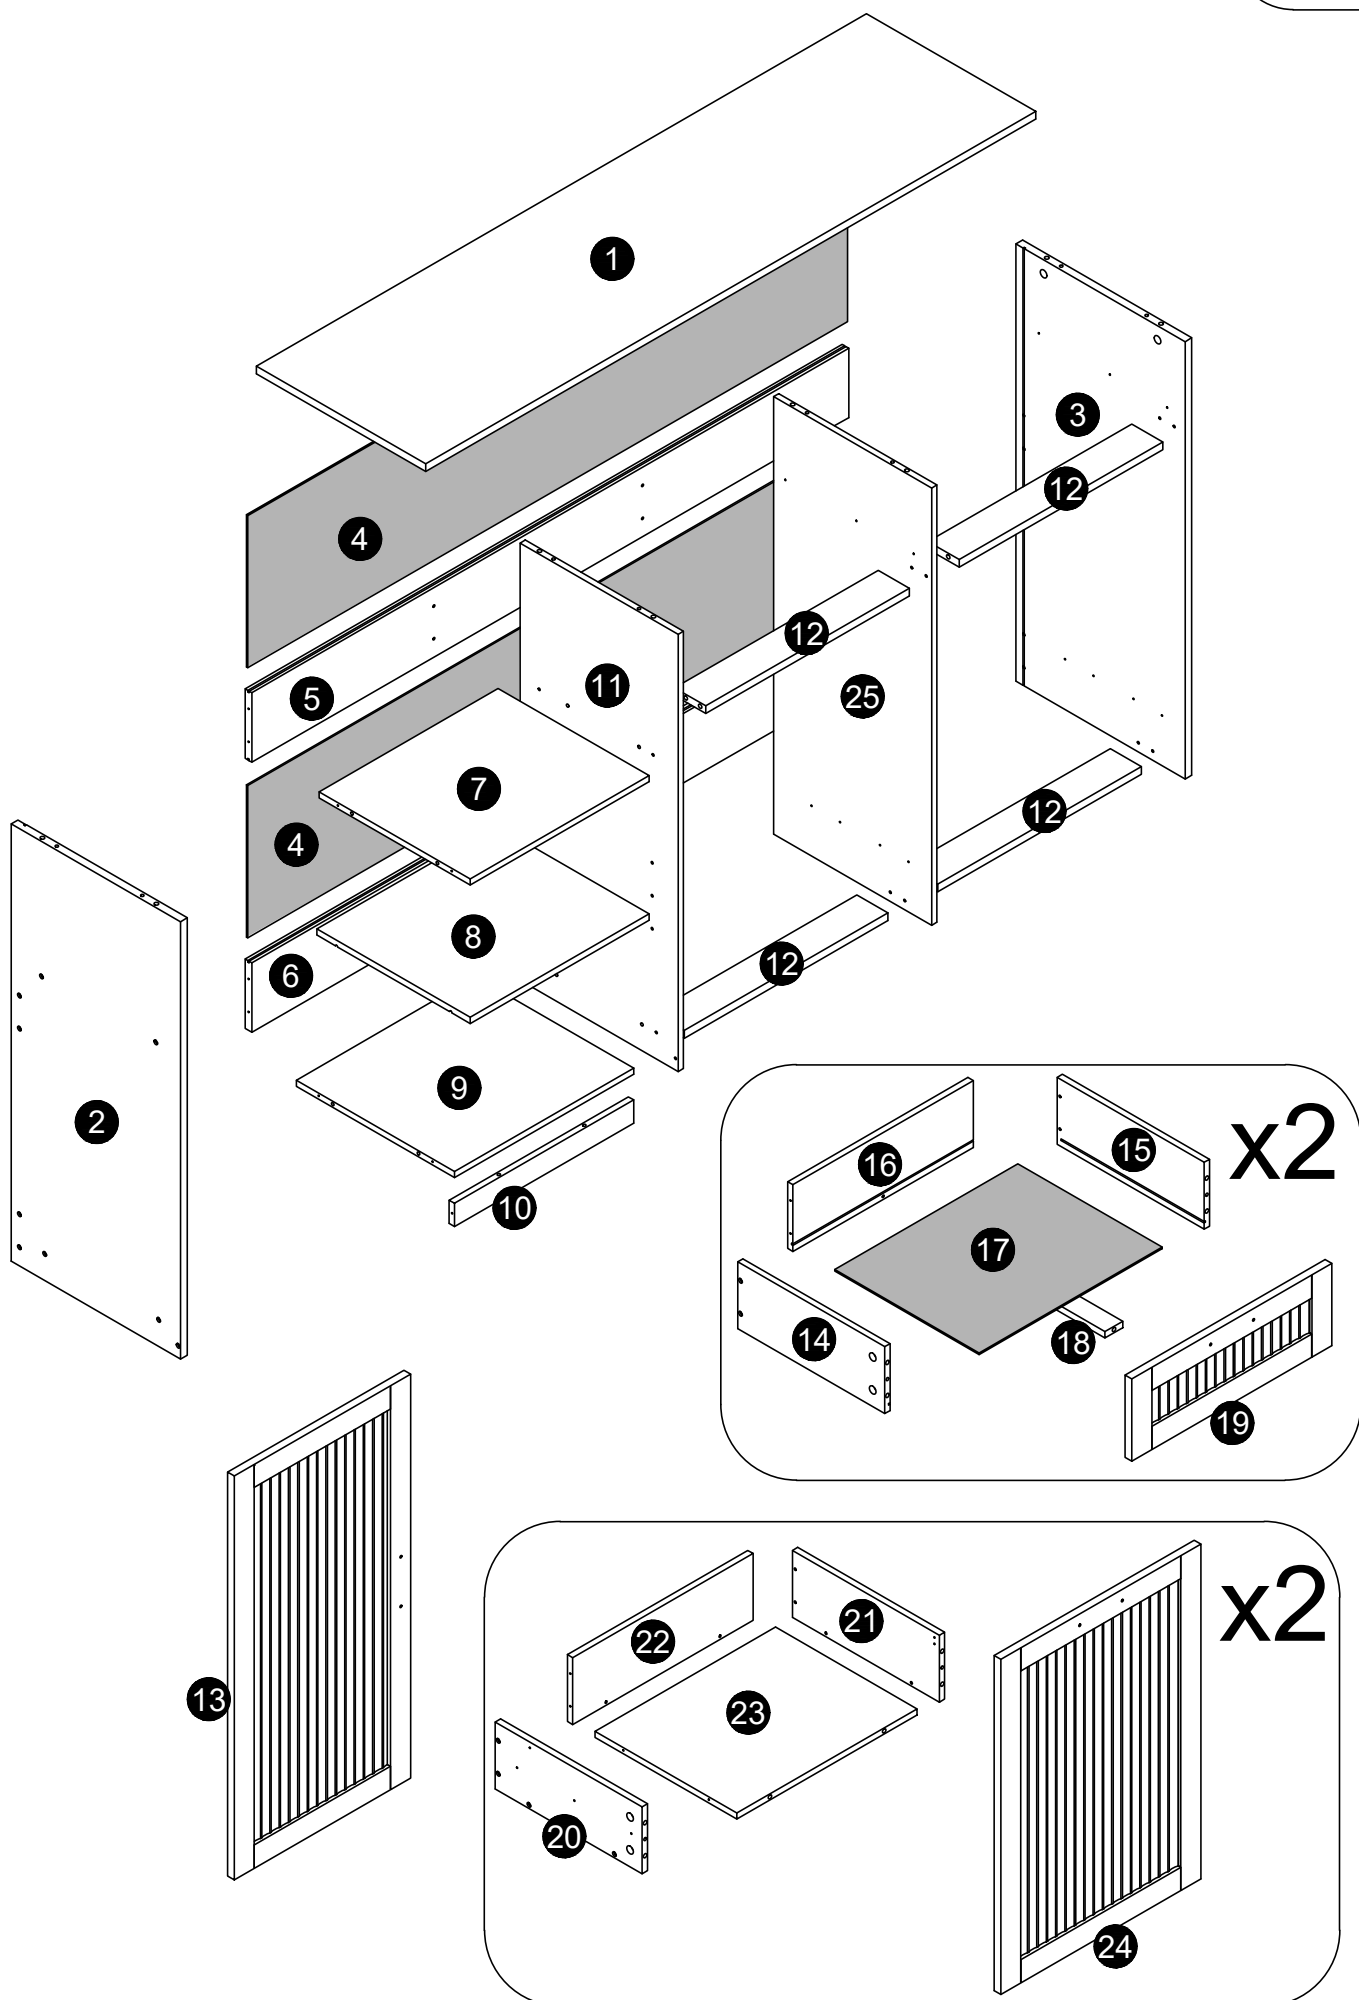

 A x46 Ø6x35mm +2(spare)	 B x46 Ø15x10mm +2(spare)	 C x26 Ø6x30mm +2(spare)	 D x58 Ø4x35mm +5(spare)	 E x80 Ø3.5x12mm +8(spare)	 F x5 F-1  F-2
 G x4 L330mm	 H x4	 I x4	 J x4	 K x2	 L x10 Ø3x16mm +1(spare) L-1  L-2
 M x2 Ø4x14mm M-1  M-2	 N x2 Ø6x30mm	 O x13 +4(spare)	 P x20 +2(spare)	 Q x4	
 CL x2 L330mm	 CR x2 L330mm	 DL x2 L330mm	 DR x2 L330mm		





A x10

B x10


C x4

D x10

F x2




x2

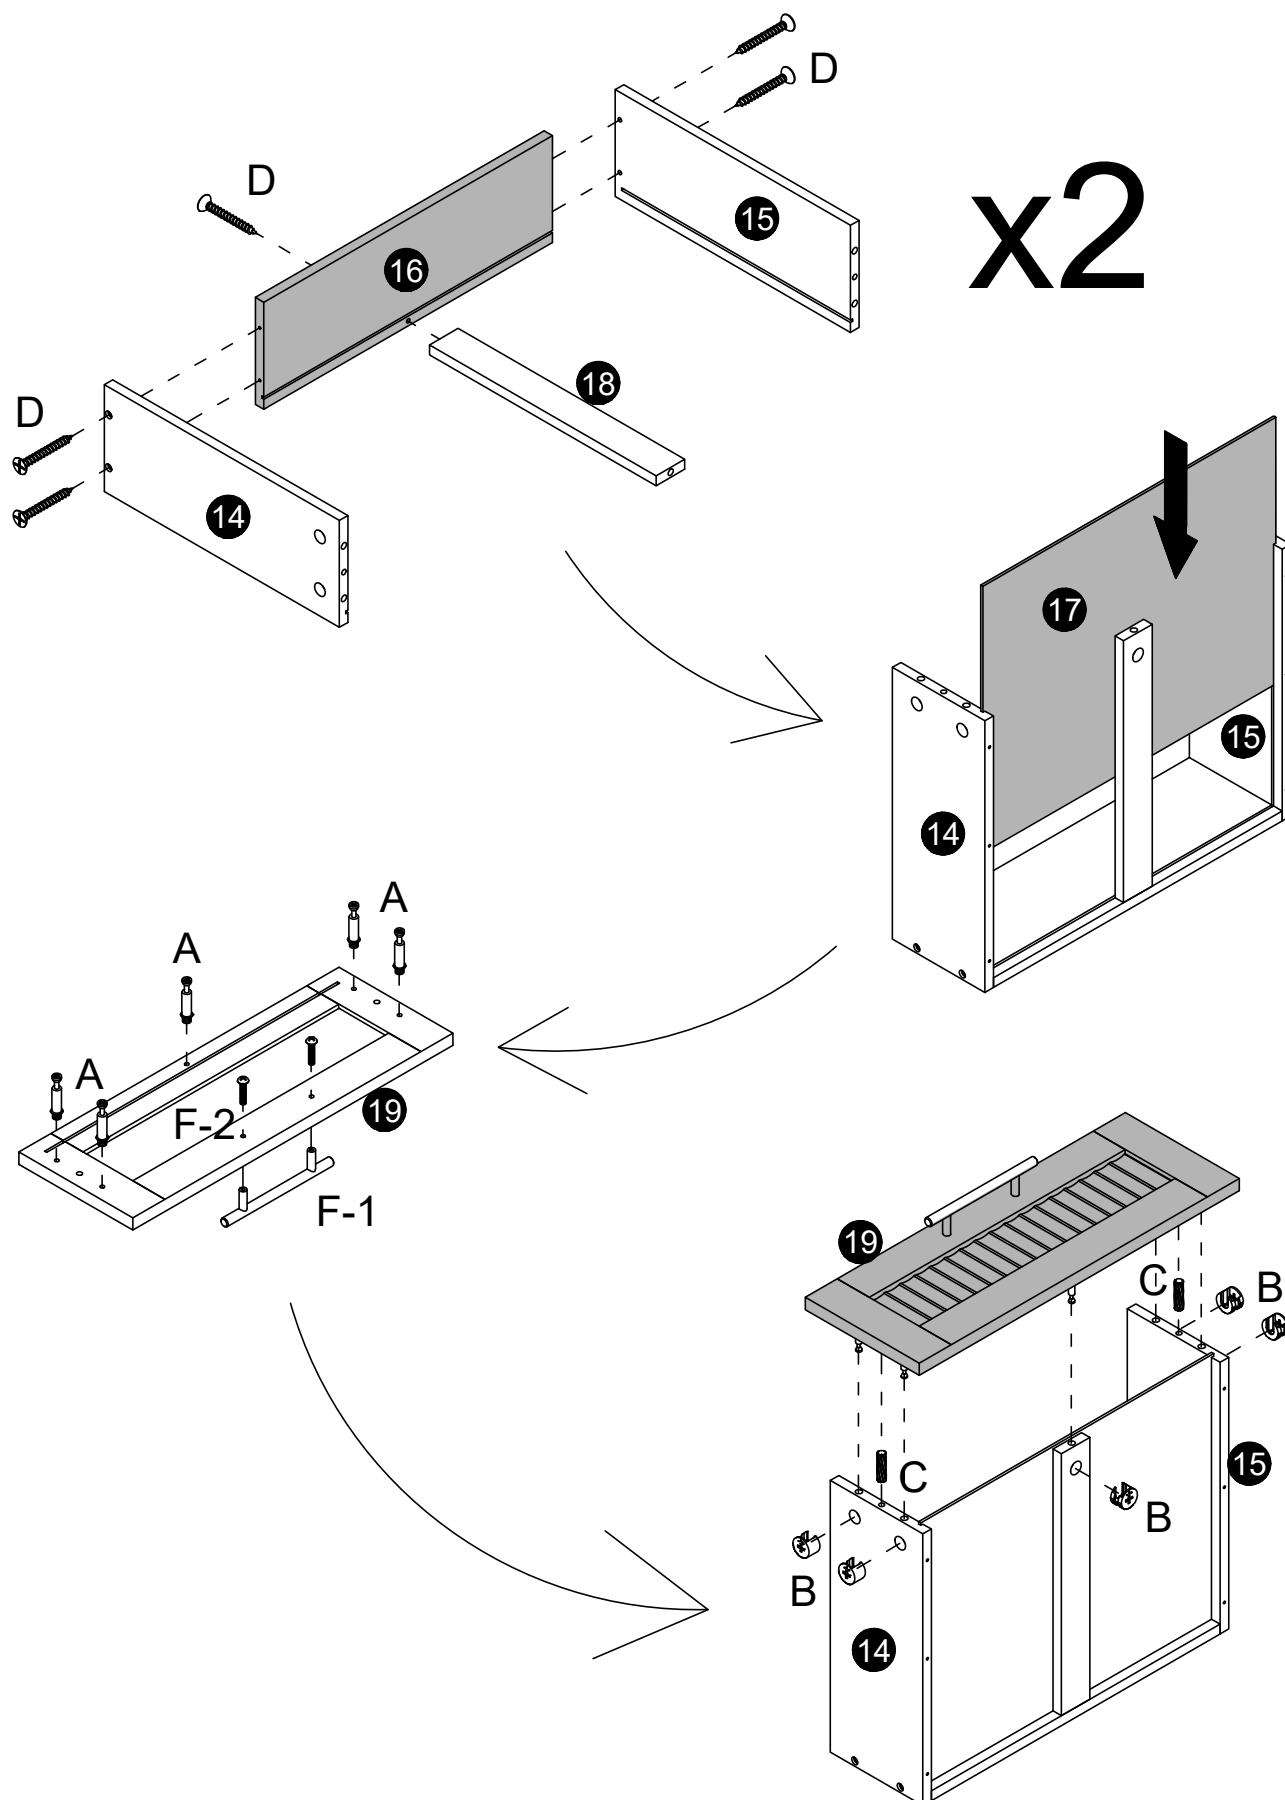

E x12


DL x2

DR x2

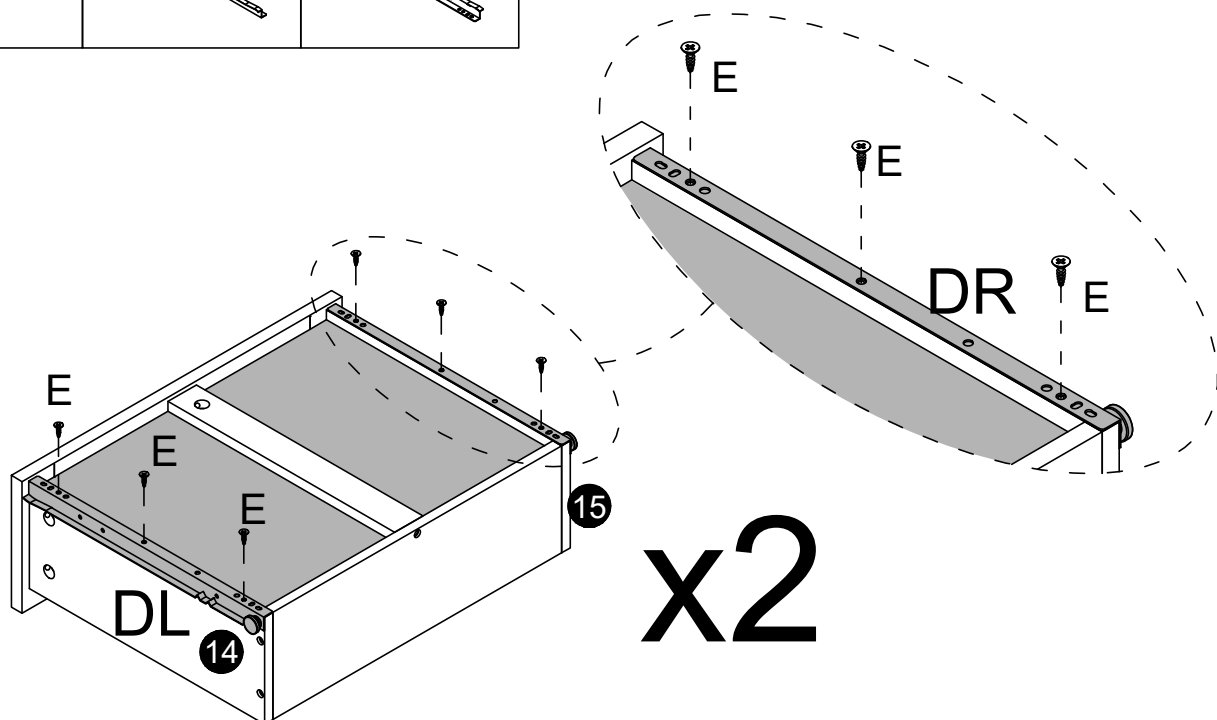

x2

G x4

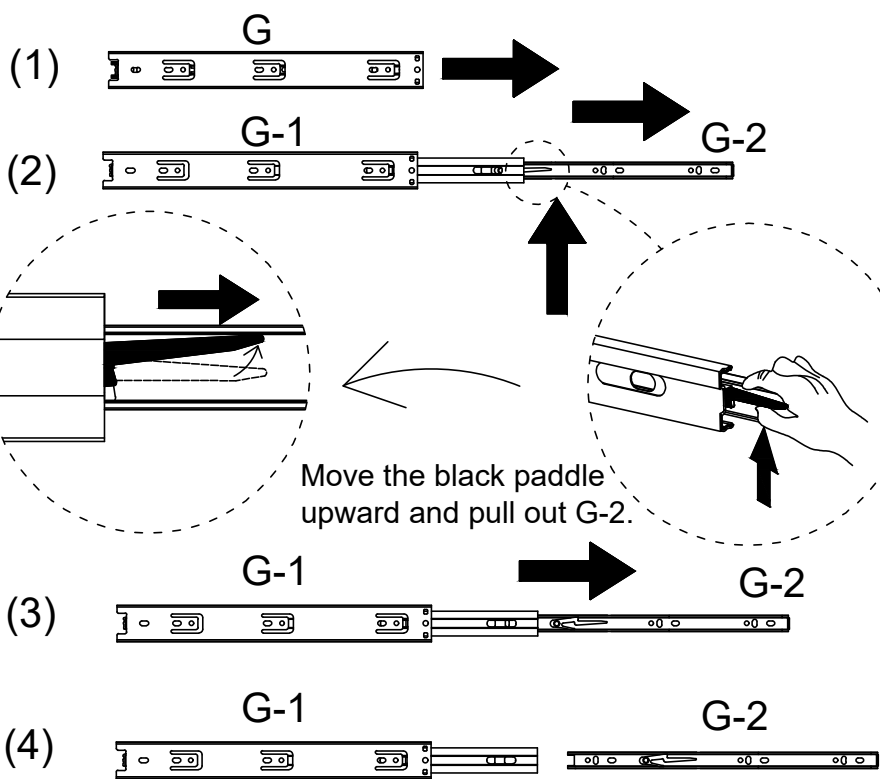

x4

E x12





G x4




04

x2

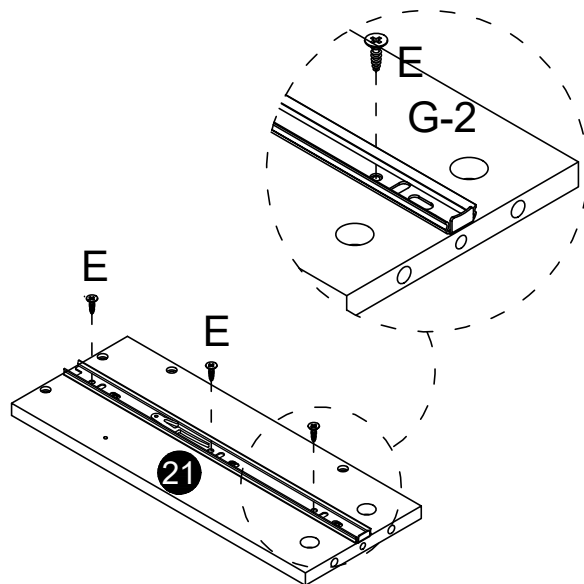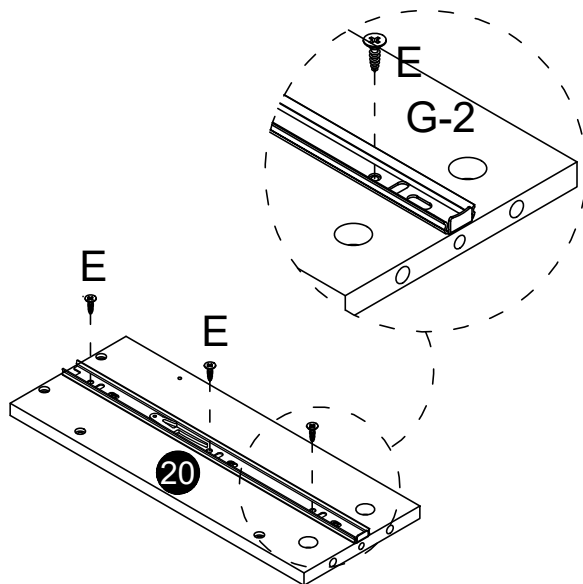


D x4




05

x2

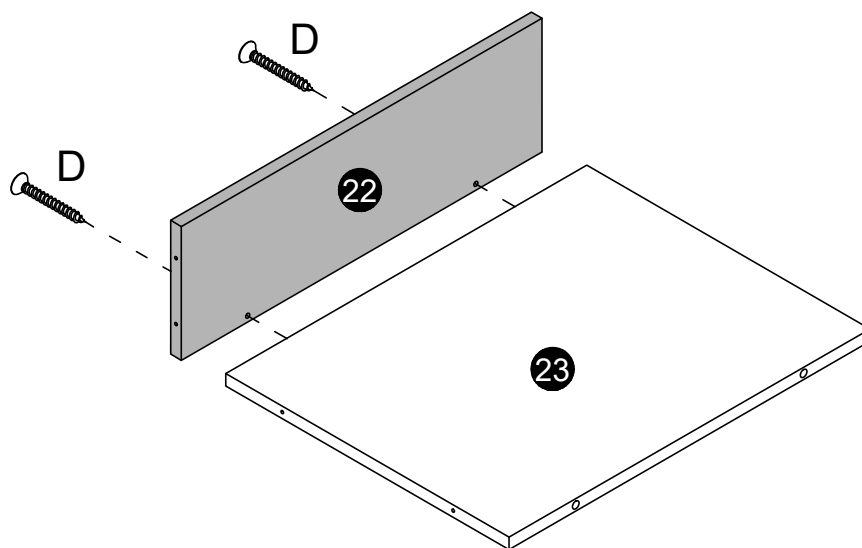


D x16



06

x2

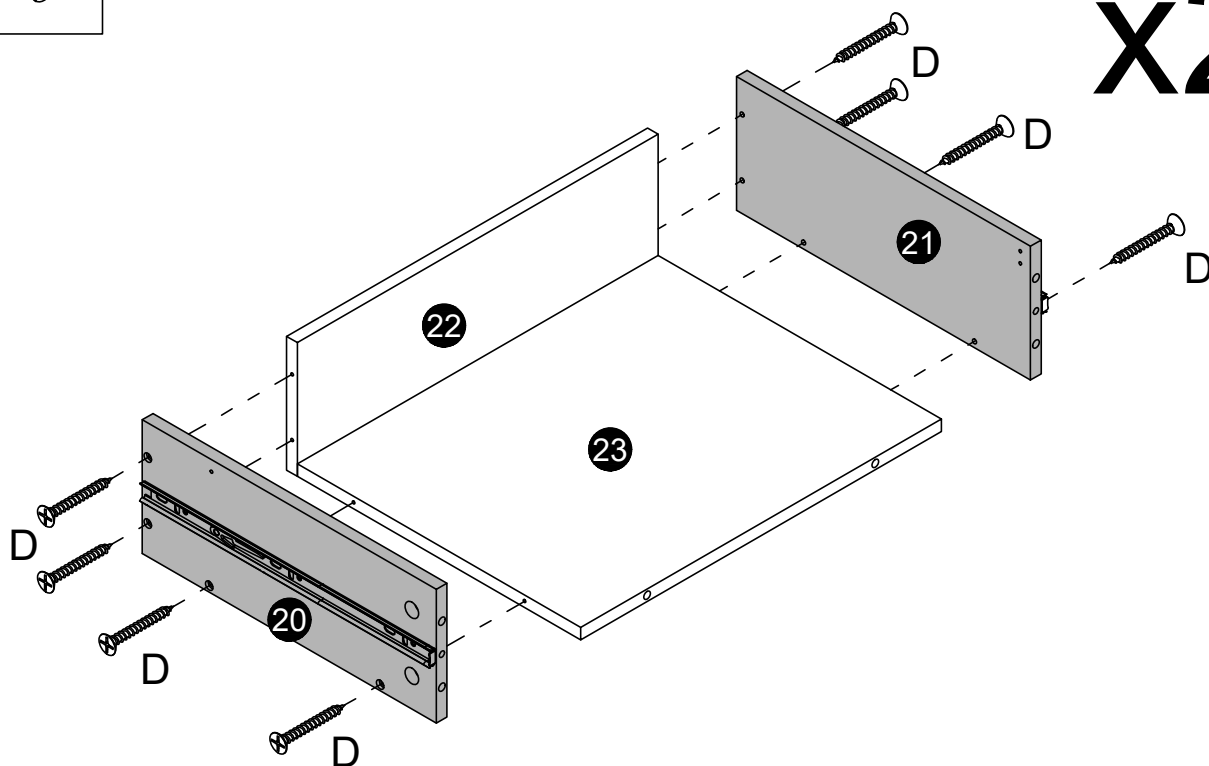

H x4




P x8



07


x2

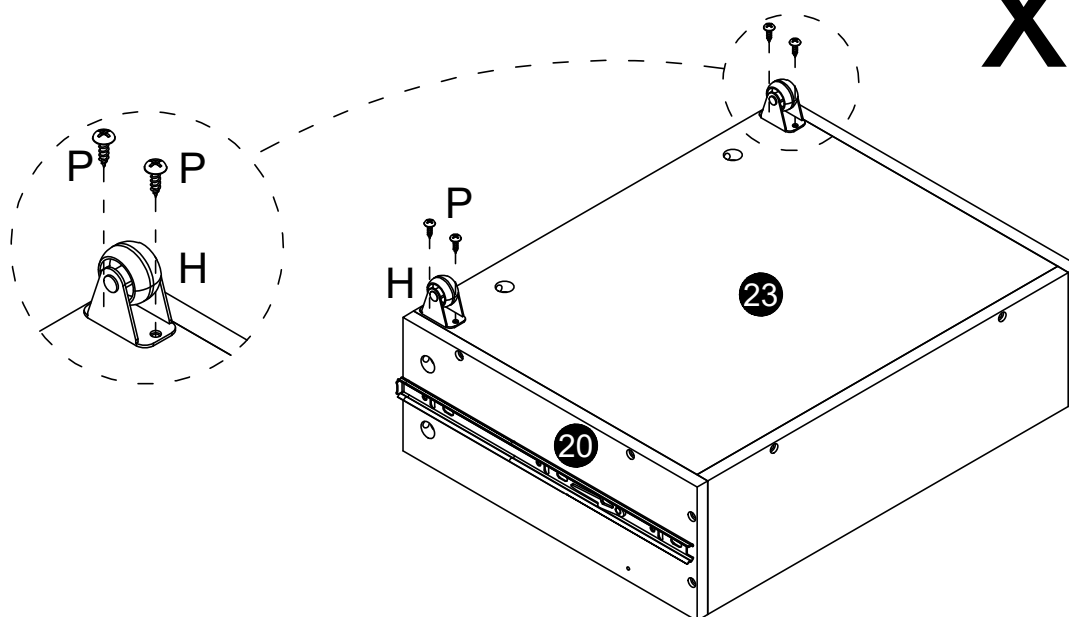

A x12

08

x2

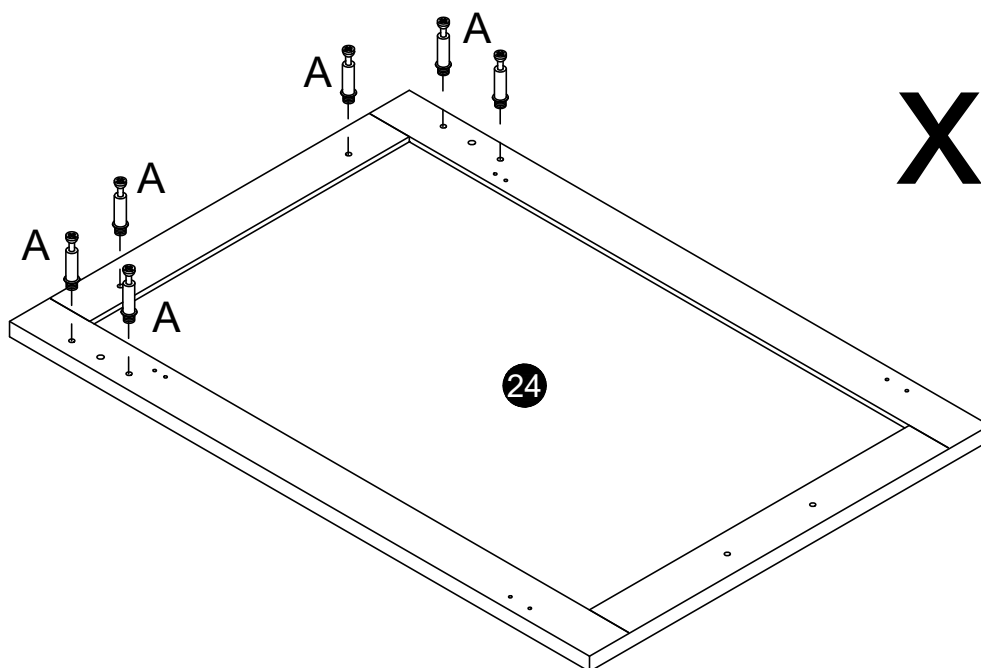




B x12

C x4


09

x2

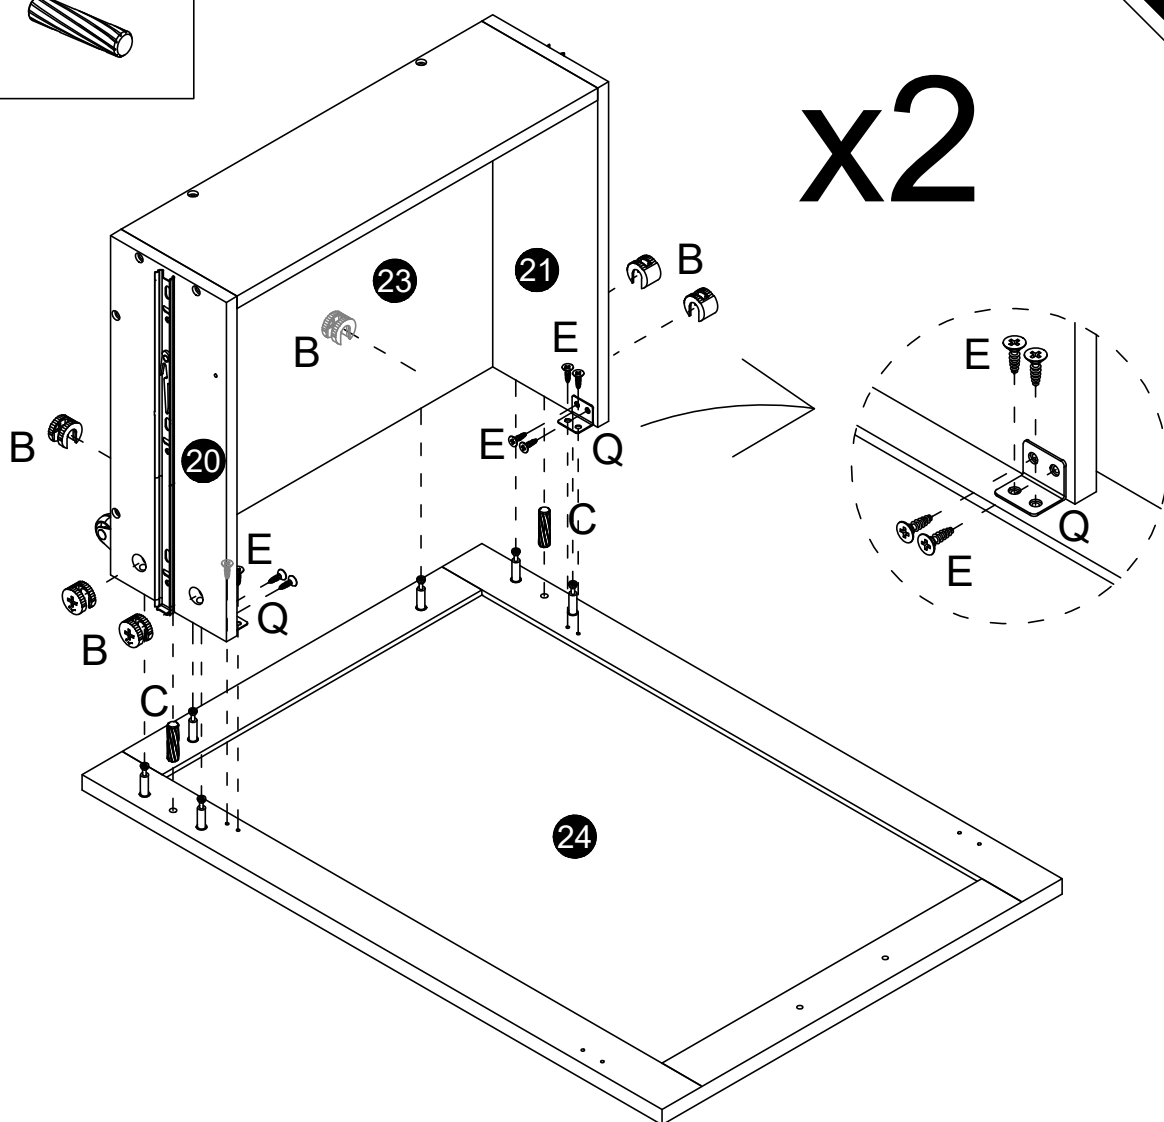

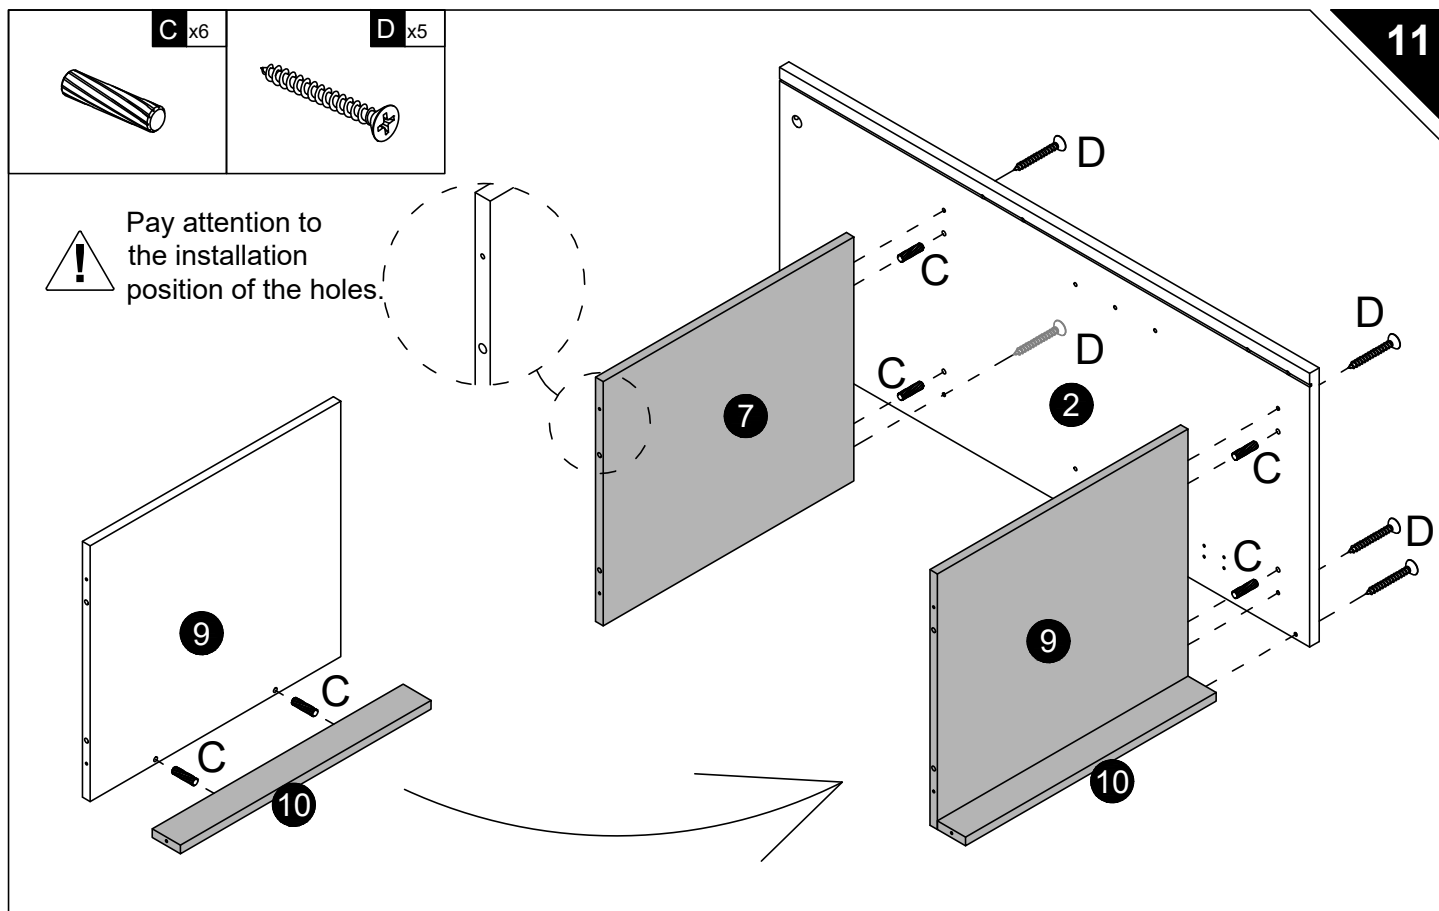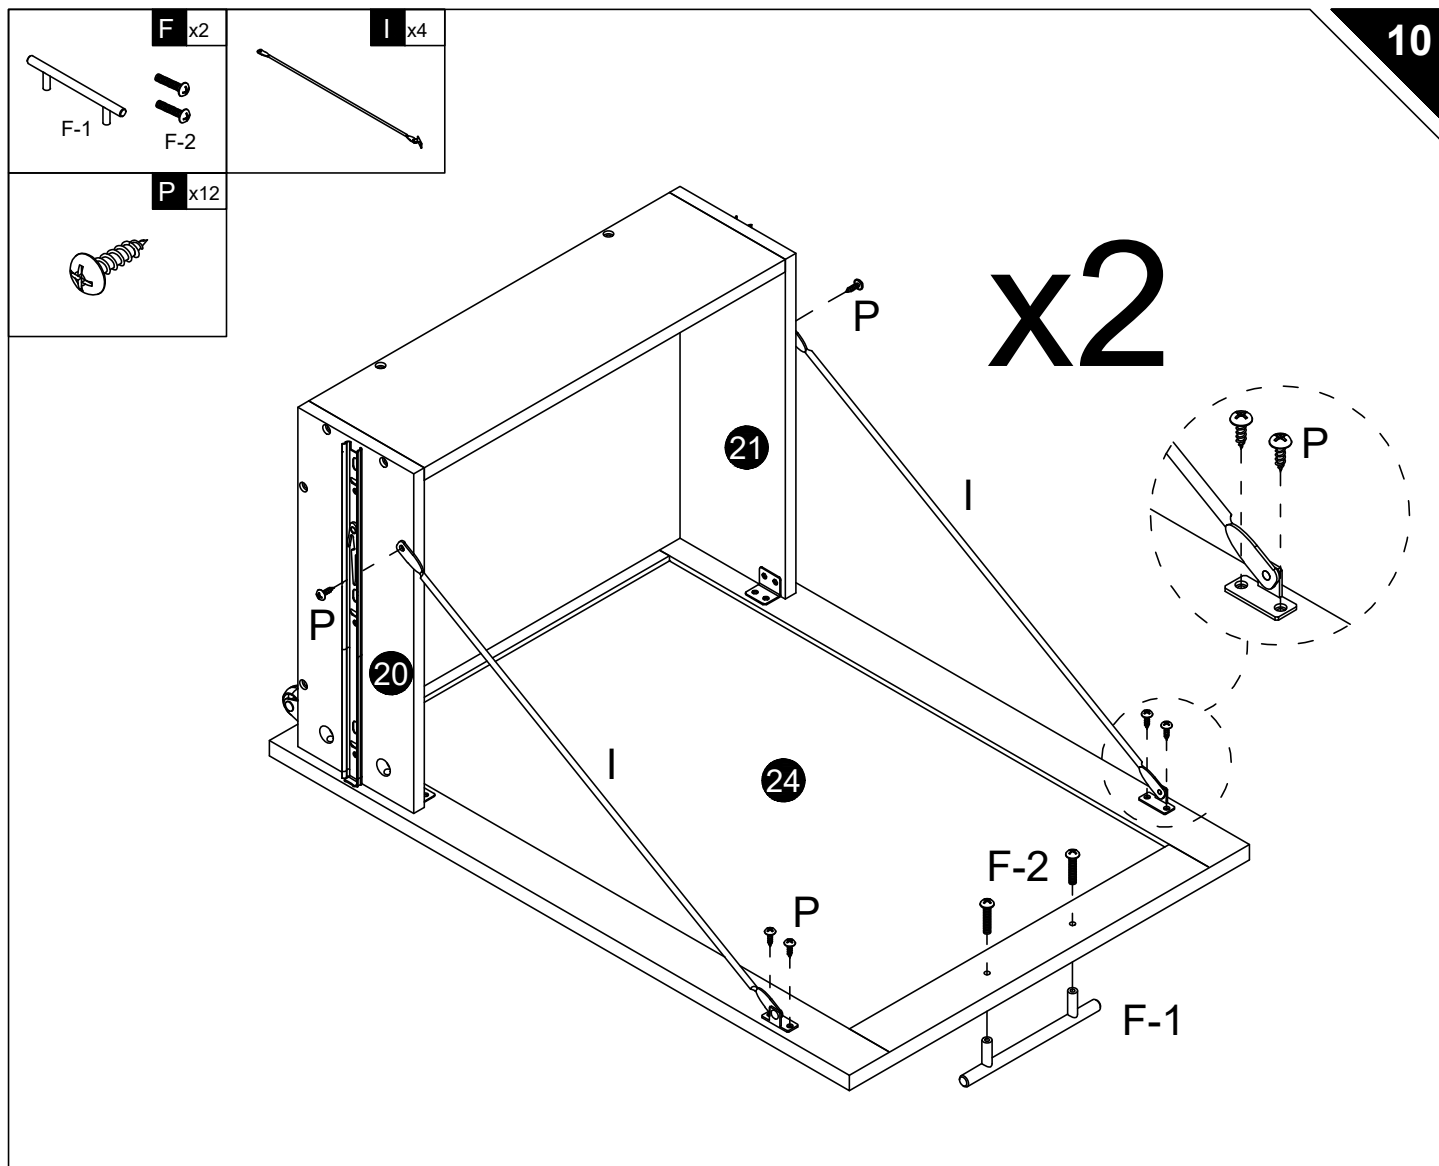


A x4








E x7






G x1





CL x1

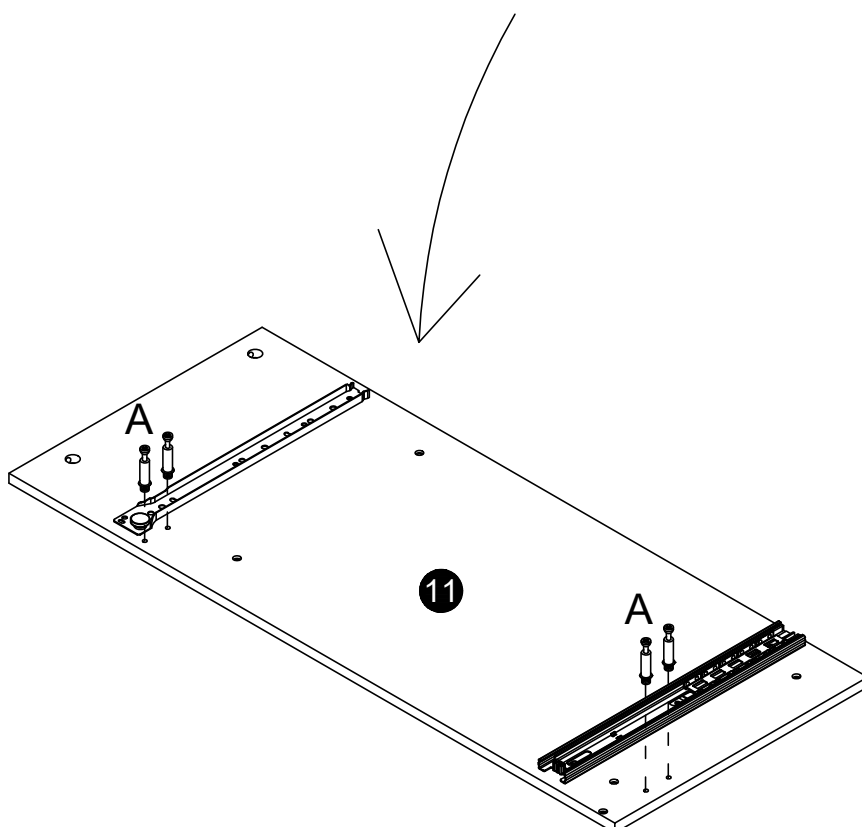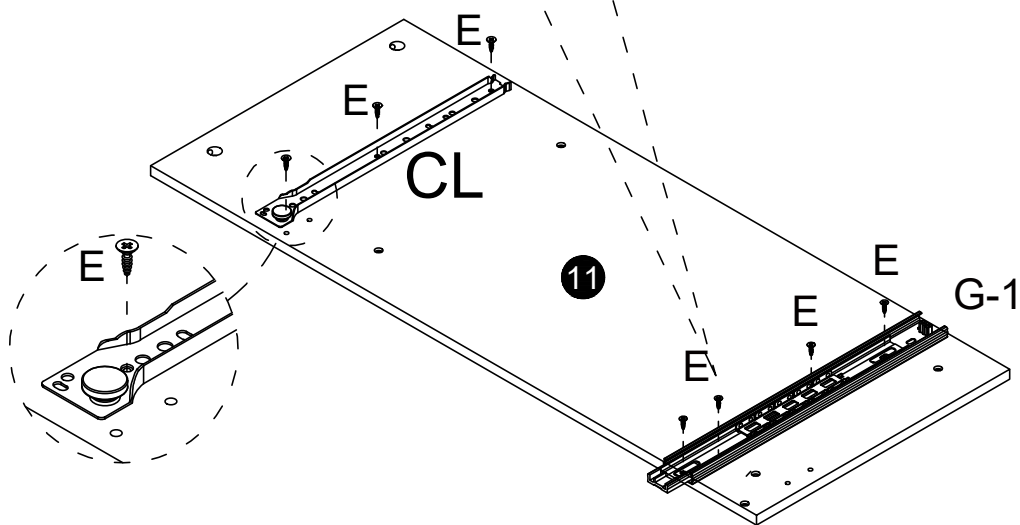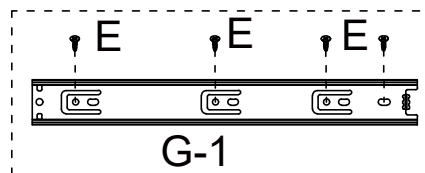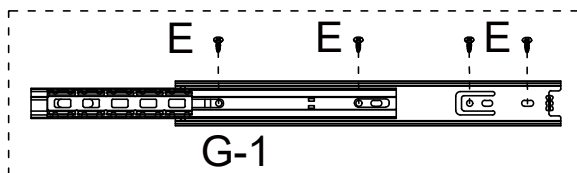




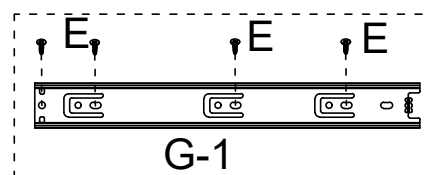
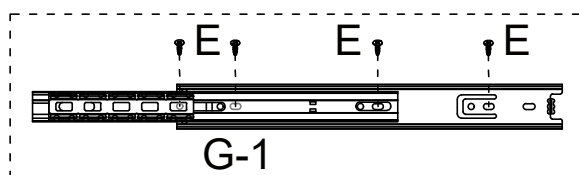
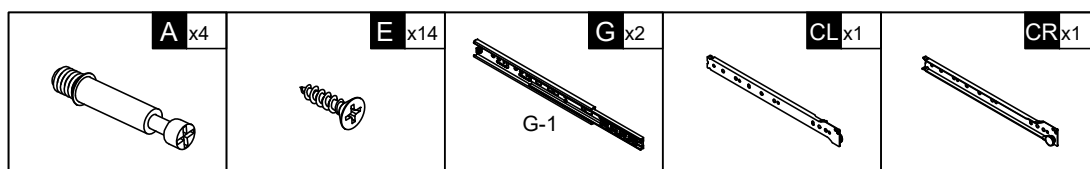


! Pay attention to the installation position of the holes.

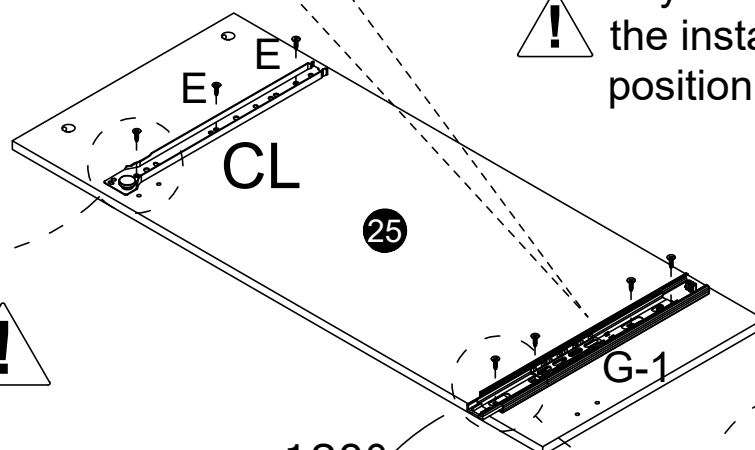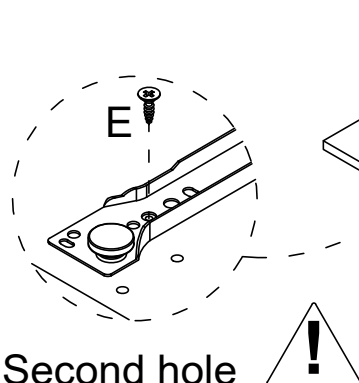


180°


! First hole

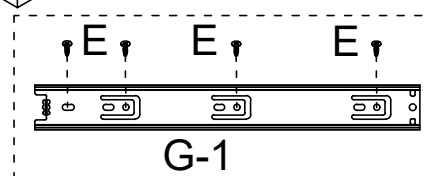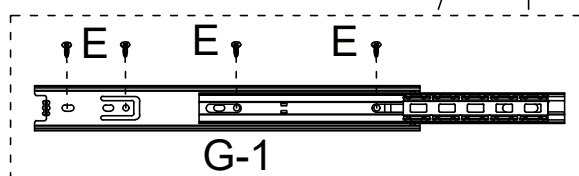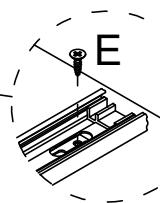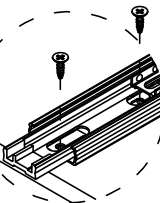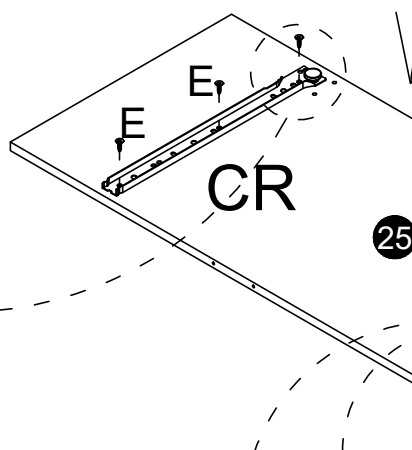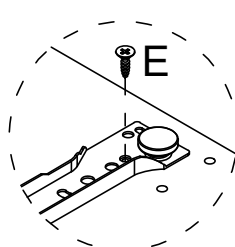

! Pay attention to the installation position of the holes.

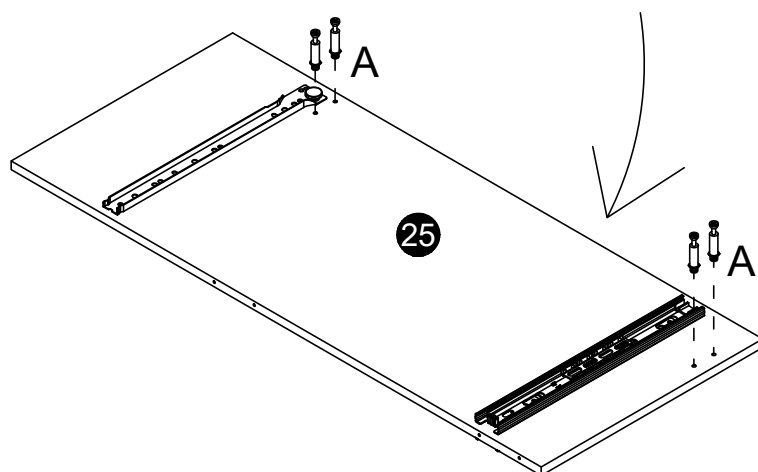


A x4



E x7





G x1

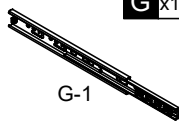


G-1


CR x1

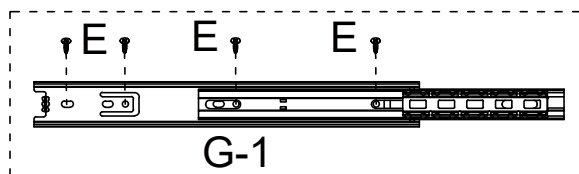


G-1

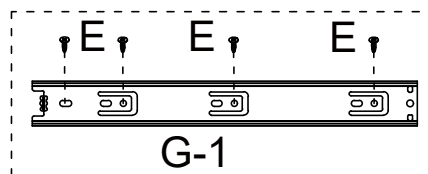

G-1

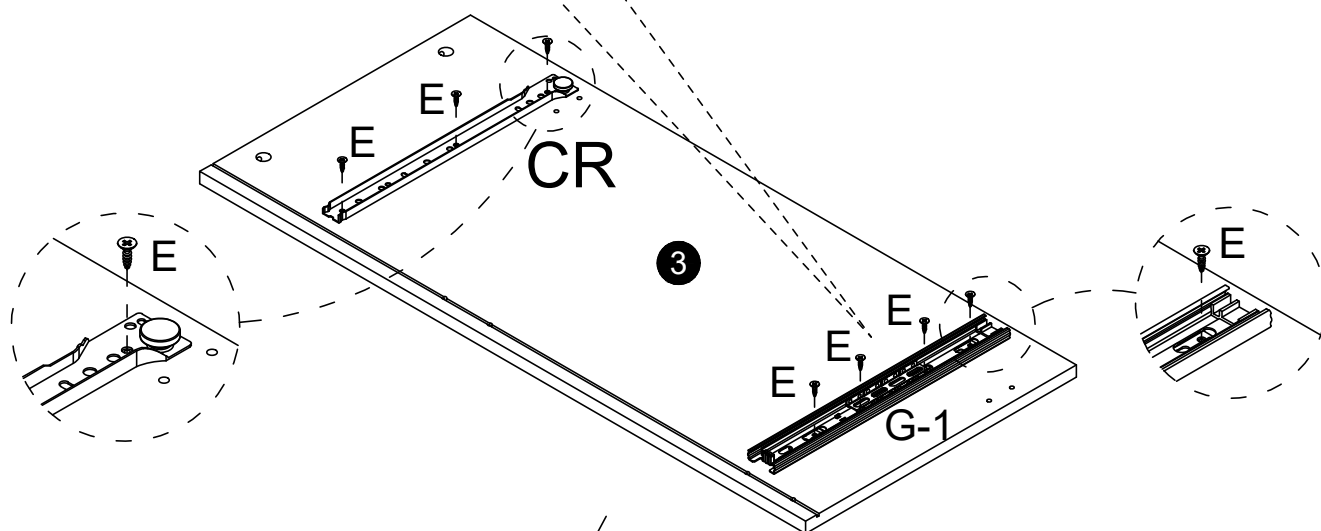



3

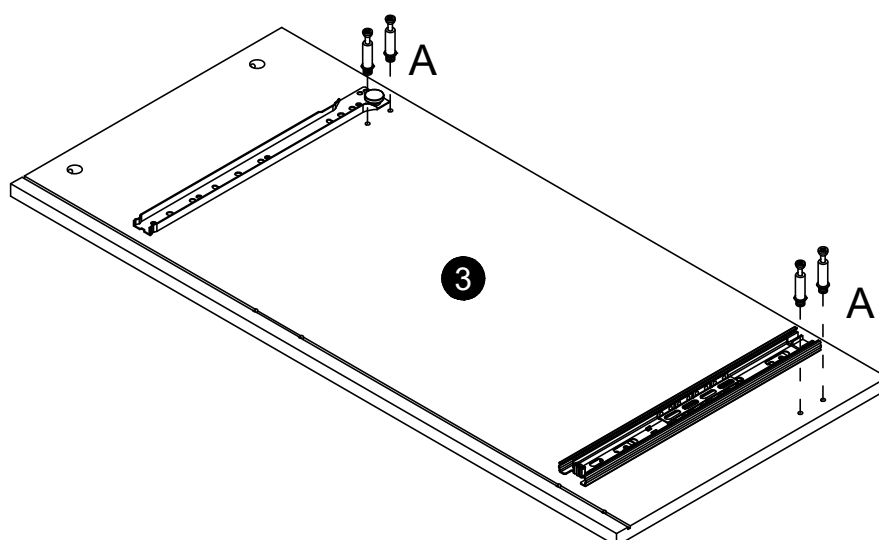


3

C x4



D x5

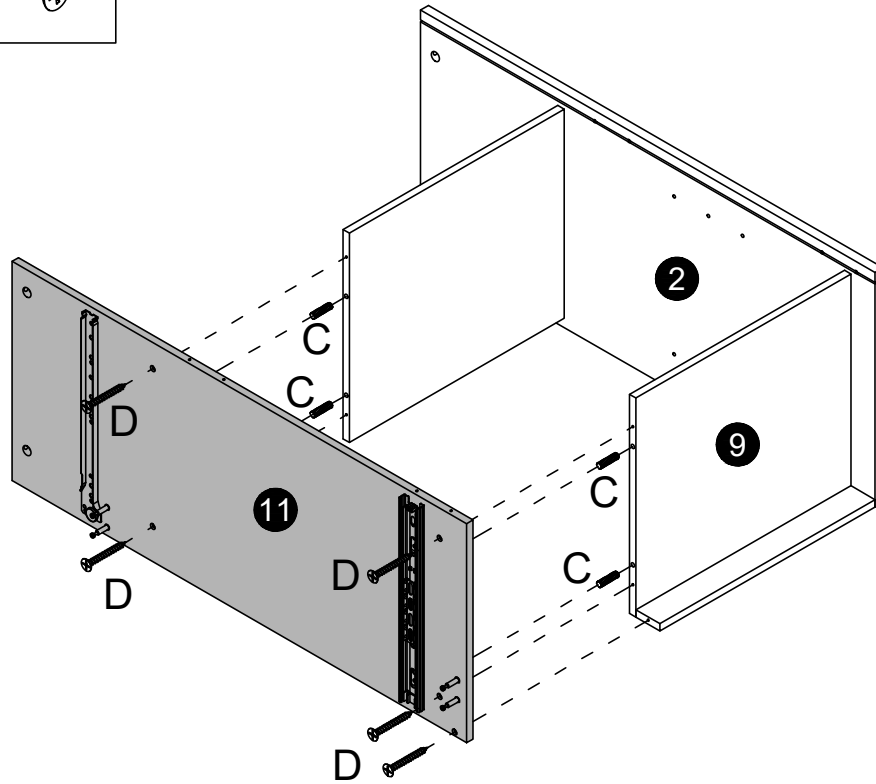

B x8

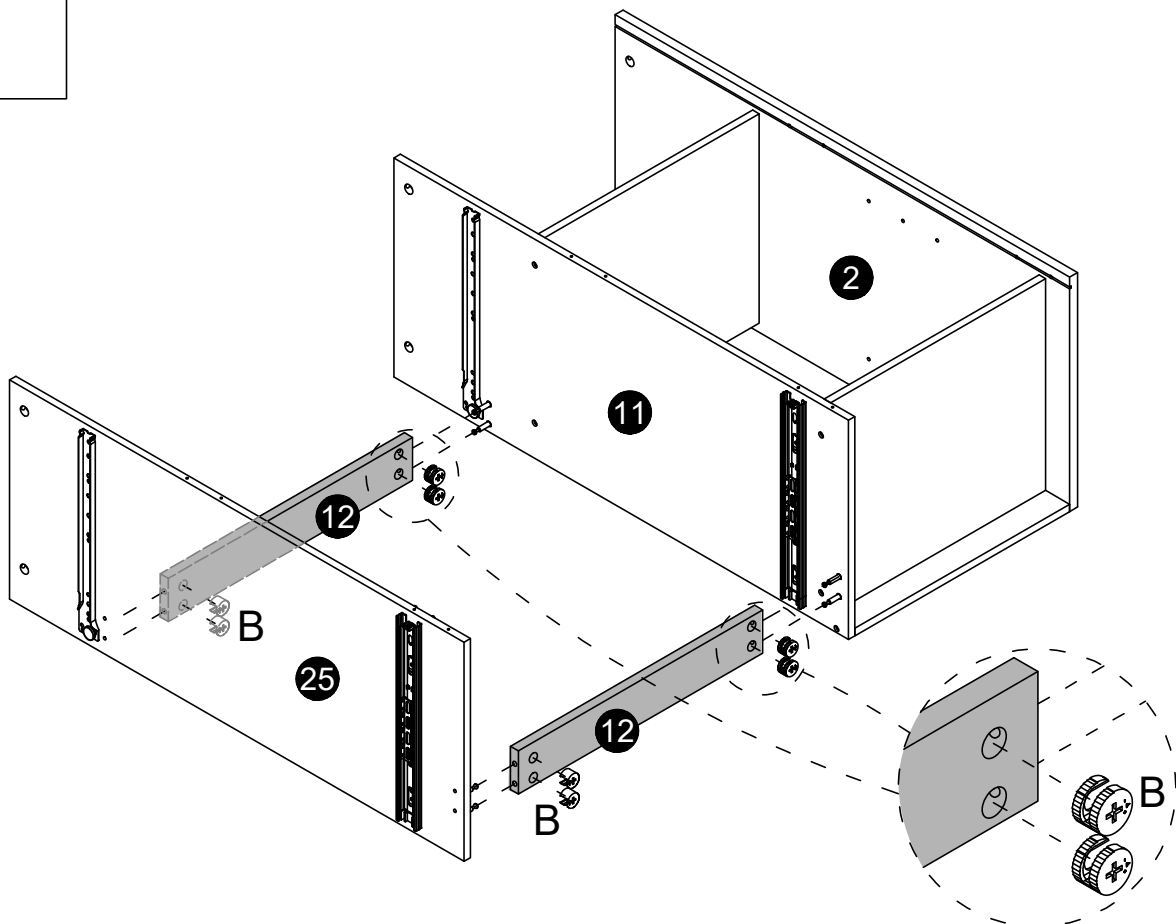


D x8

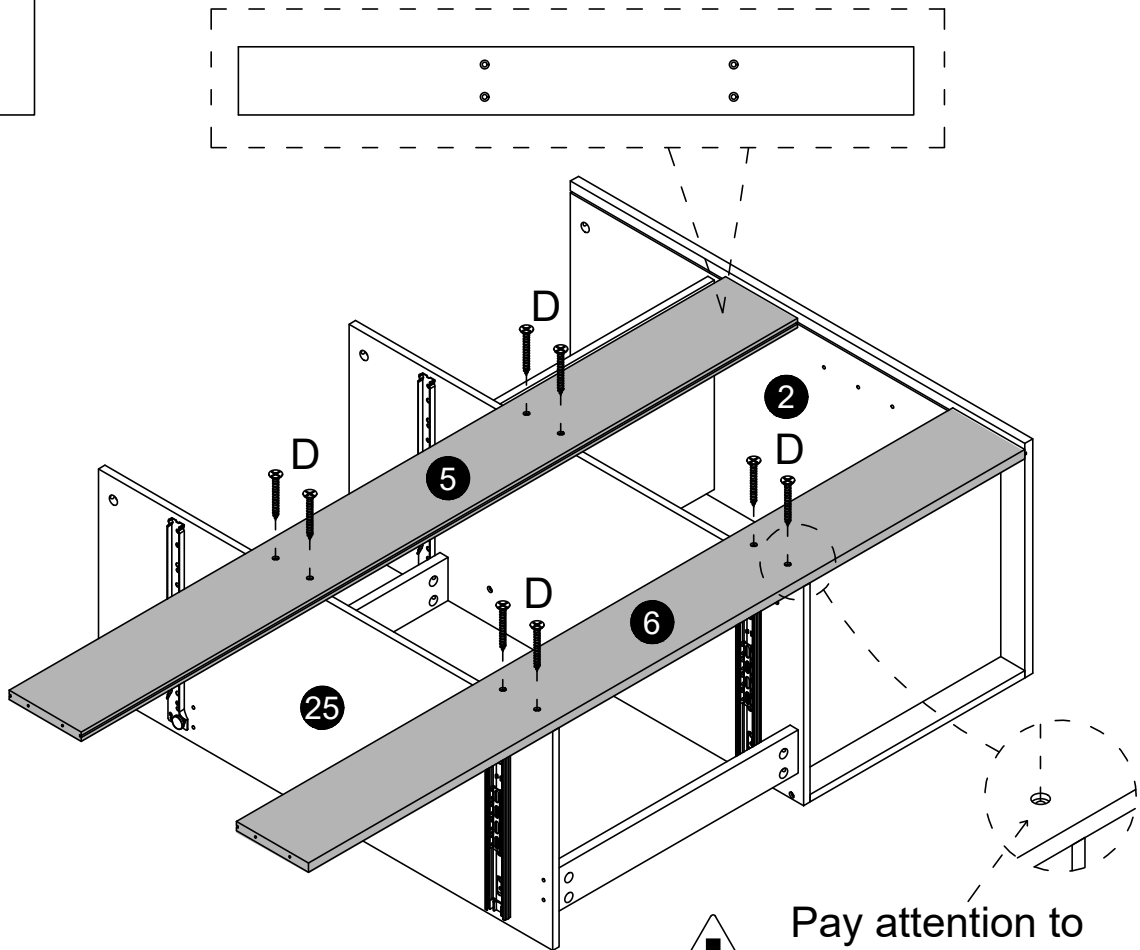




Pay attention to
the installation
position of the holes.

A x4





D x4

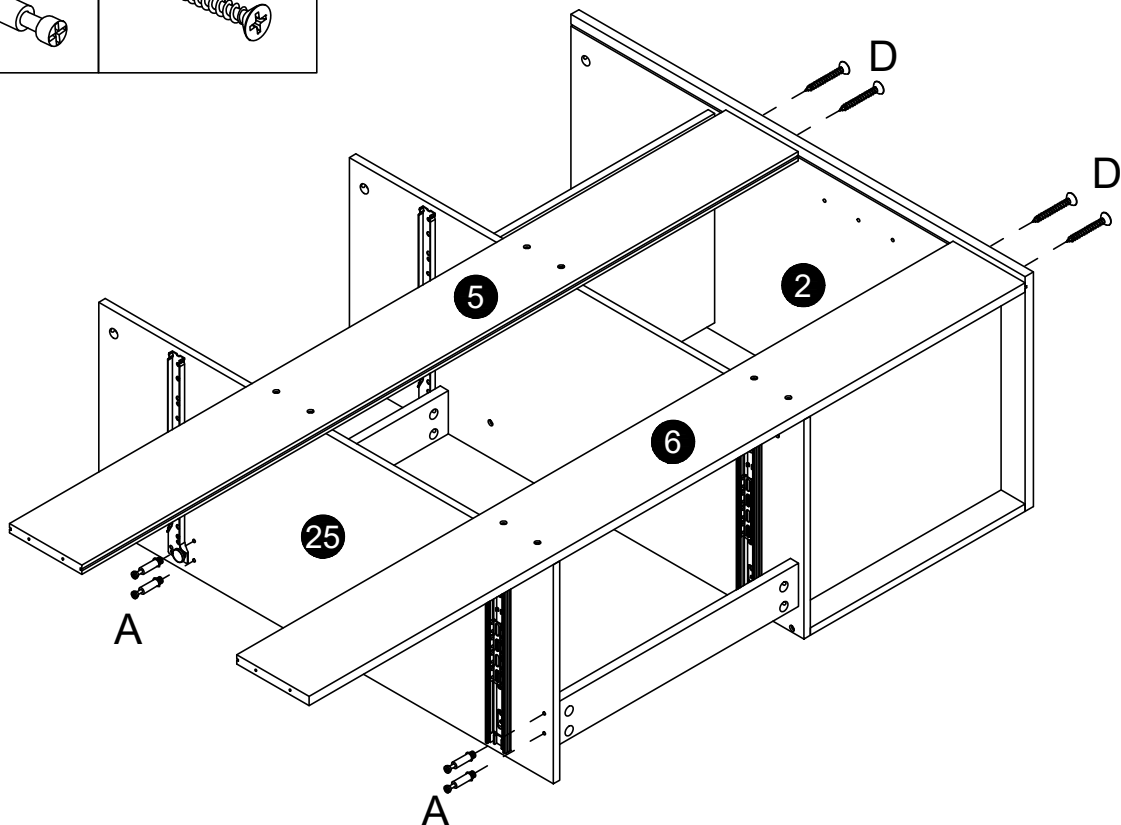

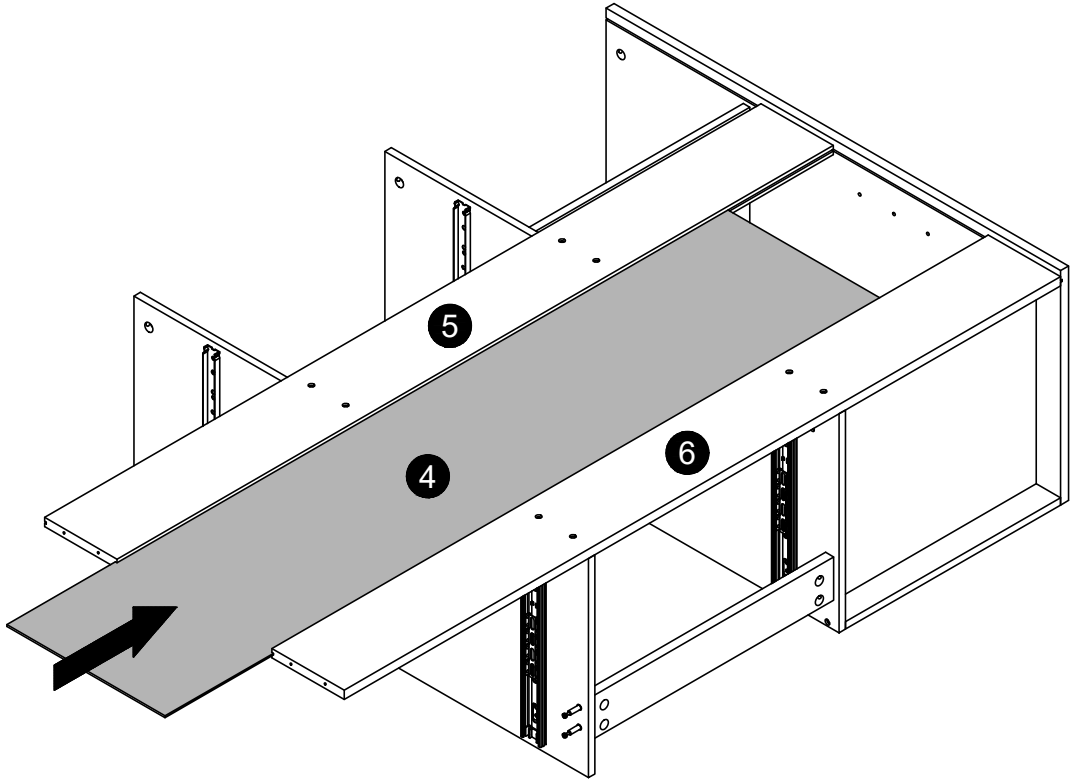

B x8


D x4

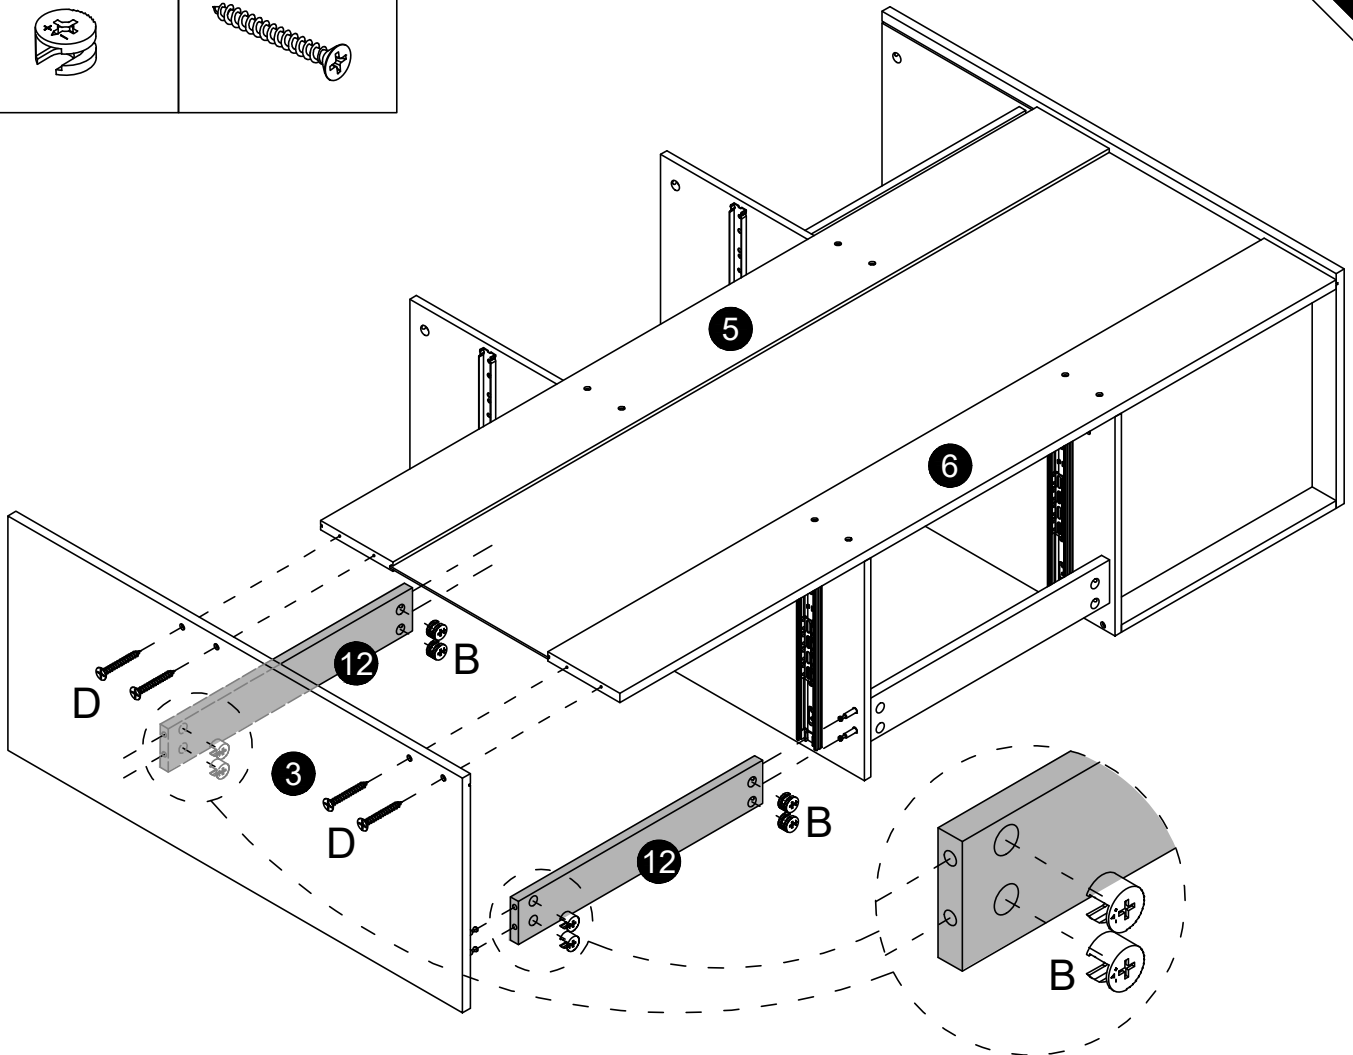


C x8




21

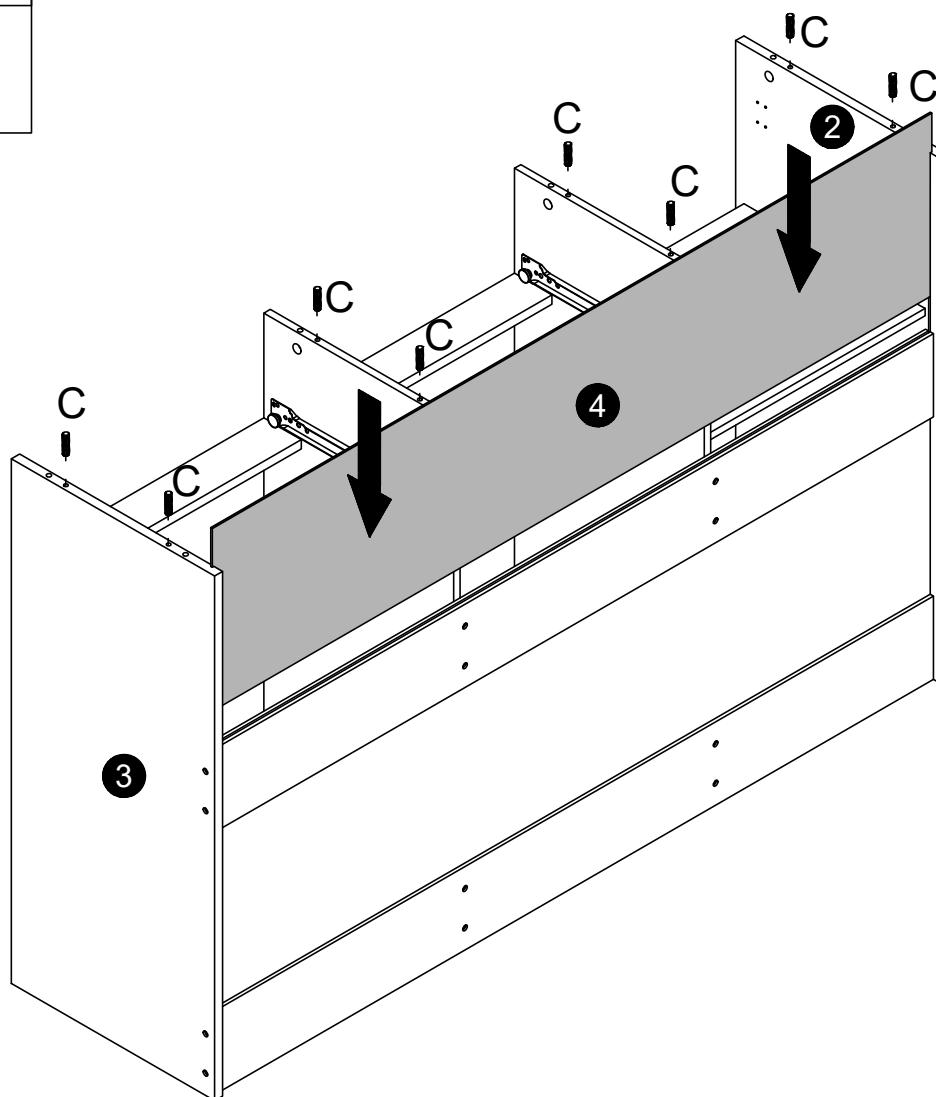


A x8






22

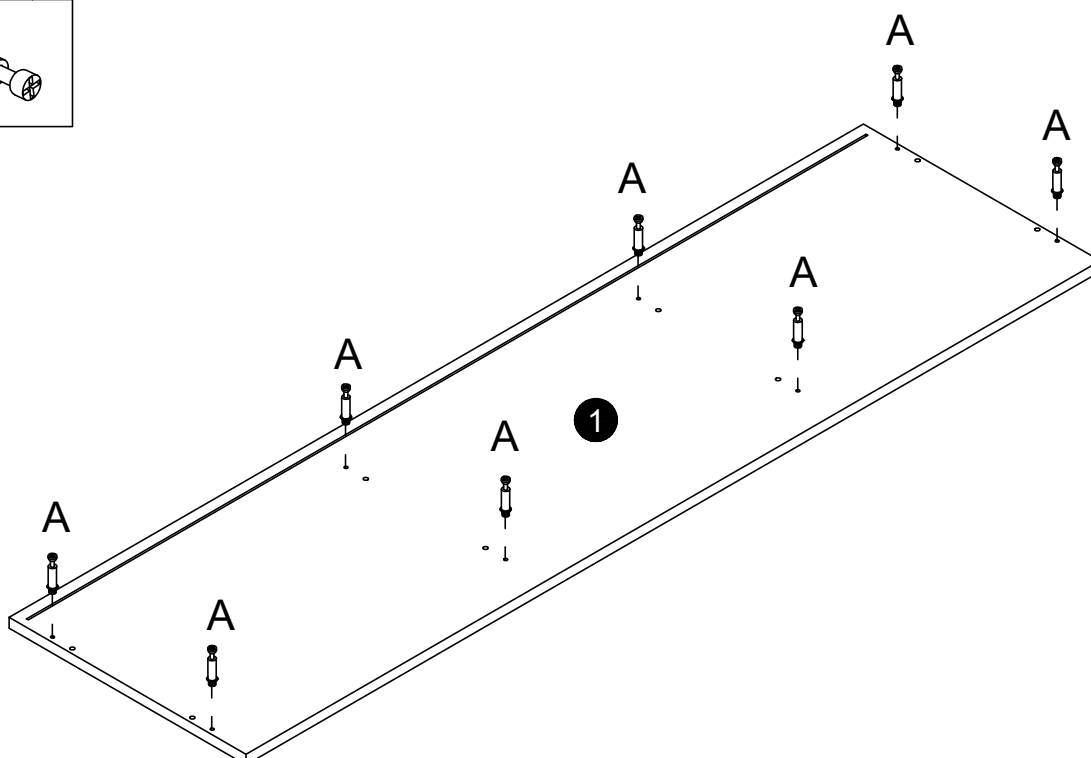


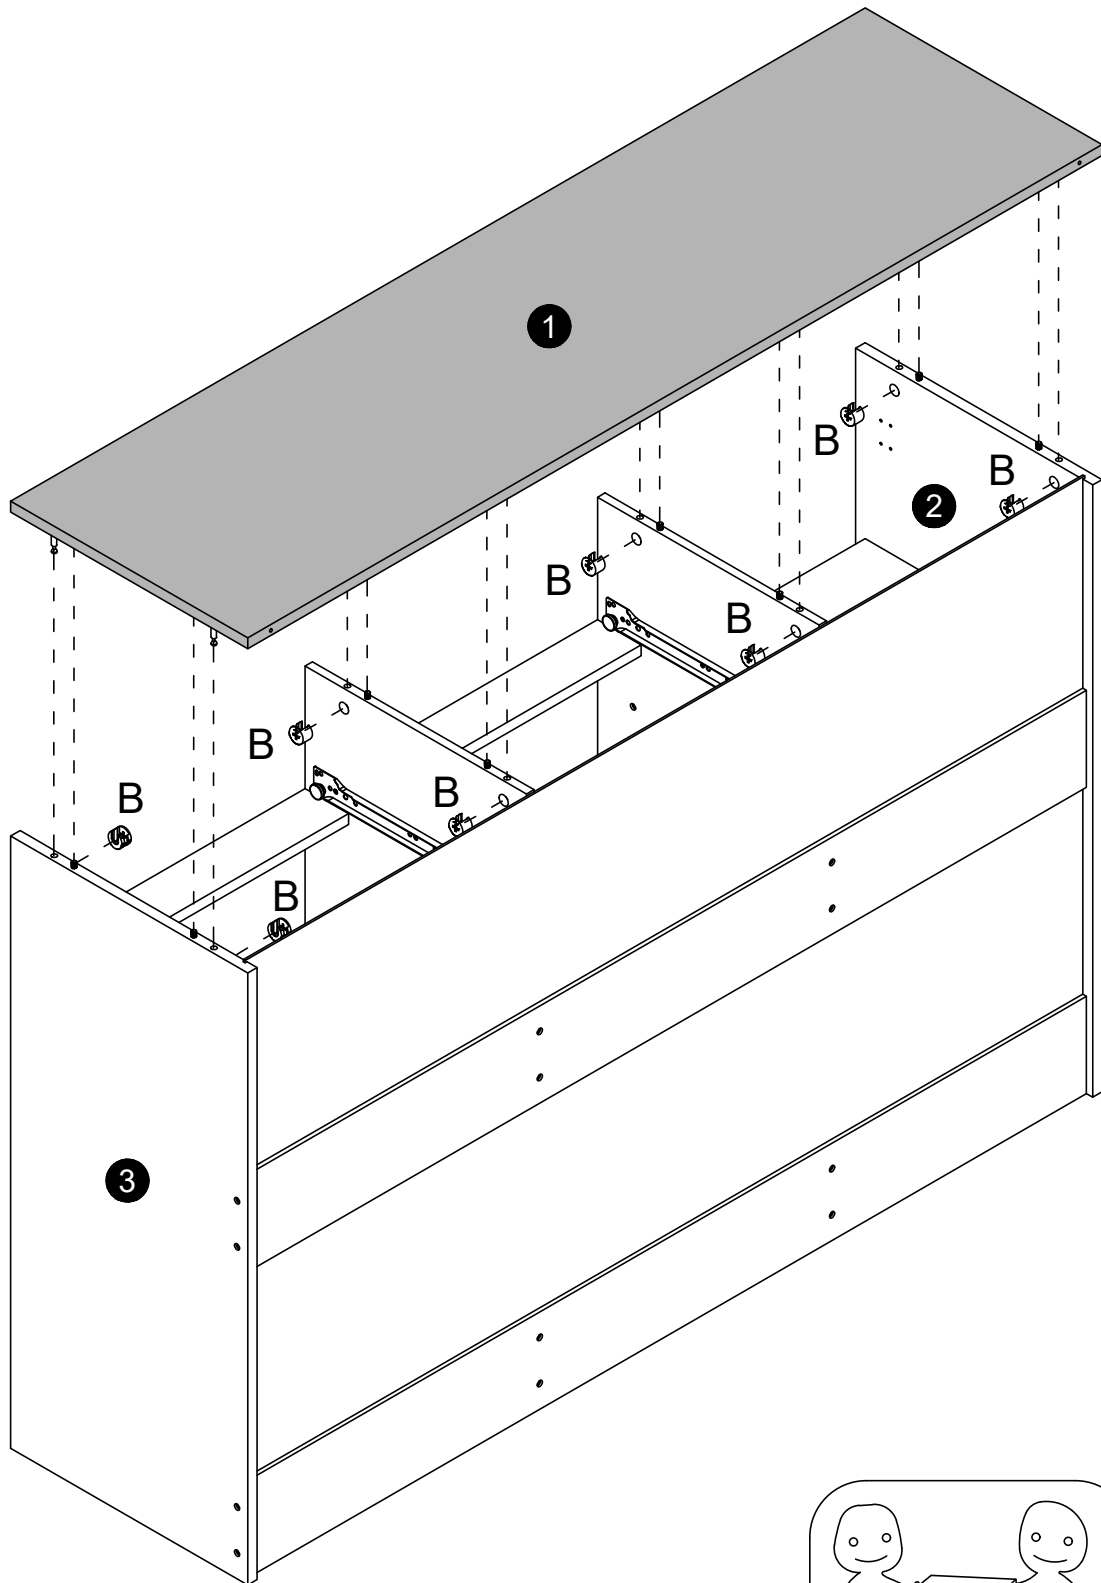

**Need Two or More
People To Complete**

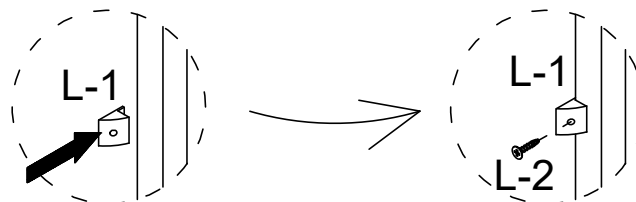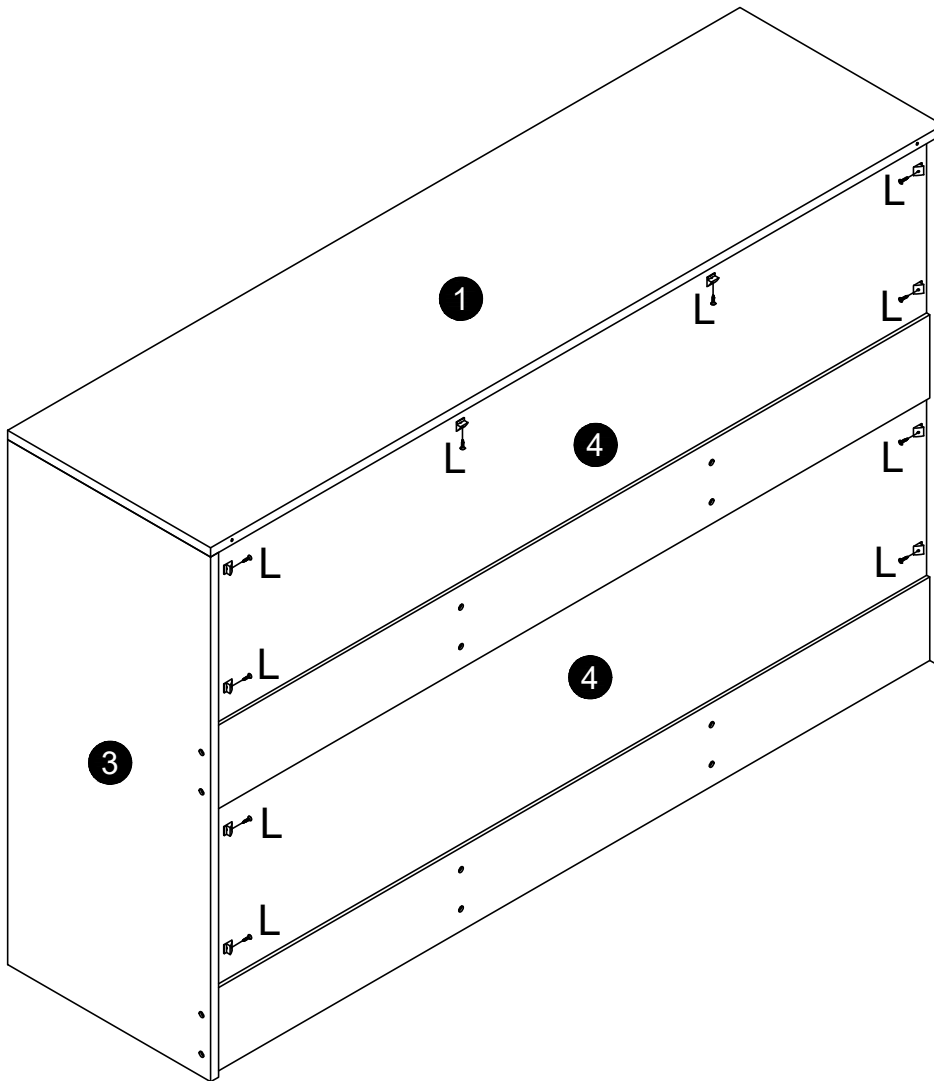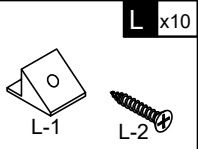


J x4

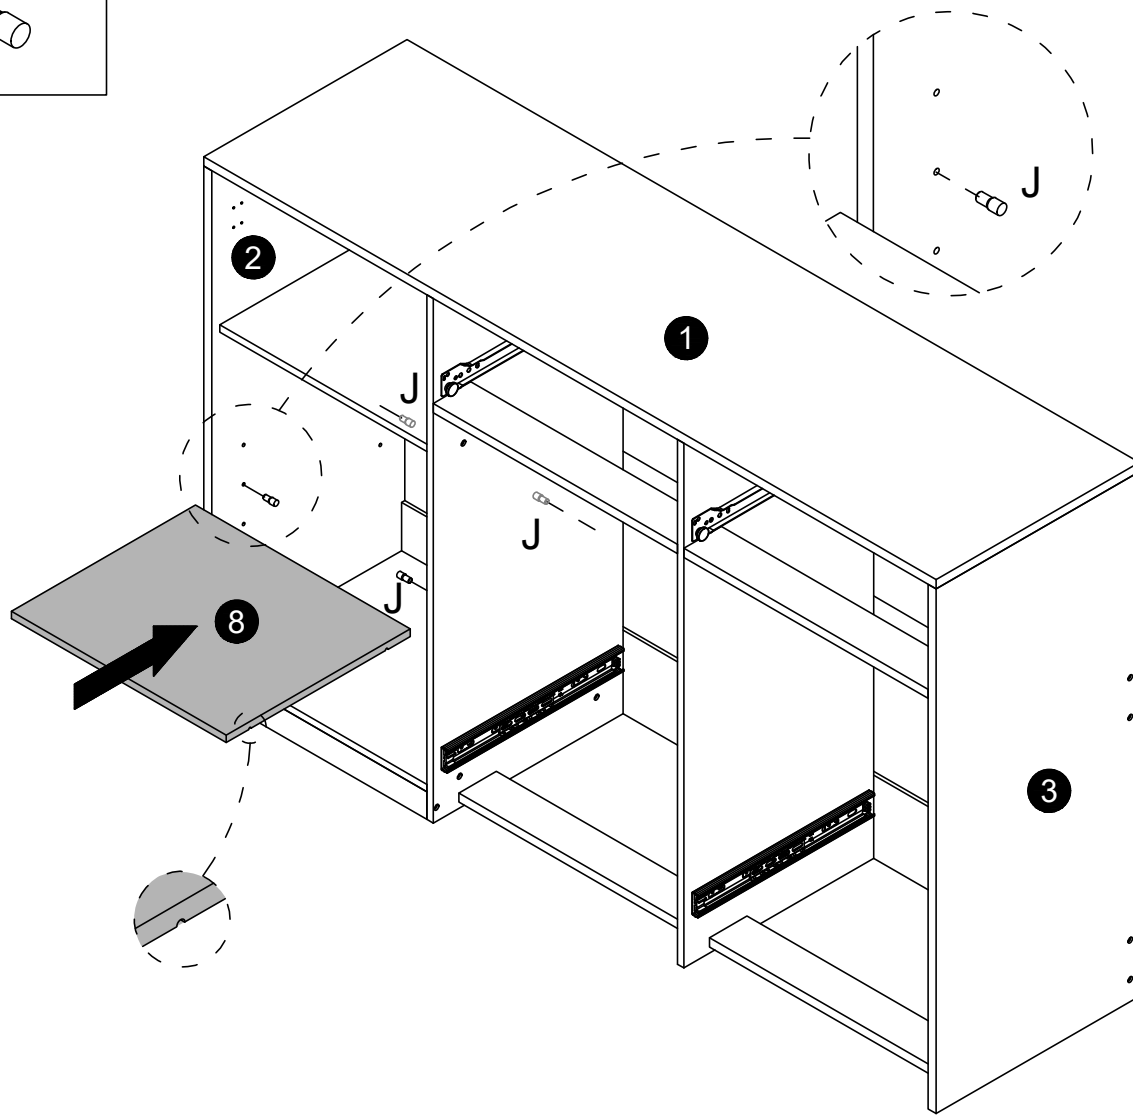

E x4







F x1




F-1
F-2


K x2

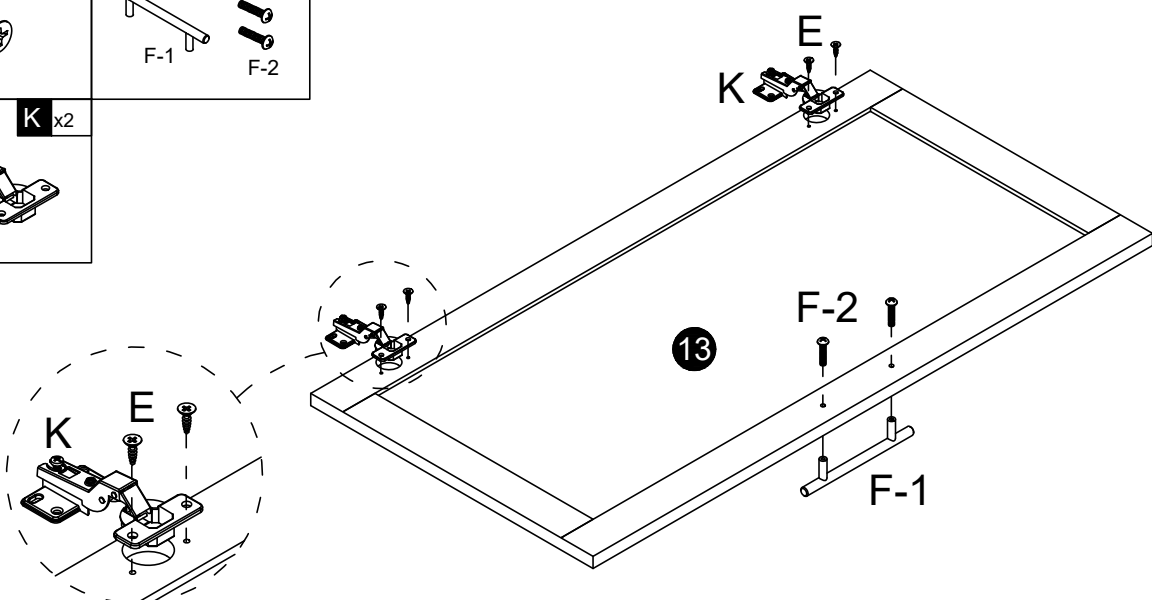

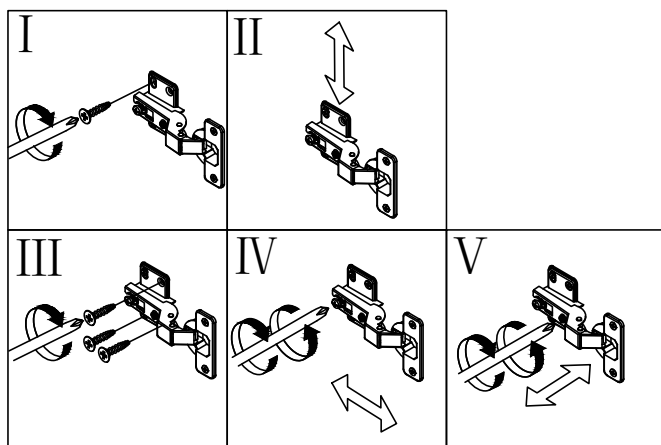
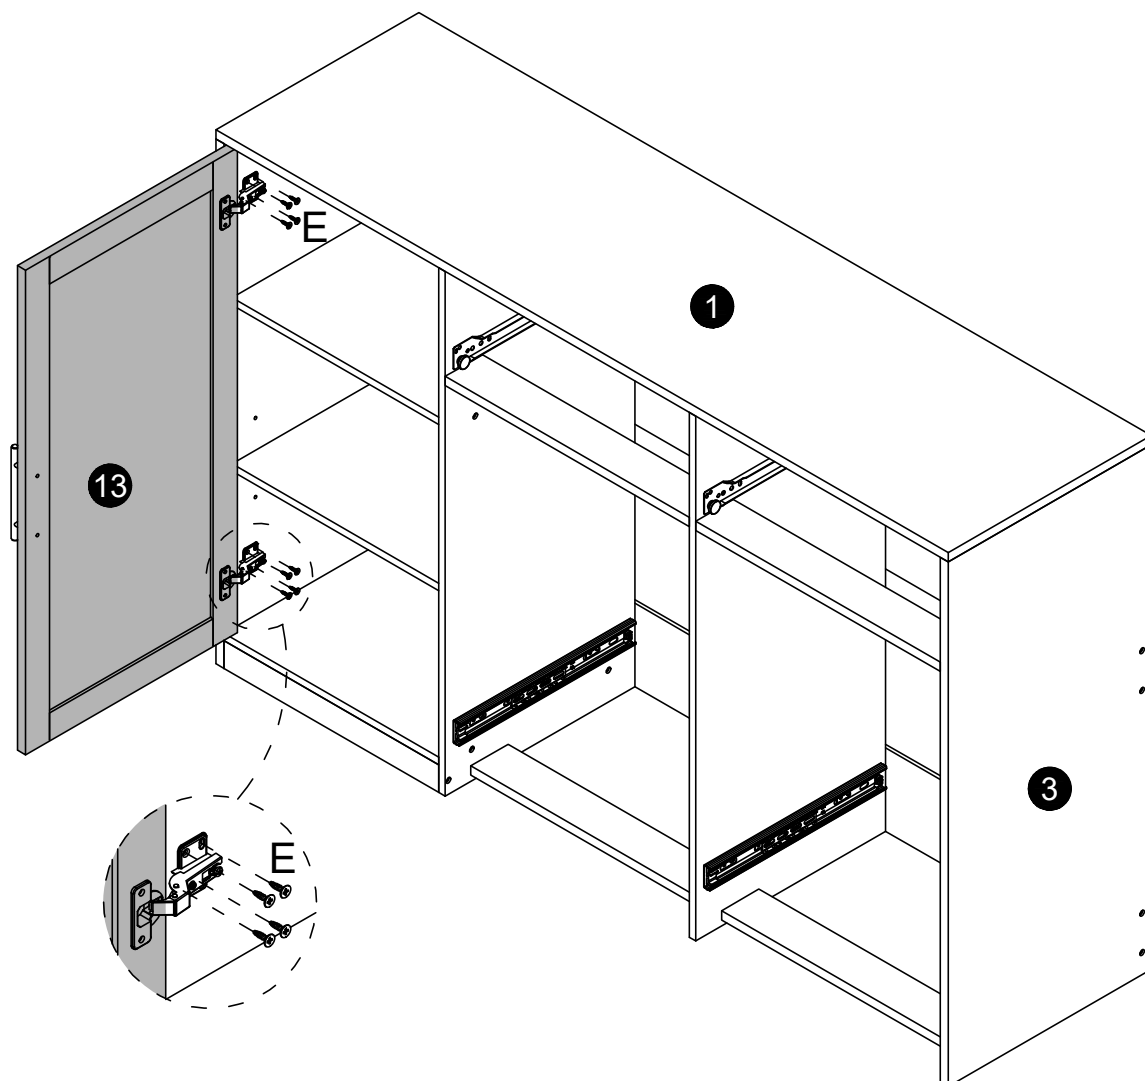



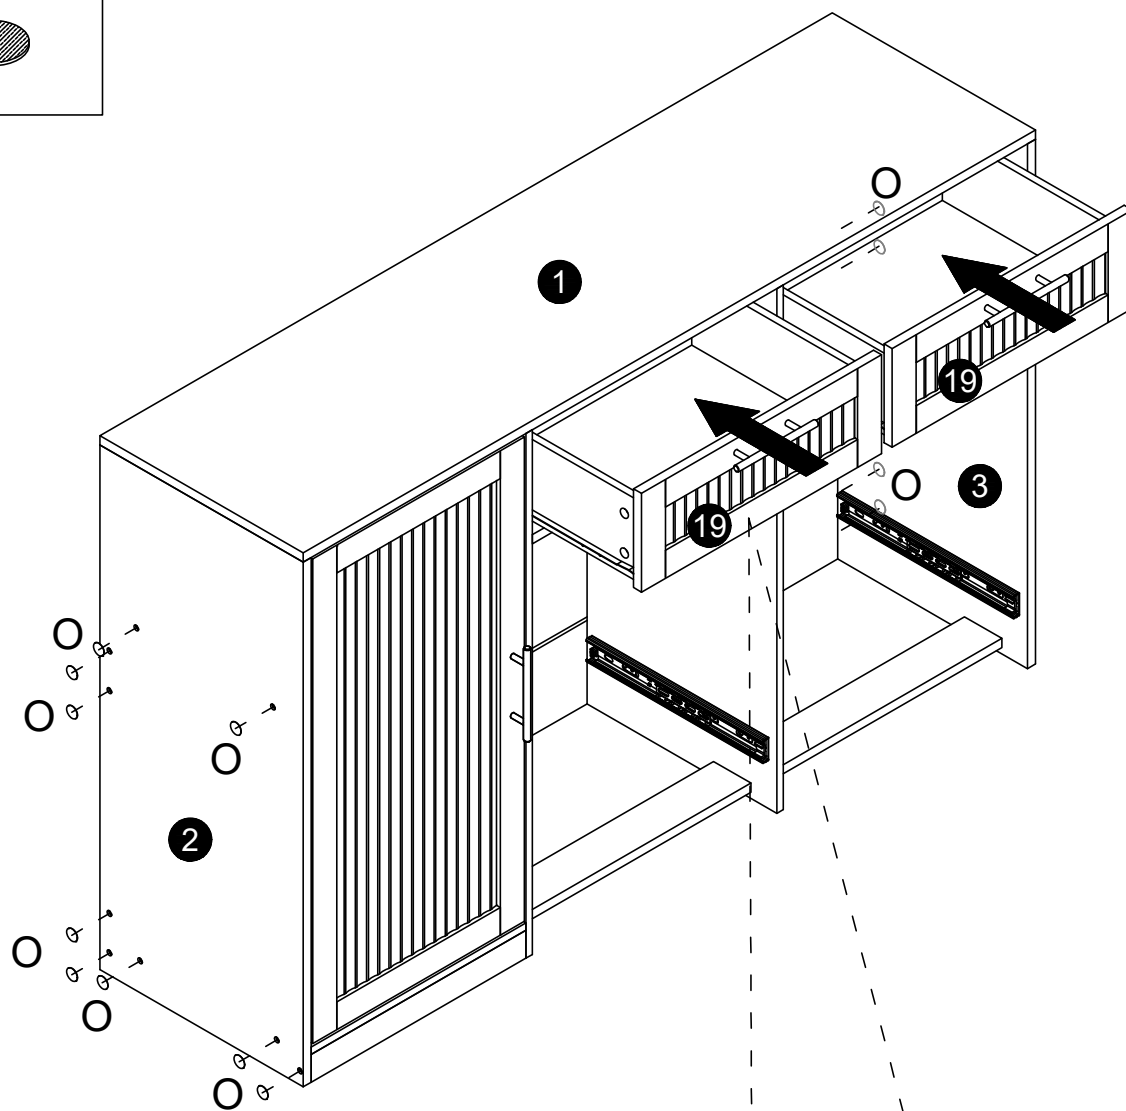


(1)

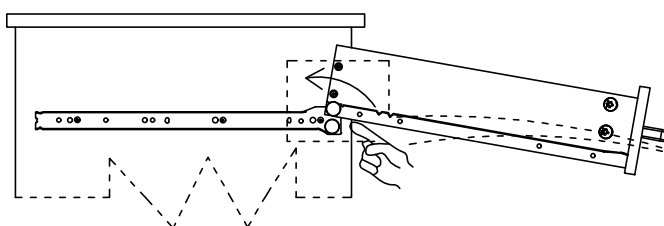


(2)

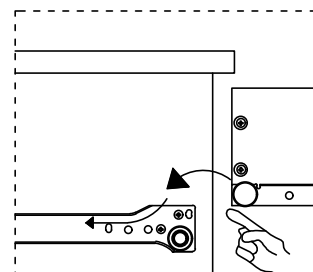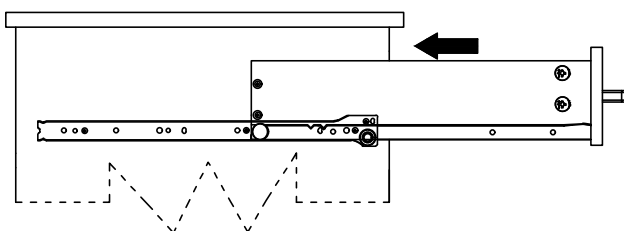

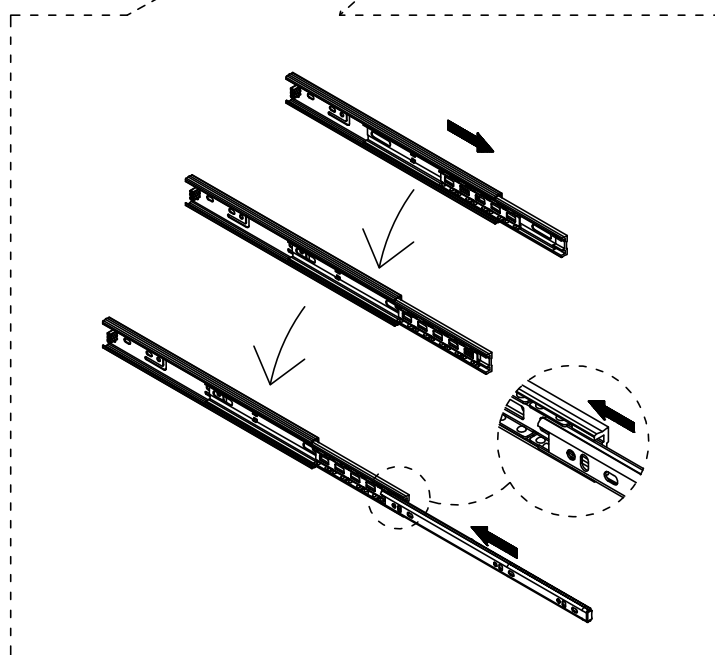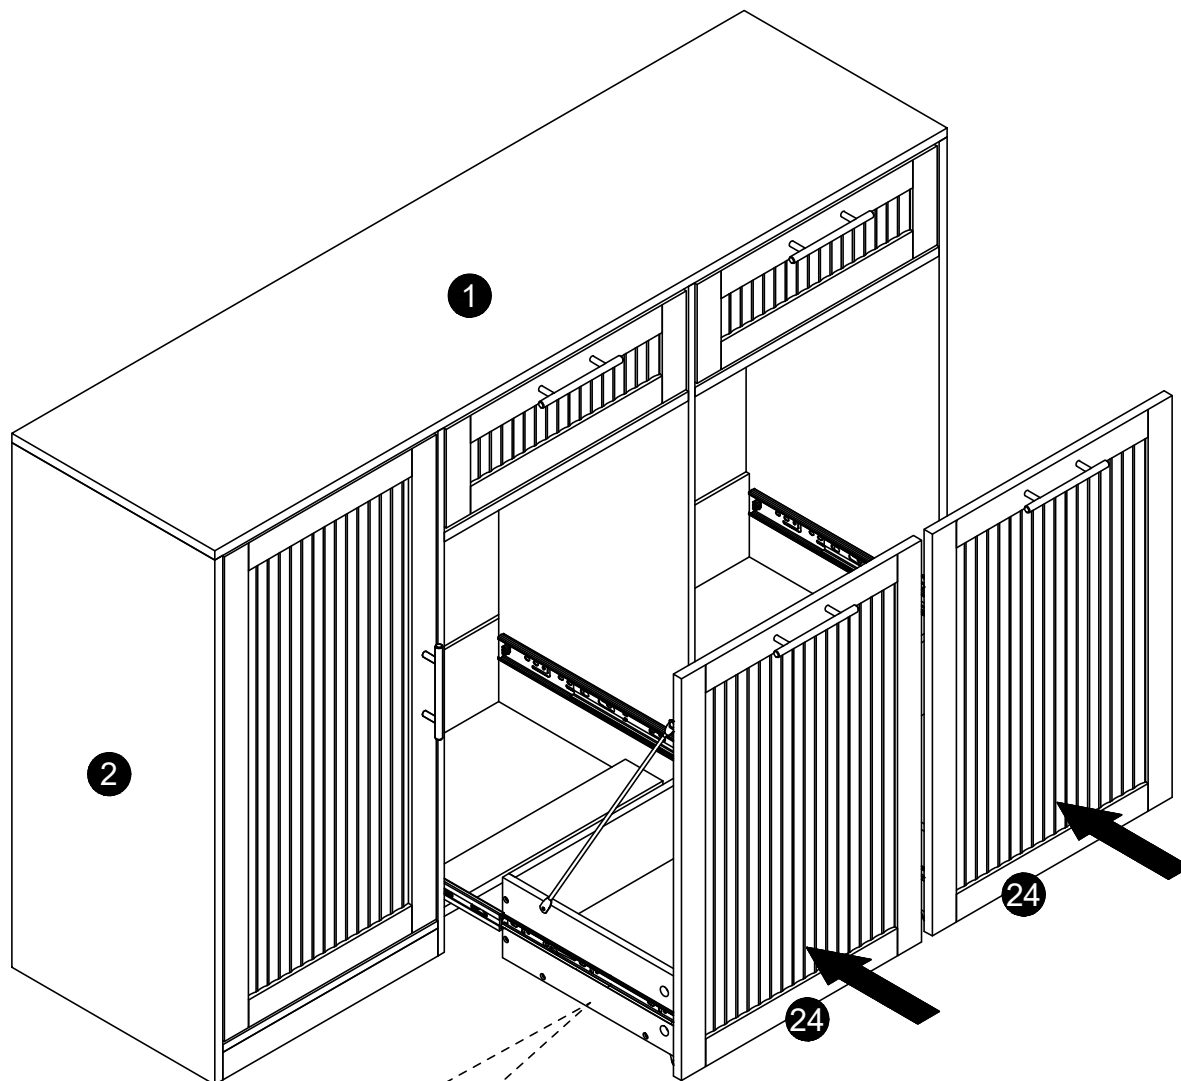


Please make sure to align the slide rail with the notch properly. Support it with your hand and push it in horizontally so that the sliding ball can fit into the groove and function properly.


D x2




M x2



N x2




M-1

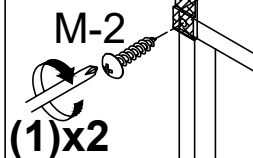

First fix the anti-rewind screw in the reserved hole of the product.


WALL



Then, put the expansion bolt into the hole

(4)x2


WALL

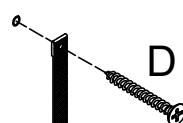

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

(2)x2

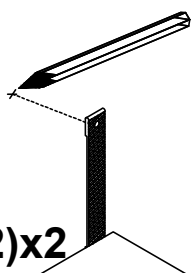


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL



Then use a tape drill to make holes in the wall that are suitable for the product screws.

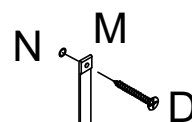

WALL

