



Assembly Instructions


A. Seat 1 PC

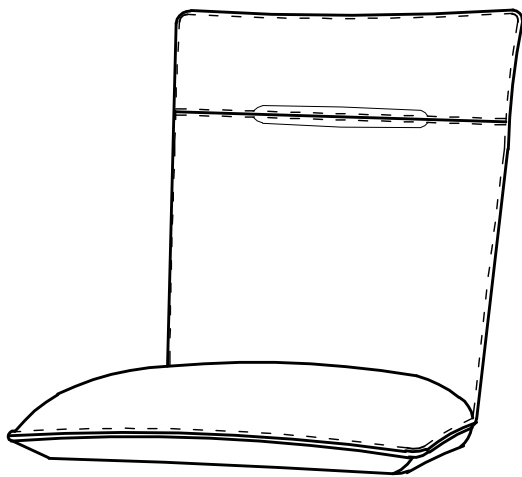


B. Left Front leg 1 PC

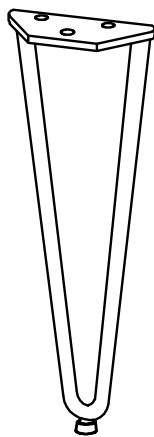



C. Right Front leg 1 PC

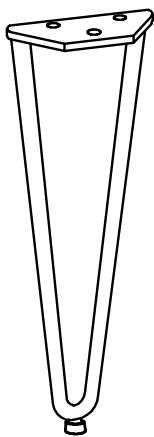





D. Left Back leg 1 PC

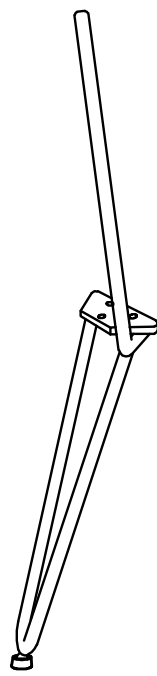

E. Right Back leg 1 PC

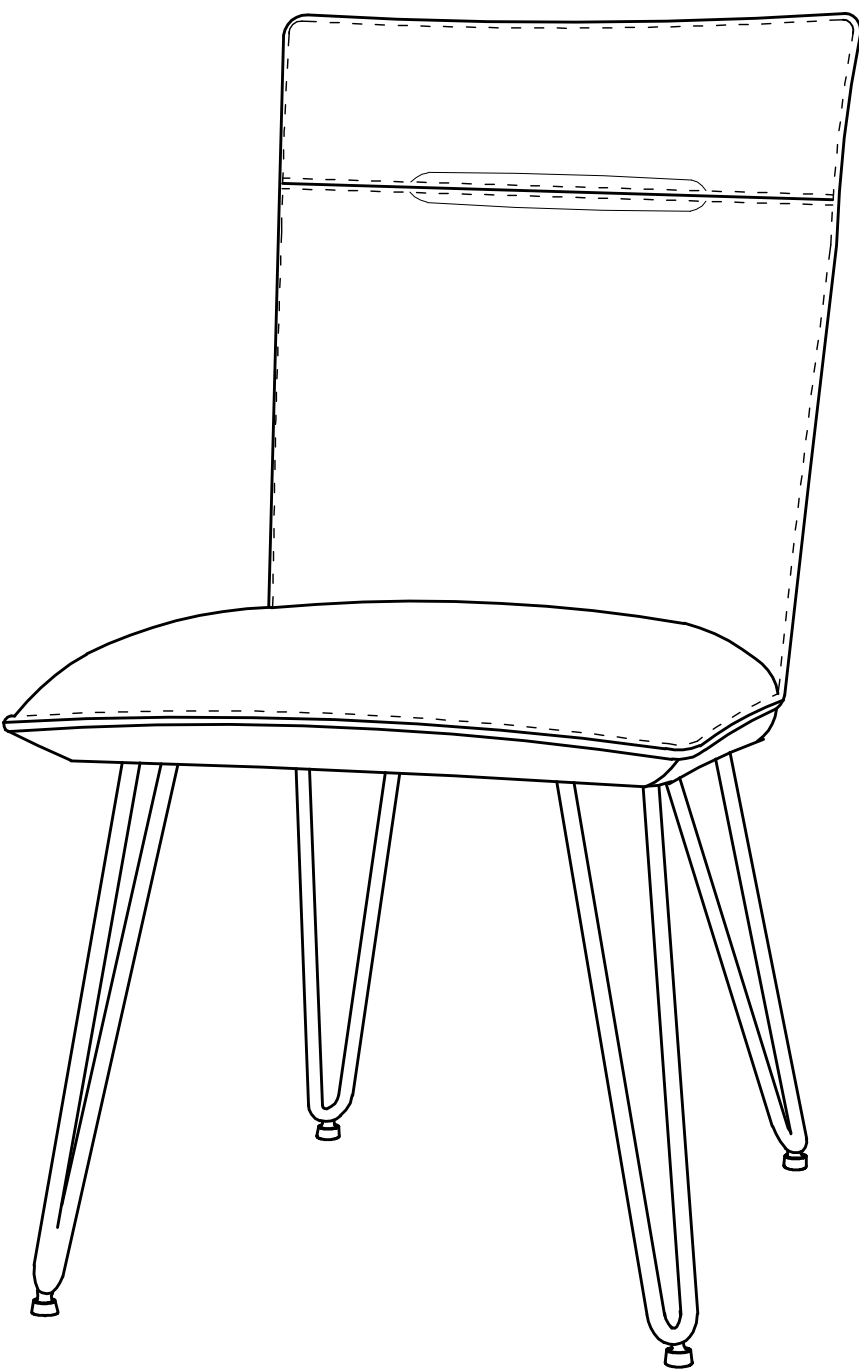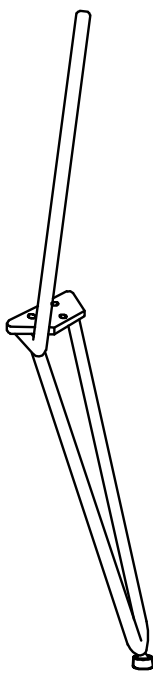

Hardware packed in box

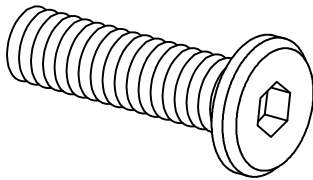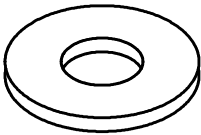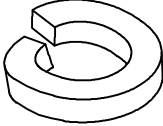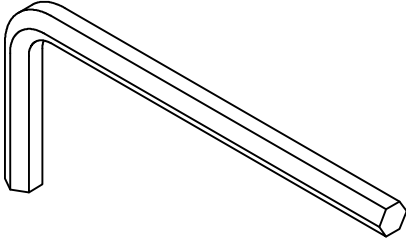1	THREADED BOLT M6*18MM	12 PCS	2	WASHER M6	12 PCS	3	LOCK WASHER M6	12 PCS	4	ALLEN KEY (4MM)	01 PC
											

Step:

Before attaching back legs (D) and (E) to seat (A), ensure the top of the legs are slipped under the pocket behind seat (A). Then attach all four legs (B), (C), (D) and (E) to seat (A), using (1), (2), (3) and (4) as shown below. Ensure all 12 pairs of bolts and washers are fixed firmly (3 sets per leg).

