



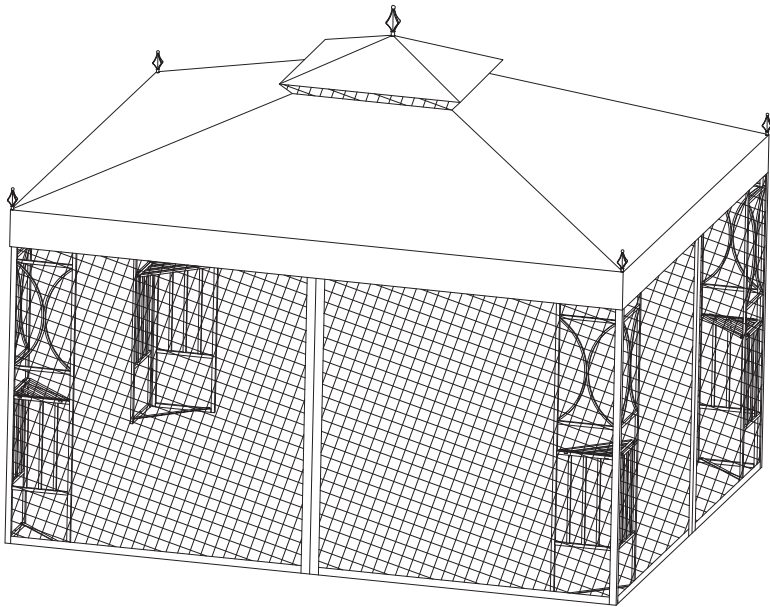


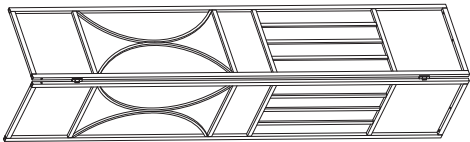























# Product Instructions




A		4
B		2
C		2
D		4
E		4
F		2
G		2
H		4
J		1
K		1
L		4
M		4
N		4


P		1
Q		4
R		1
S		4
T		4
U		2
V		2
W		1
X		1
Y		1
①	 M6*14mm	40+1
②		8
③		24
④		8

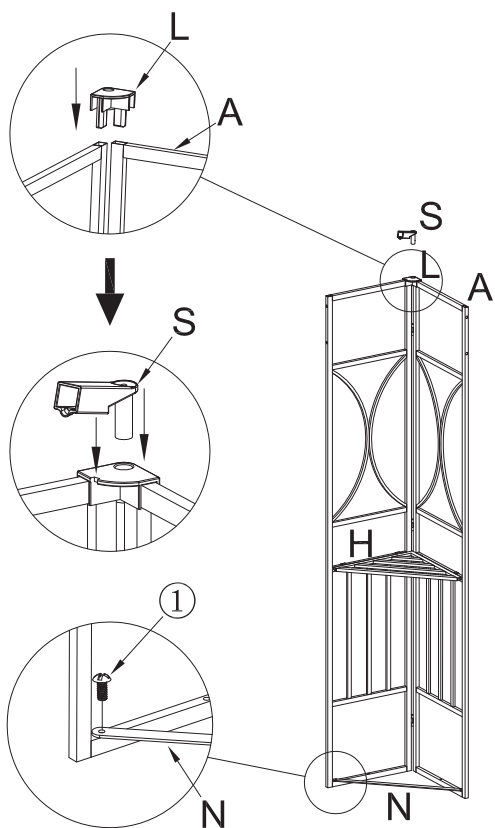


Step1: Insert Part L to the corner of Part A, then insert Part S to Part L. Put Part N at the bottom of Part A and put Screw ① into the hole of them and tighten them. Hang Part H on the middle section of Part A. The other three Part A should be installed as this step. ①

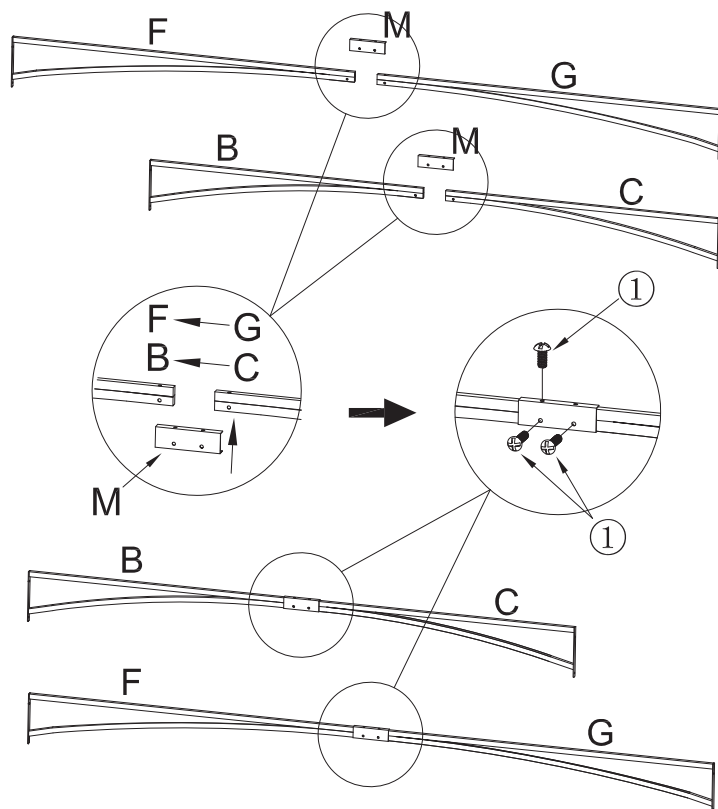


Step2: Put Part B and Part C (Part F and Part G) together, and insert Part M from the side of Part B and C (Part F and Part G). Use three Screw ① to tighten them. The other couple of Part B and C (Part F and Part G) should be installed as this step. ②

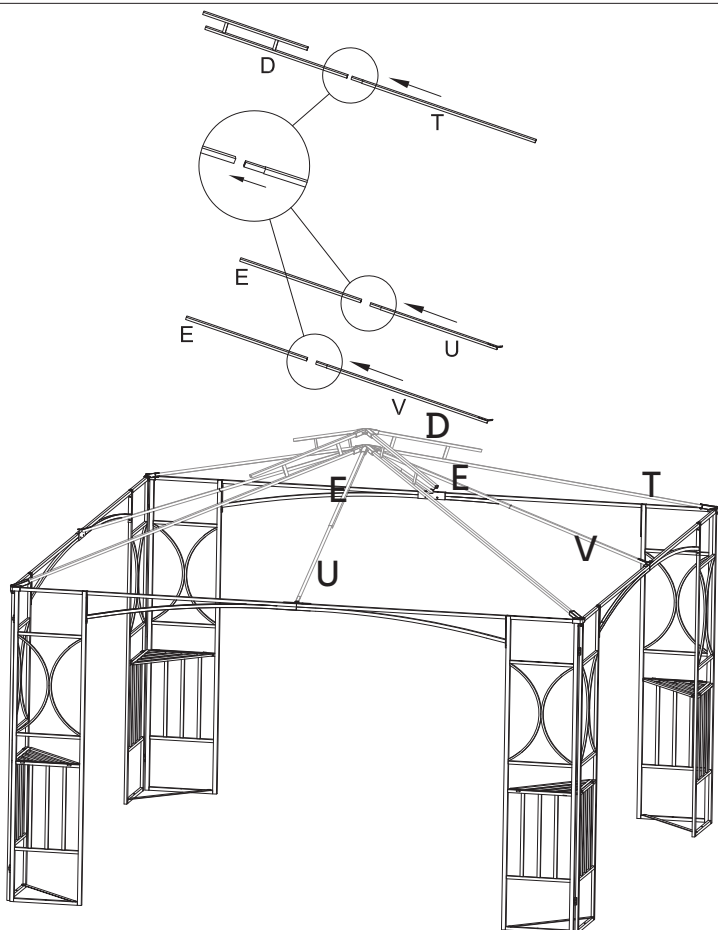


Step3: Insert small head of Part T to the long side of Part D. Insert small head of Part U (V) to Part E. Please note: Part E is a short pole, Part T is a long pole. ③

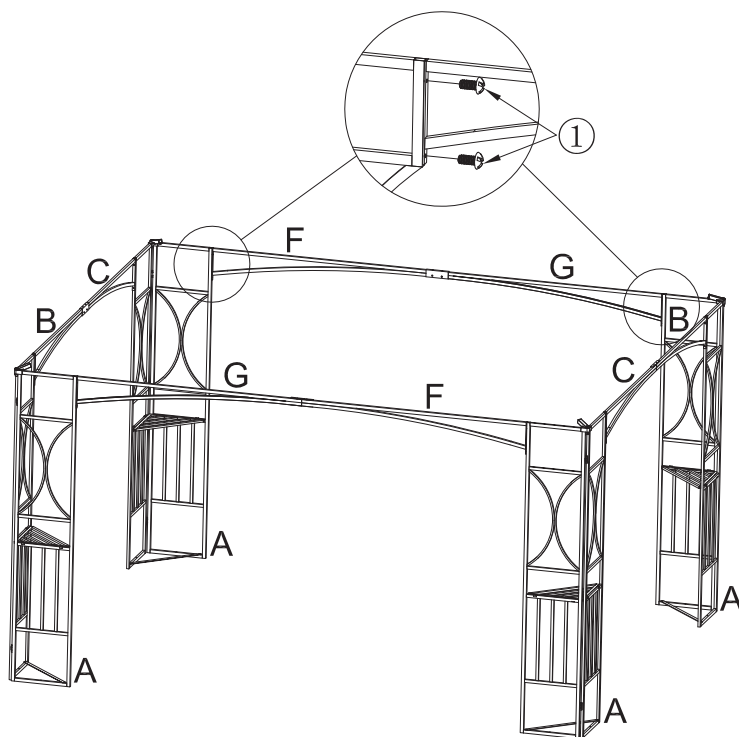


Step4: Place Part B and Part C (Part F and Part G) in the middle of two Part A, use Screw ① to connect them. ④

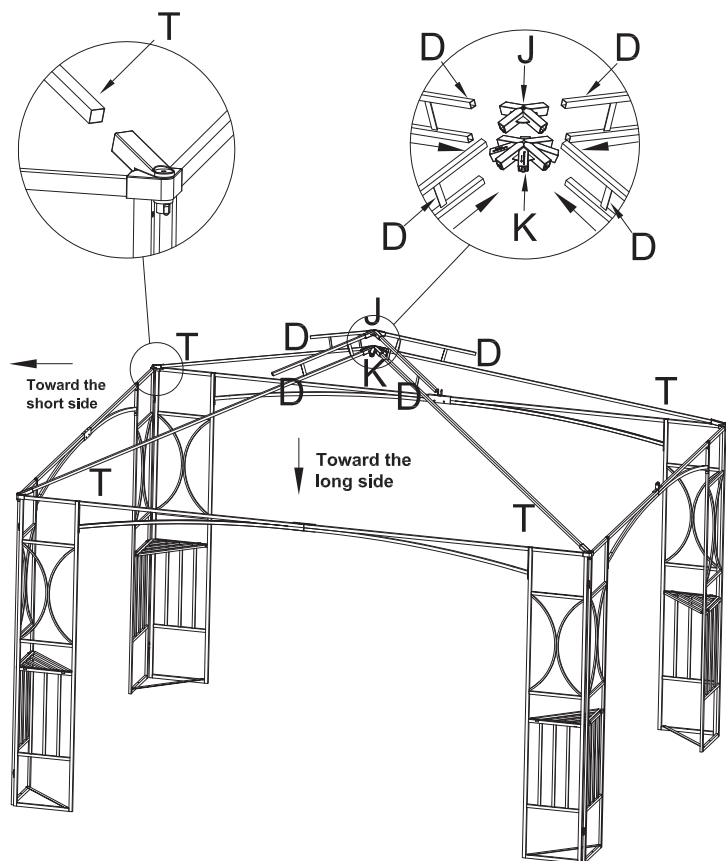


Step5: Insert Part T to Part S. Insert the long side of Part D to Part K, insert the short side of Part D to Part J. ⑤

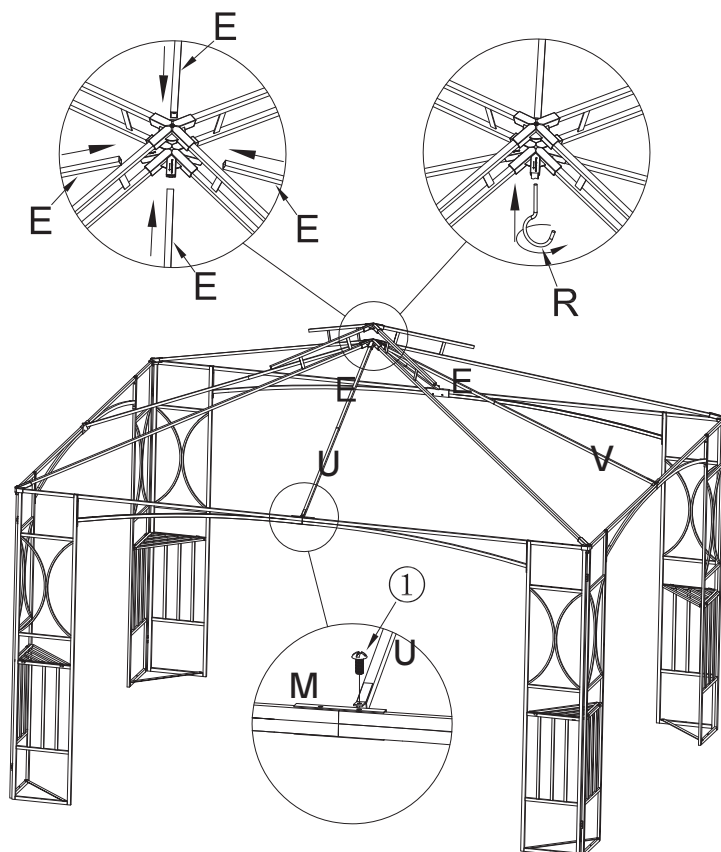

Step6: Use Screw ① to fix Part U(V) and Part M, insert Part E to Part K, insert Part R to Part K and turn it to be tight. ⑥

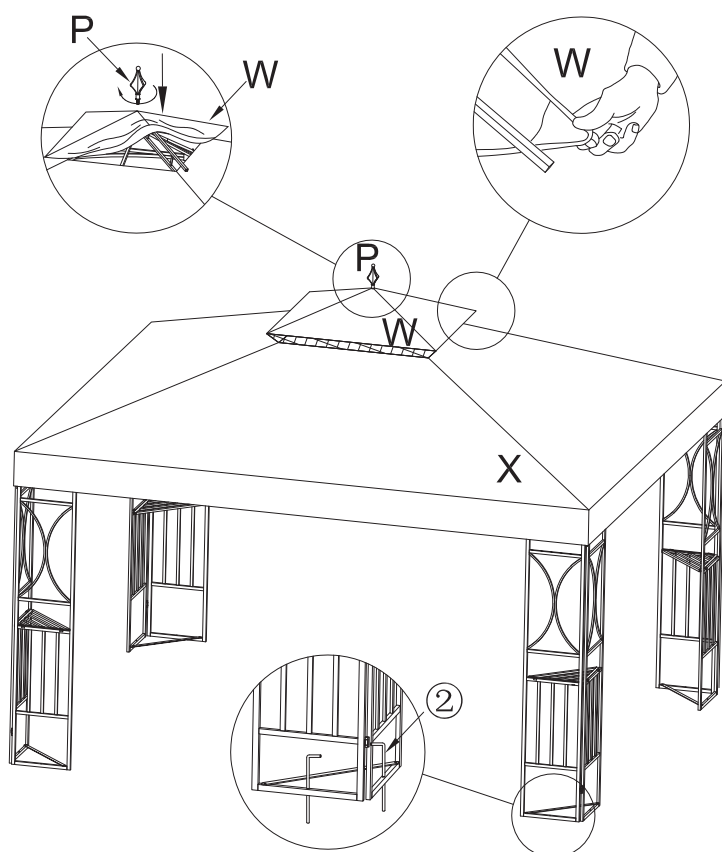

Step7: Install Part W, X on the frame and expand them. Make the four corners of the frame covered fully. Then put the top poles into the corner pockets of Part W. Insert Part P to Part J, turn it. Insert Part ② through the bottom of Part A to the ground. ⑦

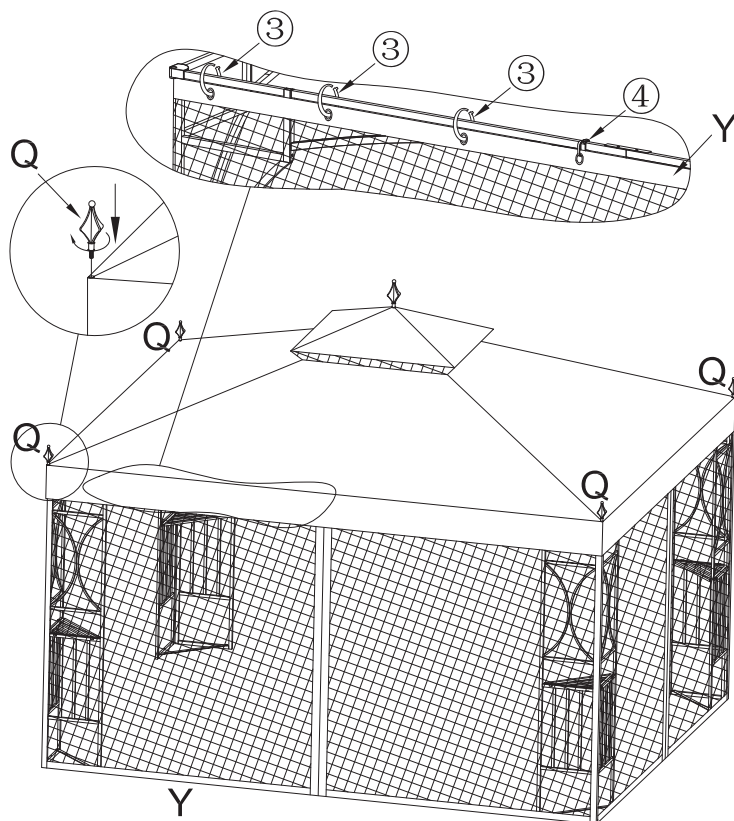

Step8: Insert four Part Q to four corners of the frame, then turn it to be tight. Use three Part ③ and one Part ④ per side to hang the netting on the frame. ⑧