

Quality statement

Alton Furniture Group appreciates your selection of our product. Through our detailed quality checks, we ensure that each box contains exceptional components that will exceed your expectations.

Customer Service

If your order has missing parts or defective items or if you have any questions, please do not hesitate to contact our customer service department.

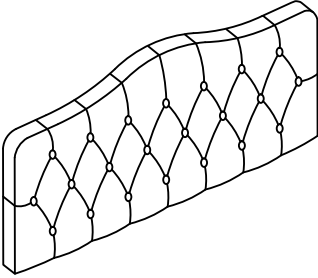
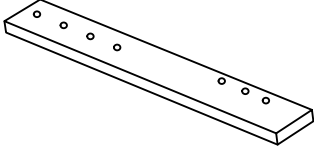
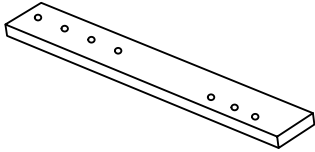
Care Instructions

Please follow the instructions provided below for proper care of your product. Following these tips will ensure your furniture's high-standard quality remains as it ages

- Vacuum regularly to eliminate dust as they can be abrasive and wear the furniture prematurely
- Never use harsh chemicals or solvents as this may damage the finish
- Limit contact with liquids as this may damage the finish
- Bolt spills immediately to prevent staining. If necessary, gently wipe using a clean cloth dampened with warm water. Proceed to brush lightly after drying
- If you choose to use a professional product, test the fabric in a discreet area for any signs of defect
- Stains from markers, pens, crayons, and pens may be difficult to remove. We recommend that you consult a professional





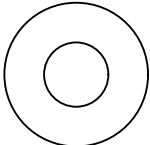

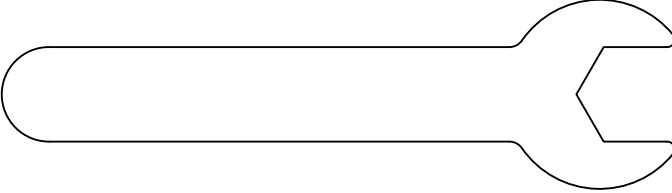
PARTS LIST

PLEASE CHECK TO ENSURE ALL PARTS ARE IN THE BOX

A	1PC	L	1PC	R	1PC
Headboard Panel		Left Headboard leg		Right Headboard leg	
					

HARDWARE LIST

PLEASE CHECK TO ENSURE ALL PARTS ARE IN THE BOX

①	4PCS	②	4PCS	③	4PCS
Allen Bolts Ø5/16" x 2"		Allen Bolts Ø5/16" x1 3/4"		Nuts	
					
④	8PCS		⑤	12PCS	
Spring Washers Ø 5/16" x 9/16"			Flat Washers Ø 5/16" x 3/4"		
					
⑥	1PC		⑦	1PC	
Allen Wrench			Wrench		
					

IMPORTANT !!

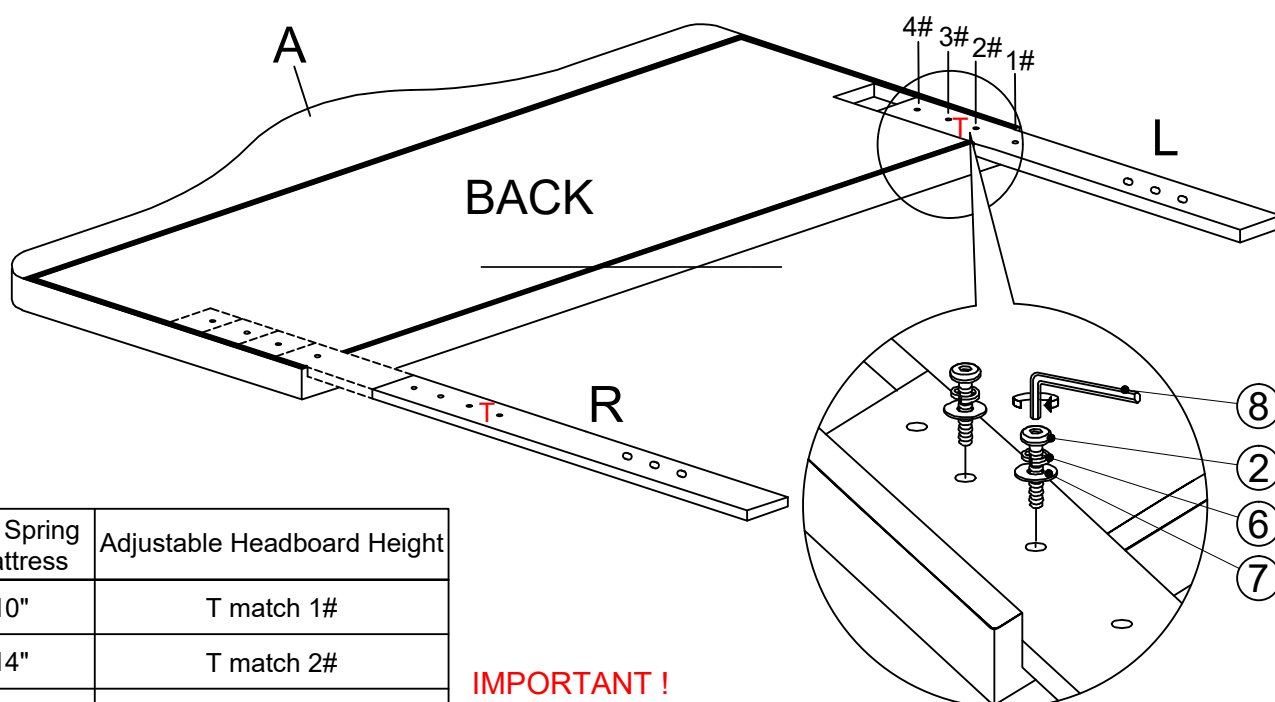
Tips:

****Please check the thickness of your mattress and box spring before proceeding.**

1)

Assemble the Headboard Panel (A) and the Legs (R & L).

(DO NOT FULLY TIGHTEN BOLTS AT THIS STEP.)



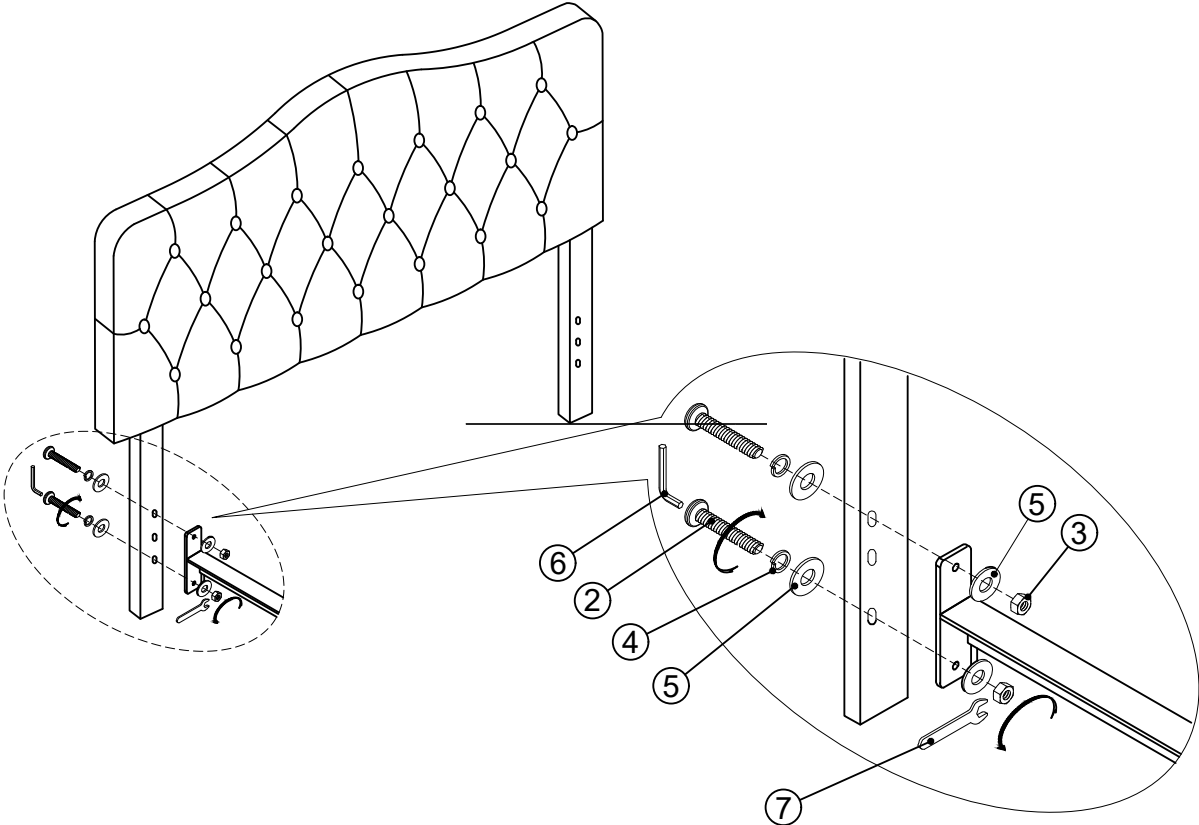
BOX Spring +Mattress	Adjustable Headboard Height
10"	T match 1#
14"	T match 2#
18"	T match 3#
22"	T match 4#




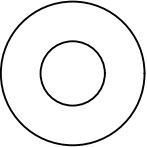
IMPORTANT !

Please check the thickness of your mattress and box spring before proceeding.

①	4PCS	④	4PCS
Allen Bolts Ø 5/16" x 2"		Spring Washers Ø 5/16" x 9/16"	
⑤	4PCS	⑥	1PC
Flat Washers Ø 5/16" x 3/4"		Allen Wrench M5 x 2 1/2"	

2)
Assemble the metal bed frame (not included) to headboard legs (L/R).



②	4PCS	③	4PCS	④	4PCS	⑤	8PCS
Allen Bolts Ø5/16" x1- 3/4"		Nuts		Spring Washers Ø 5/16" x 9/16"		Flat Washers Ø 5/16" x 3/4"	
							
⑥		1PC		⑦		1PC	
Wrench				Allen Wrench			
