
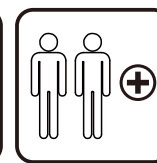
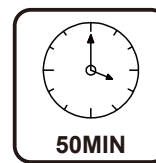
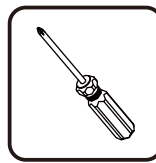
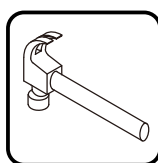
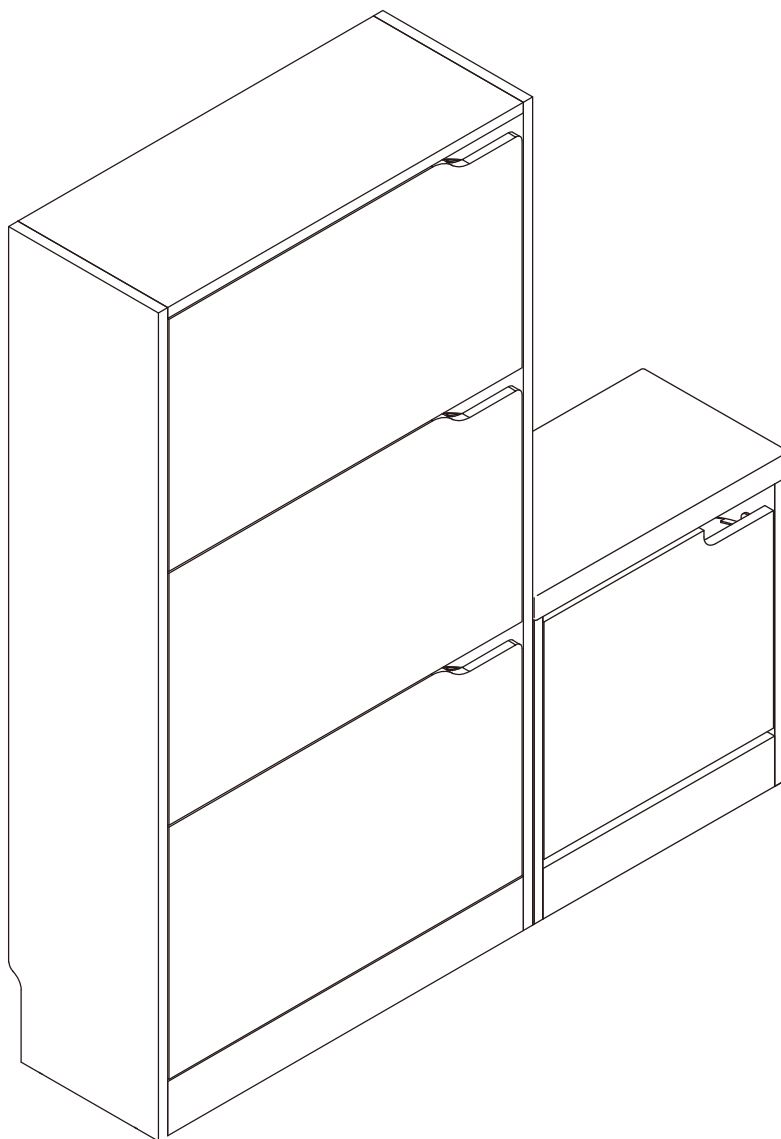
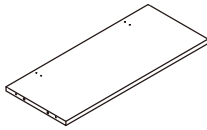
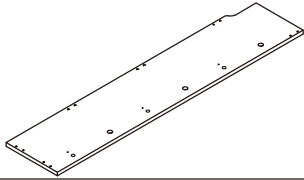
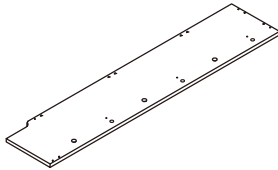



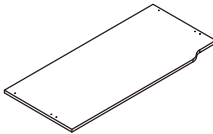
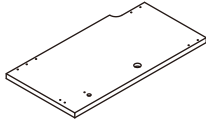
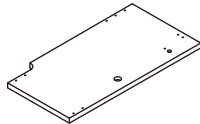


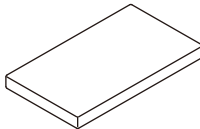





Installation & Assembly



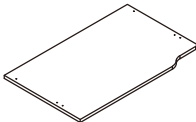


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x4	
⑤		x6	
⑥		x3	
⑦		x3	
	 Hardware Kit	x1	


NO.	PARTS	QTY	SPARE
⑧		x1	
⑨		x1	
⑩		x1	
⑪		x2	
⑫		x1	
⑬		x2	
⑭		x1	
⑮		x1	

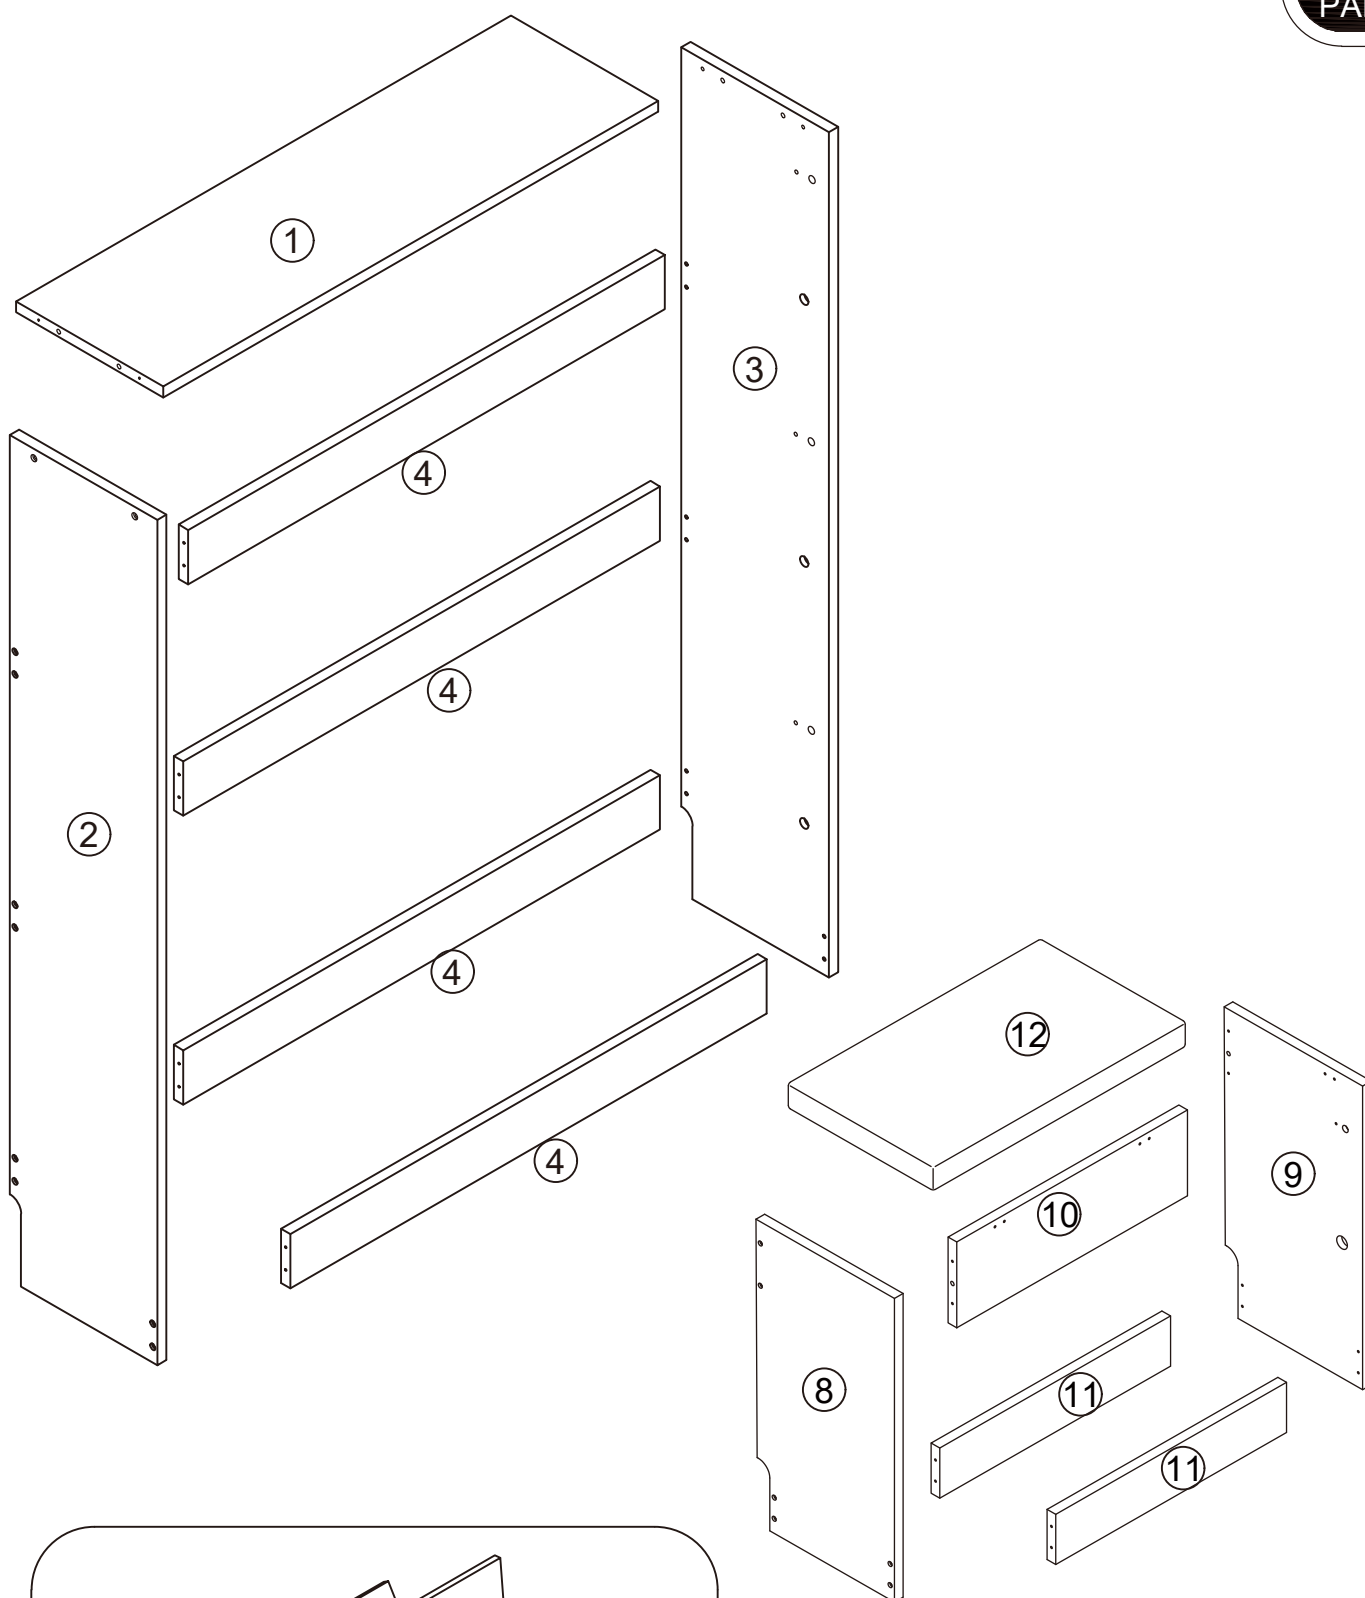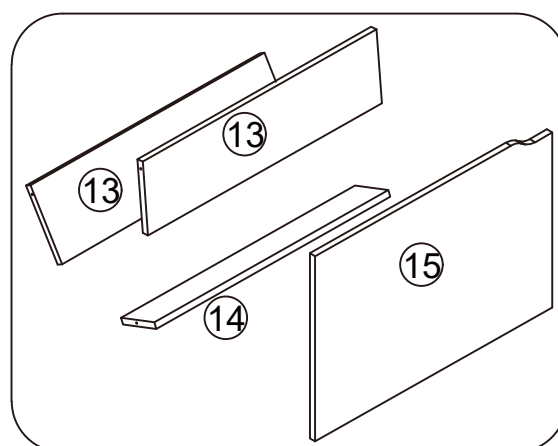**x3**

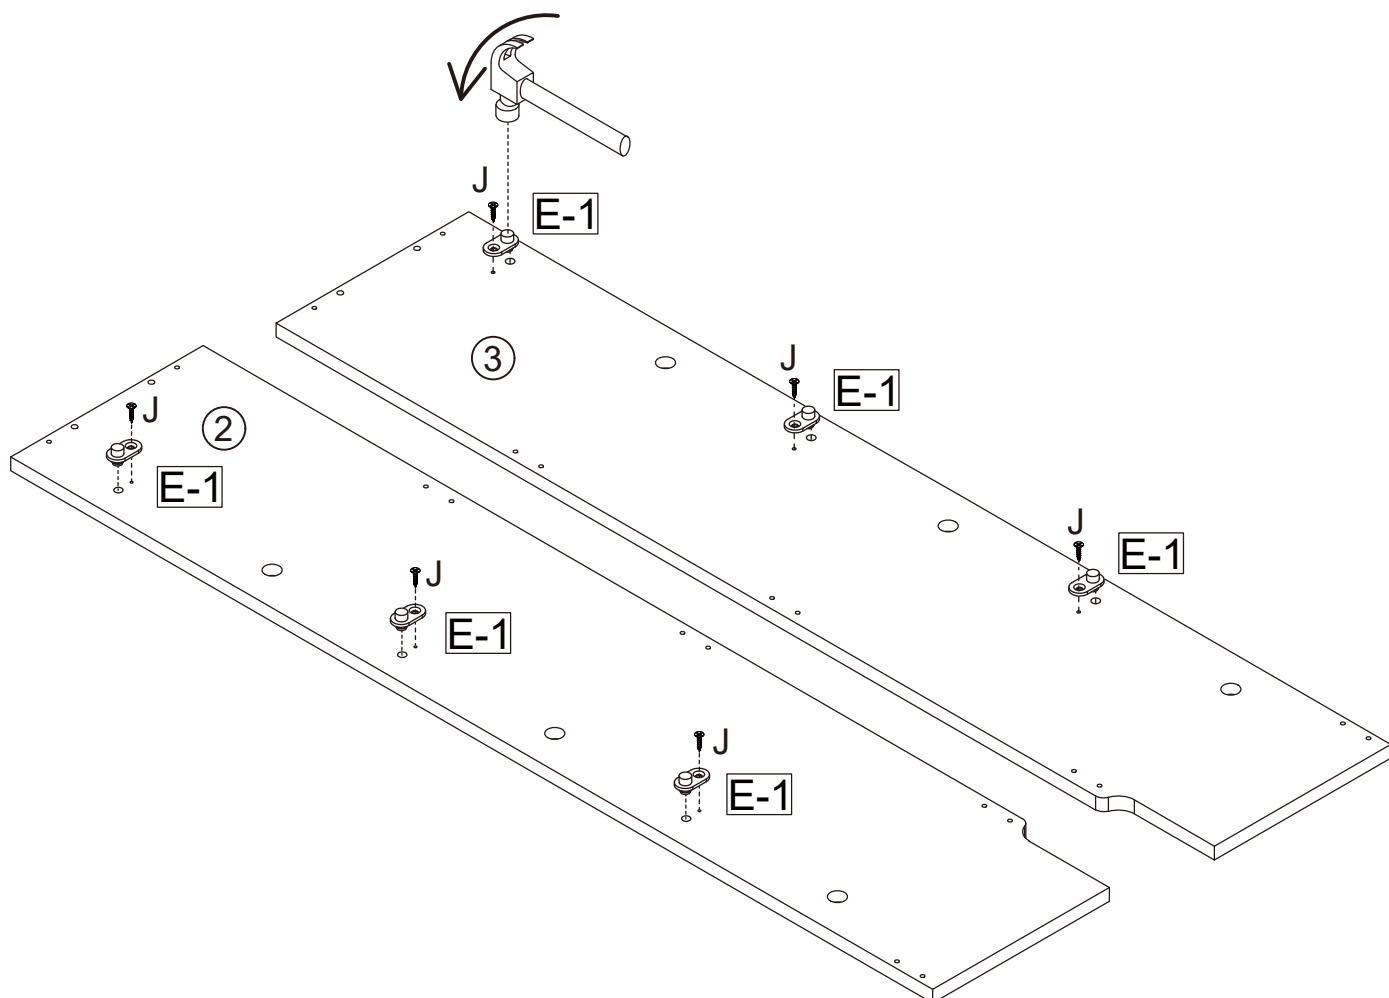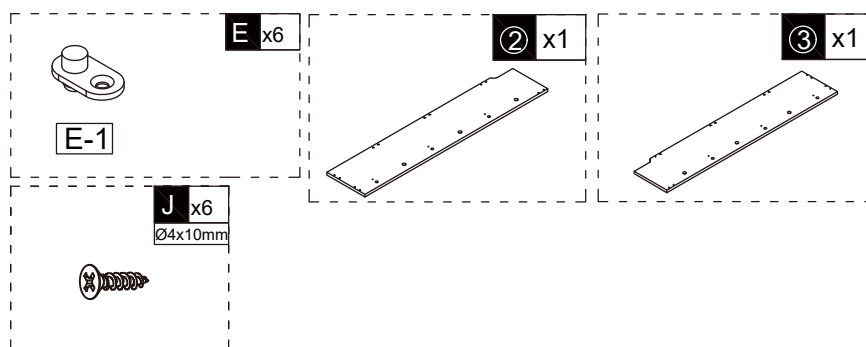
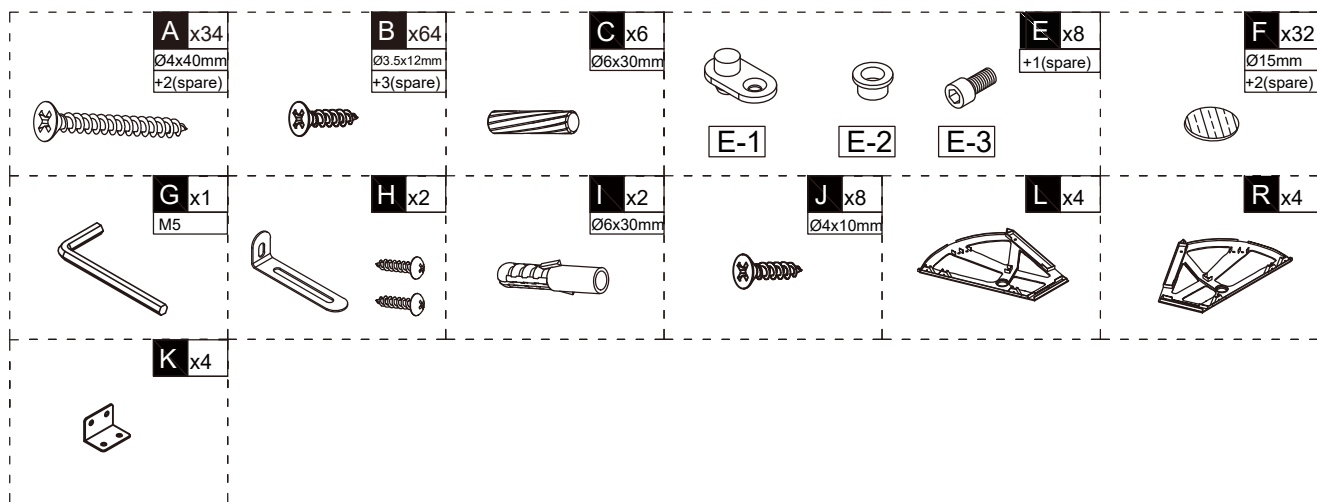




A x10
Ø4x40mmC x2
Ø6x30mm



① x1

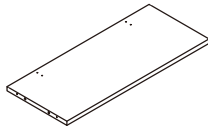

④ x4

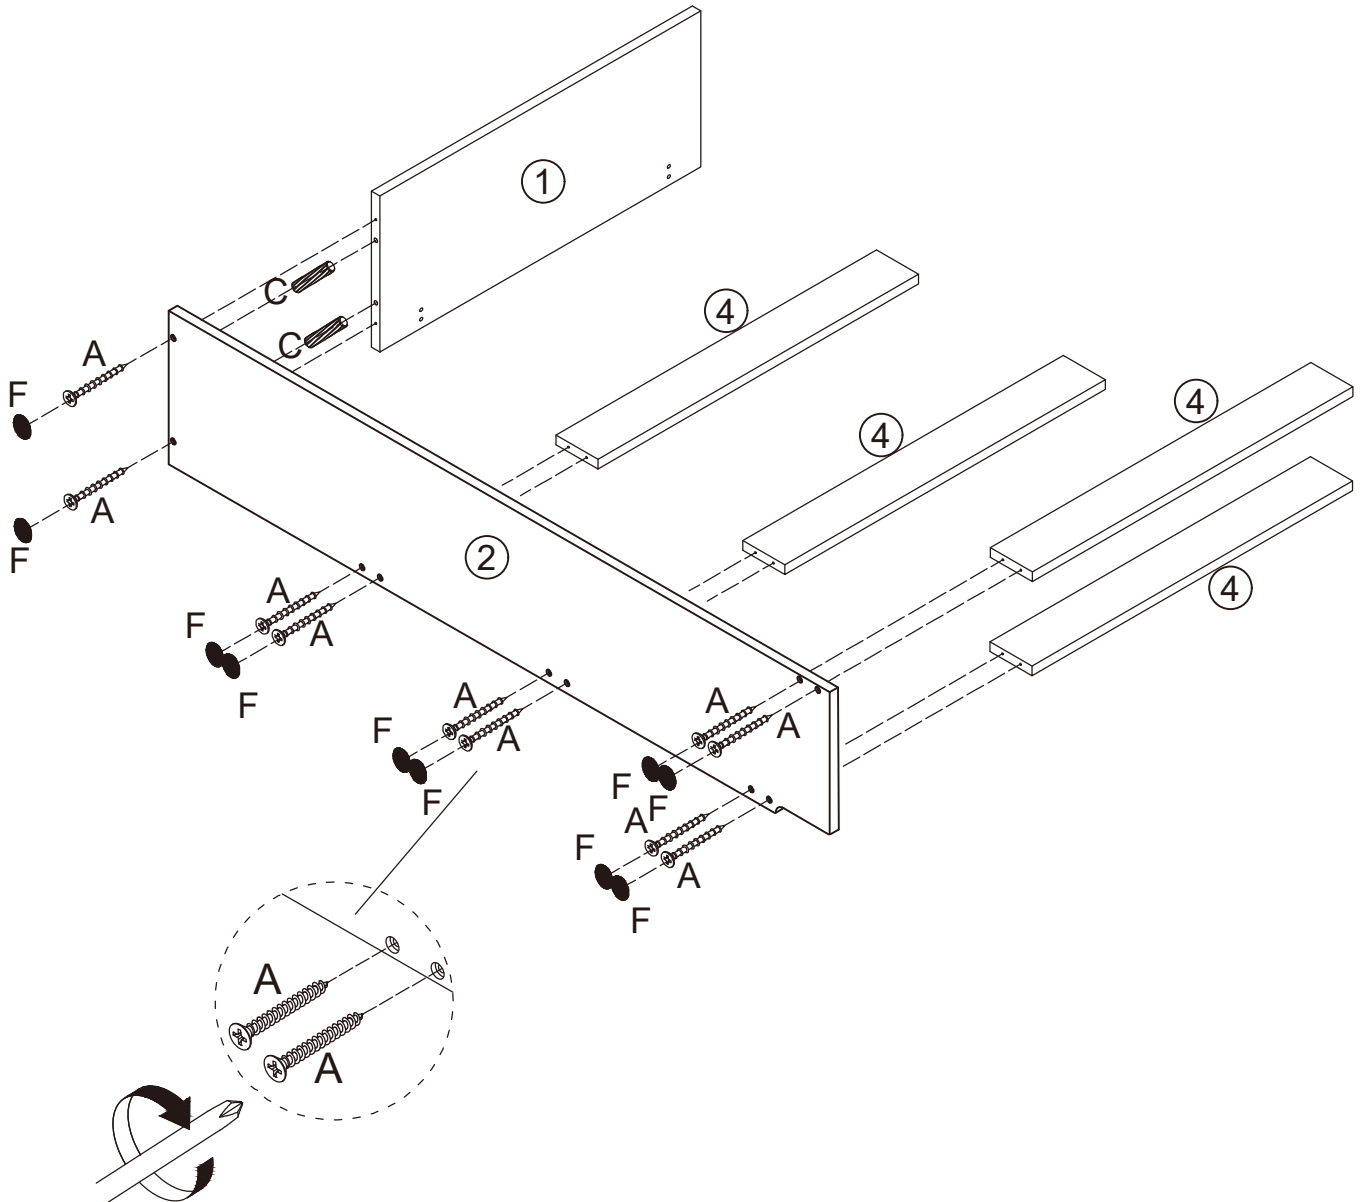F x10
Ø15mm

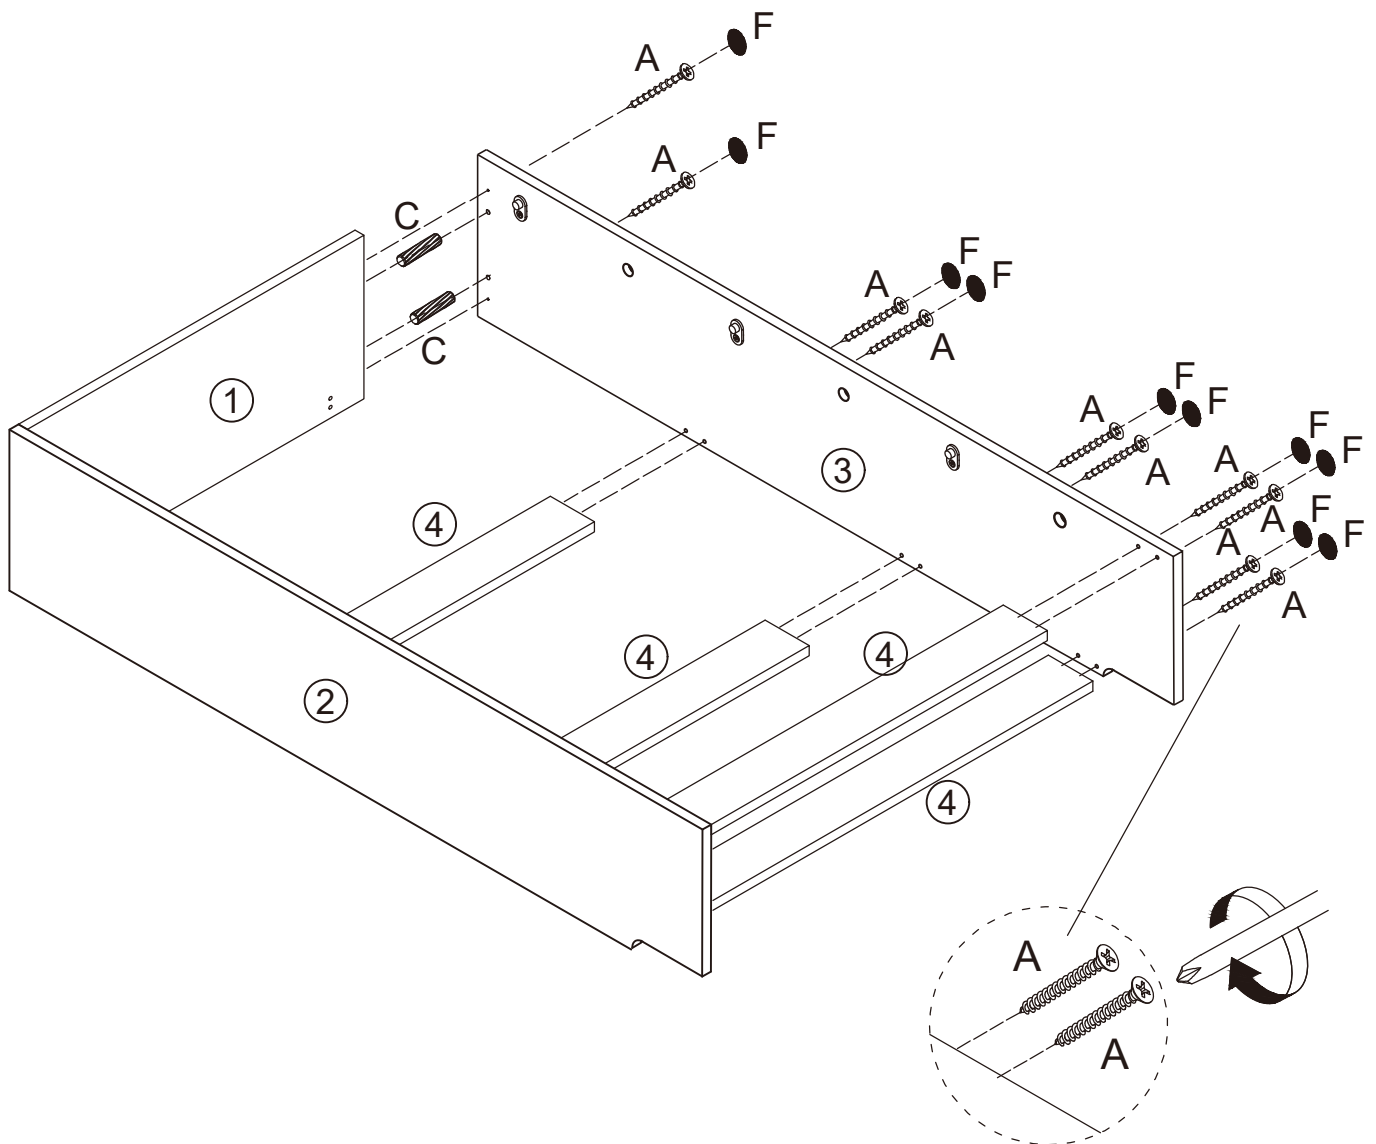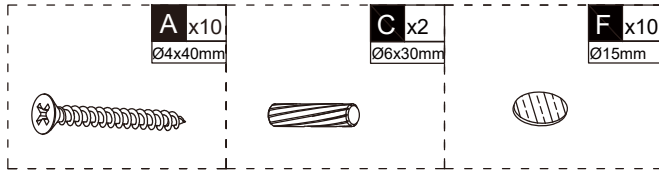

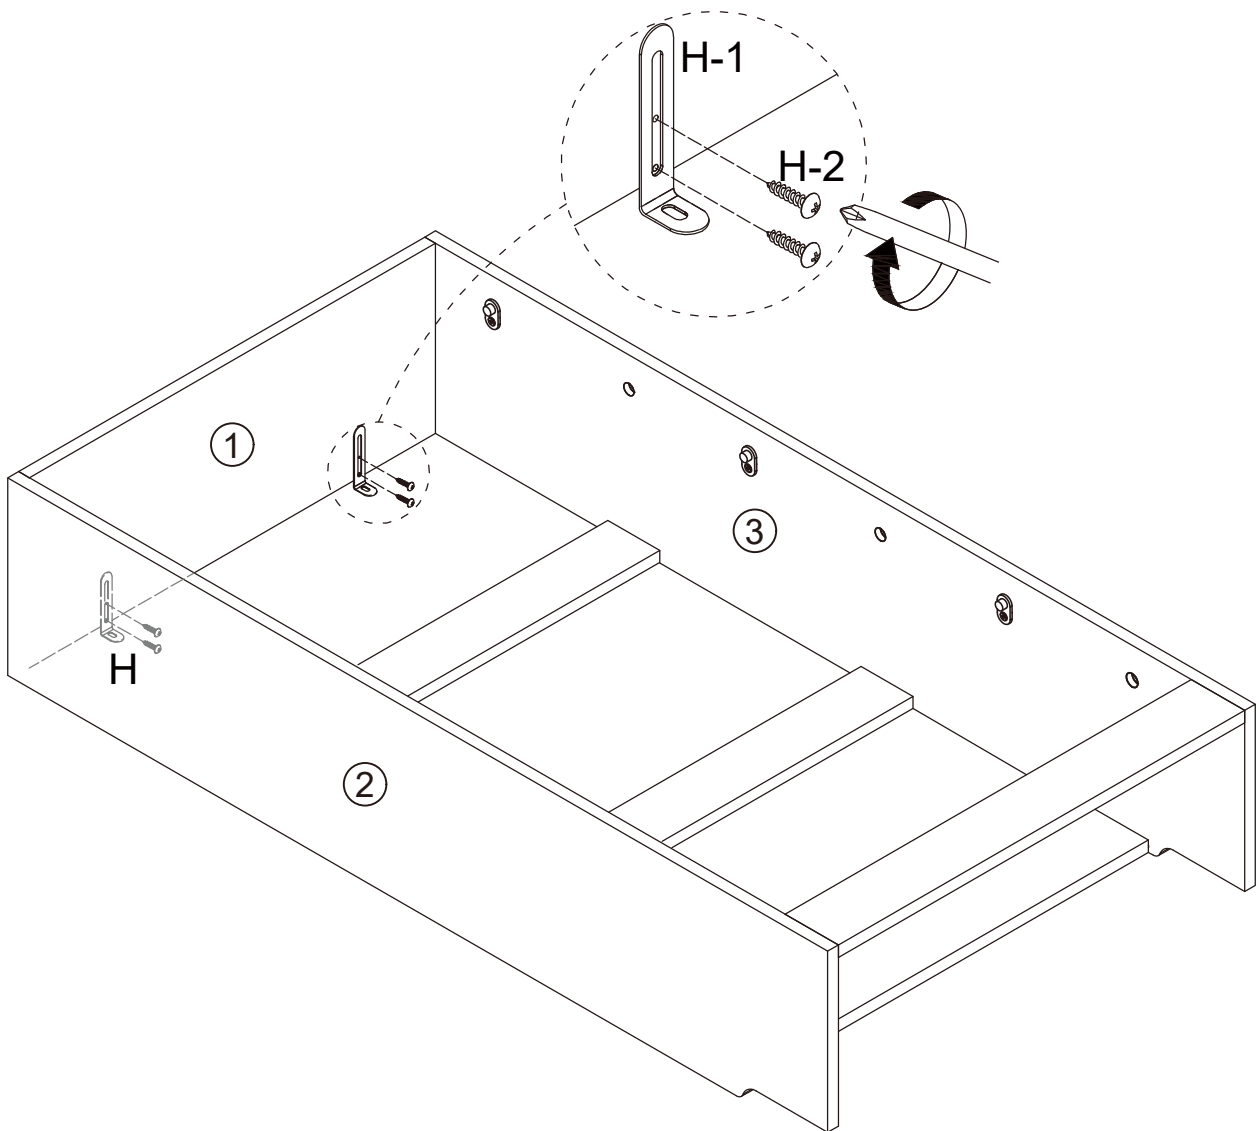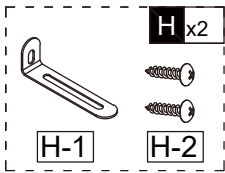


B x18
Ø3.5x12mm


L x3

R x3


⑦ x3

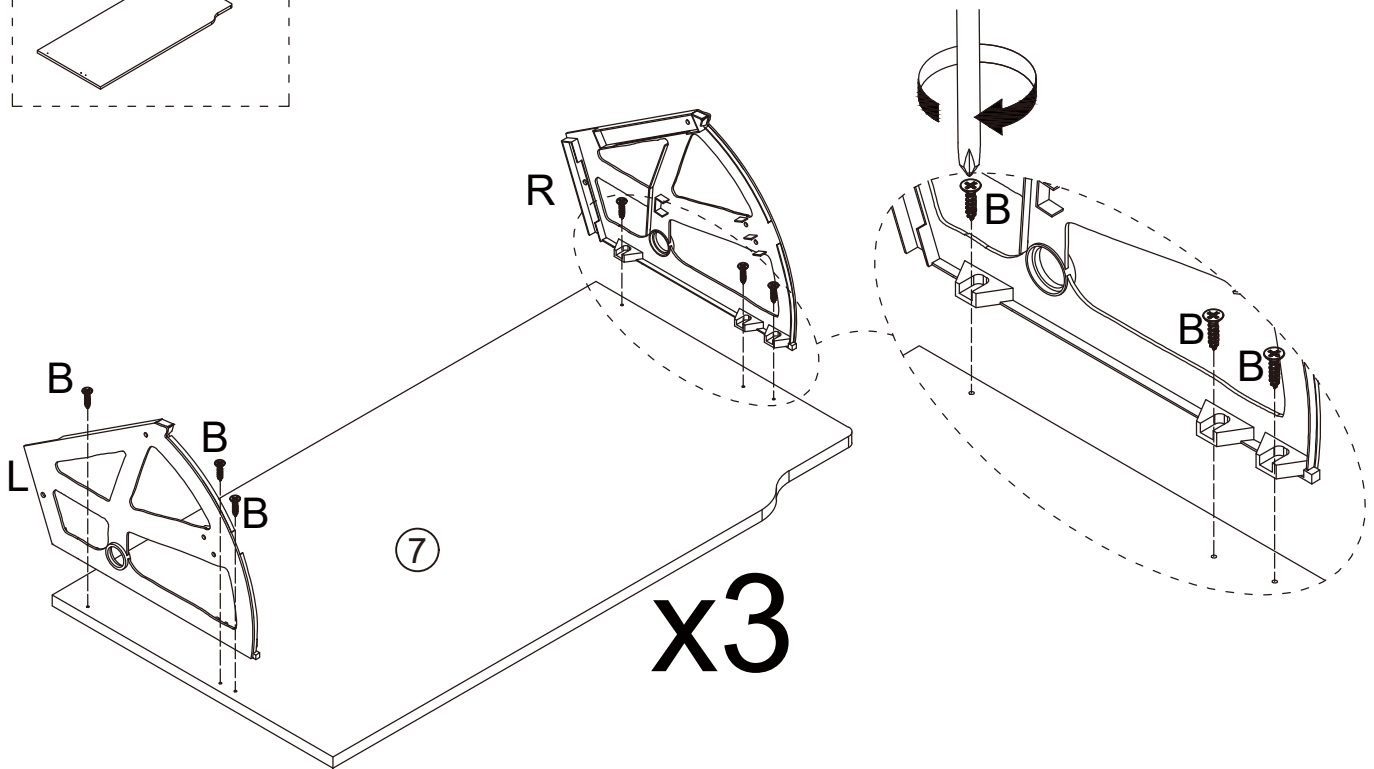B x6
Ø3.5x12mm


⑥ x3

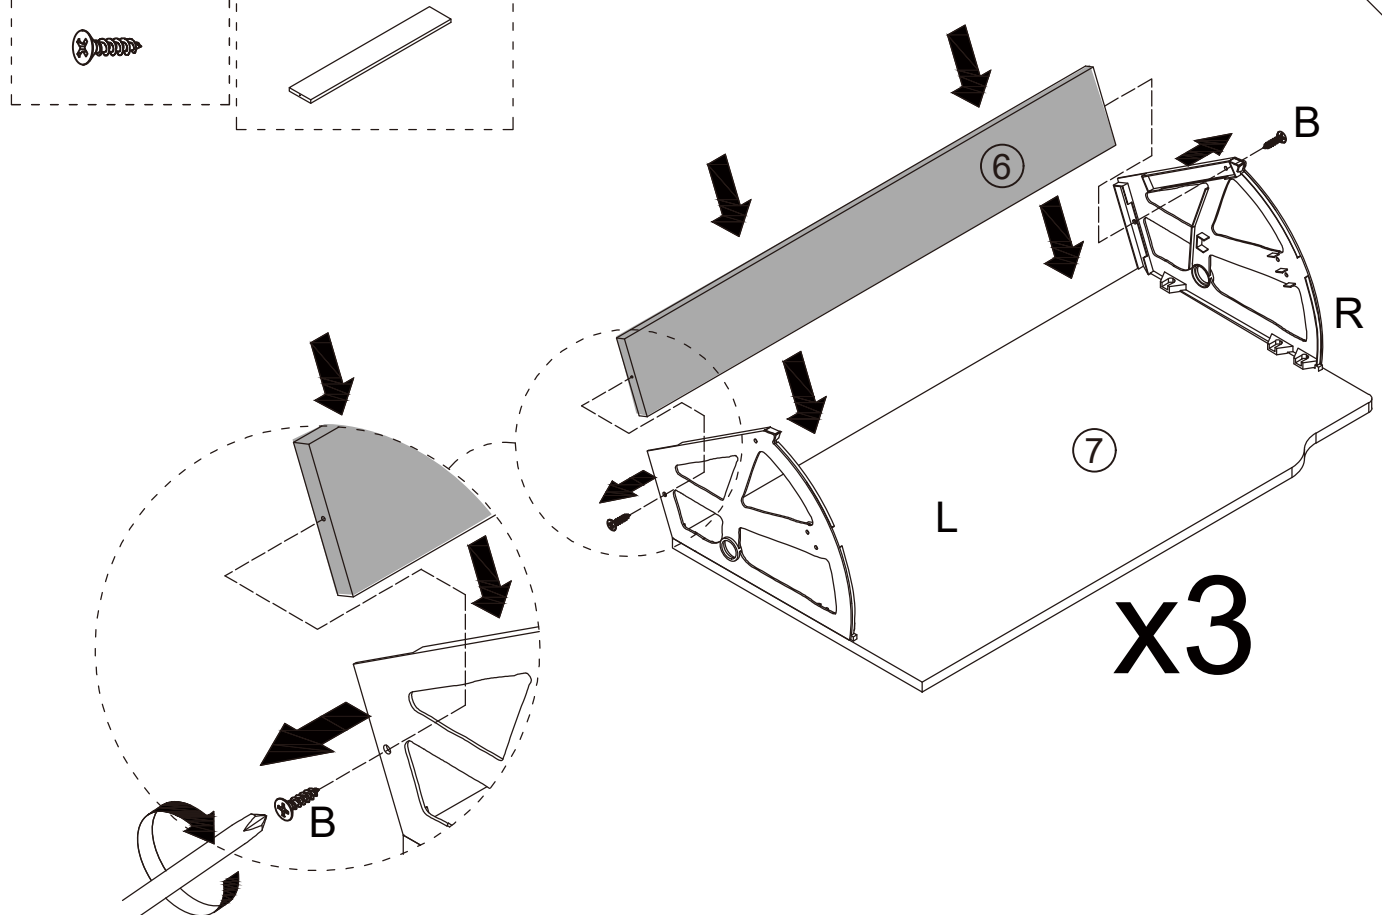

07



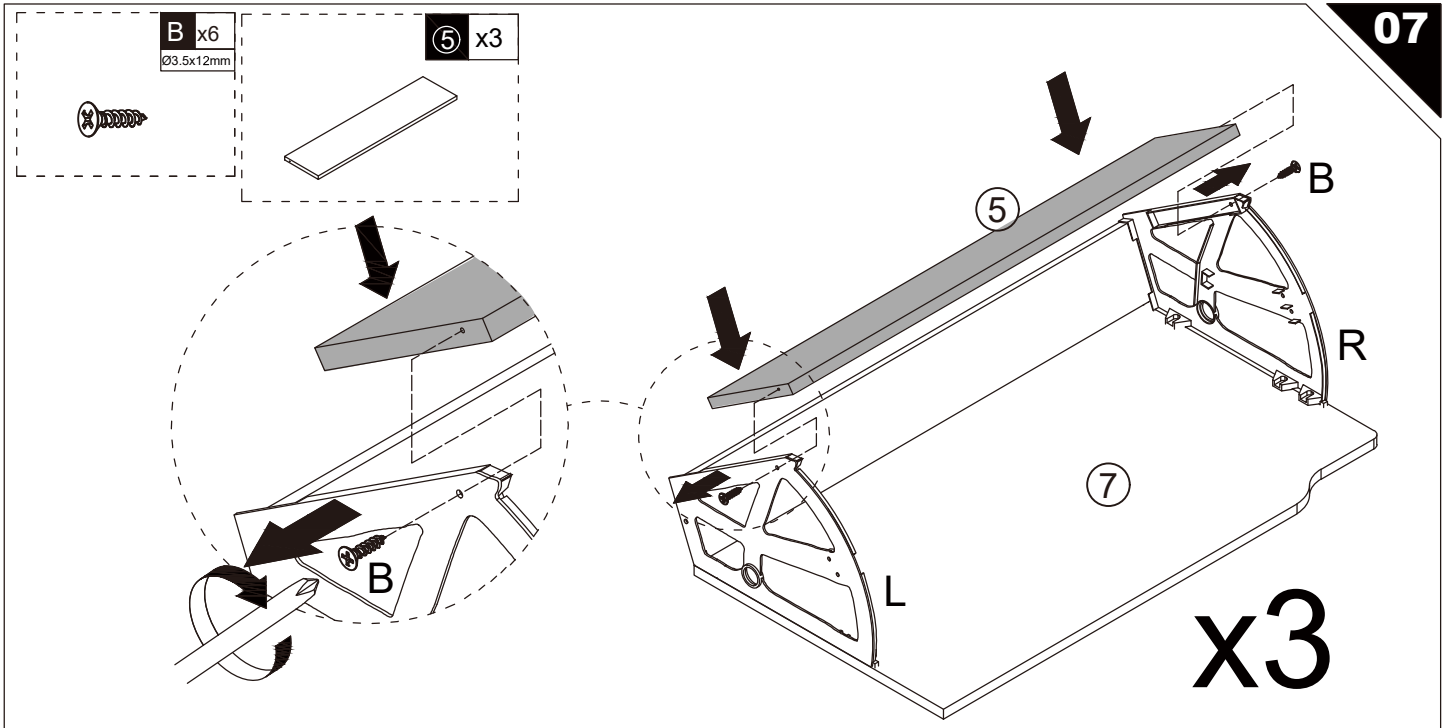


08


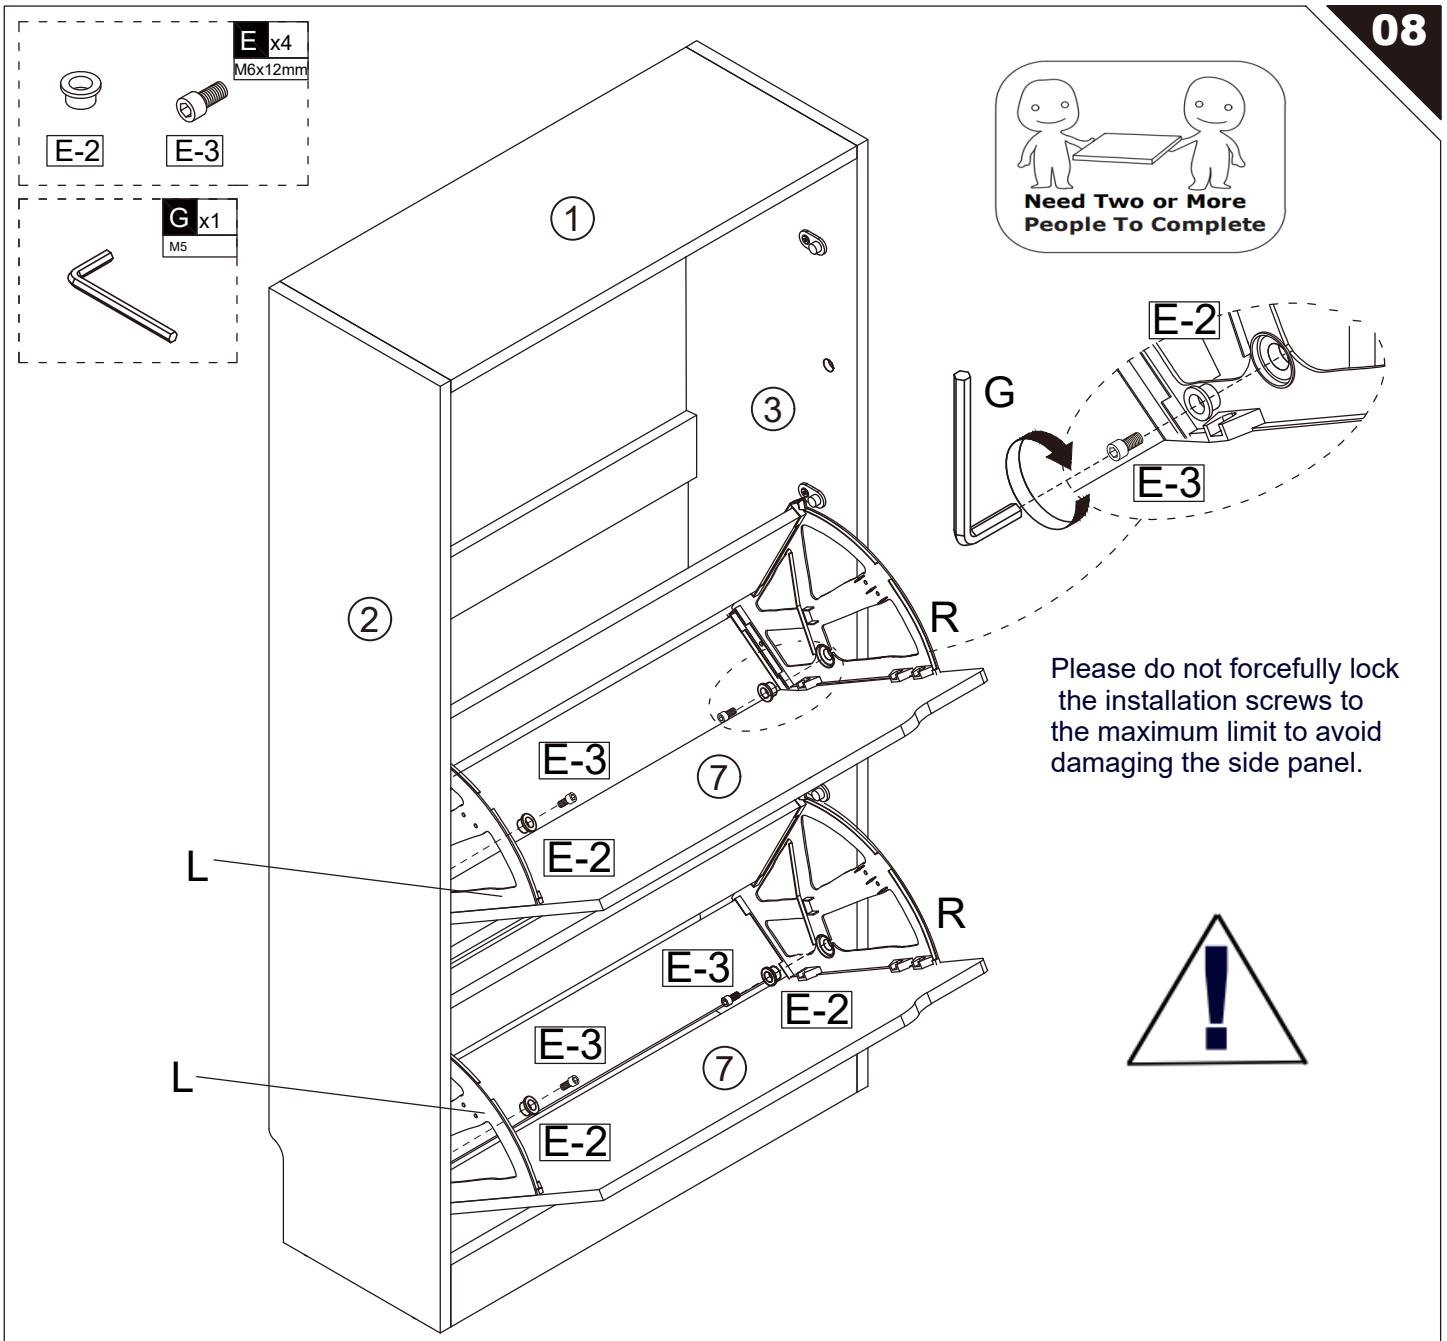


B x4
Ø3.5x12mm


⑤ x2

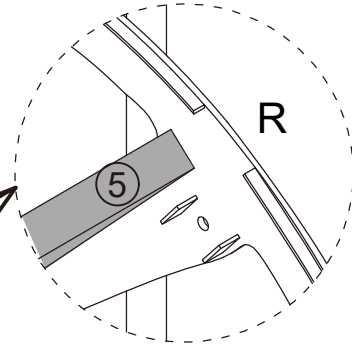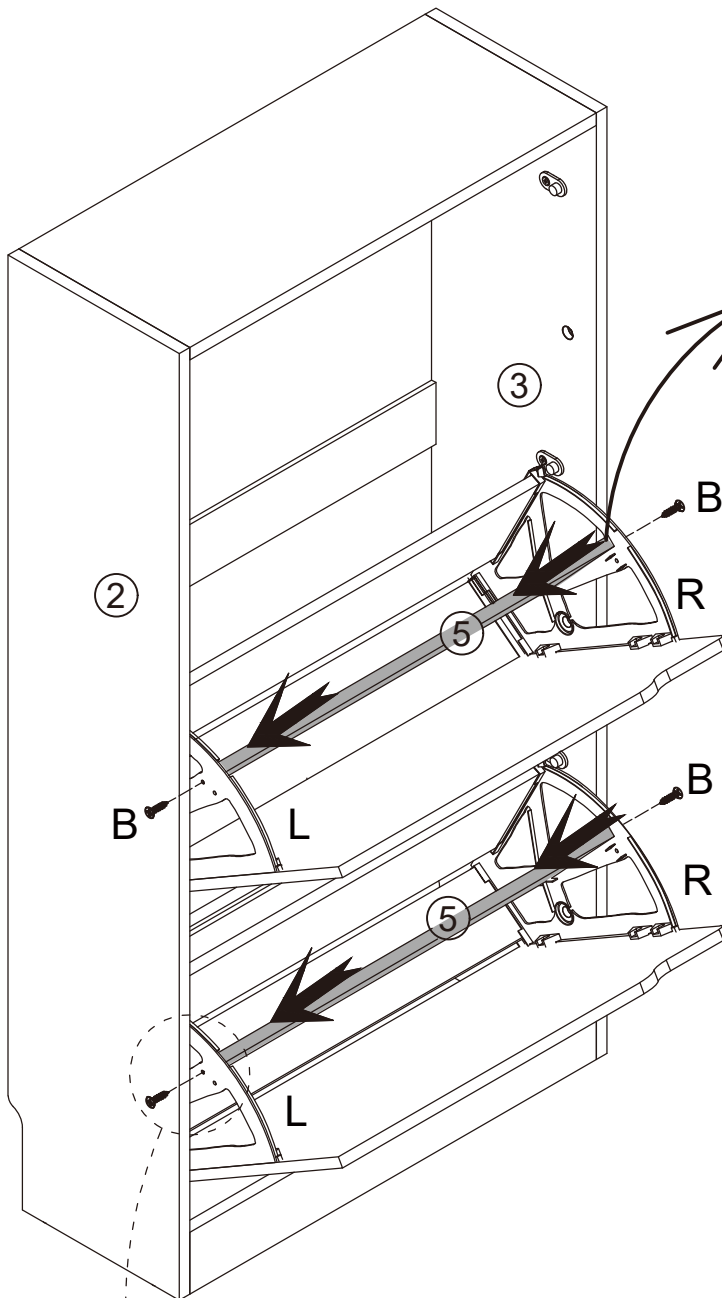




OR

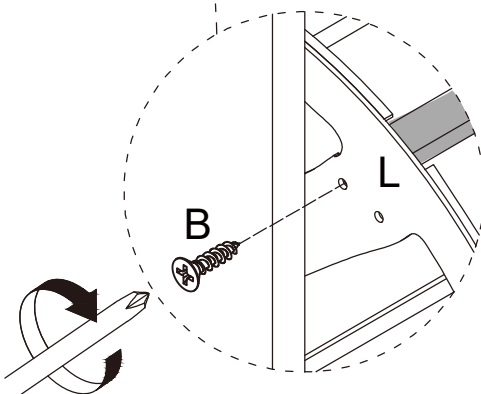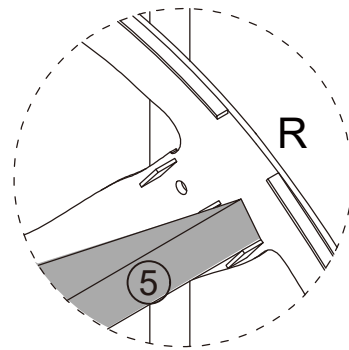

OR

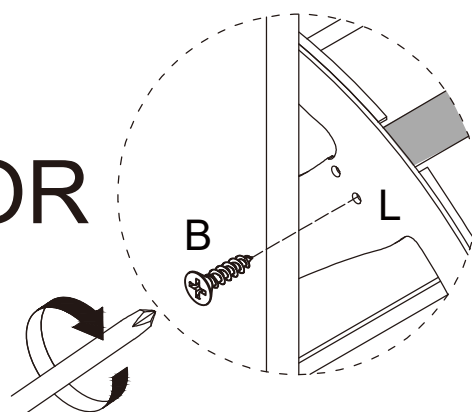


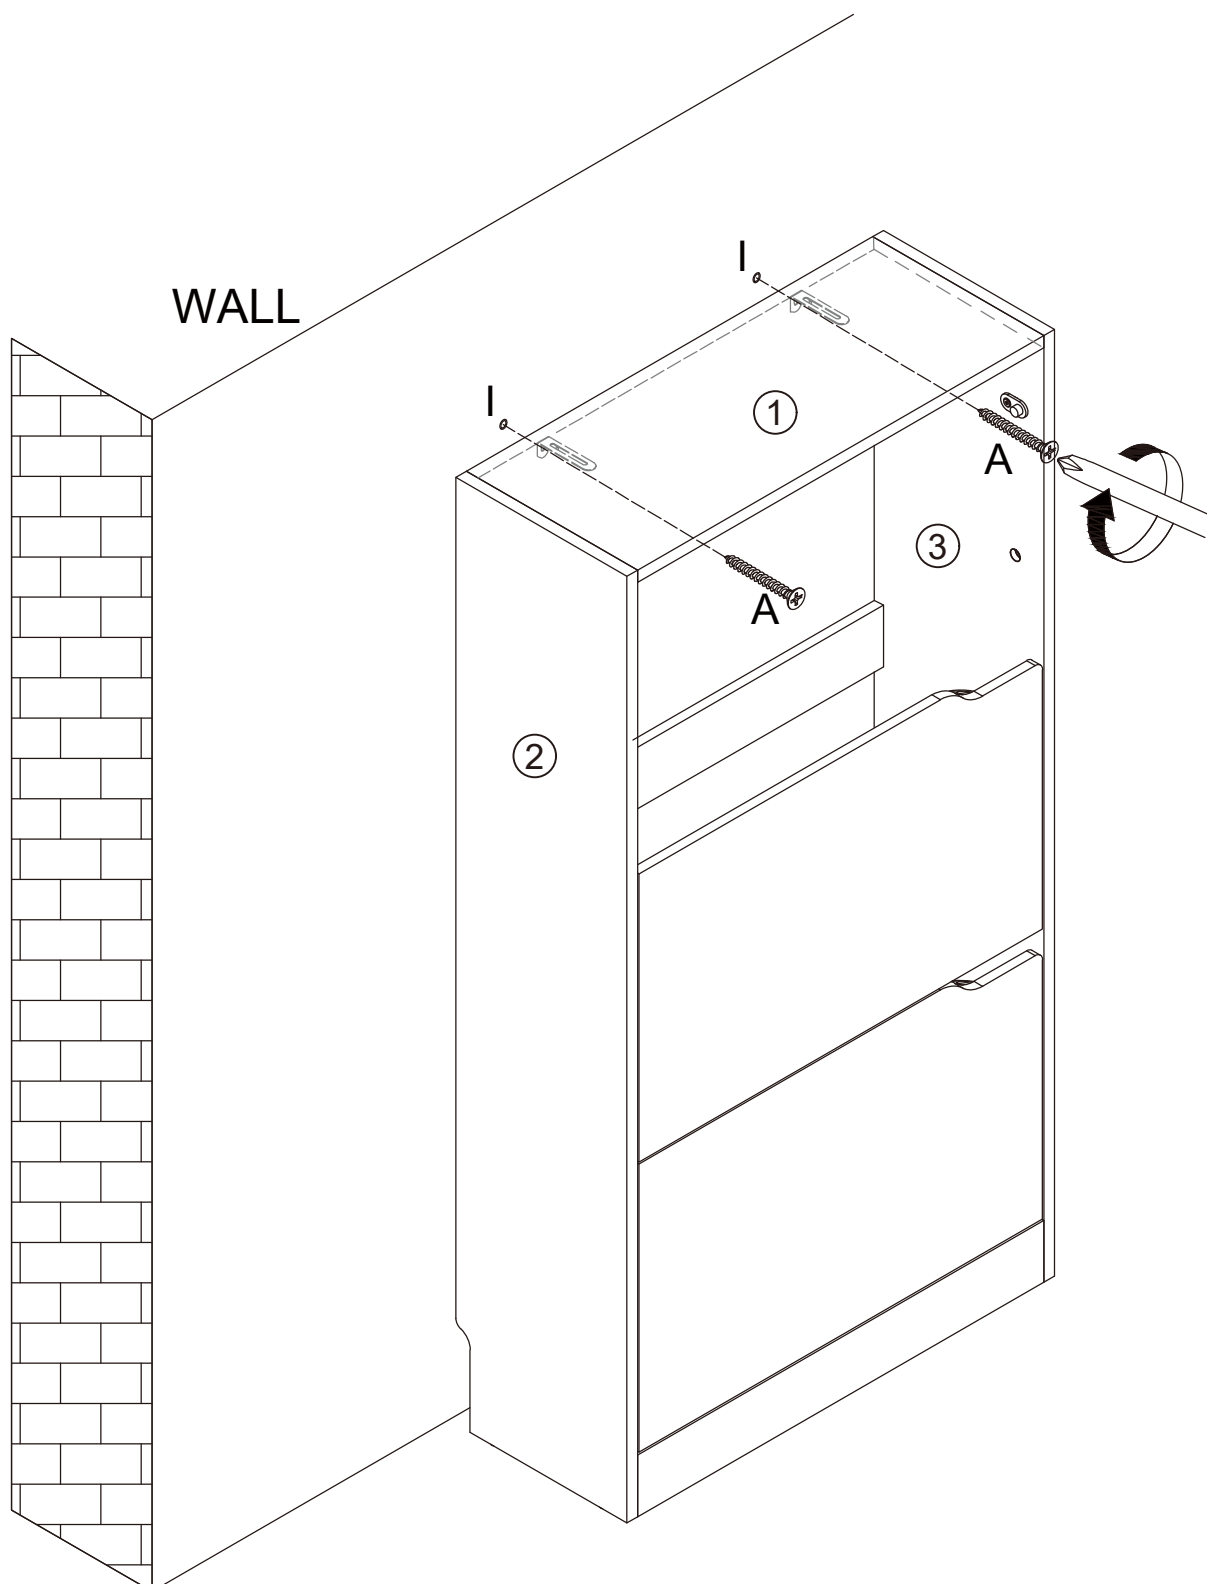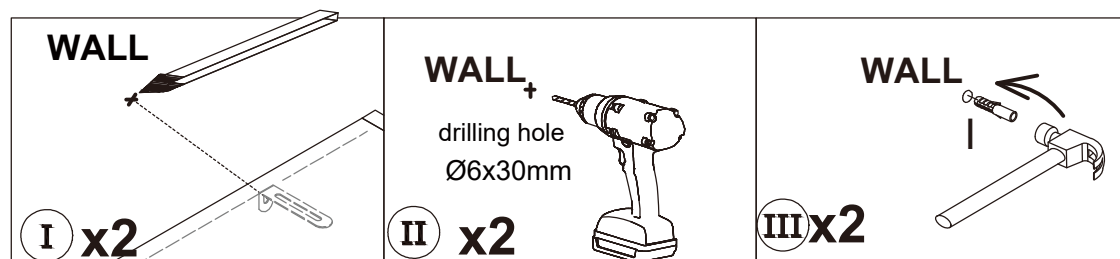A x2
Ø4x40mmI x2
Ø6x30mm


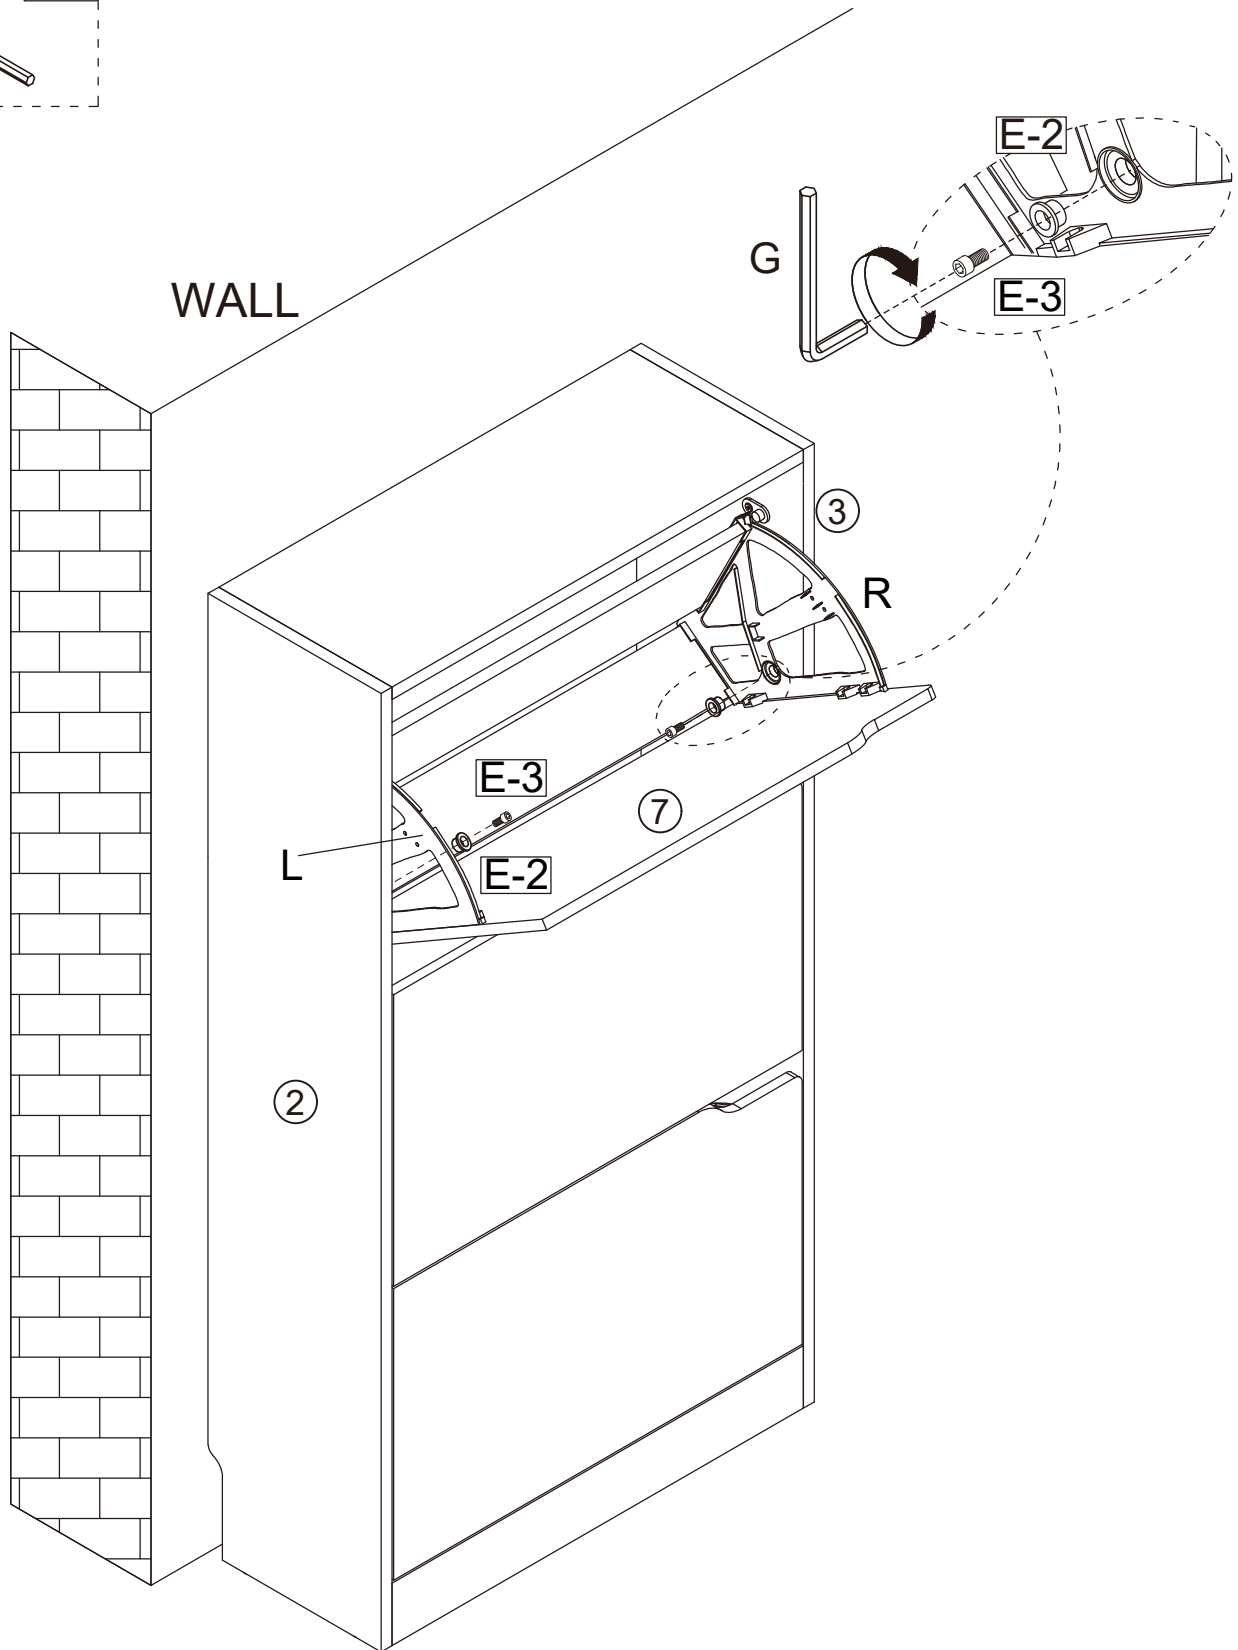


B x2
Ø3.5x12mm



⑤ x1




WALL

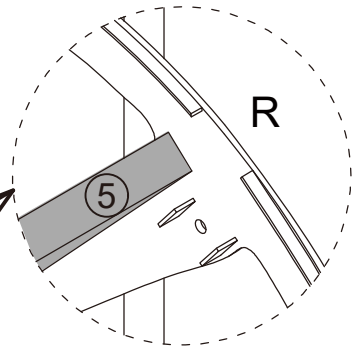
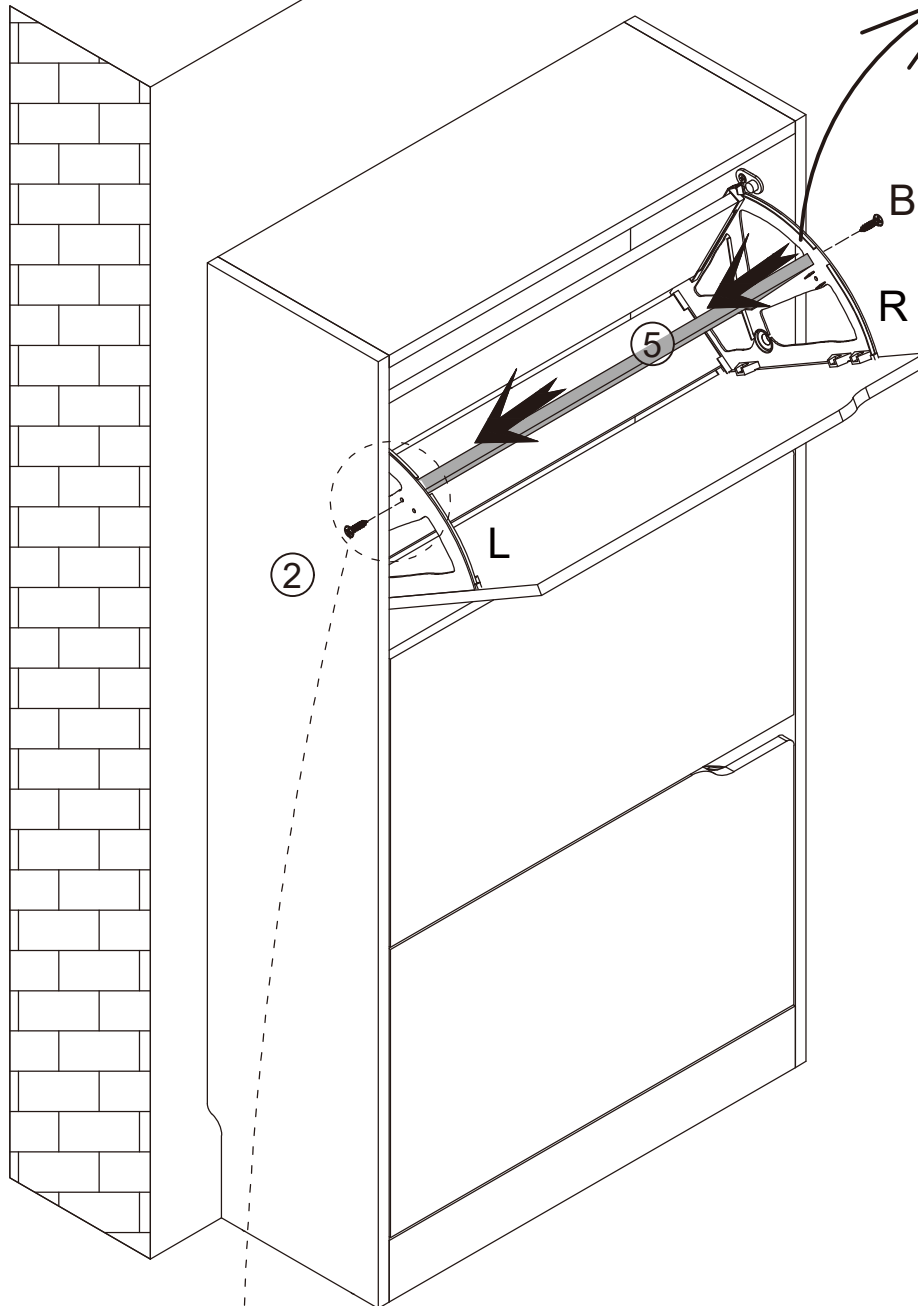






OR

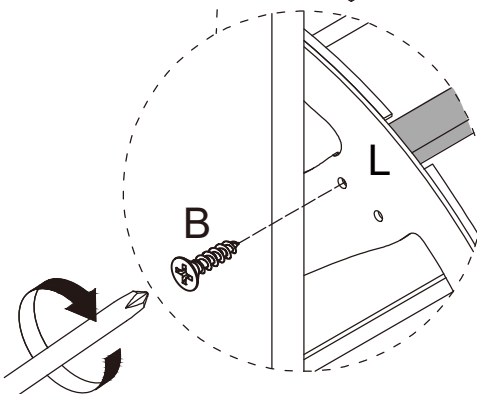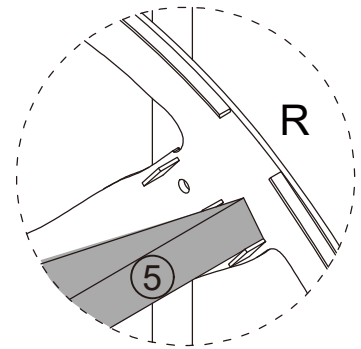

OR

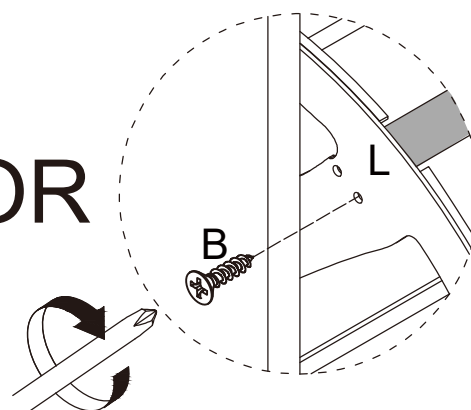

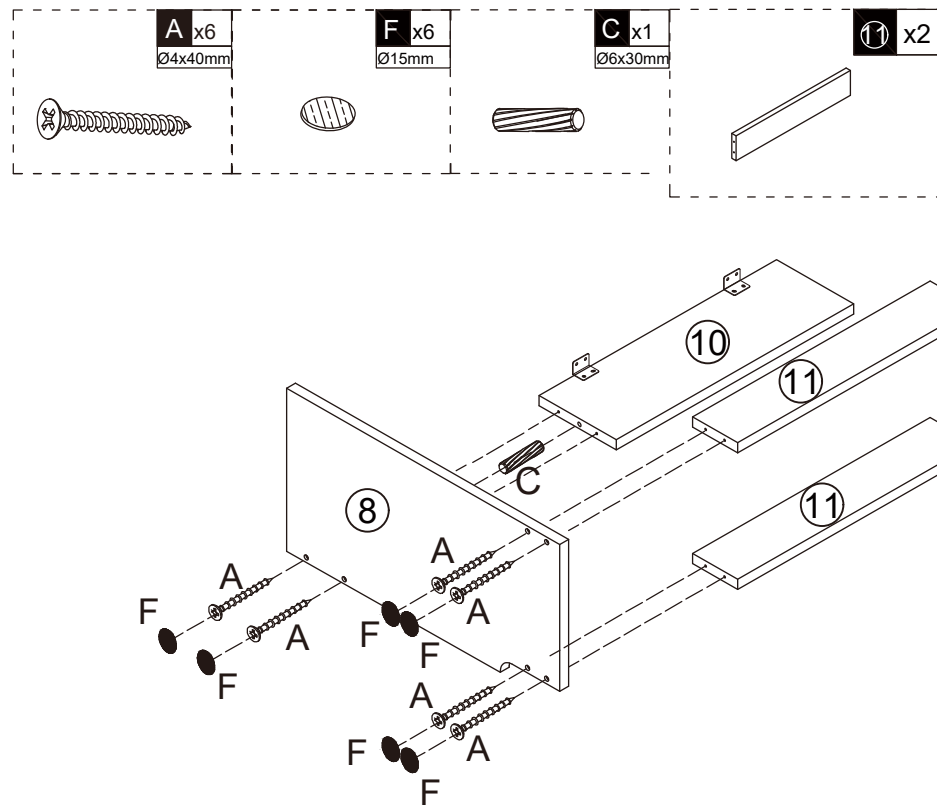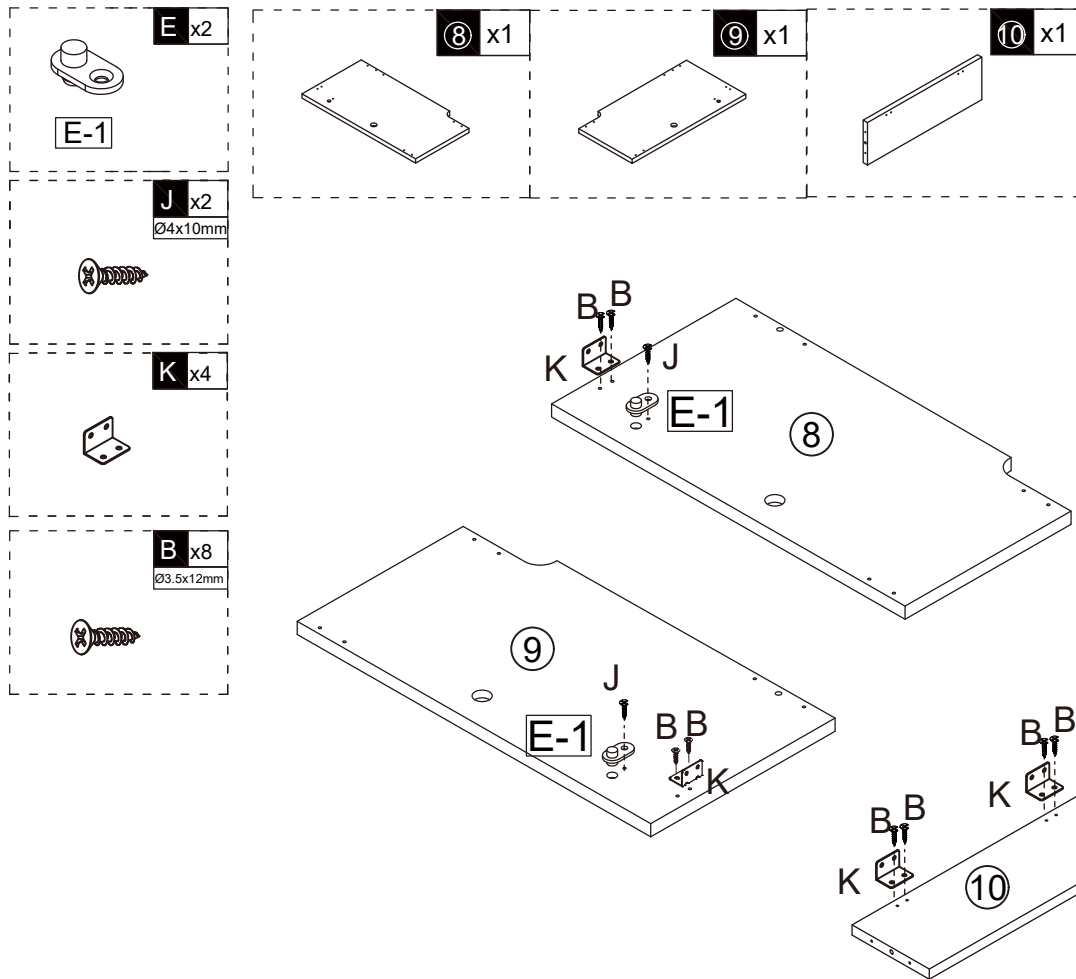

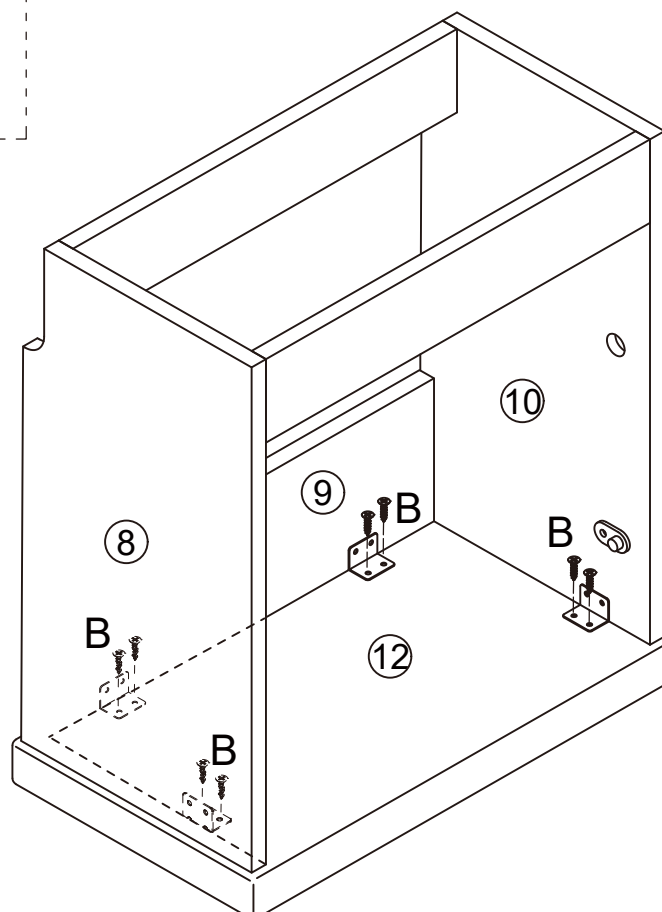
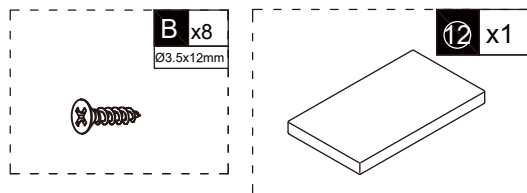
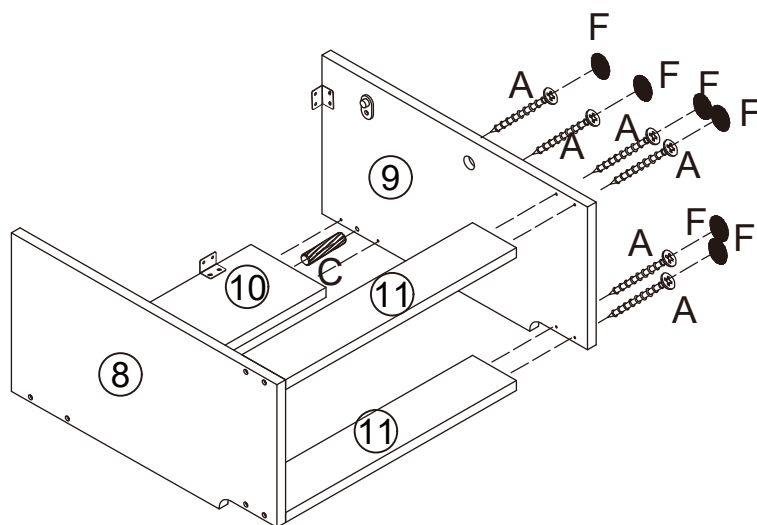
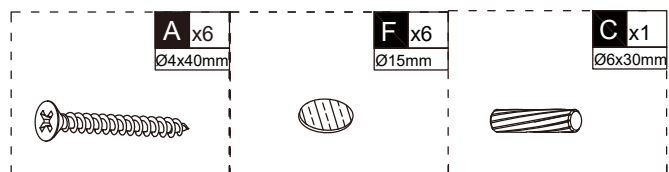


B x6
Ø3.5x12mm



L x1






R x1

15 x1

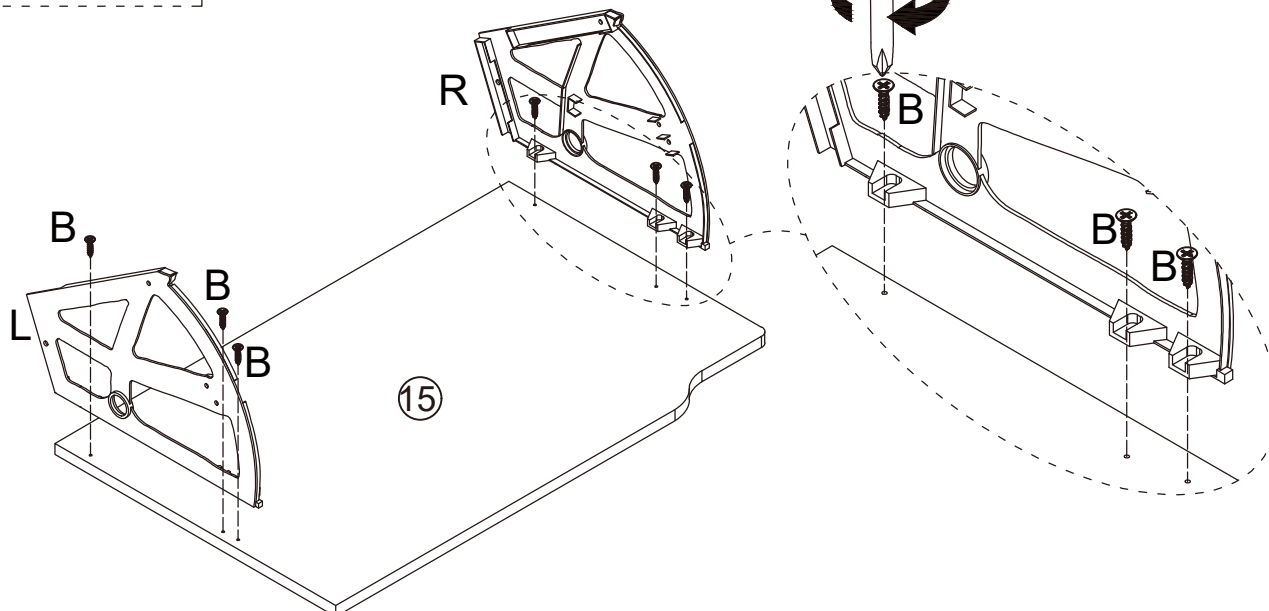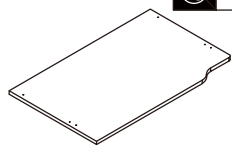B x2
Ø3.5x12mm



14 x1

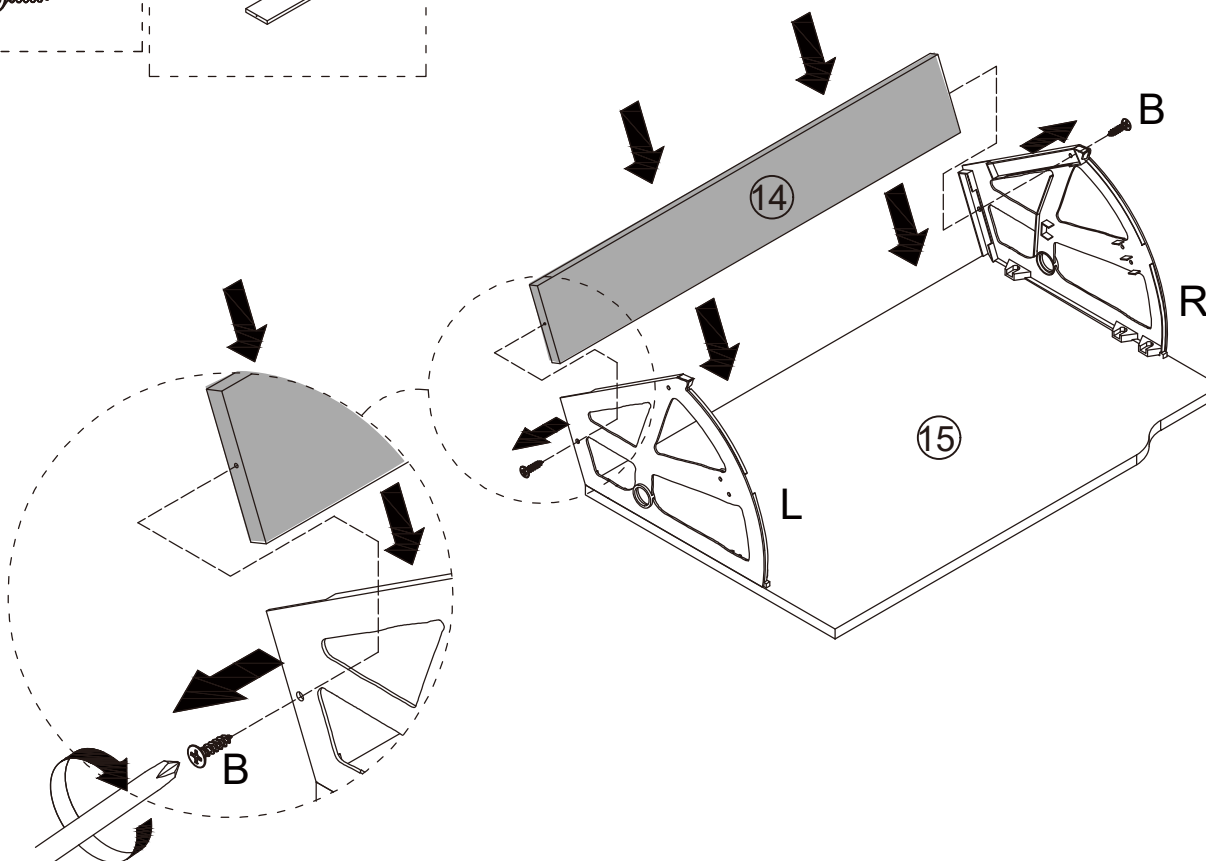

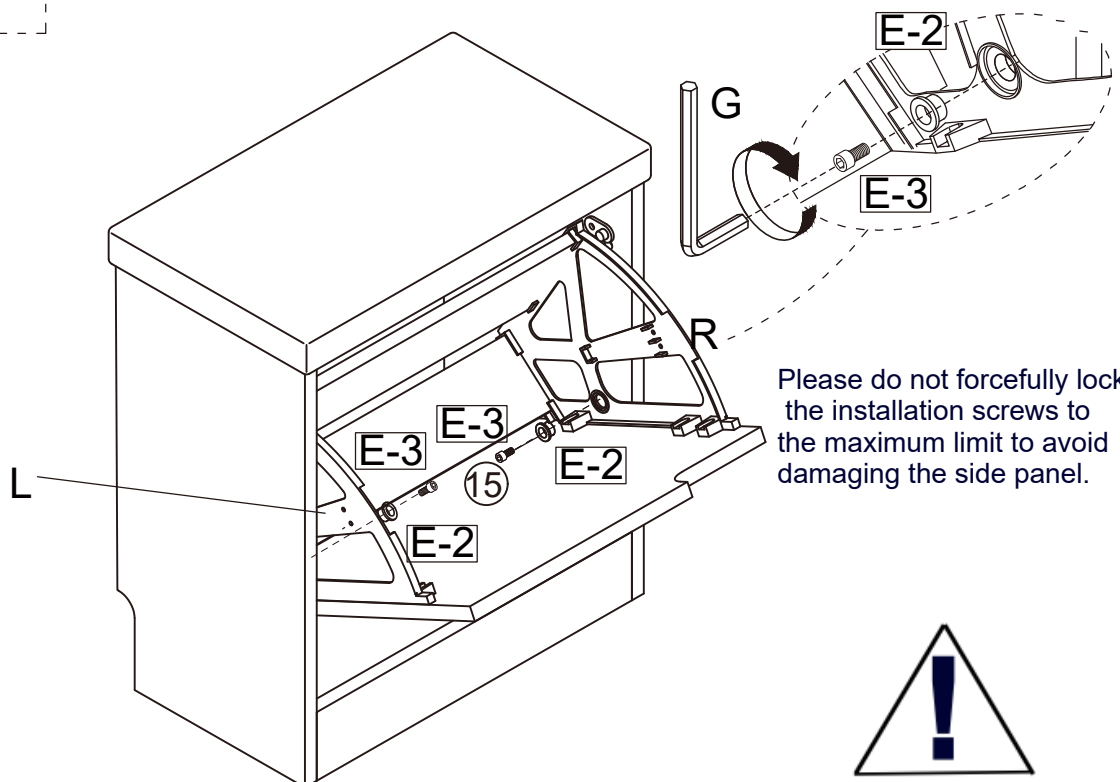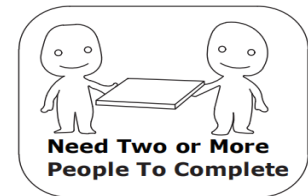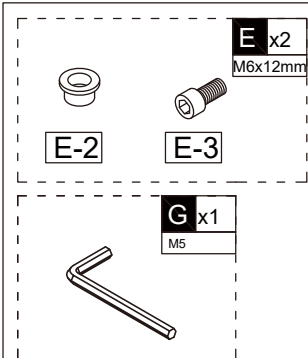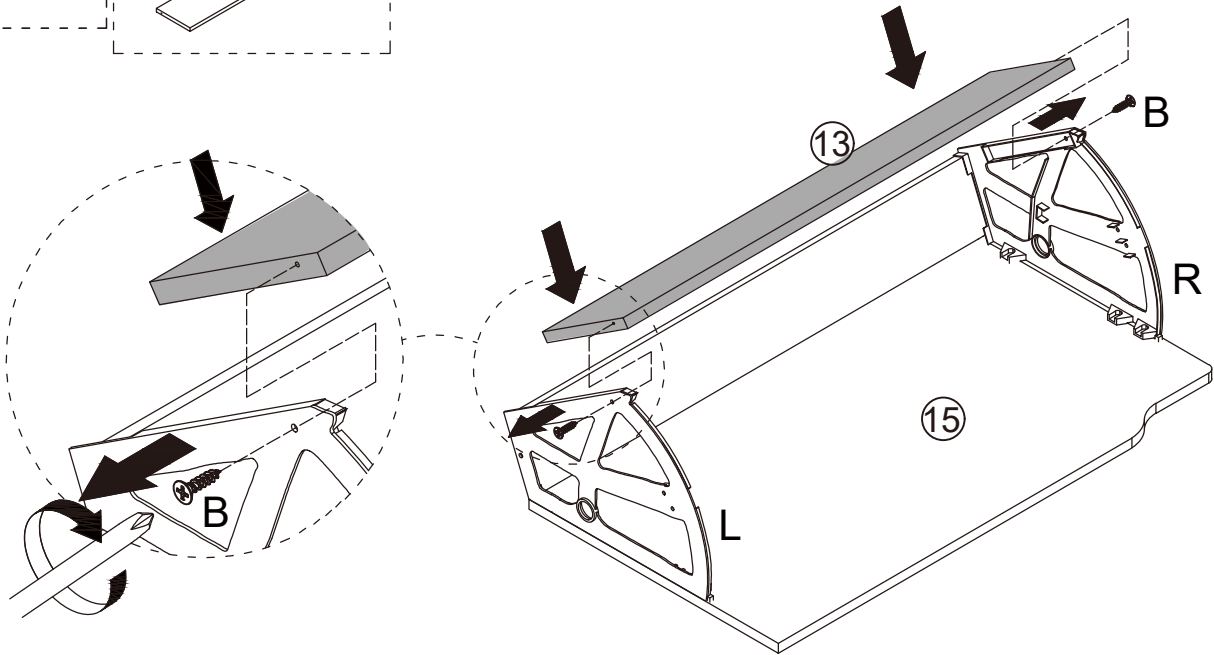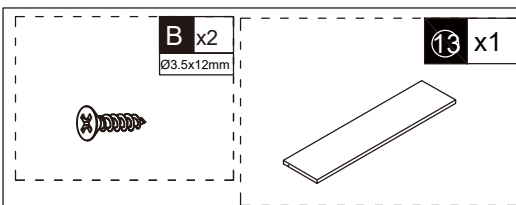


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.



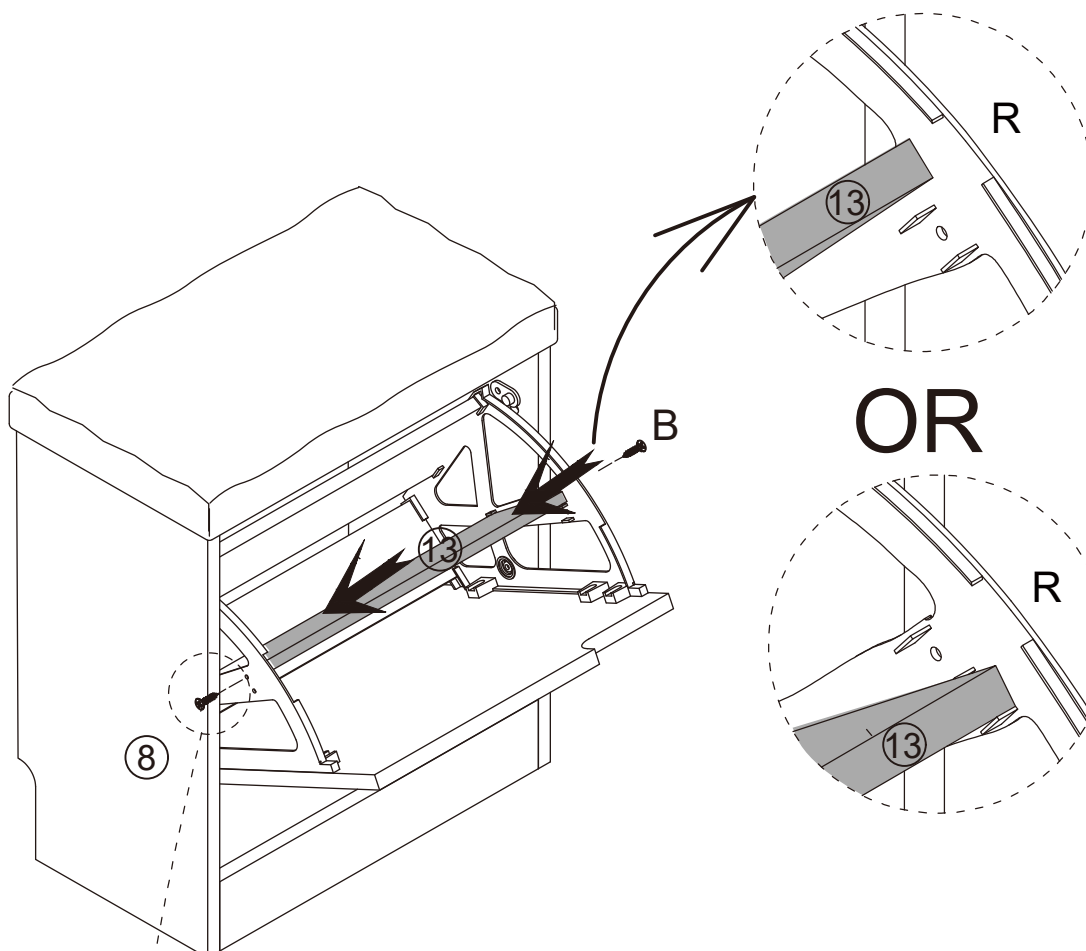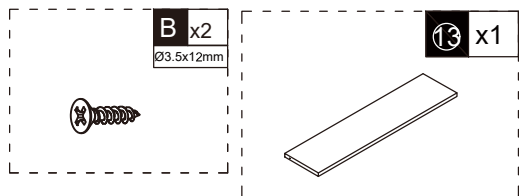

OR

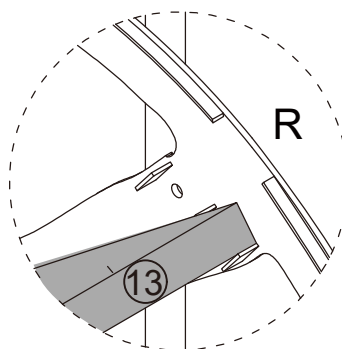

OR

