
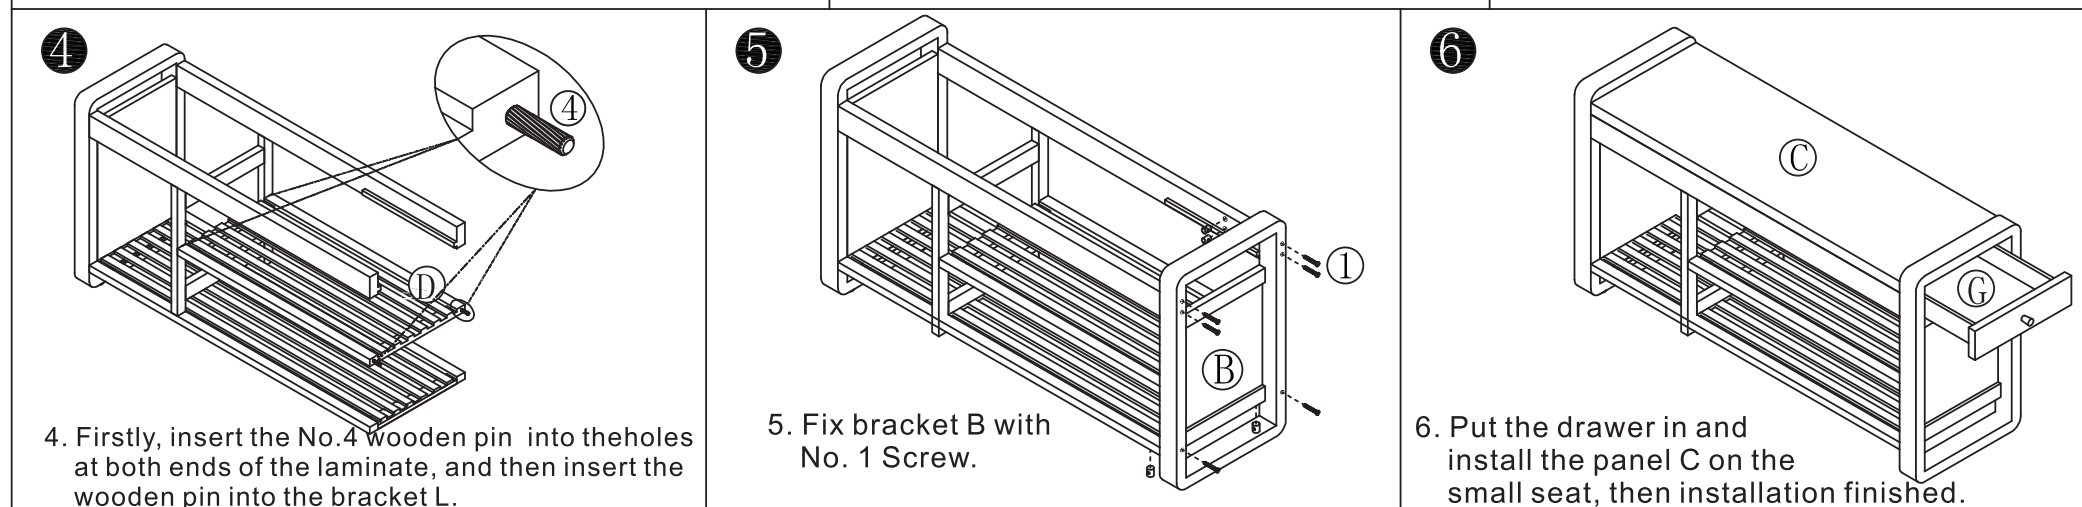
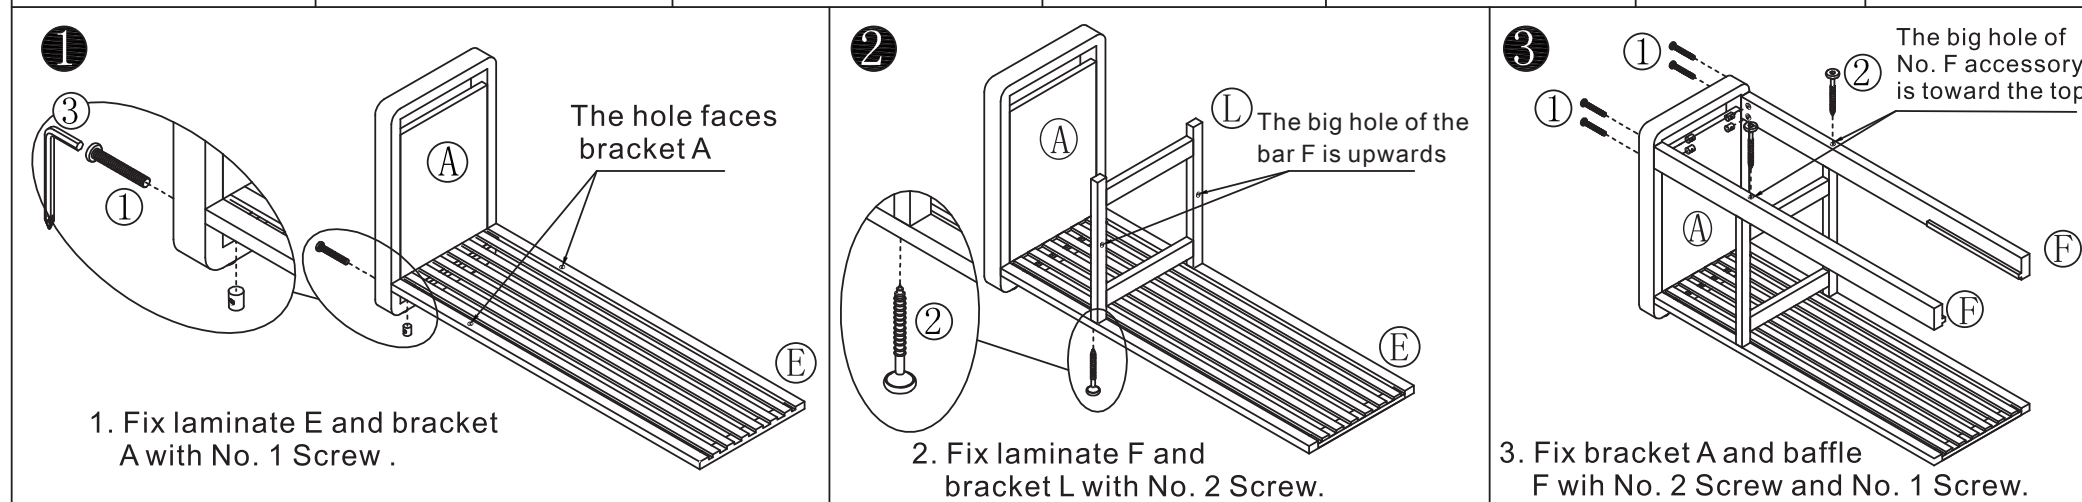
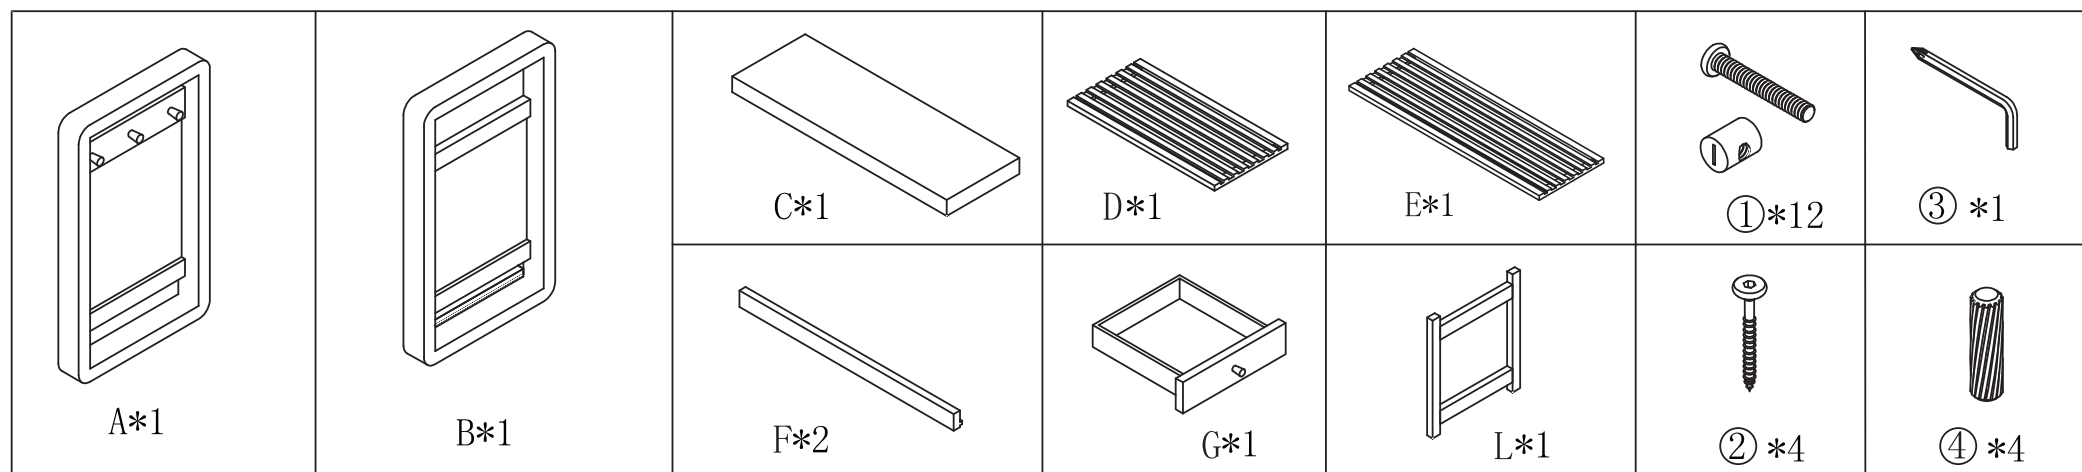
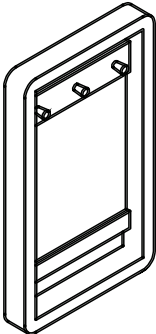
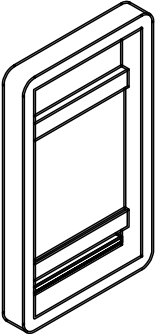
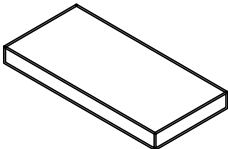
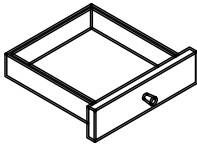
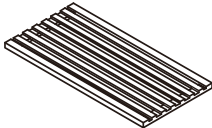

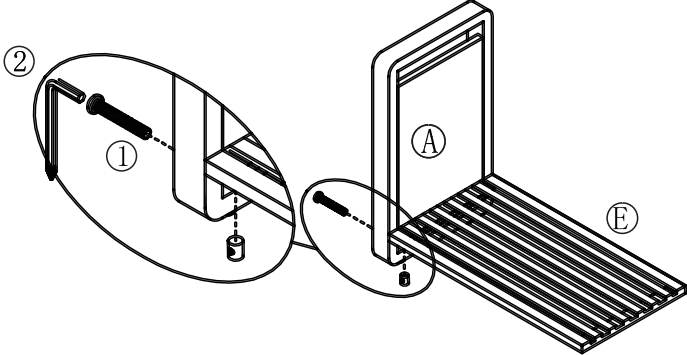
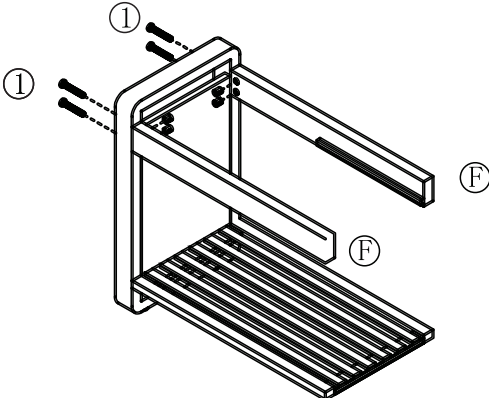
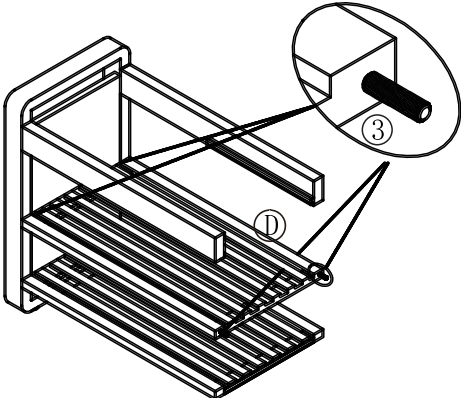
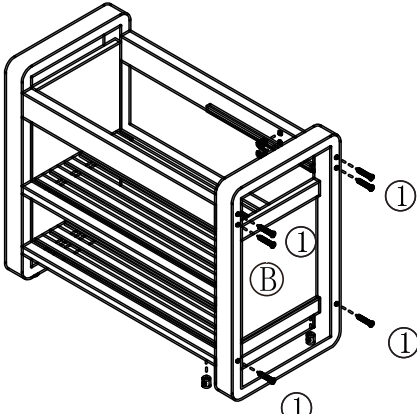


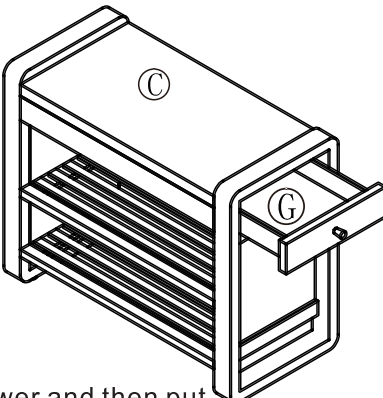

 A*1	 B*1	 C*1	 E*1	 G*1	 ② x1
		 D*1	 F*2	 ① x12	 ③ x4

①  1. Fix laminate E and bracket A with No. 1 Screw .	②  2. Fix Bracket A and baffle F with No. 1 Screw.
--	---

③  3. Firstly, insert the No.3 wooden pin into the holes at both ends of the laminate, and then insert the wooden pin into the bracket A.	④  4. Fix bracket B with No. 1 Screw.	⑤  5.Put in the drawer and then put panel C on the stool.Installation completed.
--	---	---