


INSTALLATION INSTRUCTIONS

Model#01

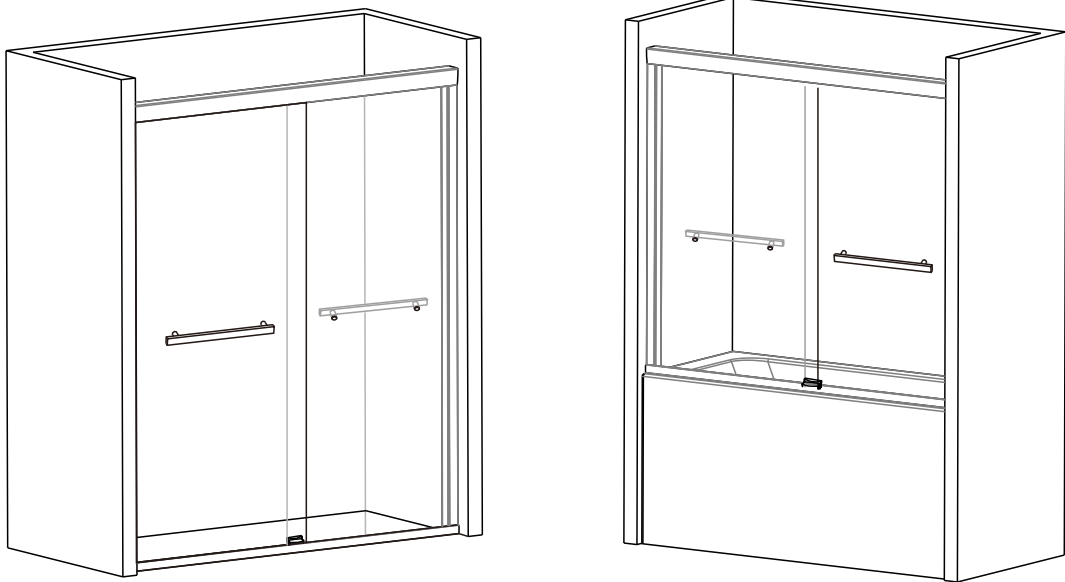

**THANK YOU FOR PURCHASING OUR PRODUCTS.
FOR IMMEDIATE ASSISTANCE WITH ASSEMBLY
OR PRODUCT INFORMATION ,PLEASE EMAIL US AT:**



SUPPORT@CUSTOMERSERVICEYIBAI.COM

Please include your order ID and the product model number in your email.

Our customer service team is available to assist you Monday to Friday
8:00 AM to 5:00 PM (PST).

⚠ Important Notice Before Installation:

Please prepare Silicone Sealant in advance (not included). It is crucial to use the Silicone Sealant in the final step to prevent the risk of water leakage. Refer to Page 10 for its application location.


◆ General Information

Inspect the product immediately upon receipt for transit damage, missing parts, or manufacturing defects. Claims for damage reported later will not be accepted. Handle the product with care, avoiding impacts or shock loading to the glass edges and surfaces.

◆ Safety Notes

Safety glass cannot be modified or reworked. Read all instructions carefully before installation. Exercise extreme caution when drilling into walls to avoid hidden pipes or electrical wiring.

Note: This product is heavy—two-person installation is recommended.

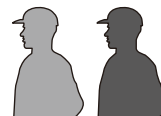

◆ Aftercare instructions

Clean the shower regularly with mild soap and water. This is especially important in hard water areas to prevent lime scale buildup.

Avoid: Gritty or abrasive cleaners.

Chemical use: Strong chemicals may be used with caution. Contact the cleaner manufacturer if unsure. Retain these instructions for future reference.


◆ Adjustments

The aluminum top rail can be trimmed up to 4 inches (10 cm) for width adjustments. If the opening is smaller, the glass panel overlap will increase, reducing the entrance size accordingly.


◆ Installation Tips

Measure the finished opening before installation to confirm the correct model size. These instructions apply to both shower doors and tub doors (follow the same steps).


Tools Required

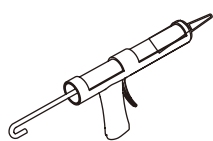


Silicone Sealant

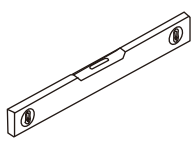


Level

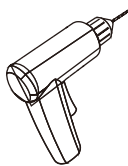


Drill



Ø1/4"
Drill Bit




Screwdriver
(Phillips)




Hammer



Pencil

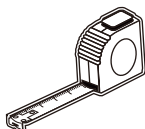

Tape Measurer



Sealant
Finishing Tool




Painters
Tape



Safety Glasses




Work Gloves












Hacksaw

PARTS LIST

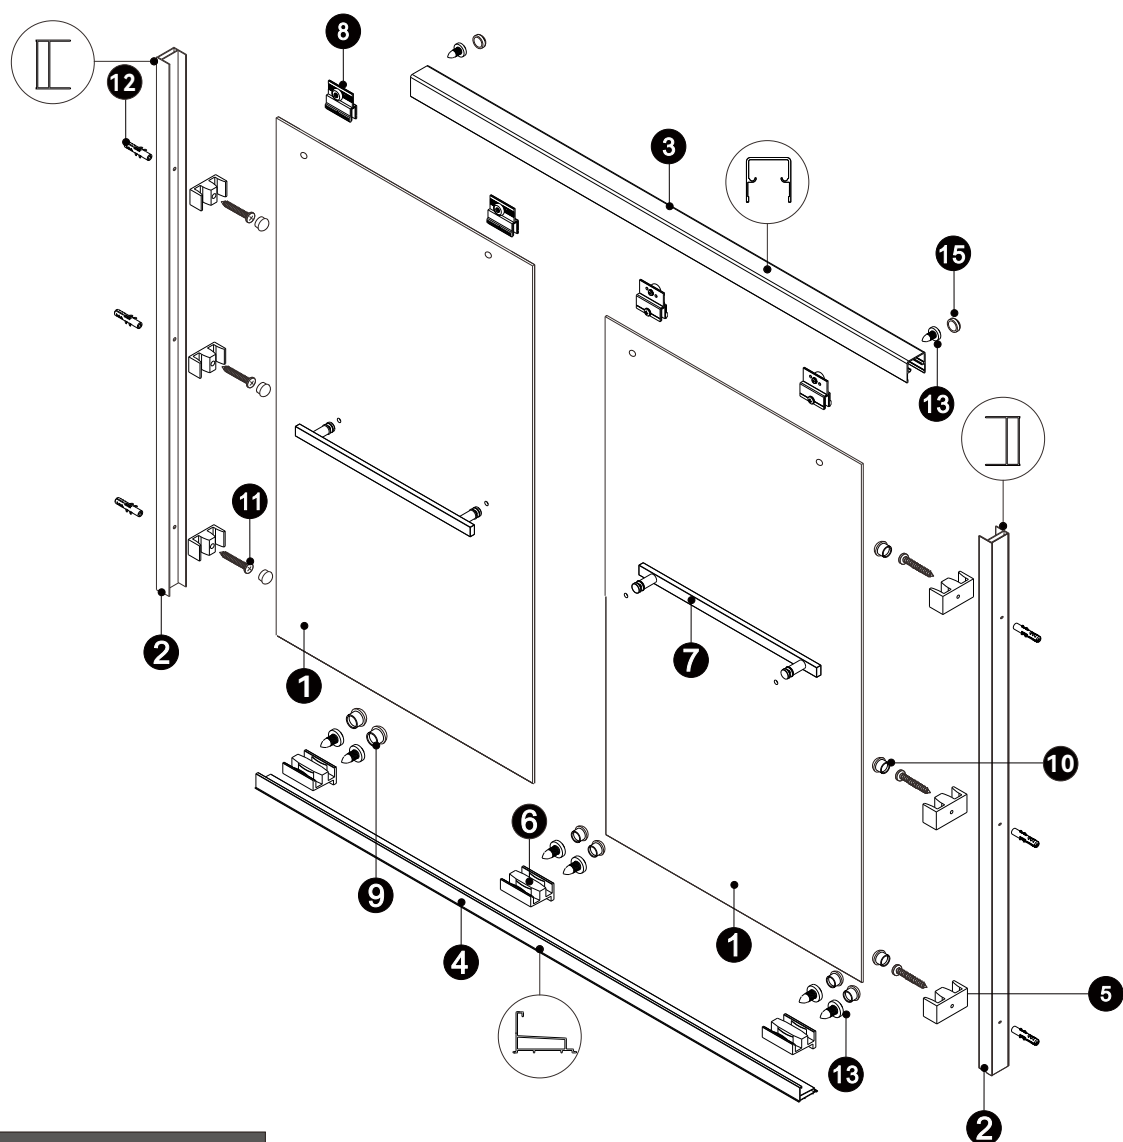


 keep small parts away from children

PACKING LIST

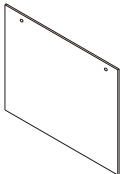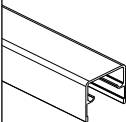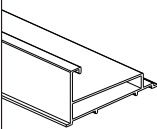Glass Door	Wall Jamb	Top Rail	Bottom Rail	Anti-Collision Block	Anti-Swing Device	Towel Bar	Roller Bracket Assembly
 1 2 PCS	 2 2 PCS	 3 1 PCS	 4 1 PC	 5 6 PCS	 6 3 PCS	 7 2 PCS	 8 4 PCS
Stopper Cap  9 6 PCS	Anti-Collision Cover Cap  10 6 PCS	St4x50 Self-Tapping  11 8 PCS	Drywall Anchor  12 8 PCS	ST4 × 10 Self-Tapping  13 12 PCS	Ø1/8" Twist Drill  14 1 PC	Screw Cap  15 4 PCS	

INSTALLATION STEPS

STEP 1-Measurement

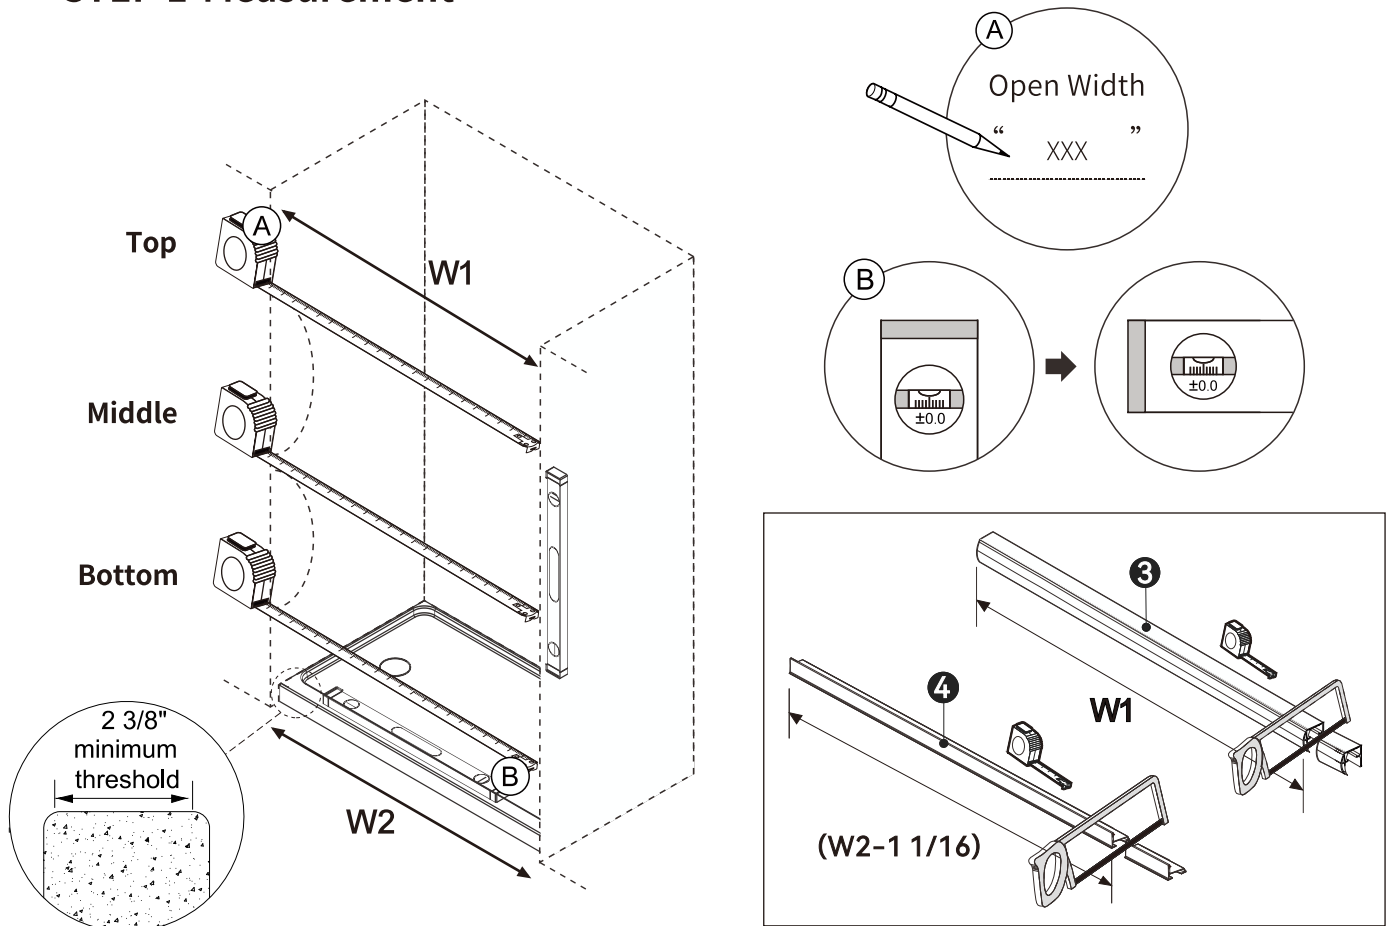

1. Check the threshold for level and the walls for plumb.
2. Measure the finished opening width at both the top and bottom of the shower space. Record these dimensions as:
 - Top width (W1)
 - Bottom width (W2)
3. If the width of your wall-to-wall opening is equal to the size of your shower model, it is unnecessary to cut the rails. Proceed to the next step.
4. If the width of your wall-to-wall opening is less than the size of your shower model, you will need to cut both the bottom rail and the top rail.

IMPORTANT: Never cut the top and bottom rails to the same length.


NOTE: Top/Bottom rails are shorter than the model size by design. They are pre-cut to fit between wall profiles (not wall-to-wall).

Cutting Guide (Refer to Table Below):

Model Size	Top Rail Length	Cut Length (Top)	Bottom Rail Length	Cut Length (Bottom)
44" - 48"	48"	=48"-W1(top dimensions)	47"	=47"-(w2-1 1/16")
50" - 54"	54"	=54"-W1(top dimensions)	53"	=53"-(w2-1 1/16")
56" - 60"	60"	=60"-W1(top dimensions)	59"	=59"-(w2-1 1/16")


INSTALLATION STEPS

STEP 2-Bottom Rail and Anti-Swing Device Installation

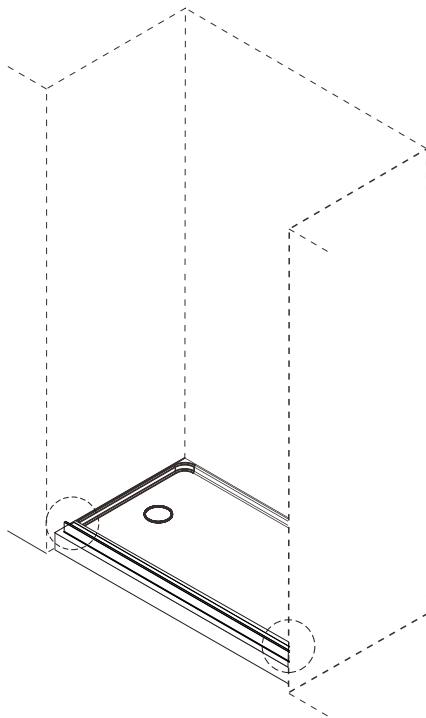


Parts Required:


Part No.	Description	Qty
4	Bottom Rail	1
6	Anti-Swing Device	2
13	ST4 × 10 Self-Tapping	4
14	Ø1/8" Twist Drill	1
9	Stopper Cap	4

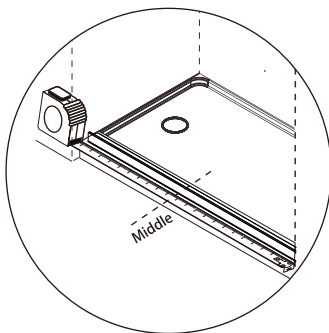


1.Measure and mark the centerline of the bottom rail (Part#4).

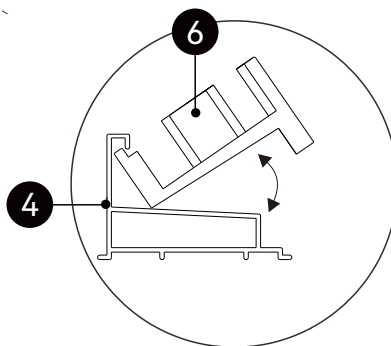


2.Install anti-swing devices (Part#6) on the bottom rail to prevent rail rotation.

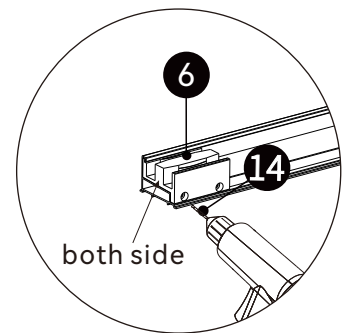


3.Position an anti-swing device at the rail centerline. Drill pilot holes using a 1/8" twist drill (Part#14).

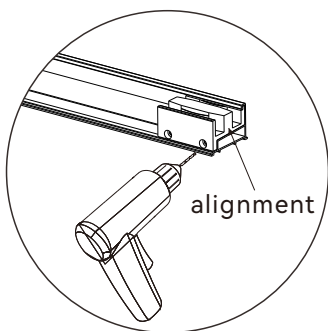

4.Position left/right anti-swing devices at both rail ends and drill pilot holes.

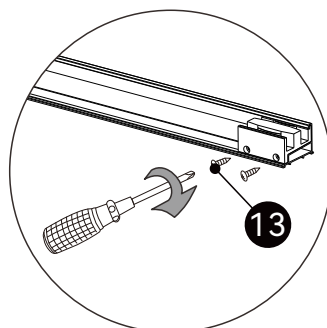

5.Secure all anti-swing devices with ST4×10 screws (Part#13) using a Phillips screwdriver.

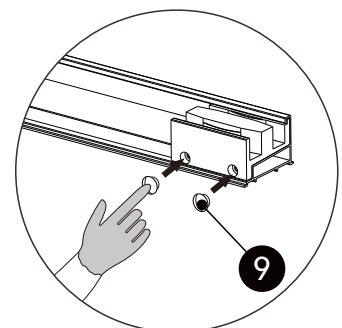


6.Install stopper caps (Part#9) on each anti-swing device..

INSTALLATION STEPS


STEP 3-Wall Jambs and Anti-Collision Block Installation

Parts Required:


Part No.	Description	Qty
2	Wall Jambs	2
5	Anti-Collision Block	6
10	Anti-Collision Cover Cap	6
11	ST4 × 50 Self-Tapping	6
12	Drywall Anchor	6

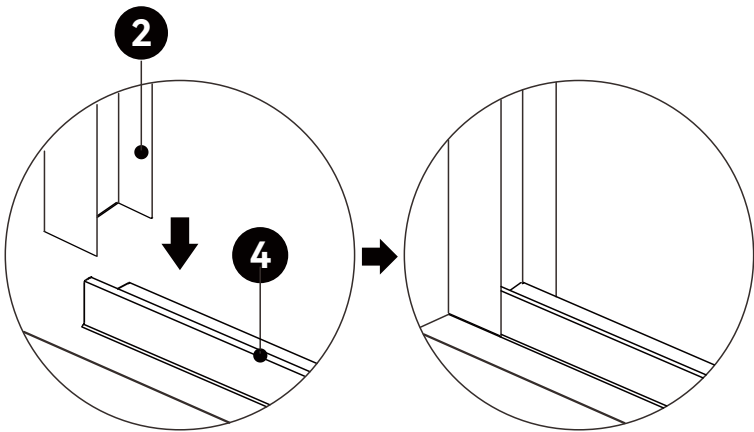


1.Position wall jambs (Part#2) onto the bottom rail (Part#4).

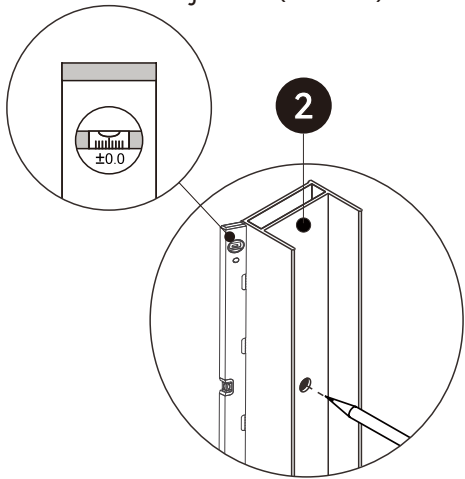


2.Use a level to ensure wall jambs are plumb. Mark drilling points through the large pre-drilled holes.

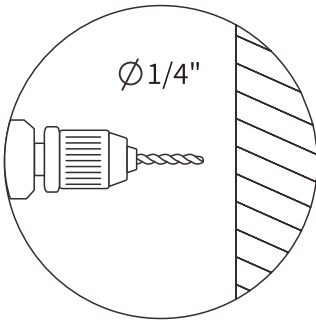


3.Drill pilot holes using a 1/4" drill bit.s.

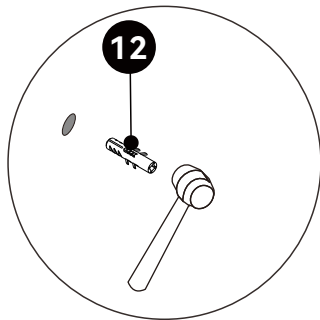


4.Tap drywall anchors (Part#12) into pilot holes with a hammer.

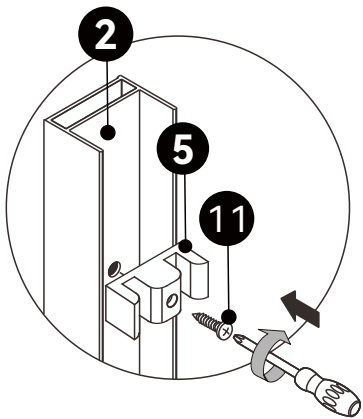

5.Secure anti-collision blocks (Part#5) through the small pre-drilled holes using ST4×50 screws (Part#11).

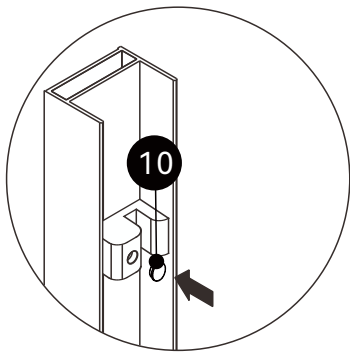

6.Attach cover caps (Part#10) onto rubber blocks.

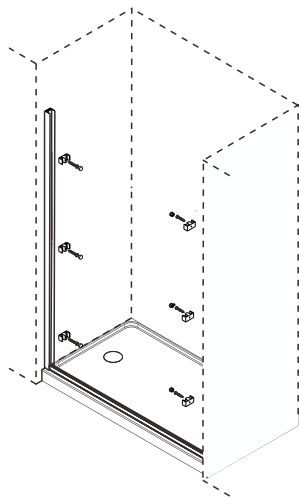



7.Repeat Steps 1-6 for the opposite wall.

INSTALLATION STEPS



STEP 4-Glass Roller Bracket Assembly and Top Rail Installation

Parts Required:

Part No.	Description	Qty
1	Glass Door	2
8	Roller Bracket Assembly	4
3	Top Rail	1

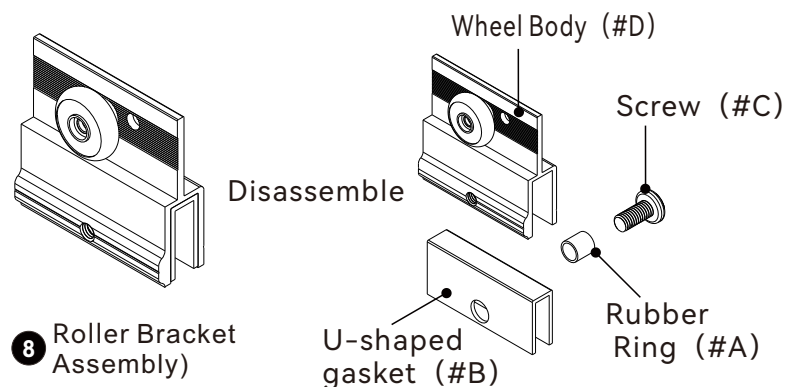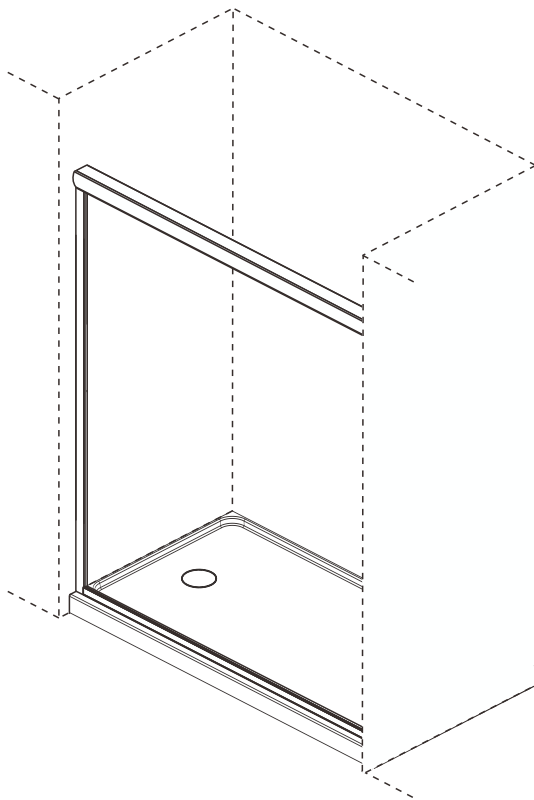


1. Assemble roller brackets (Part#8) to glass door:
 - a) Insert rubber rings (#A) into pre-drilled holes on glass door (Part#1)
 - b) Snap U-shaped gasket (#B) onto glass edge, aligning its holes with glass holes
 - c) Attach roller bracket wheel (#D) body to gasket

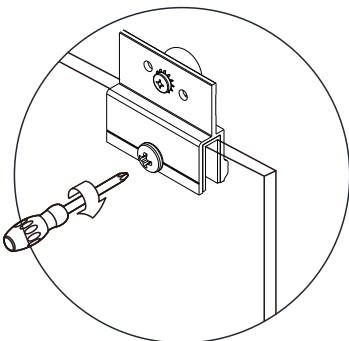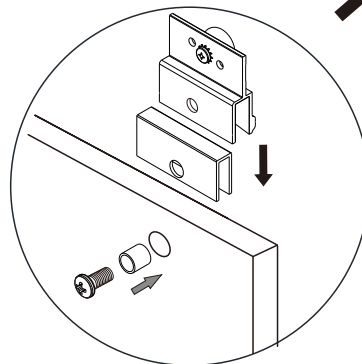


2. Secure each roller bracket with assembly screws (#C).




3. Repeat Steps 1-2 for all four roller bracket assemblies.

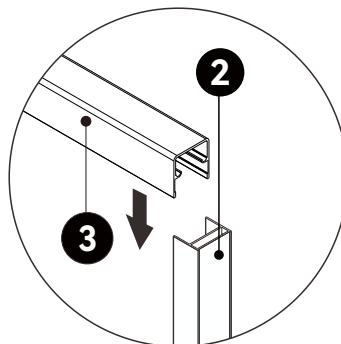

4. Position top rail (Part#3) over wall jambs, ensuring full contact.

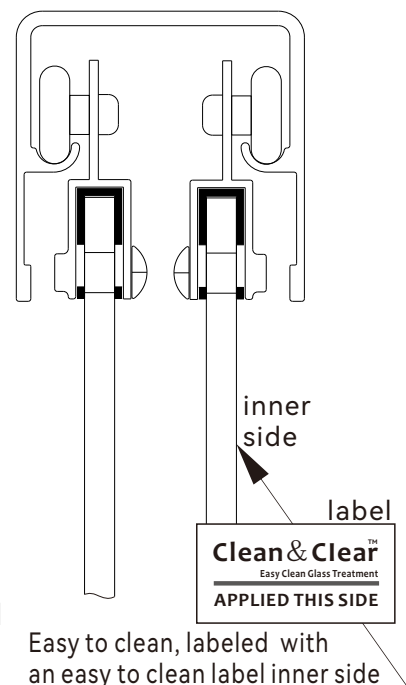

INSTALLATION STEPS
STEP 5-Glass Door Installation

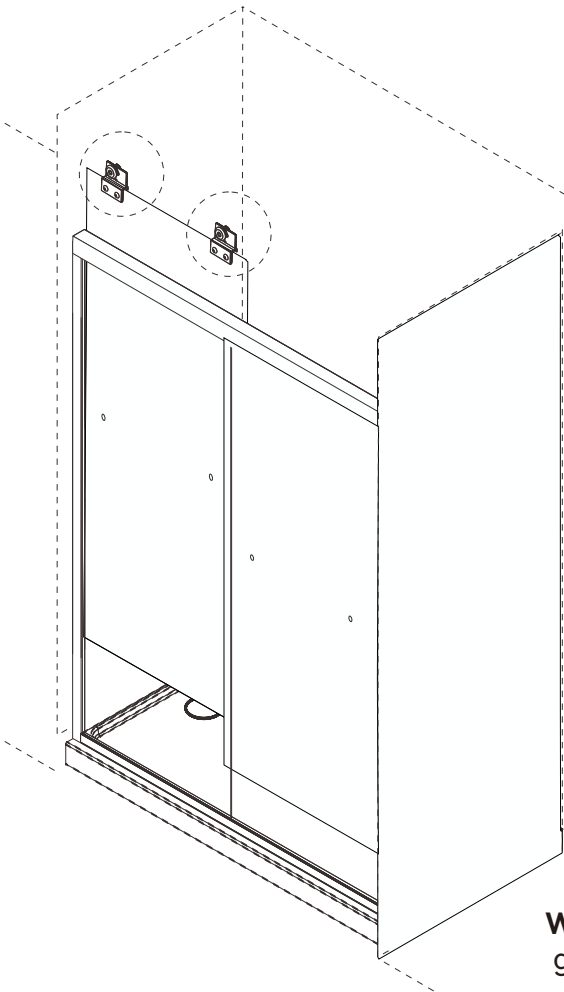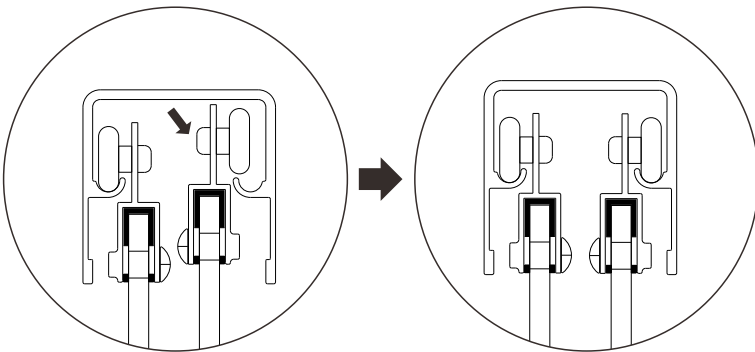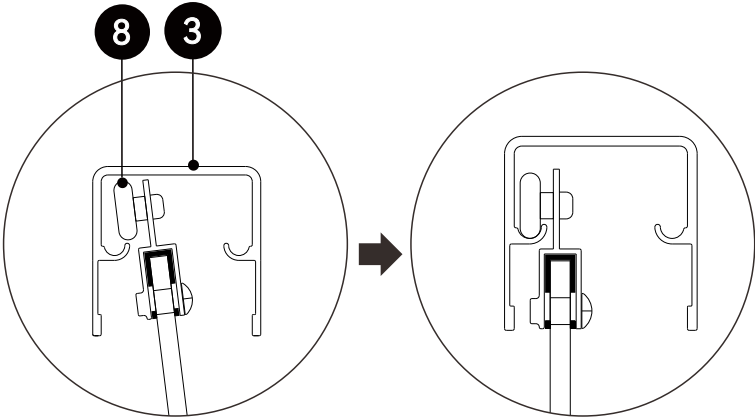

Parts Required:


Part No.	Description	Qty
1	Glass Door	2
8	Roller Bracket Assembly	4

- 1.Lift the glass door (Part#1) into the top rail channel. Gently swing its bottom inward to engage the bottom rail.
- 2.Install the second glass door in reverse orientation.

WARNING: Exercise extreme caution when sliding glass – anti-swing devices are not yet installed.


INSTALLATION STEPS

STEP 6-Securing the Bottom and Top Rails

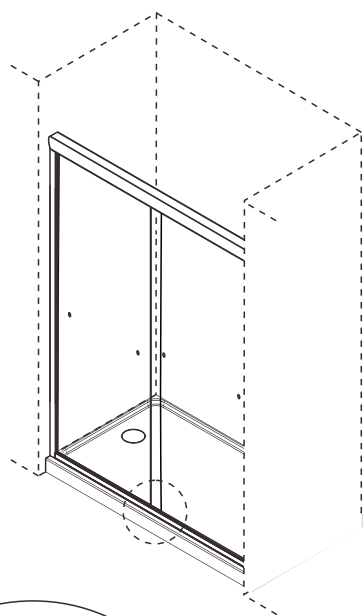


Parts Required:


Part No.	Description	Qty
6	Anti-Swing Device	1
4	Bottom Rail	1
13	St4 × 10 Self-Tapping	2
9	Stopper Cap	2
14	Ø1/8" Twist Drill	1

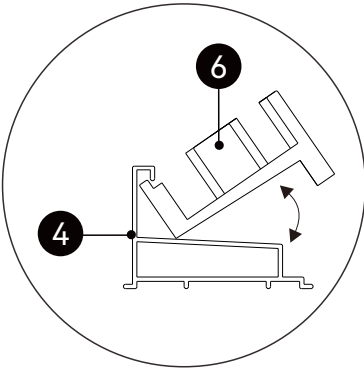


1.Ensure anti-swing device (Part#6) is pre-installed on bottom rail (Part#4) for anti-rotation.

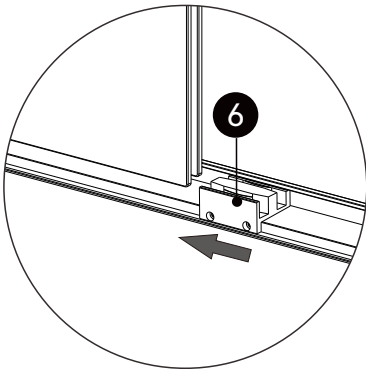


2.Push device against door glass bottom, aligning its holes with rail holes.

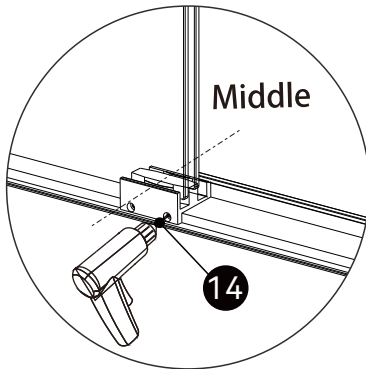

3.Drill pilot holes using a 1/8" twist drill (#14).

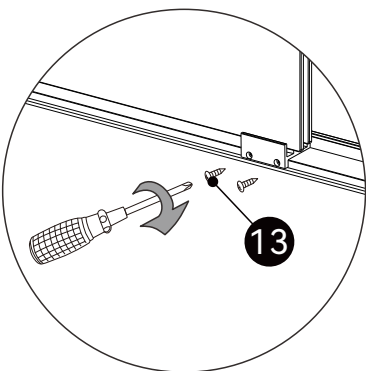


4.Use a Phillips-head screwdriver and St4x10 self-tapping screw (Part#13).Secure the middle anti-swing device.

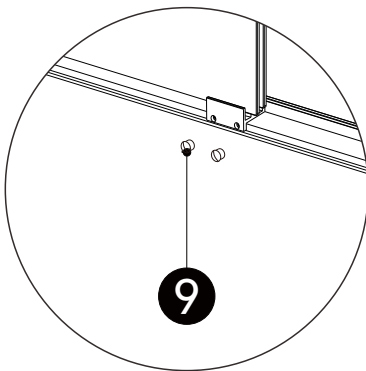



5.Insert stopper caps (Part#9) into threaded holes.

INSTALLATION STEPS

STEP 7-Top Rail Securing and Towel Bar Installation

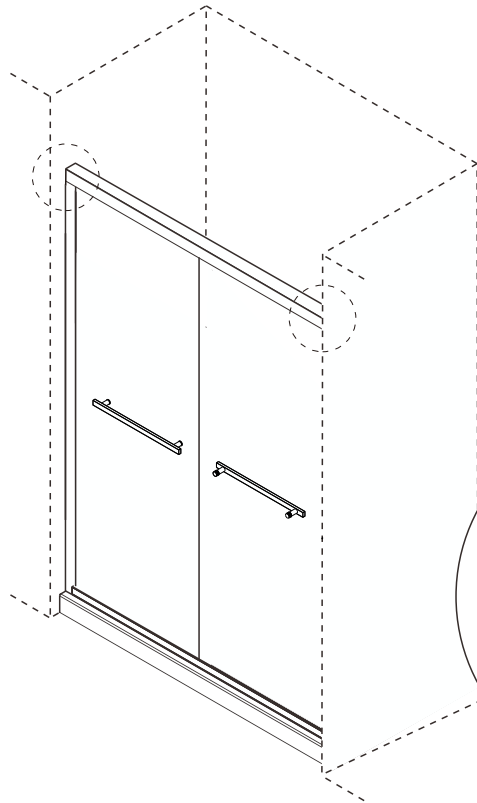


Part No.	Description	Qty
13	St4 × 10 Self-Tapping	2
15	Screw Cap	2
14	Ø1/8" Twist Drill	1
7	Towel Bar	2

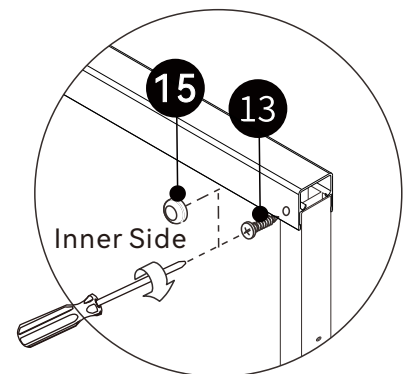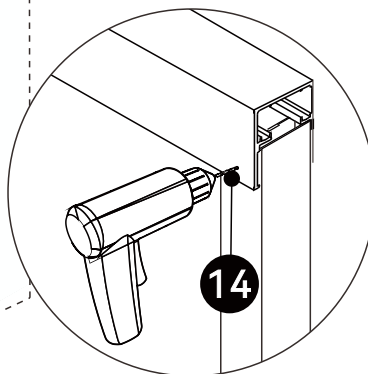

1.Pre-drill 1/8" pilot holes through the wall jambs at marked top rail positions.From inside the shower, secure the top rail with screws, ensuring it is perfectly level.

2.Secure them with screw ST4x10self-tapping (#13), then install the screw cap (#15).

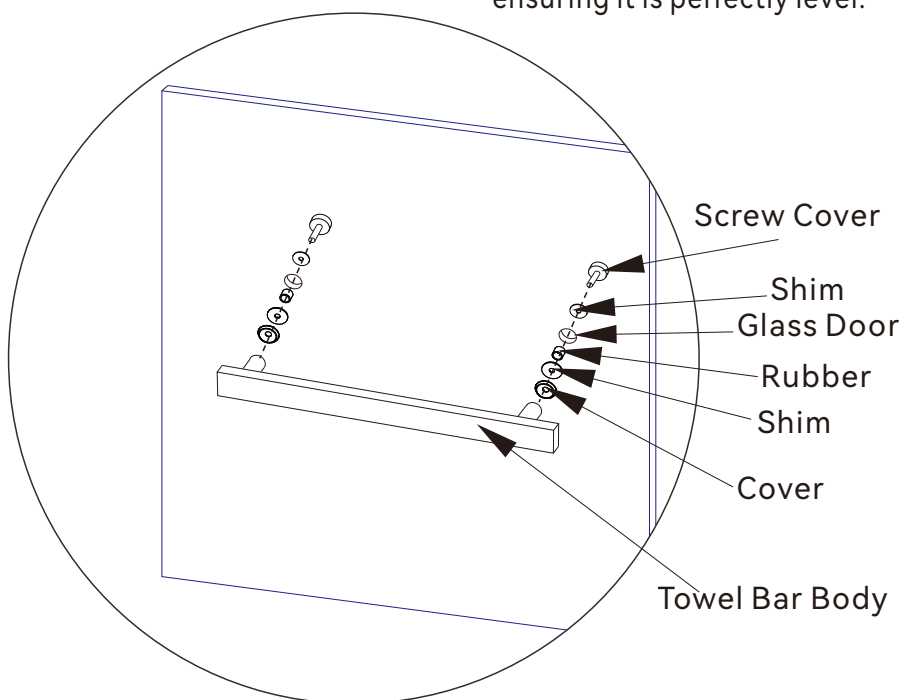

3.Install towel bars (#7) on movable glass doors as illustrated.

Note: The inner movable glass towel bar faces inward and the outer movable glass towel bar faces outward.

INSTALLATION STEPS

STEP 8 -Sealing

Sealing Procedure:


Apply clear silicone sealant evenly:

Along wall joints

On both sides of the threshold base

Allow 24-hour curing before shower use.

Prevent direct water impact on the door during curing.

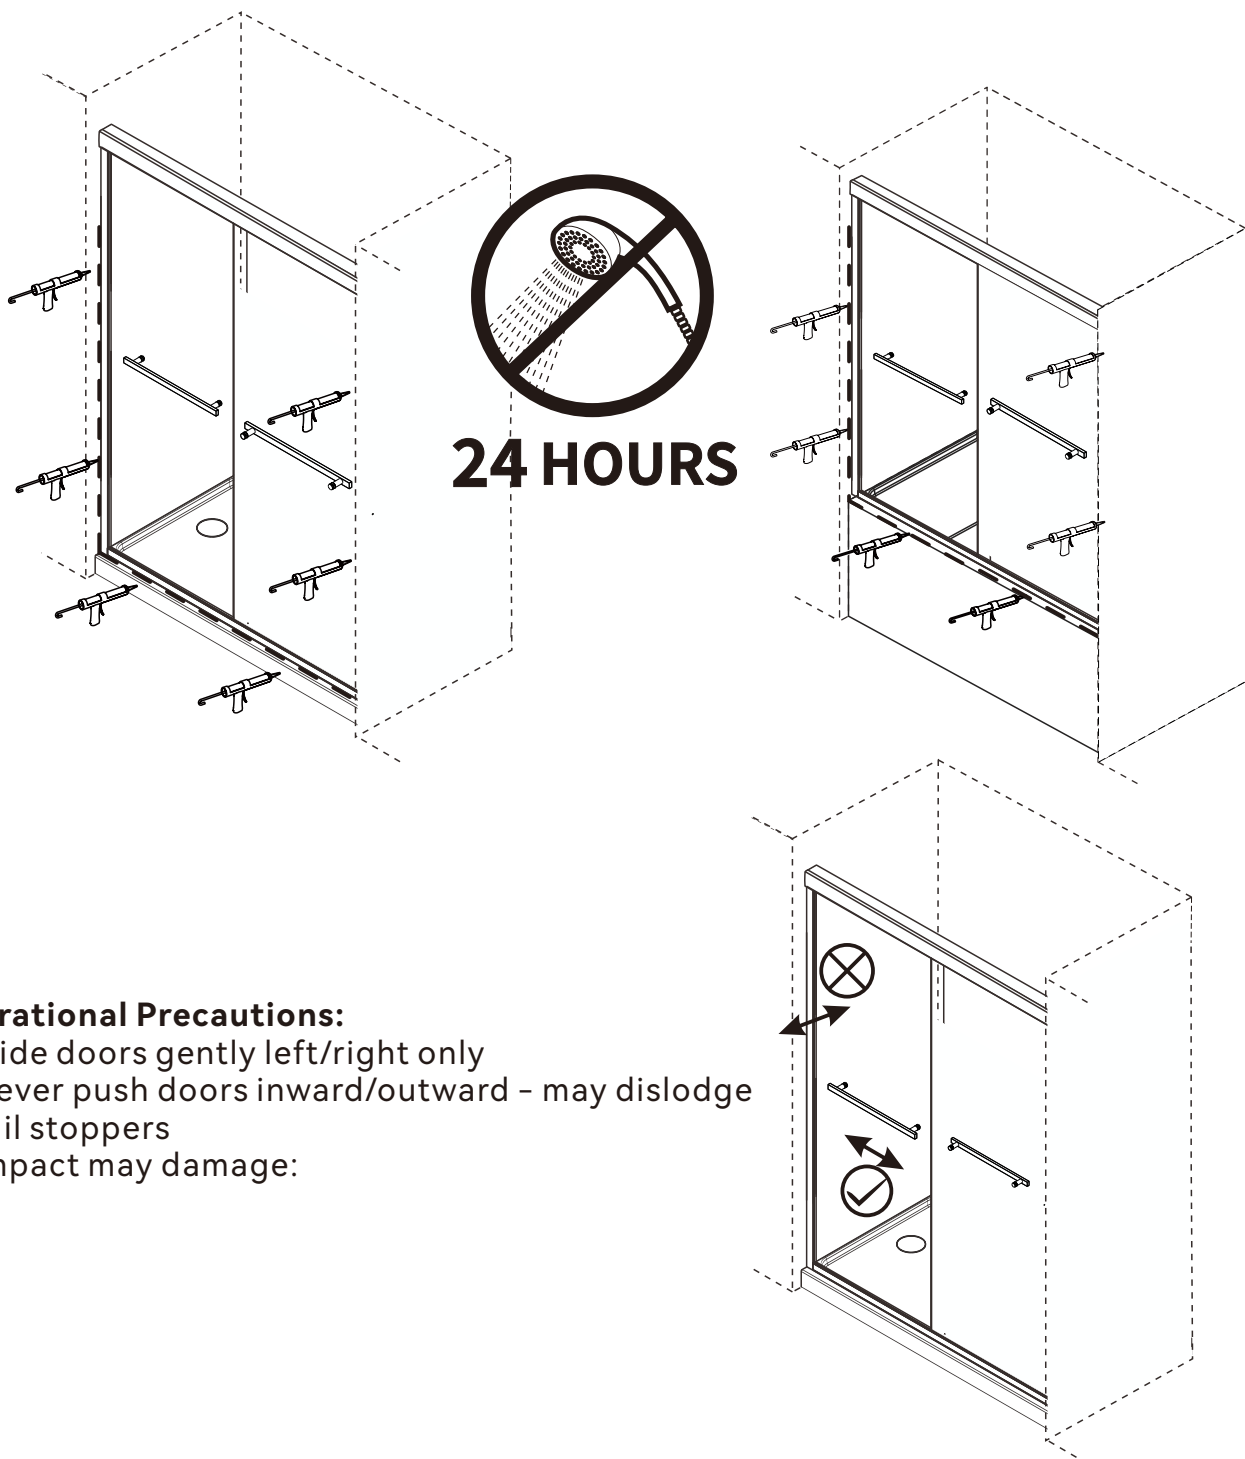

Operational Precautions:

- Slide doors gently left/right only
- Never push doors inward/outward - may dislodge rail stoppers
- Impact may damage: