

ASSEMBLY INSTRUCTION

Version: 1.0

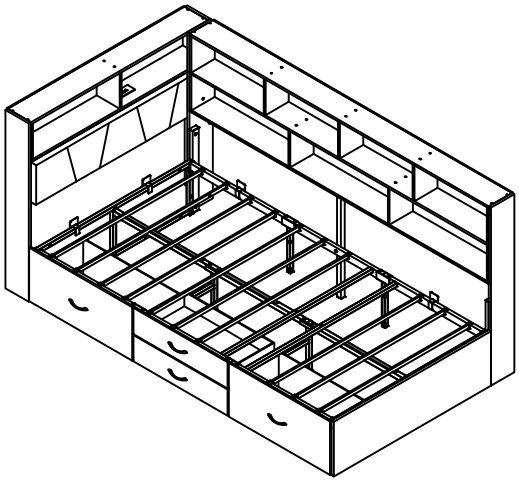


Assembly headboard at left side, please follow the assembly steps on page 8-33.

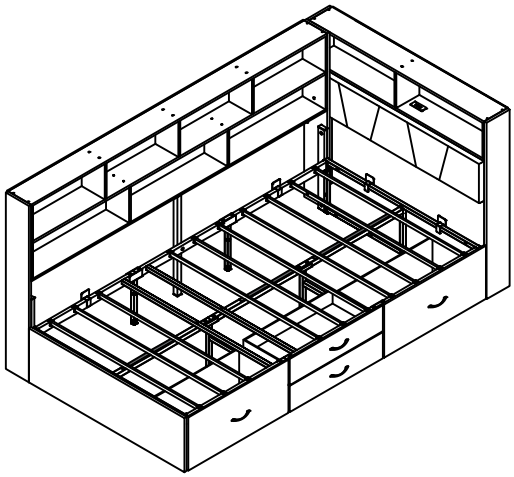


Assembly headboard at left side, please follow the assembly steps on page 34-60.




SKU:
AGWSC100116701A
AGWSC100116702A

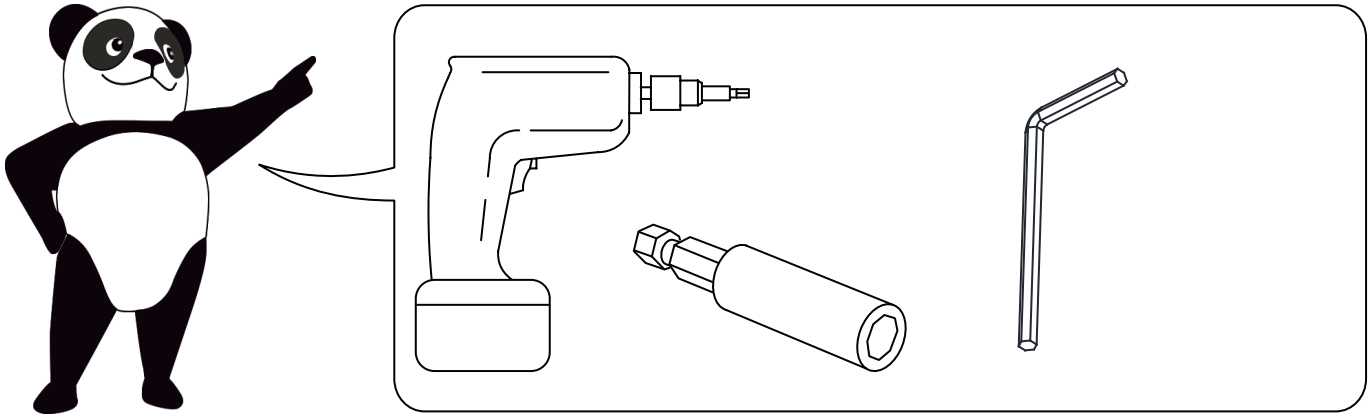


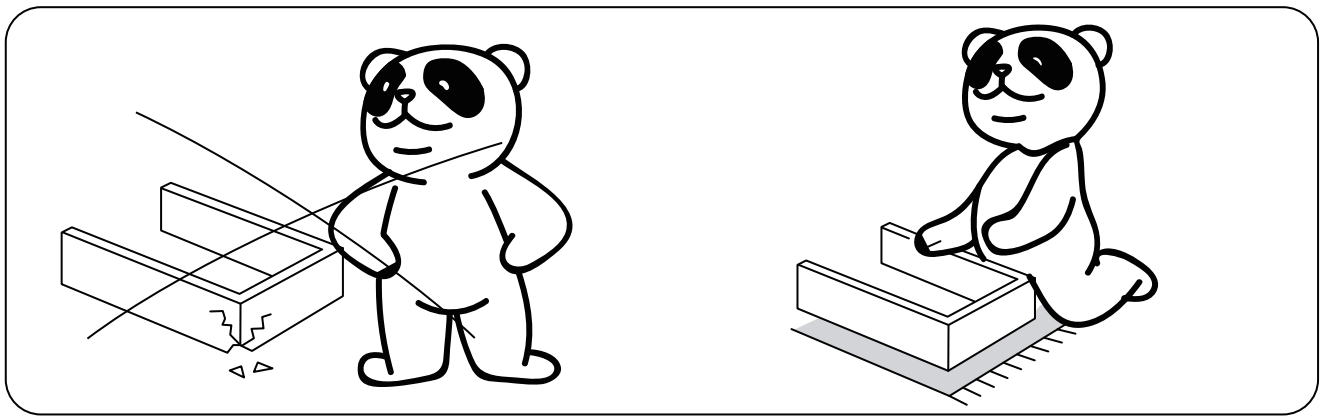

Violent installation is prohibited

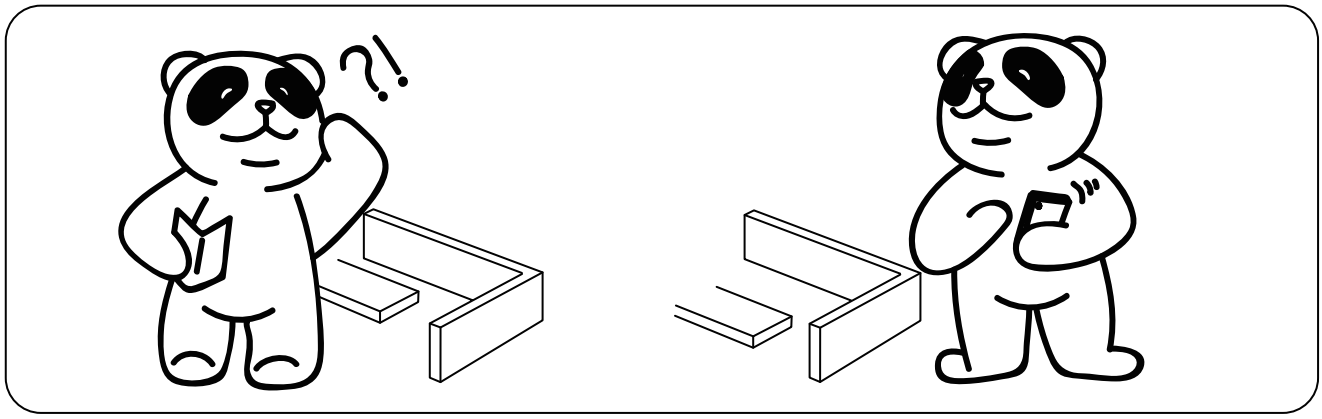


Please call if you need help

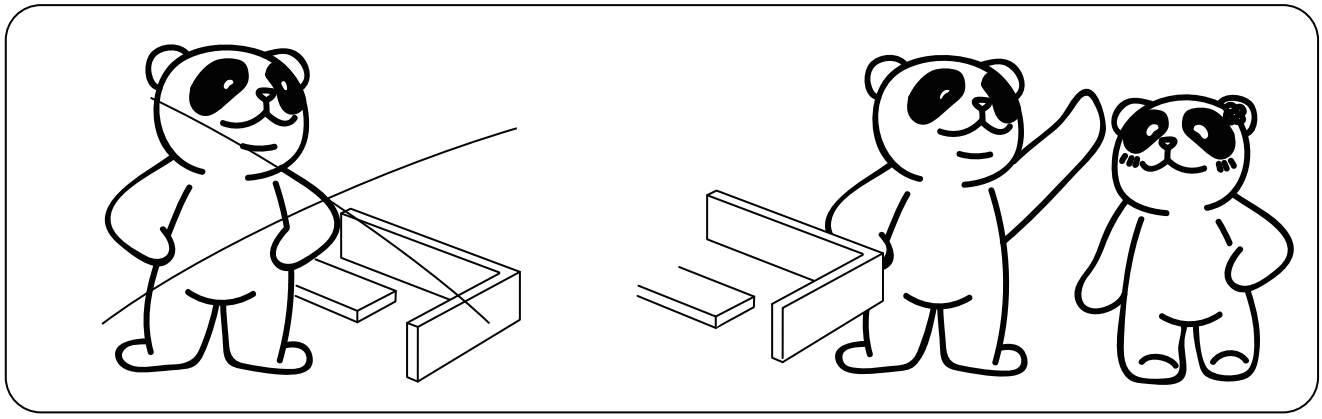


Multi-person cooperation is recommended

1.Installation precautions

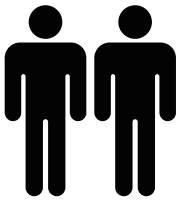

2 PERS.

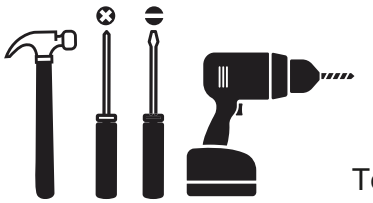

Tools required (not included)

2.Matters needing attention

⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip deviceprovided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.


Place heaviest items in the lowes drawers.

This is a permanent label. Do not remove!


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1.

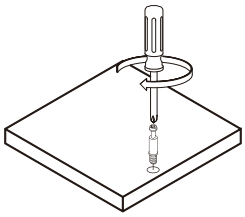


2.

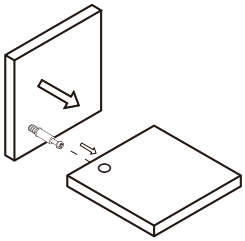


3.

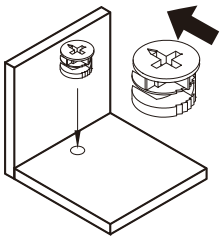


4.

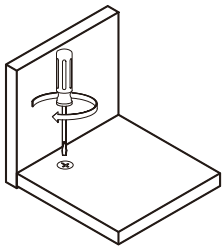


The opening must point toward the edge of the board

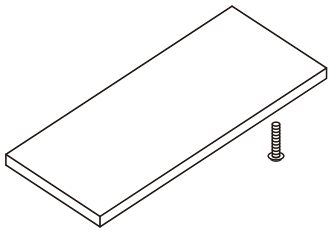

Be sure to use the proper screws to avoid damaging the parts.

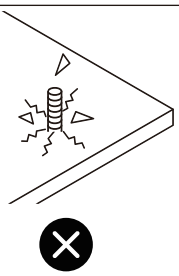


Wrong screws can cause the plank to crack

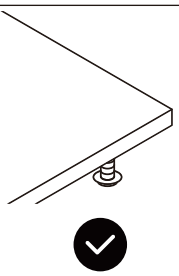






















The right screw is the right size

Please check that you have all the parts listed before starting assembly, if you find something missing, please stop the assembly and contact us immediately.


Note:
Should be assembled on flat ground to keep balance.
It needs at least two people to install.
Before starting the assembly, you must read the whole manual and follow the instructions.

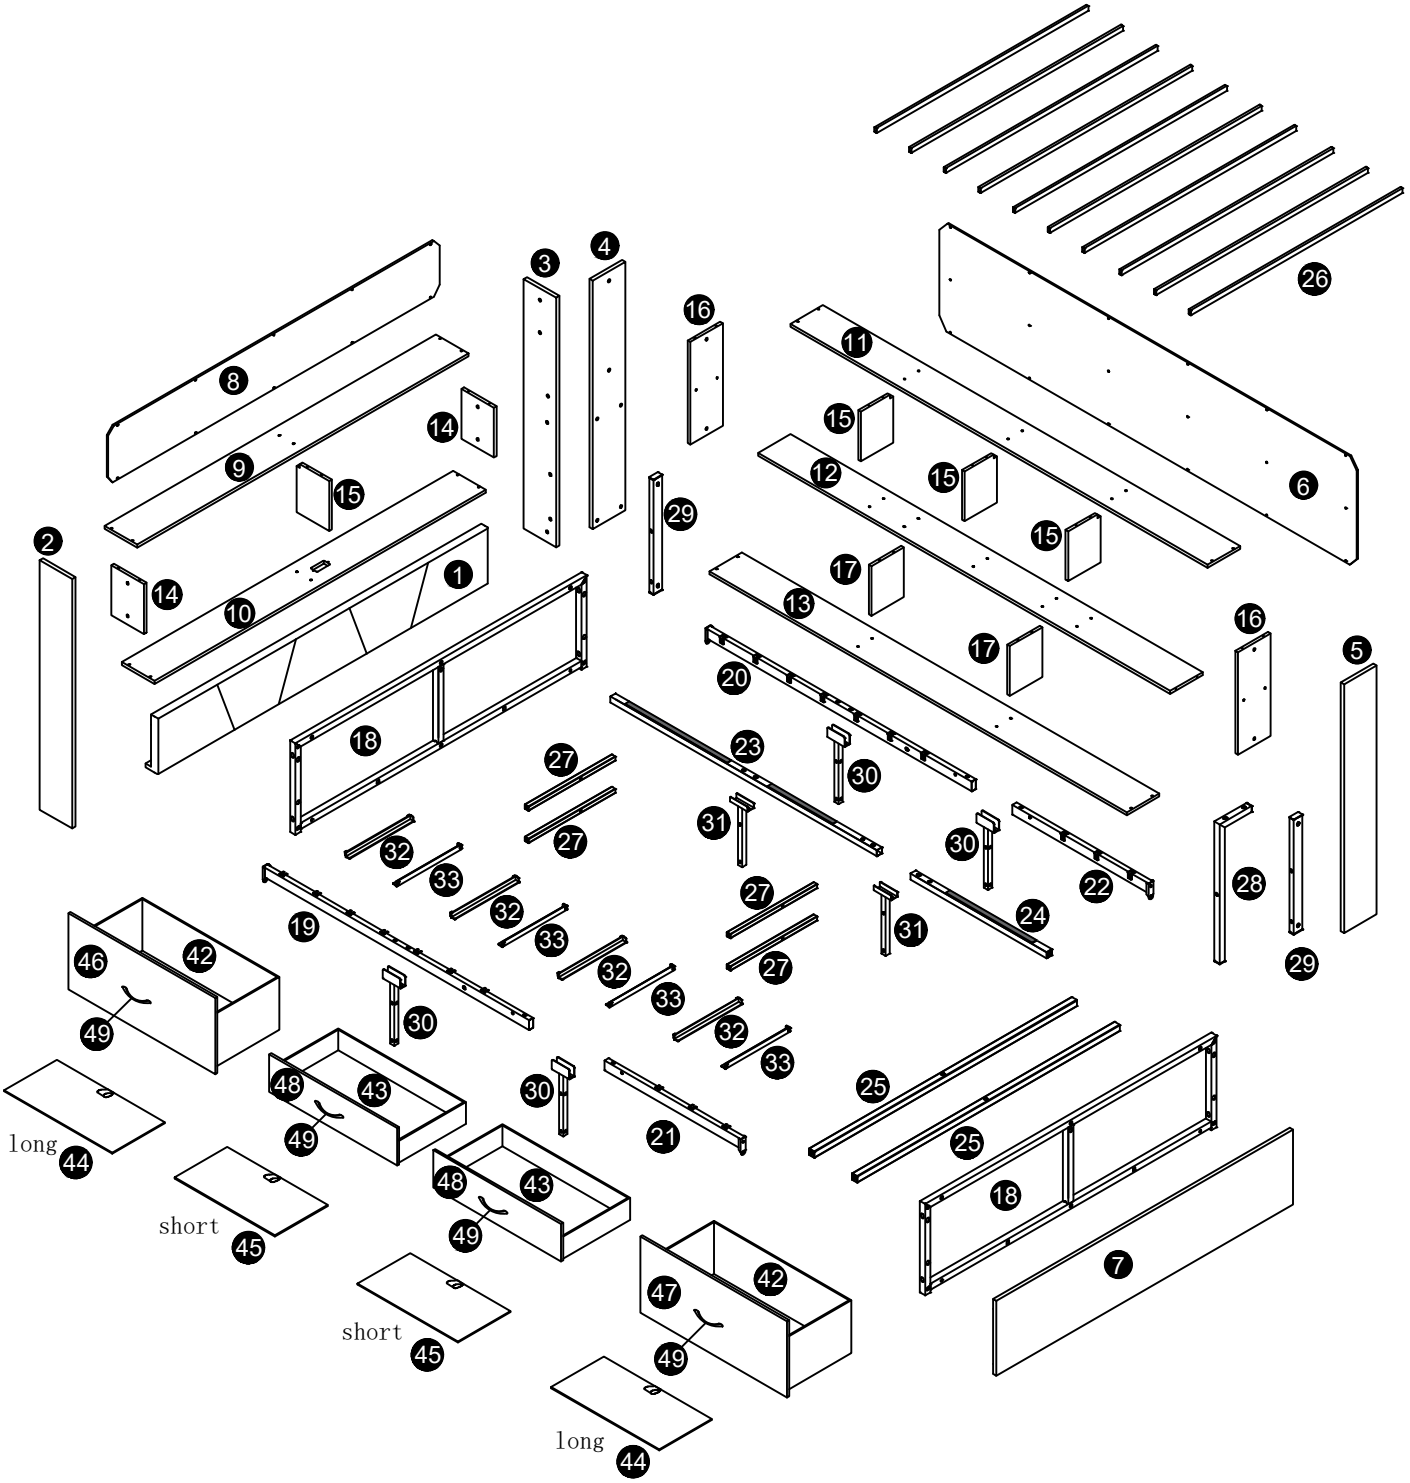













Part list Box-A

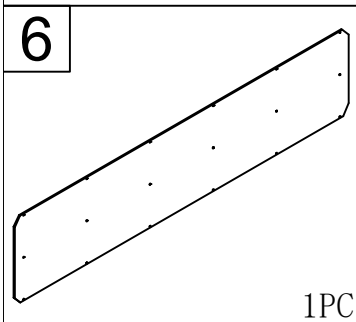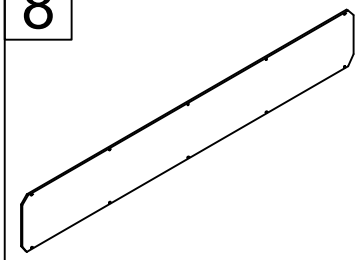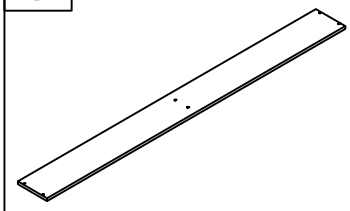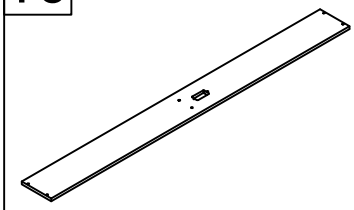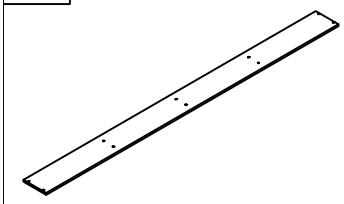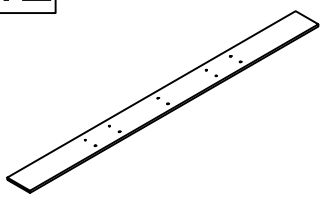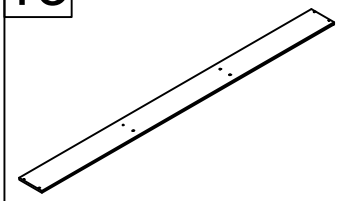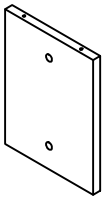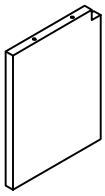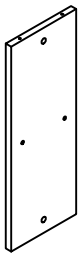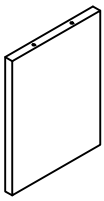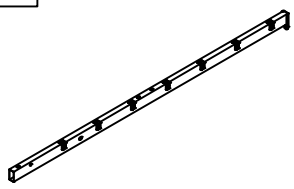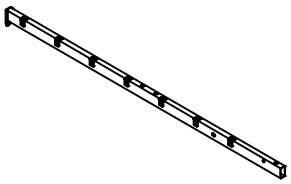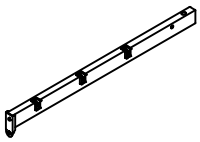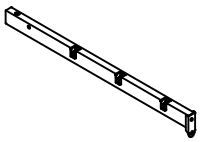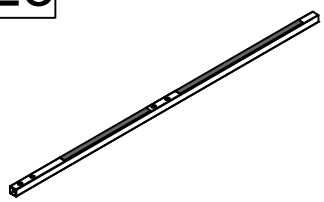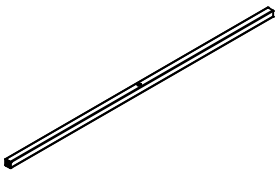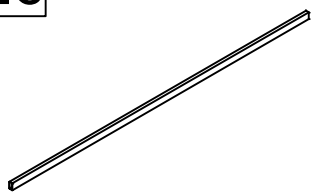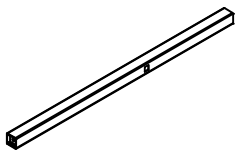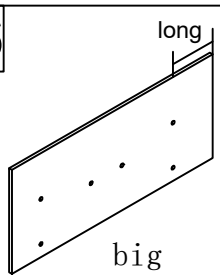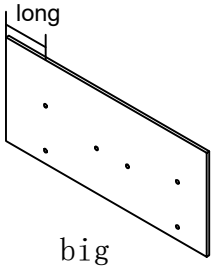6  1PC	8  1PC	9  1PC	10  1PC
11  1PC	12  1PC	13  1PC	14  2PCS
15  4PCS	16  2PCS	17  2PCS	19  1PC
20  1PC	21  1PC	22  1PC	23  1PC
24  1PC	25  2PCS	26  10PCS	27  4PCS
28  1PC	29  2PCS	46  1PC	47  1PC










Part list Box-A

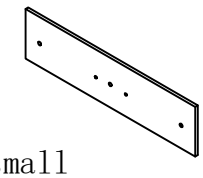48  small 2PCS			







Part list Box-B

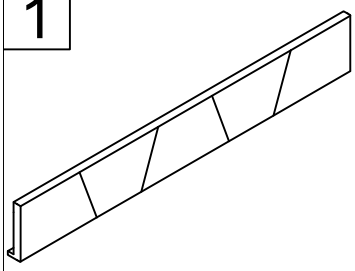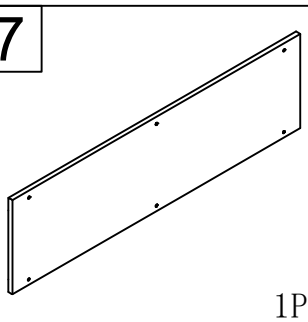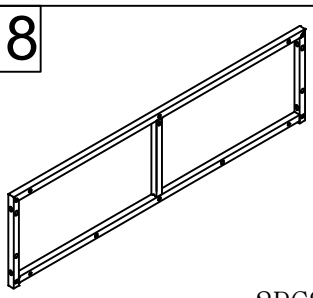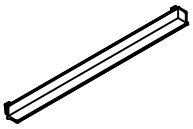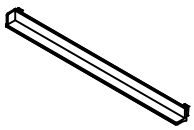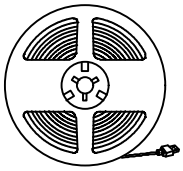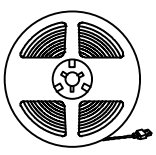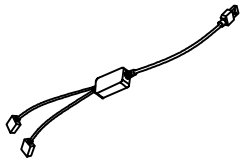
1  1PC	2  1PC	3  1PC	4  Double-sided perforation 1PC
5  1PC	7  1PC	18  2PCS	30  4PCS
31  2PCS	32  4PCS	33  4PCS	34  1PC
35  long 1PC	36  short 1PC	37  1PC	38  1PC

Part list Box-B

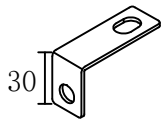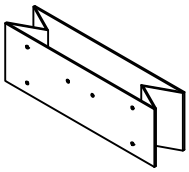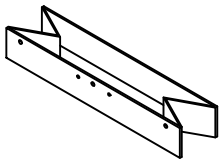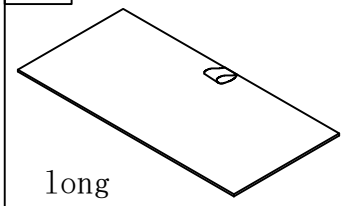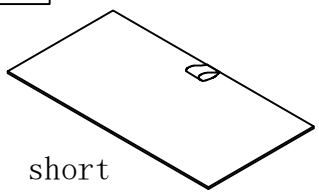
39  8PCS	40  2PCS	41  4PCS	42  614*300*205mm 2PCS
43  571*300*85mm 2PCS	44  long 2PCS	45  short 2PCS	49  4PCS
P  M4*20mm 8PCS	Q  2PCS	spare parts  2PCS	


Hardware list Box-B

A  M8*50mm 9PCS	B  M8*35mm 29PCS	C  M8*25mm 9PCS	D  M8*15mm 16PCS	E  M8*10mm 4PCS
F  M6*35mm 20PCS	G  M6*12mm 15PCS	H  M5*30mm 74PCS	I  M4*12mm 3PCS	J  M8 4PCS
K  M8 1PC	L  M5*65MM 1PC	M  M4*65MM 1PC	N  M3*65MM 1PC	O  ⌀20*8*2.0 2PCS

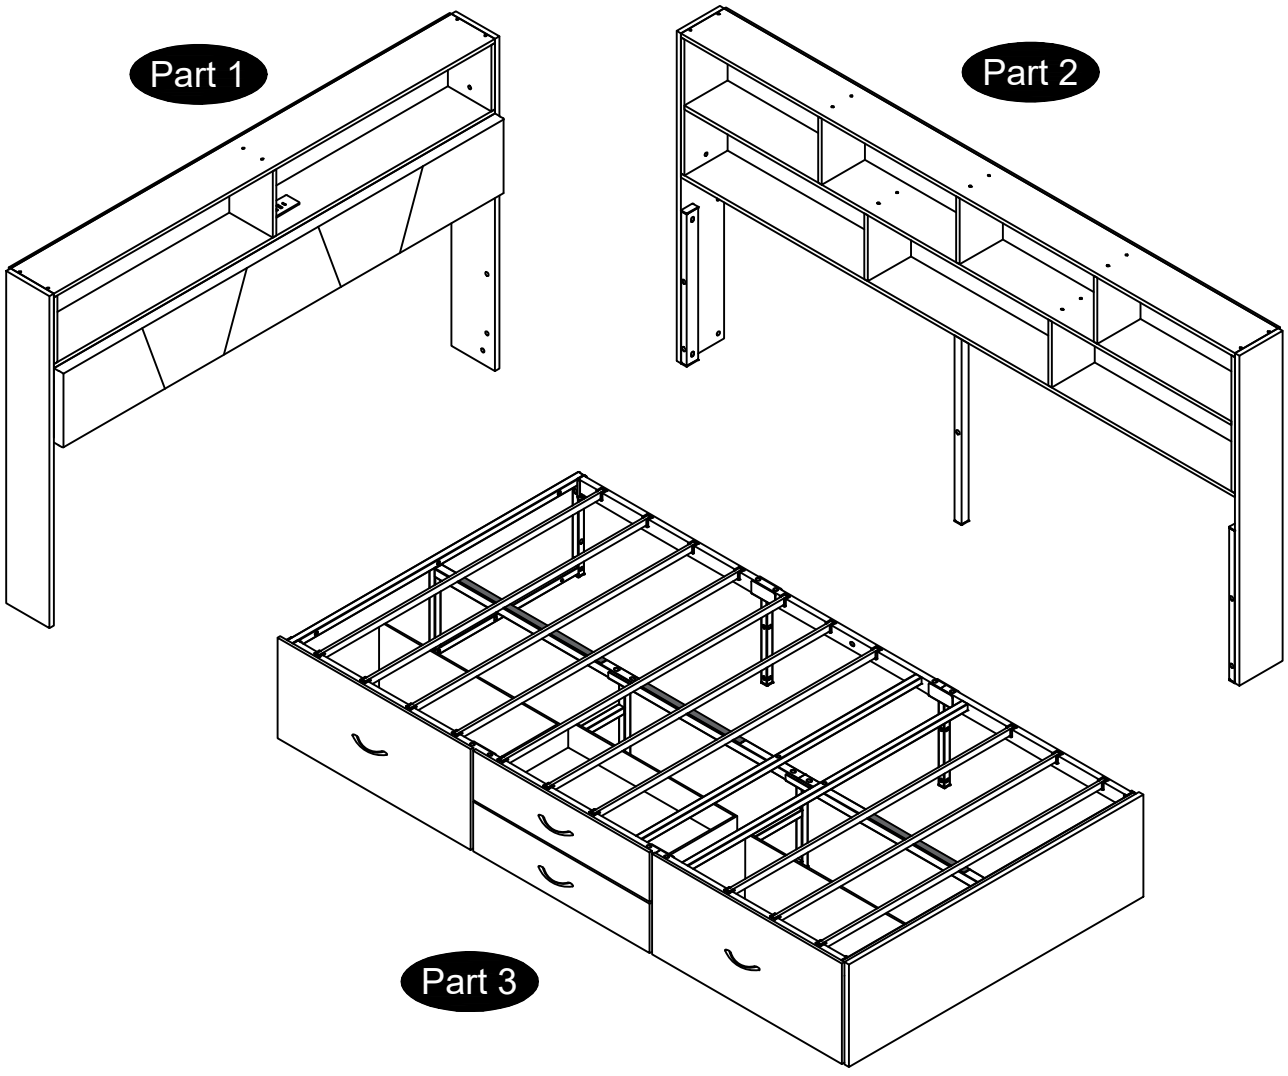
Part 1
Part 2
Part 3

Part 1 Installation

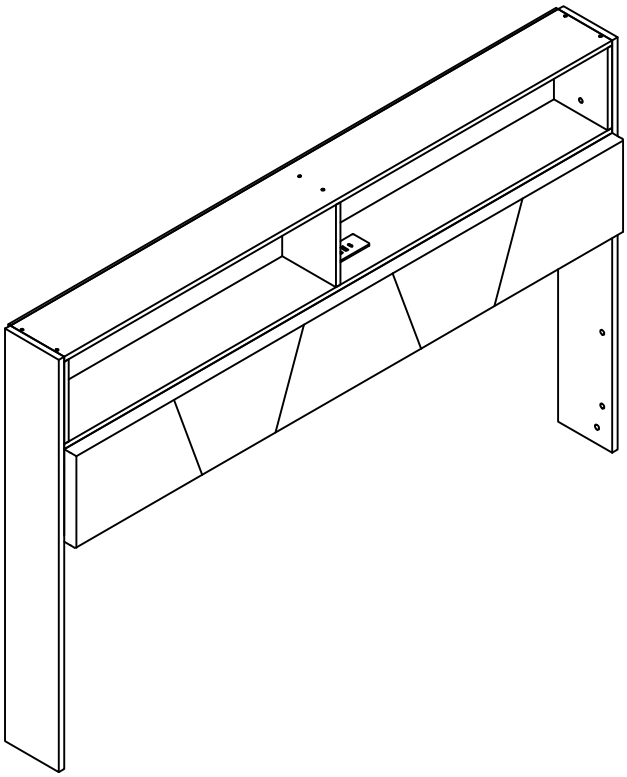

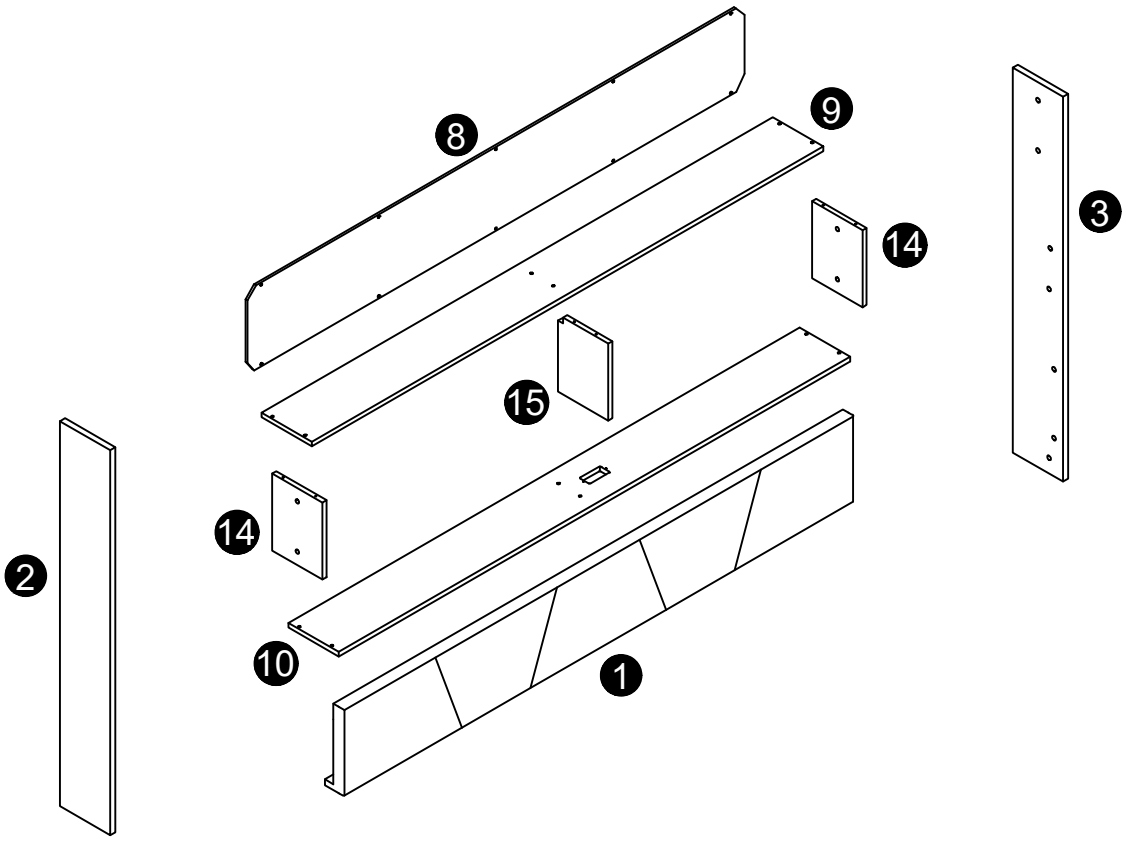


Step1

I		M4*12mm	2pcs
L		M5*65	1pc


Three holes on the same line facing downwards and forwards.

Step2

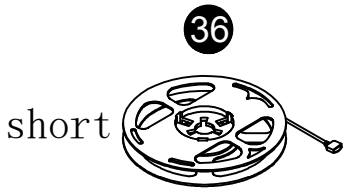


Unfold the light strip and secure it.


Lamp strip 36 is glued onto board 9.

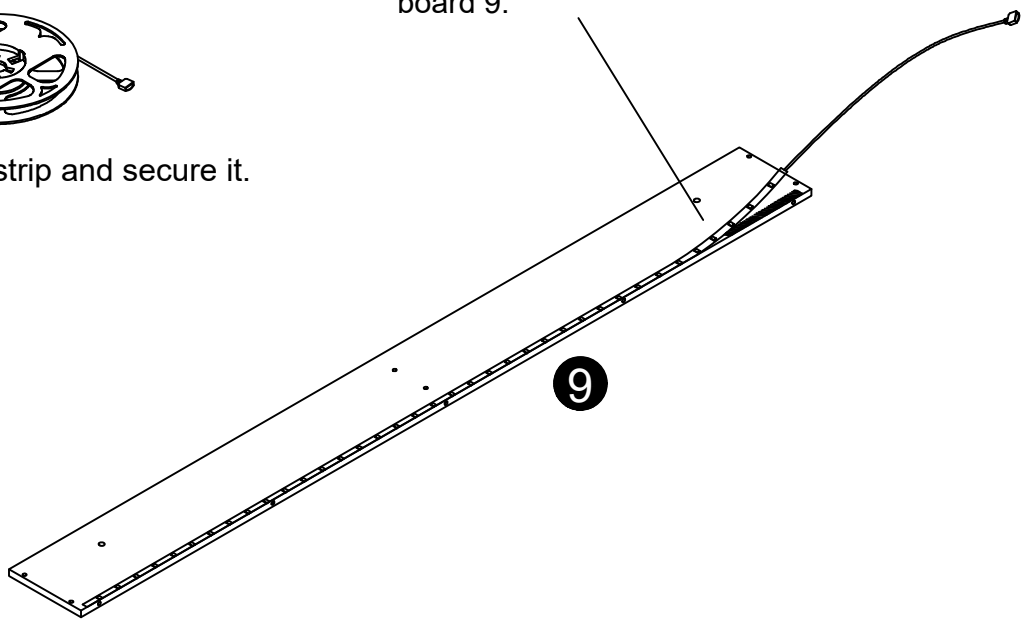

Step3			
H		M5x30mm	6pcs
N		M3*65mm	1pc

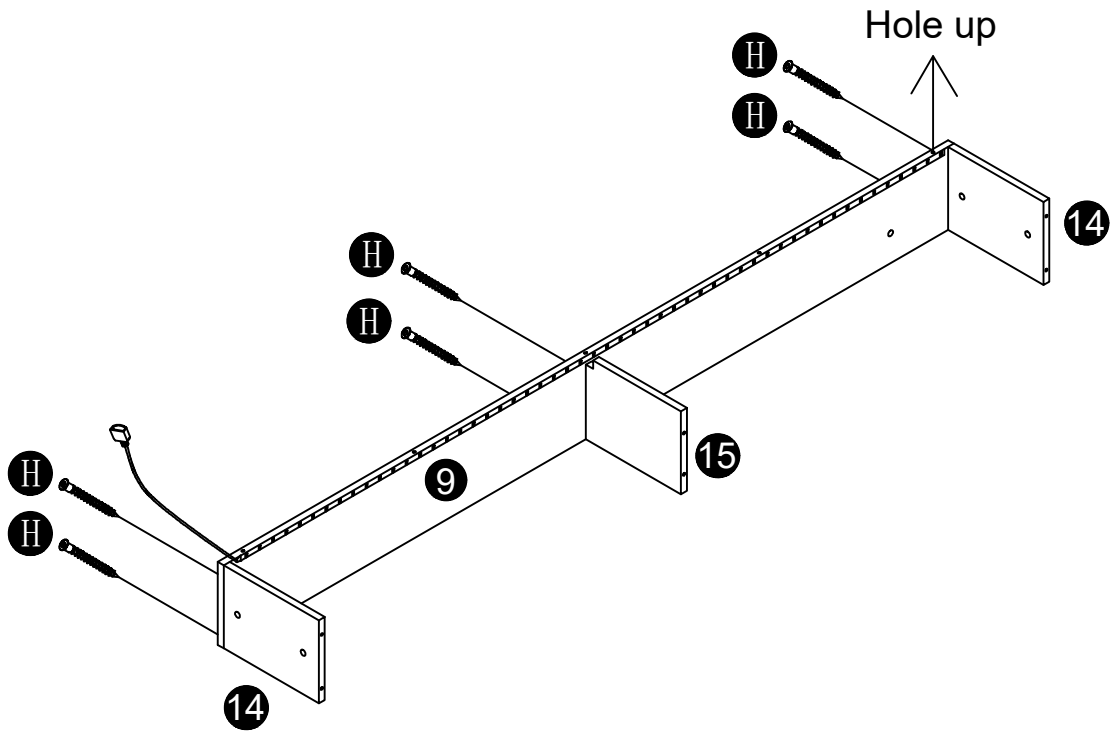


Step4			
H		M5x30mm	6pcs
N		M3*65mm	1pc

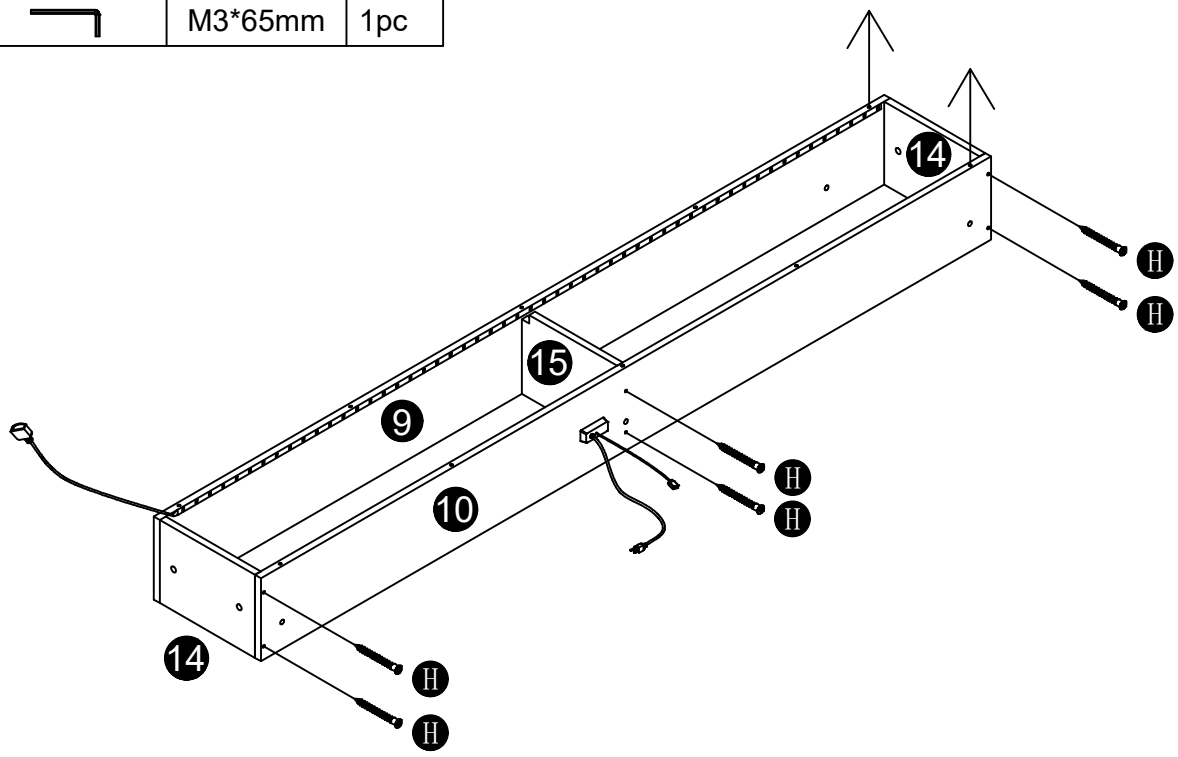

Step5

H		M5x30mm	10pcs
N		M3*65mm	1pc

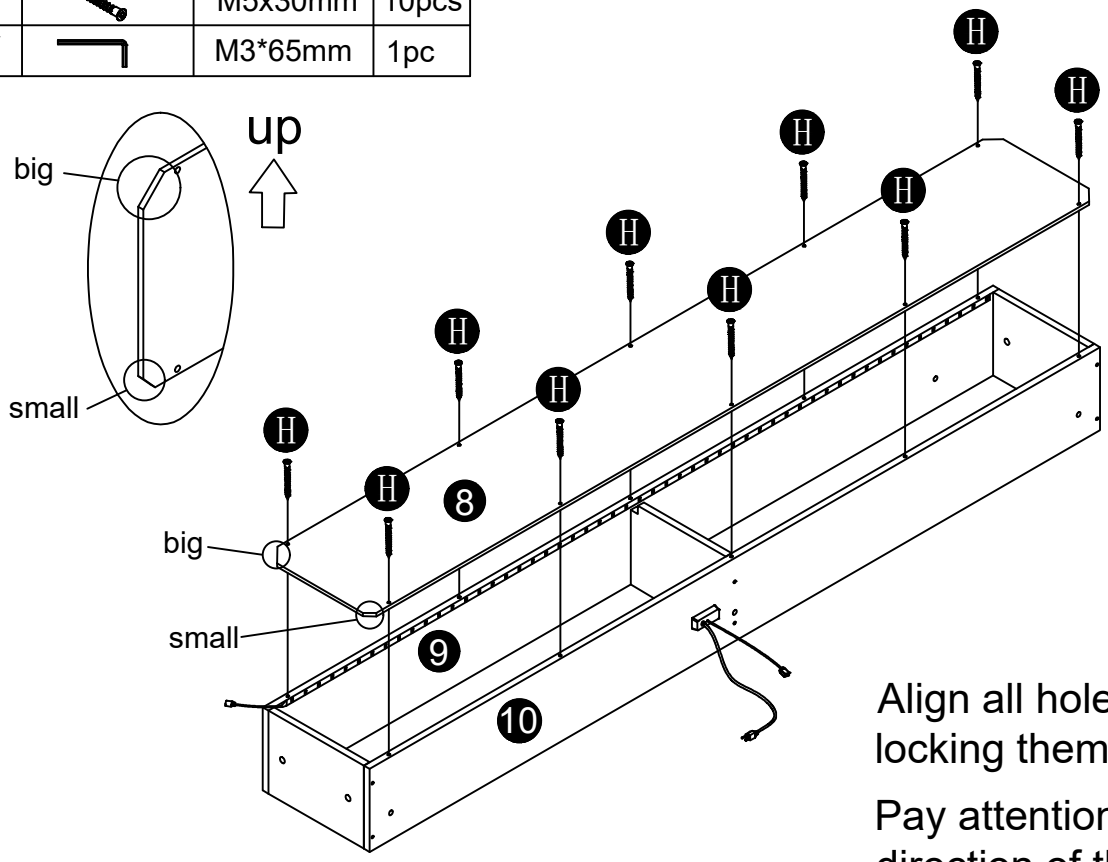


Align all holes before locking them together.

Pay attention to the direction of the board.


Step6

C		M8x25mm	4pcs
L		M5*65mm	1pc

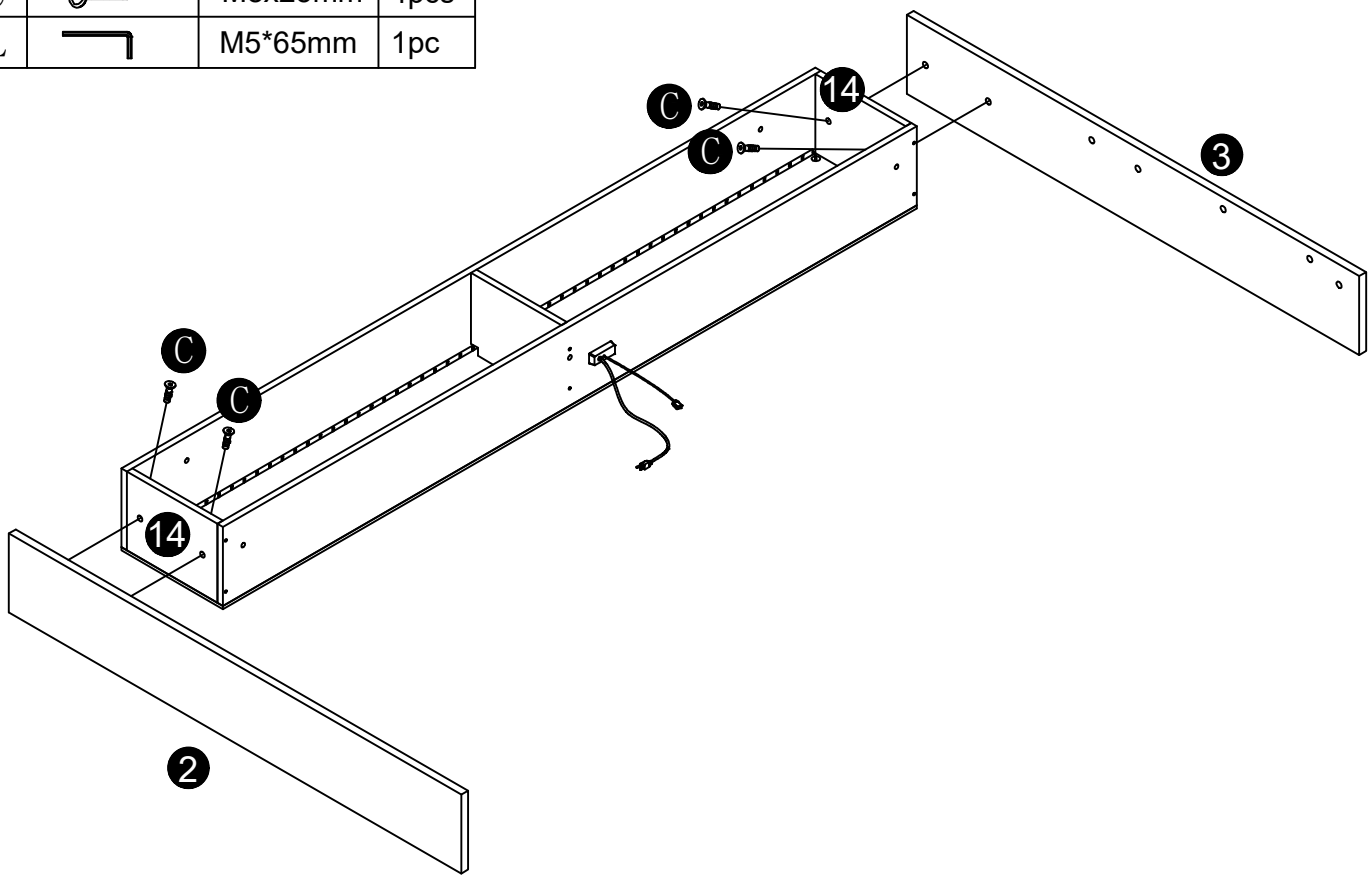


Step7

D		M8x15mm	5pcs
L		M5*65mm	1pc

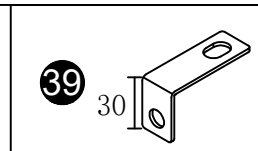

Tighten 80%

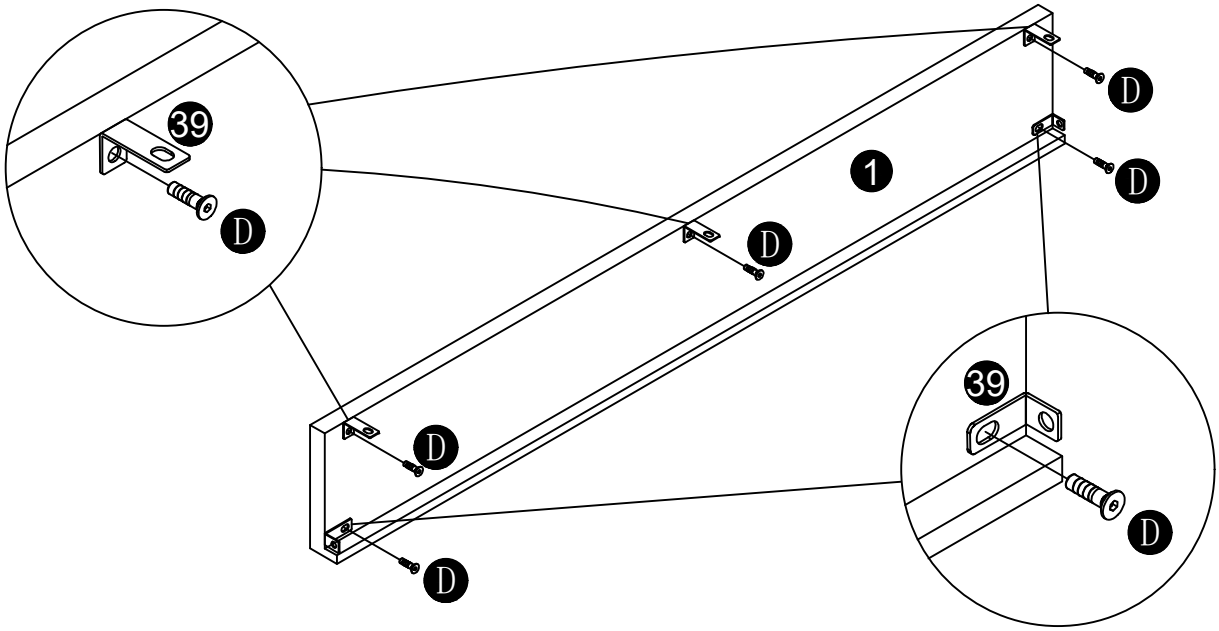

Step8

D		M8x15mm	2pcs
L		M5*65mm	1pc

Tighten 100%


Step9


E		M8x10mm	3pcs
L		M5*65mm	1pc

Tighten 100%




Part 2 Installation

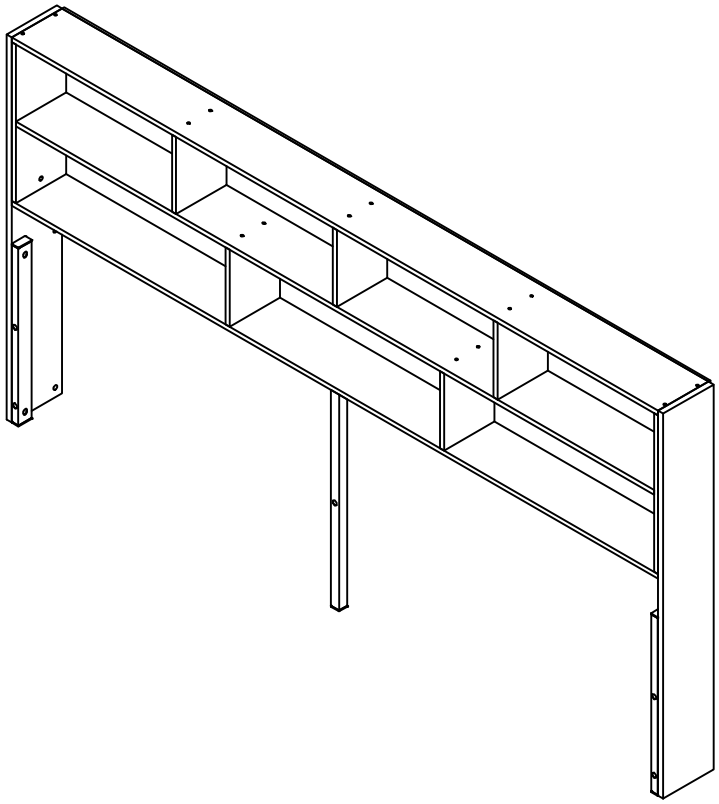

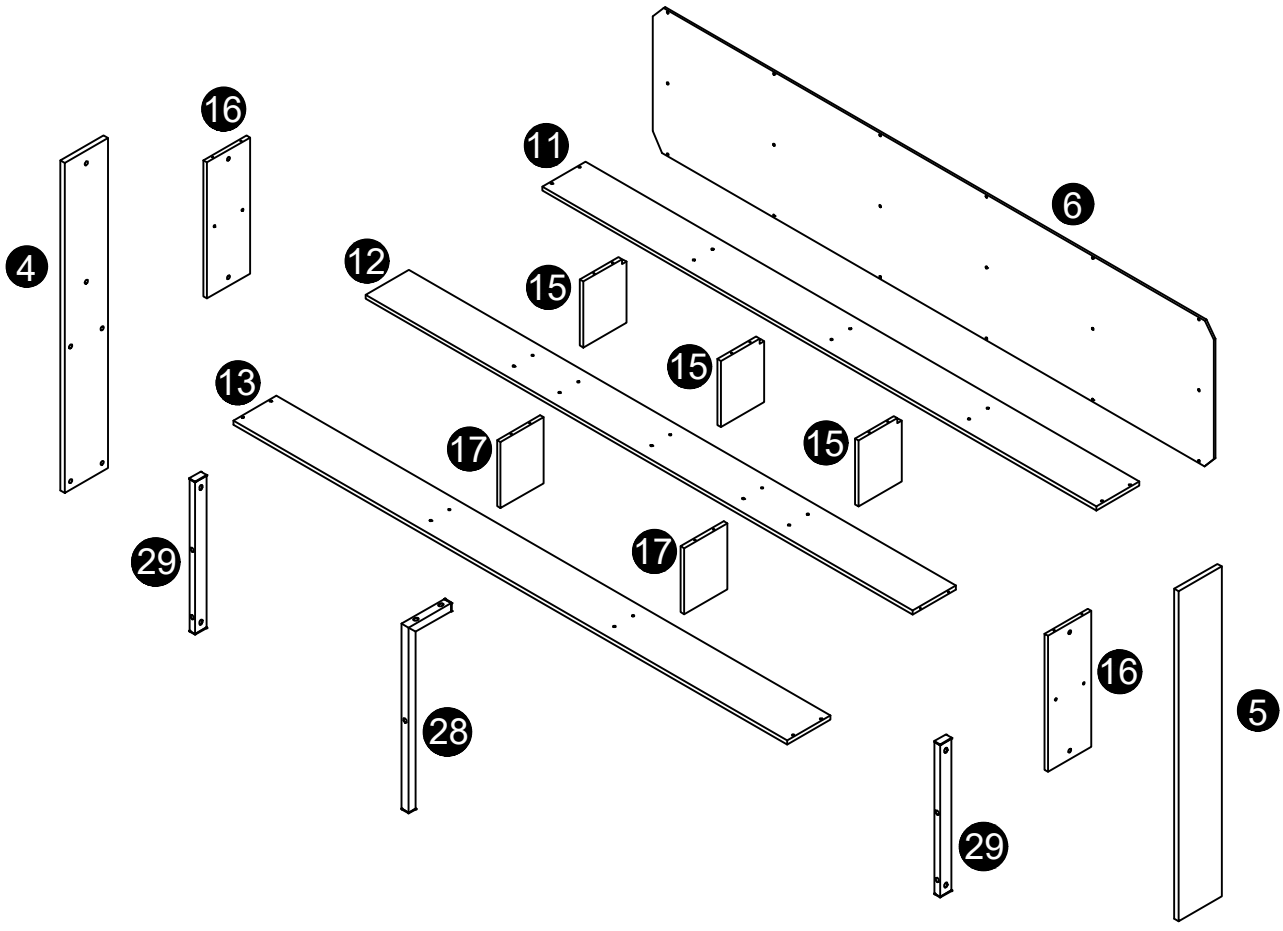


Step10

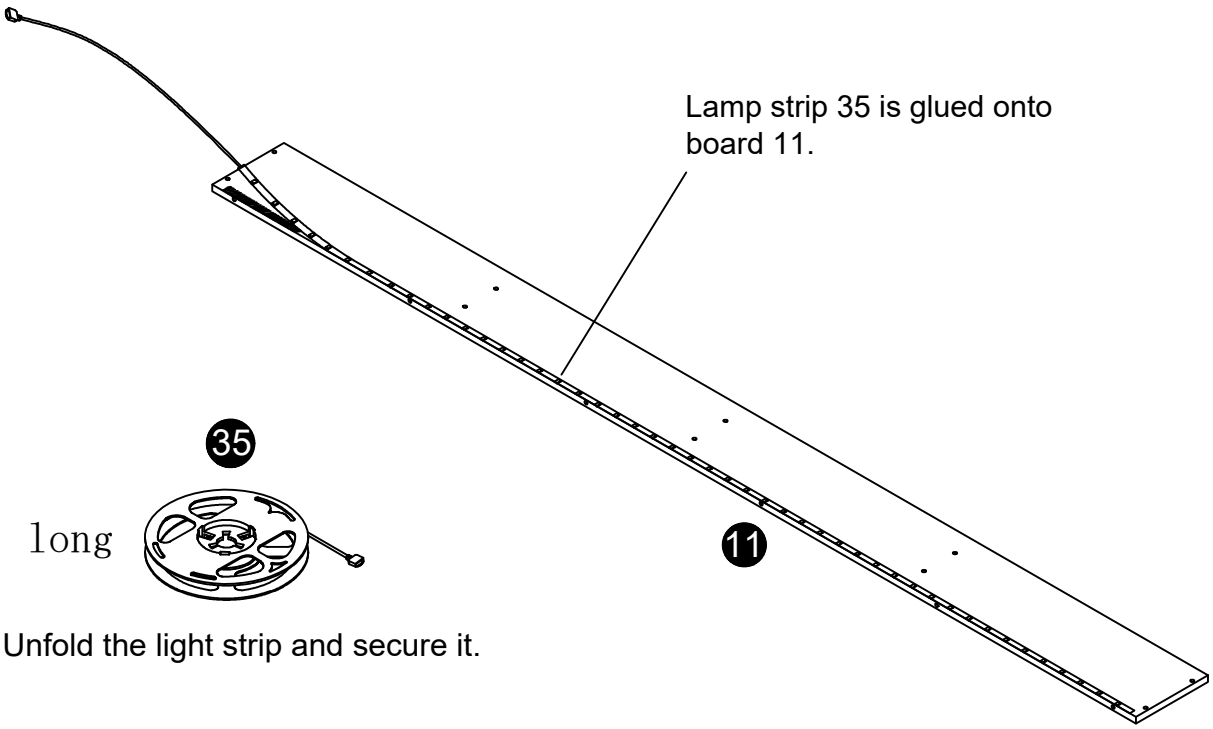


Unfold the light strip and secure it.

Step11


H		M5x30mm	4pcs
N		M3*65mm	1pc

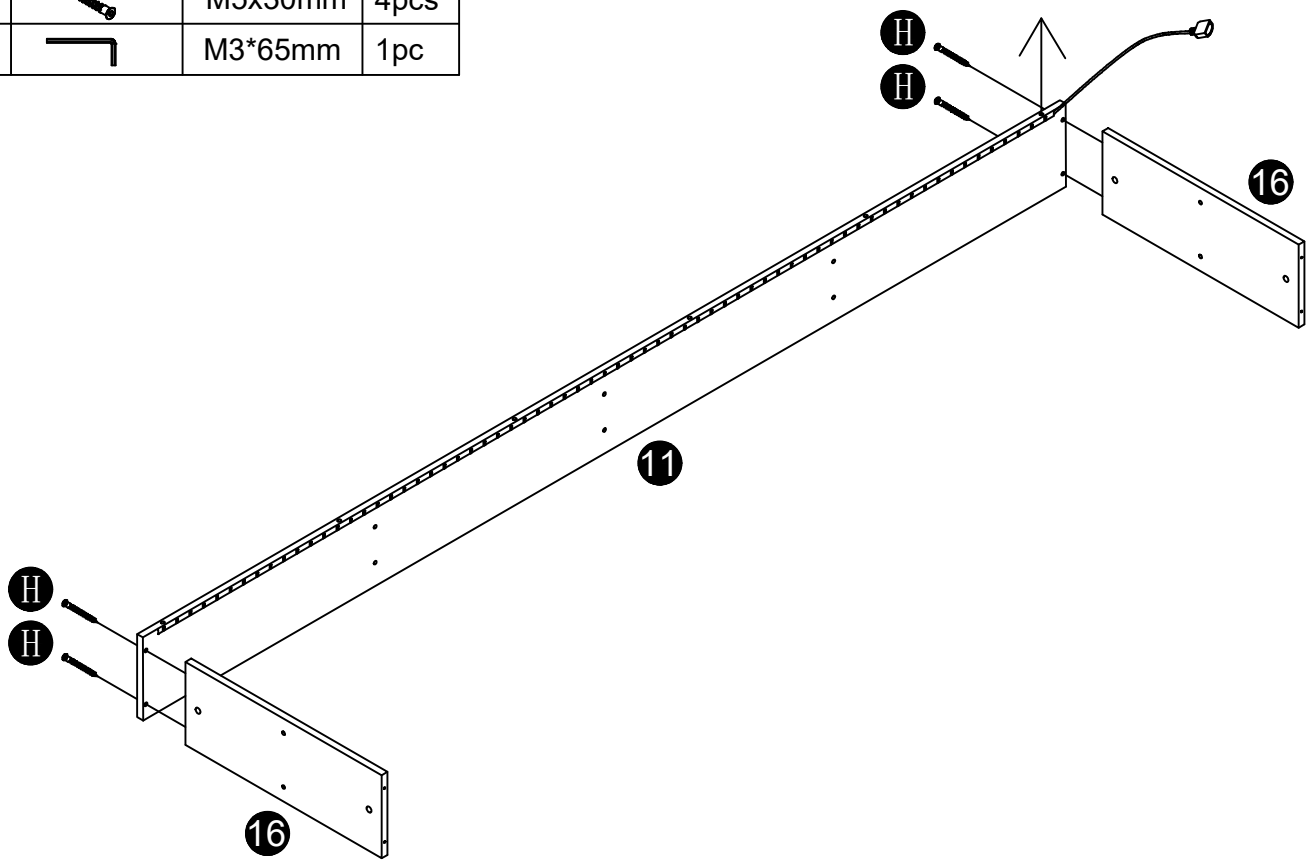

Step12			
H		M5x30mm	6pcs
N		M3*65mm	1pc

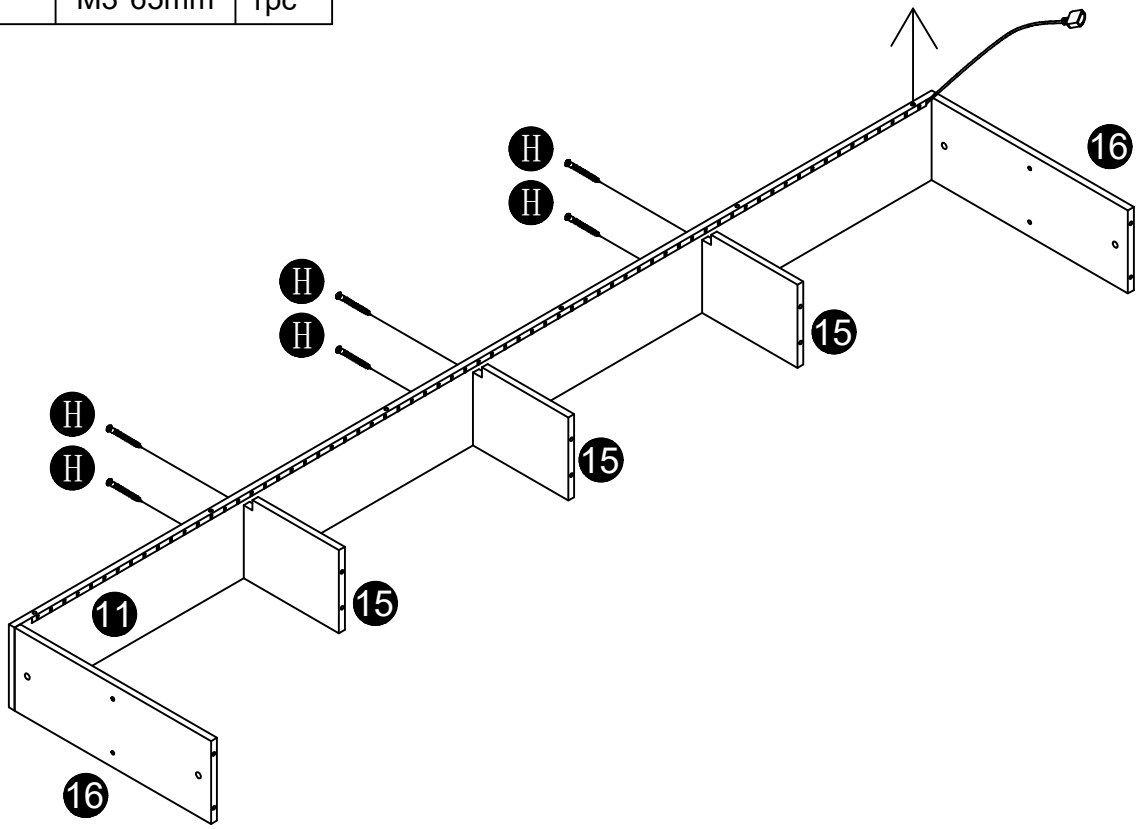


Step13			
H		M5x30mm	10pcs
N		M3*65mm	1pc

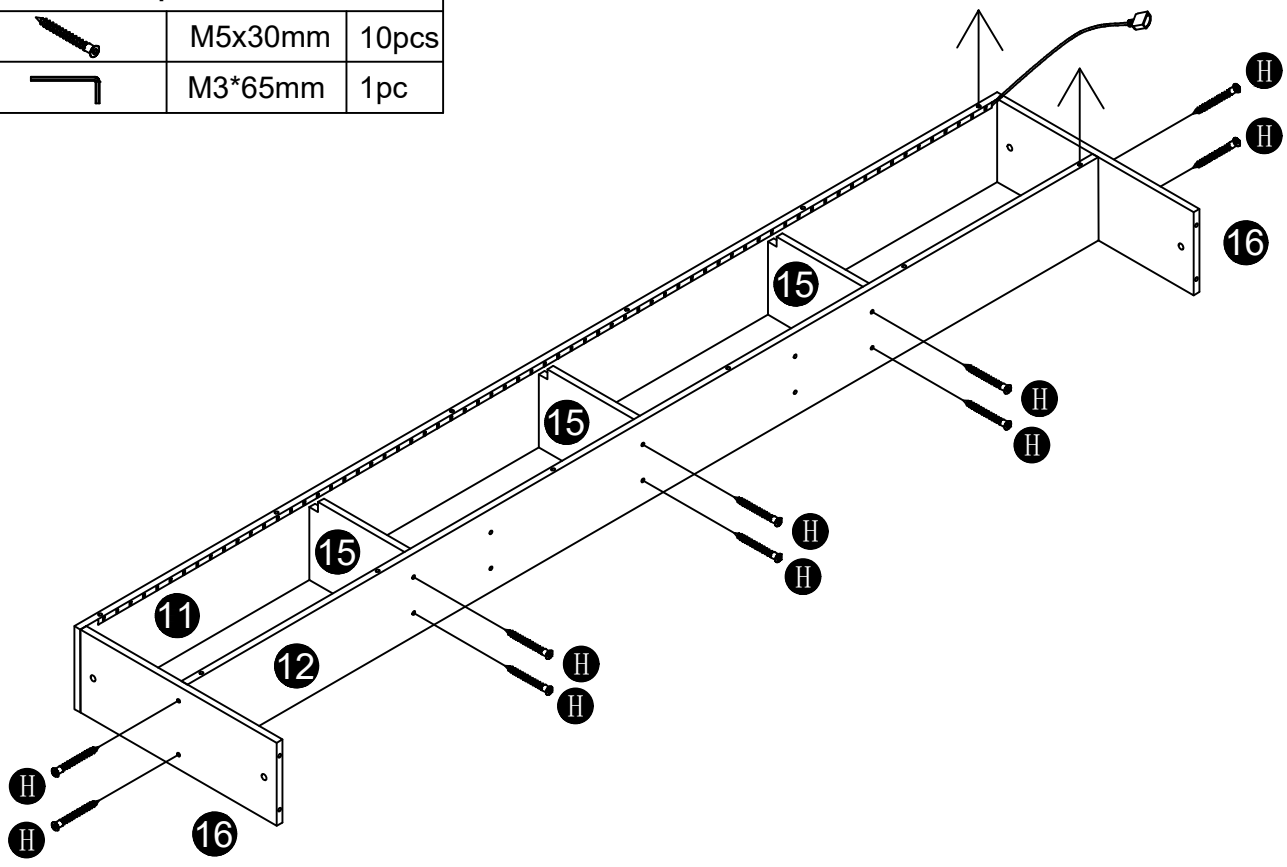


Step14

H		M5x30mm	4pcs
N		M3*65mm	1pc

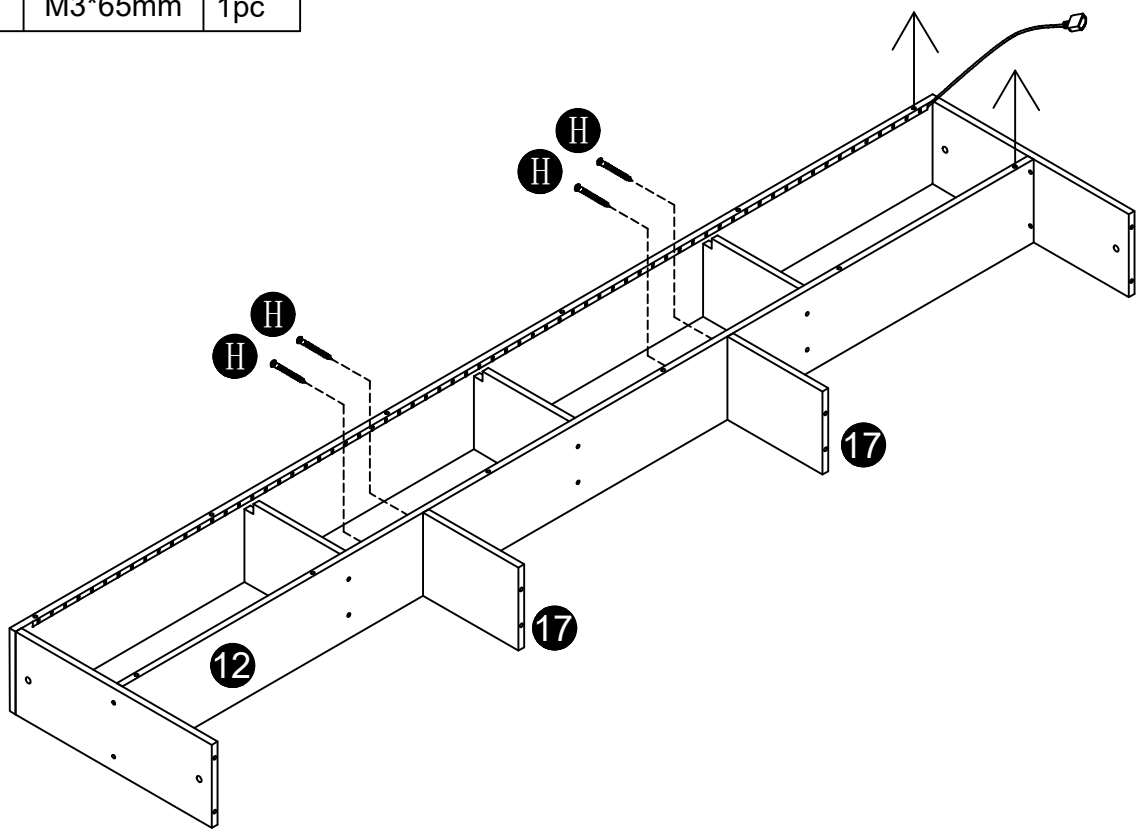


Step15

H		M5x30mm	8pcs
N		M3*65mm	1pc

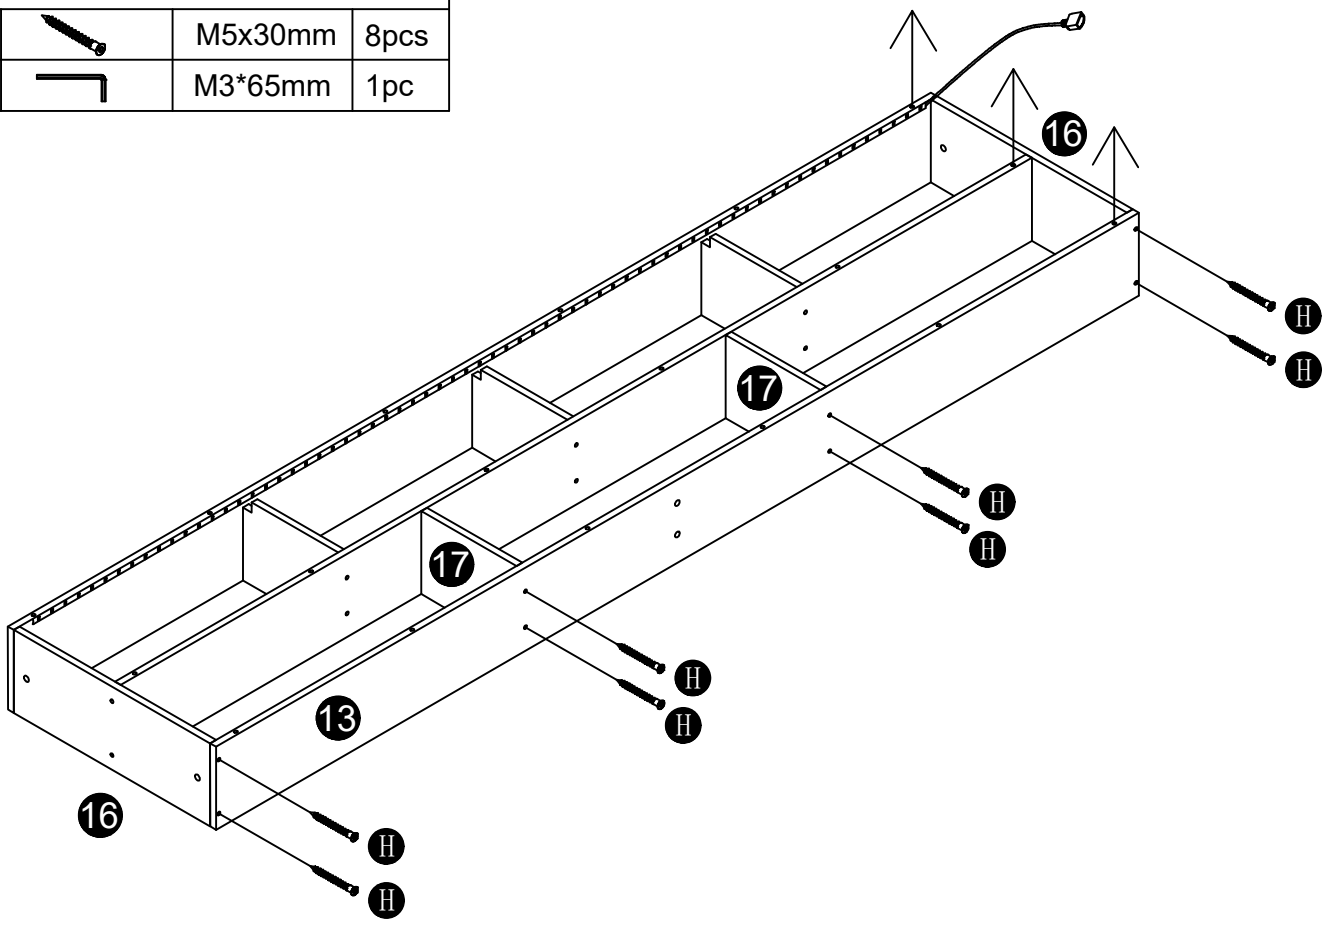

Step16

H		M5x30mm	18pcs
N		M3*65mm	1pc

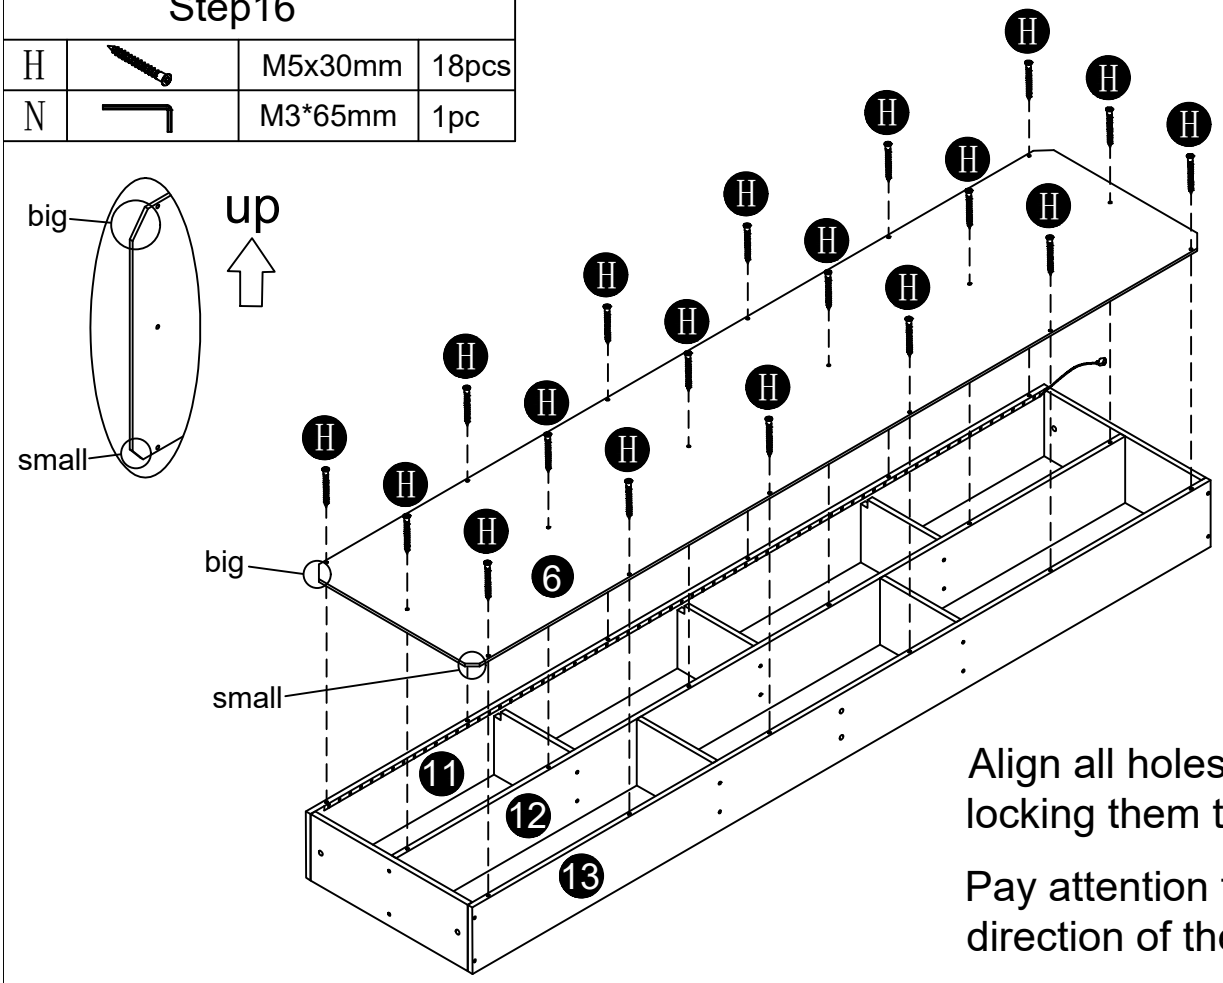


Align all holes before locking them together.

Pay attention to the direction of the board.

Step17

C		M8x25mm	4pcs
L		M5*65mm	1pc

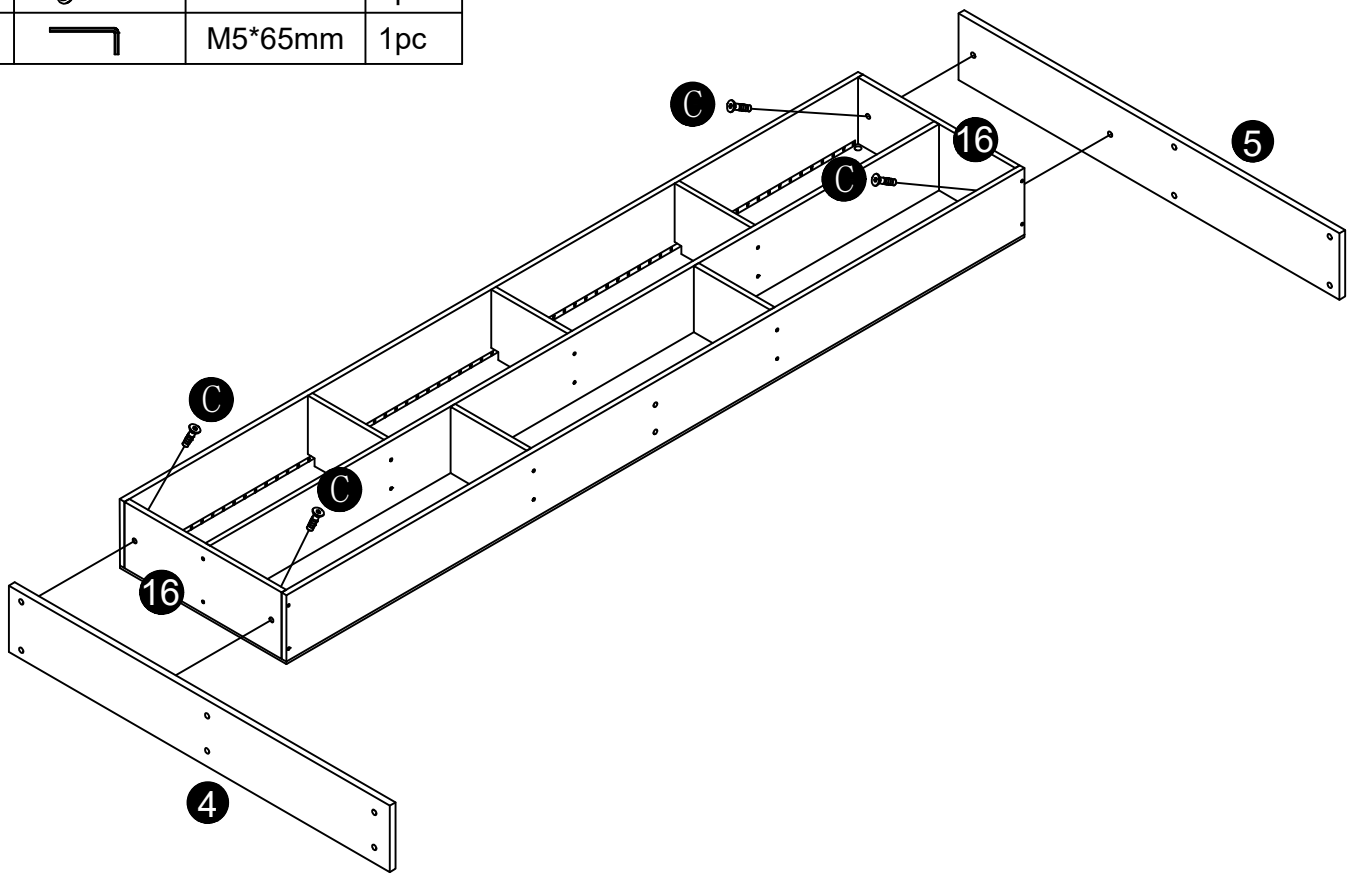


Step18


B		M8x35mm	2pcs
L		M5*65mm	1pc
0		⌀20*8*2.0	2pcs


Step19

B		M8x35mm	4pcs
L		M5*65mm	1pc

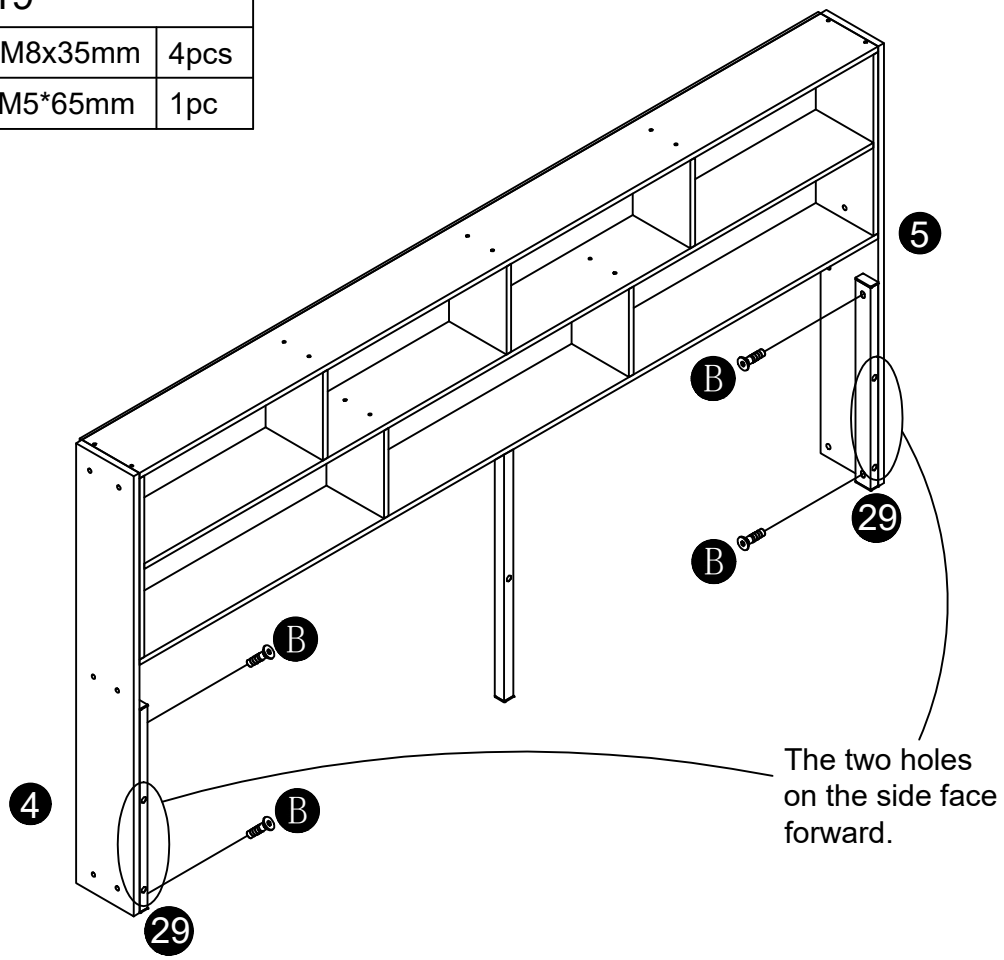


Installation

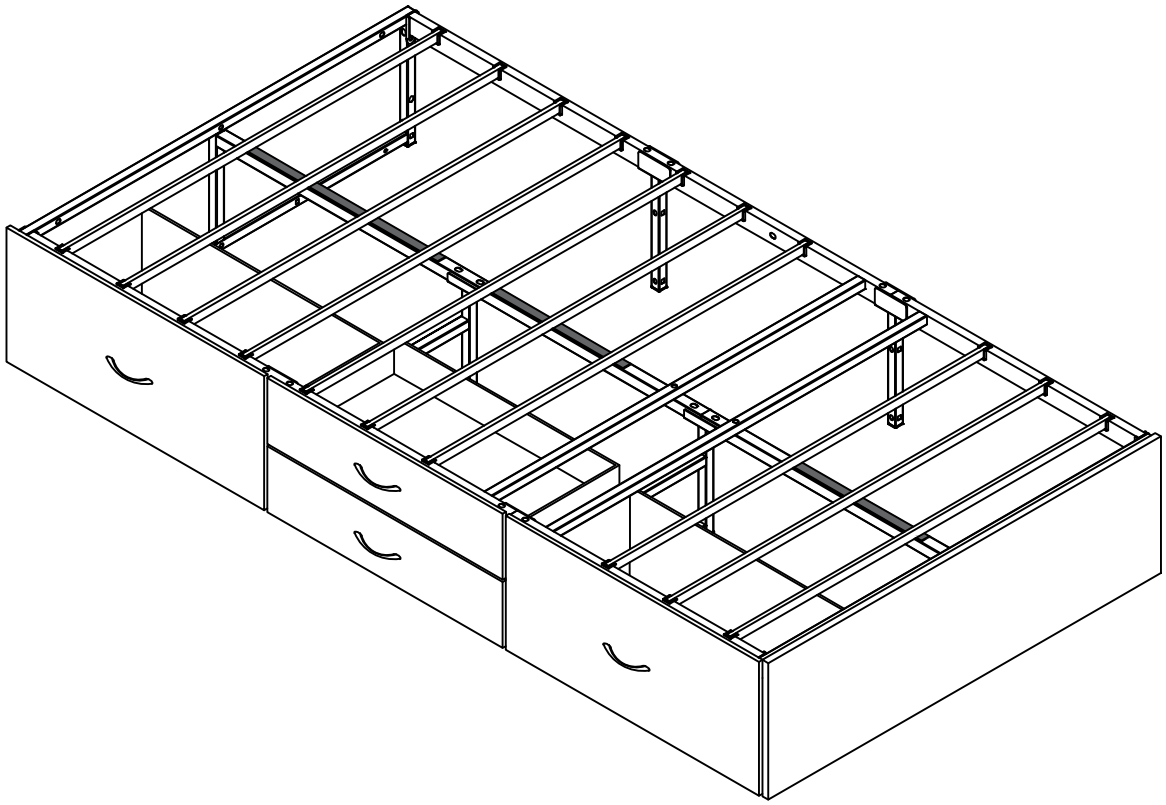

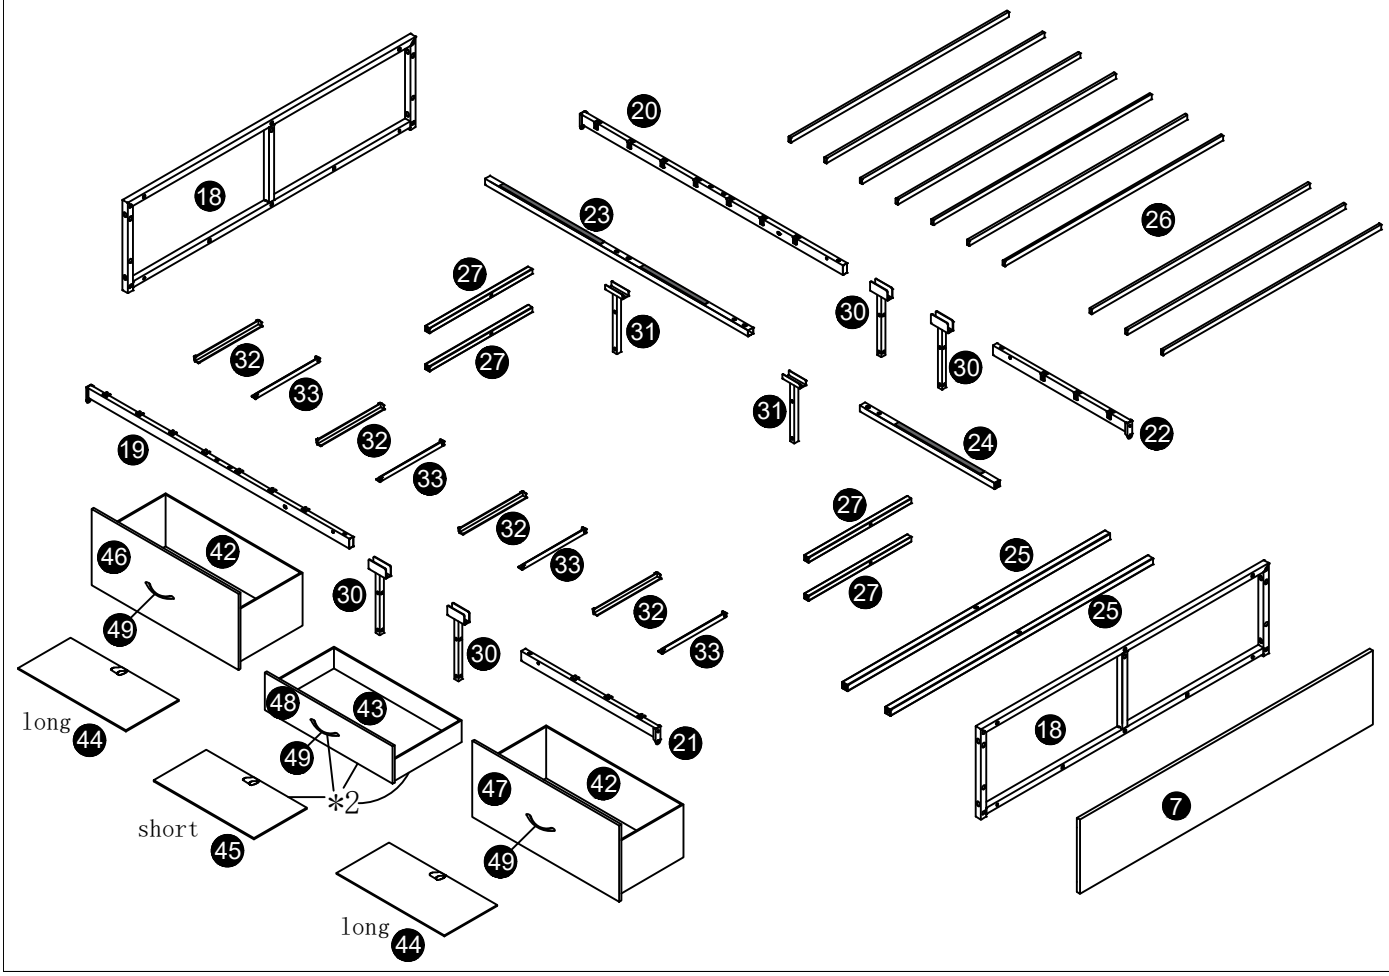


Step20			
A		M8x50mm	8pcs
L		M5*65mm	1pc

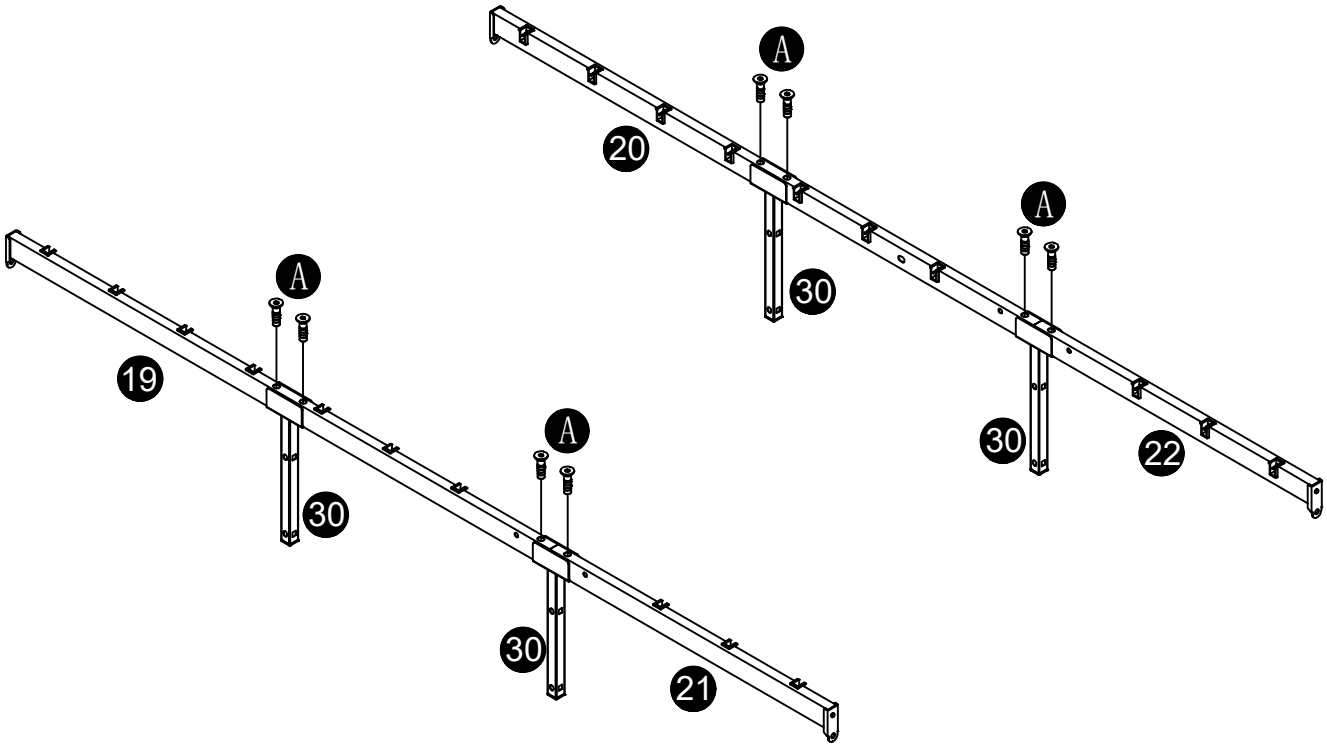


Step21			
B		M8x35mm	4pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc

Step22			
B		M8x35mm	4pcs
L		M5*65mm	1pc

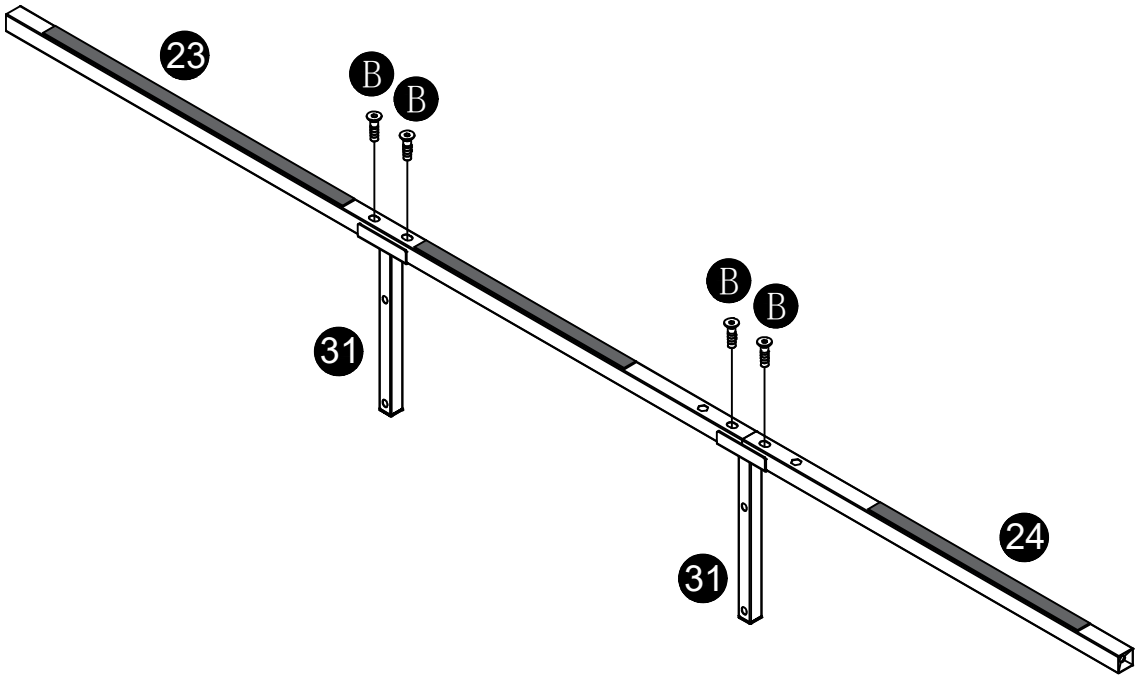


Step23			
B		M8x35mm	1pc
L		M5*65mm	1pc

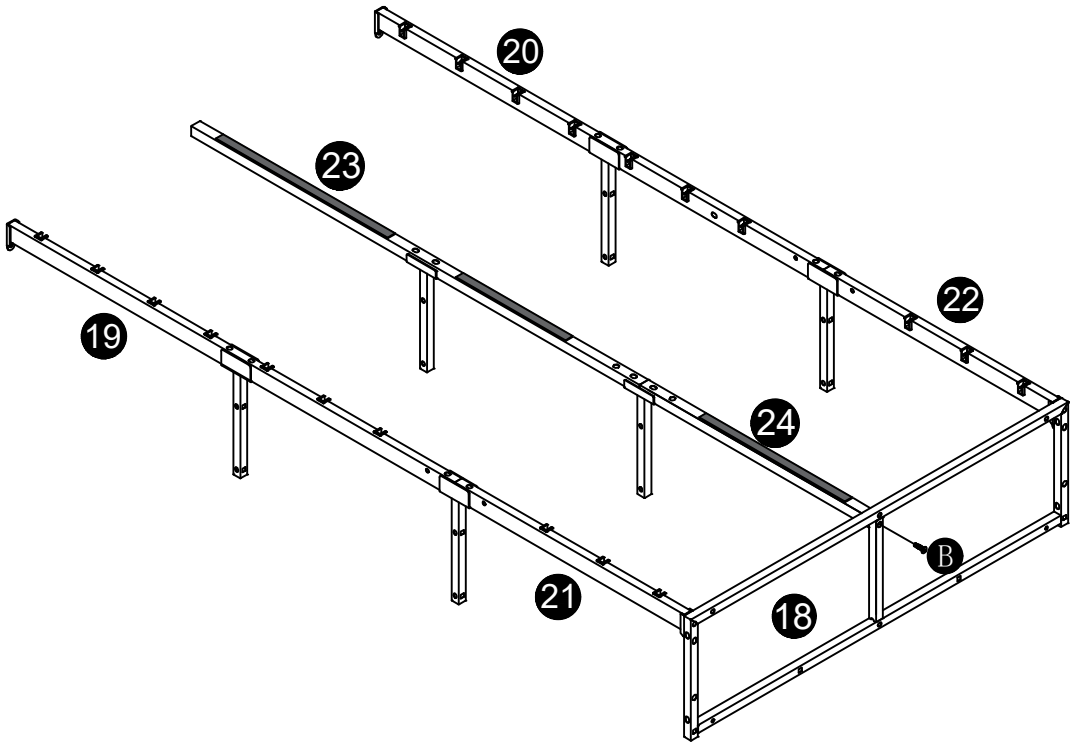


Step24


F		M6x35mm	6pcs
M		M4*65mm	1pc

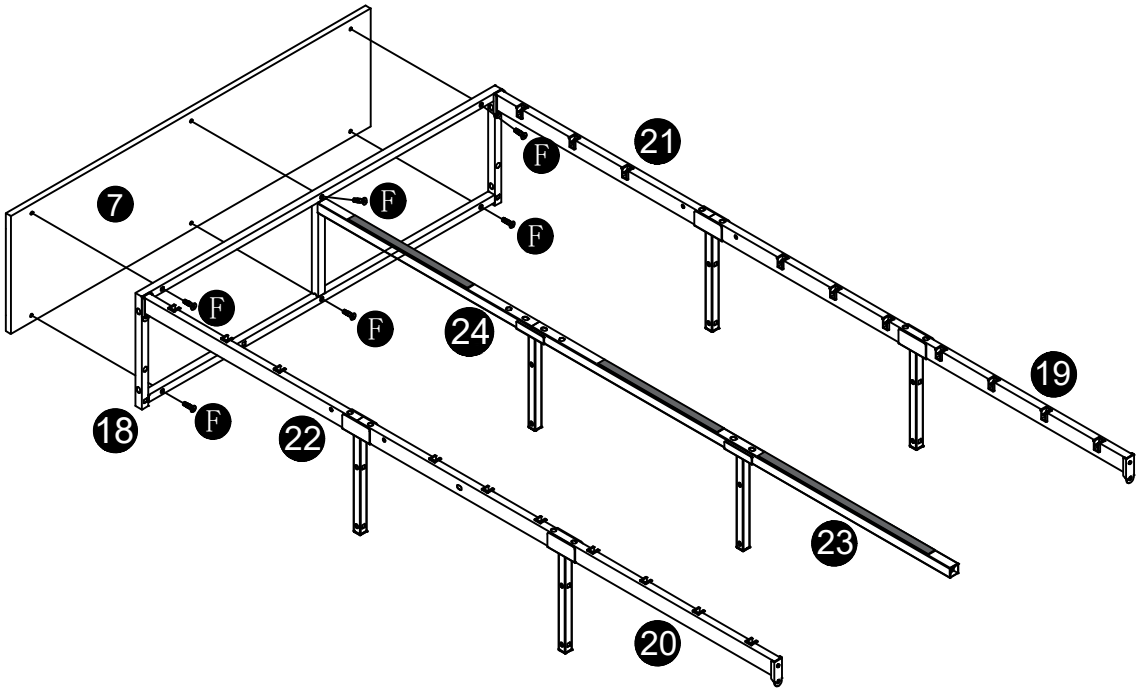

Step25


F		M6x35mm	8pcs
M		M4*65mm	1pc

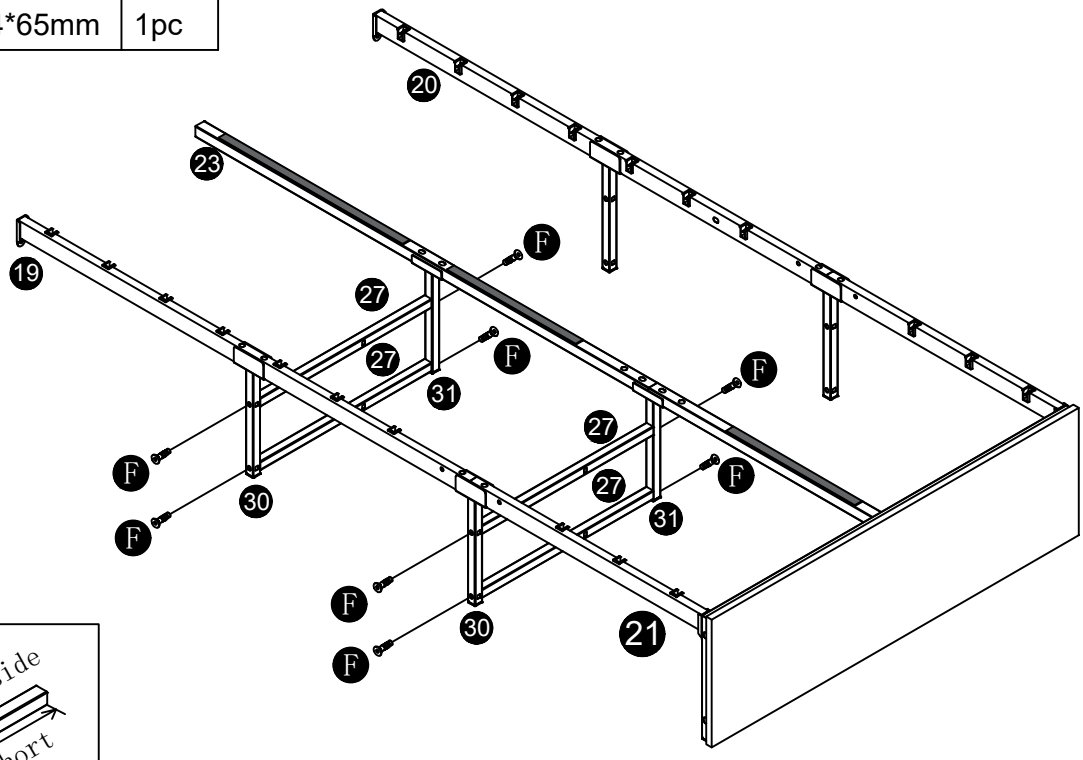

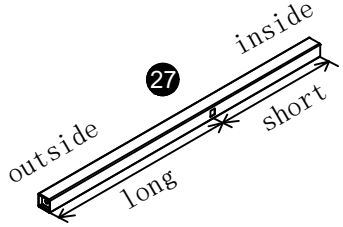


Please pay attention
to the direction.


Step26

B		M8x35mm	5pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc


Tighten 80%



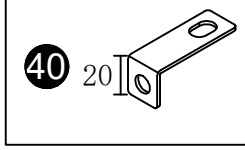


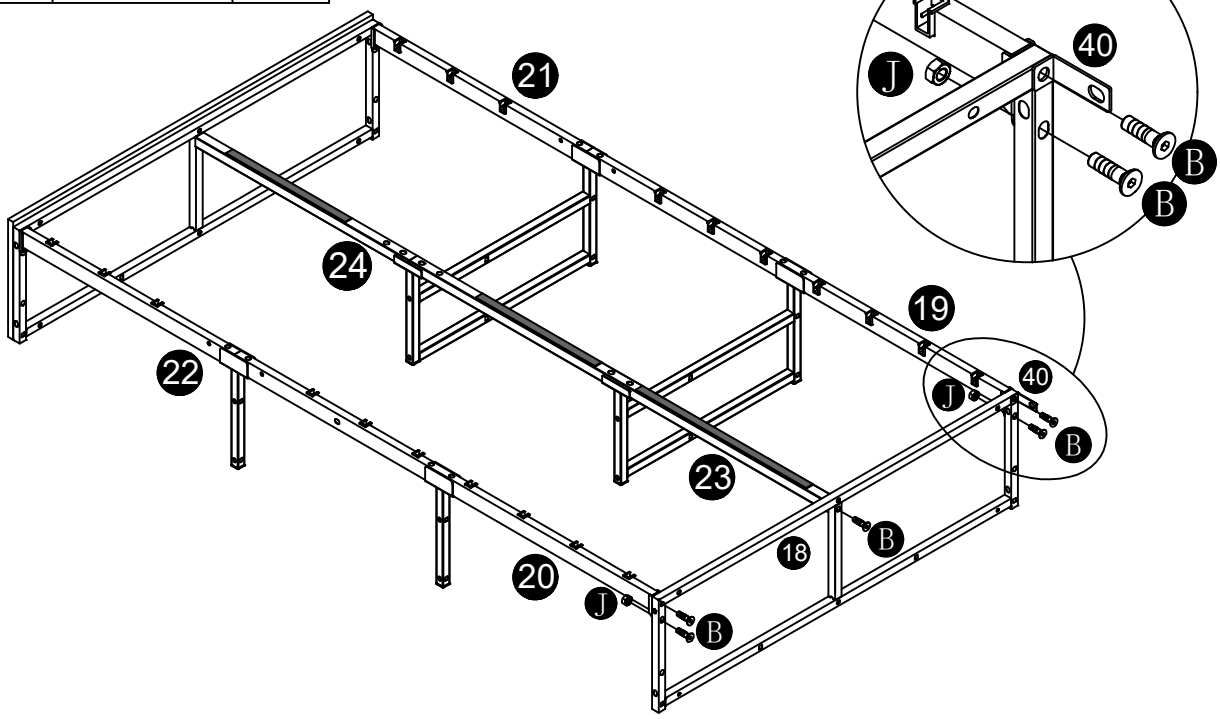

Step27

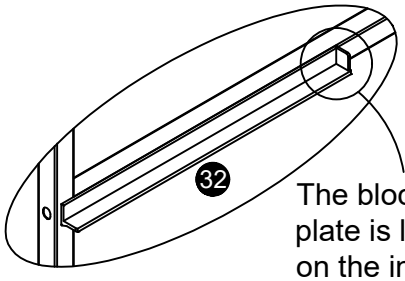


The blocking plate is located on the inner side.

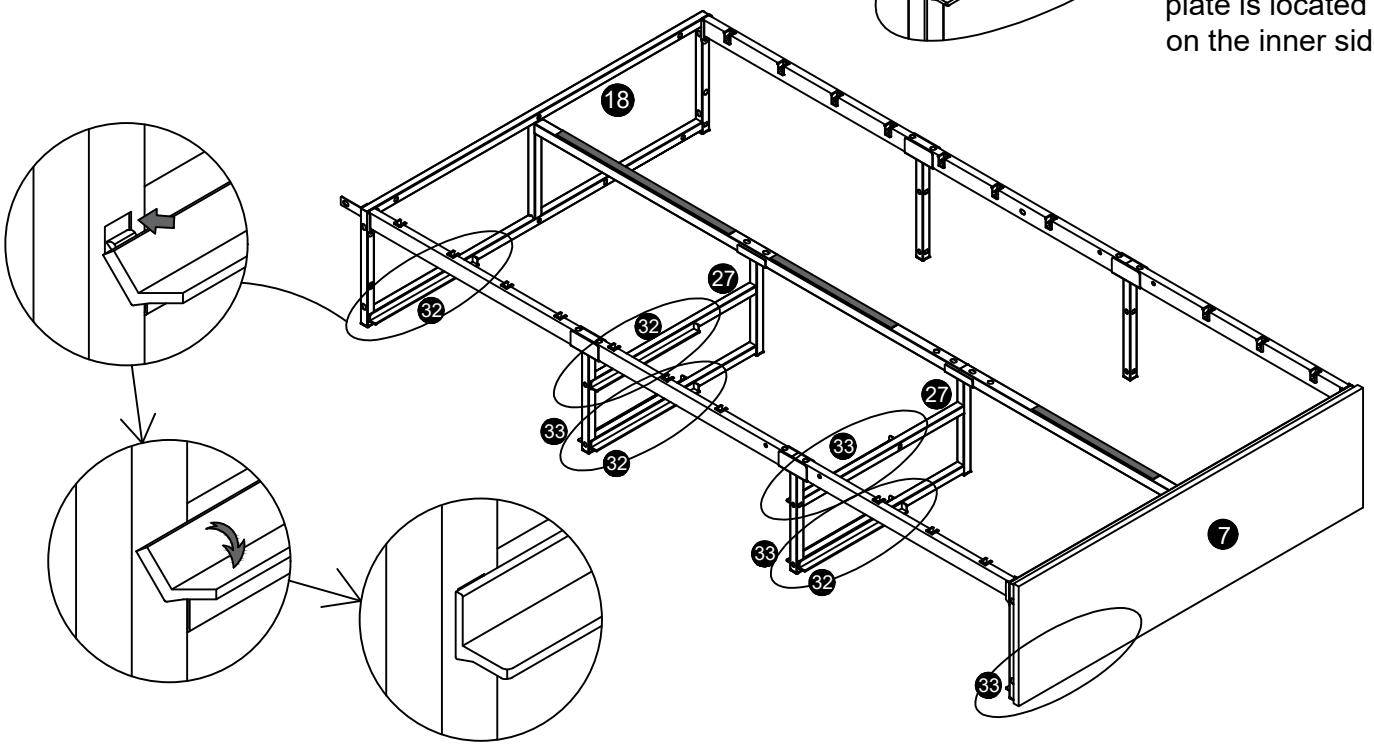


Step28

B		M8x35mm	2pcs
F		M6x35mm	4pcs
L		M5*65mm	1pc
M		M4*65mm	1pc

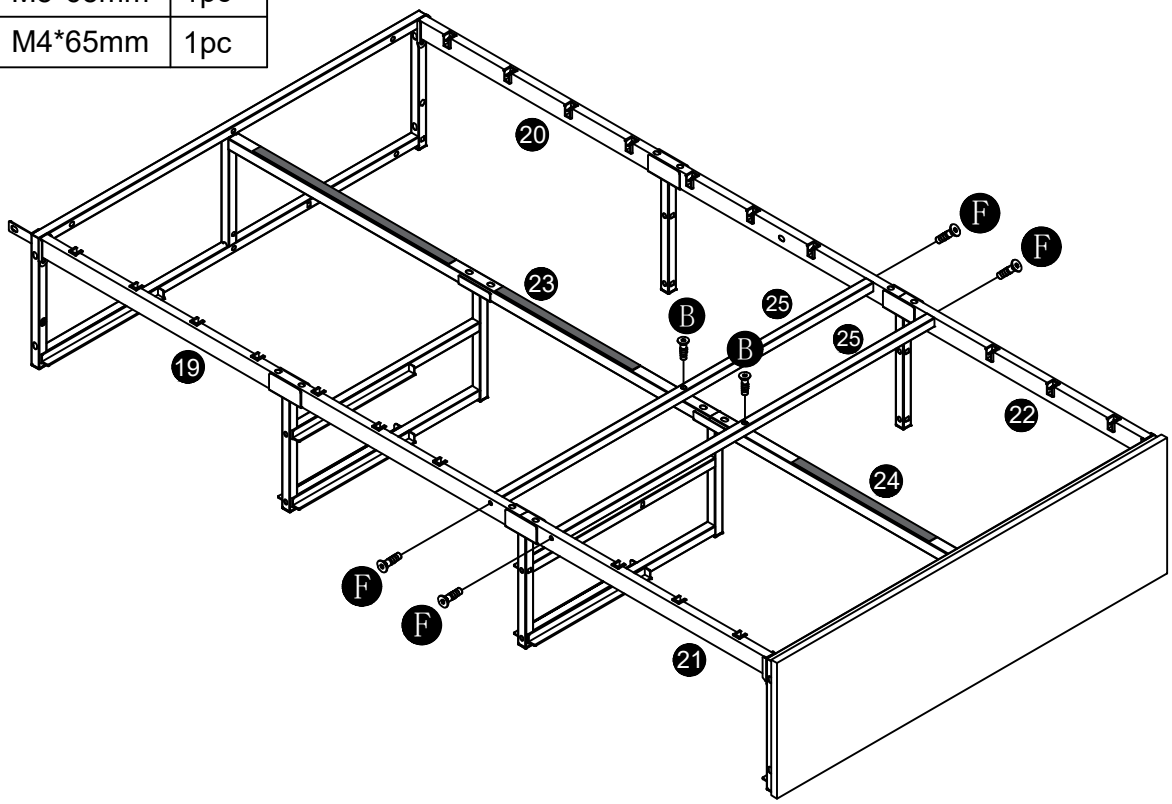



Step29

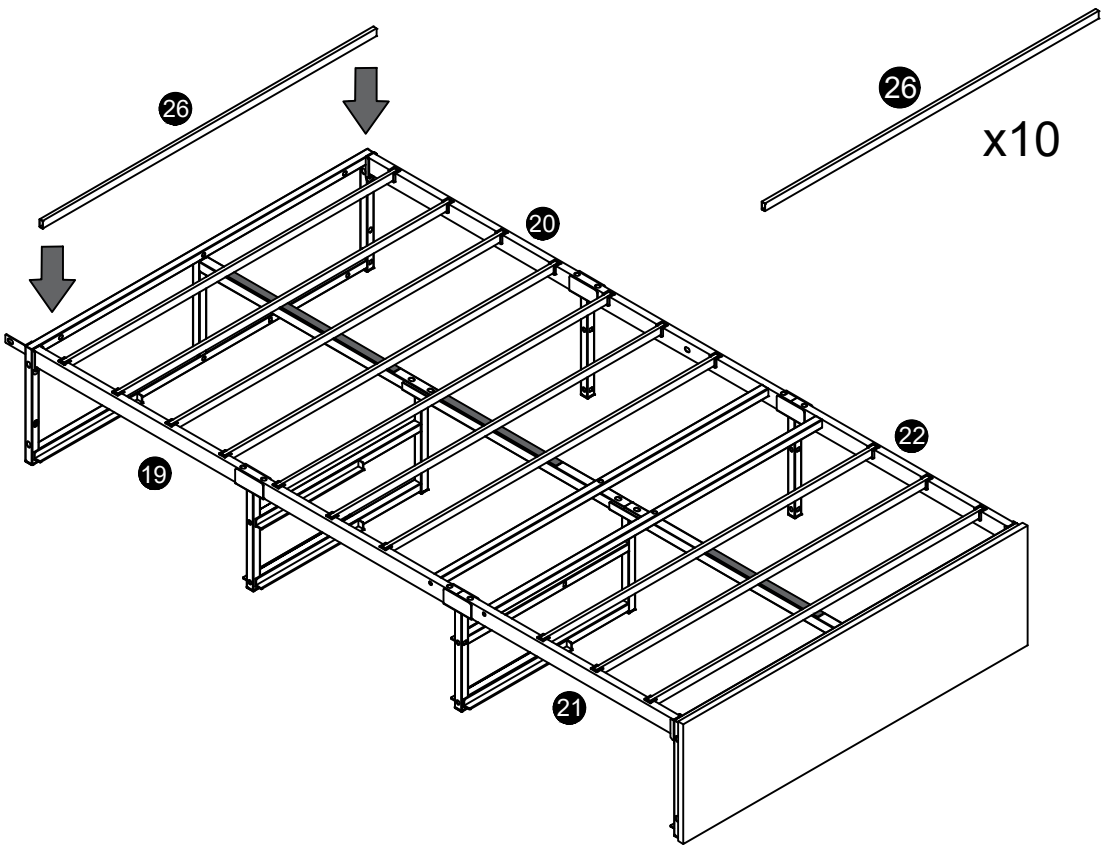

Step30

D		M8x15mm	1pc
L		M5*65mm	1pc



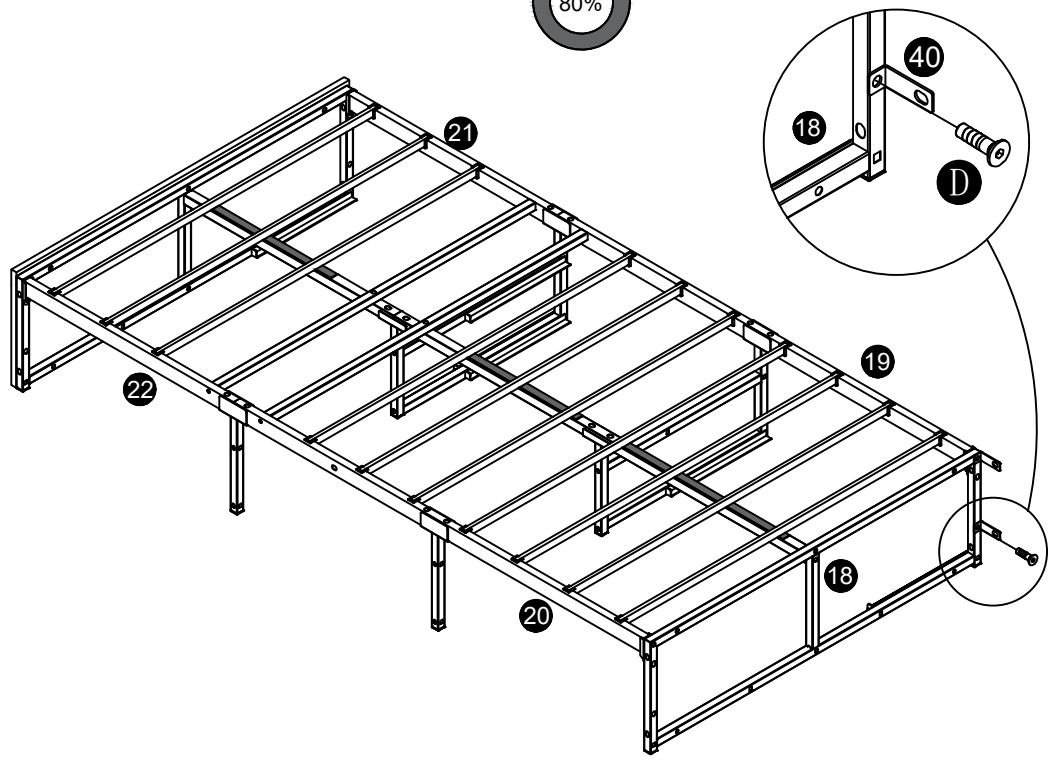


Step31

B		M8x35mm	5pcs
L		M5*65mm	1pc

Step32

D		M8x15mm	3pcs
L		M5*65mm	1pc

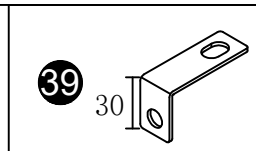

Step33

D		M8x15mm	2pcs
E		M8x10mm	1pc
L		M5*65mm	1pc

Step34


D		M8x15mm	2pcs
L		M5*65mm	1pc

Tighten 100%




Step35

Extract the insulation sheet

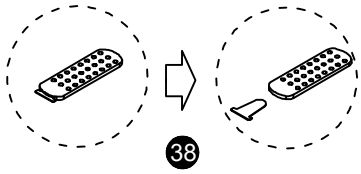


Tear open the Velcro, thread the light line through the Velcro, and stick the Velcro on.


Step36

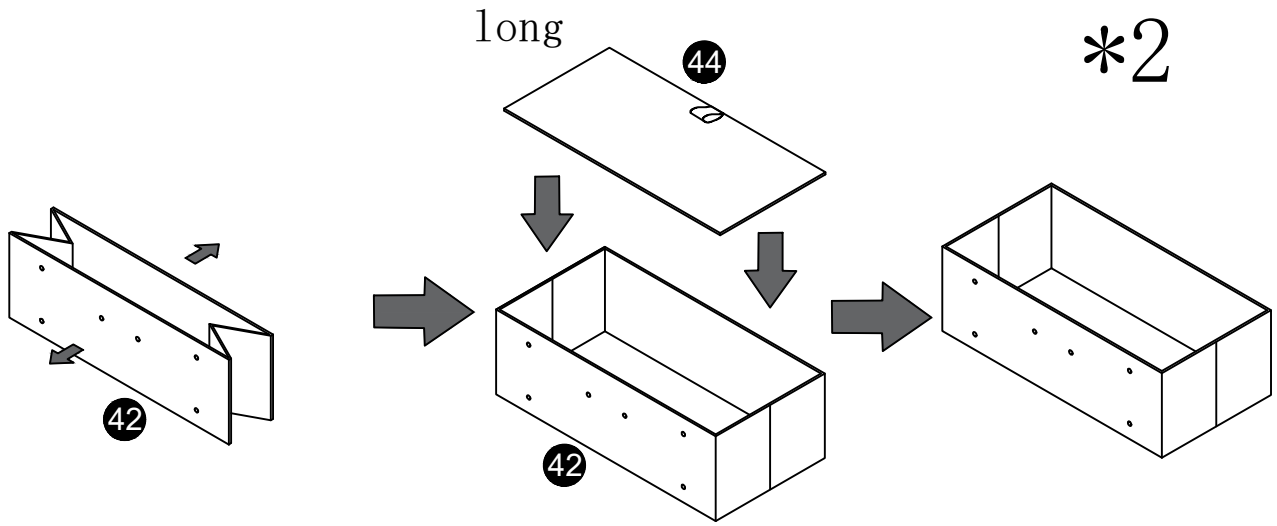


Step37

G		M6x12mm	8pcs
P		M4x20mm	4pcs
M		M4*65mm	1pc
L		M5*65mm	1pc

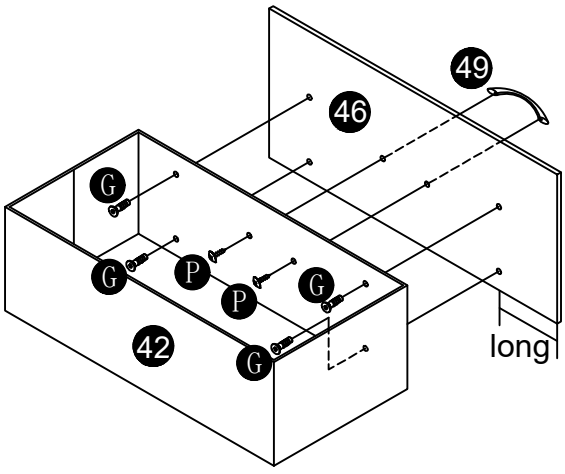

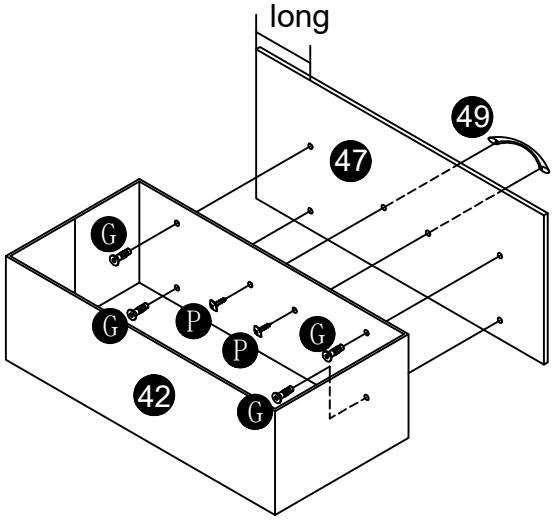


Step38

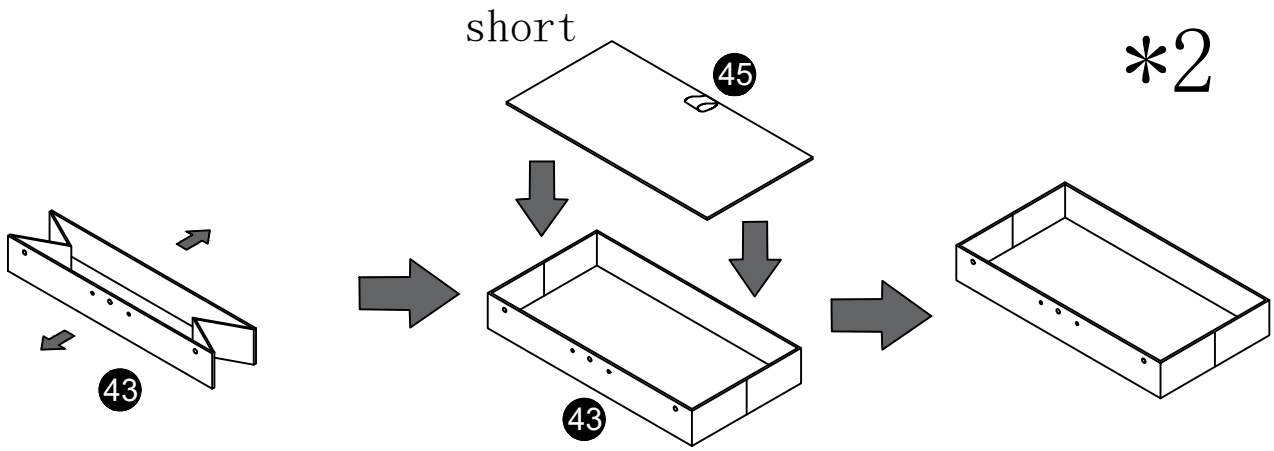


Step39


G		M6x12mm	6pcs
P		M4x20mm	4pcs
M		M4*65mm	1pc
L		M5*65mm	1pc

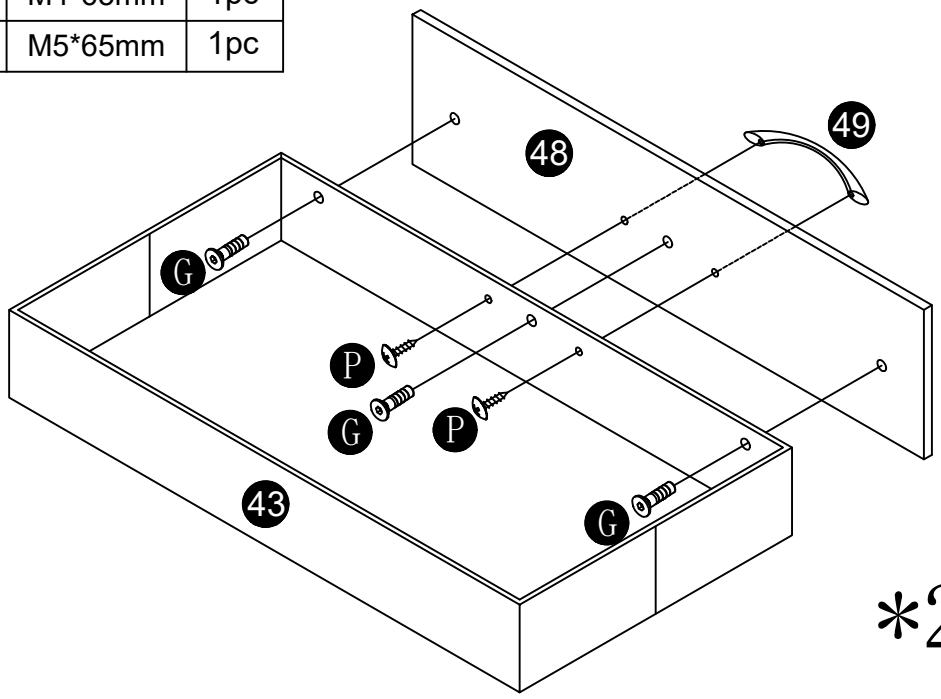


Step40

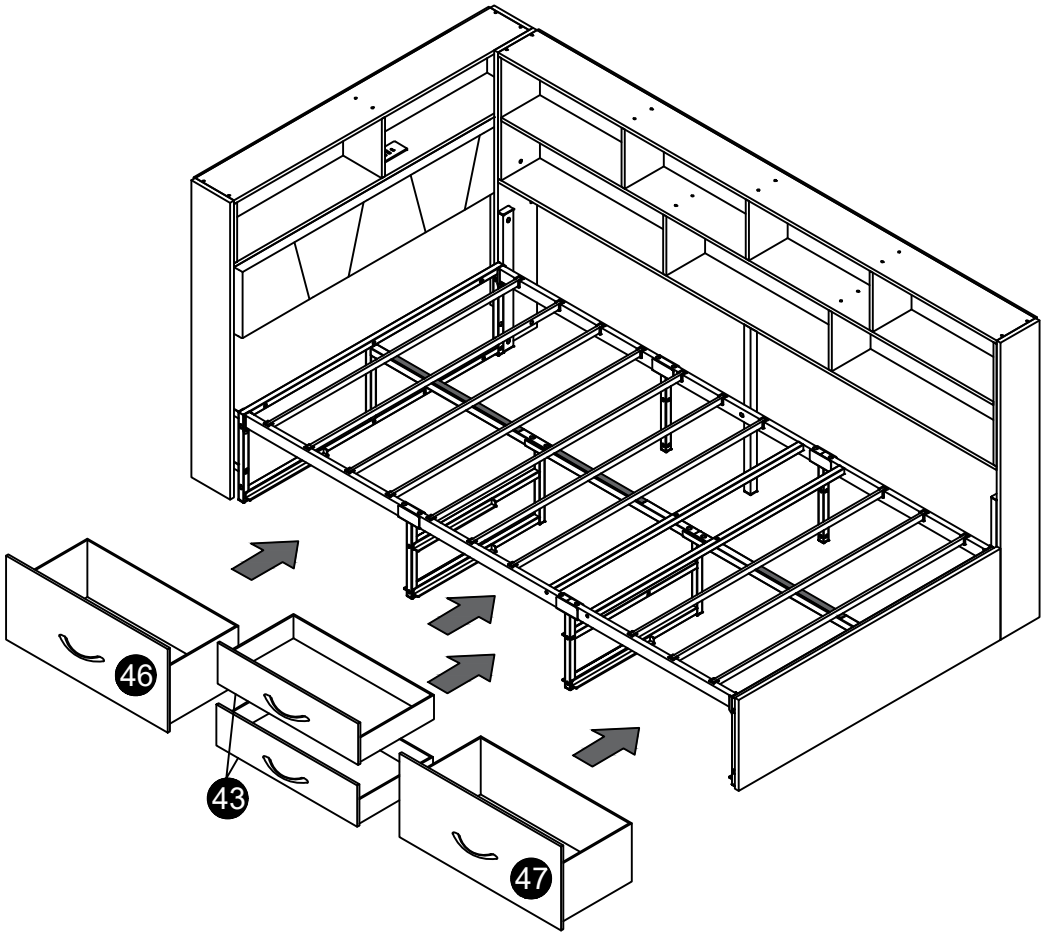


Step41

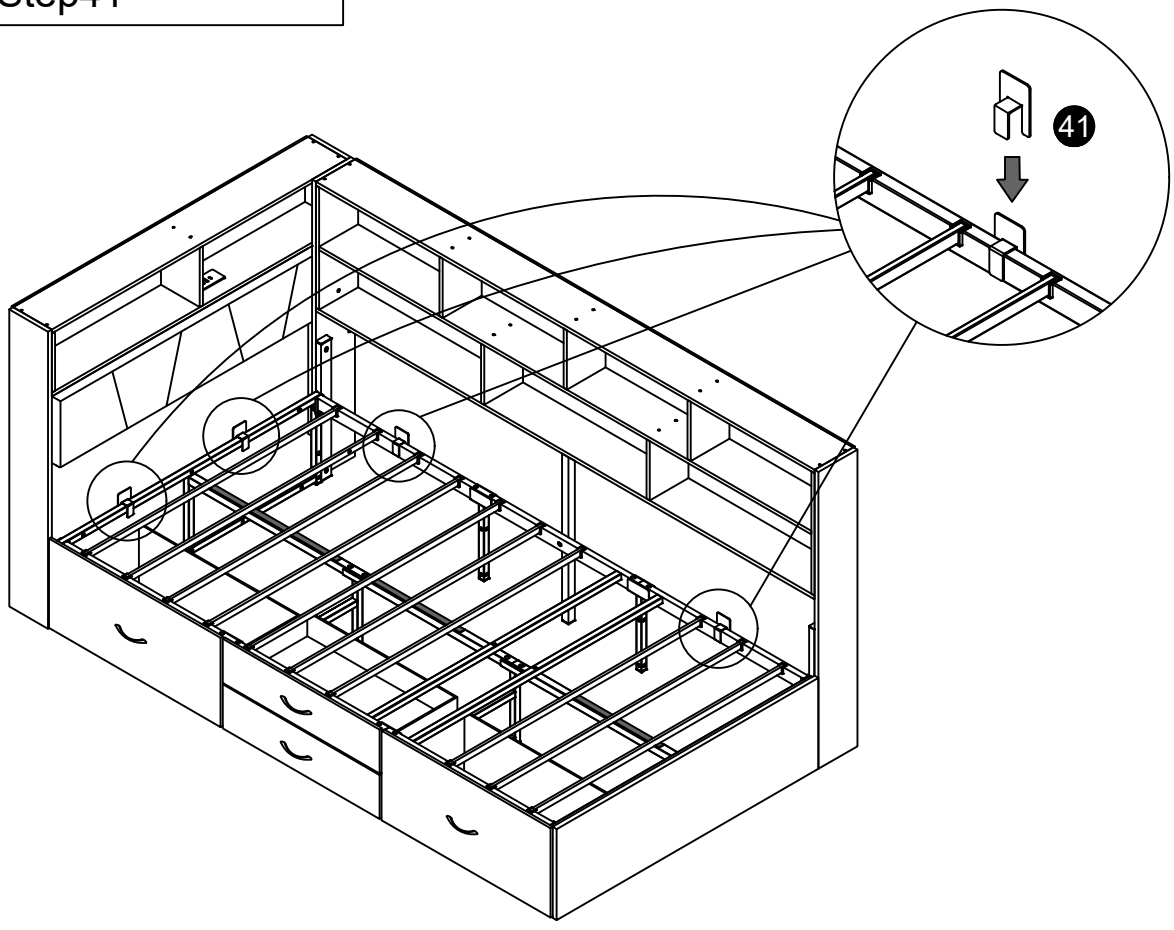


Step42

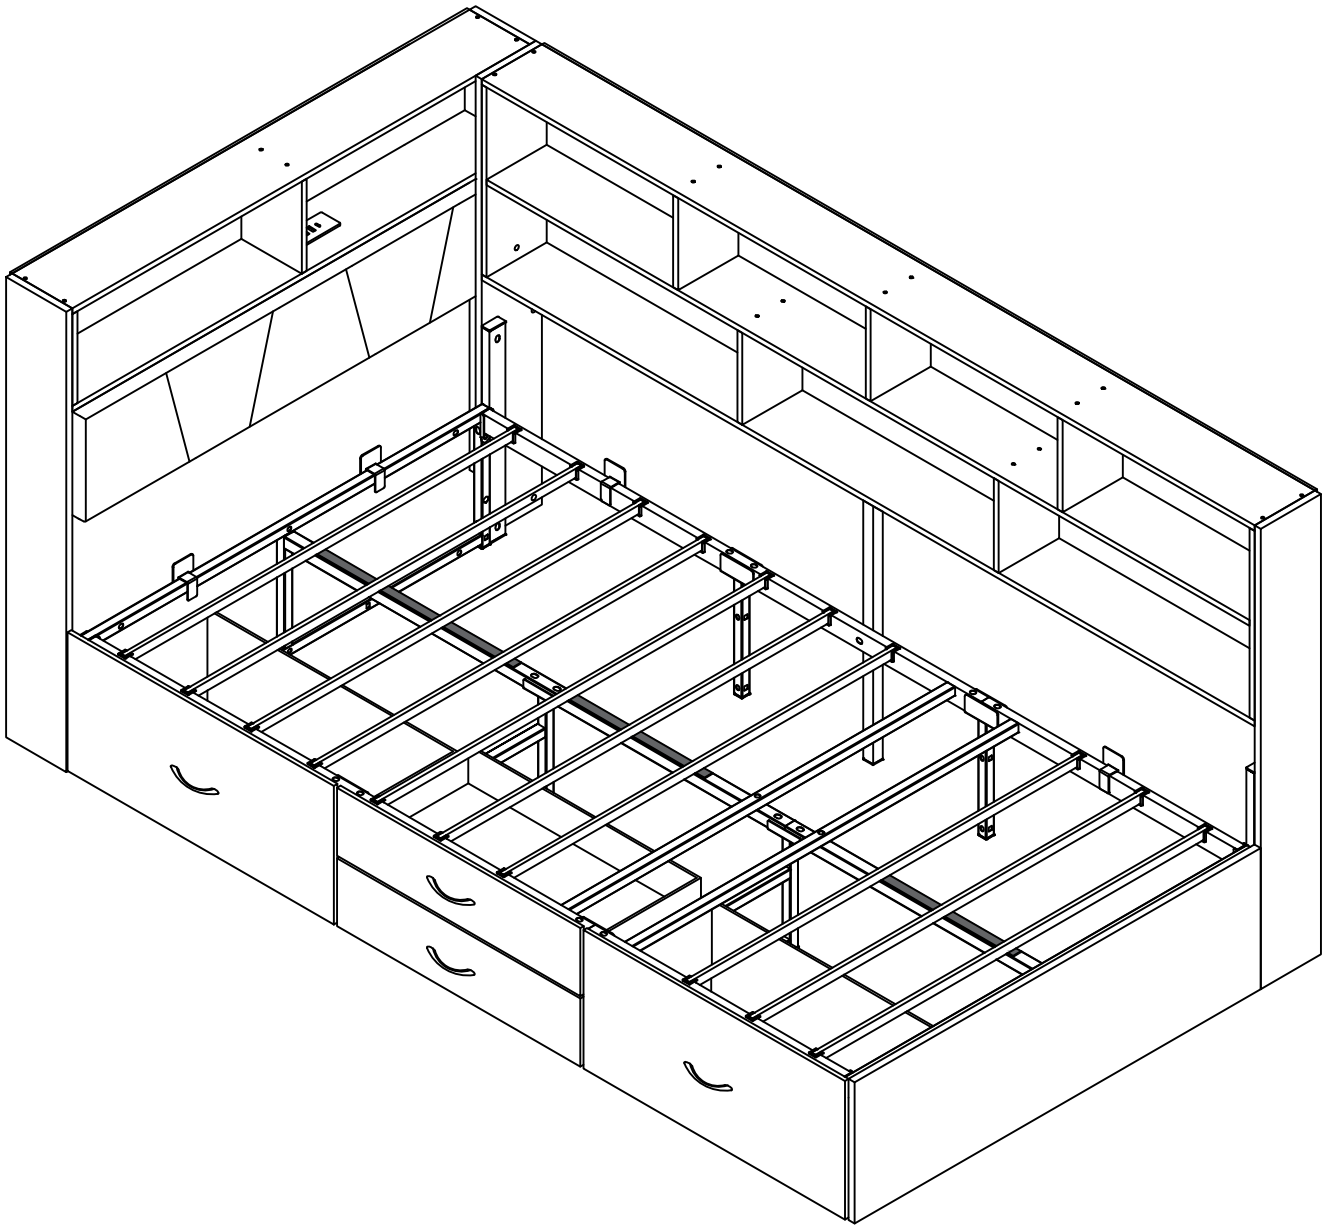



Note:
Should be assembled on flat ground to keep balance.
It needs at least two people to install.
Before starting the assembly, you must read the whole manual and follow the instructions.

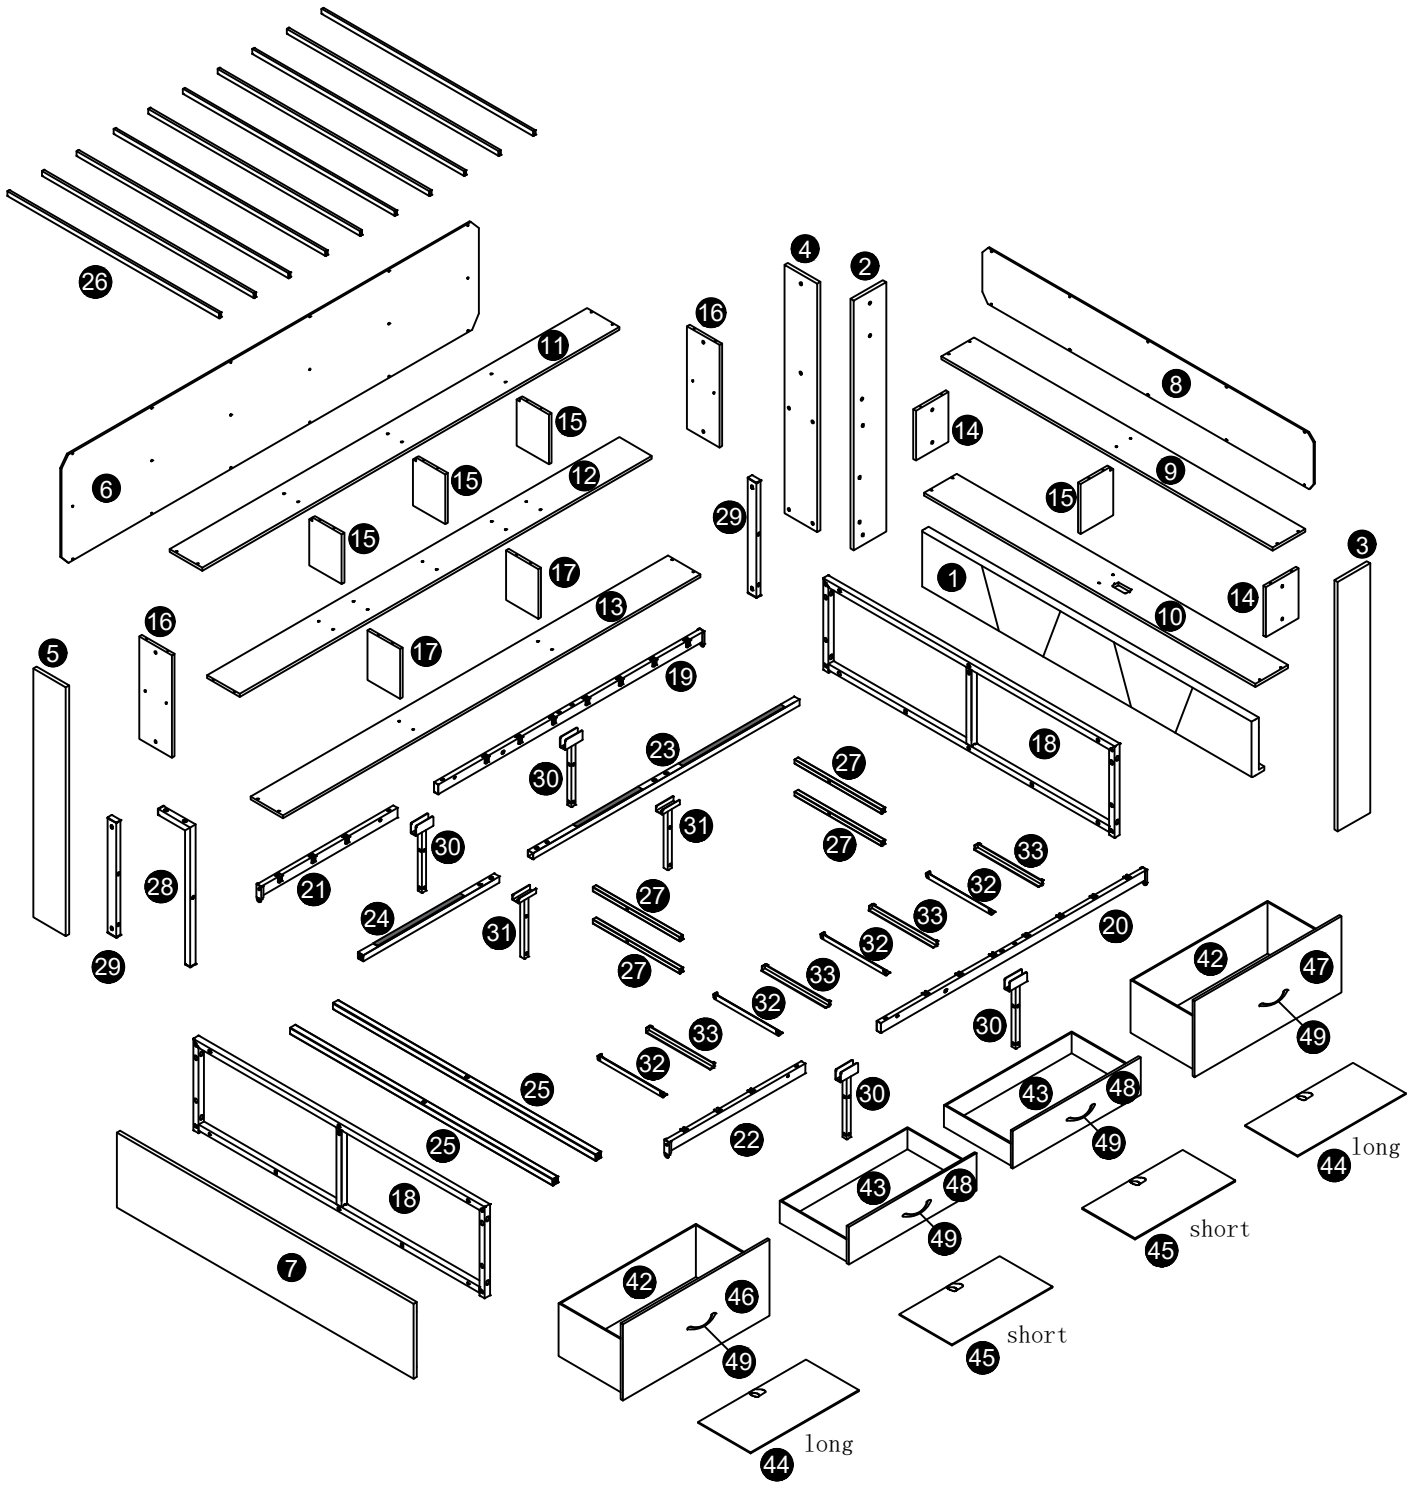

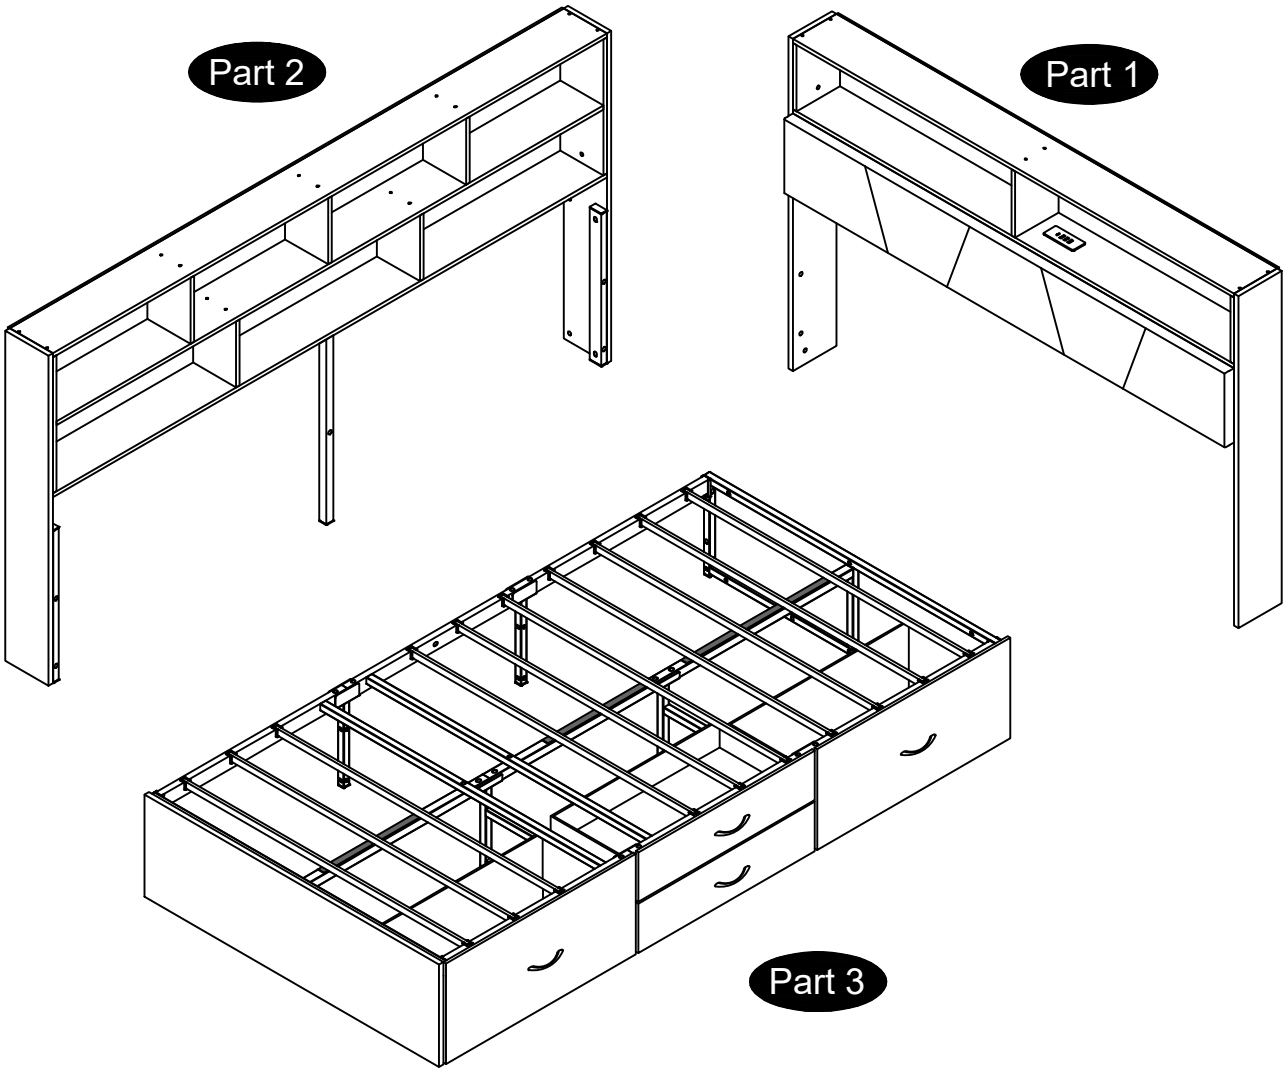
Part 2
Part 1
Part 3

Part 1 Installation

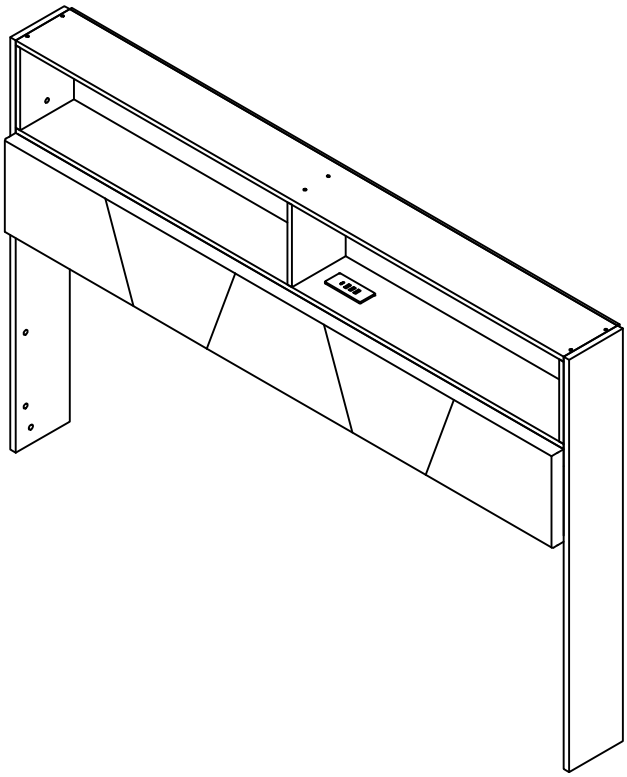

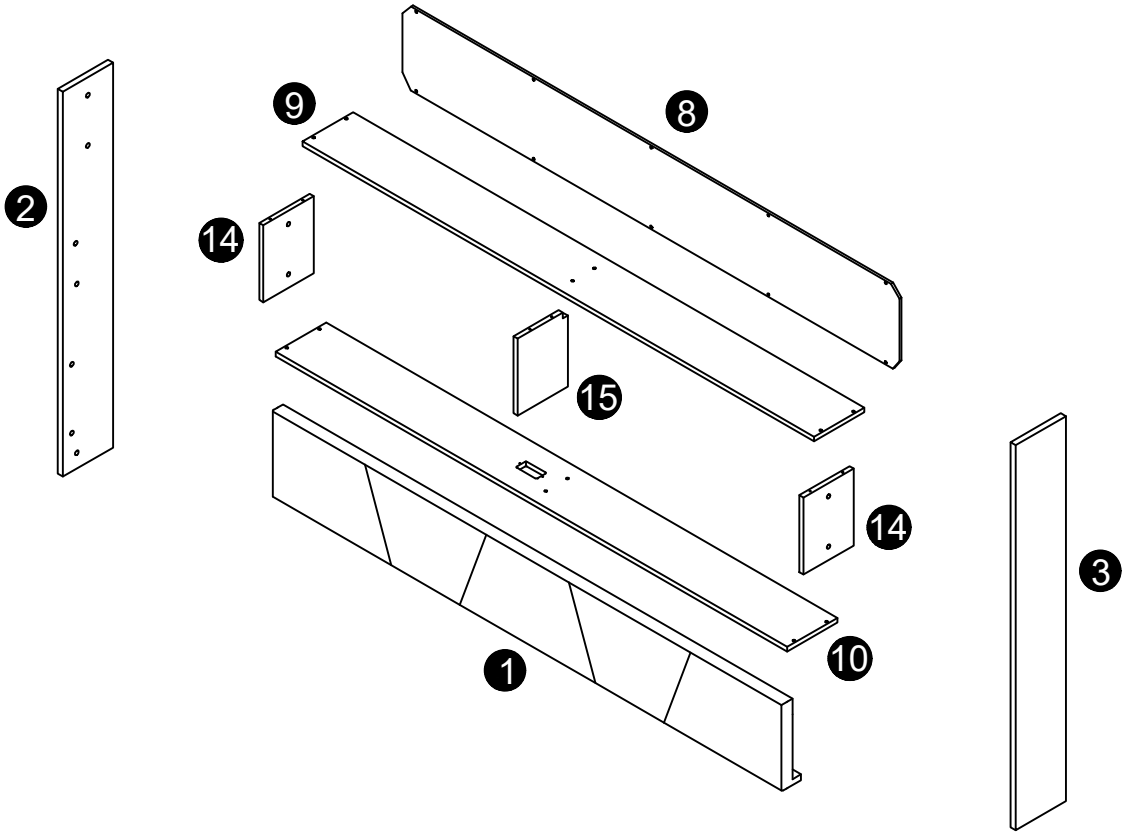


Step1

I		M4*12mm	2pcs
L		M5*65	1pc


Three holes on the same line facing downwards and forwards.

Step2

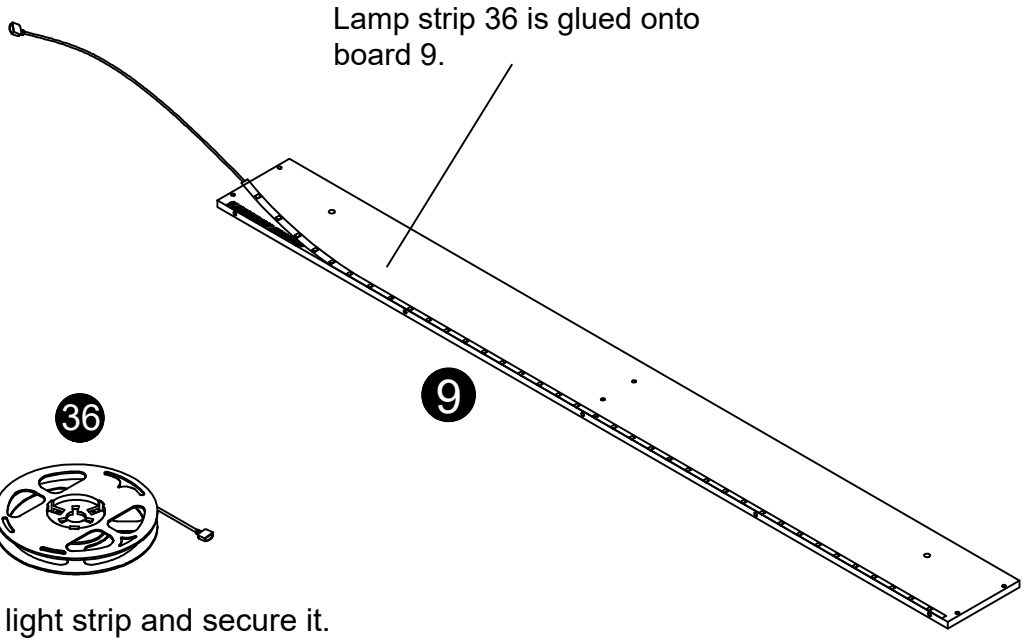


Unfold the light strip and secure it.

Step3			
H		M5x30mm	6pcs
N		M3*65mm	1pc

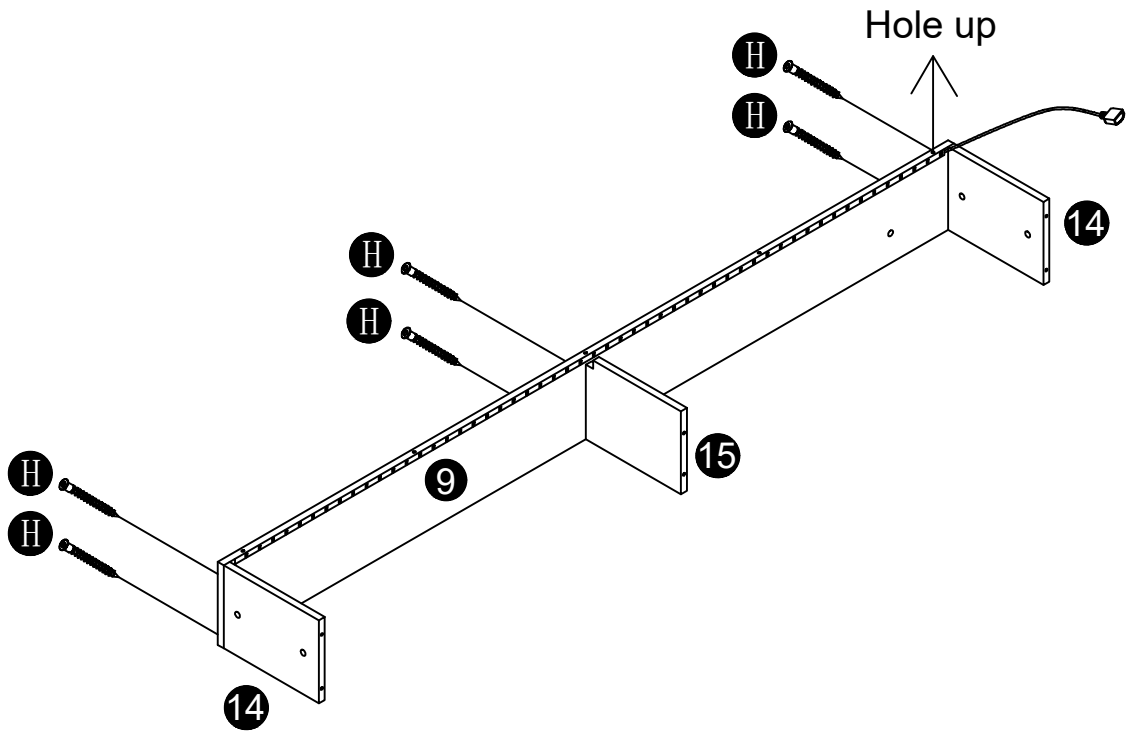


Step4			
H		M5x30mm	6pcs
N		M3*65mm	1pc

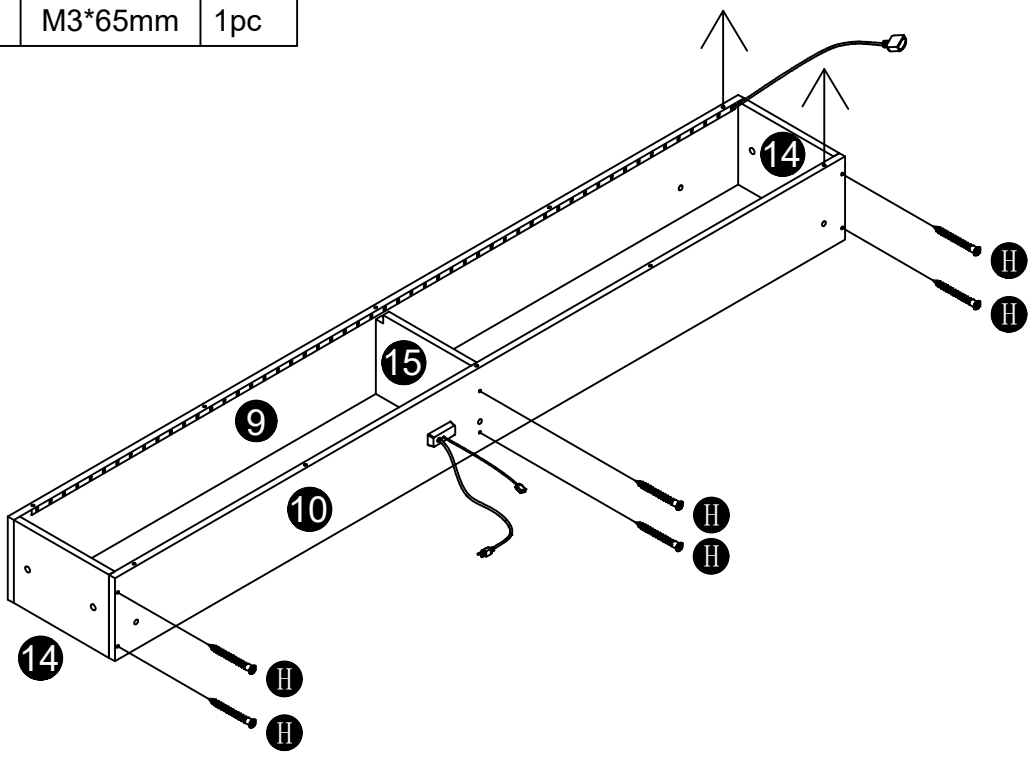

Step5

H		M5x30mm	10pcs
N		M3*65mm	1pc

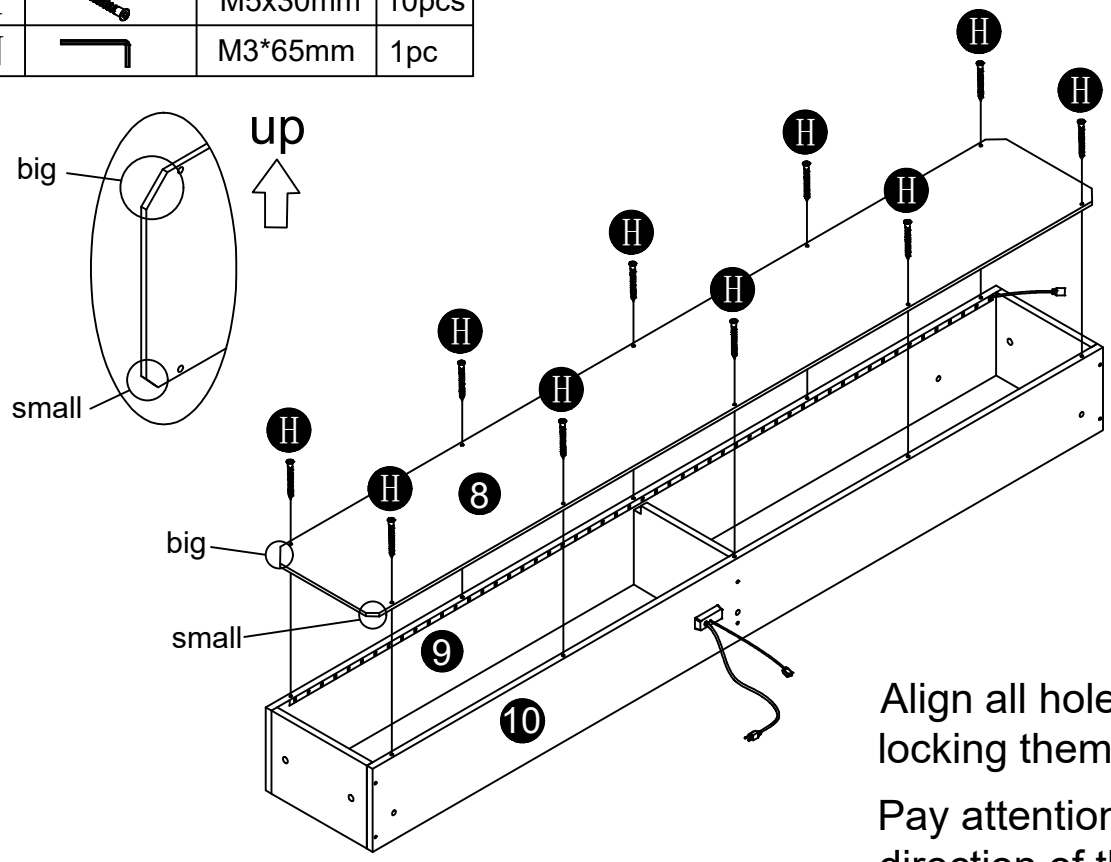


Align all holes before locking them together.

Pay attention to the direction of the board.


Step6

C		M8x25mm	4pcs
L		M5*65mm	1pc

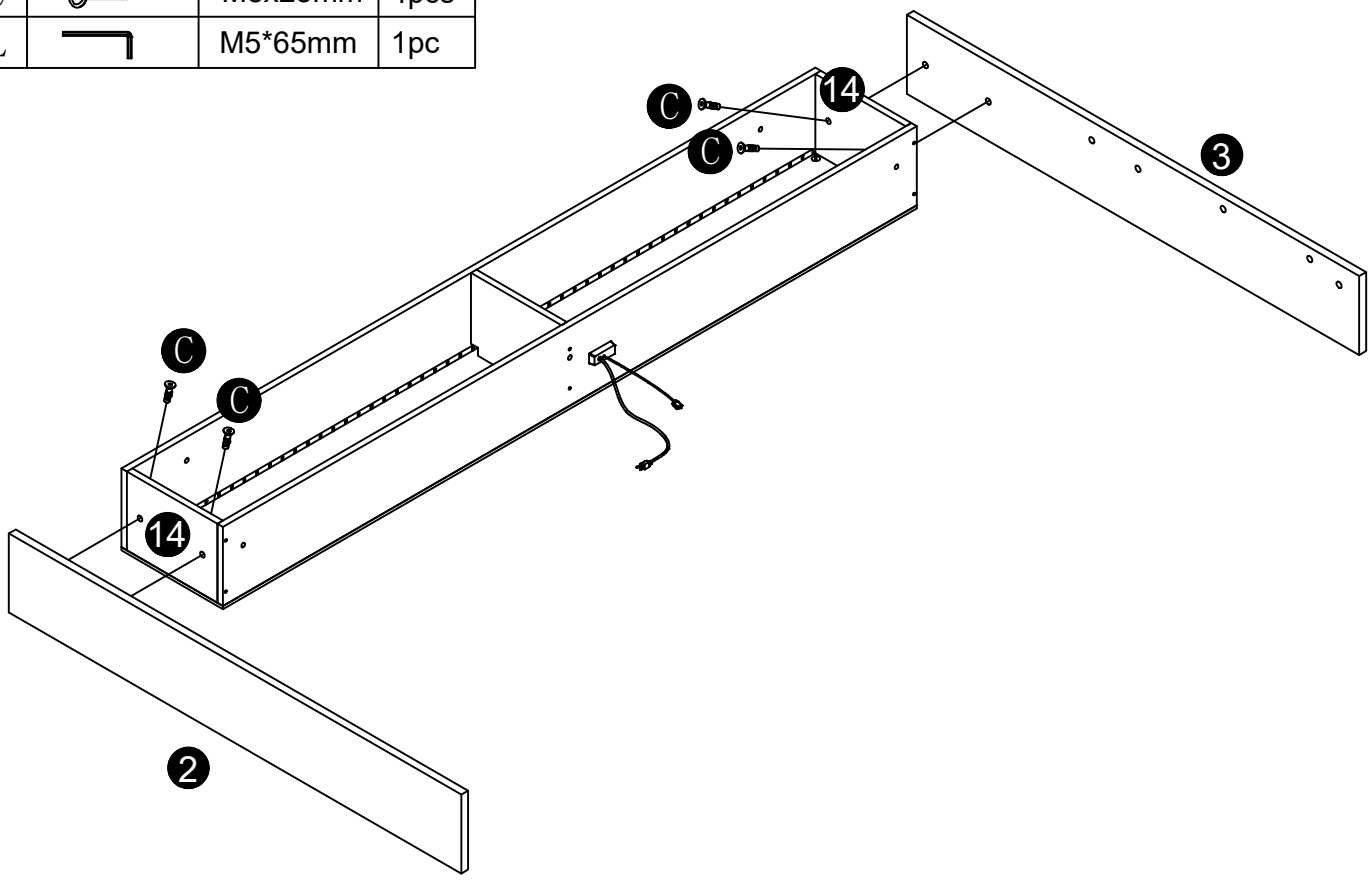


Step7

D		M8x15mm	5pcs
L		M5*65mm	1pc

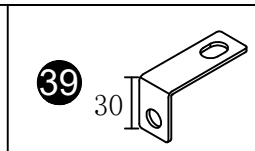


Tighten 80%

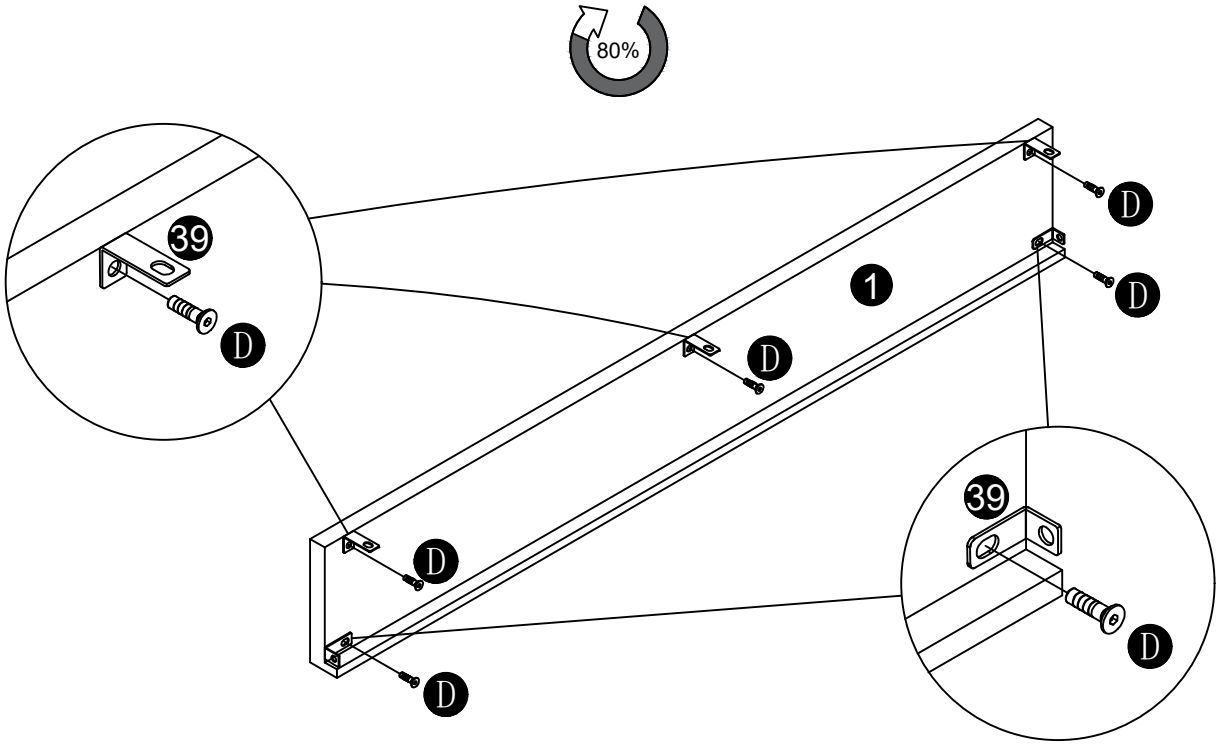

Step8

D		M8x15mm	2pcs
L		M5*65mm	1pc

Tighten 100%

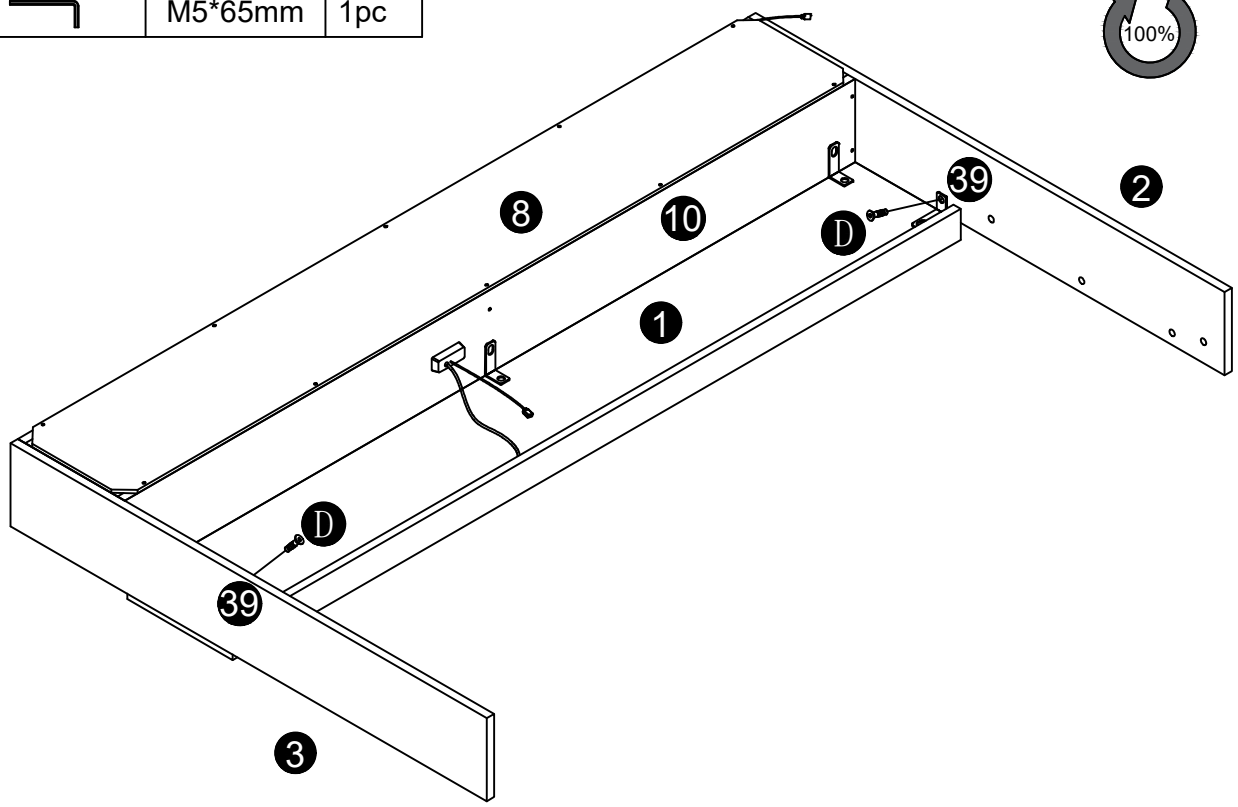


Step9


E		M8x10mm	3pcs
L		M5*65mm	1pc

Tighten 100%




Part 2 Installation

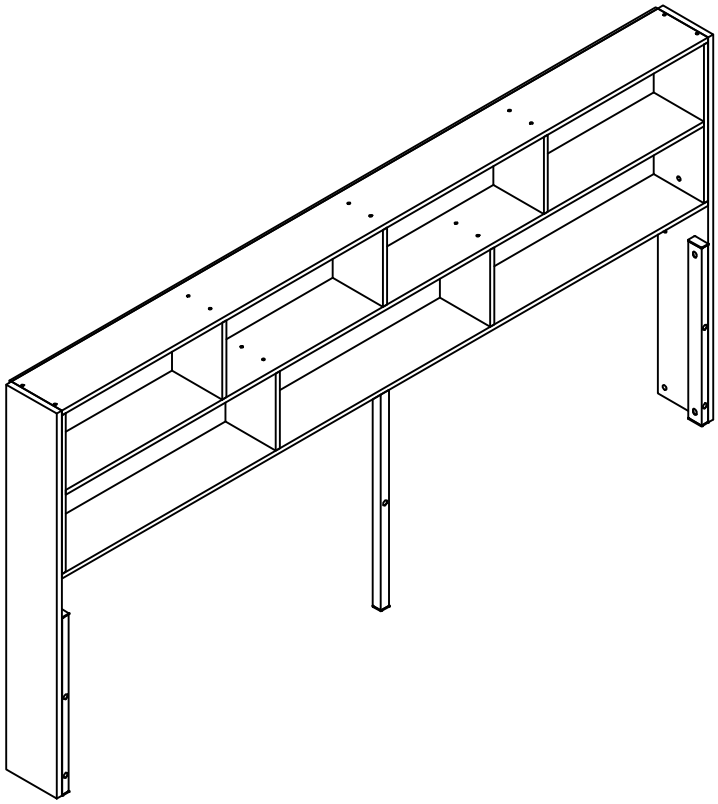

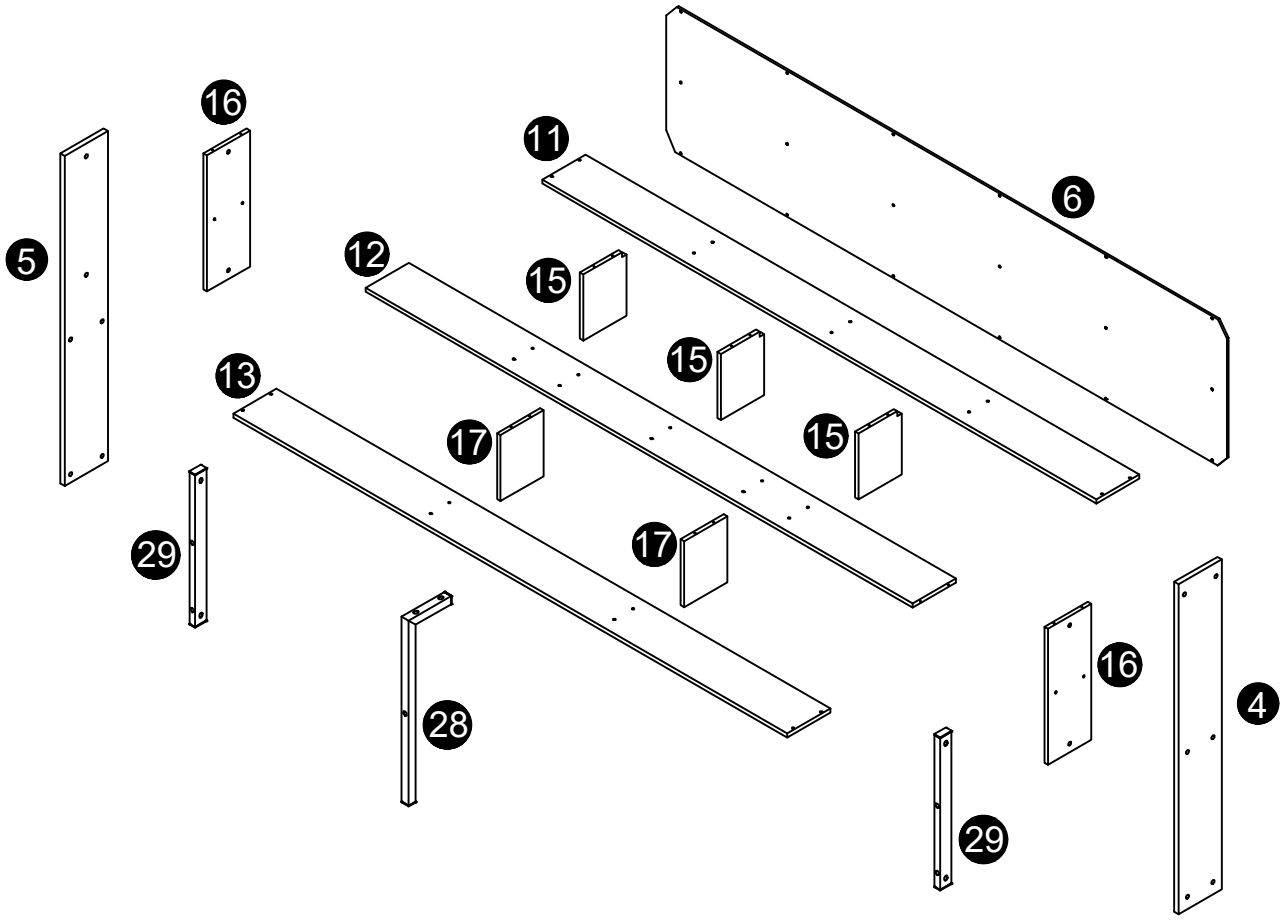


Step10

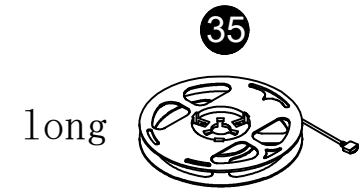

Unfold the light strip and secure it.


Step11

H		M5x30mm	4pcs
N		M3*65mm	1pc

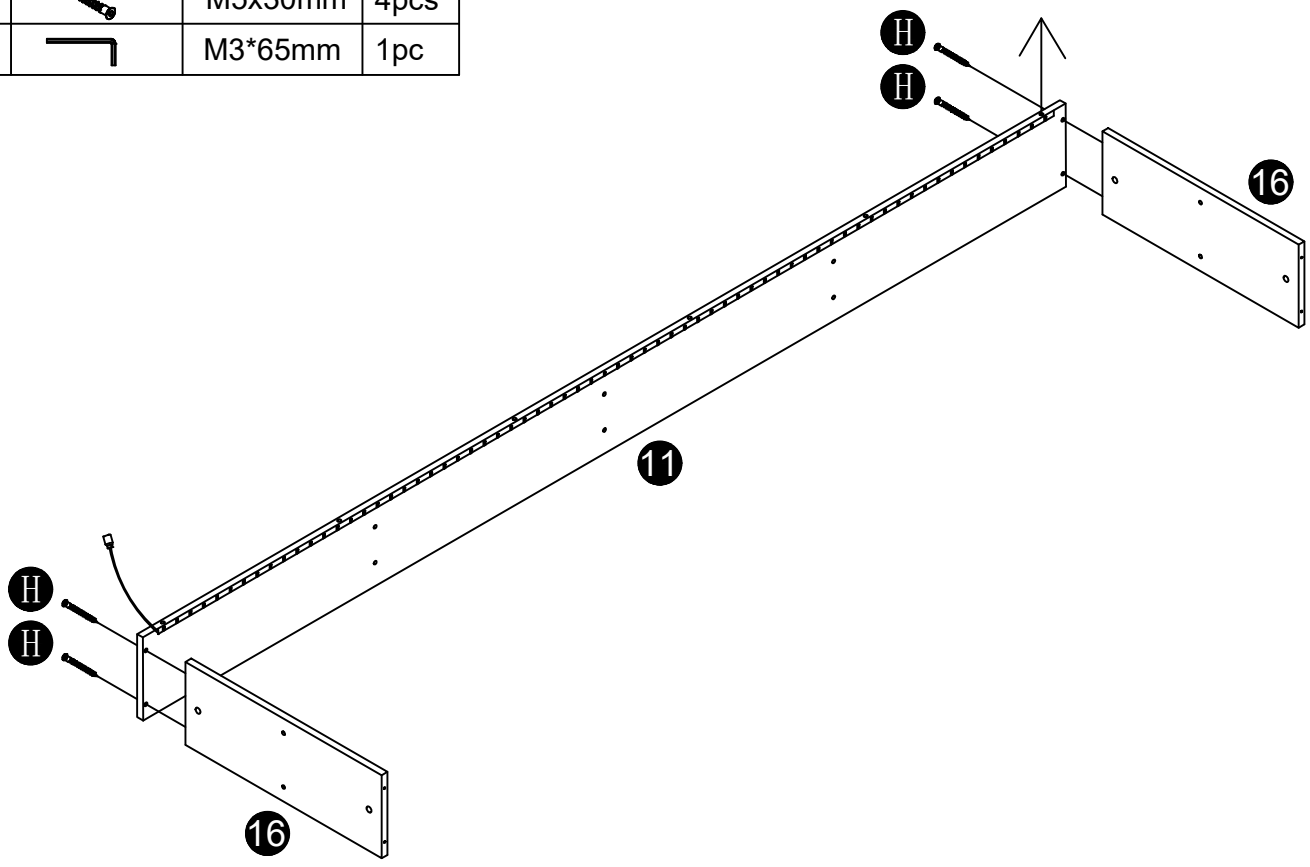


Step12

H		M5x30mm	6pcs
N		M3*65mm	1pc

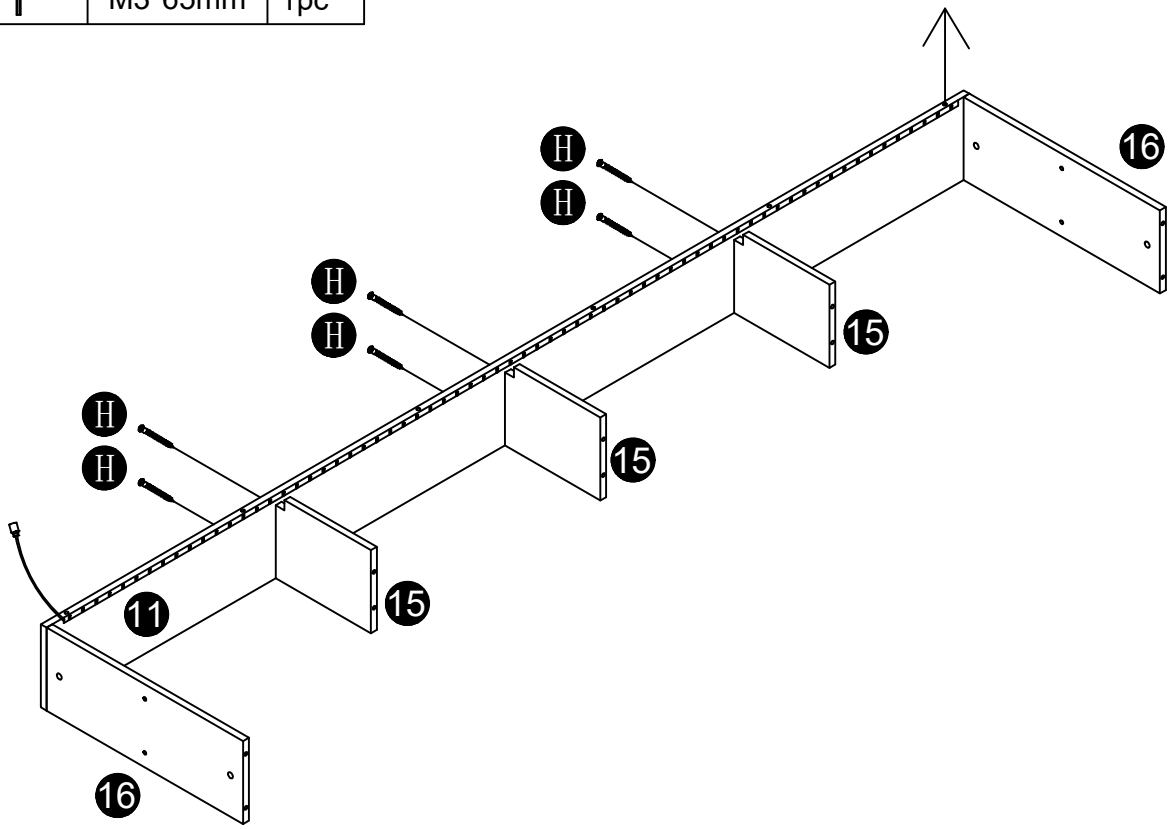


Step13


H		M5x30mm	10pcs
N		M3*65mm	1pc

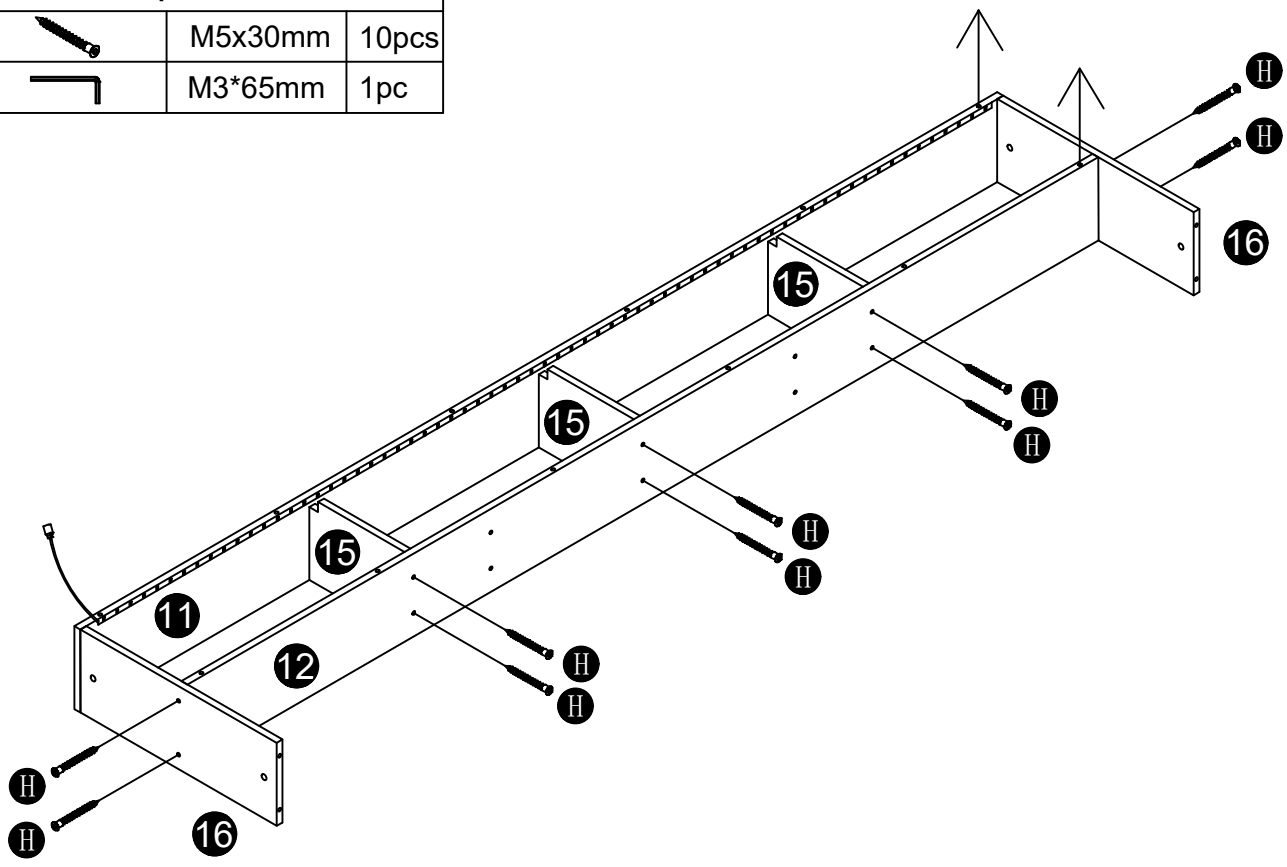

Step14			
H		M5x30mm	4pcs
N		M3*65mm	1pc

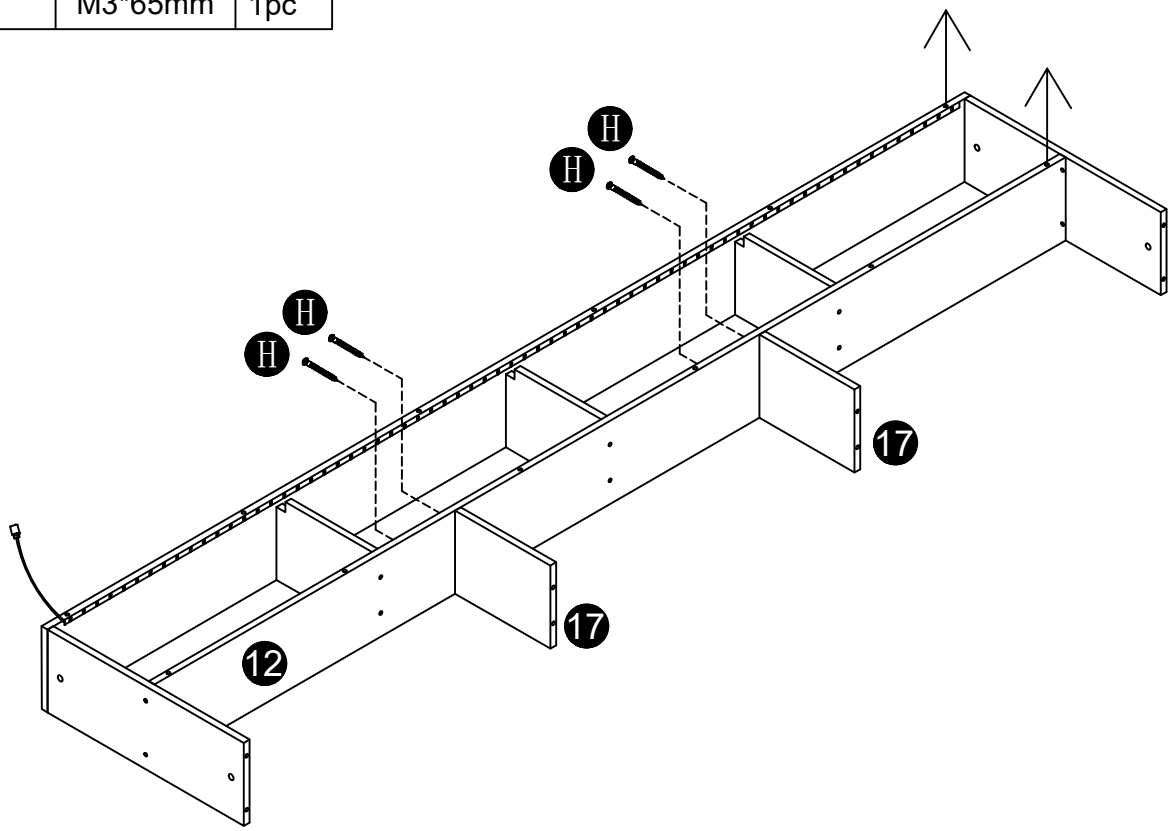


Step15			
H		M5x30mm	8pcs
N		M3*65mm	1pc

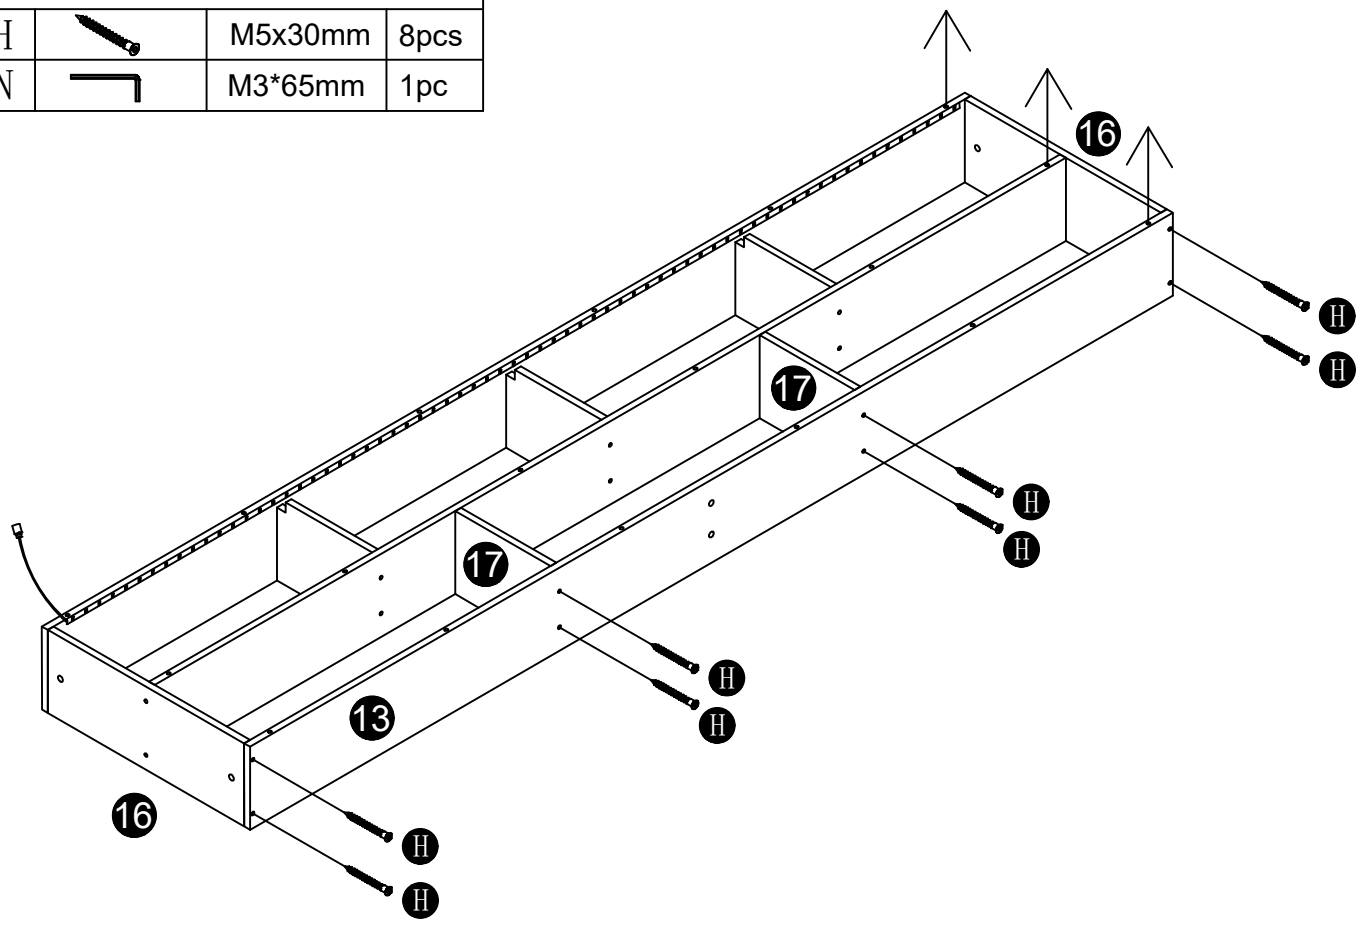

Step16

H		M5x30mm	18pcs
N		M3*65mm	1pc

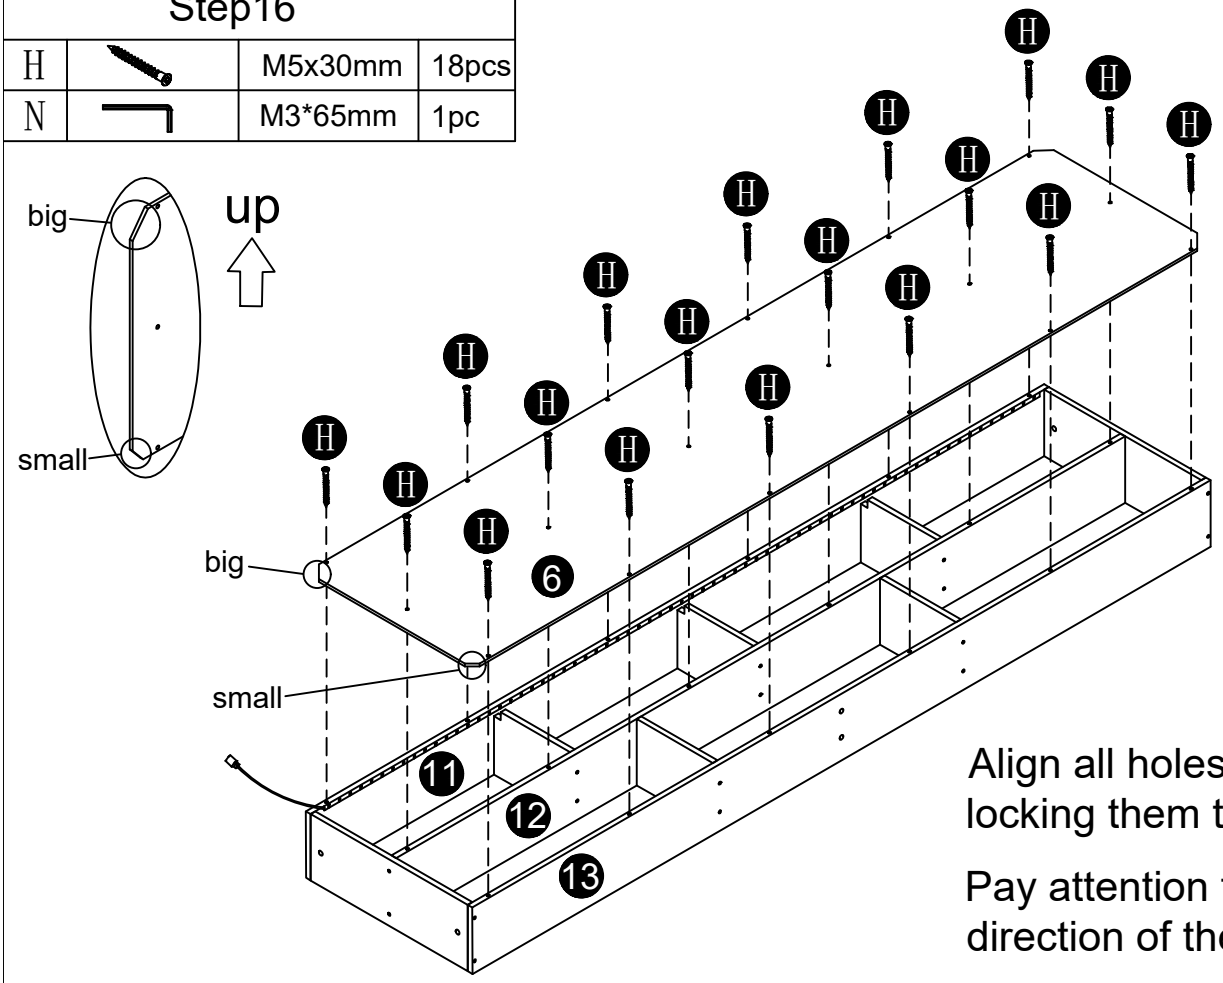


Align all holes before locking them together.

Pay attention to the direction of the board.

Step17

C		M8x25mm	4pcs
L		M5*65mm	1pc

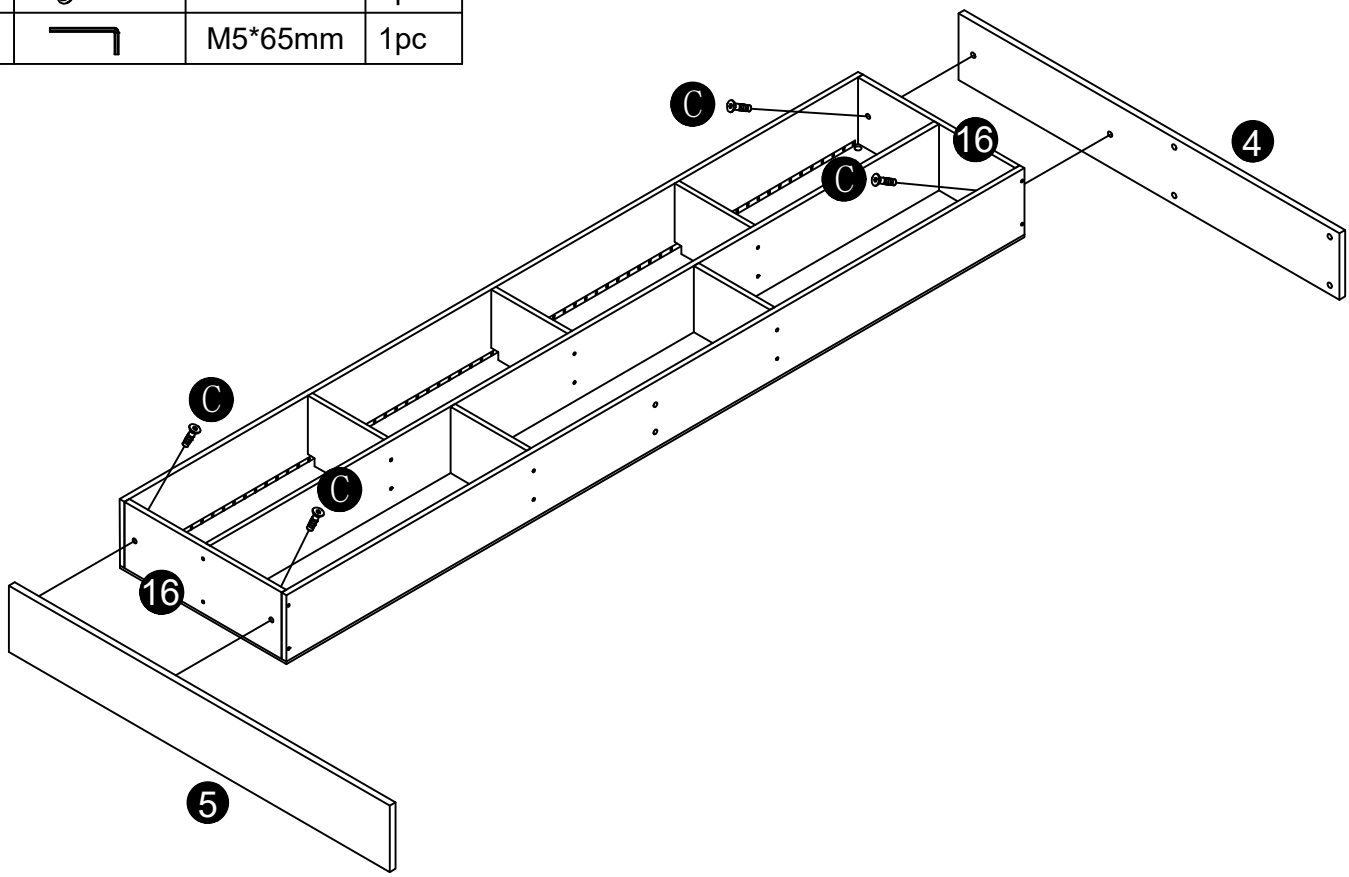


Step18


B		M8x35mm	2pcs
L		M5*65mm	1pc
0		⌀20*8*2.0	2pcs


Step19

B		M8x35mm	4pcs
L		M5*65mm	1pc

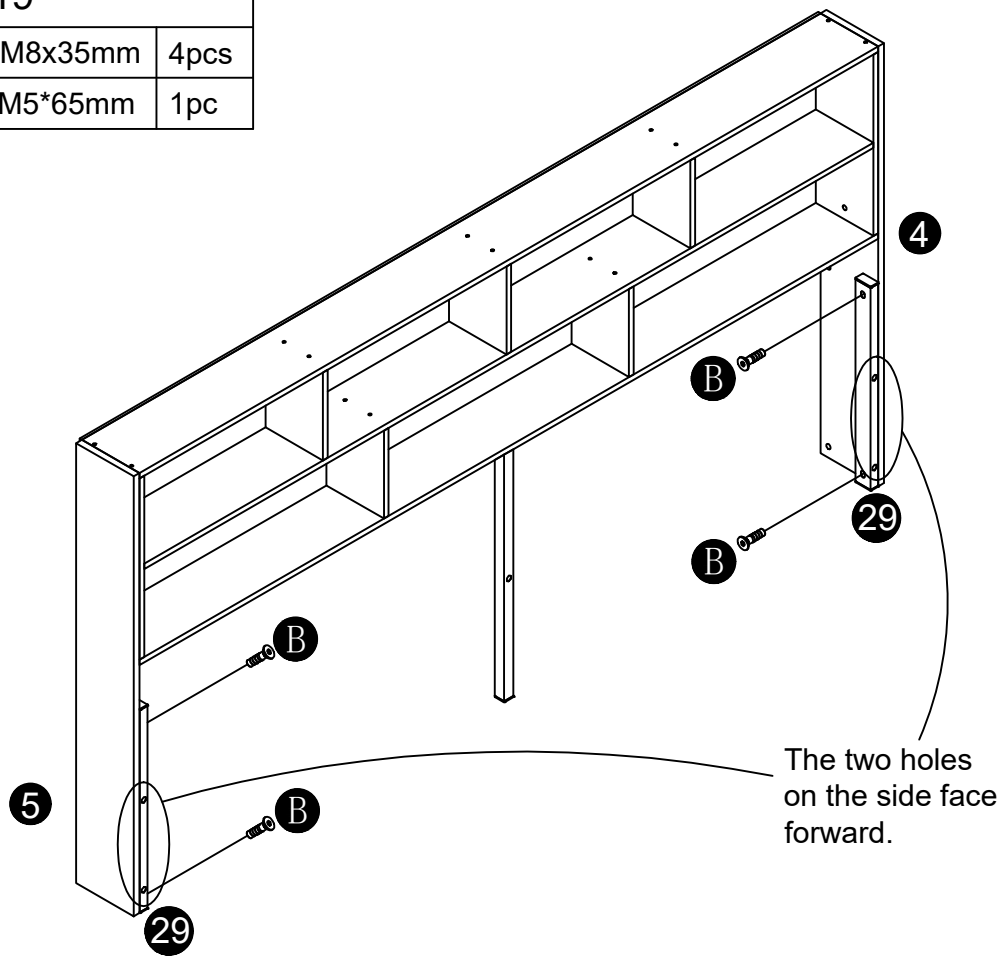


Installation

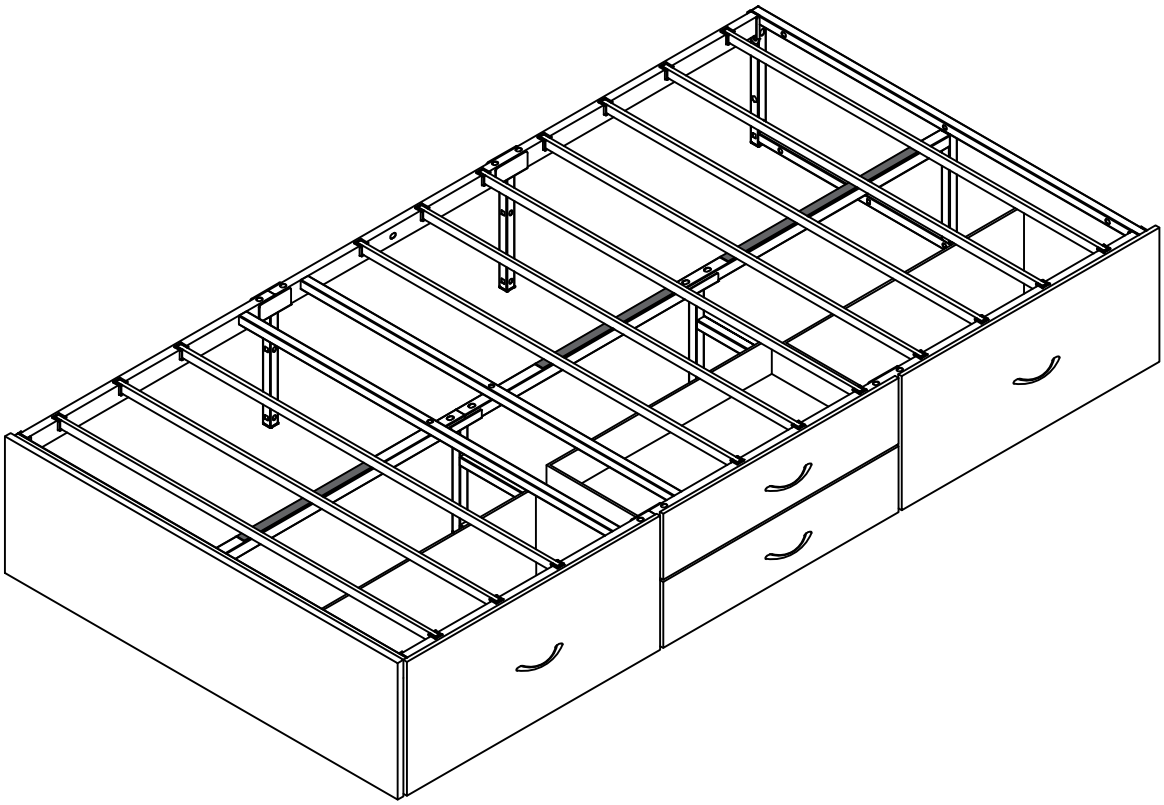


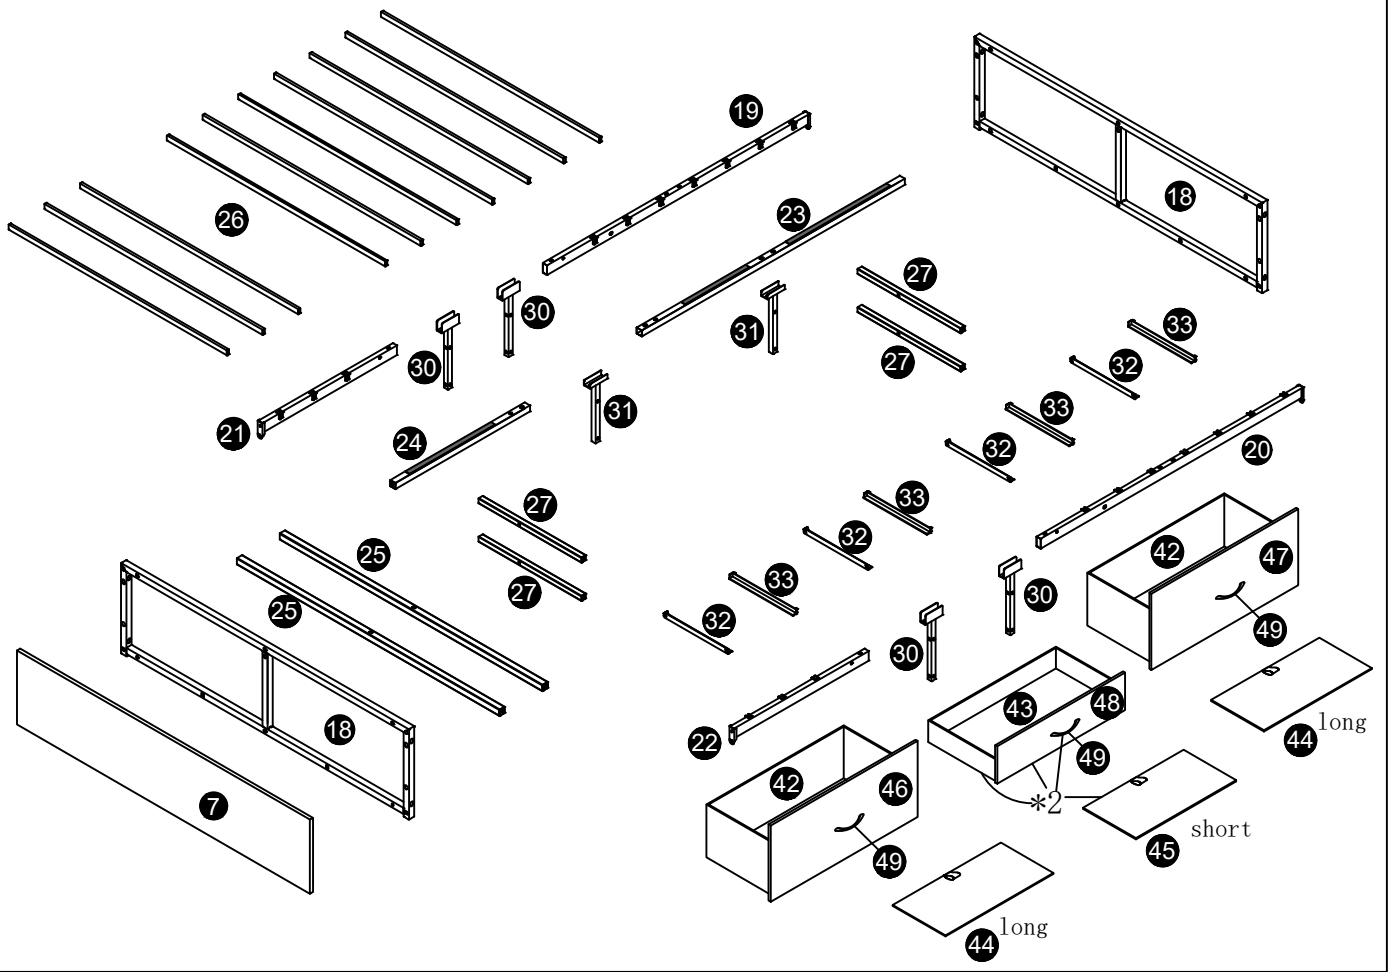


Step20			
A		M8x50mm	8pcs
L		M5*65mm	1pc

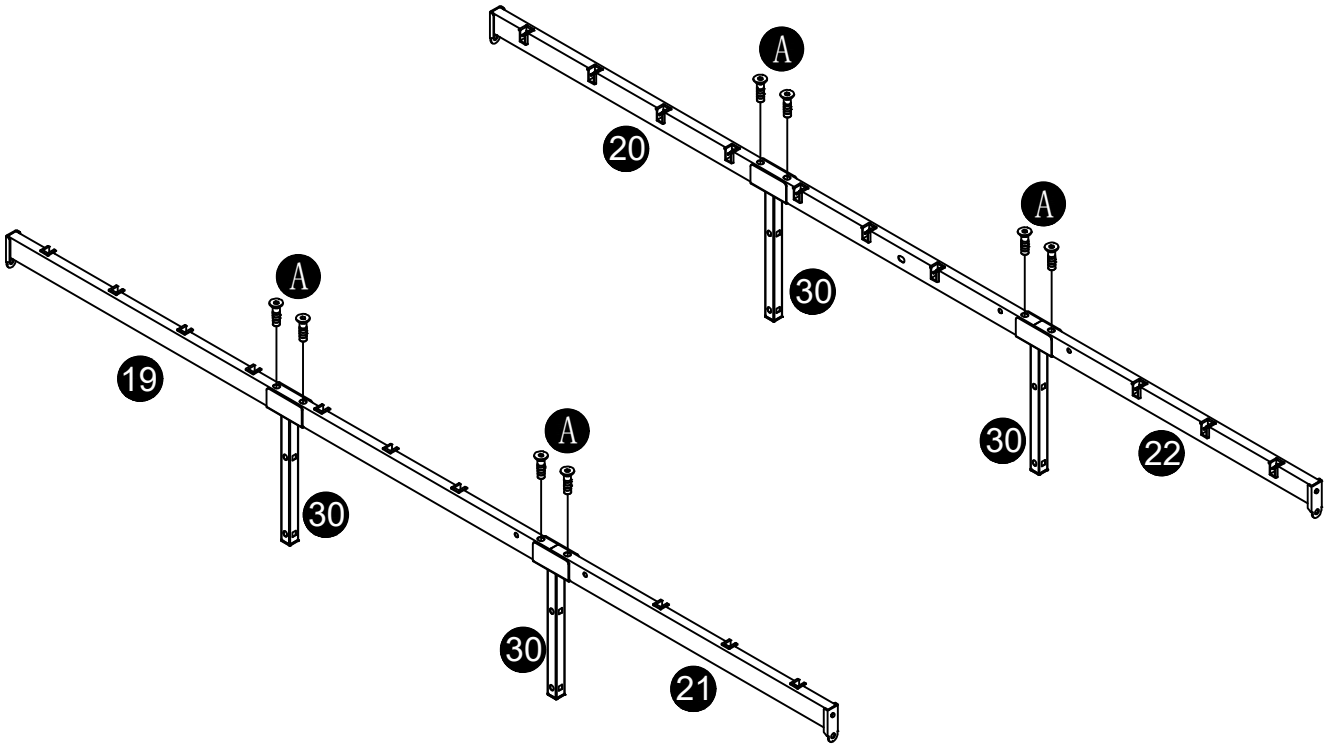


Step21			
B		M8x35mm	4pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc

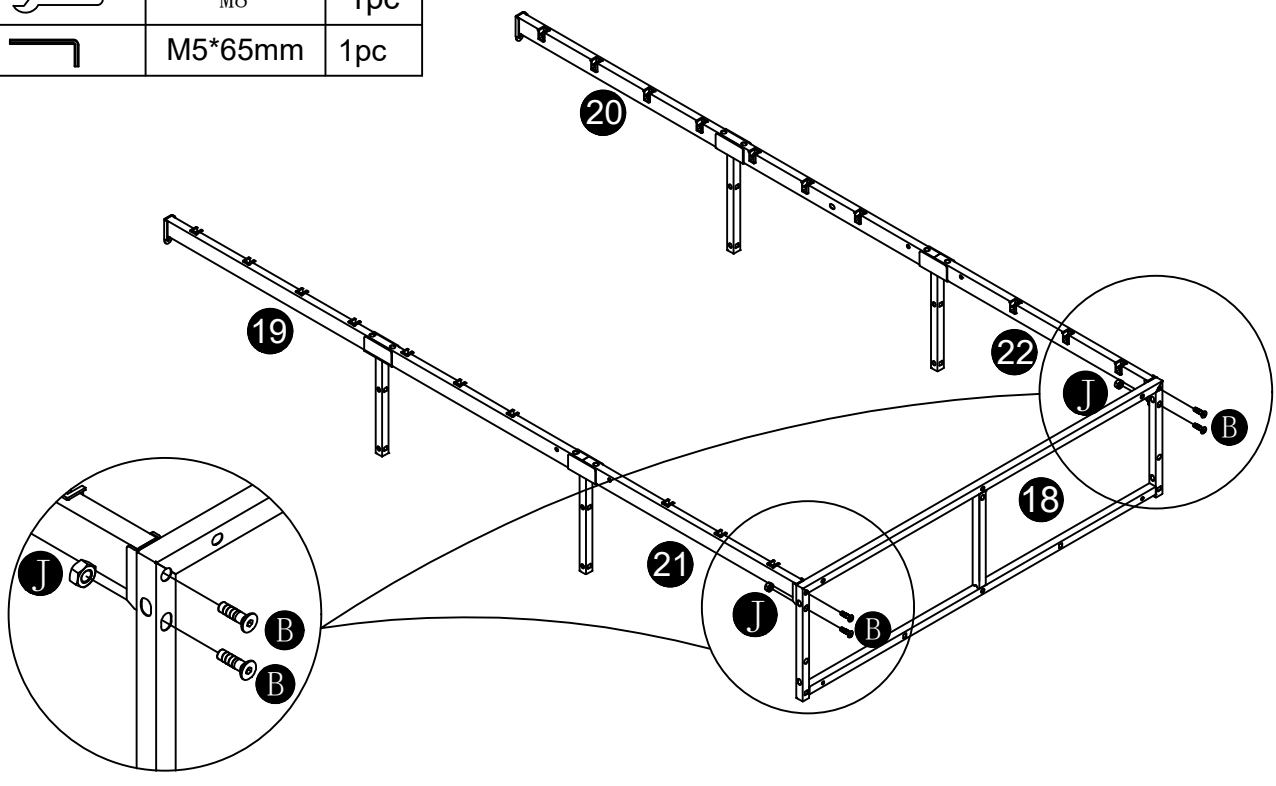

Step22			
B		M8x35mm	4pcs
L		M5*65mm	1pc

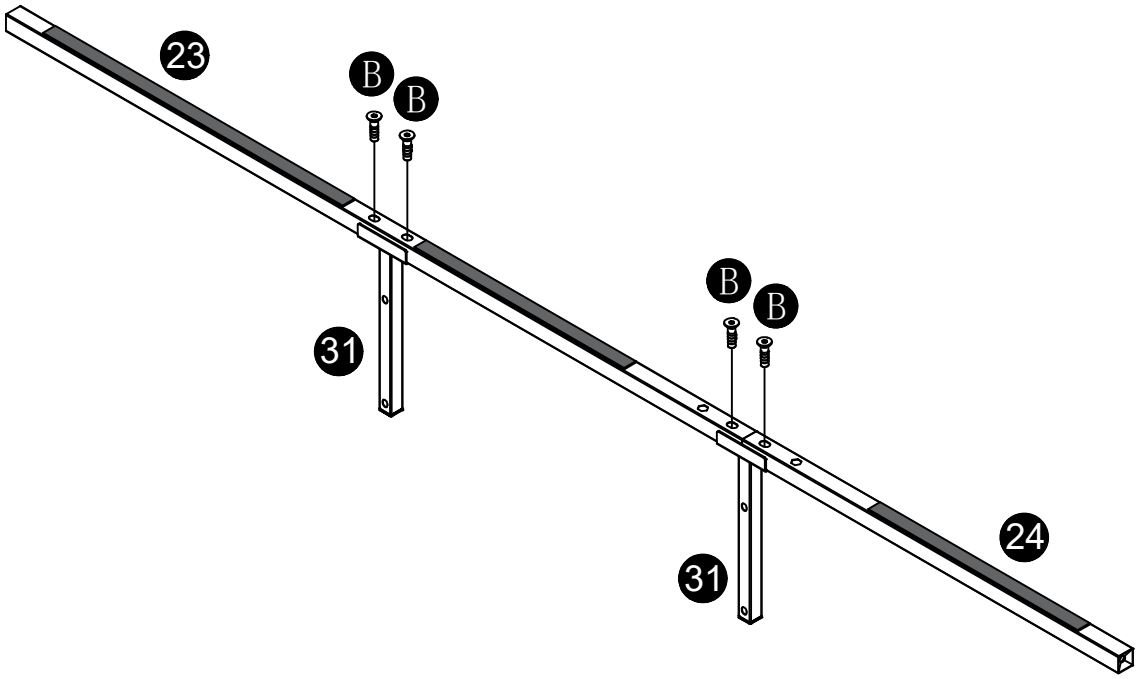


Step23			
B		M8x35mm	1pc
L		M5*65mm	1pc

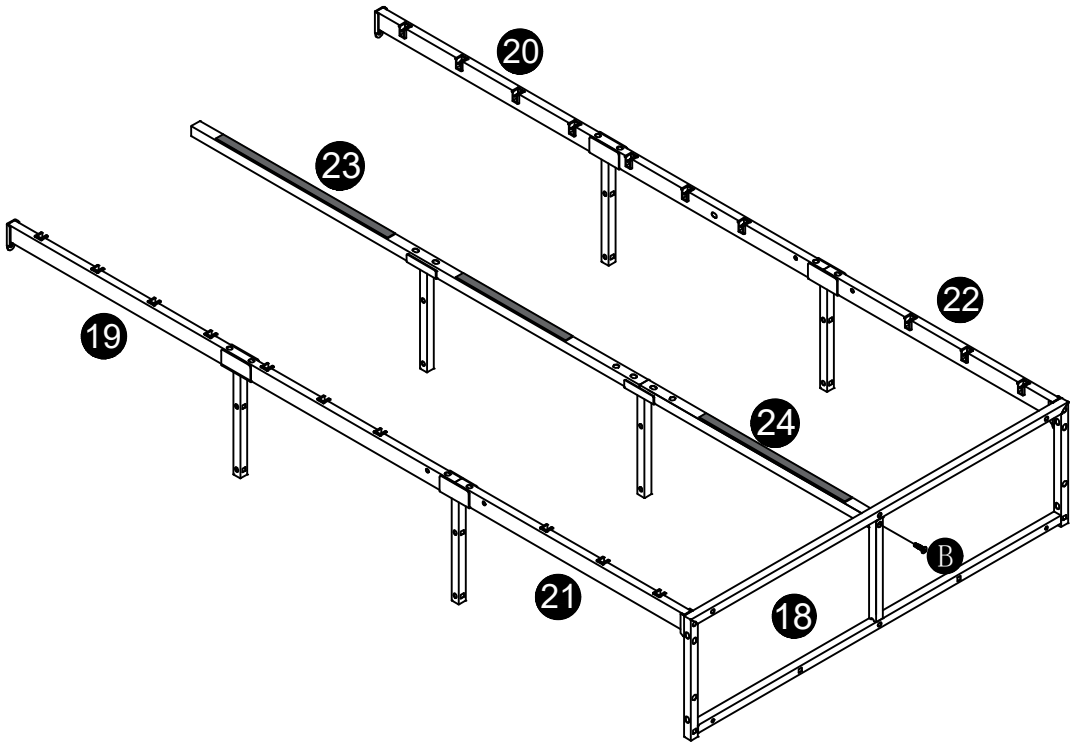

Step24


F		M6x35mm	6pcs
M		M4*65mm	1pc

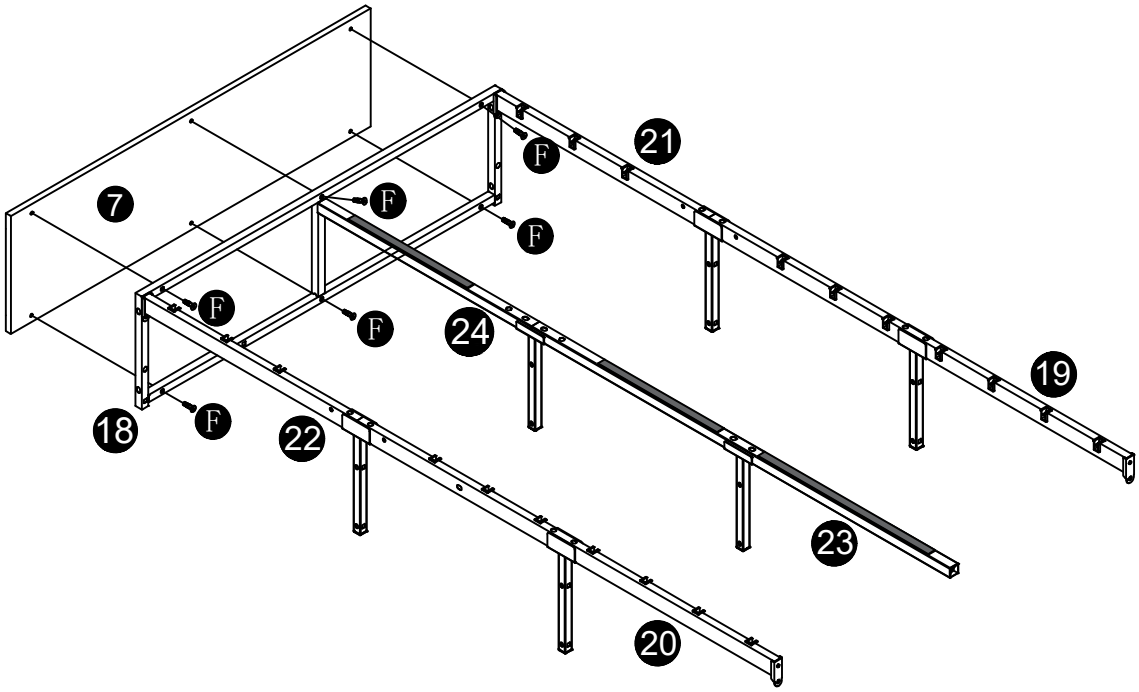


Step25

F		M6x35mm	8pcs
M		M4*65mm	1pc

Please pay attention to the direction.

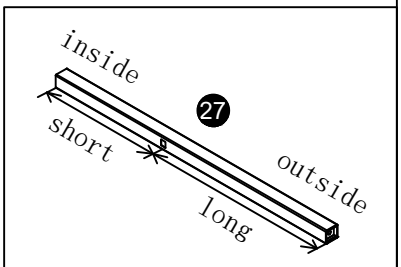



Step26

B		M8x35mm	5pcs
J		M8	2pcs
K		M8	1pc
L		M5*65mm	1pc


Tighten 80%



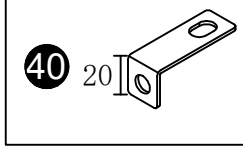


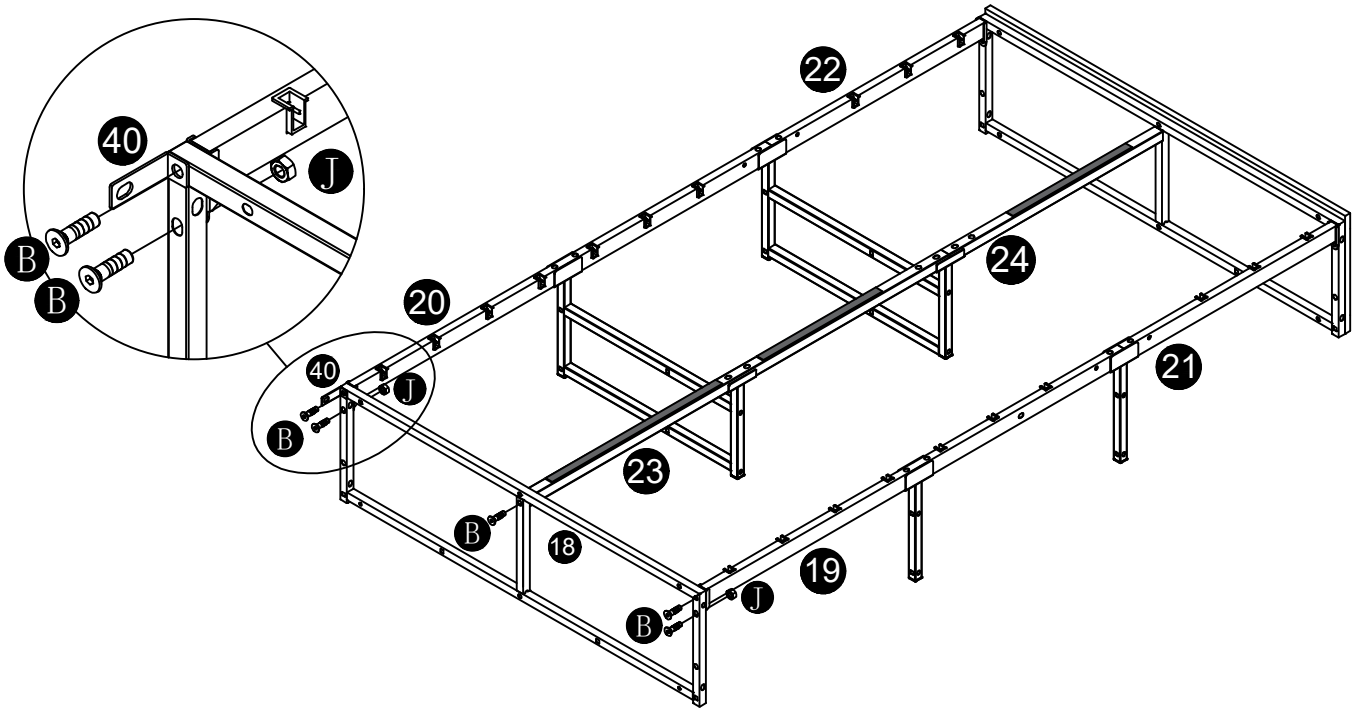

Step27

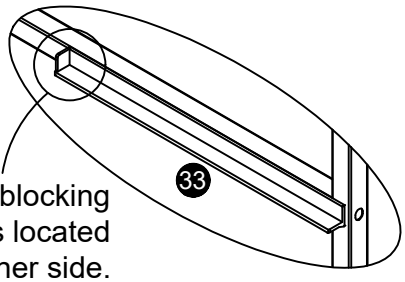


The blocking plate is located on the inner side.

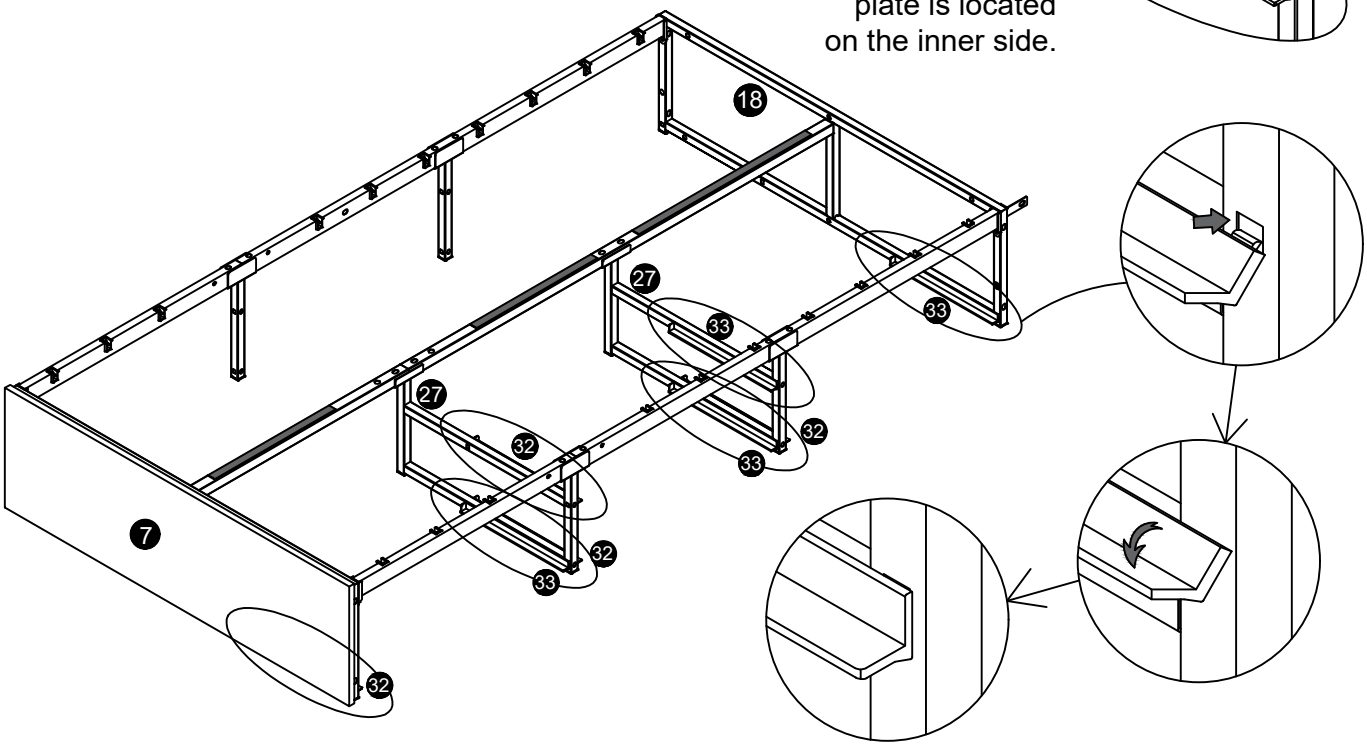


Step28

B		M8x35mm	2pcs
F		M6x35mm	4pcs
L		M5*65mm	1pc
M		M4*65mm	1pc

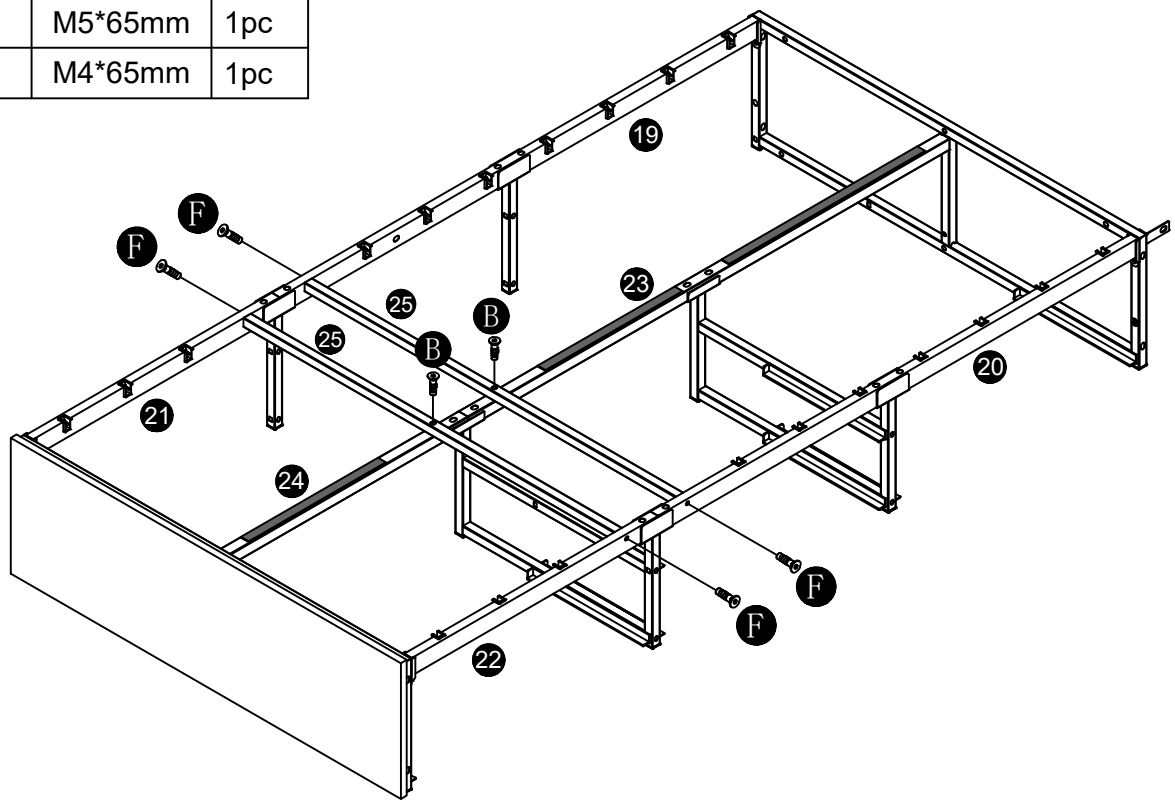

Step29

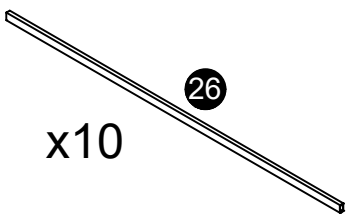



Step30

D		M8x15mm	1pc
L		M5*65mm	1pc

Tighten 80%





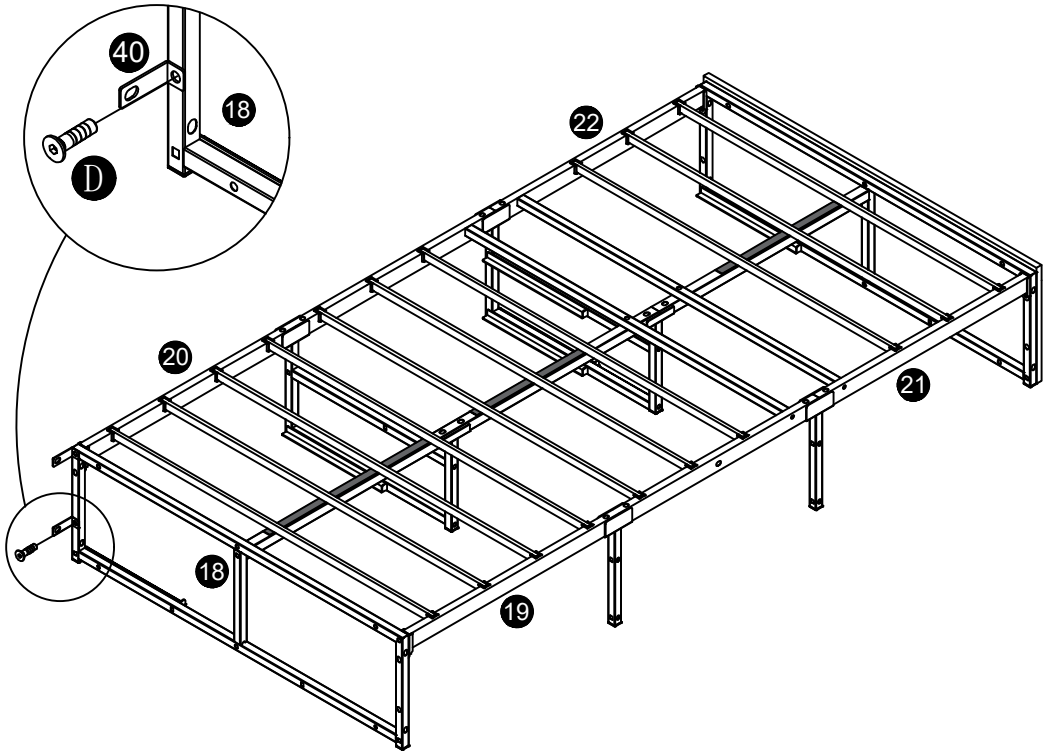


Step31

B		M8x35mm	5pcs
L		M5*65mm	1pc


Step32

D		M8x15mm	3pcs
L		M5*65mm	1pc

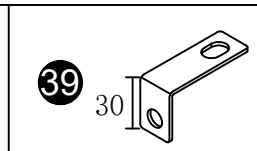

Tighten 80%



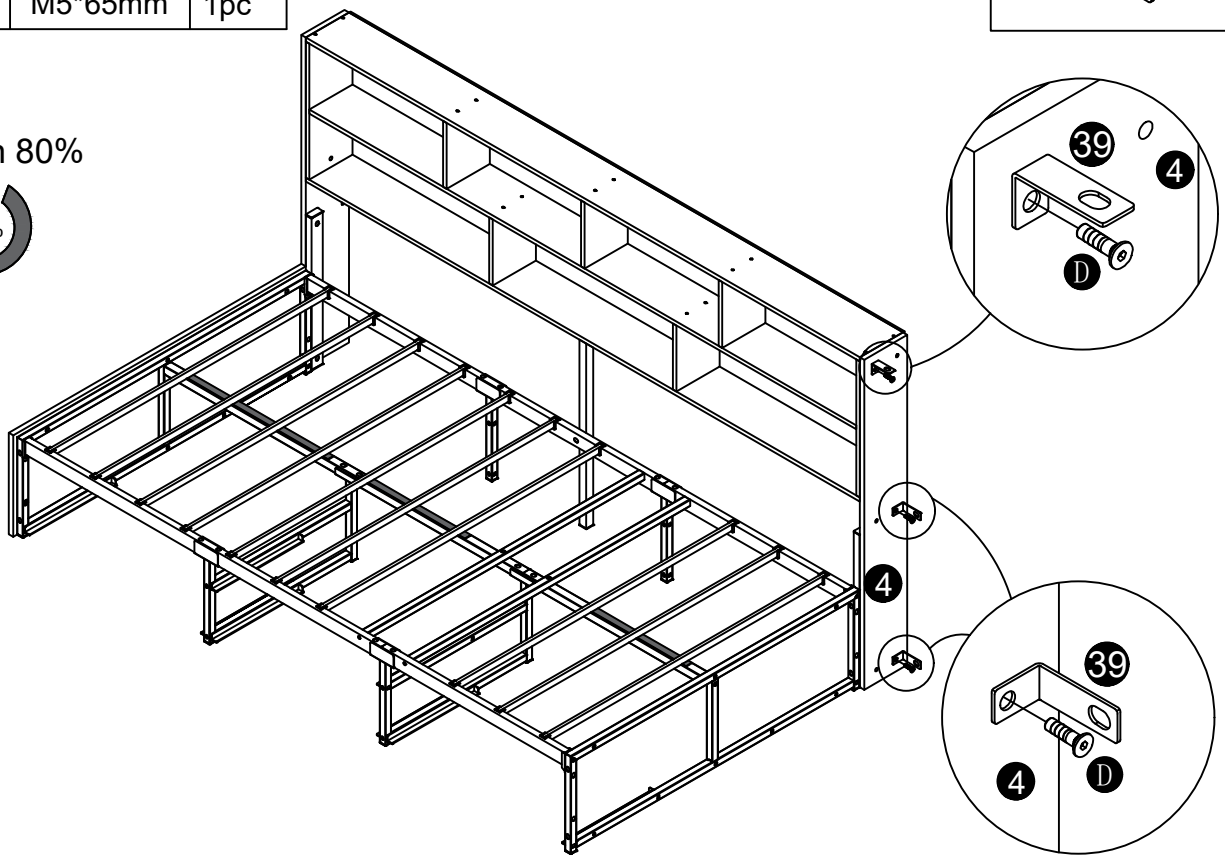


Step33

D		M8x15mm	2pcs
E		M8x10mm	1pc
L		M5*65mm	1pc

Tighten 100%




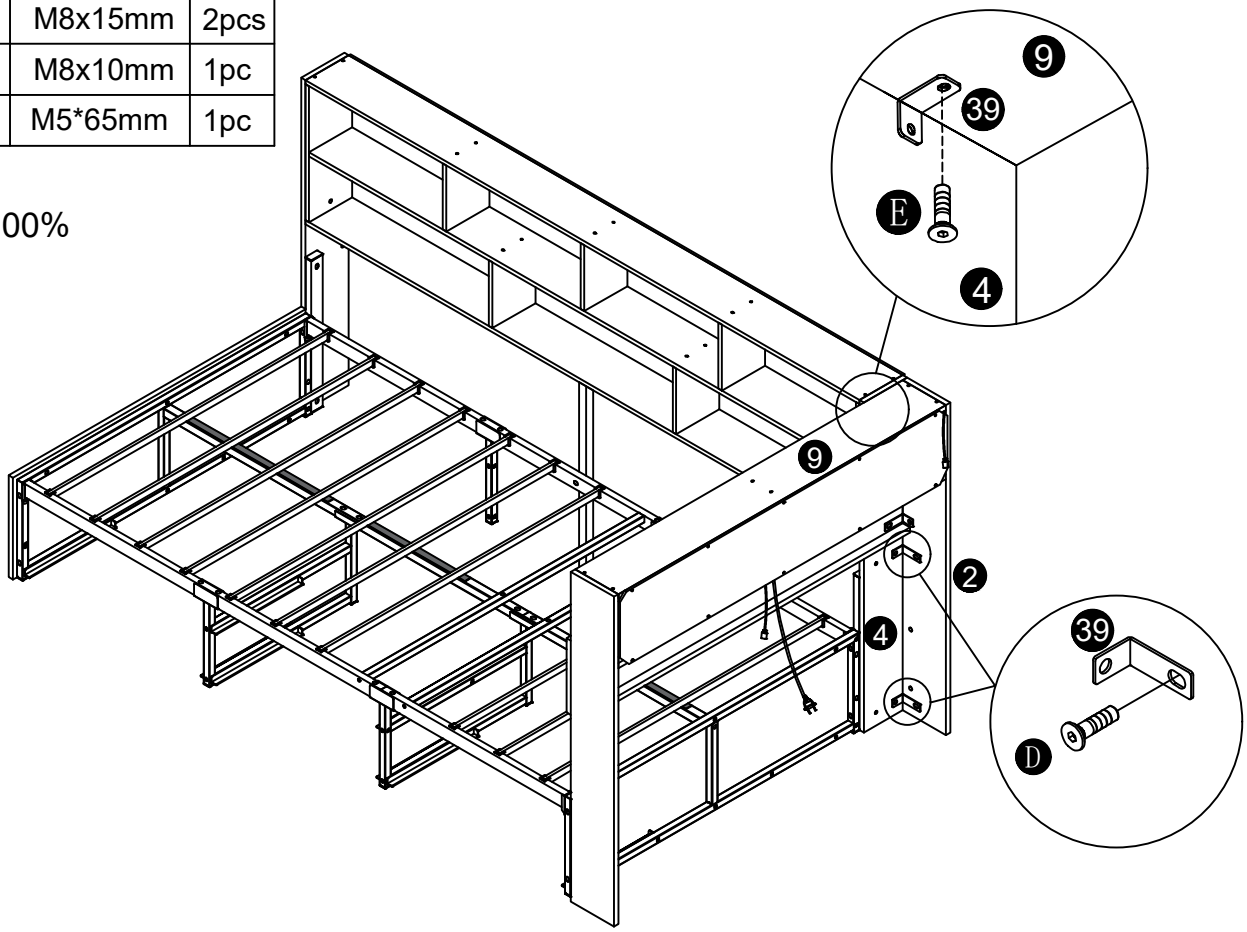


Step34

D		M8x15mm	2pcs
L		M5*65mm	1pc

Step35

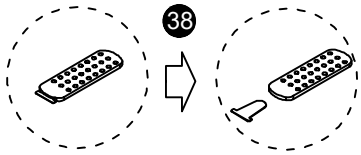


Extract the insulation sheet

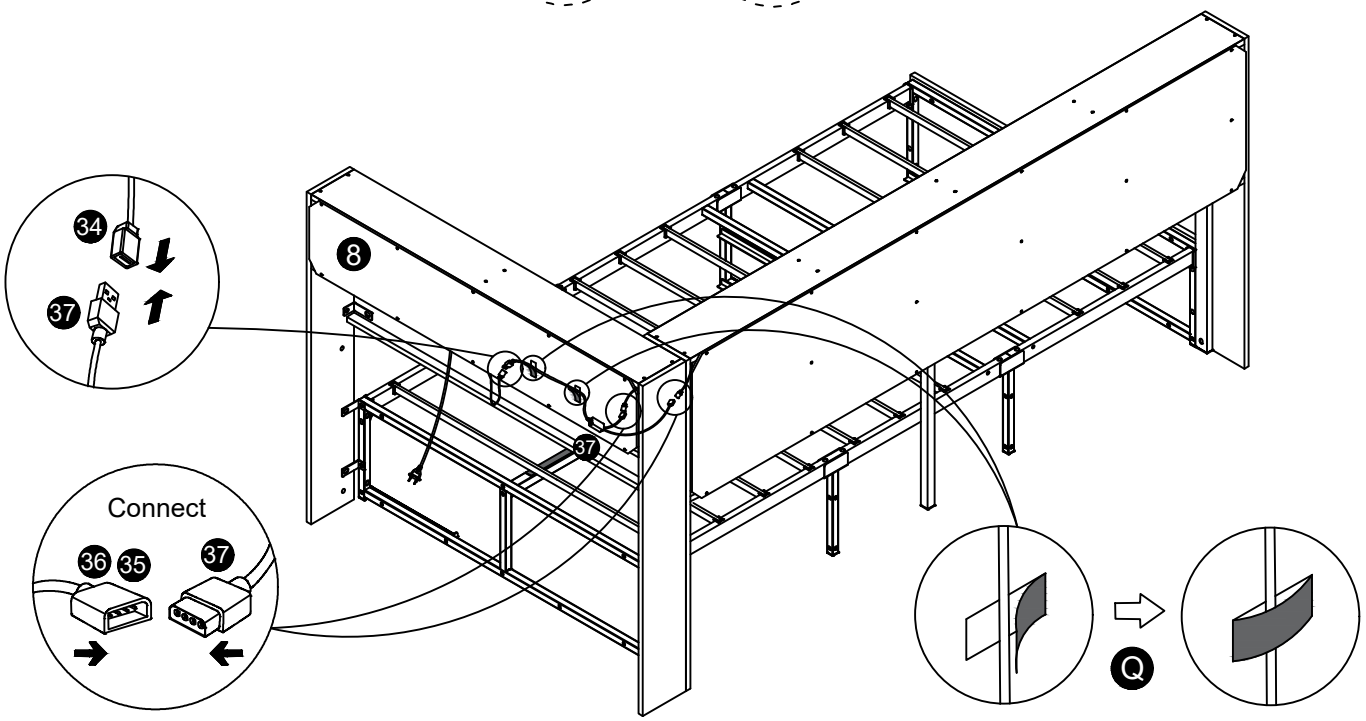


Tear open the Velcro, thread the light line through the Velcro, and stick the Velcro on.


Step36

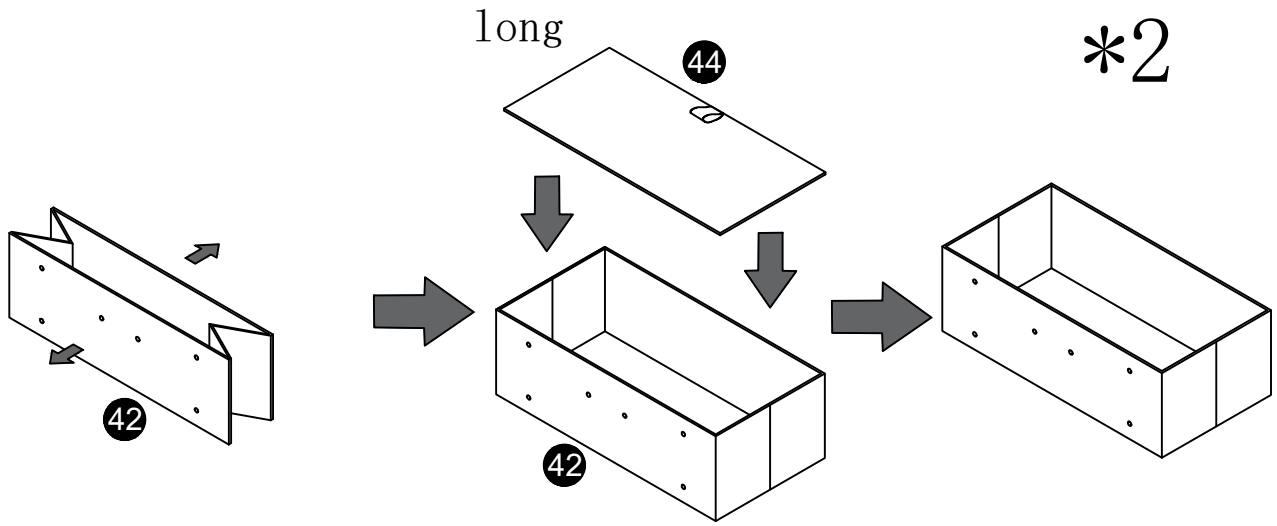


Step37

G		M6x12mm	8pcs
P		M4x20mm	4pcs
M		M4*65mm	1pc
L		M5*65mm	1pc

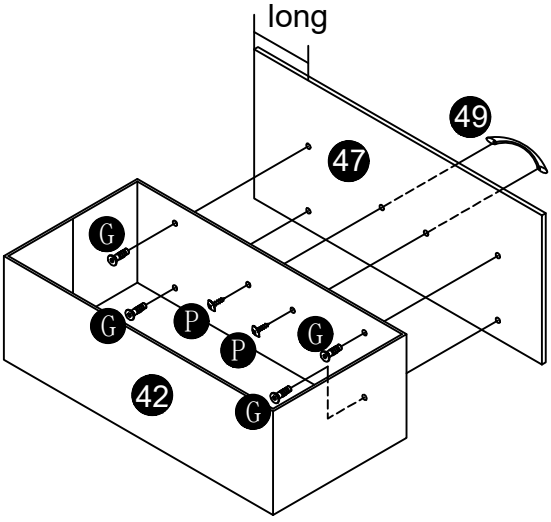

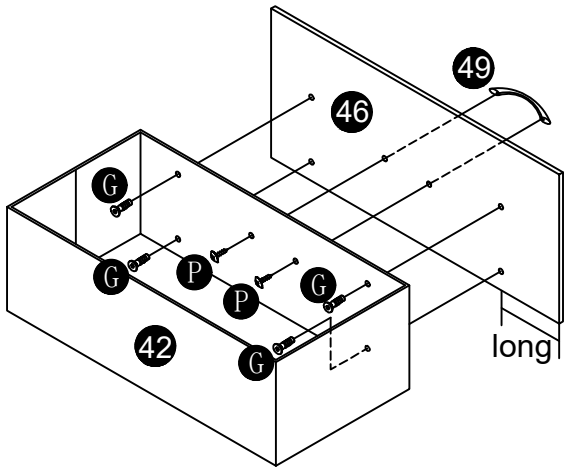


Step38

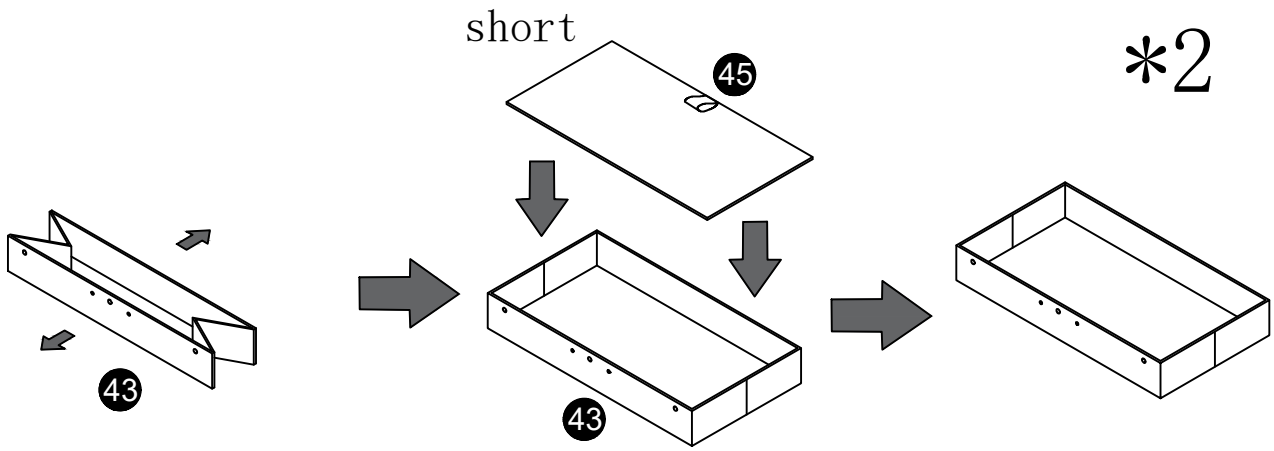


Step39


G		M6x12mm	6pcs
P		M4x20mm	4pcs
M		M4*65mm	1pc
L		M5*65mm	1pc

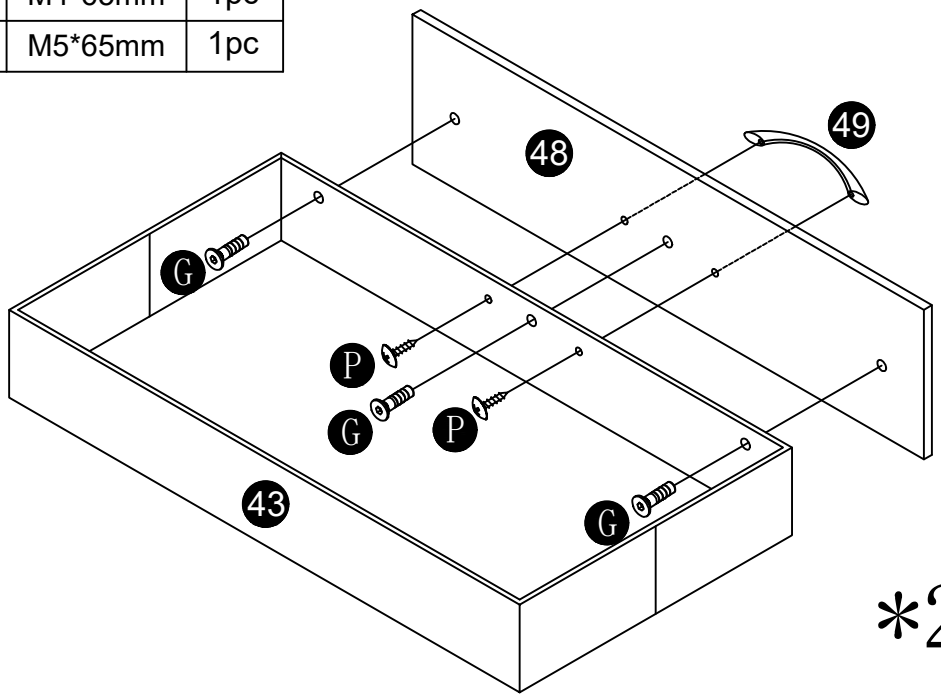

Step40

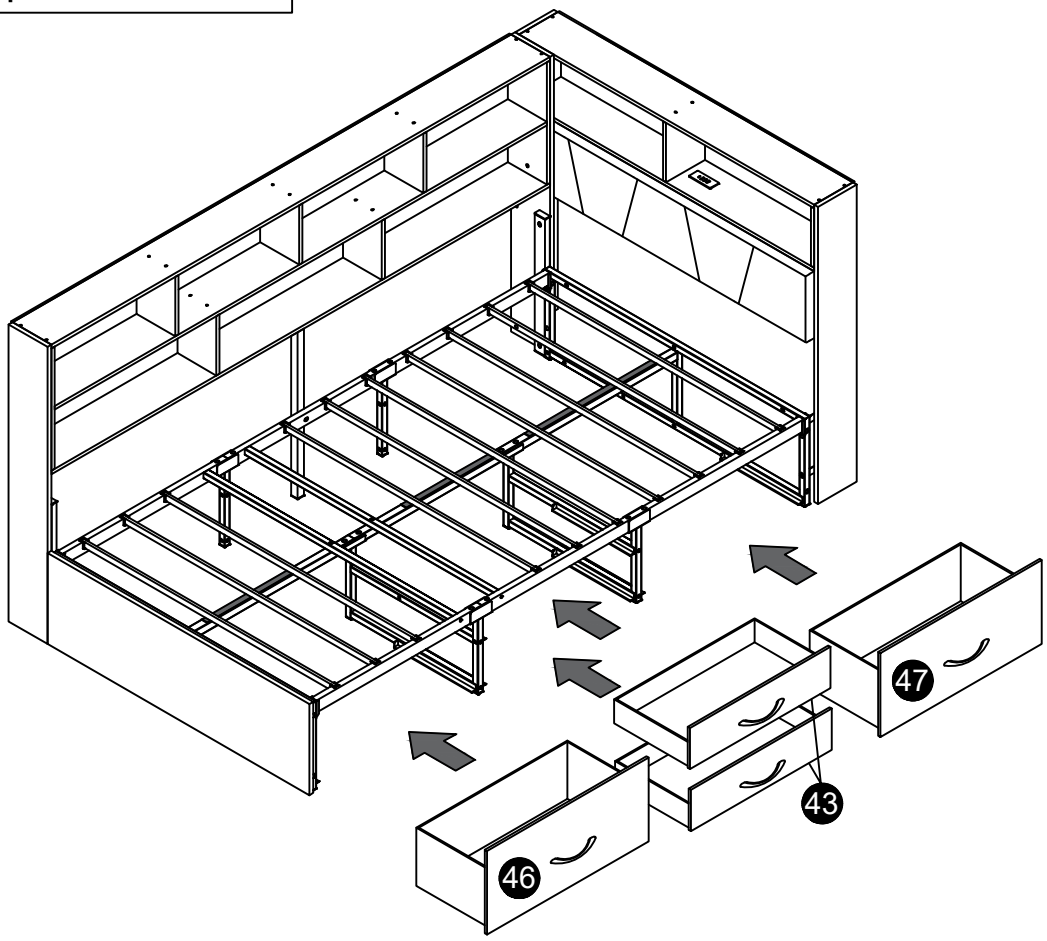

Step41

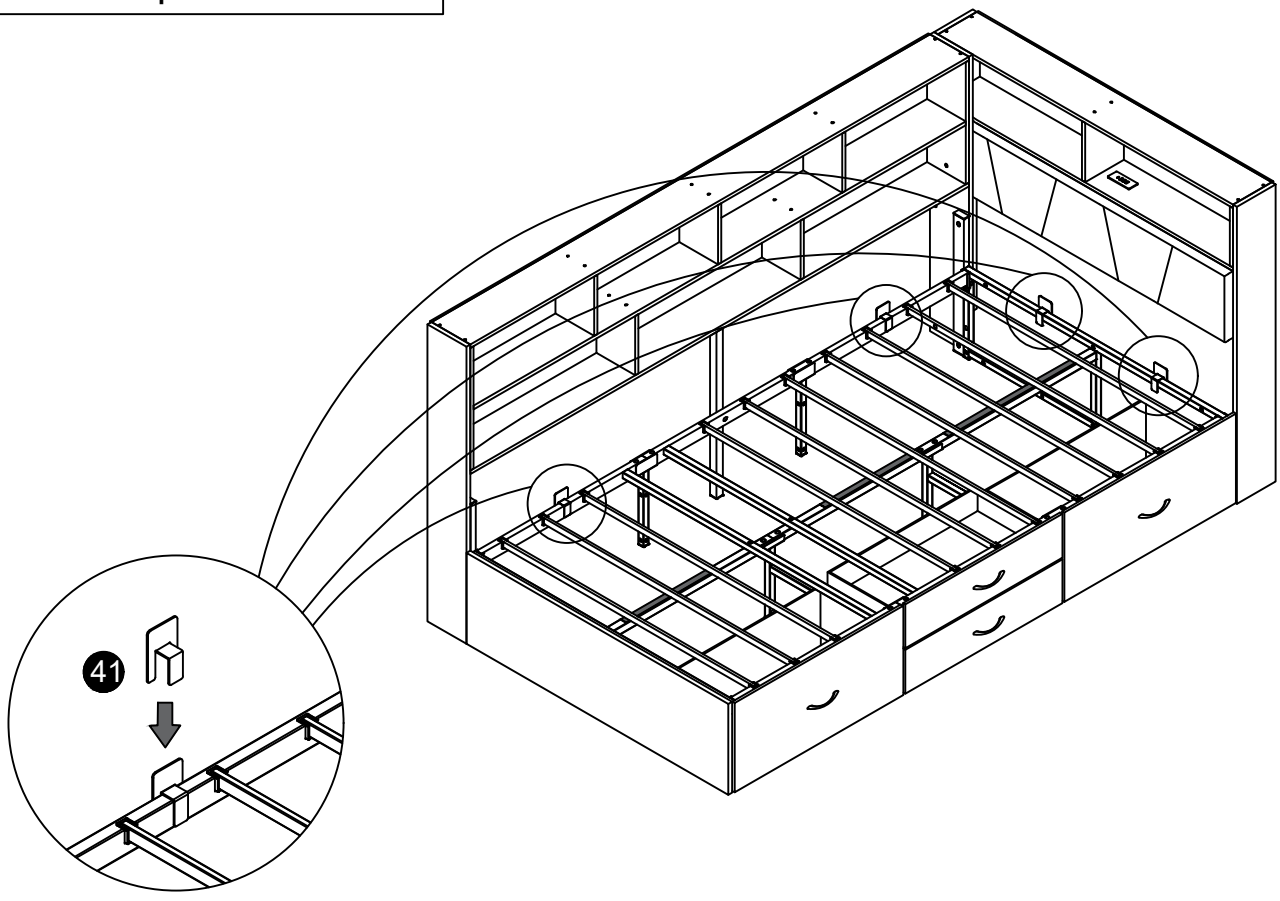

Step42

