

U-Shaped Sofa


Instruction Manual

SF-UZ6-DKGY

SF-UZ6-BG

SF-UZ6-BN

SF-UZ6-GN

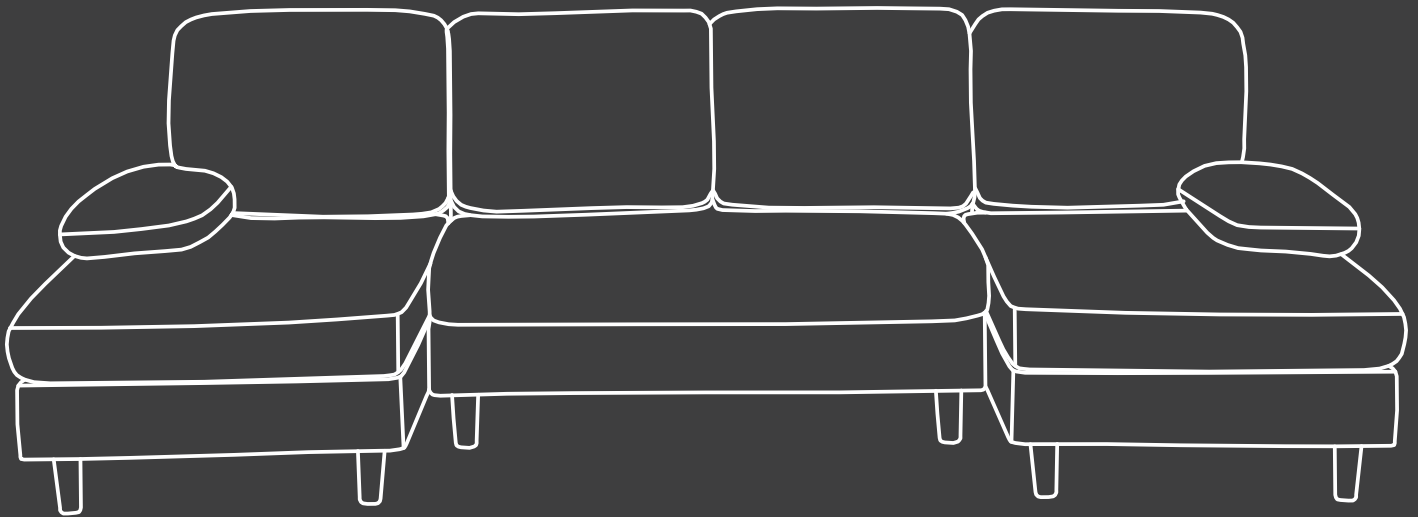


 EST 9:00AM--17:00PM

 HJ-Customer-Service@outlook.com


 (909)637-7665 | (909)637-7593

1 Component List


A1 x1

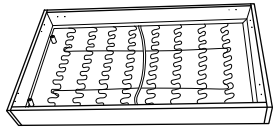


A2 x1

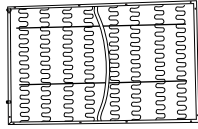

B x1

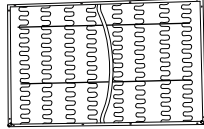

C x2



D x2




E x2




F x2



G x2

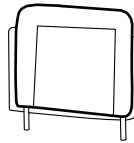

H x1



I1 x1




I2 x1



J x1



K x2



L1 x1



L2 x1



M x2



N x12



O x1



M6

P x24



8*45mm

Q x54



8*20mm

R x12



S x4



T x12





Felt Pads

U x6




Split Lock Washer

Exploded View

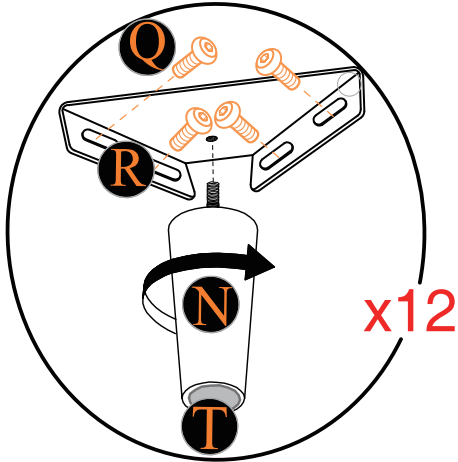
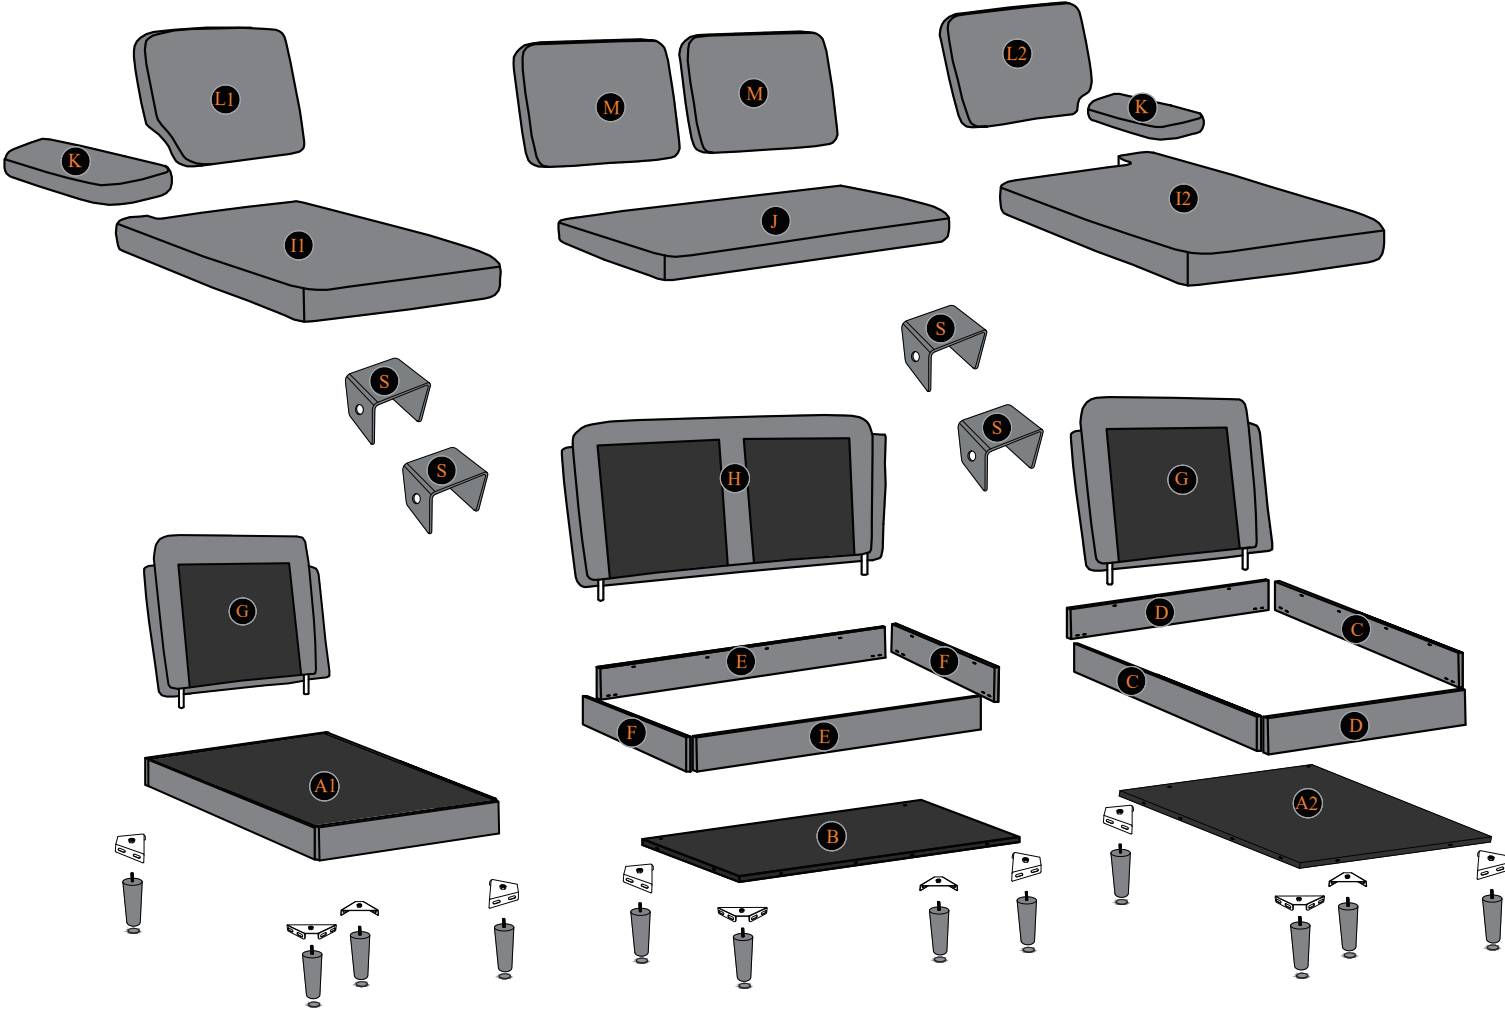





Step 1

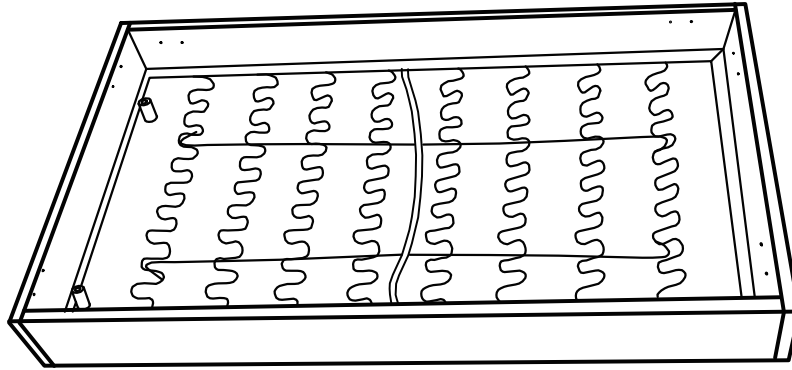
A1

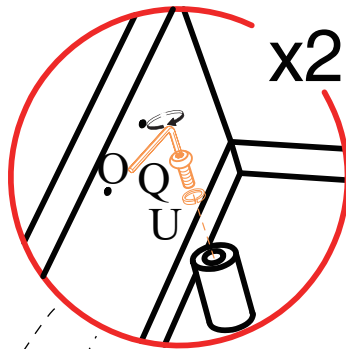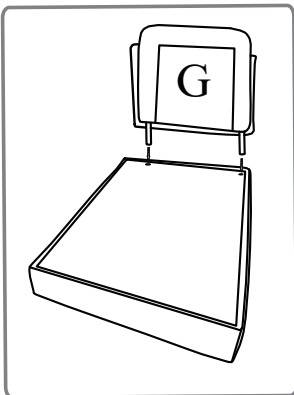


Step 2




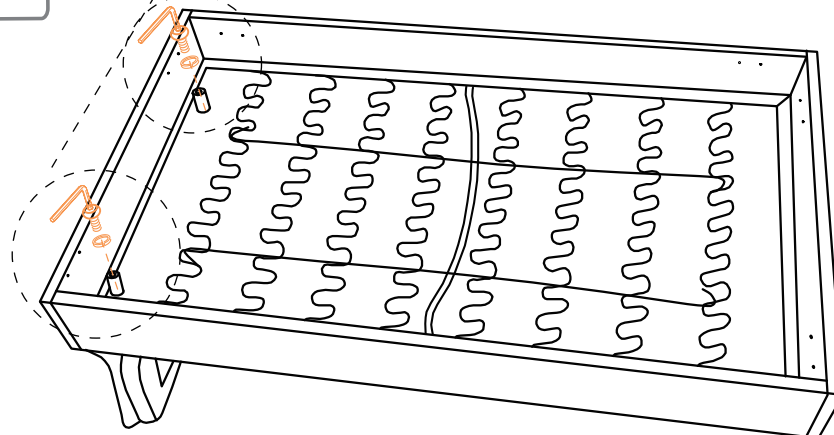


 M6 O*1	 8*20mm Q*2	 U*2
--	--	--

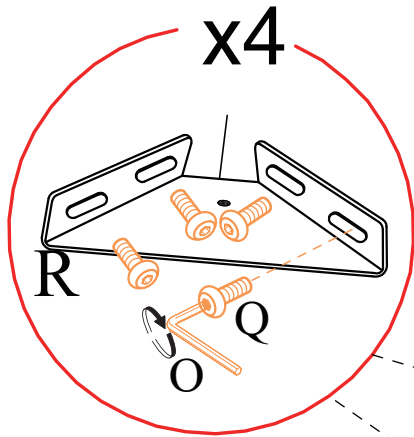



Step 3



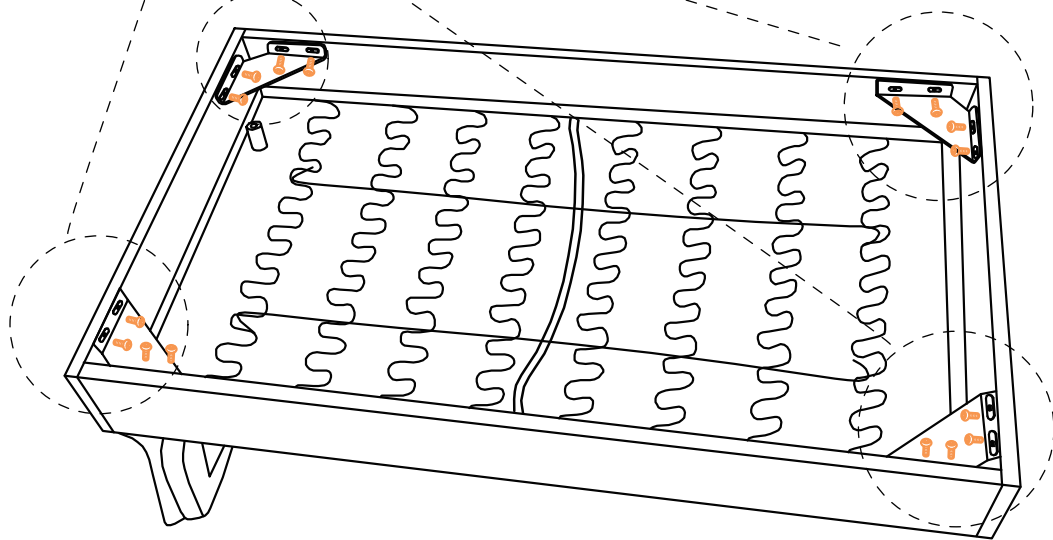


		
R*4	M6 O*1	8*20mm Q*16



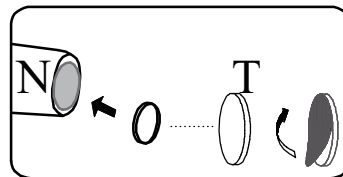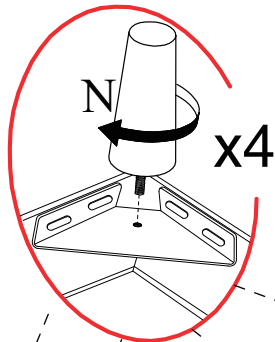

Step 4


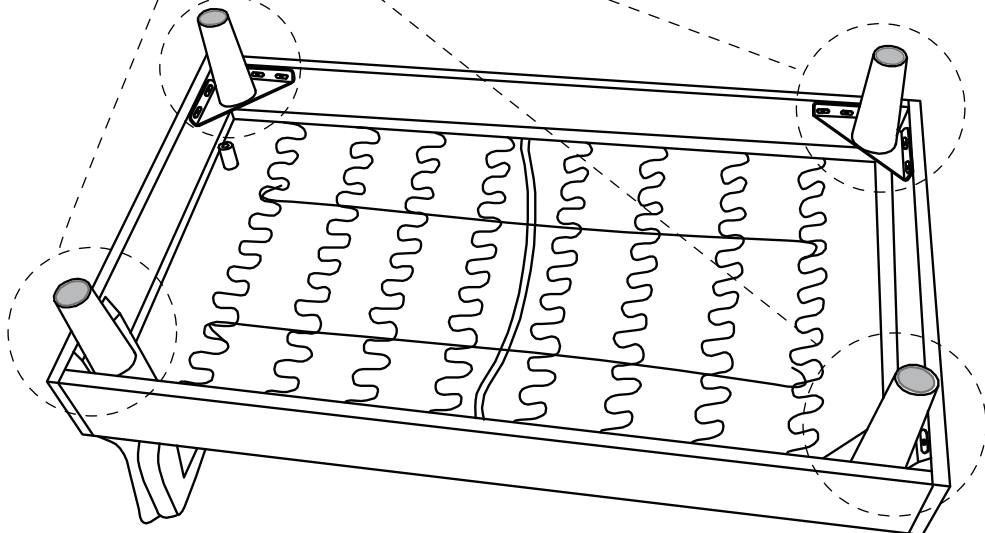


	
N*4	T*4








Step 5

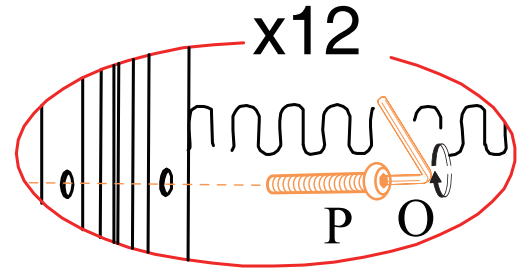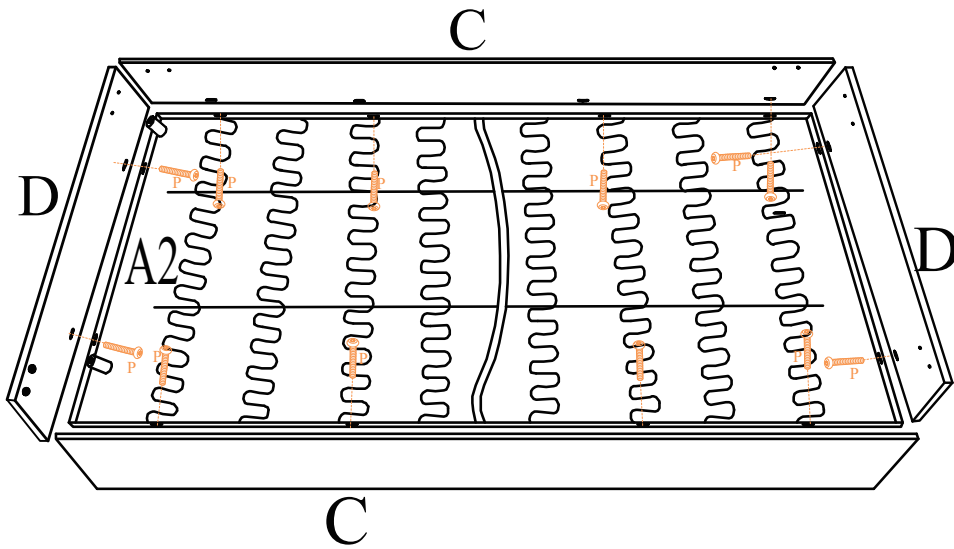
	
M6	8*45mm
O*1	P*12

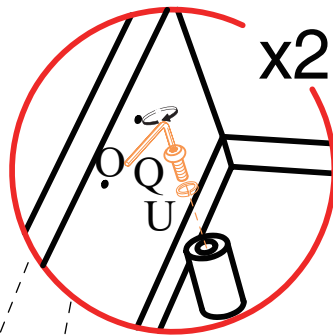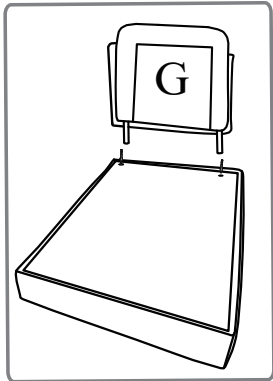


Step 6




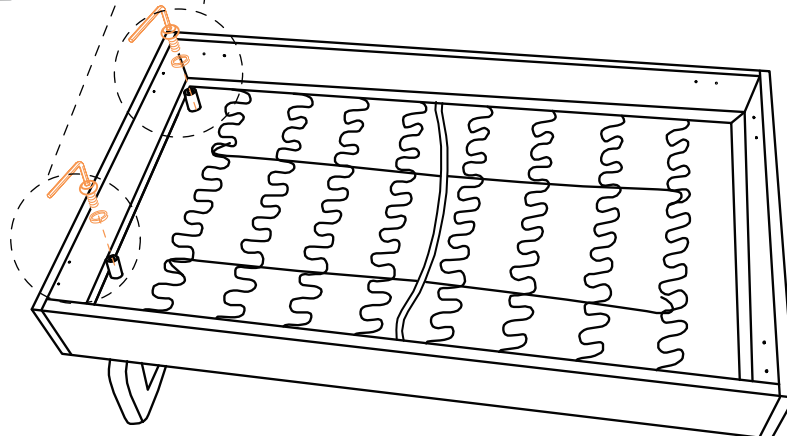


		
M6	8*20mm	
O*1	Q*2	U*2

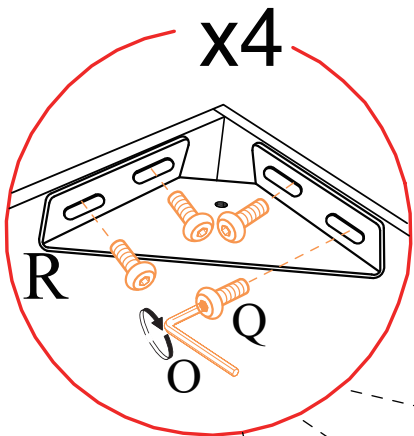



Step 7





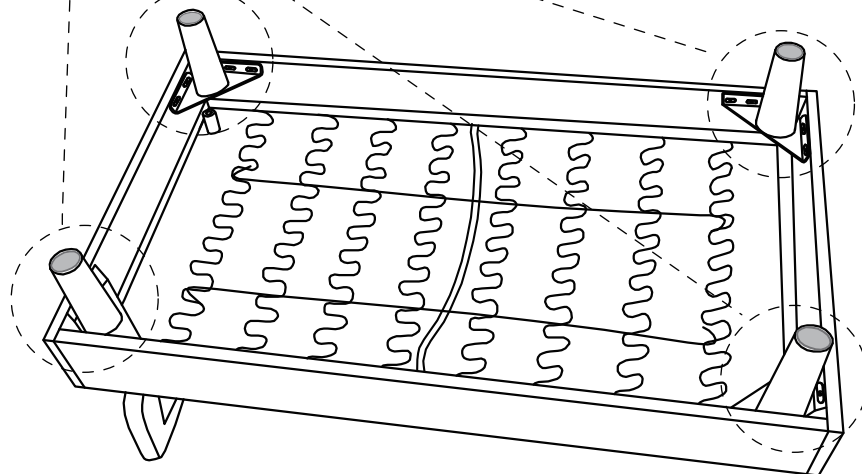
		
R*4	M6 O*1	8*20mm Q*16

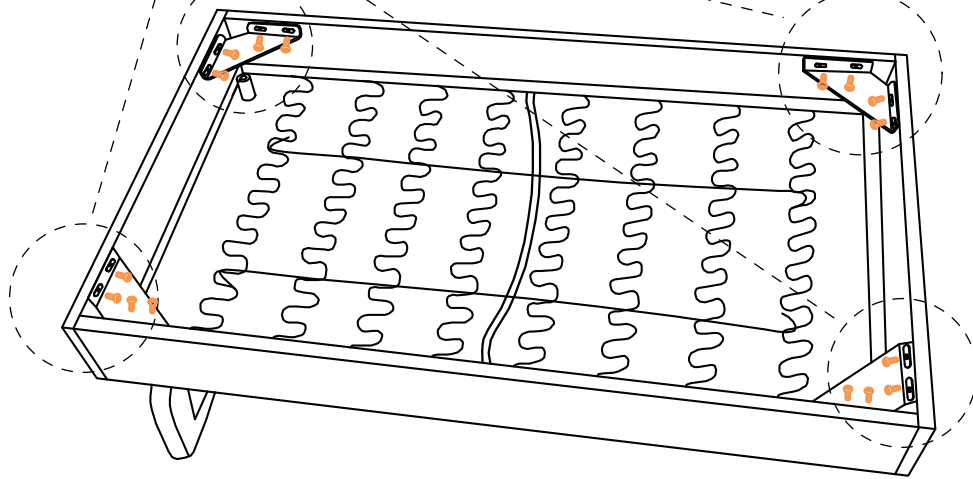


Step 8

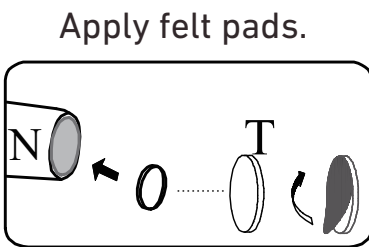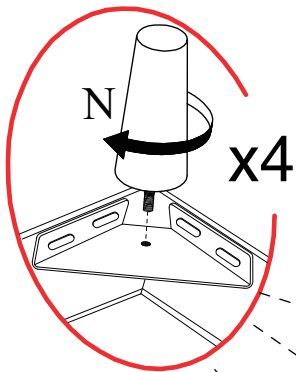




	
N*4	T*4

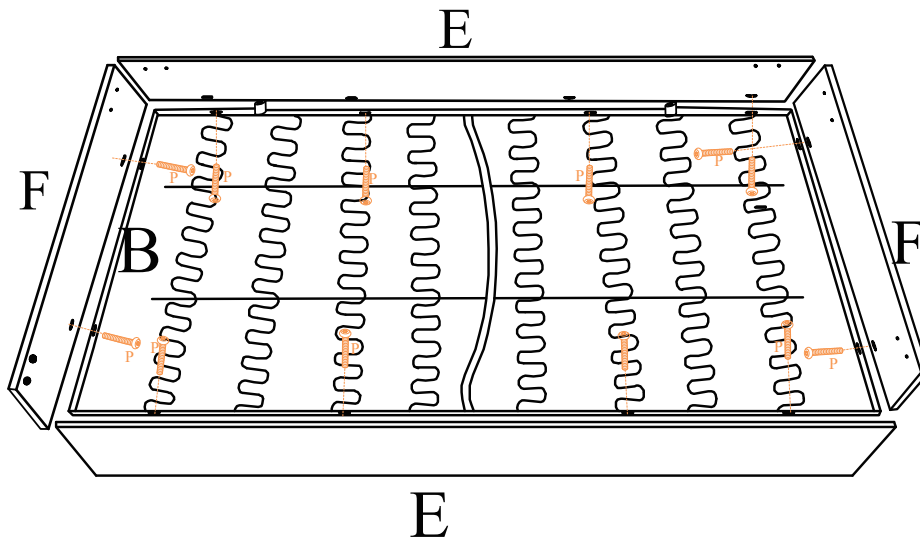


Step 9



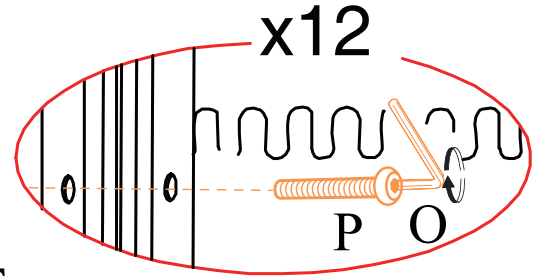


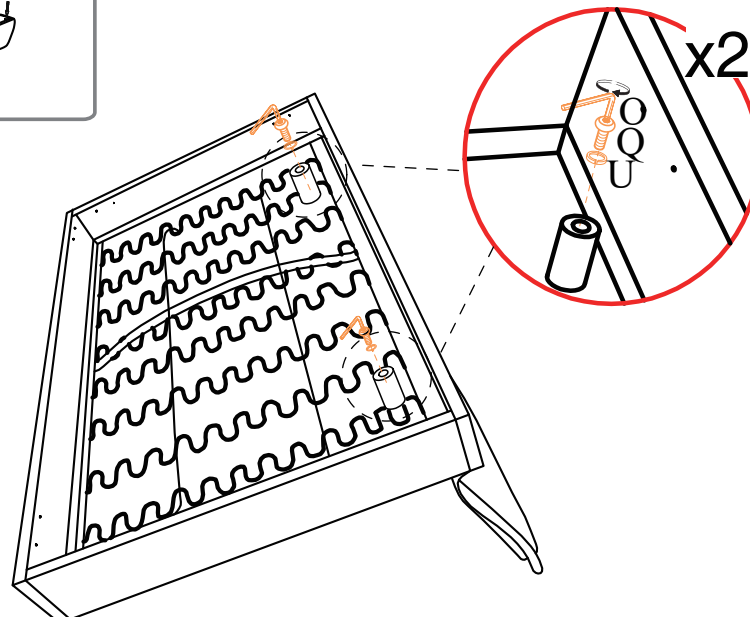
	
M6	8*45mm
O*1	P*12

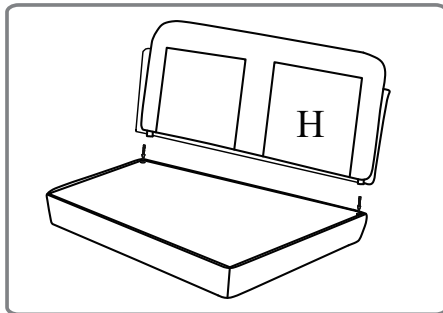


Step 10







		
M6	8*20mm	
O*1	Q*2	U*2

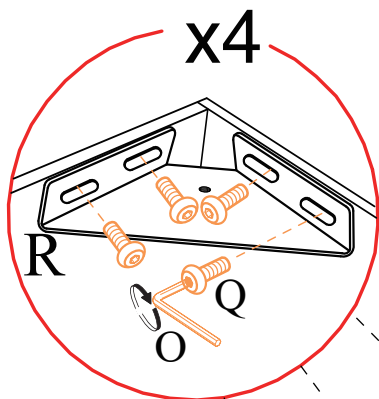


Step 11




		
R*4	O*1	8*20mm Q*16

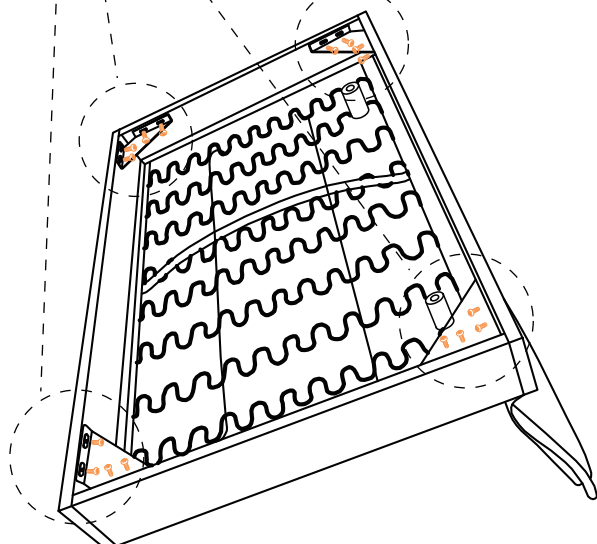



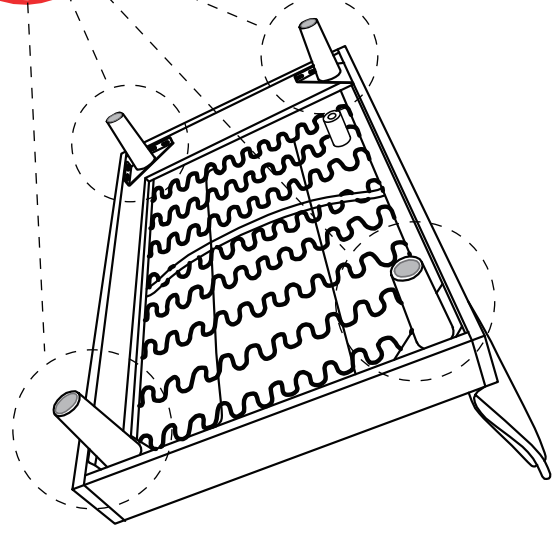
Step 12

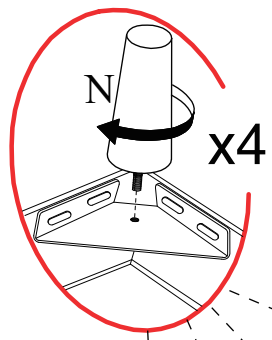


Apply felt pads.

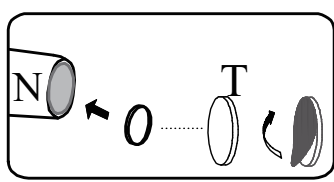


	
N*4	T*4




Step 13



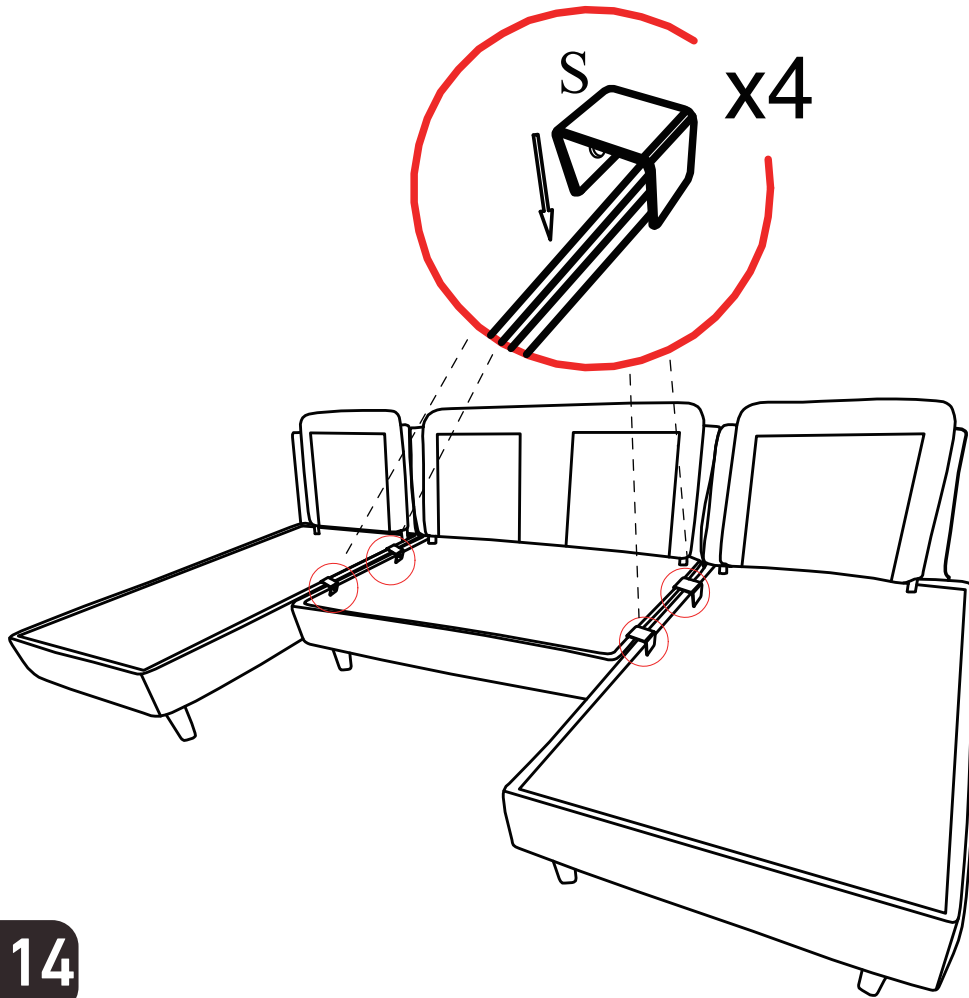


Step 14

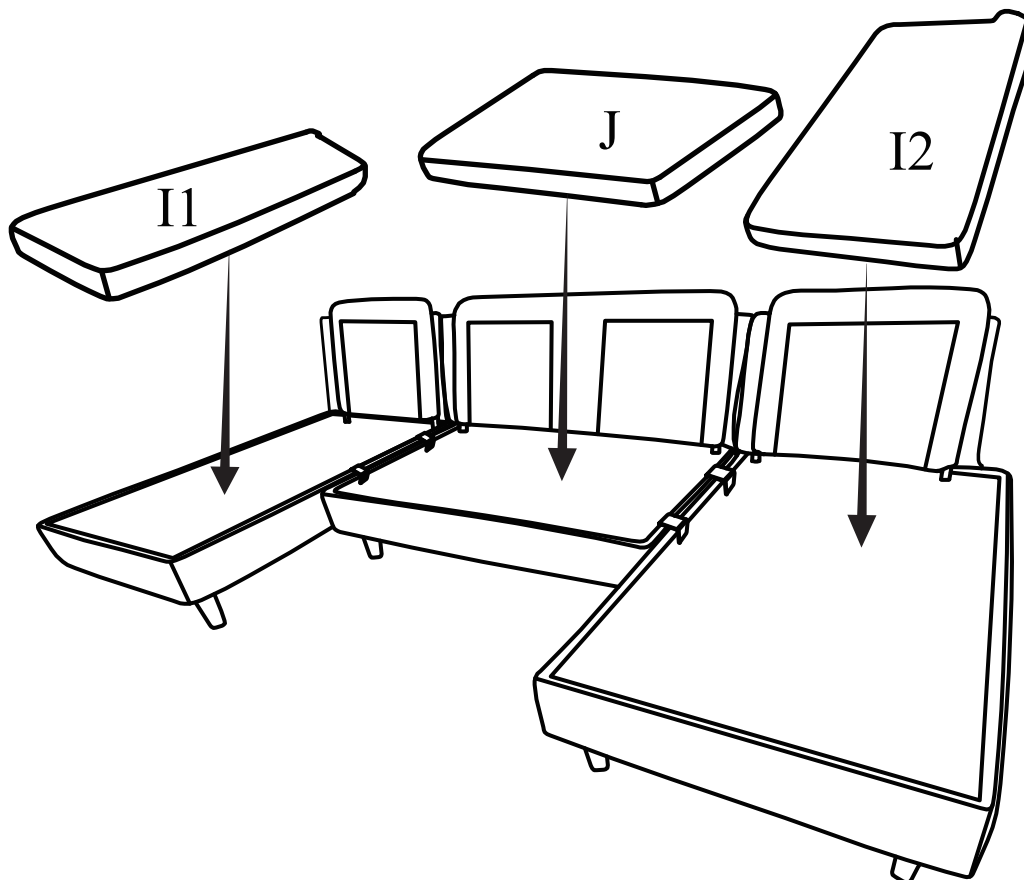


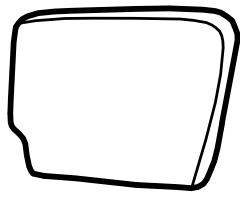





Pat the back cushion/armrest cushion 3 times along with longitude direction

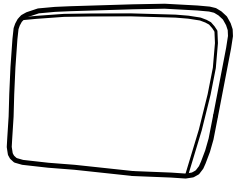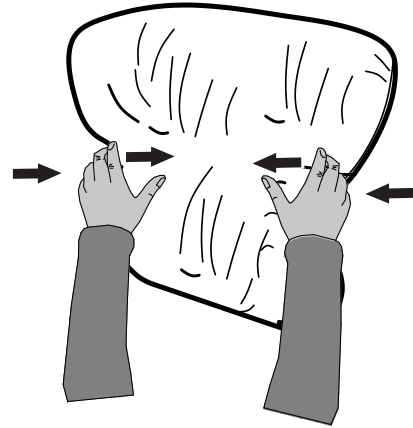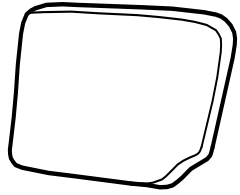


Pat the back cushion/armrest cushion 3 times along with latitude direction

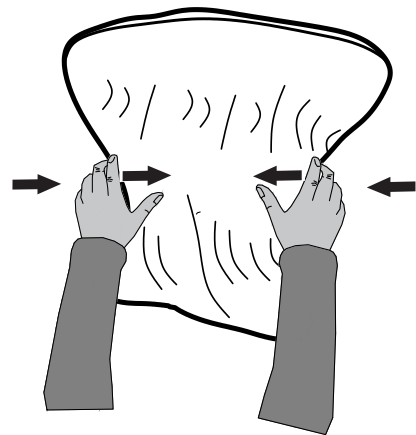


Pat the back cushion/armrest cushion surface 3 times

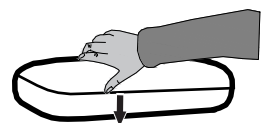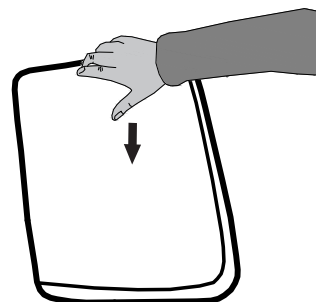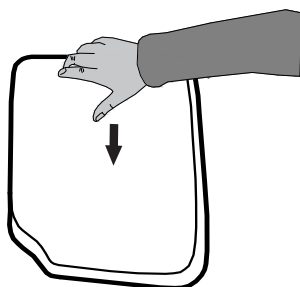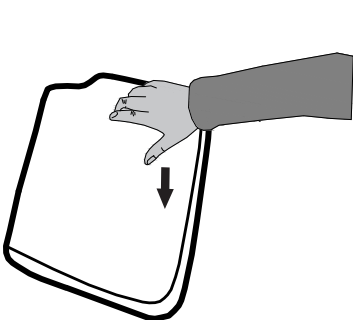


Step 15

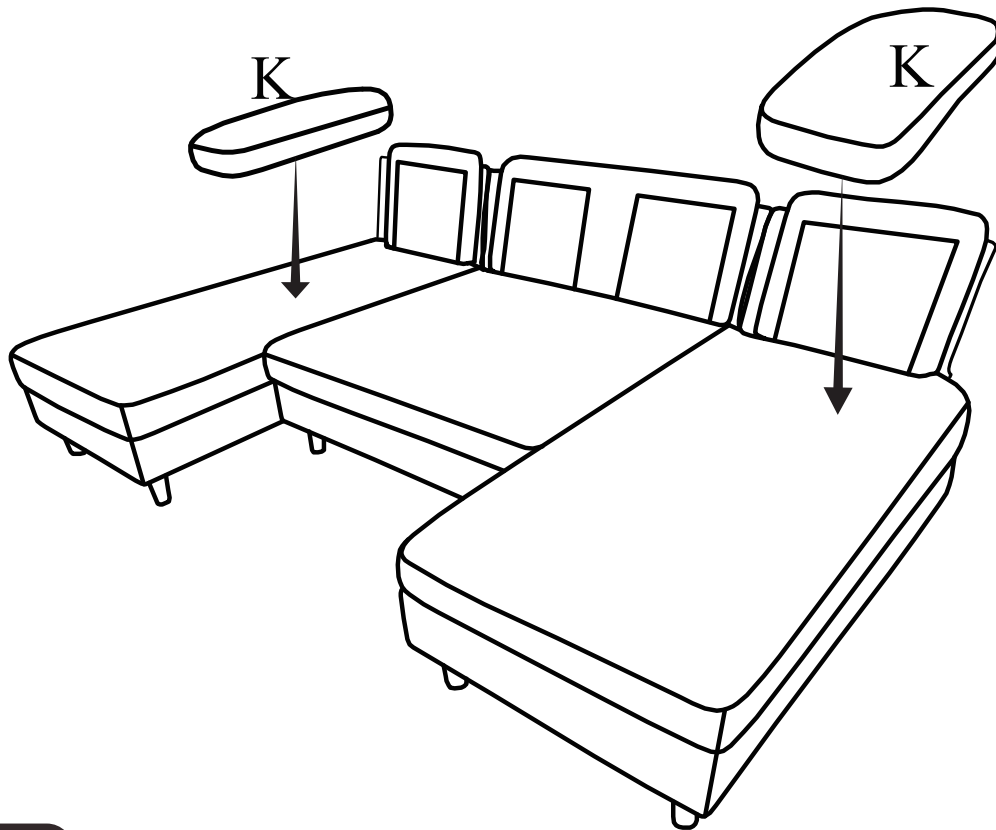

Step 16

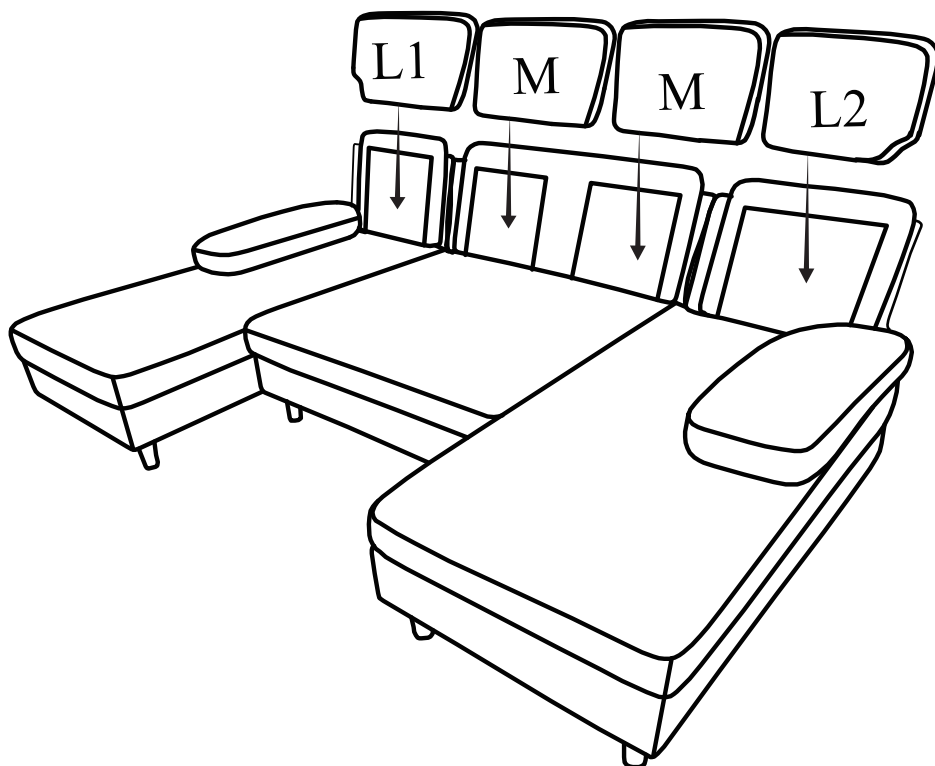


Step 17

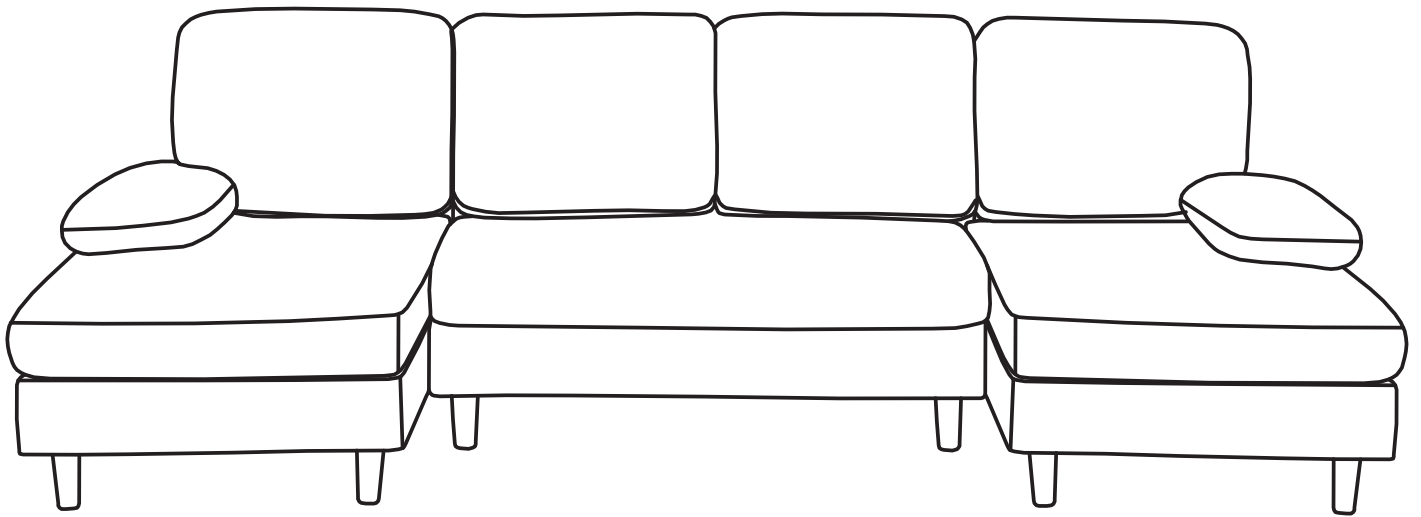

Note:

After assembly, there may be visible compression marks on the surface. Gently pat the affected areas and allow the sofa to rest for 1-2 weeks. The surface will gradually return to its original shape.

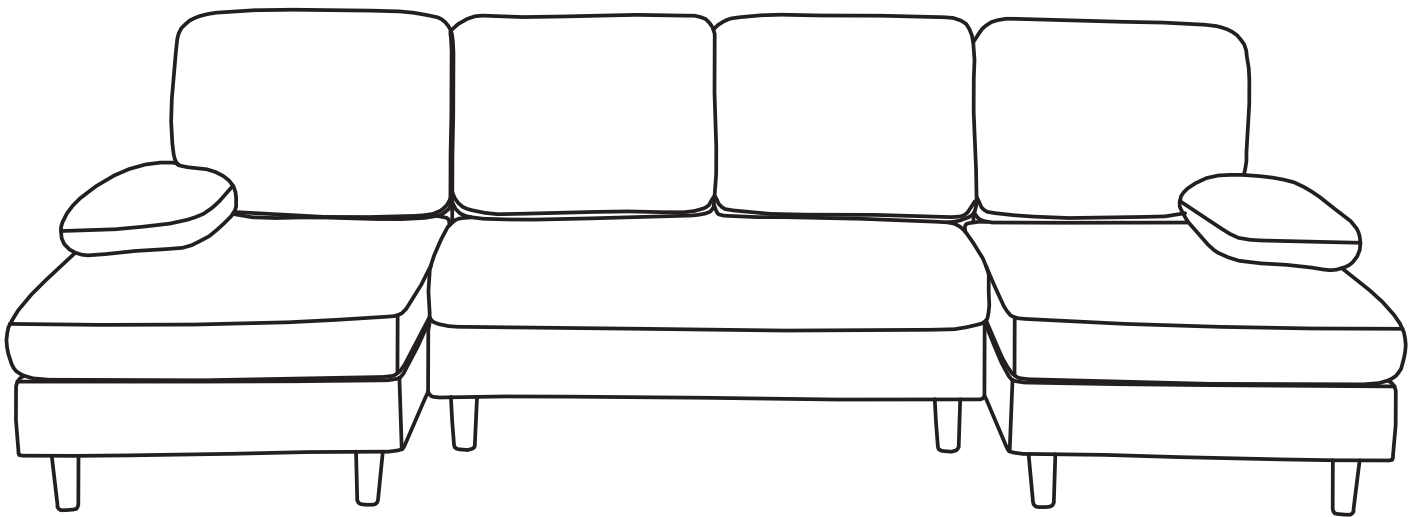

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.