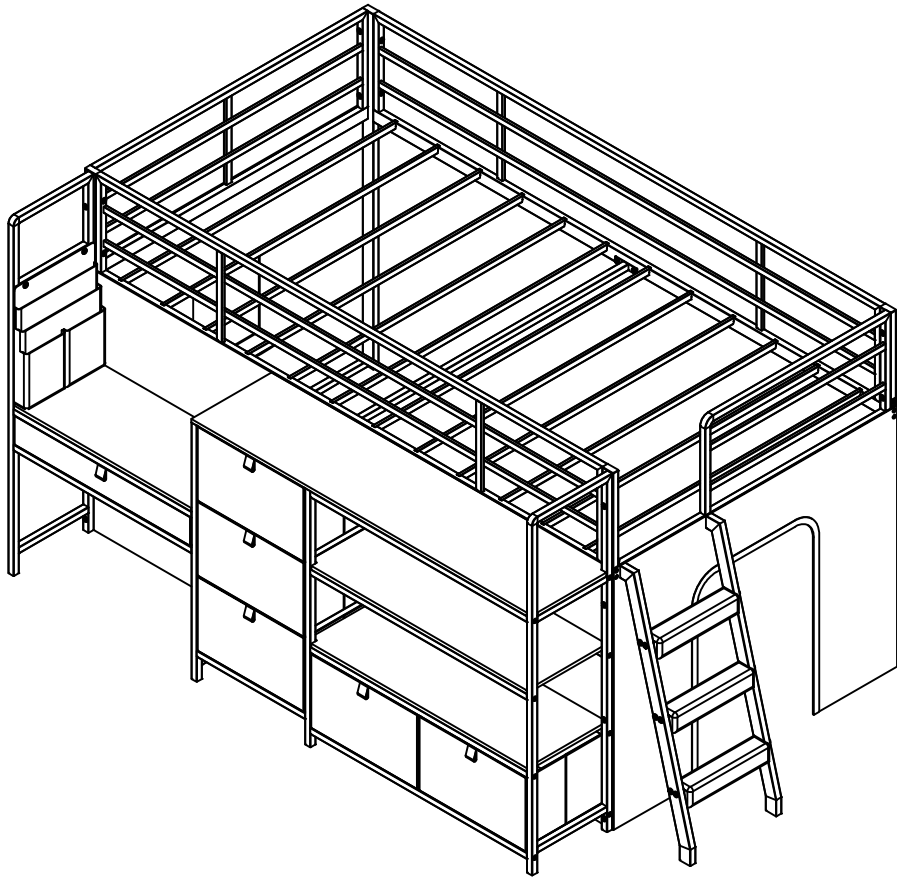


BUNK BED

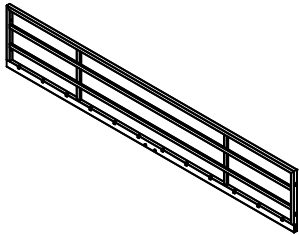
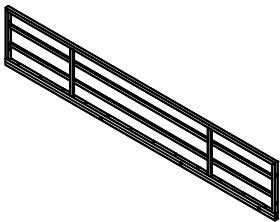
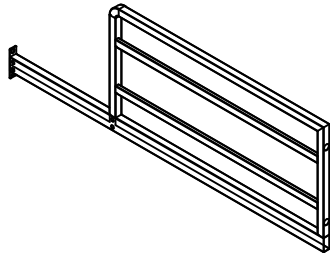
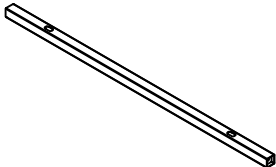
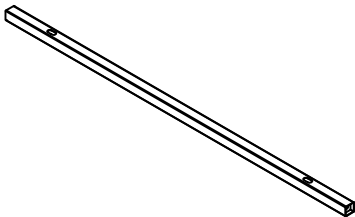
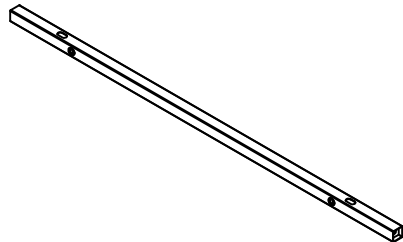

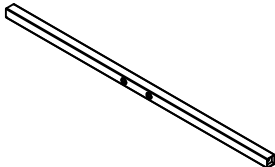

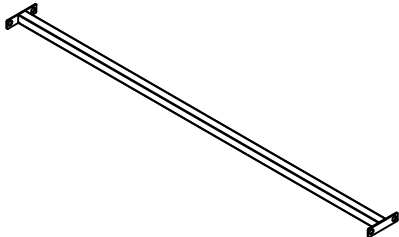

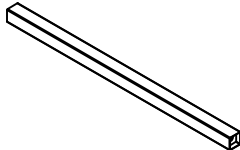
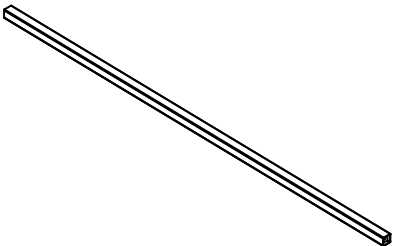



Model: C405-T-WH






Please Scan the QR code to watch the tutorial video
<https://www.youtube.com/@furnishglow/videos>











Parts List Box 1

① 1pcs 	② 1pcs 	③ 1pcs 
④ 2pcs 	⑤ 5pcs 	⑥ 1pcs 
⑦ 2pcs 	⑧ 2pcs 	⑨ 1pcs 
⑩ 1pcs 	⑪ 1pcs 	⑫ 2pcs 
⑬ 1pcs 	⑭ 1pcs 	

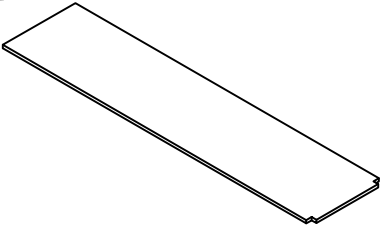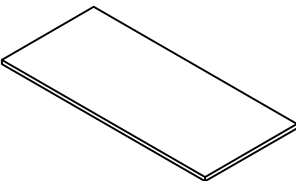
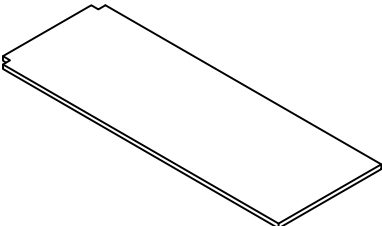
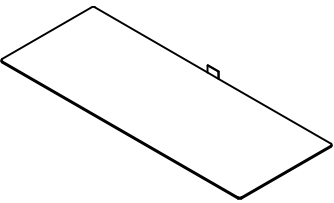
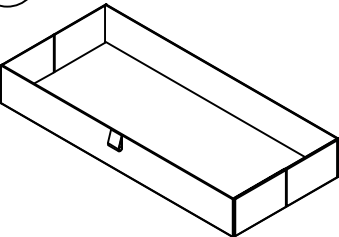
Parts List Box 1

16 1pcs 	17 1pcs 	18 2pcs 
19 1pcs 	20 1pcs 	

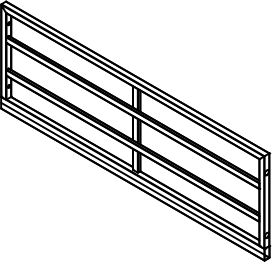
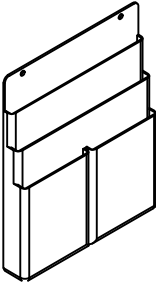
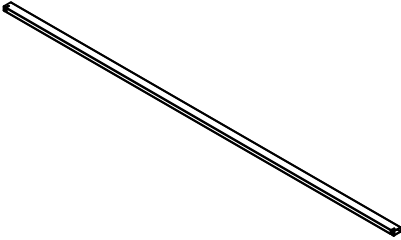
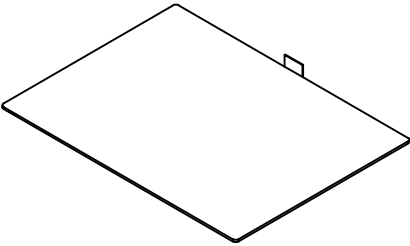
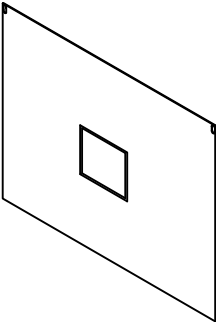
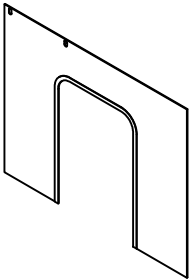
Parts List Box 2

21  1pcs	22  1pcs	23  1pcs
24  1pcs	25  1pcs	26  1pcs
27  1pcs	28  1pcs	29  12pcs
30  5pcs	31  1pcs	32  1pcs

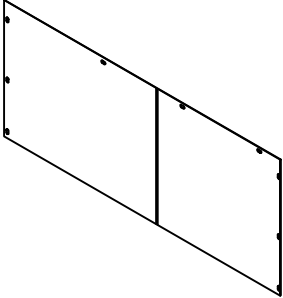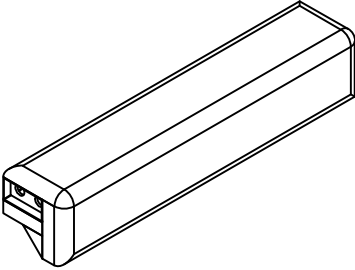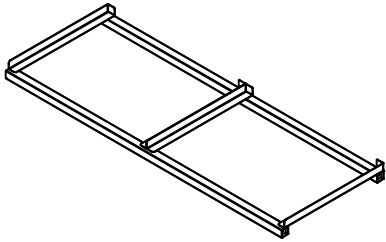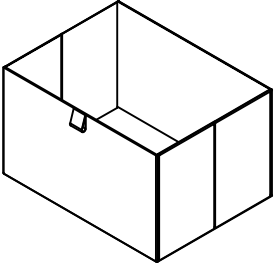
Parts List Box 2

33 1pcs 	34 3pcs 	35 1pcs 
15 5pcs 		

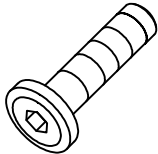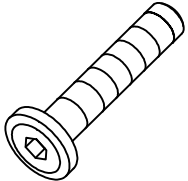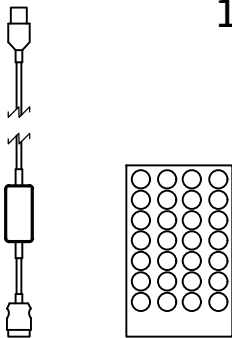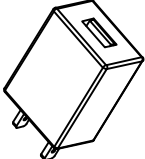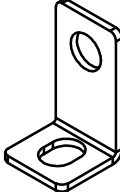
Hardware List Box 2

(A) 10pcs  M8x15mm	(B) 38pcs  M8x35mm	(C) 8pcs  M8x55mm
(D) 51pcs  M6x30mm	(E) 4pcs  M6x15mm	(F) 2pcs 
(G) 1pcs 	(H) 1pcs 	(I) 2pcs 
(J) 2pcs 	(K) 1pcs 	

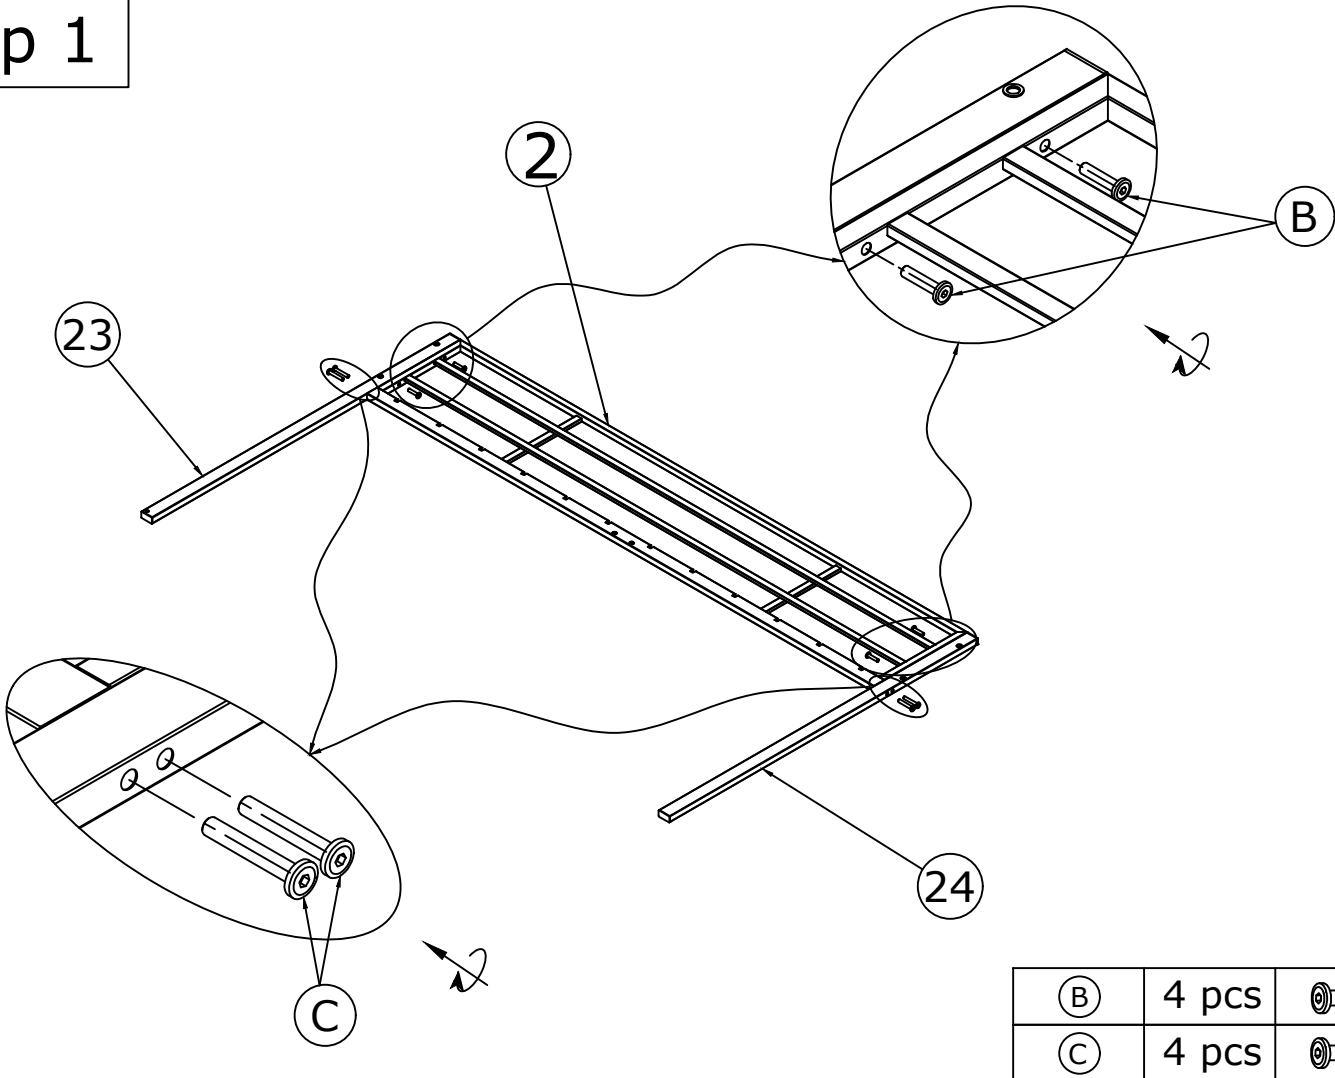
Step 1



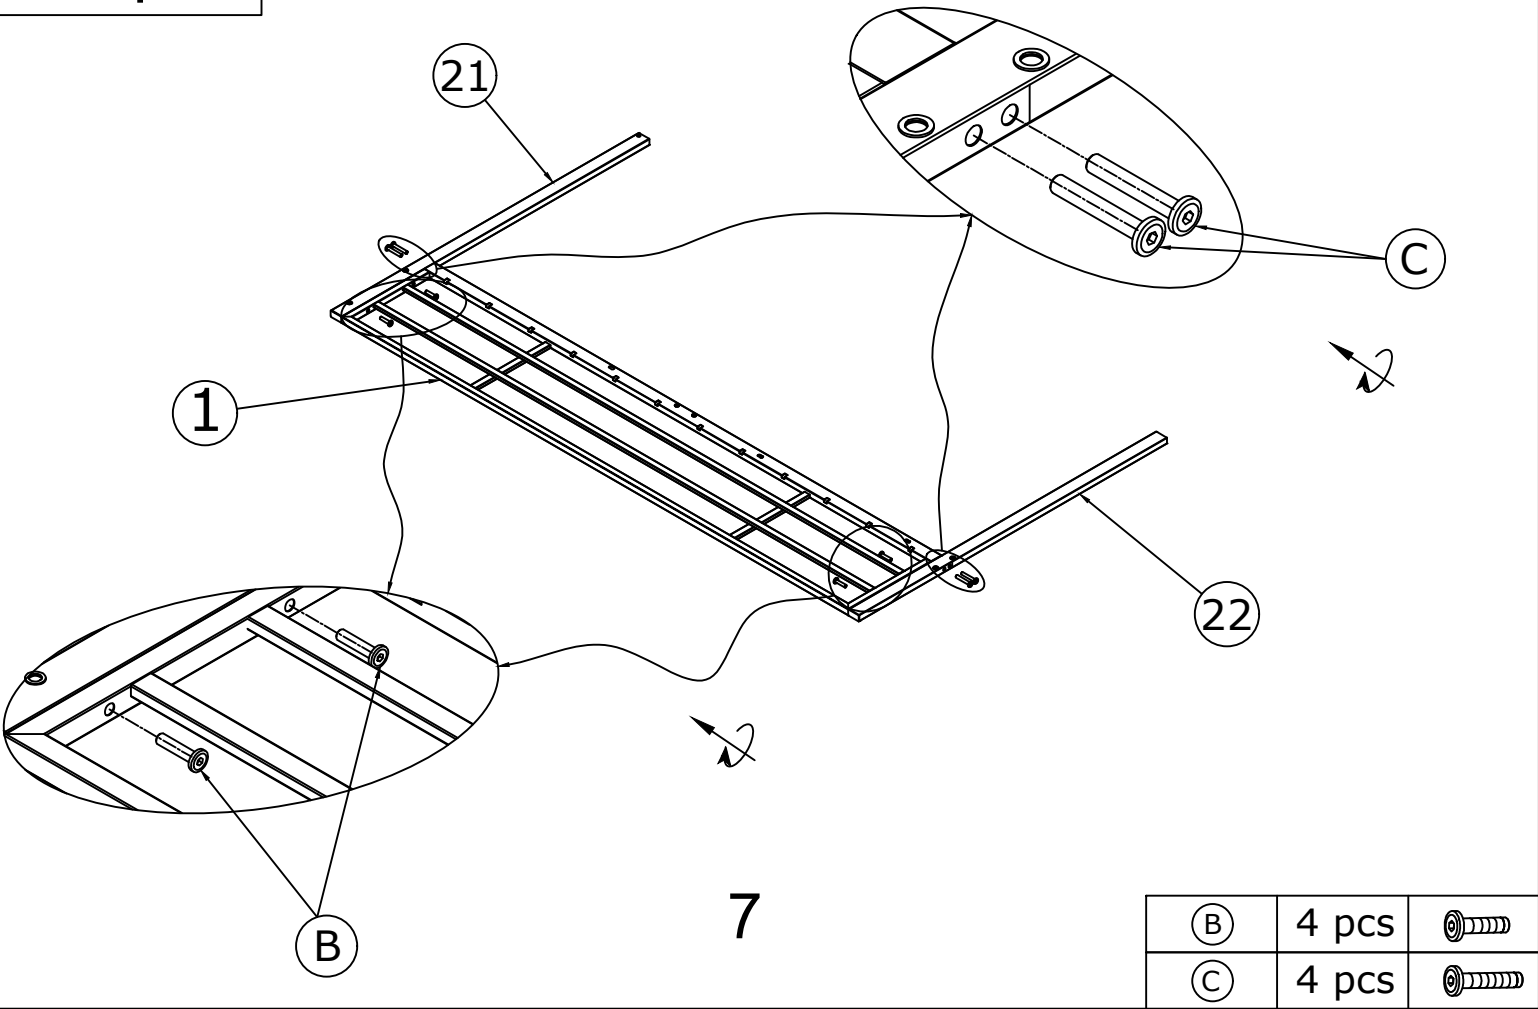Step 2



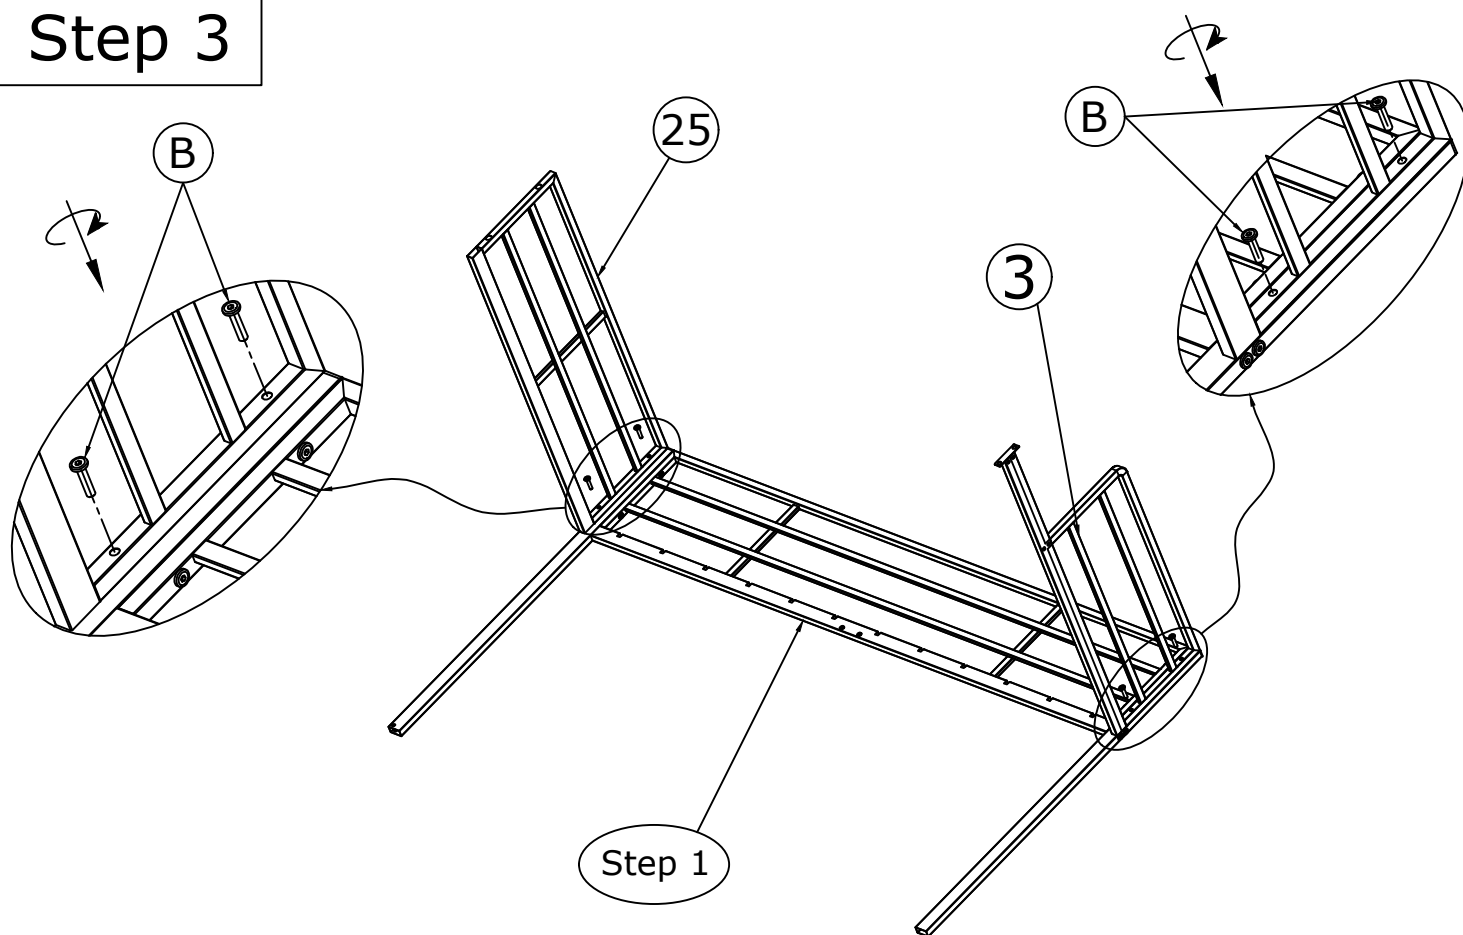Step 3




(B)

4 pcs



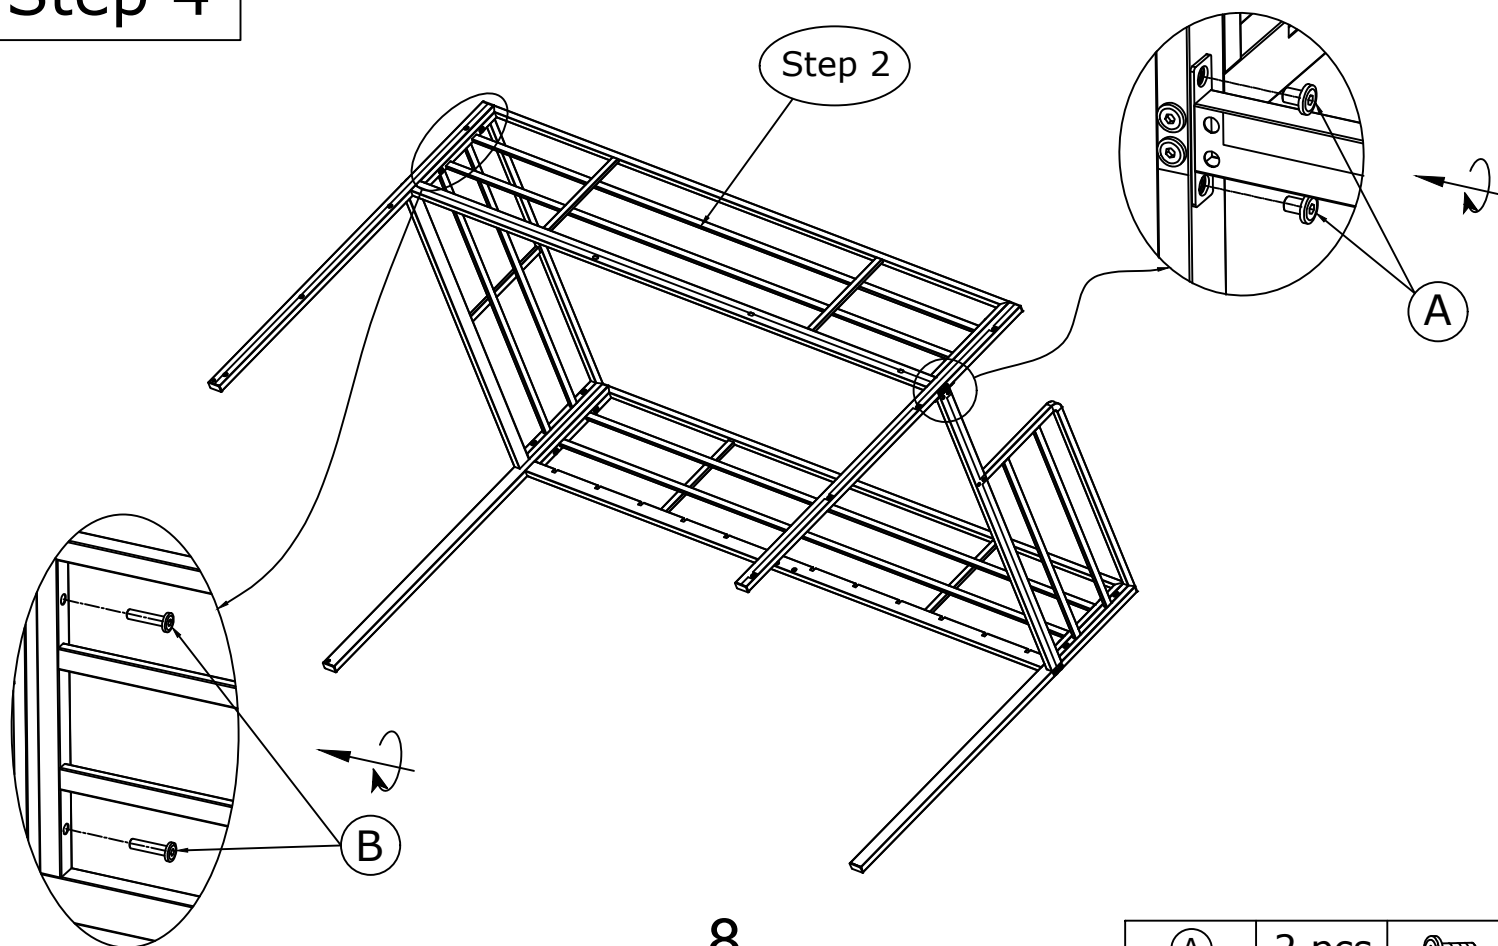Step 4



Step 2

(A)

(B)

8

(A)

2 pcs

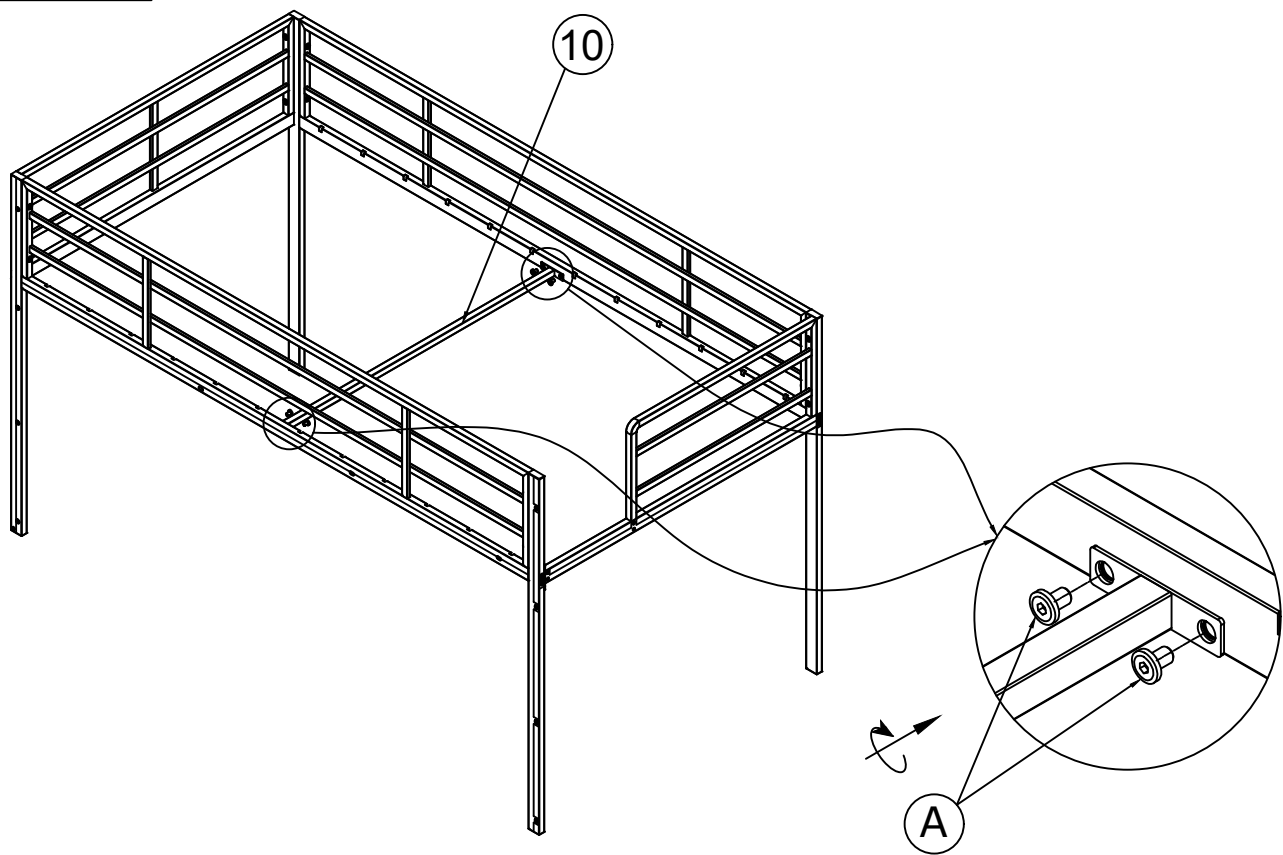


(B)

2 pcs




Step 5



A	4 pcs	
---	-------	---

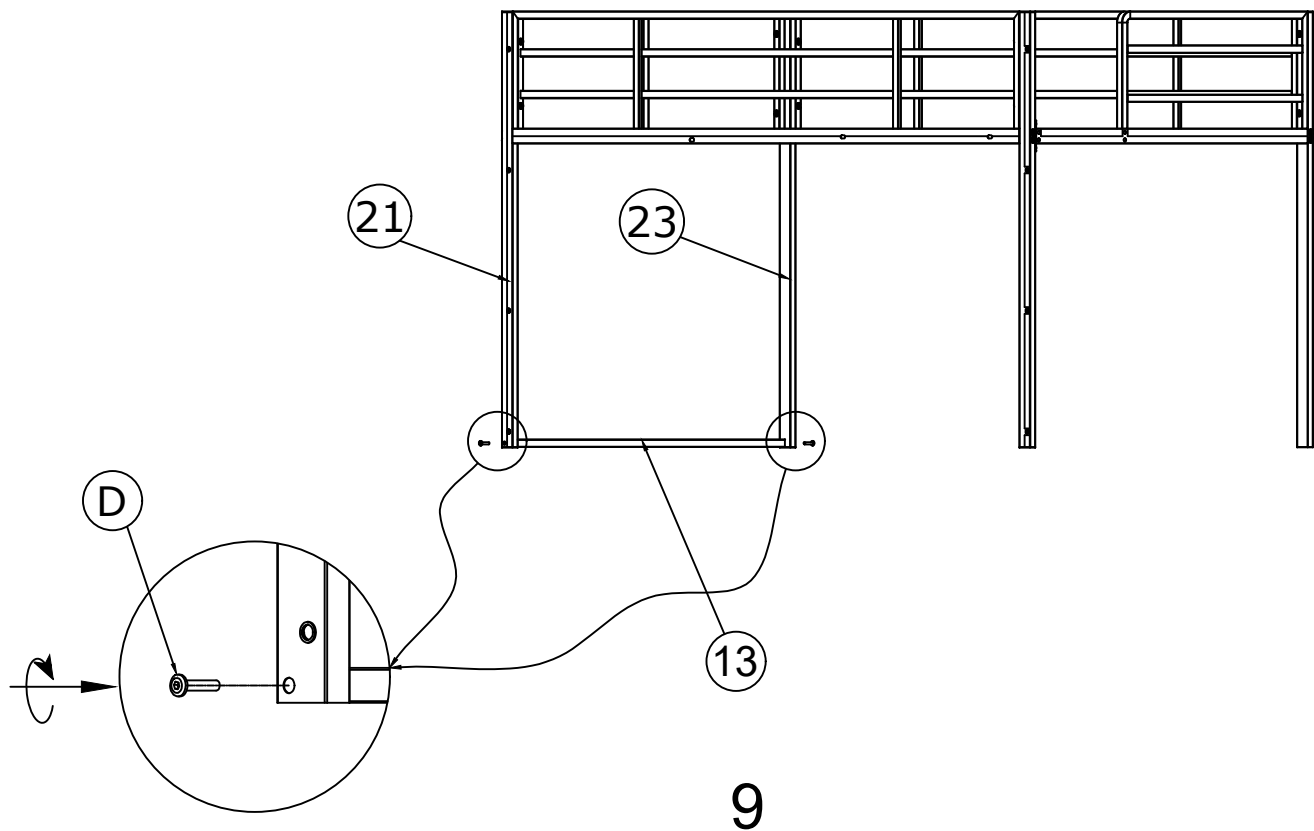
Step 6



D	2 pcs	
---	-------	---

Step 7

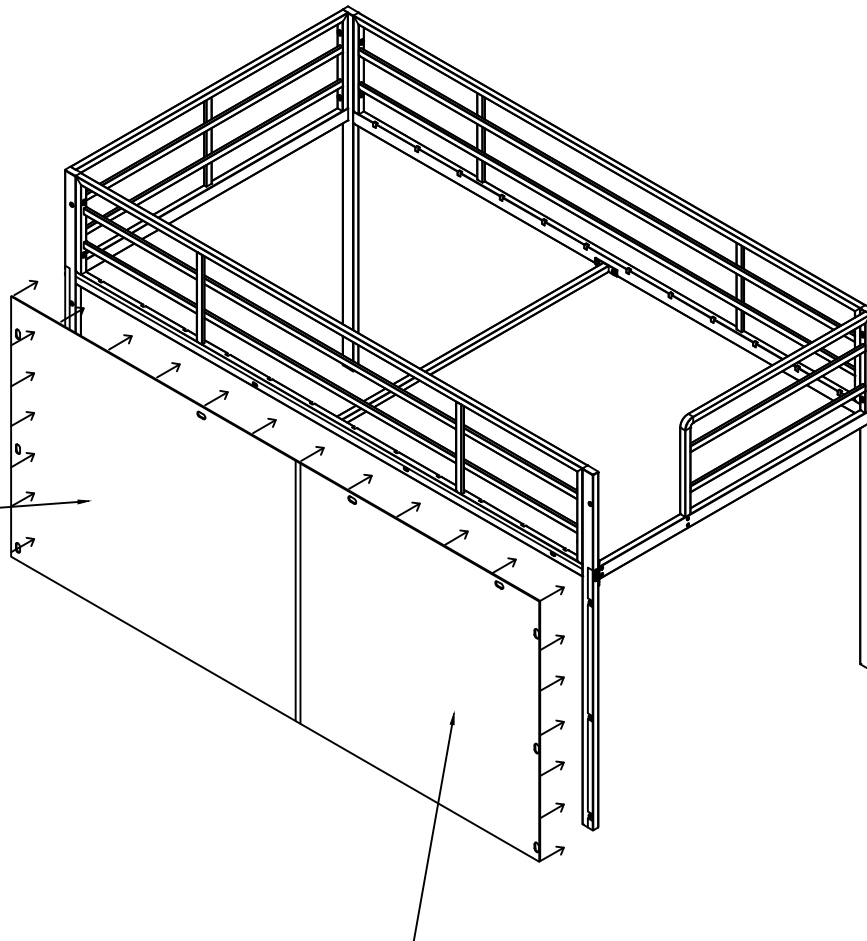
33



The Velcro on the fabric corresponds to the Velcro on the bed frame; press to ensure a secure bond


Step 8

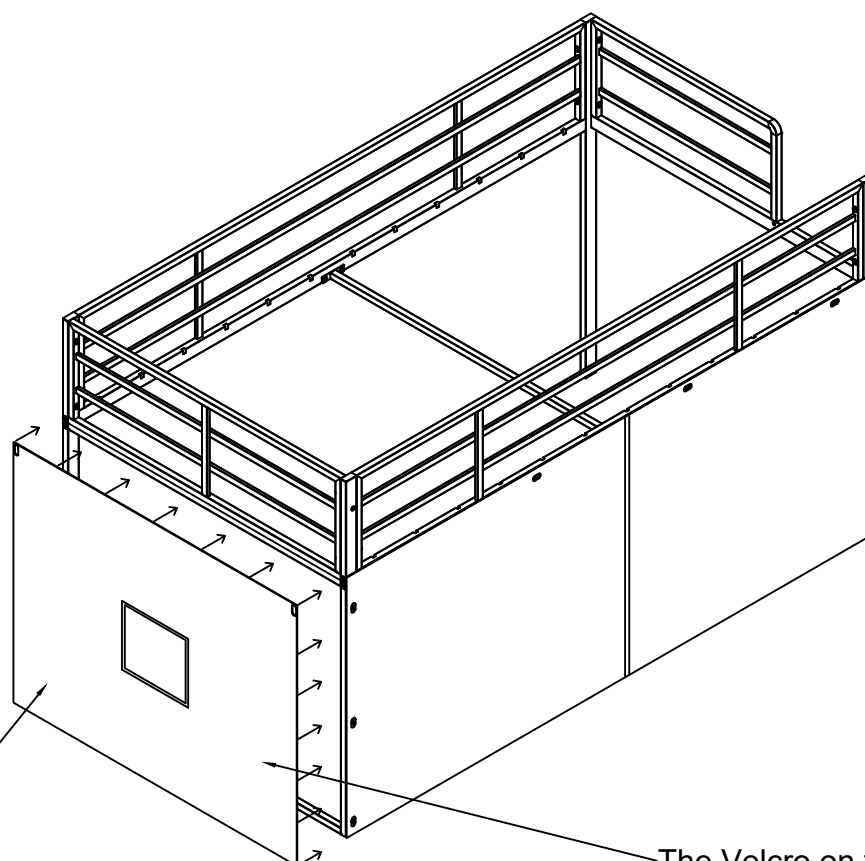31




The Velcro on the fabric corresponds to the Velcro on the bed frame; press to ensure a secure bond

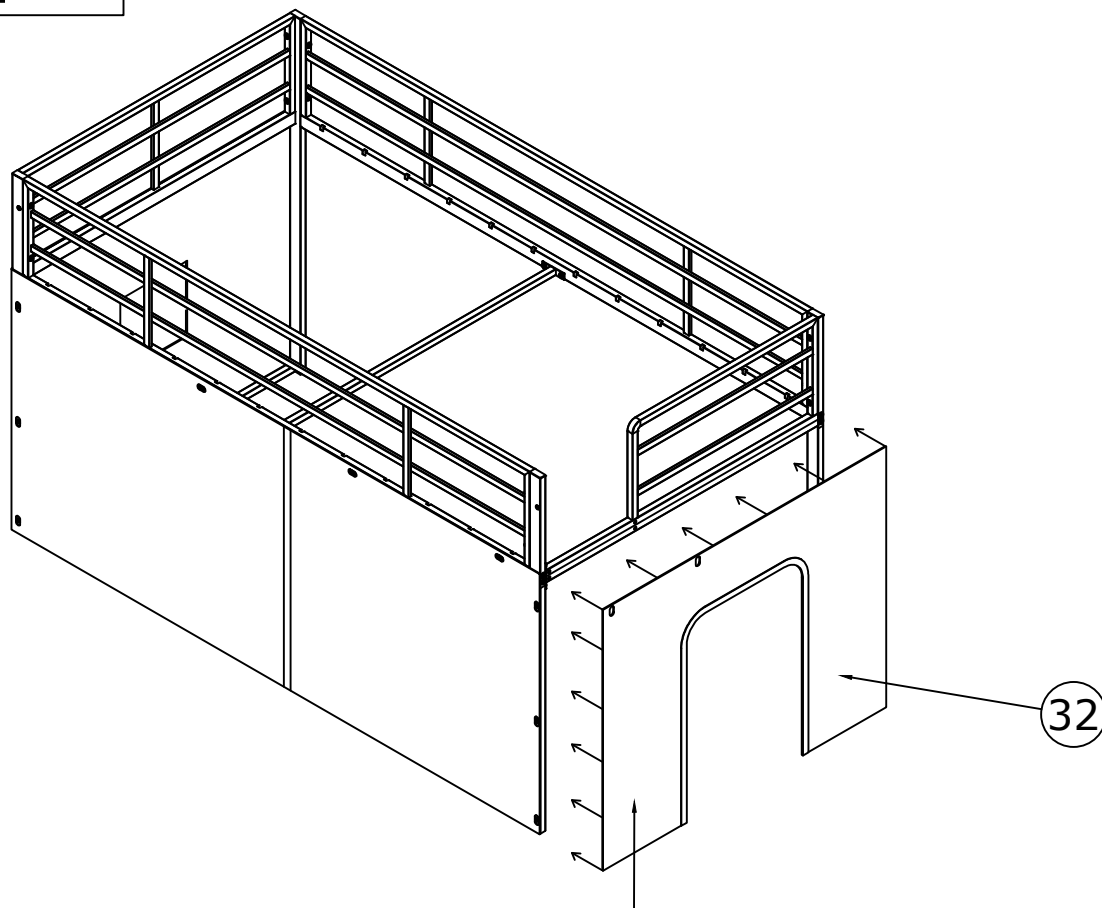Step 9



The Velcro on the fabric corresponds to the Velcro on the bed frame; press to ensure a secure bond

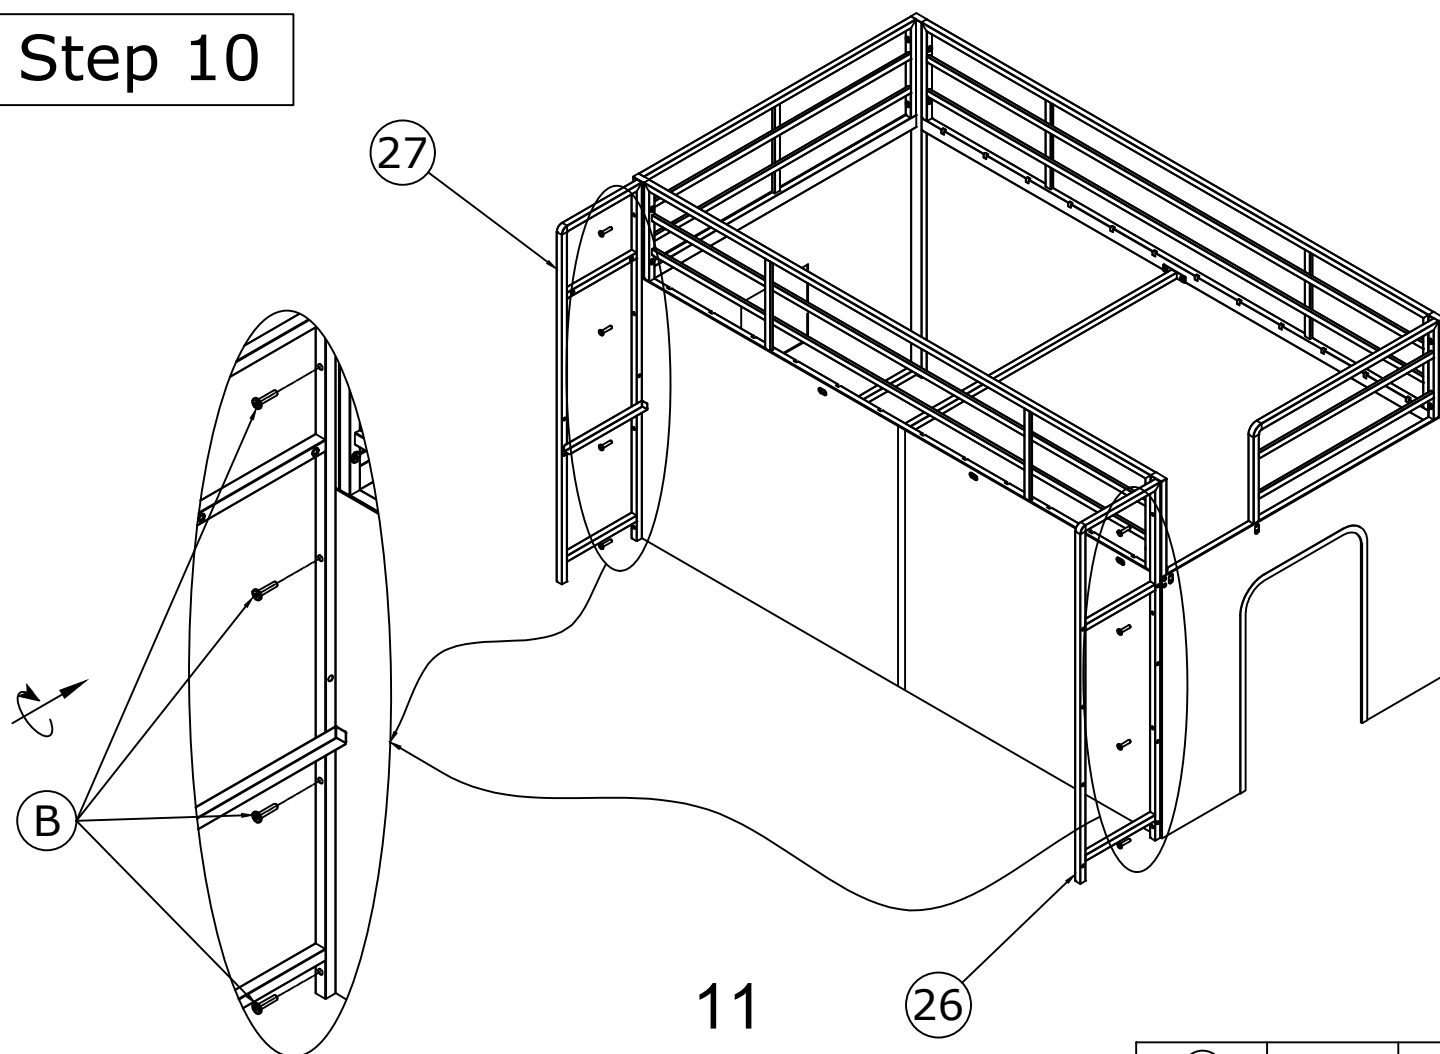Step 10




(B)

8 pcs



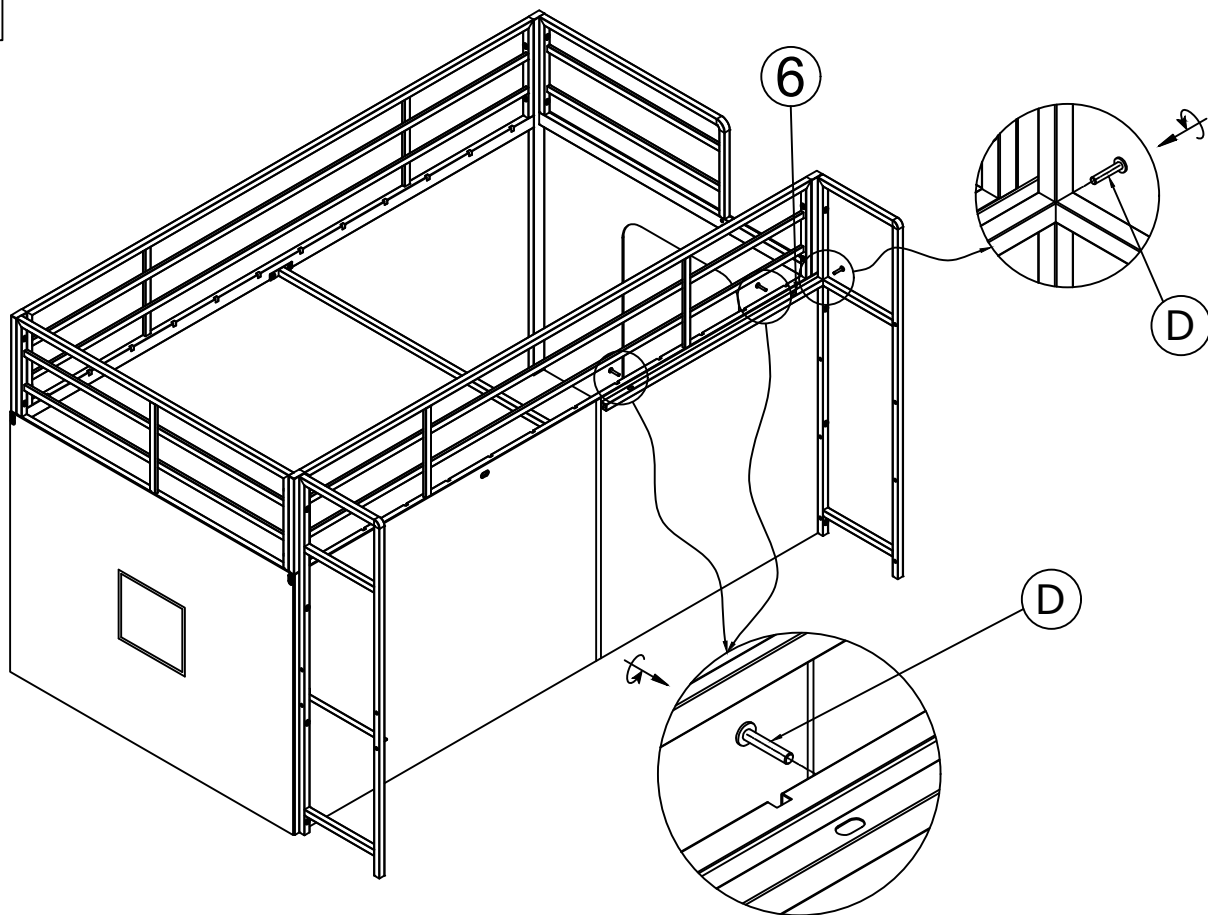Step 11




(D)

3 pcs



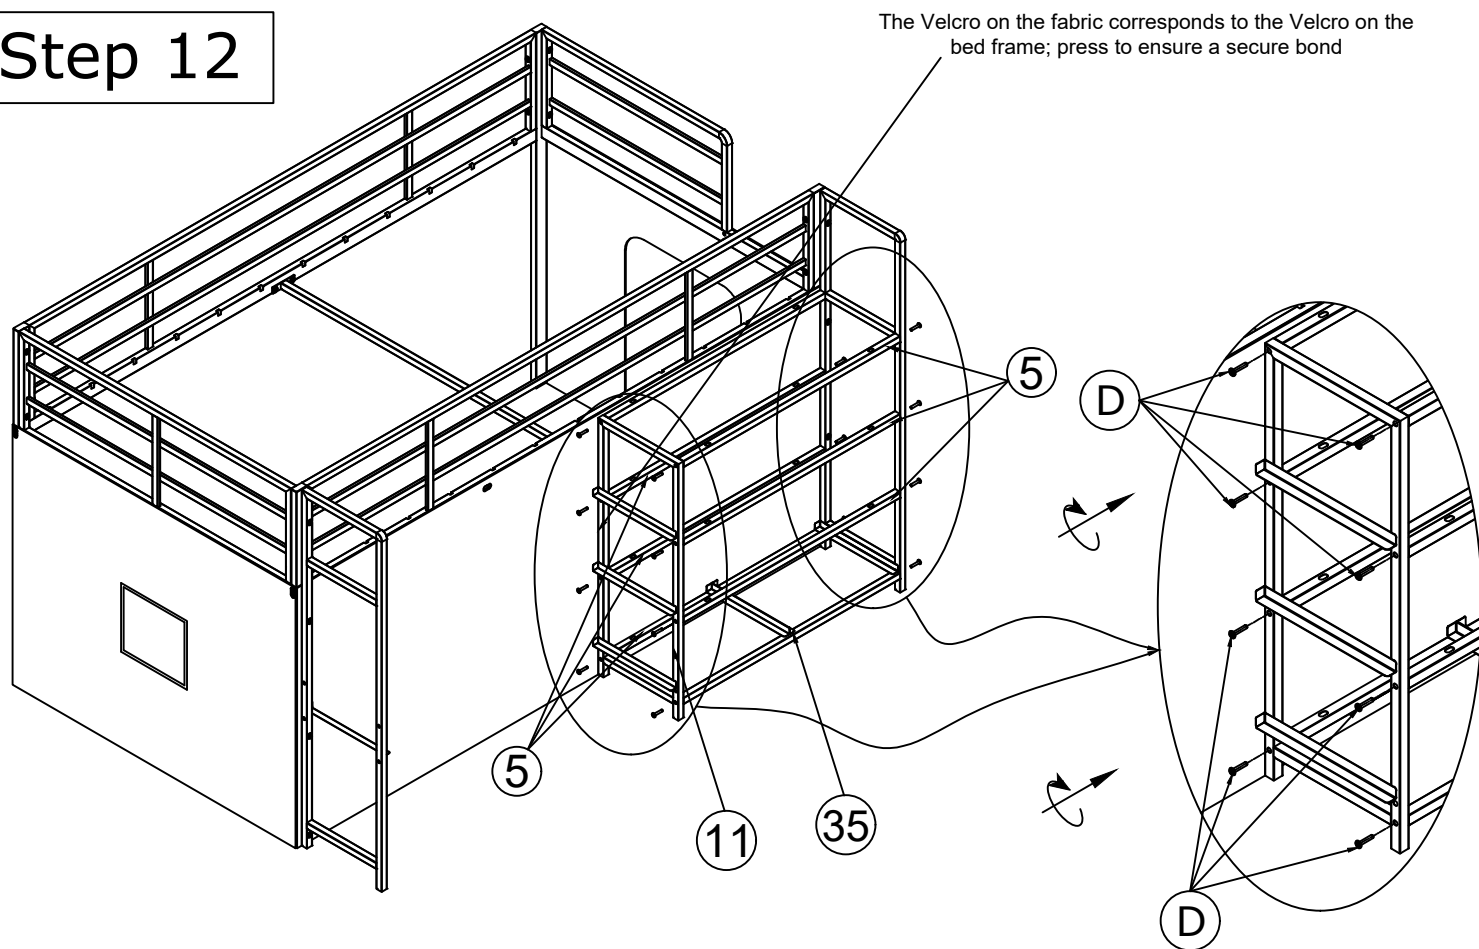Step 12




12

(D)

15 pcs



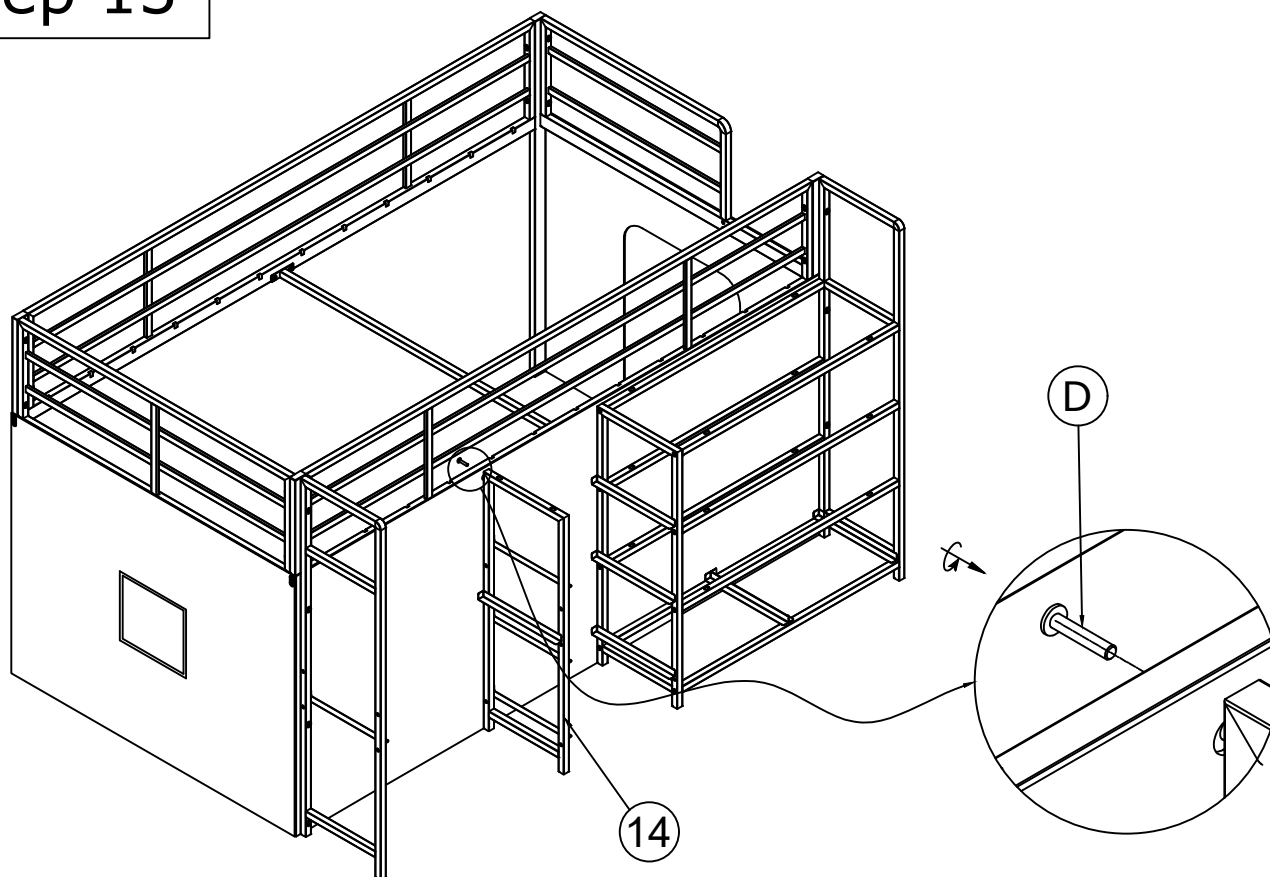Step 13




ⓓ

1 pcs



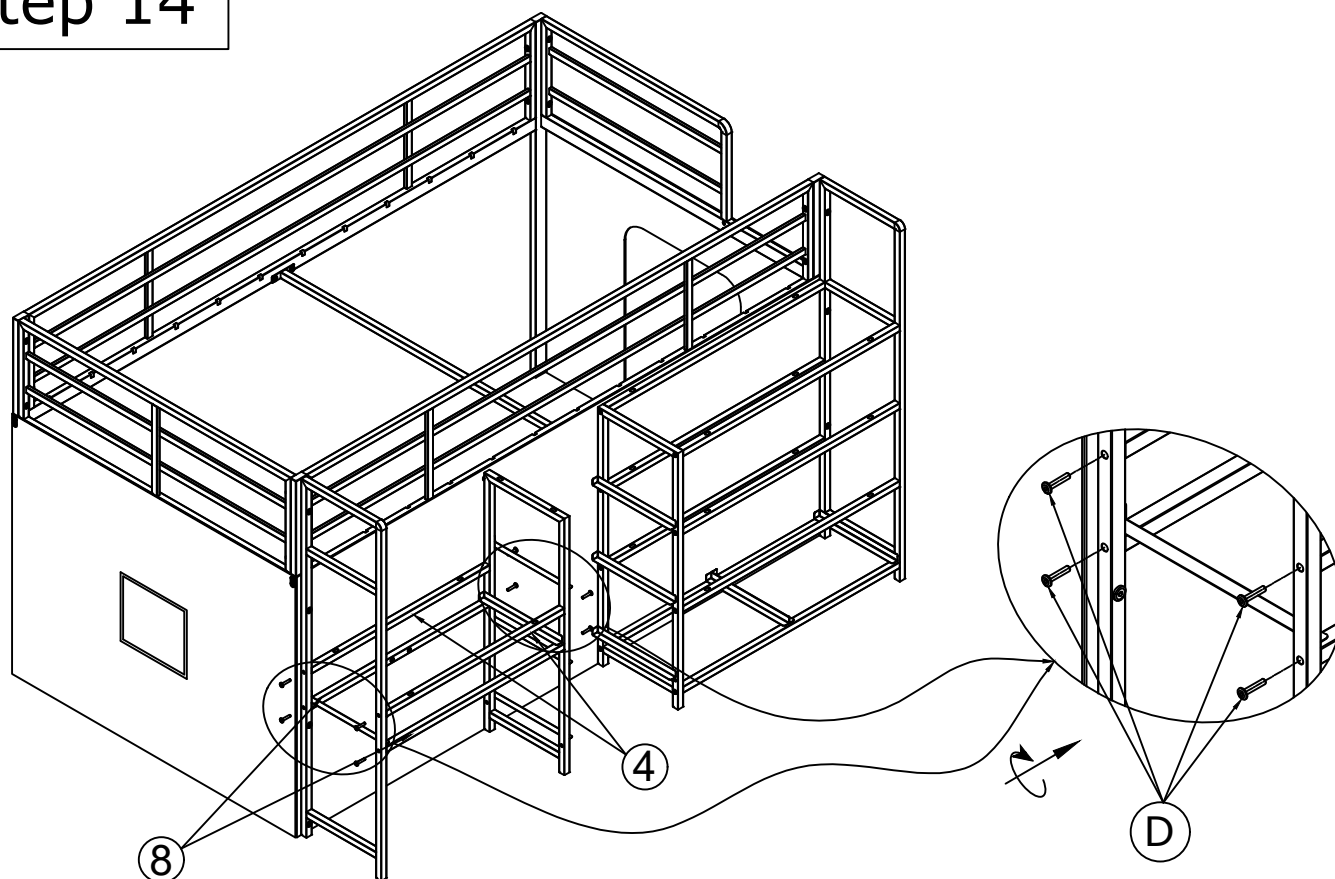Step 14





ⓓ

8 pcs



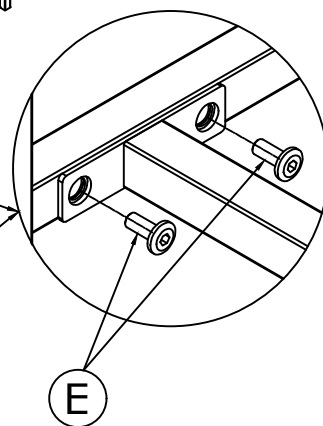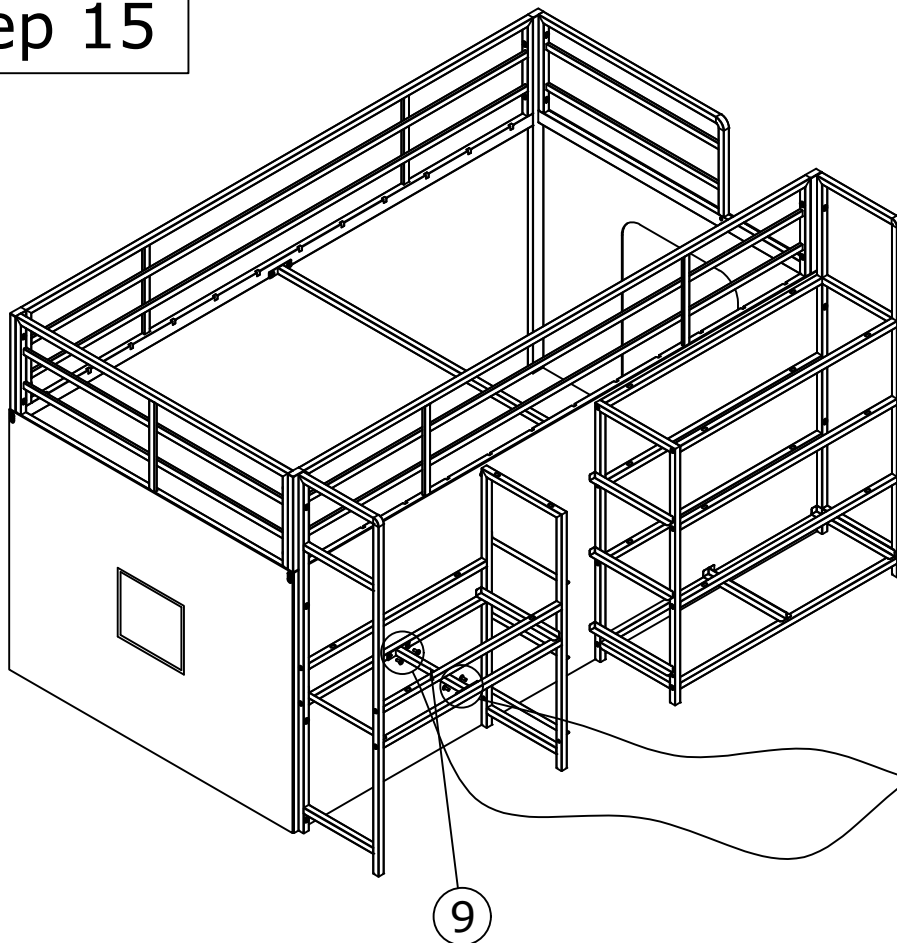Step 15




(E)


4 pcs



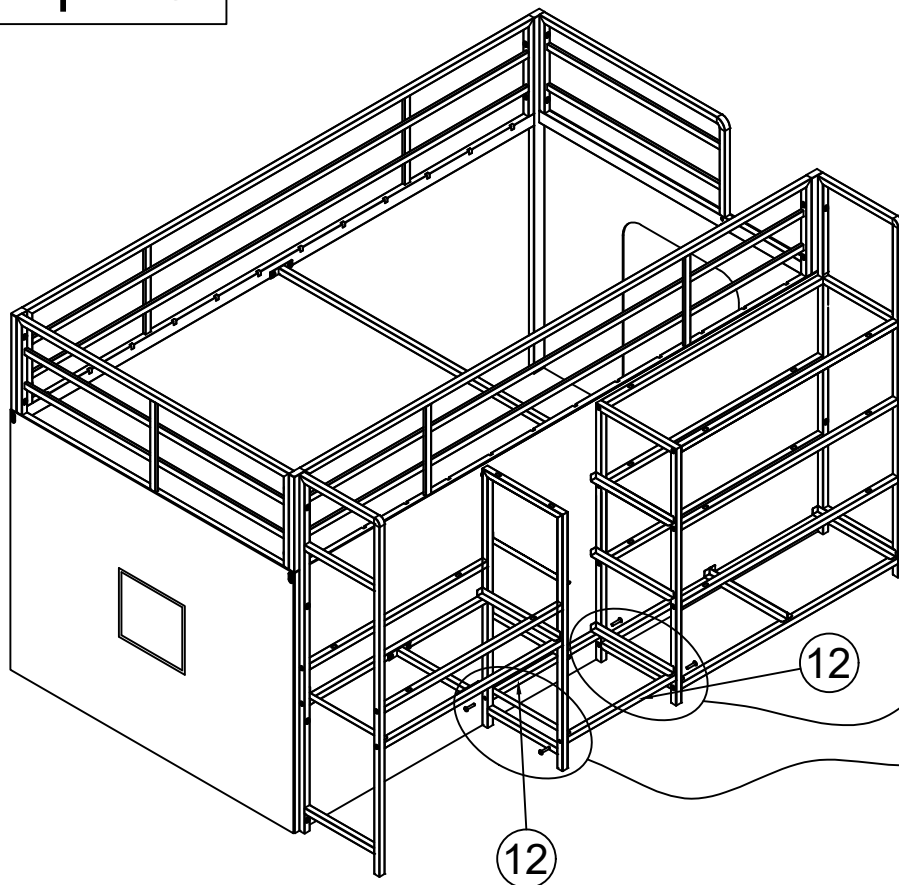Step 16



14

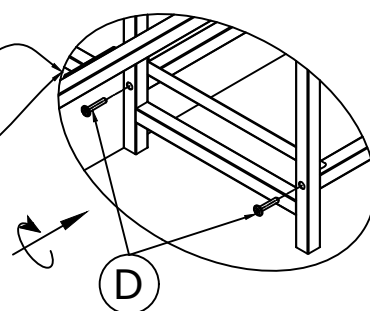


(D)

4 pcs



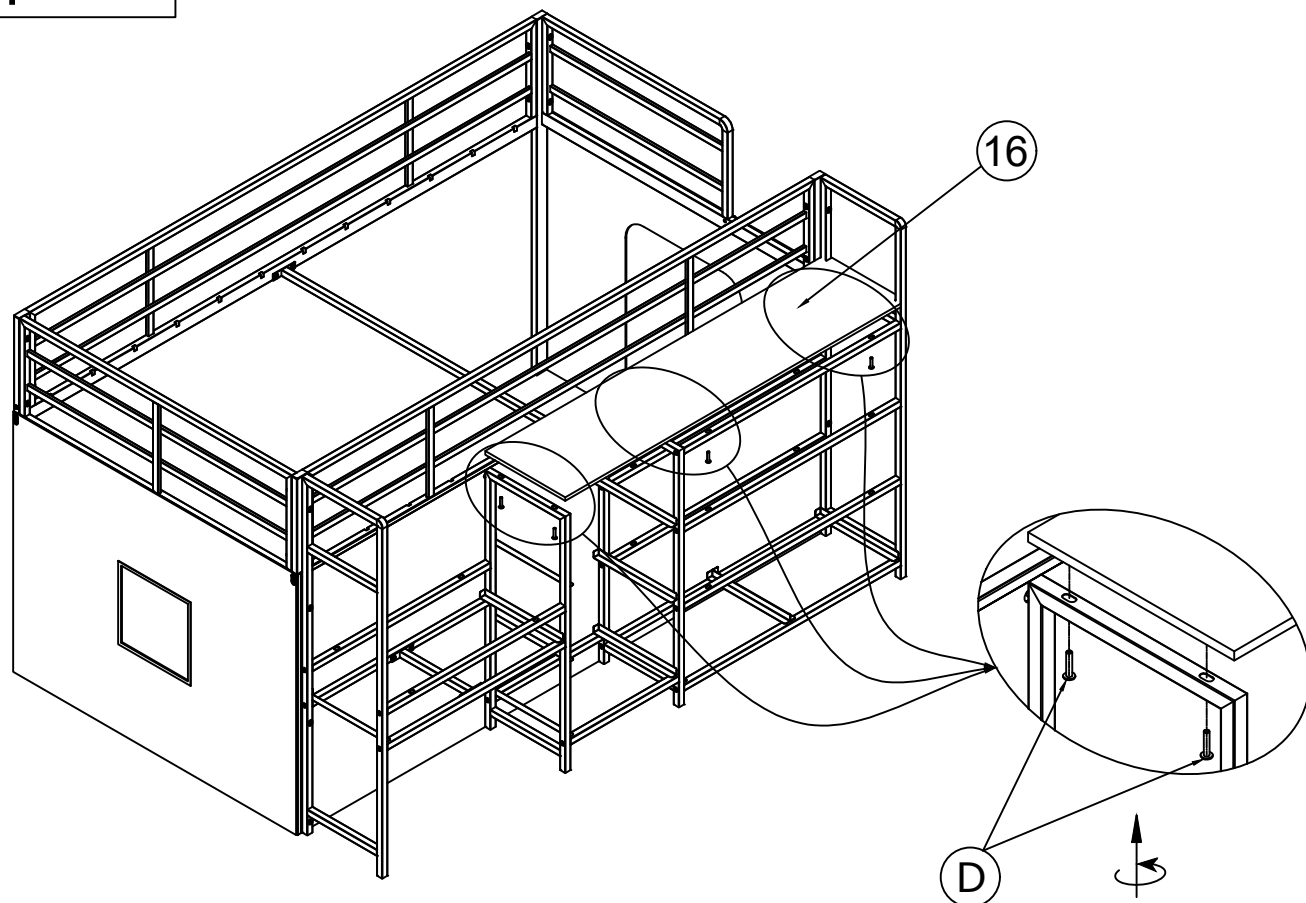Step 17




Ⓓ

6 pcs



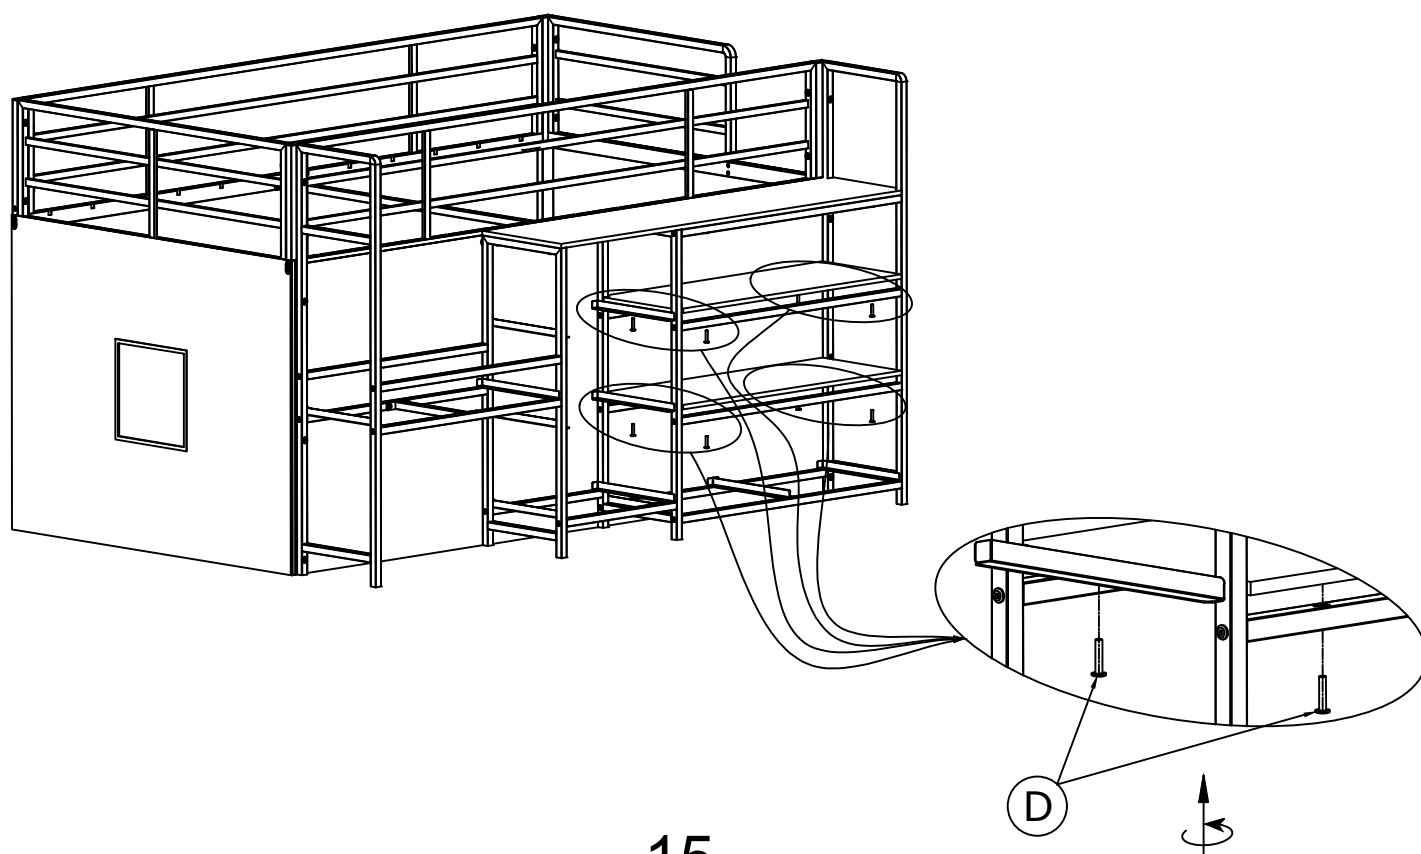Step 18




15

Ⓓ

8 pcs




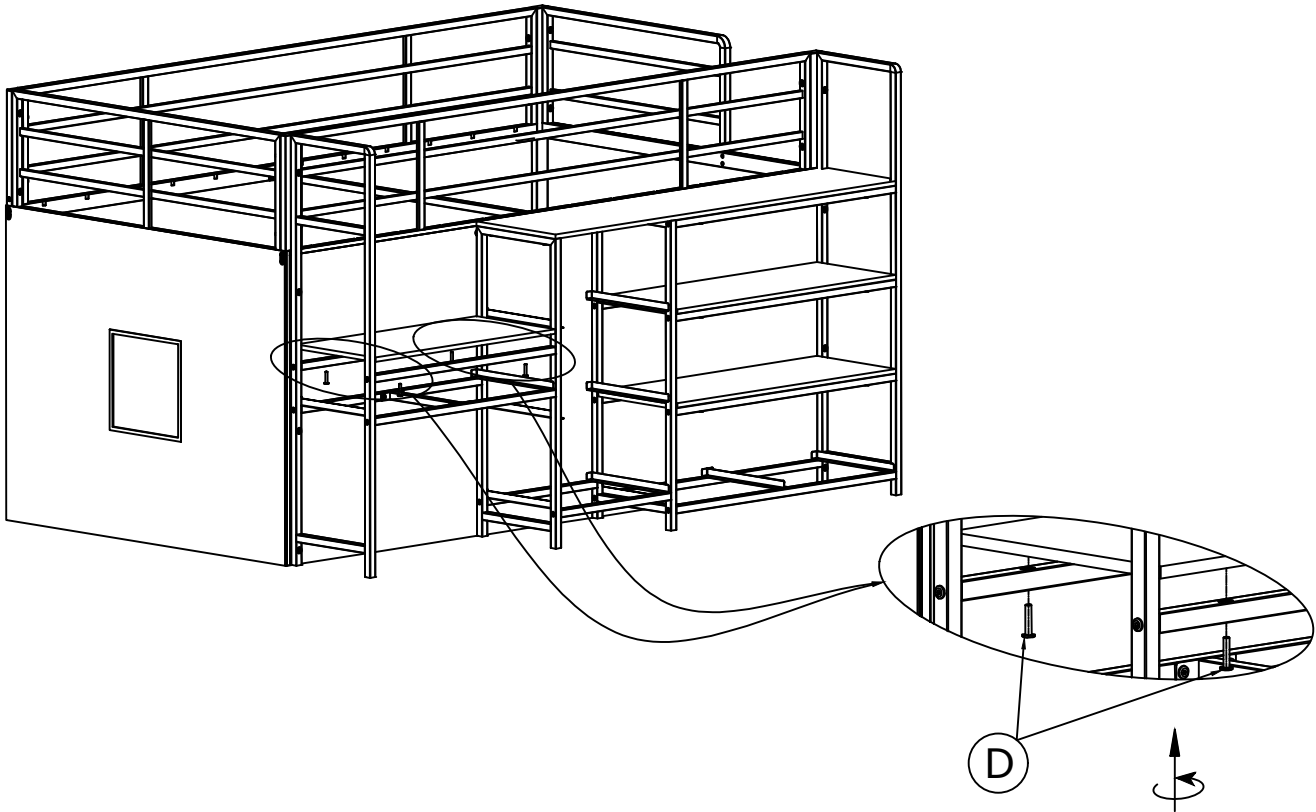Step 19




Ⓓ	4 pcs	
---	-------	---

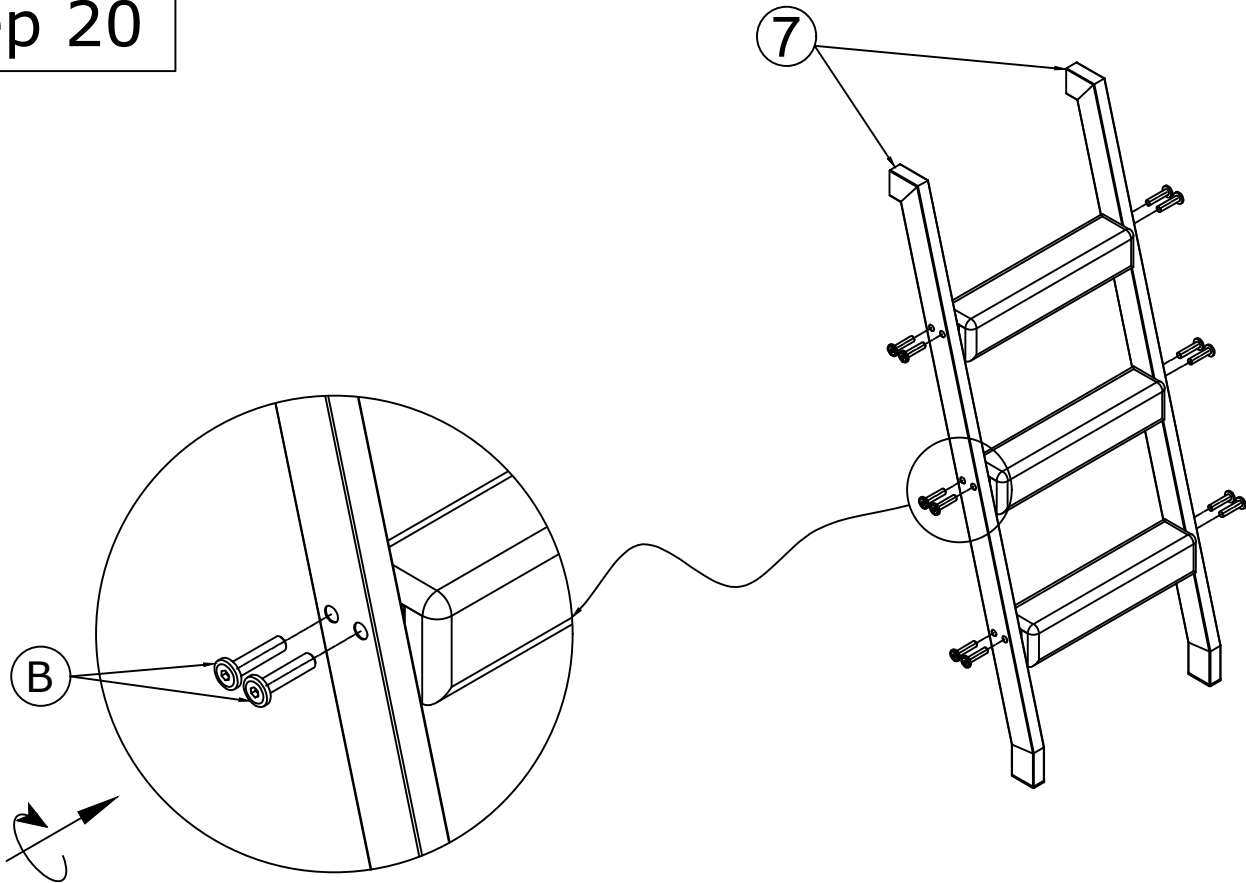Step 20



Ⓑ	12 pcs	
---	--------	---

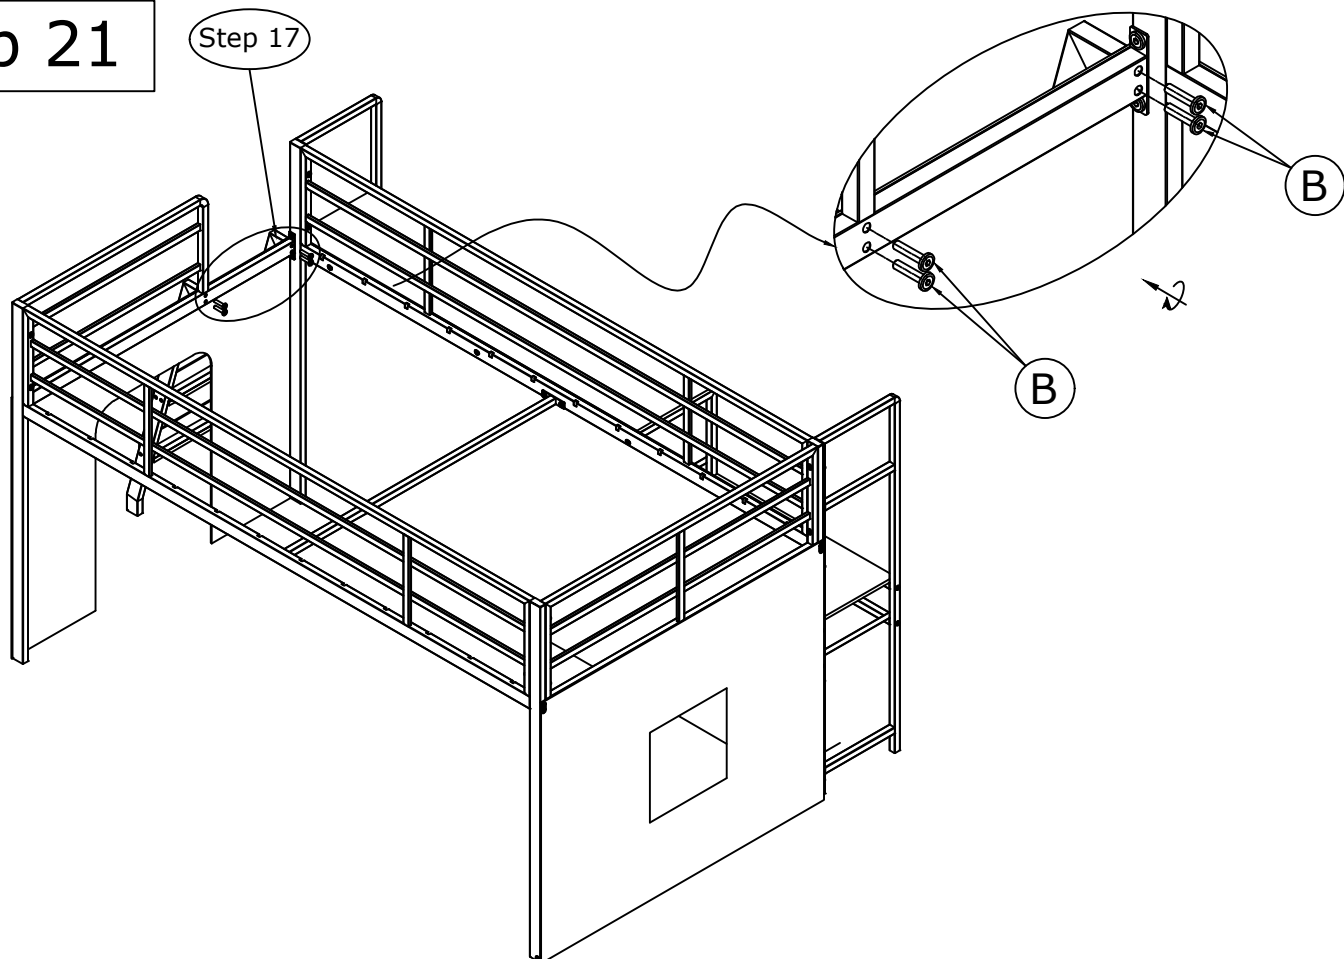Step 21




(B)


4 pcs



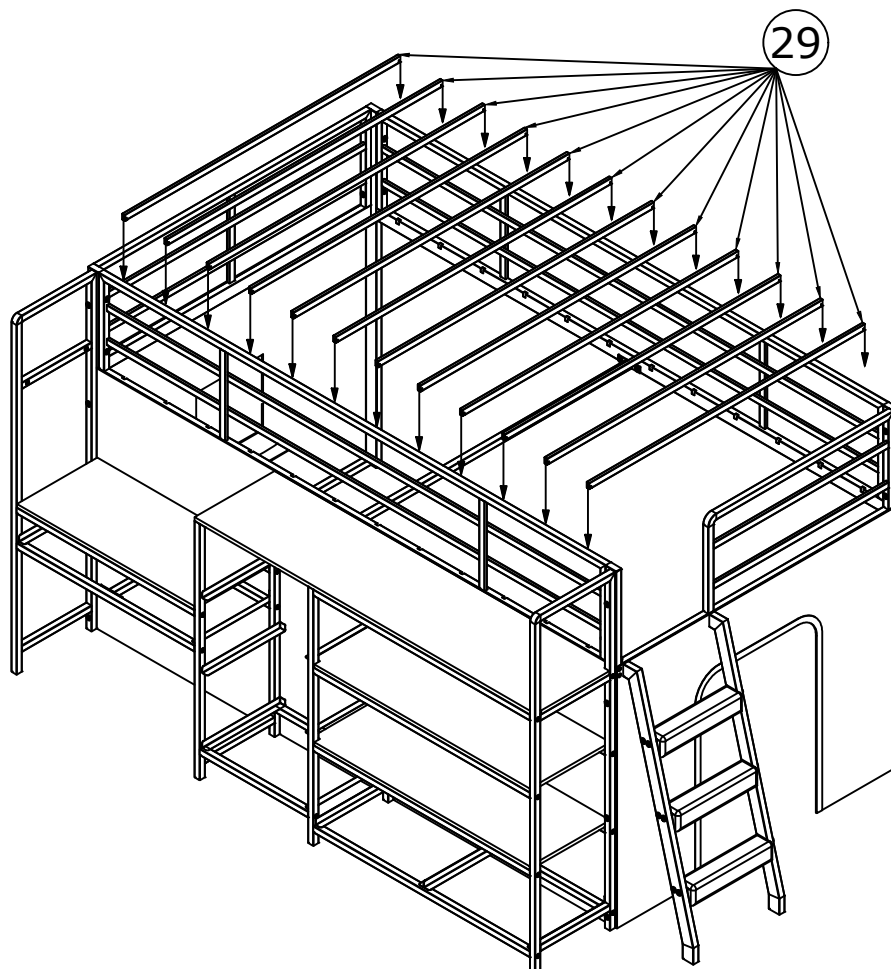Step 22



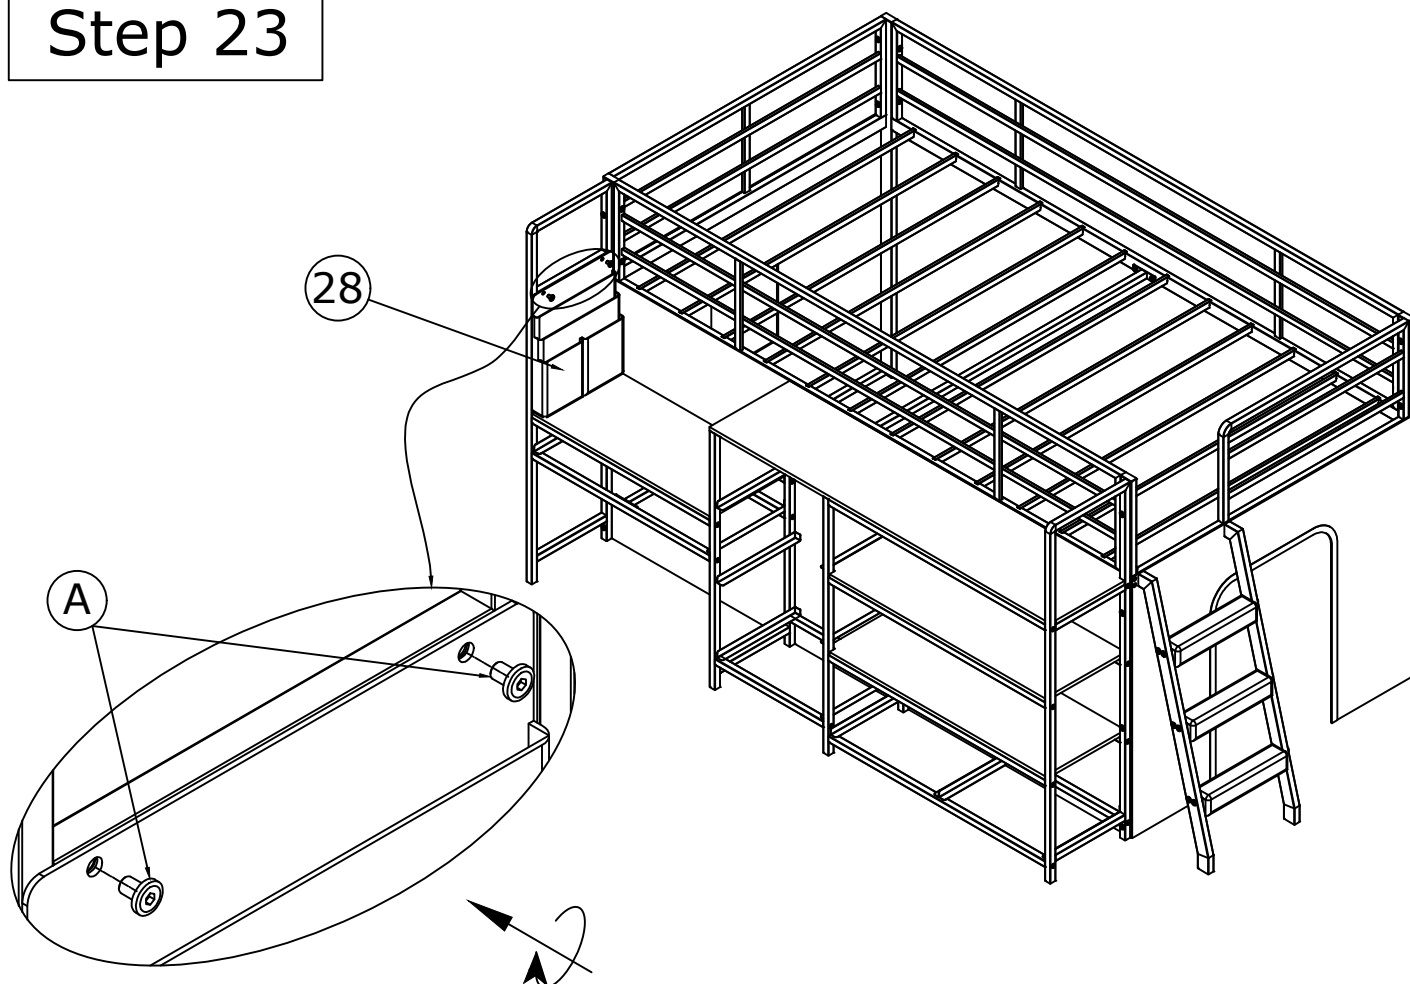Step 23




(A)

2 pcs



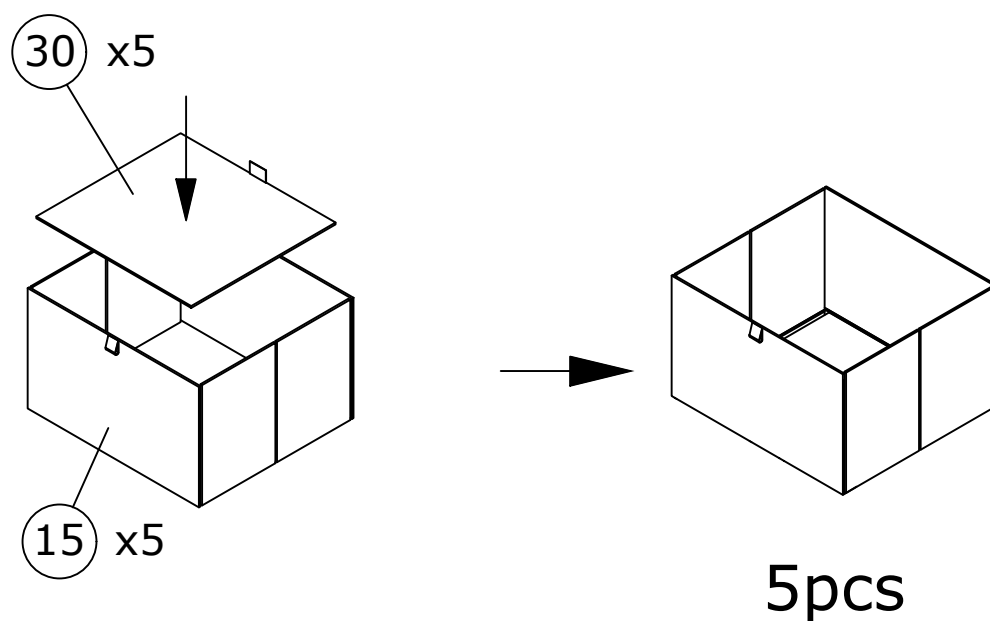
Step 24




Open part 15
and put part
30 in

5pcs

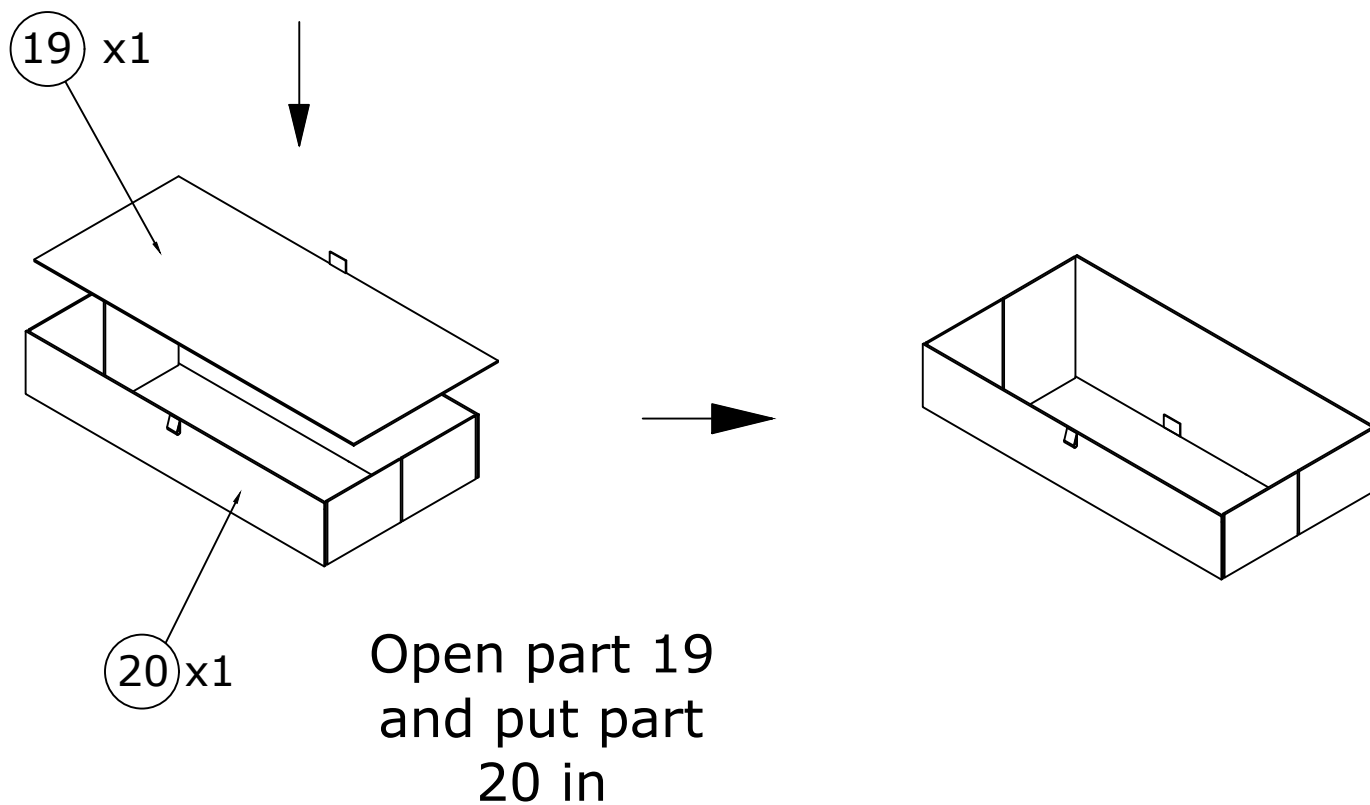
Step 25



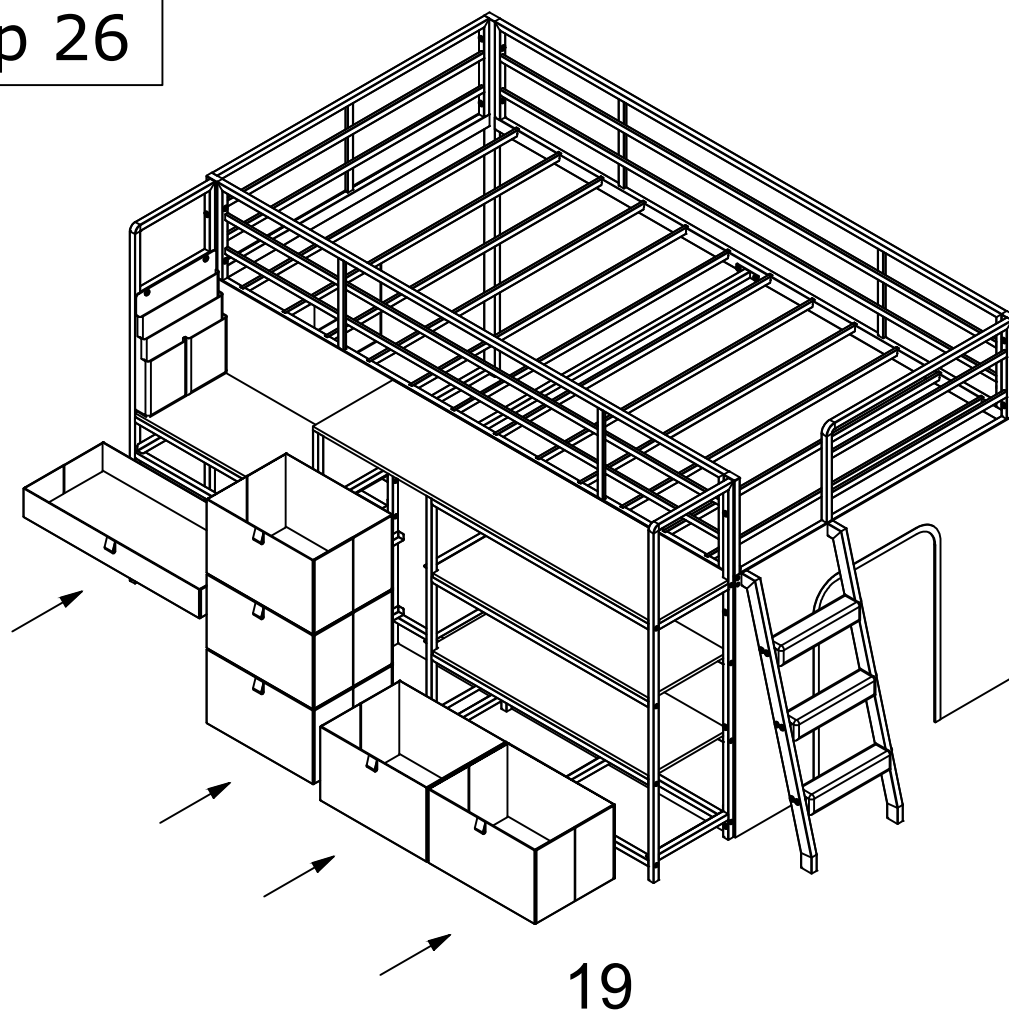
Step 26



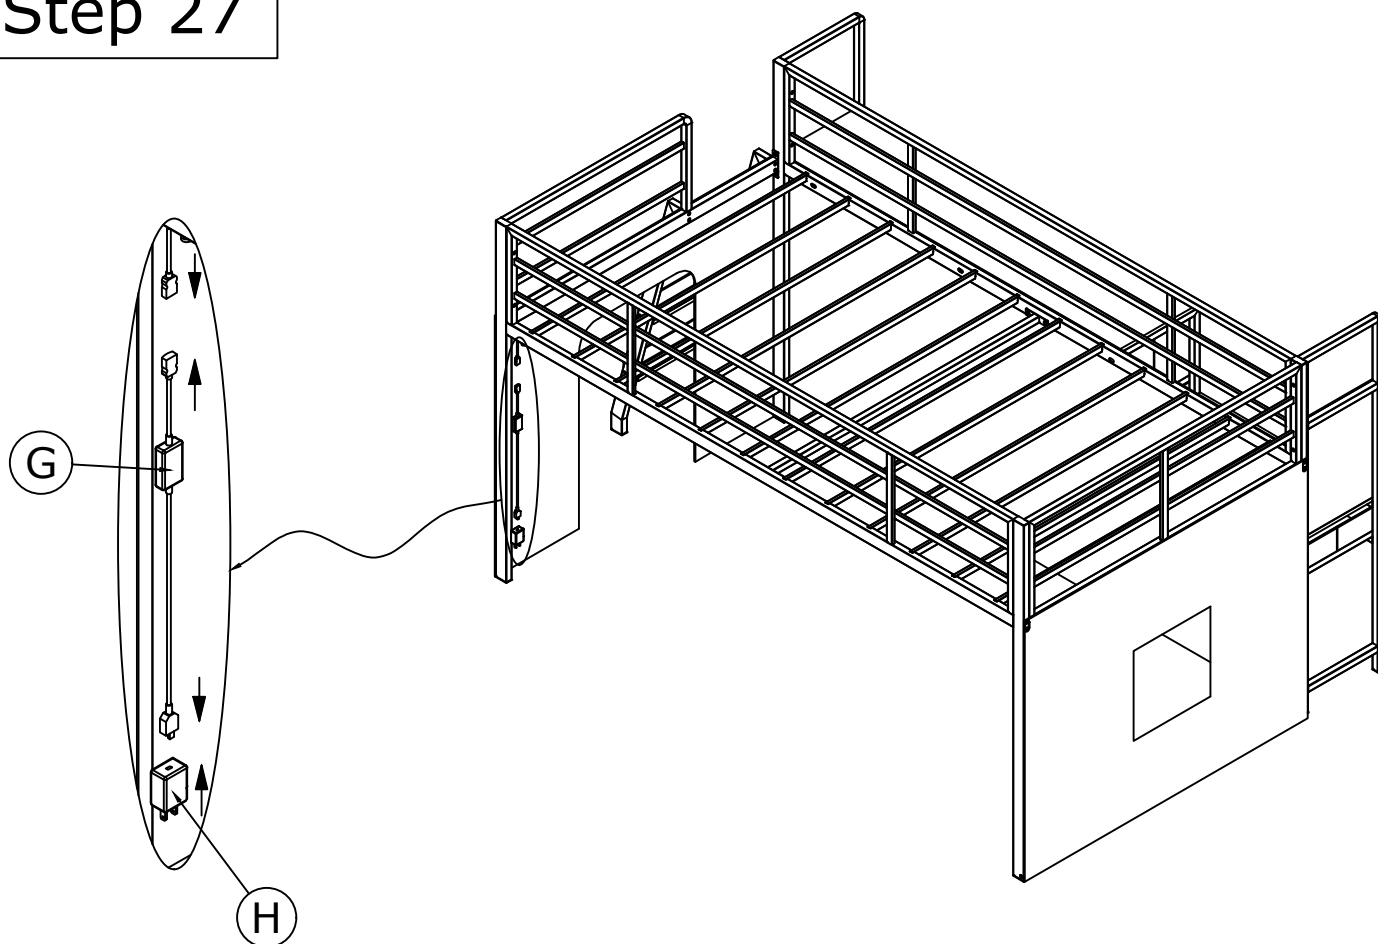Step 27



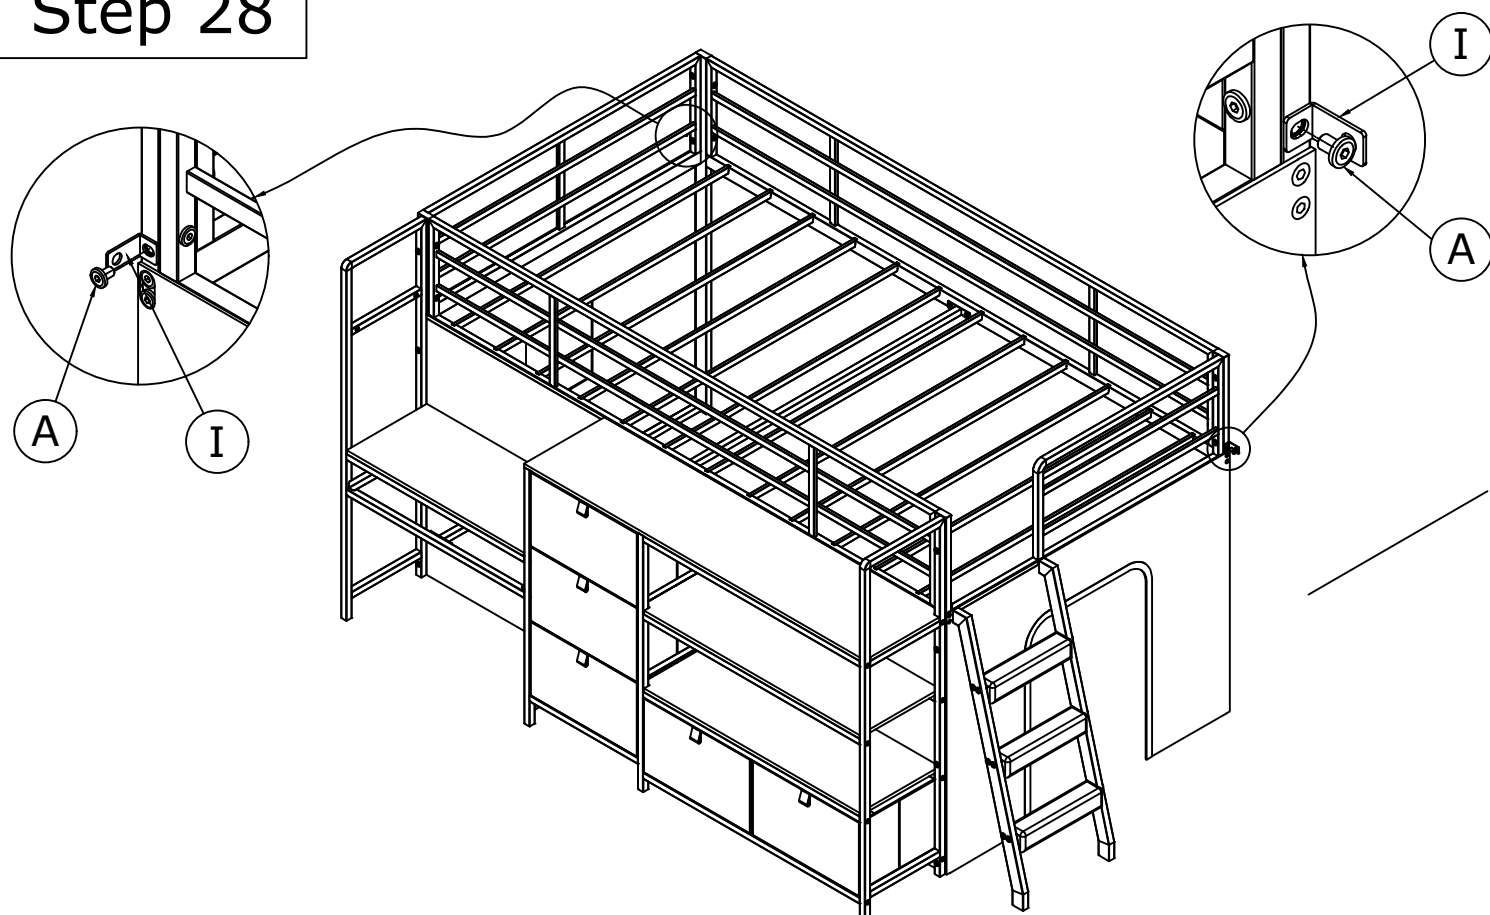Step 28





20

(A)	2 pcs	
(I)	2 pcs	


Step 29

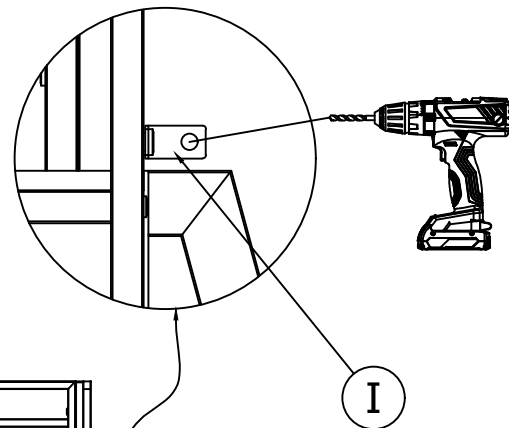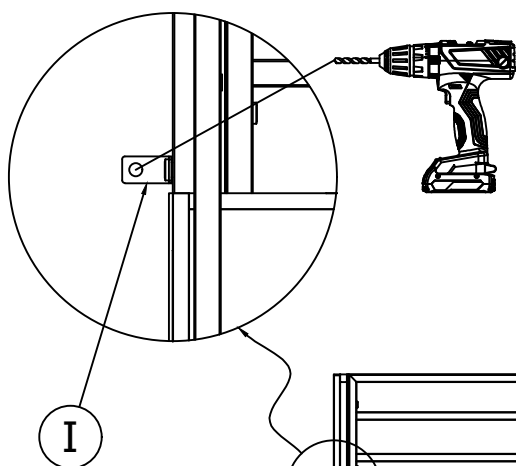Mark the 2 anti-roll parts I, then lift the bed to one side and drill with an 8mm drill bit 8cm deep.




Step 30

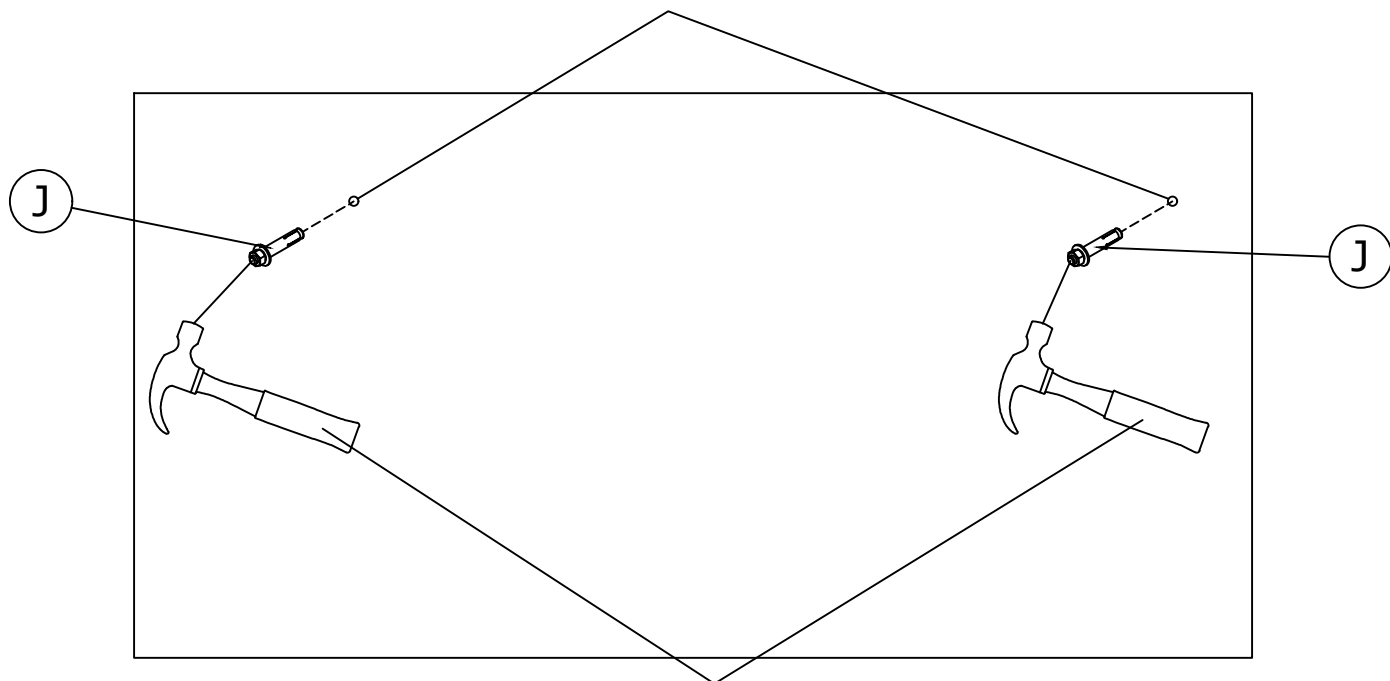8mm drill hole



Use a hammer to hammer the J-shaped iron plug into the 8mm drilled hole.

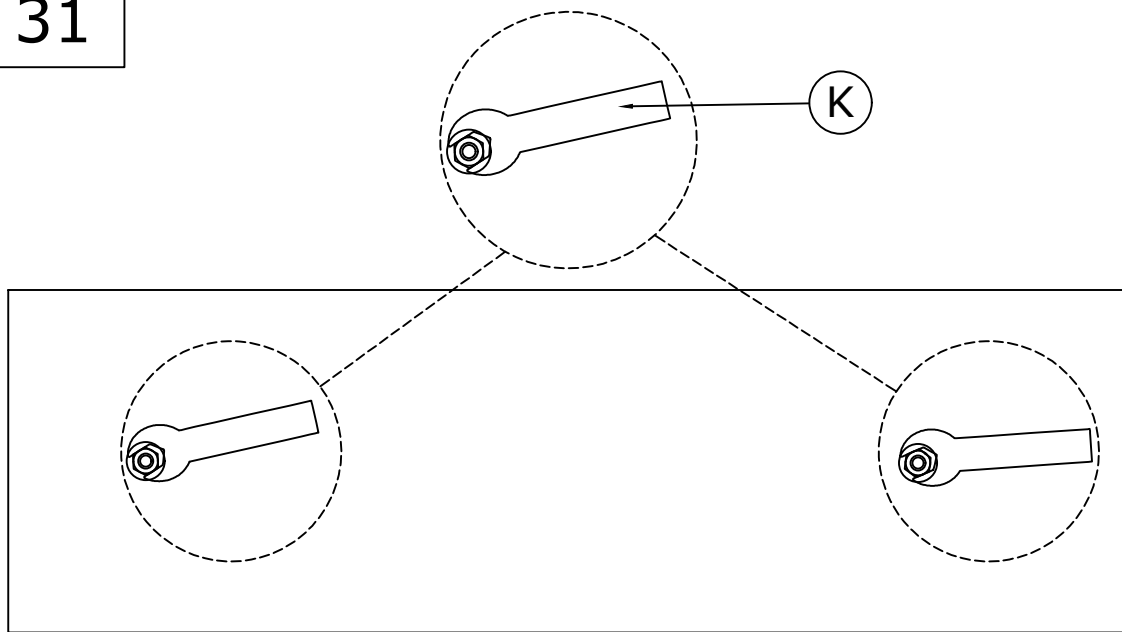Step 31




Use wrench K to tighten the nut on the J anchor just arrived, then remove the nut and washer.

(K)

1 pcs



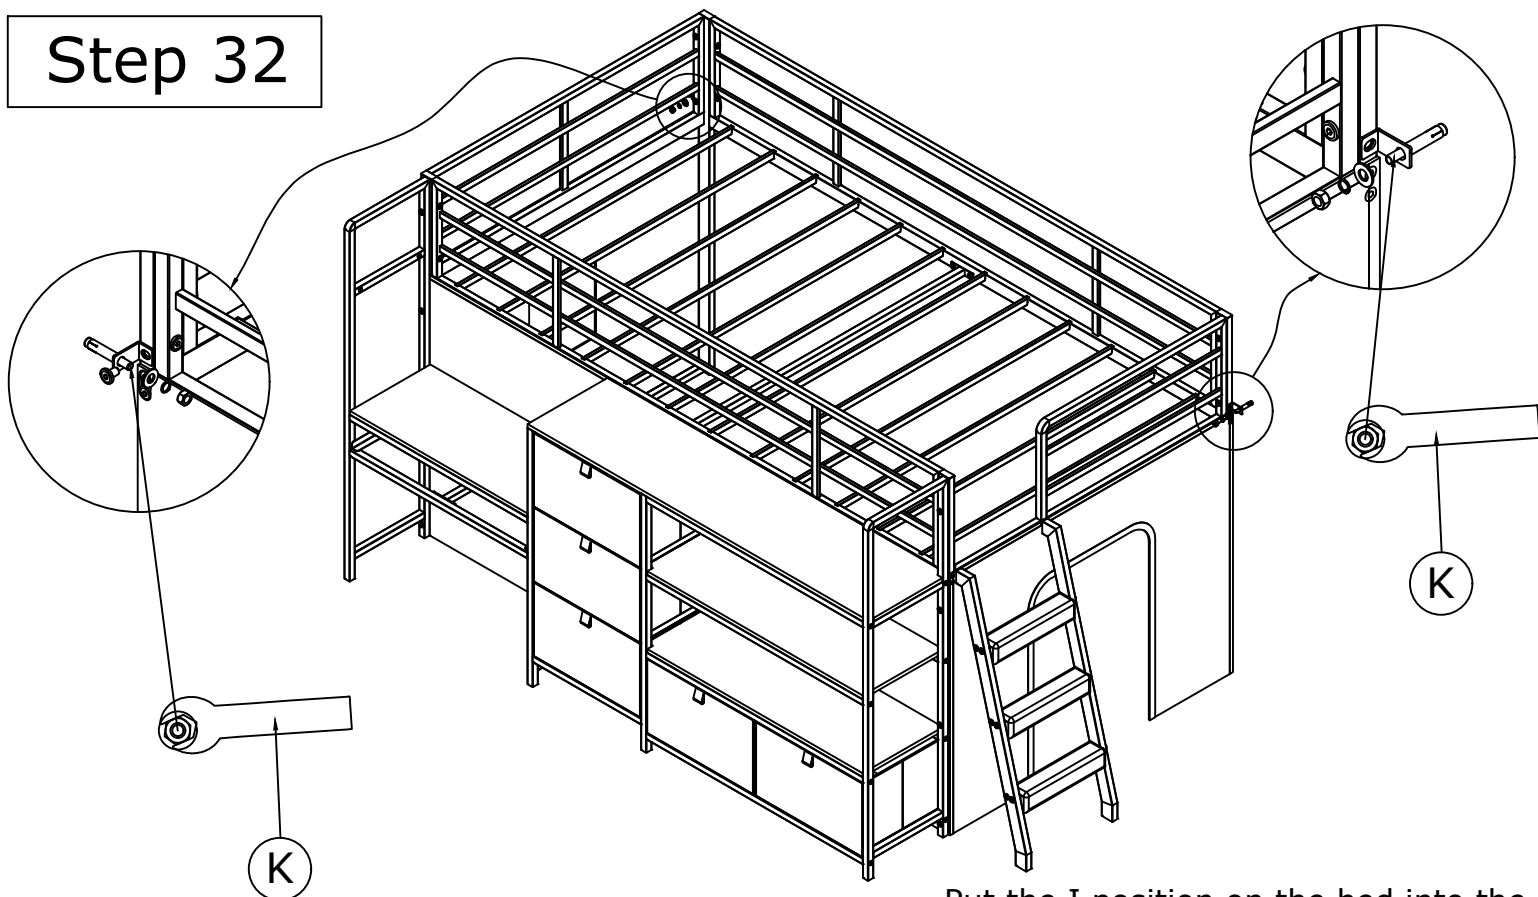Step 32



Put the I position on the bed into the 2 J bolts, then put the washer and nut in and use the K wrench to tighten it.

FINISH

