




BACKREST INSTALLATION TIP


1

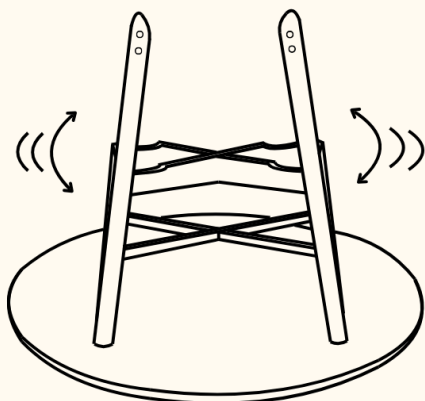

Check balance

Make sure the chair frame is stable and balanced.


2

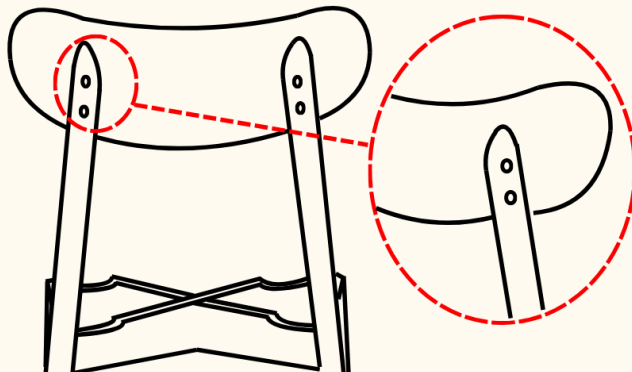

Align All Holes

Adjust the backrest until all screw all holes are aligned.


3

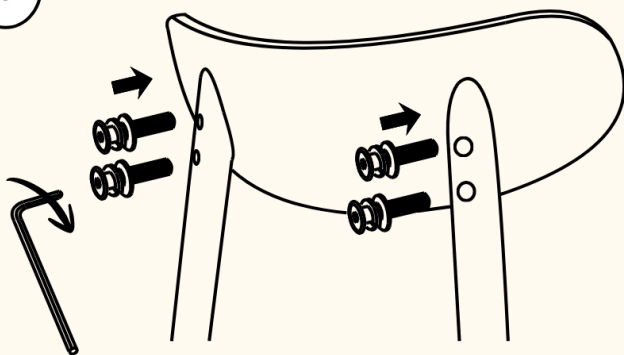

Insert Bolts Loosely

Insert all bolts without fully tightening.

4

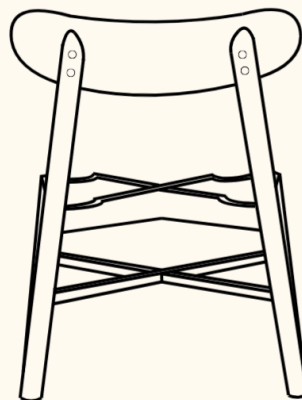

Fully Tighten Bolts

Once aligned and balanced, tighten all bolts securely.