



TM-VS004WH-60

- Prior to installation please check received items against the "Packing List".


Please report any missing items to your retailer immediately.

- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.

- Professional installation recommended.

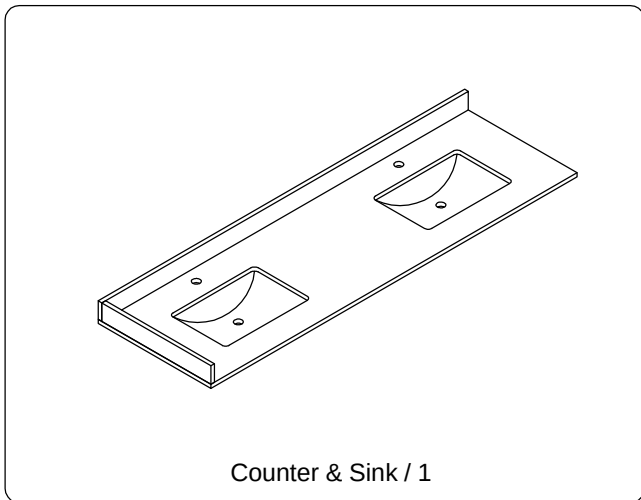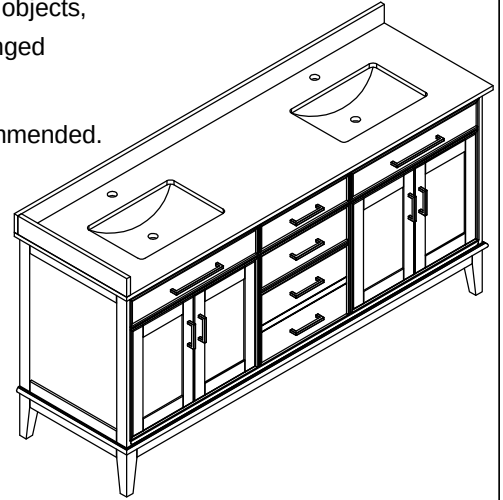


Counter & Sink / 1

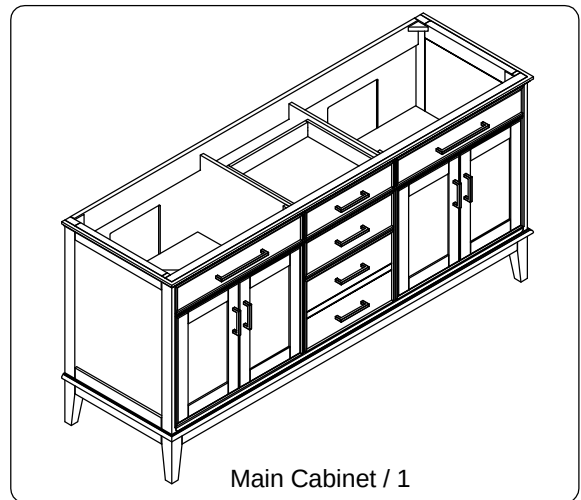


Main Cabinet / 1


HOW TO ADJUST HINGES (if required)

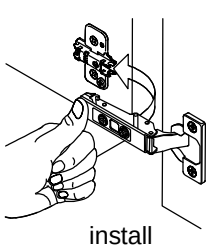


install

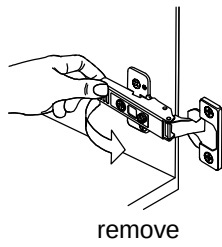


remove

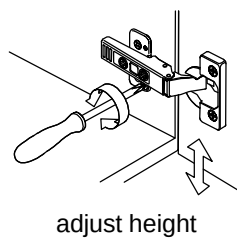

adjust height

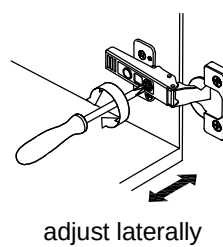


adjust laterally

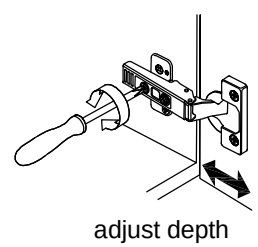


adjust depth

REQUIRED TOOLS NOT IN BOX




Silicone sealant

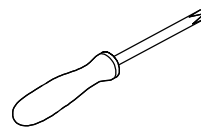


Phillips Screwdriver


INSTALLATION INSTRUCTIONS

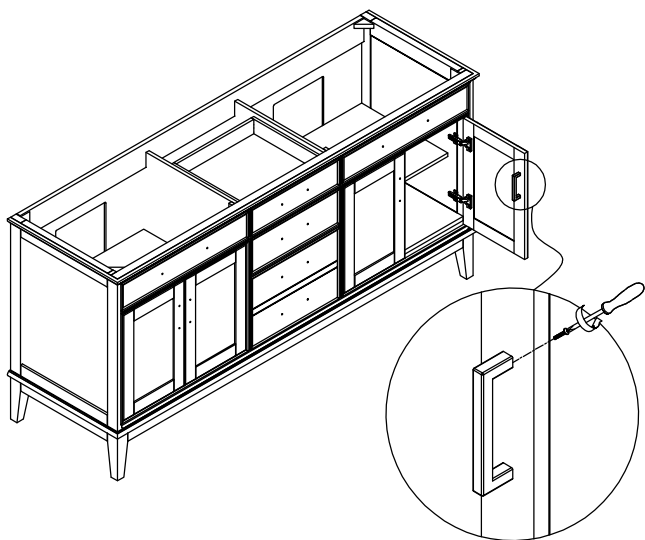


1. Remove handles from back of drawers and doors

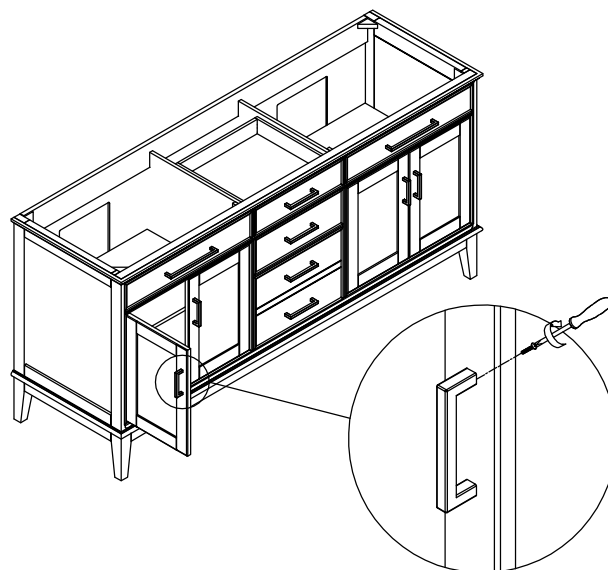

2. Install them on the vanity. Do not over tighten when attaching.

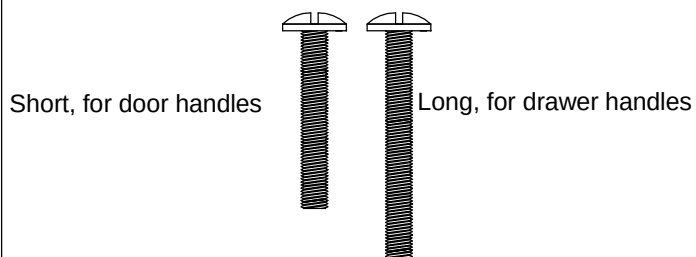

3. Short screws are for the door handles and long screws are for the drawer handles.

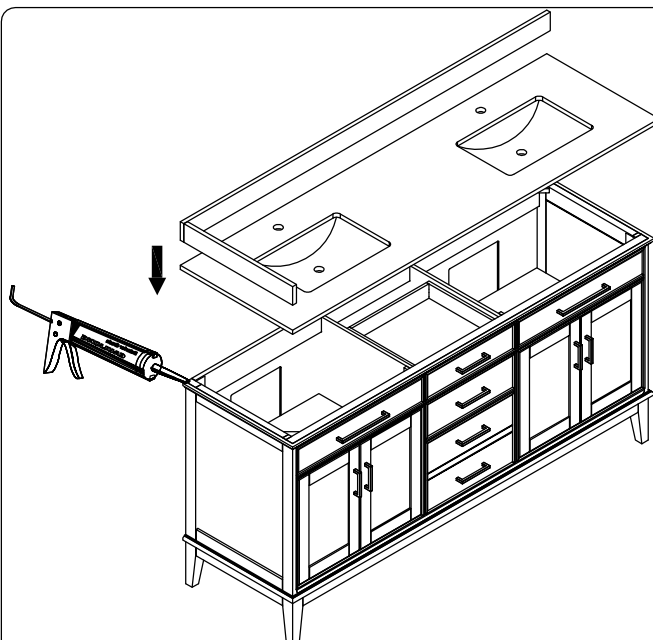

4. Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.