



SHAMPOO BOWL & CHAIR

Professional Salon Equipment - Parts Inventory

IMPORTANT NOTICE

During the installation process, please DO NOT tighten the screws completely. Keep them slightly loose to ensure all parts align correctly. Securely tighten all screws only after the final step is complete.

PARTS & HARDWARE INVENTORY

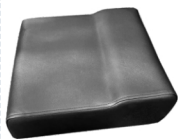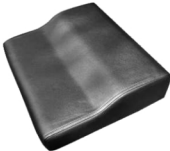
Ax2 	Bx1 	Cx1 	Dx1 	Ex1 	Fx1 
Gx1 	Hx2 	Ix4 	Jx4 	Kx1 	Lx22 
Mx4 	Nx2 	Ox1 	oox4 	Px6 	Qx1 
Rx1 	Sx1 	Ux1 	Vx1 	Wx1 	Xx1 
Yx1 	Zx1 	aax1 	bbx1 	ccx1 	ddx1 

ASSEMBLY GUIDE

Section 1: Seat Shell & Frame Construction


1 Assembly Part A

Fix **J** to **A** using **L**.

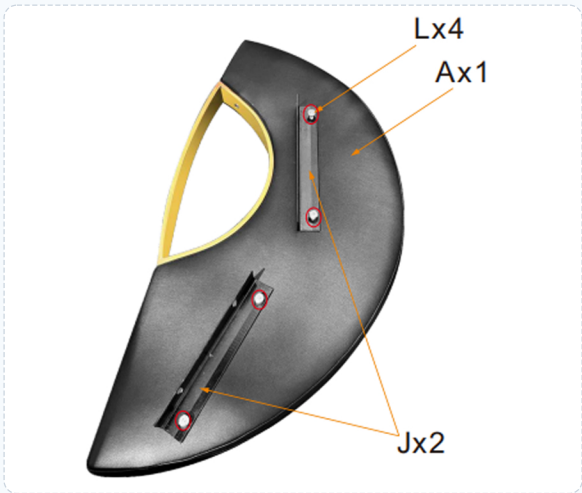


2 Assembly Part B

Attach **B** vertically to **A**. Tighten from the bottom with **L**.

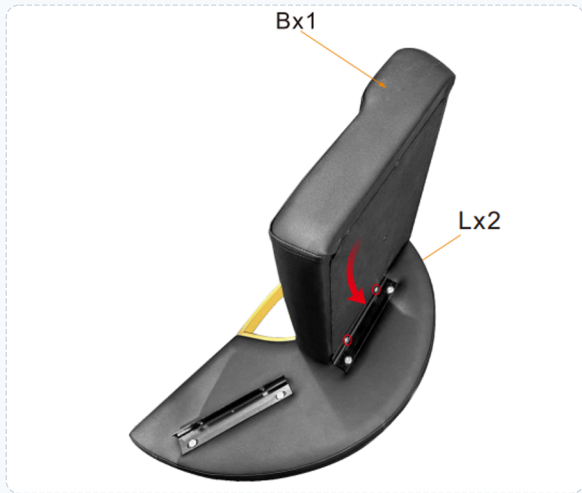


3 Secure Second Part A

Align the second **A** and secure using **L**. Keep both sides symmetric.

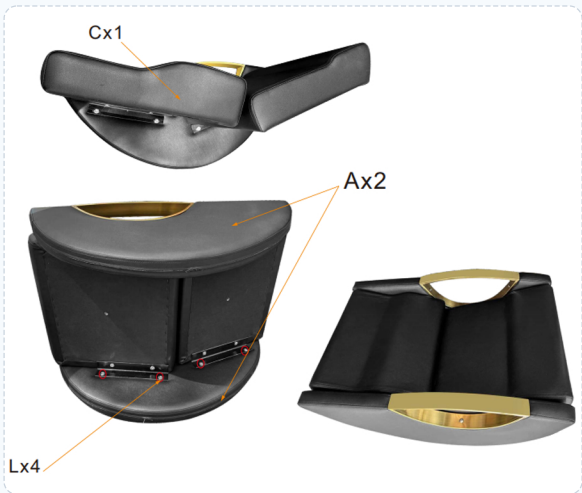

4 Connect Part F & ③

Align ③ and **F**. Secure from inside using **H**, **N** and **P**.

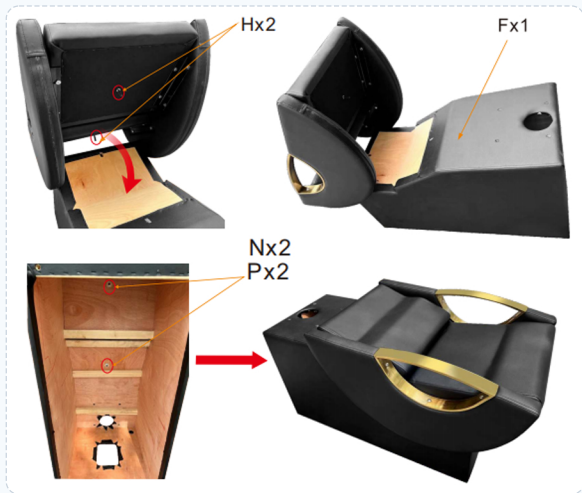

ASSEMBLY GUIDE

Section 2: Plumbing, Basin Mounting & Support

5 Water & Drainage Assembly

Install **U** and **V** on **G**. Connect **W** to **Z** and **U**. Bridge **V** and **U** using **X**. Fix **dd** and **aa**.



6 Mount Basin & Shampoo Holder

Secure the basin and shampoo holder to the deck using the provided hardware.

