



**** Do not tighten any bolts until all of them have been started !**


Step 1.

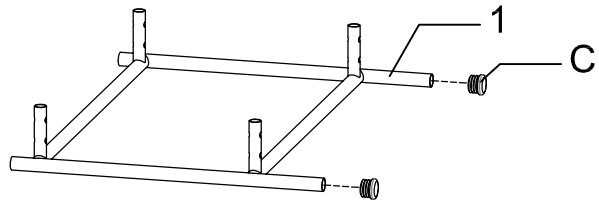


Step 2.

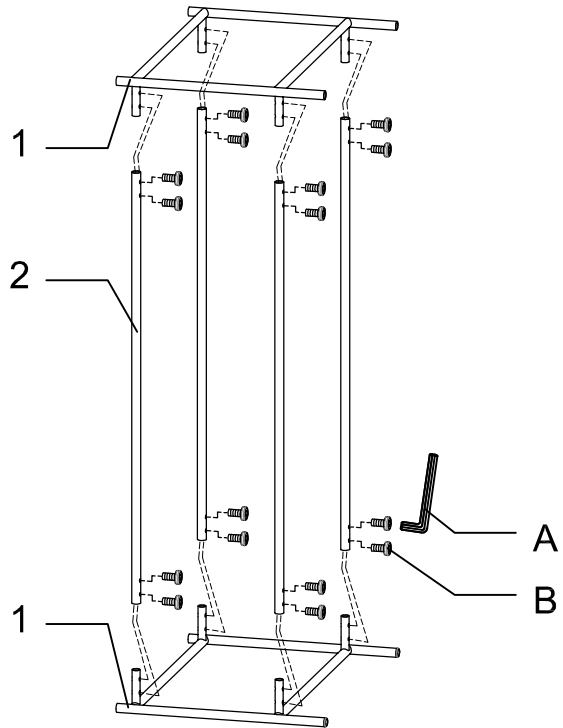

Step 3.

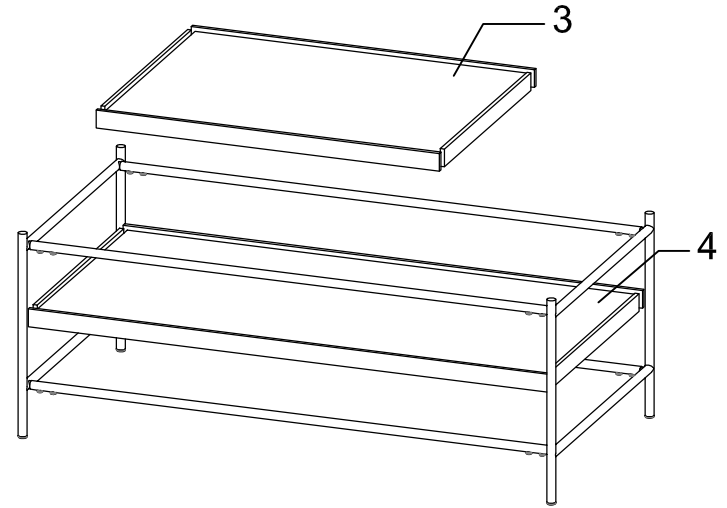


Step 4.

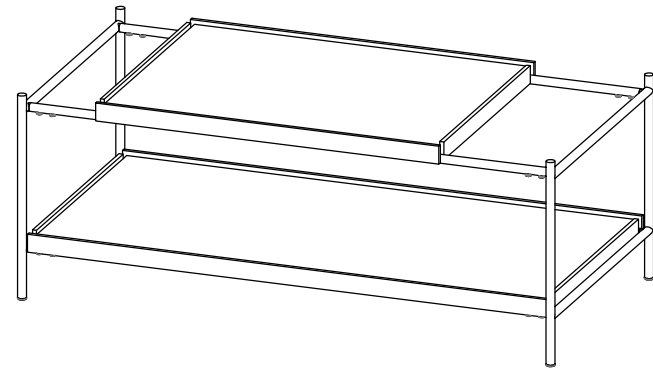

ACCESSORY PACK

A



1/4"

1PC

B



16PCS


C



4PCS


COMPLETE HARDWARE

1

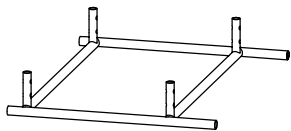


2PCS

2



4PCS

3



1PC


4




1PC

**** Do not tighten any bolts until all of them have been started !**


Step 1.

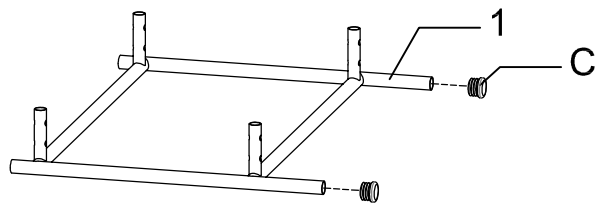


Step 2.

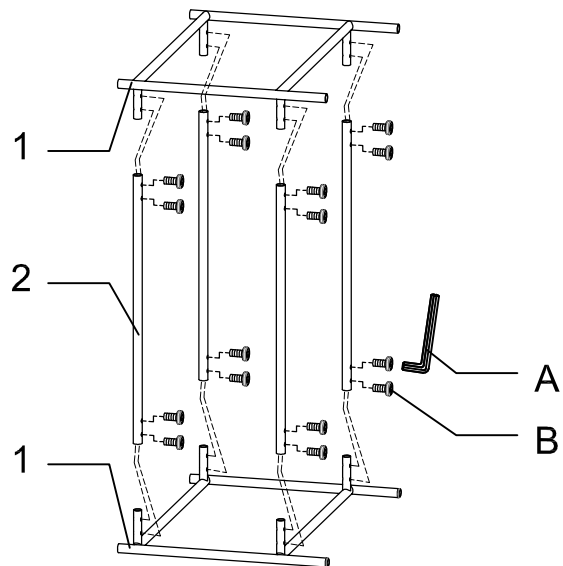


Step 3.

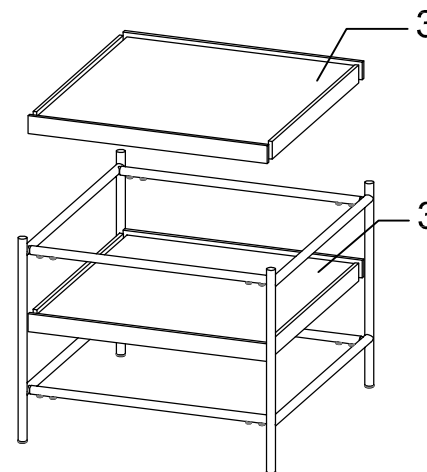



Step 4.

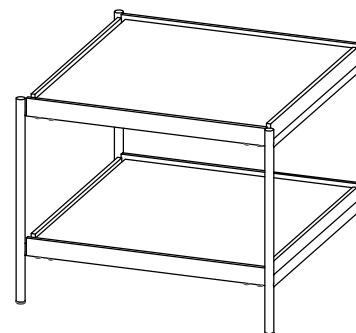


ACCESSORY PACK


A  1/4" 1PC


B  16PCS

C  4PCS

COMPLETE HARDWARE

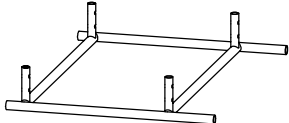
1  2PCS

2  4PCS


3  2PCS

**** Do not tighten any bolts until all of them have been started !**


Step 1.

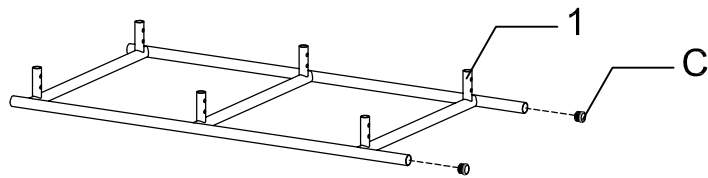




Step 3.

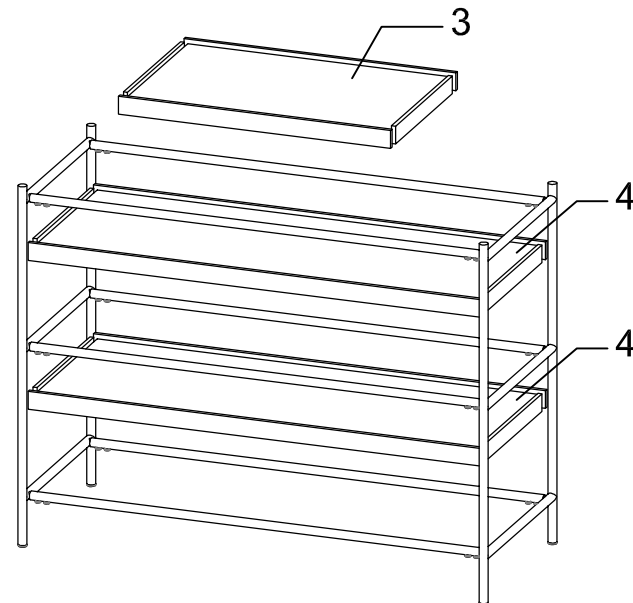

Step 2.

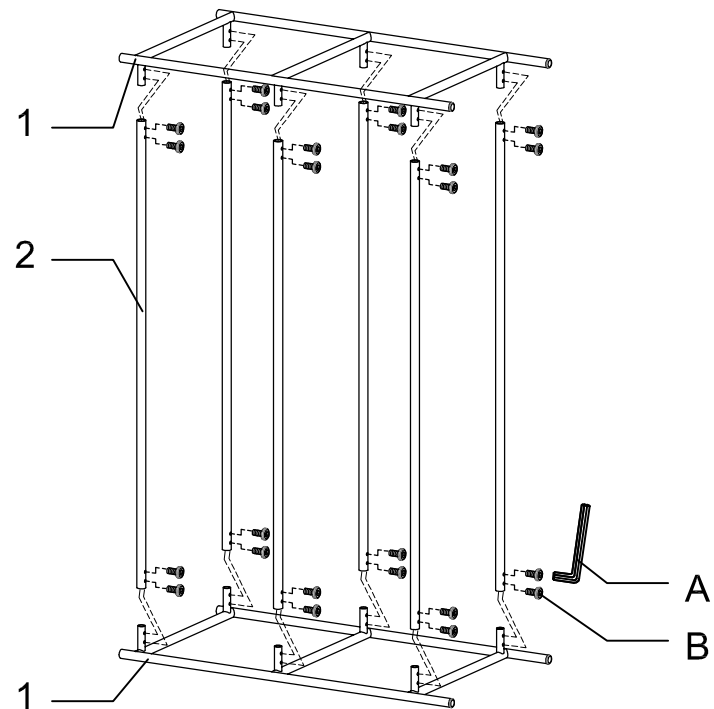

ACCESSORY PACK

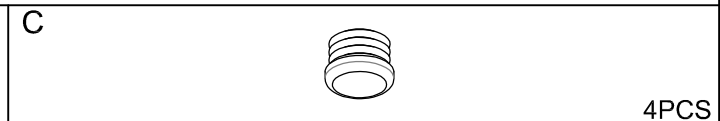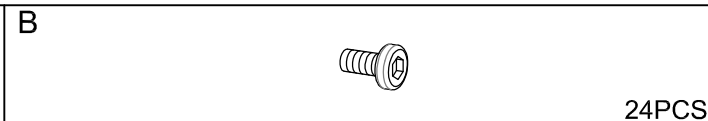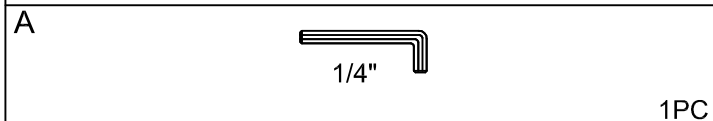

COMPLETE HARDWARE

