



INSTRUCTIONS


Ax1 	Ex9  M8*60MM
Bx1 	Fx1  M8
Cx2  legs	
Dx9  M8x22x2mm	

①

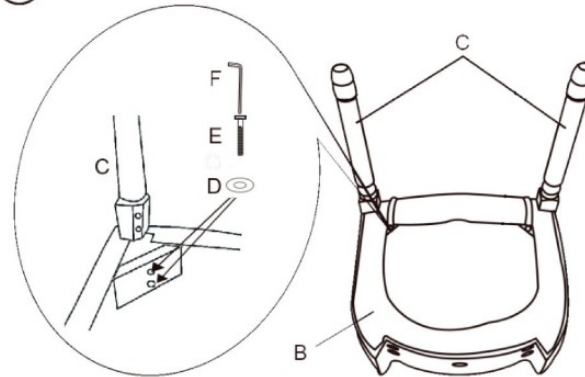


Install the screws to 80% level first

②

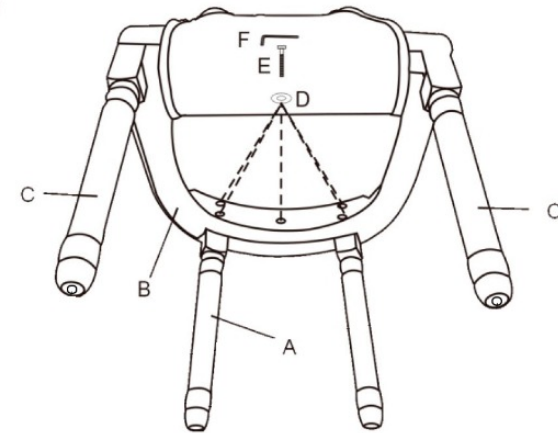

Install the screws to 80% level first

③

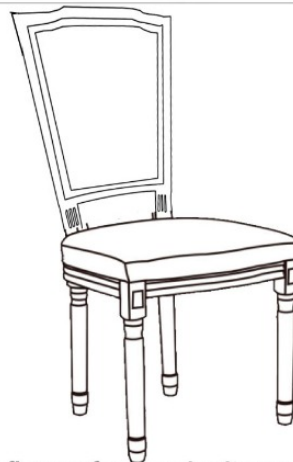

Place on a flat surface and adjust the chair's smoothness. Turn the screw to 100%