


CONVENIENCE CONCEPTS

JENSEN HIGH BOY BARN DOOR TV STAND

151645

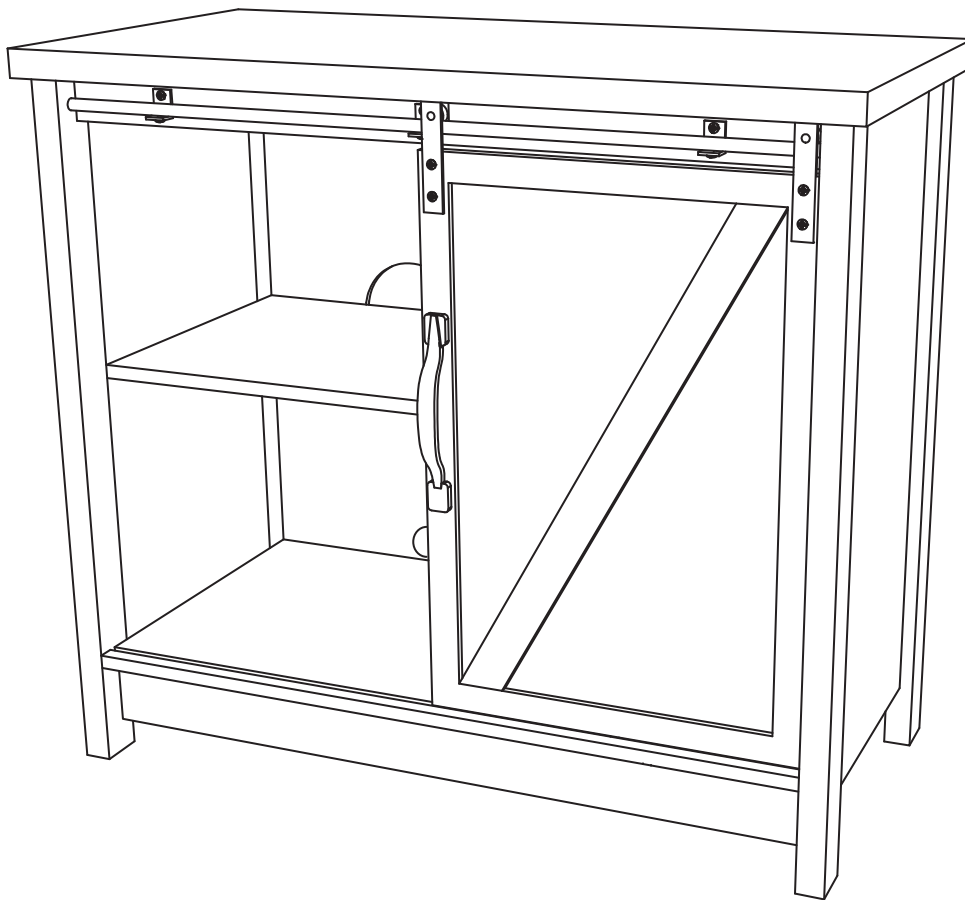

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .












Please do not return to the store
Broken or missing parts?
Need help with assembly?

Our Illinois based customer service team is ready to help with any problems or questions you may have. Please give us a call (Toll Free) at 1-800-468-6447, or email us at parts@convenience-concepts.com.
Normal hours of Operation: M-F* 8am-4pm CST.














*Excludes Holidays

This product's warranty is only valid through authorized dealers.


Hardware List

A 	B 	C 	D 	E 
Cambolt (28pcs)	Camlock (28pcs)	Wood dowel (22pcs)	Self-Tapping Screw (7pcs)	Handel (1pc)
F 	G 	H 	I 	
Pulley (2pcs)	Shelf/Door pin (5pcs)	Handel Screw (2pcs)	Glue (1pc)	

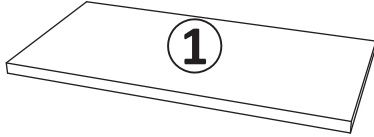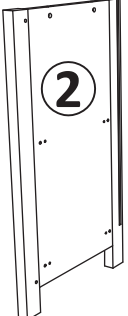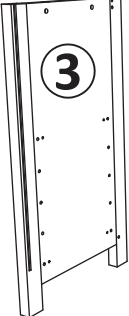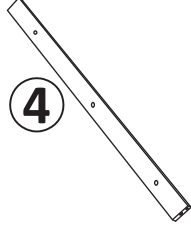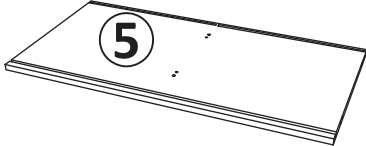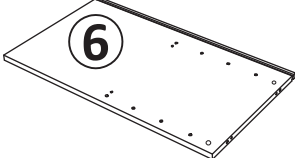
Panel List

 1	 2	 3	 4
Top Panel (1pc)	Left Side Panel (1pc)	Right Side Panel (1pc)	Top Front Panel (1pc)
 5	 6	 7	 8
Bottom Panel (1pc)	Middle Divider Panel (1pc)	Left Middle Shelf (1pc)	Bottom Shelf (1pc)
 9	 10	 11	 12
Bottom Front Panel (1pc)	Door Track (1pc)	Back Panel (2pcs)	Door (1pc)
 13			
Right Middle Shelf (1pc)			

Assembling the unit with camlocks and wood dowels.

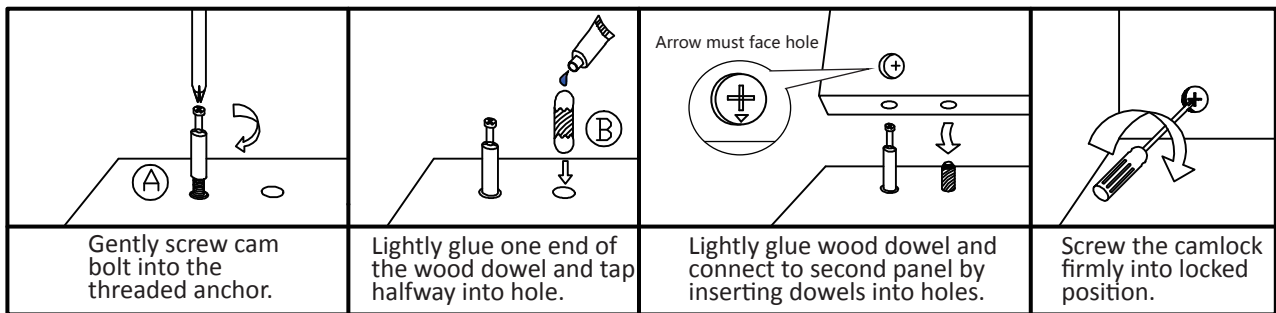


Exploded Views

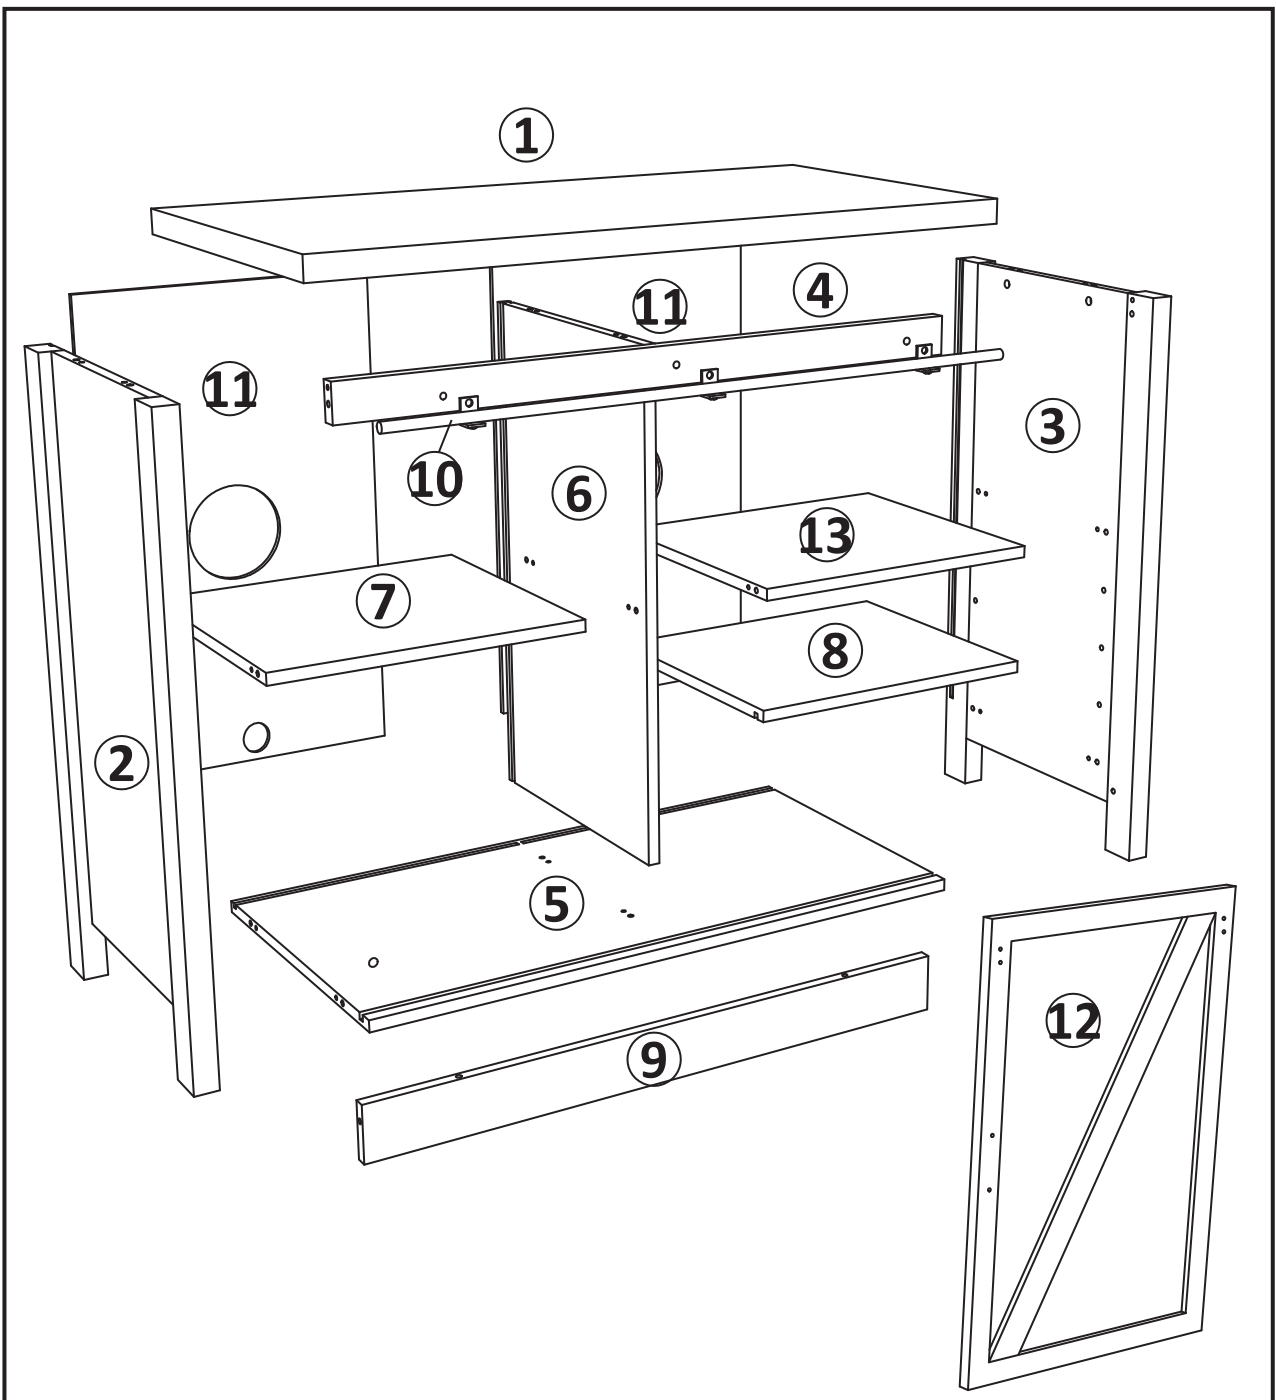

Step 1

1. Screw cambolts (A) into bottom panel (5) as shown .
2. Attach bottom front panel (9) to bottom panel (5) using camlocks (B) , make sure to not overtighten .

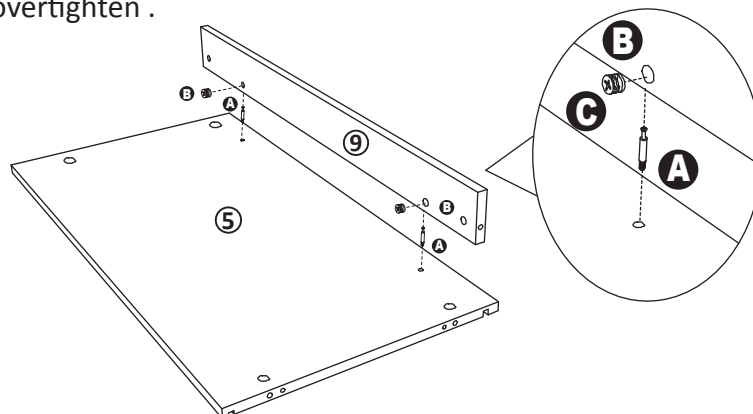


A
x 2

B
x 2

Step 2

1. Screw cambolts (A) and wood dowels (C) into middle side panel (6) and bottom panel (5) as shown .
2. Attach left middle shelf (7) and right middle shelf (13) to middle divider panel (6) using camlocks (B) , gently tighten camlocks.
3. Connect middle divider panel (6) to bottom panel (5) using camlocks (B) , gently tighten camlocks.

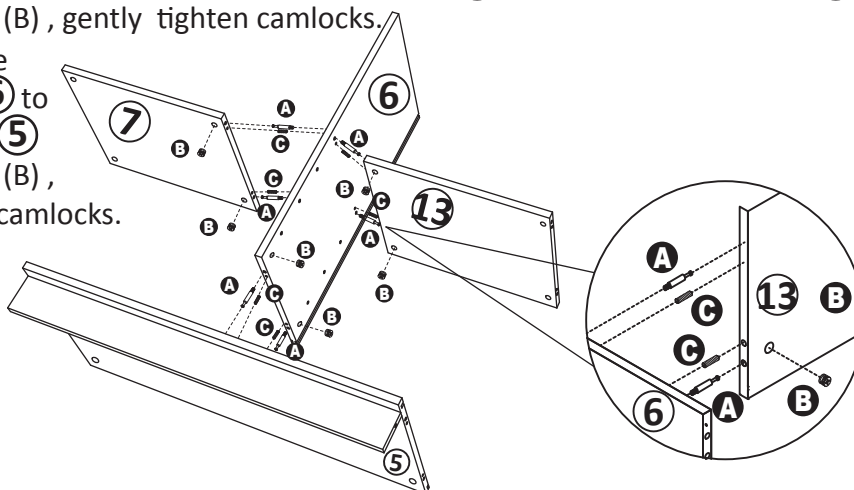


A
x 6

B
x 6

C
x 6

Step 3

1. Screw cambolts (A) and wood dowels (C) into left side panel (2) as shown .
2. Attach left side panel (2) to assembly as shown using camlocks (B) , gently tighten camlocks.
3. Connect top front panel (4) to left side panel (2) using camlocks (B) , gently tighten camlocks.

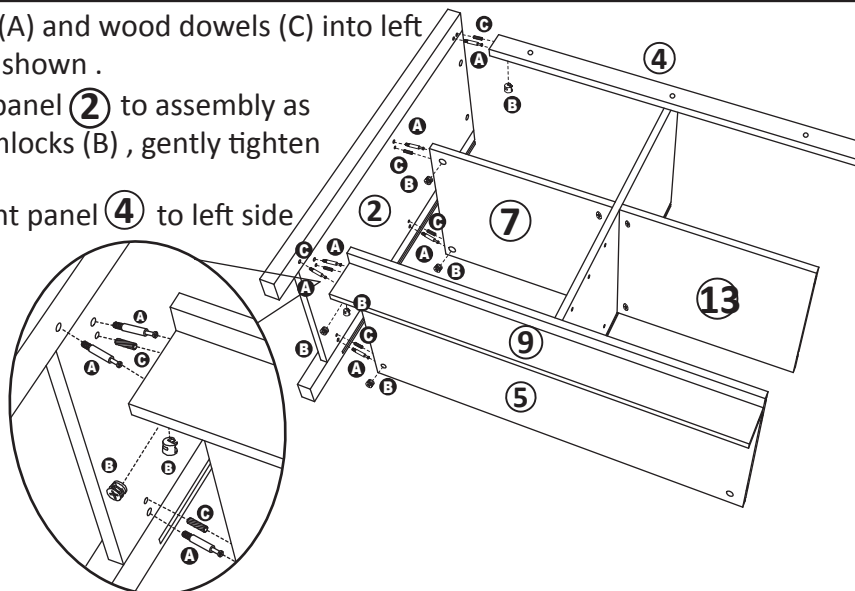



A
x 6

B
x 6

C
x 5


Step 4

1. Screw cambolts (A) and wood dowels (C) into right side panel ③ as shown .
2. Attach right side panel ③ to assembly as shown using camlocks (B) , gently tighten camlocks.

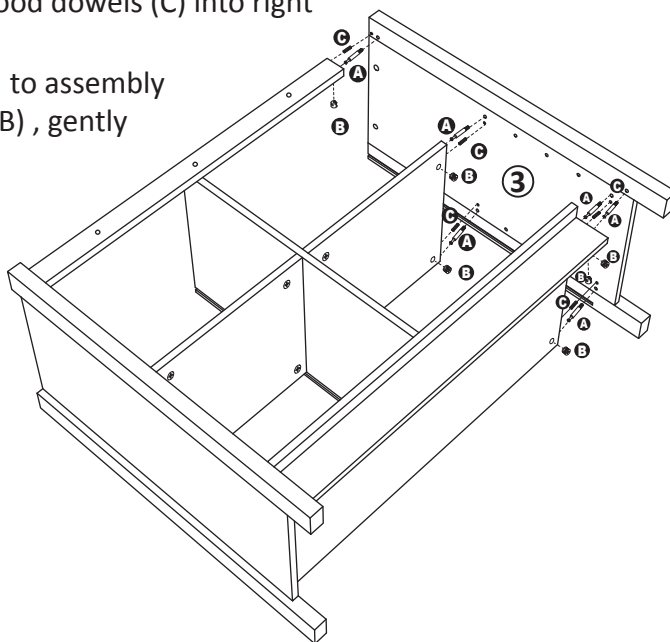




Step 6

1. Stand unit upright .
2. Slide back panel ⑪ into assembly as shown.

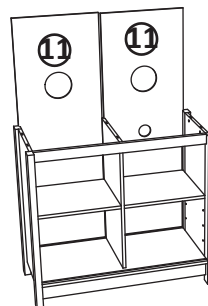



Step 7

1. Screw cambolts (A) and wood dowels (C) into top panel ① as shown .
2. Attach top panel ① to assembly as shown using camlocks (B) , gently tighten camlocks.

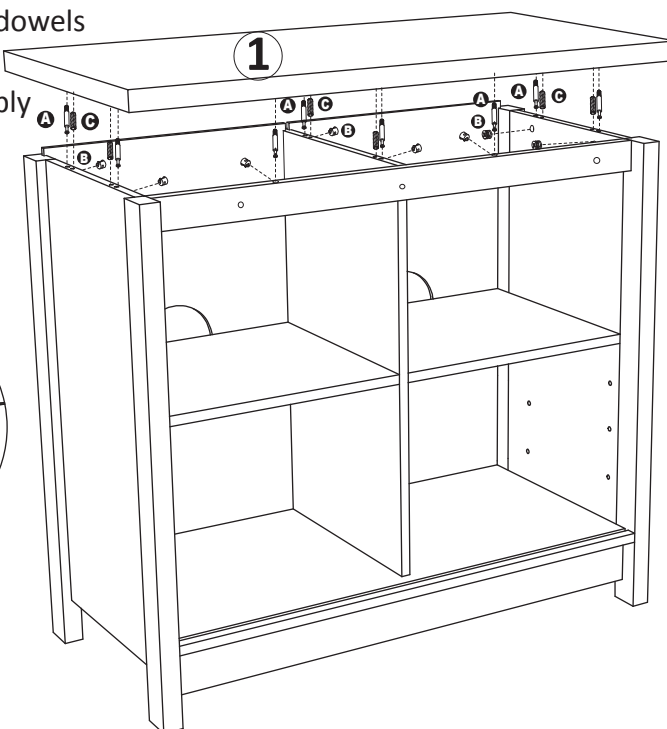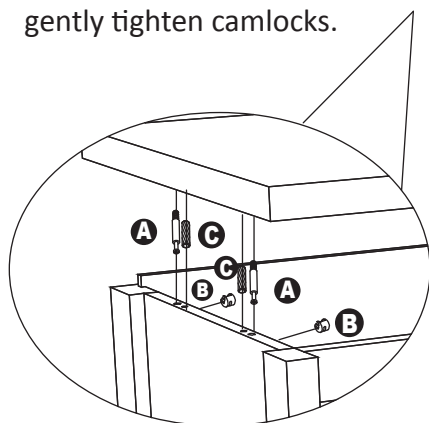



Step 8

1. Attach handel (E) to door 12 as shown using handel screws (H).
2. Attach pulley (F) to door 12 as shown using self-tapping screws (D).

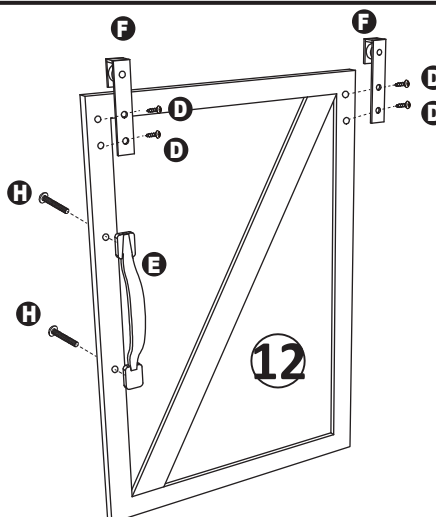

Step 9

1. Attach door track 10 to assembly as shown using self-tapping screws (D).
2. Insert shelf pins (G) into assembly as shown.
3. Using a slight angle, carefully insert bottom shelf 8 into unit.

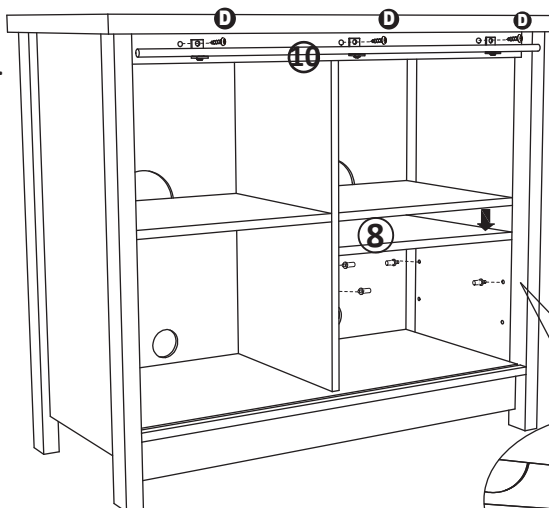

Step 10

1. First Insert door pin (G) into door 12 as shown.
2. Using a slight angle, Carefully place door into unit as shown.

