



Mid-Century Style TV Cabinet

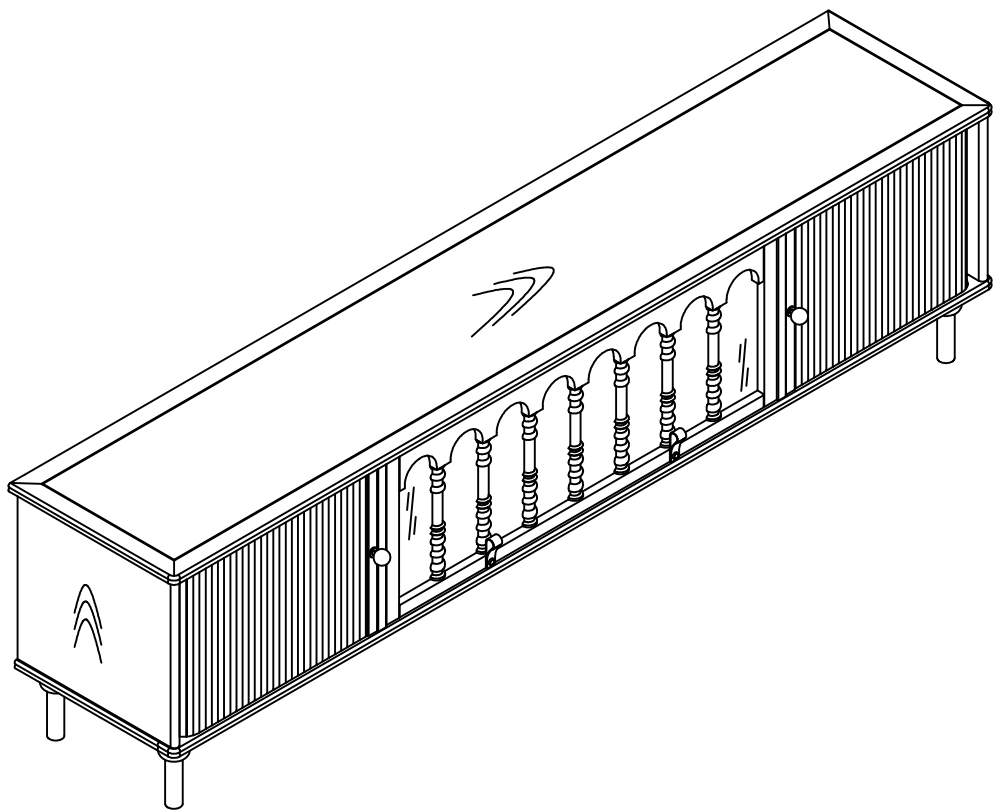
















Disassembly and installation of accessories

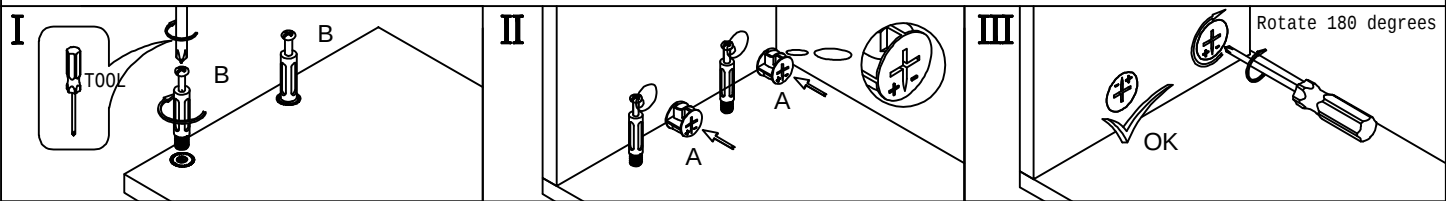


A 16 PCS  Ø15*10	B 16 PCS  Ø7*35	C 16 PCS  M8*30	D 6 PCS  M3.5*14	E 42 PCS  M4*25	F 4 PCS  M4*25	G 2 PCS  Metal Handle
H 2 PCS  Leather Handle	I 4 SET  Shelf Support	J 2 PCS  M5	K 3 PCS  Ø50	L 2 PCS L1 L2  Magnet	M 6 PCS  M8*35	

Parts list

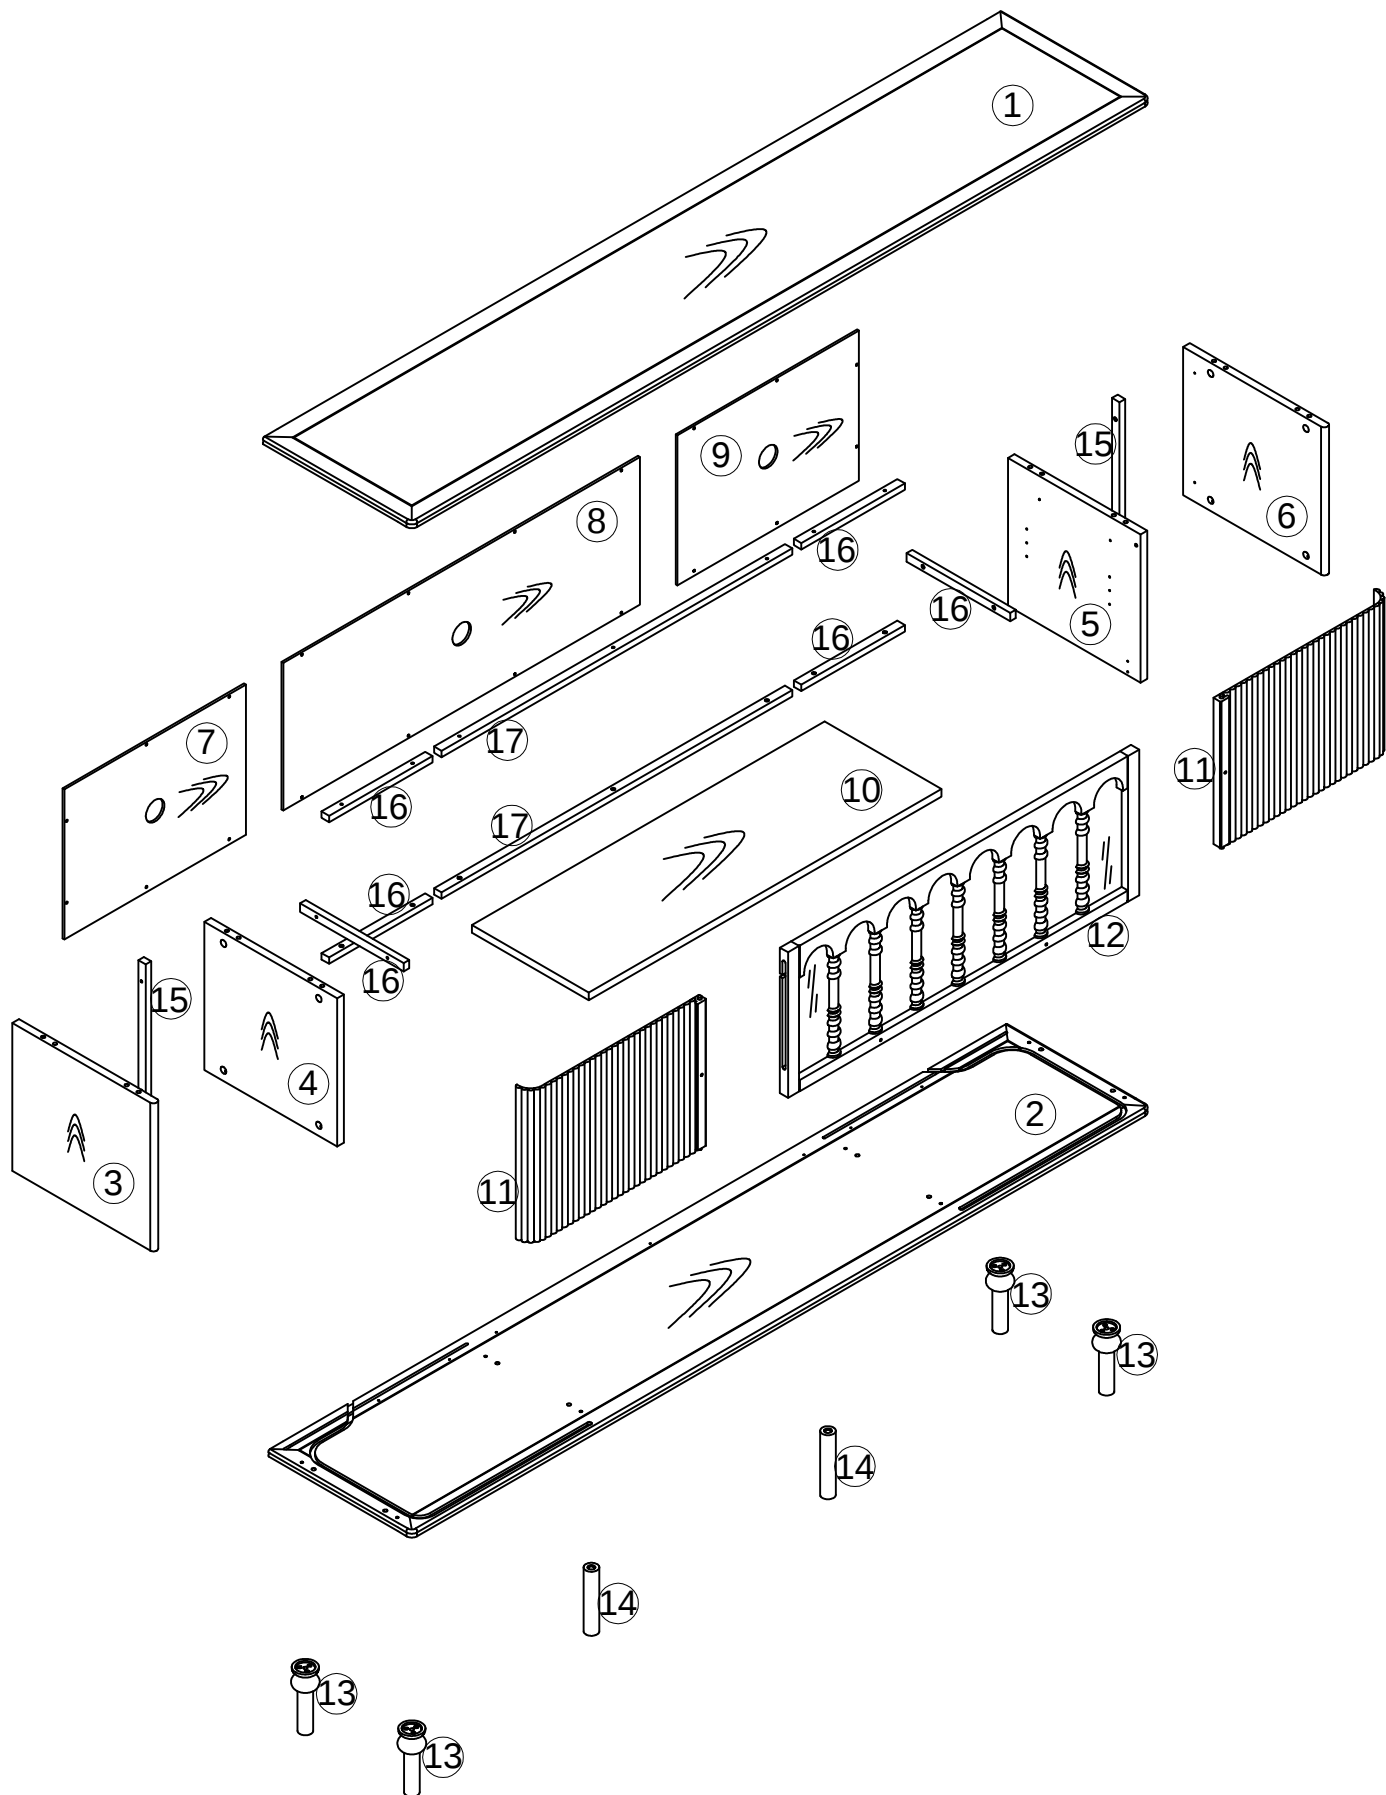

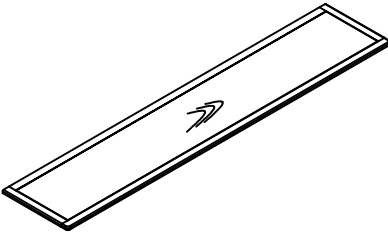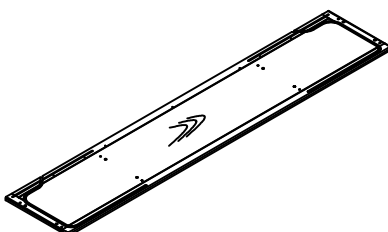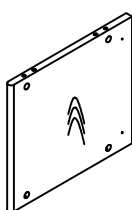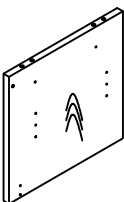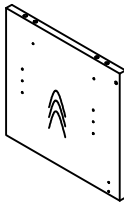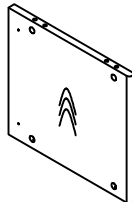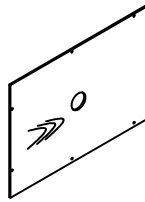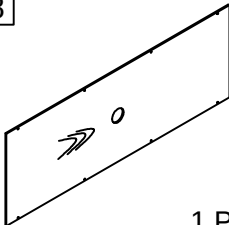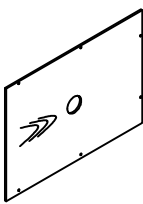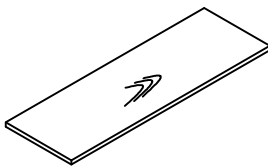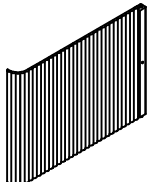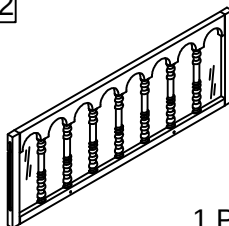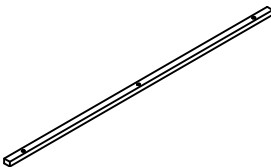1  1 PC	2  1 PC	3  1 PC		
4  1 PC	5  1 PC	6  1 PC	7  1 PC	8  1 PC
9  1 PC	10  1 PC	11  2 PC	12  1 PC	13  4 PC
14  2 PC	15  2 PC	16  6 PC	17  2 PC	


STEP 1

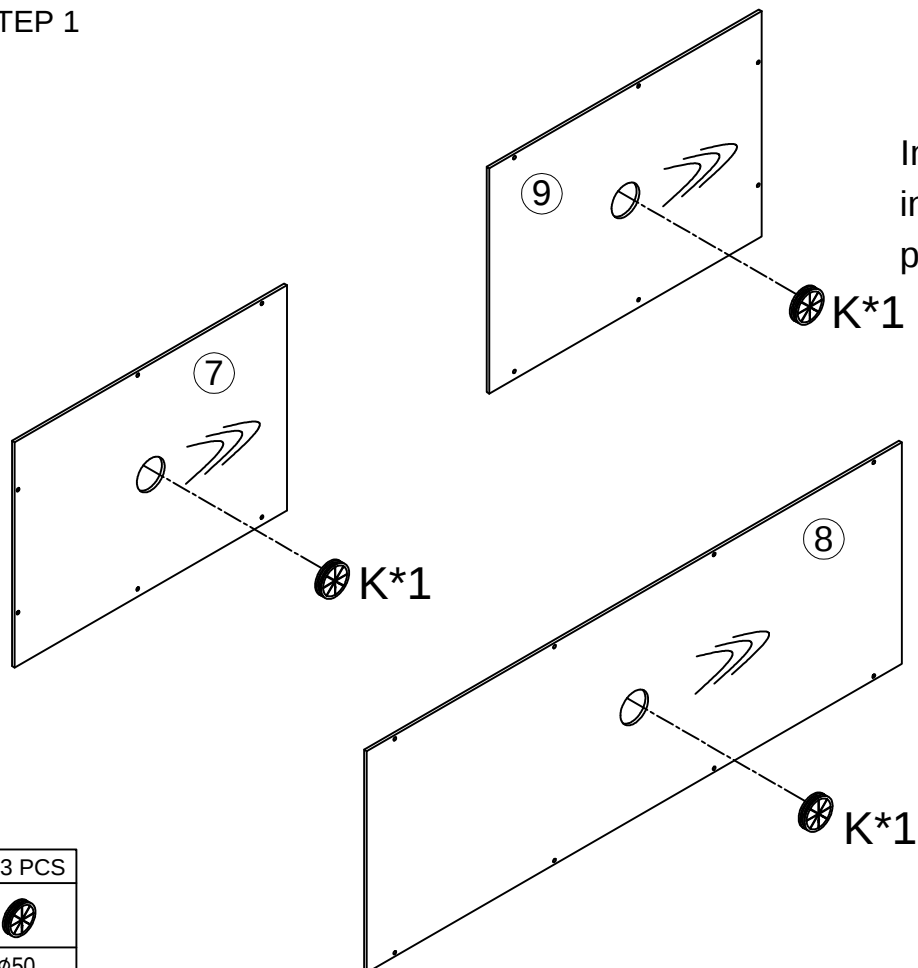


Install the K fittings securely into the designated holes on panels No.7, No.8, and No.9.

K	3 PCS
	
ø50	

STEP 2

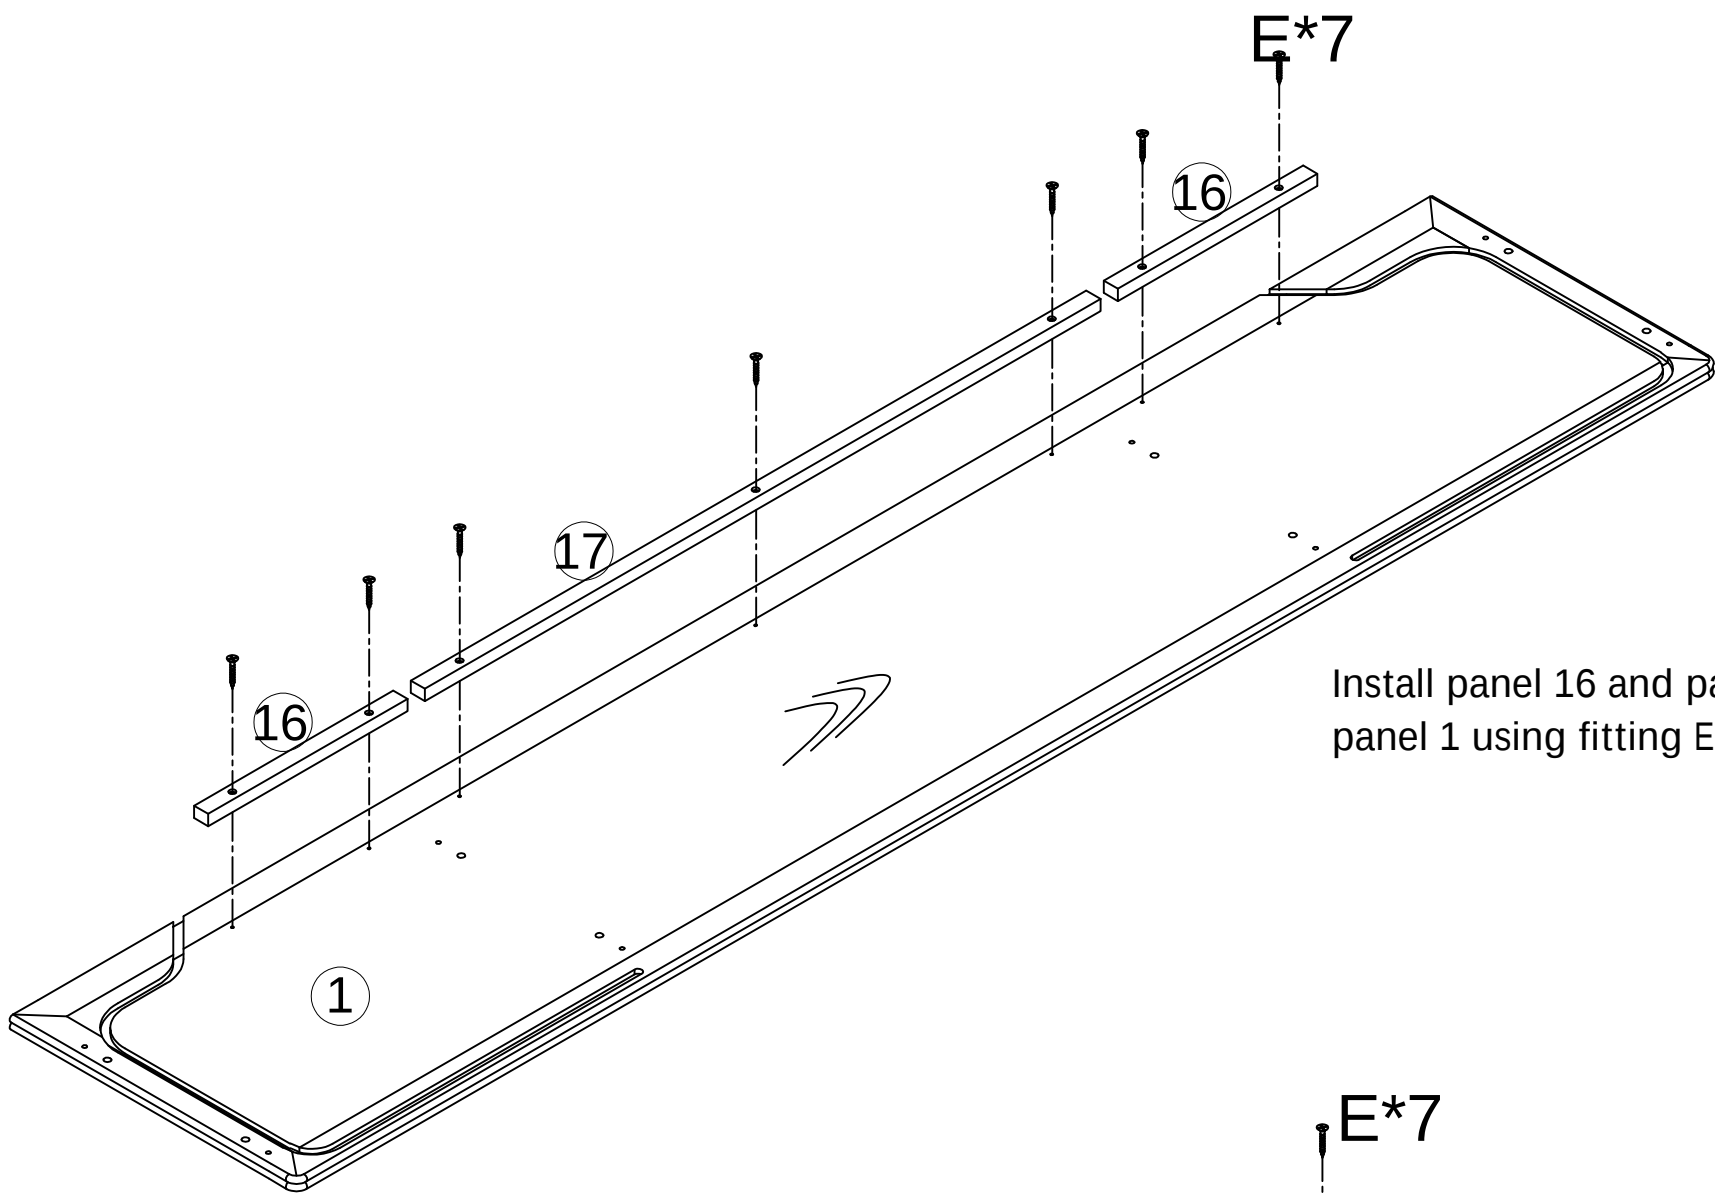




Install panel 16 and panel 17 onto panel 1 using fitting E.

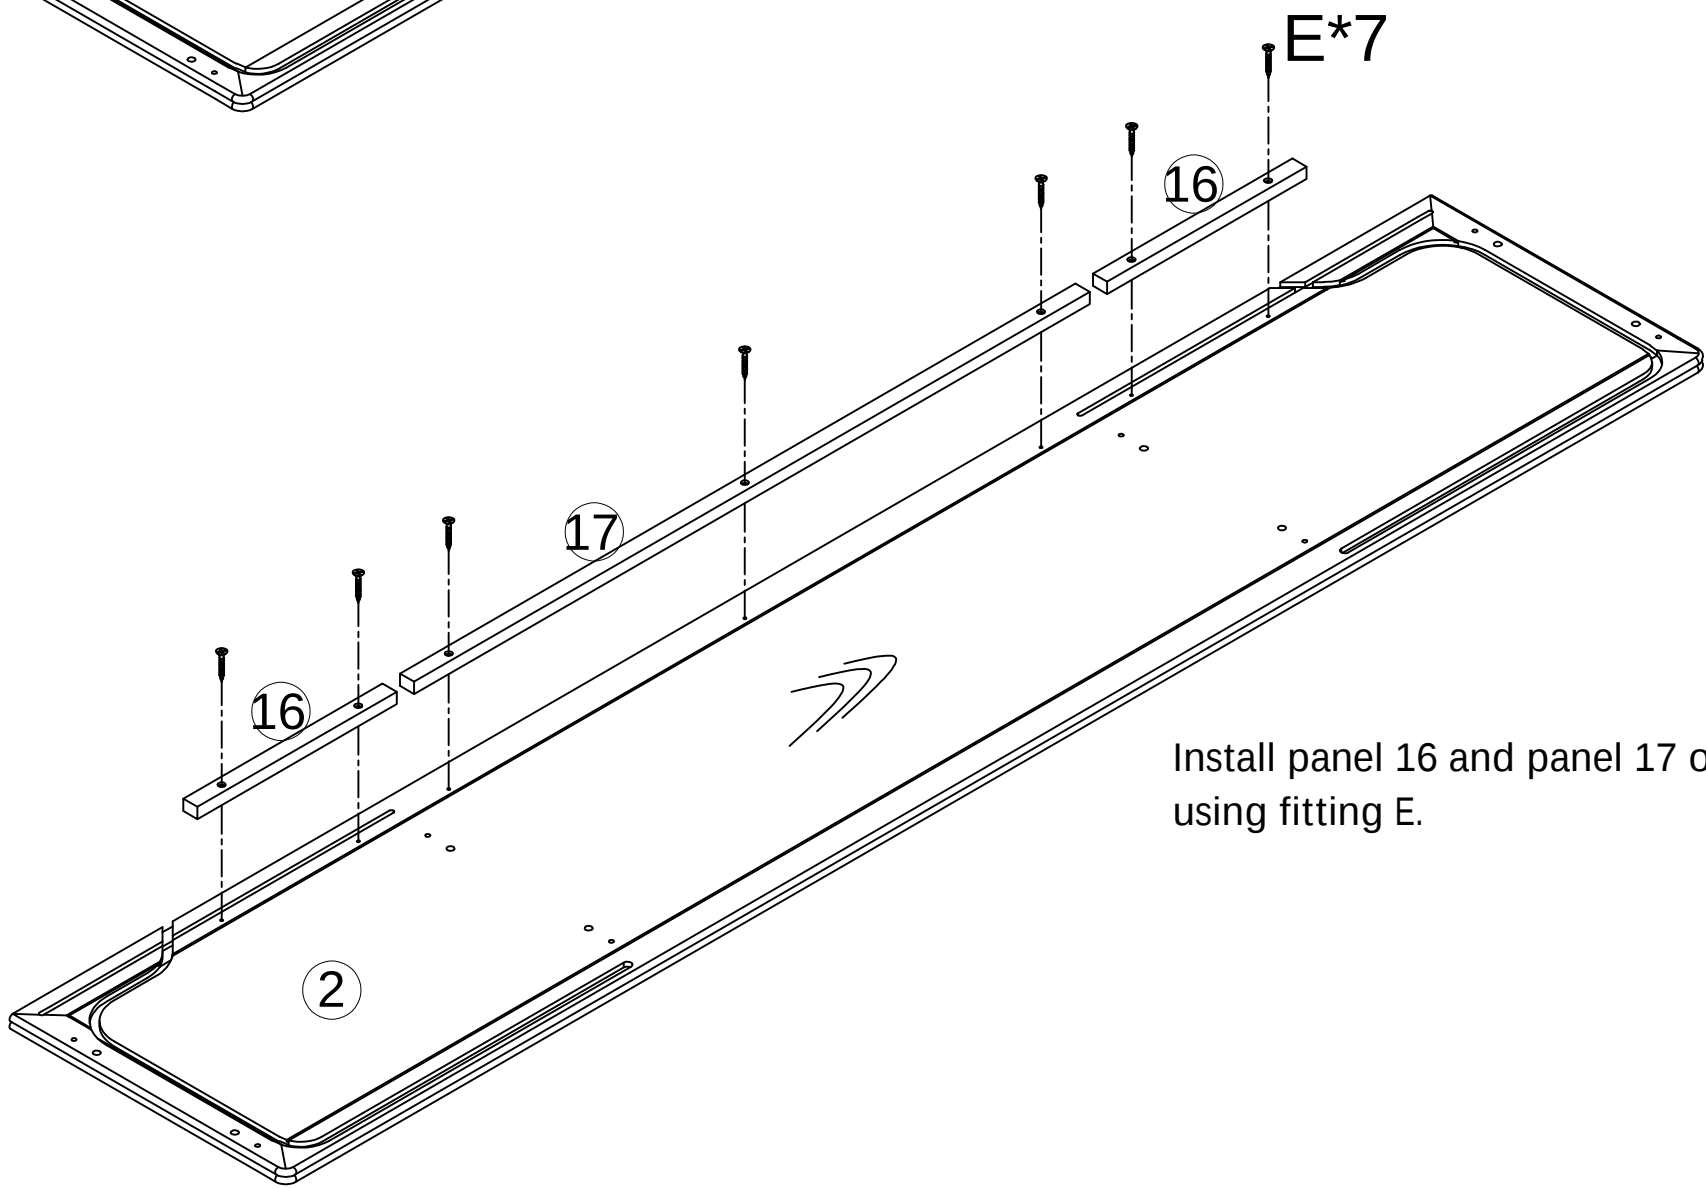

Install panel 16 and panel 17 onto panel 2 using fitting E.

E	14 PCS
	
M4*25	

STEP 3

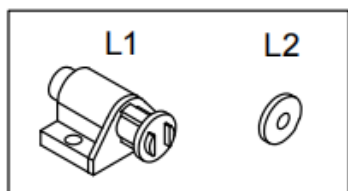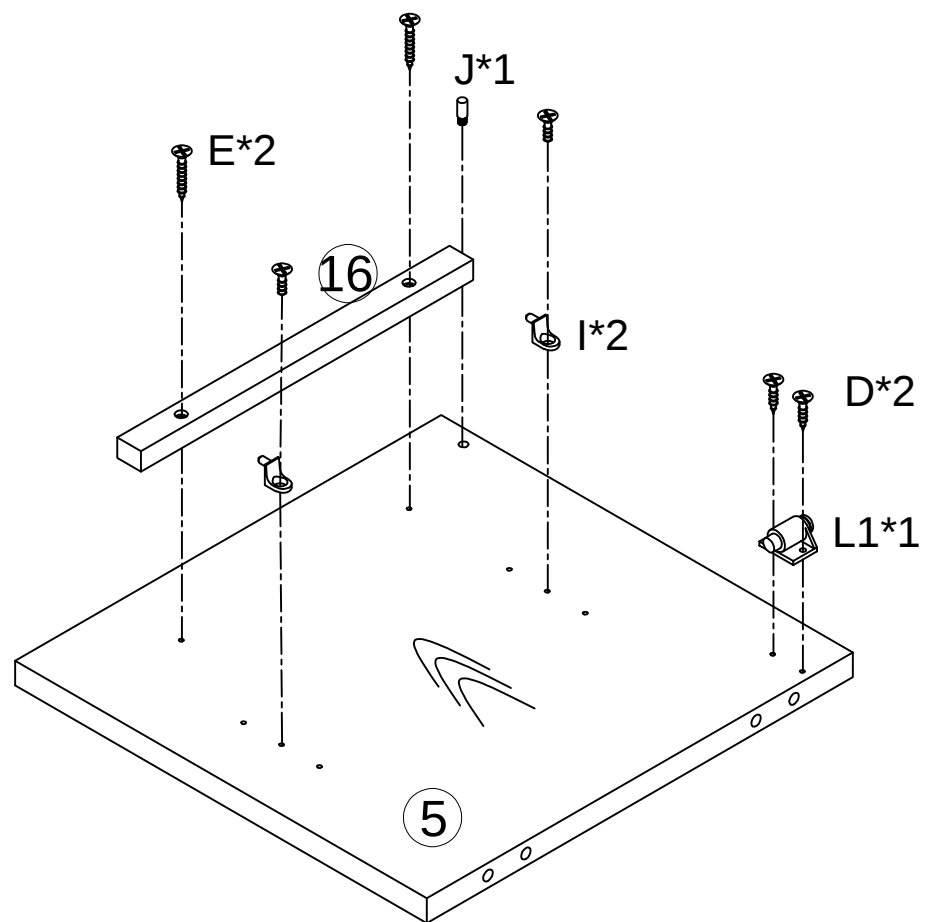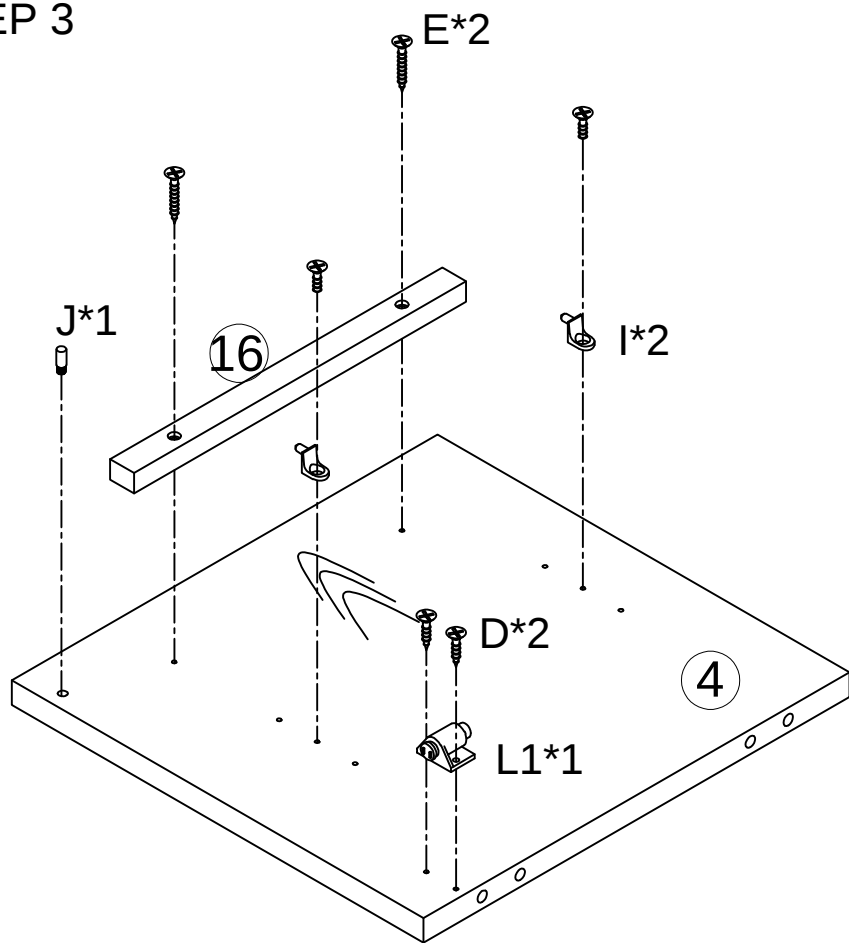


- 1.Install panel 16 onto panel 4 and panel 5 respectively using fitting E.
- 2.Install fitting J onto panel 4 and panel 5 respectively.
- 3.Fix fitting I onto the corresponding holes of panel 4 and panel 5 respectively.
- 4.Fix fitting L onto the corresponding holes of panel 4 and panel 5 respectively using fitting D.

D 4 PCS	E 4 PCS	I 4 SET	J 2 PCS	L 2 PCS
				
M3.5*14	M4*25	Support t	M5	Magnet L1

STEP 4


Install panel 3, panel 4, panel 5, and panel 6 onto panel 2 using fitting A, fitting B, and fitting C.

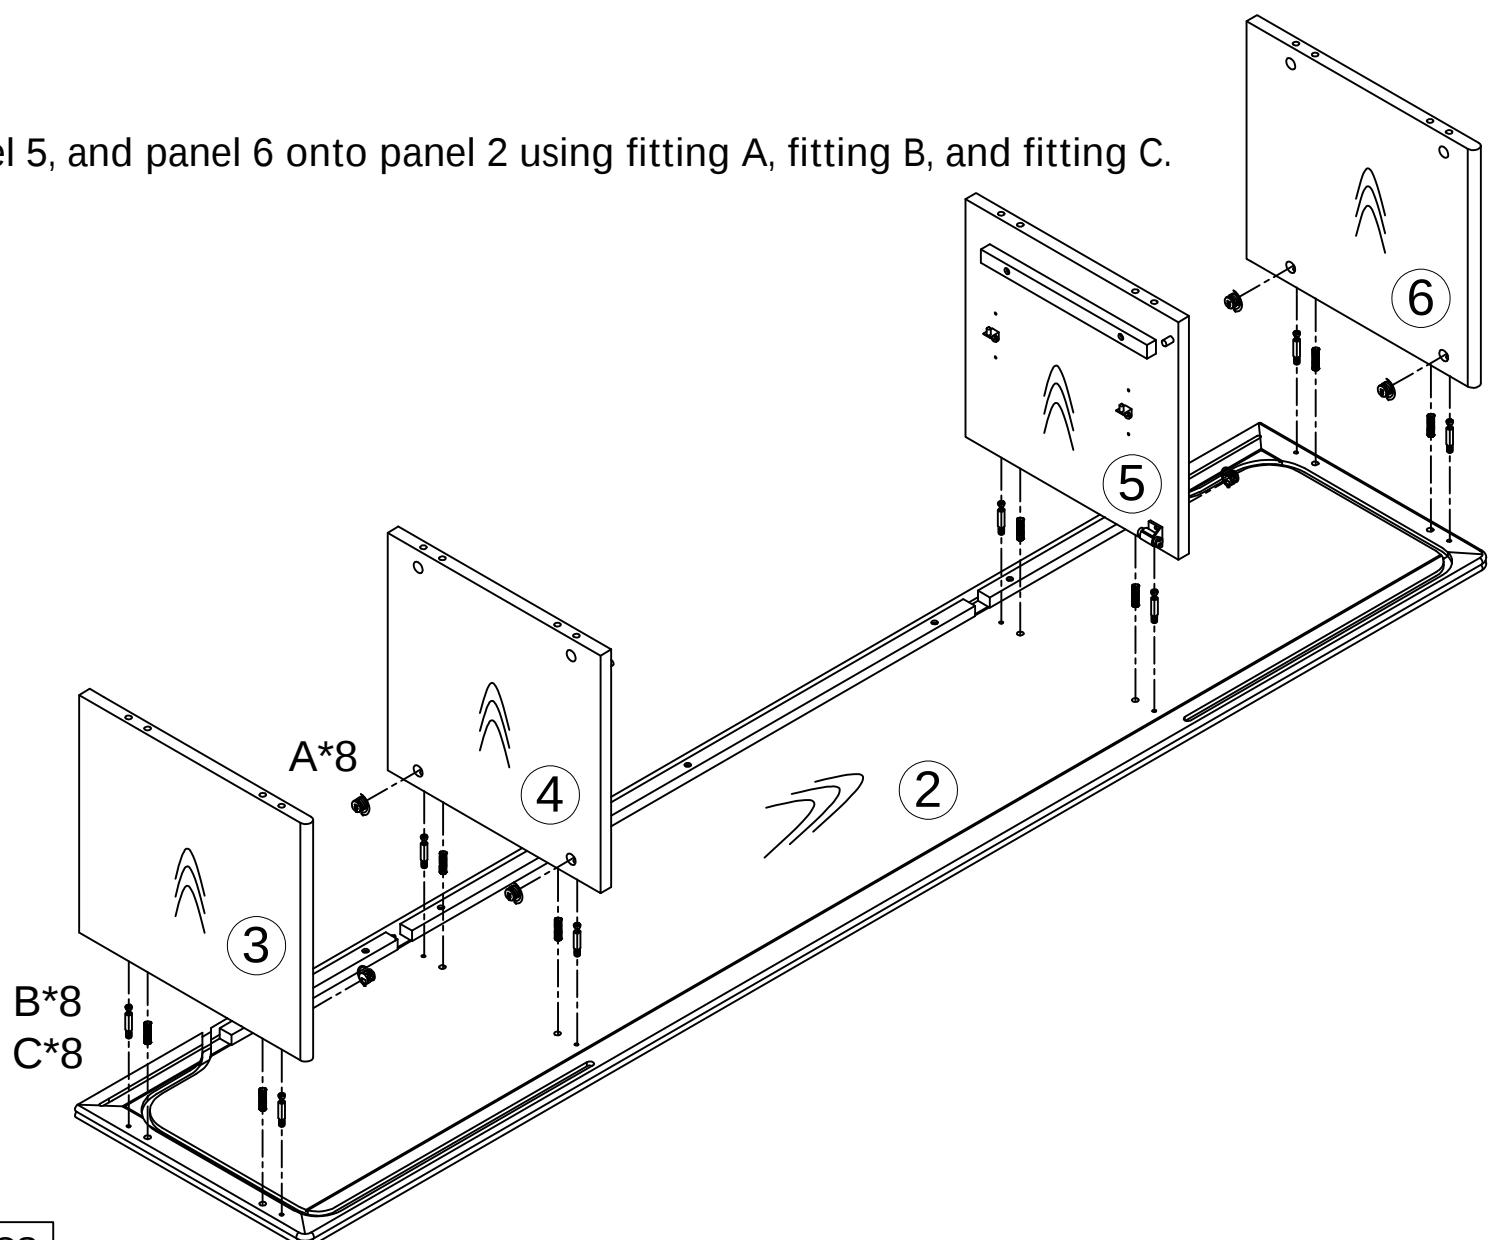

A 8 PCS	B 8 PCS	C 8 PCS
		
Ø15*10	Ø7*35	M8*30


STEP 5

Install panel 3, panel 4, panel 5, and panel 6 (from the cabinet frame assembled in the previous step) onto panel 1 using fitting A, fitting B, and fitting C.

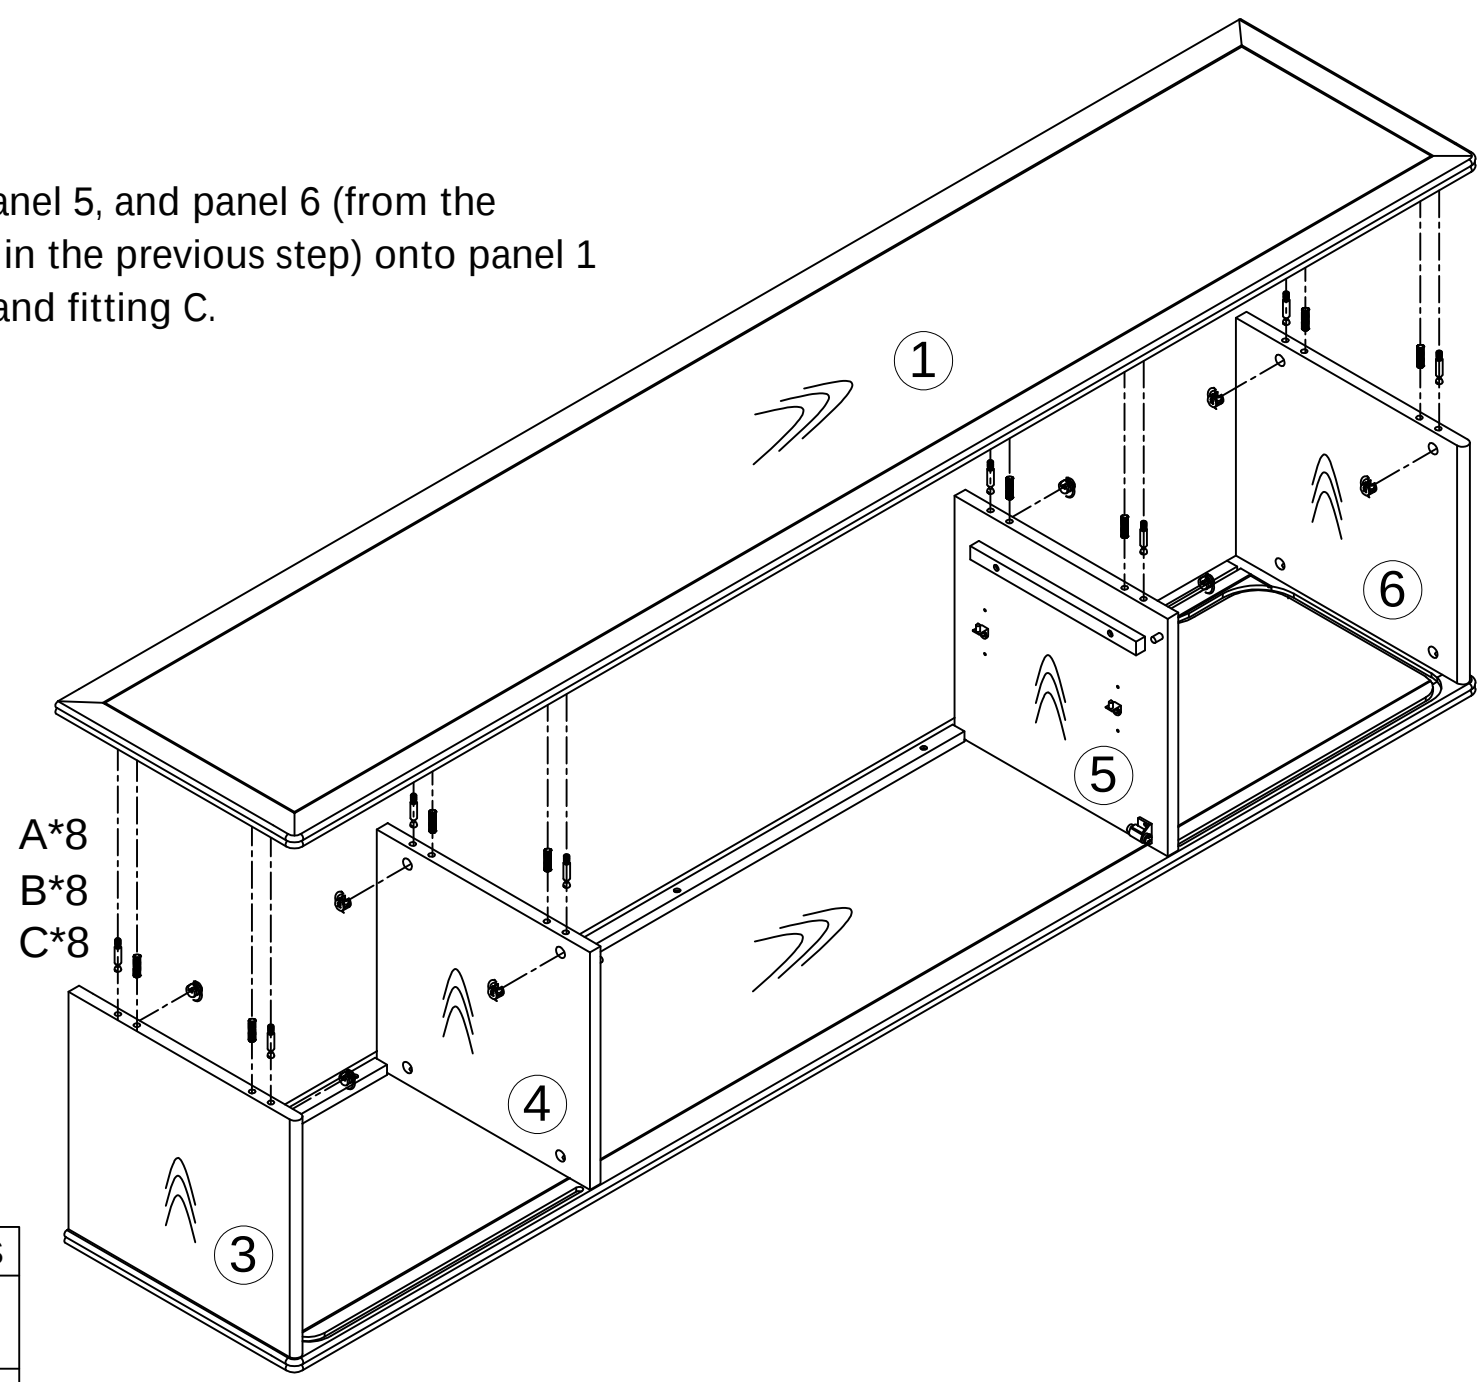


A 8 PCS	B 8 PCS	C 8 PCS
Ø15*10	Ø7*35	M8*30

STEP 6

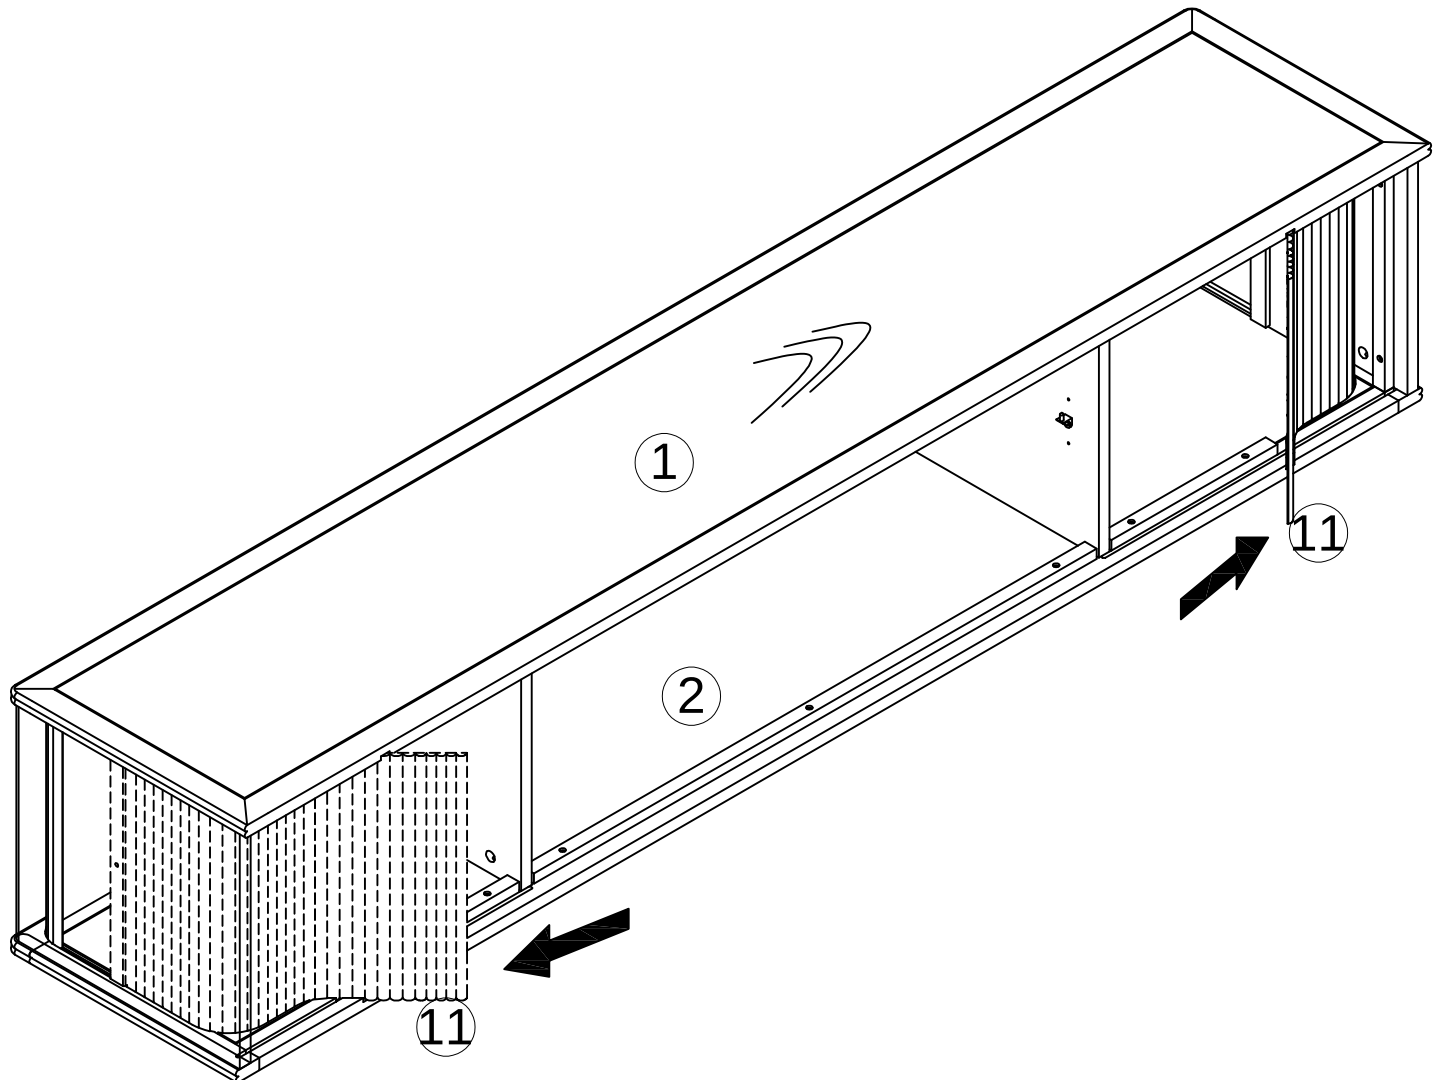

Move to the back of the cabinet, then push the No. 11 roller shutter sliding door into the corresponding track slots of panel 1 and panel 2.


STEP 7

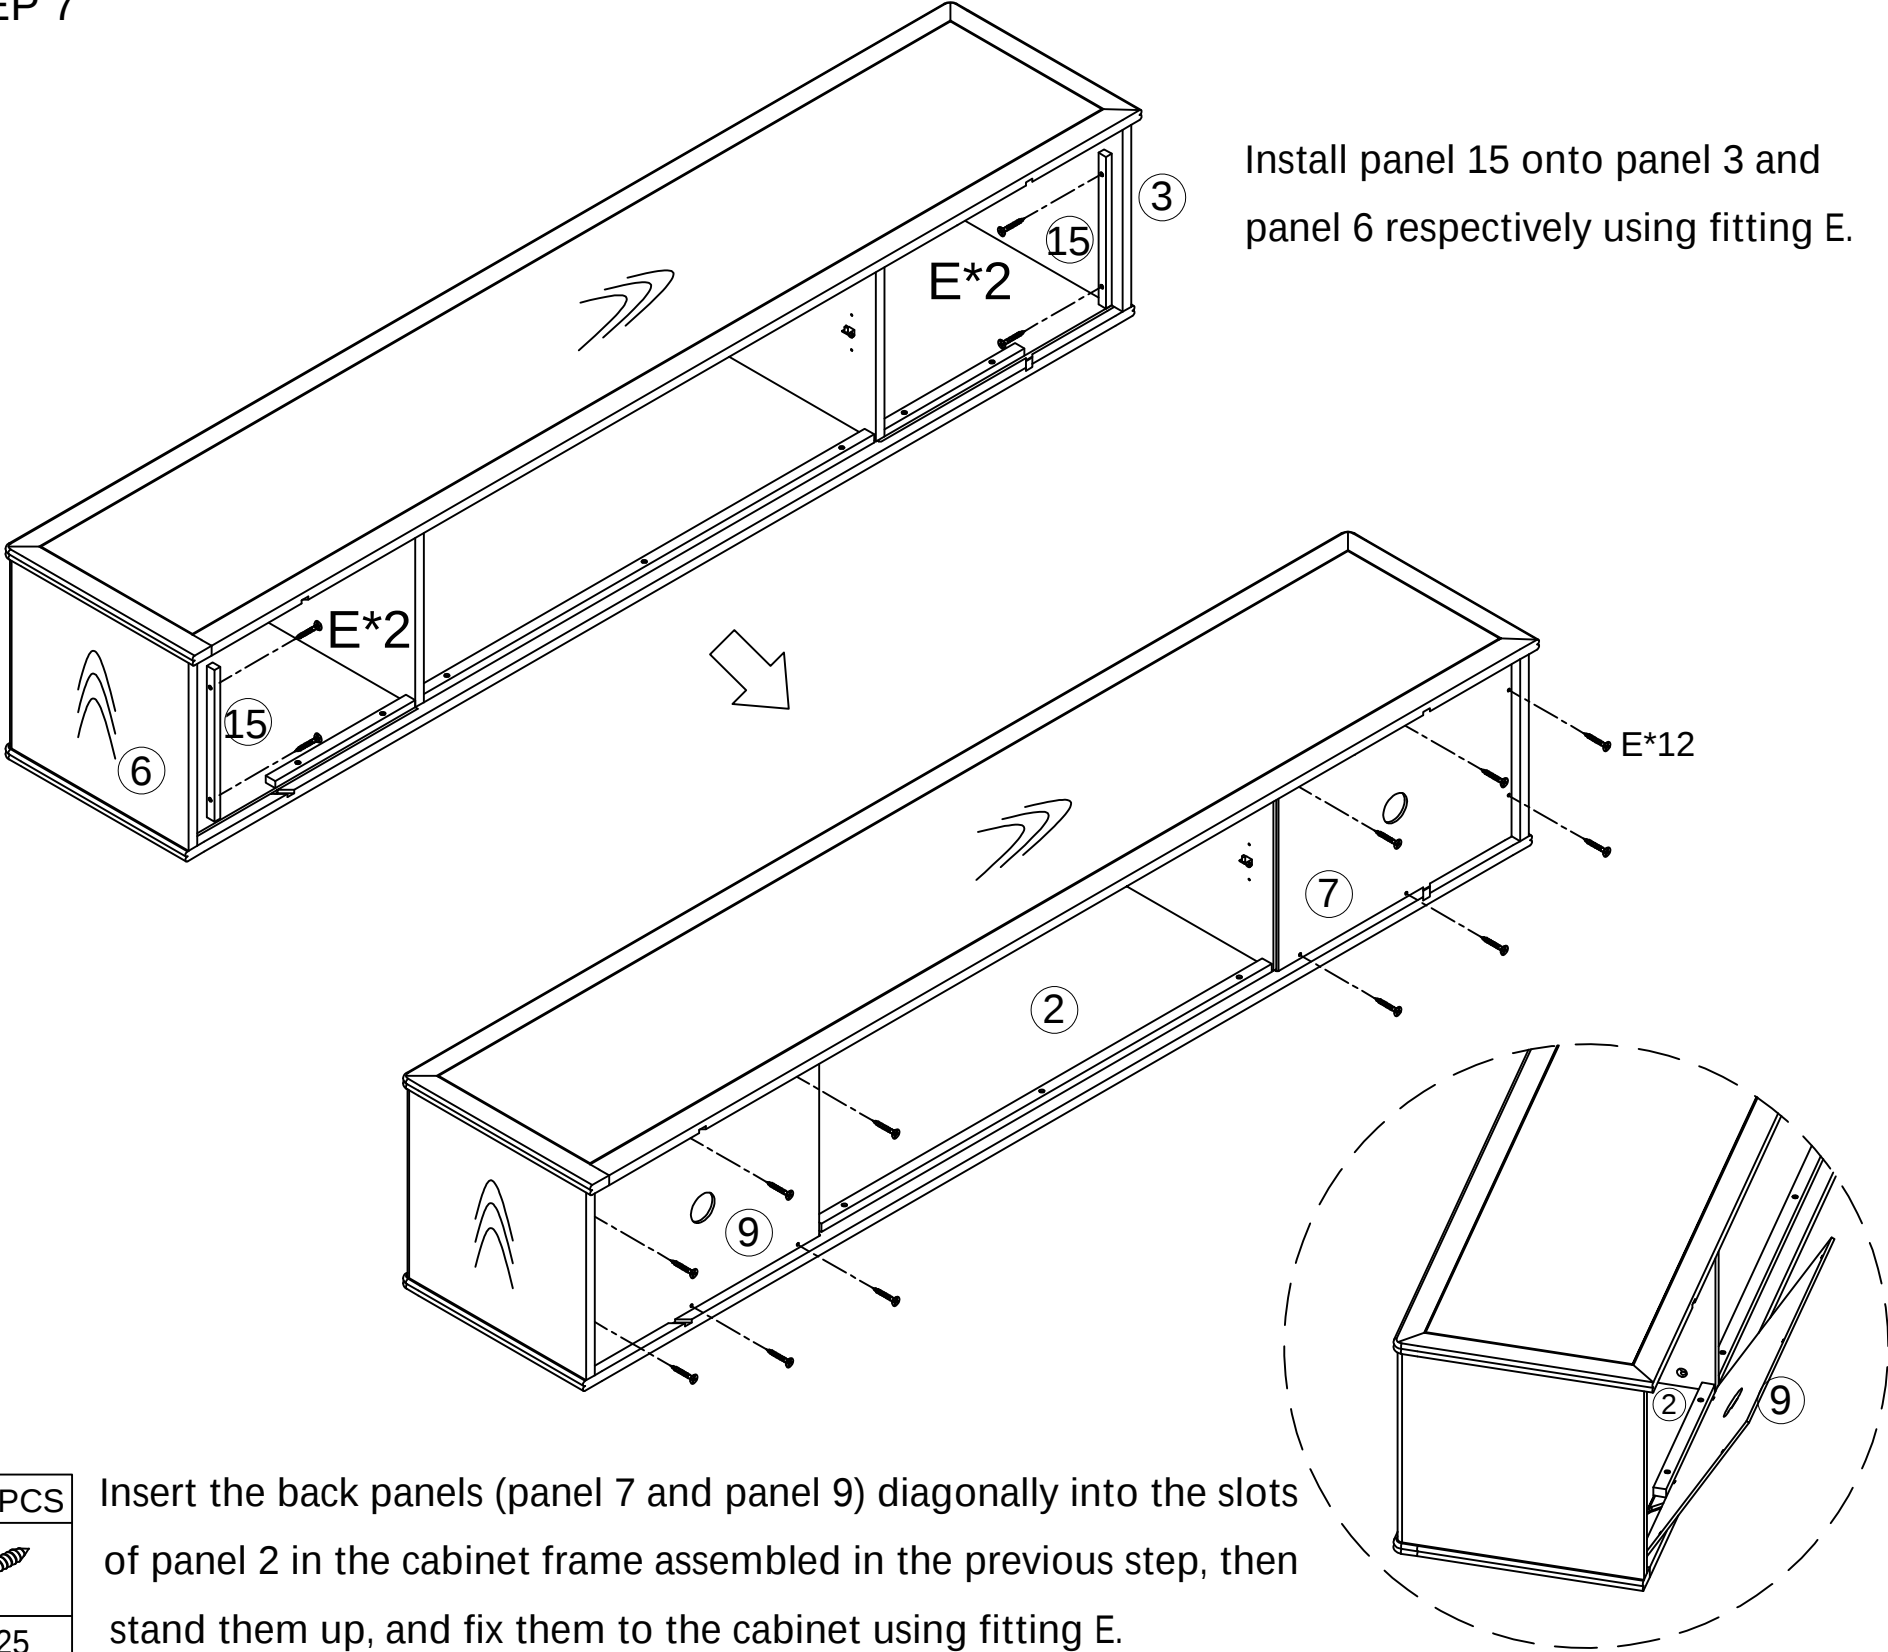

E	16 PCS
	
M4*25	


Insert the back panels (panel 7 and panel 9) diagonally into the slots of panel 2 in the cabinet frame assembled in the previous step, then stand them up, and fix them to the cabinet using fitting E.

STEP 8

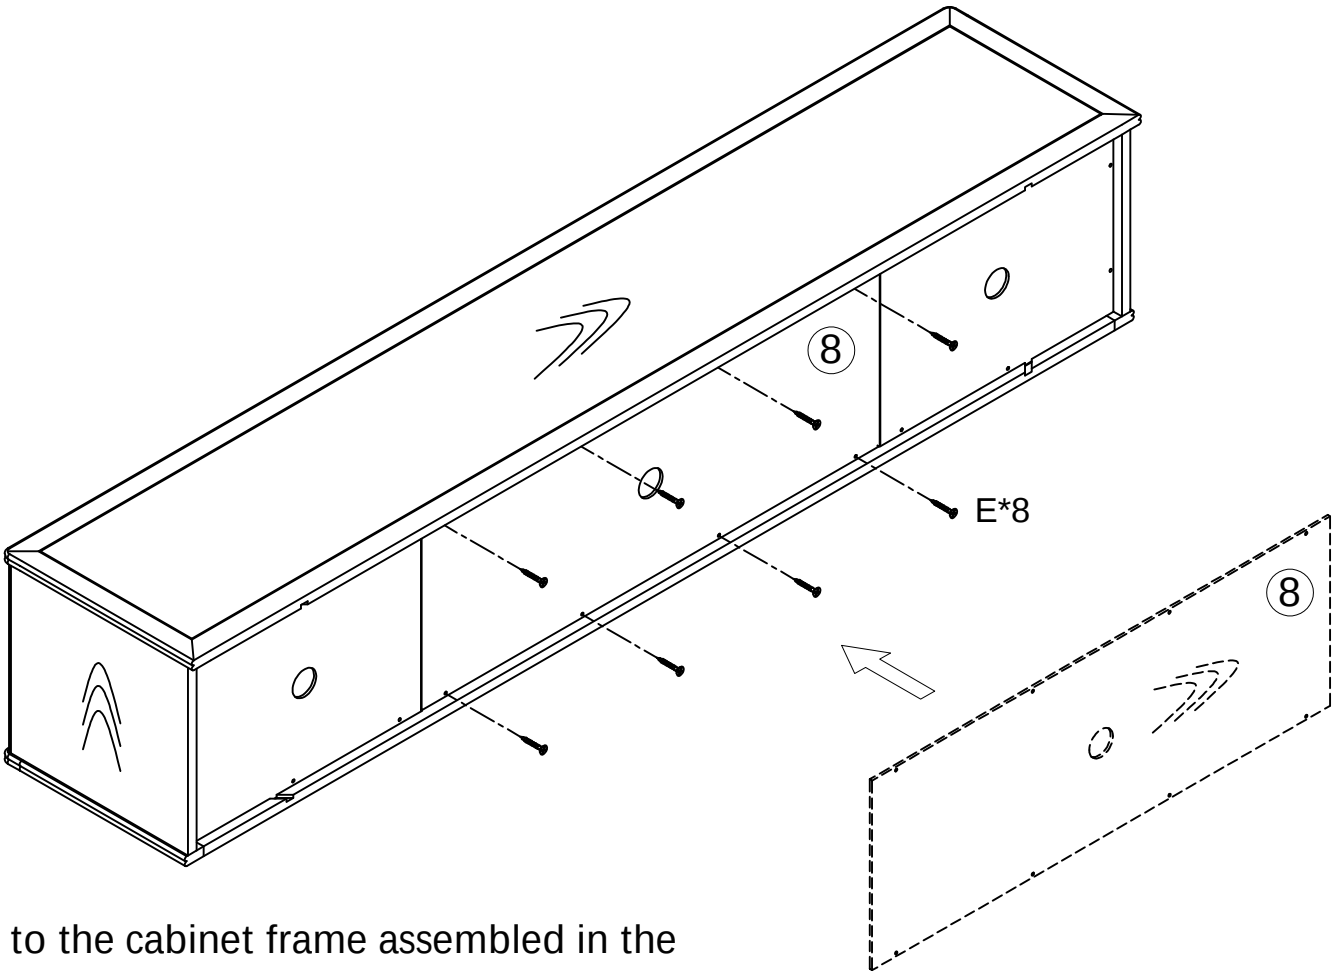

E	8 PCS
	
M4*25	


STEP 9

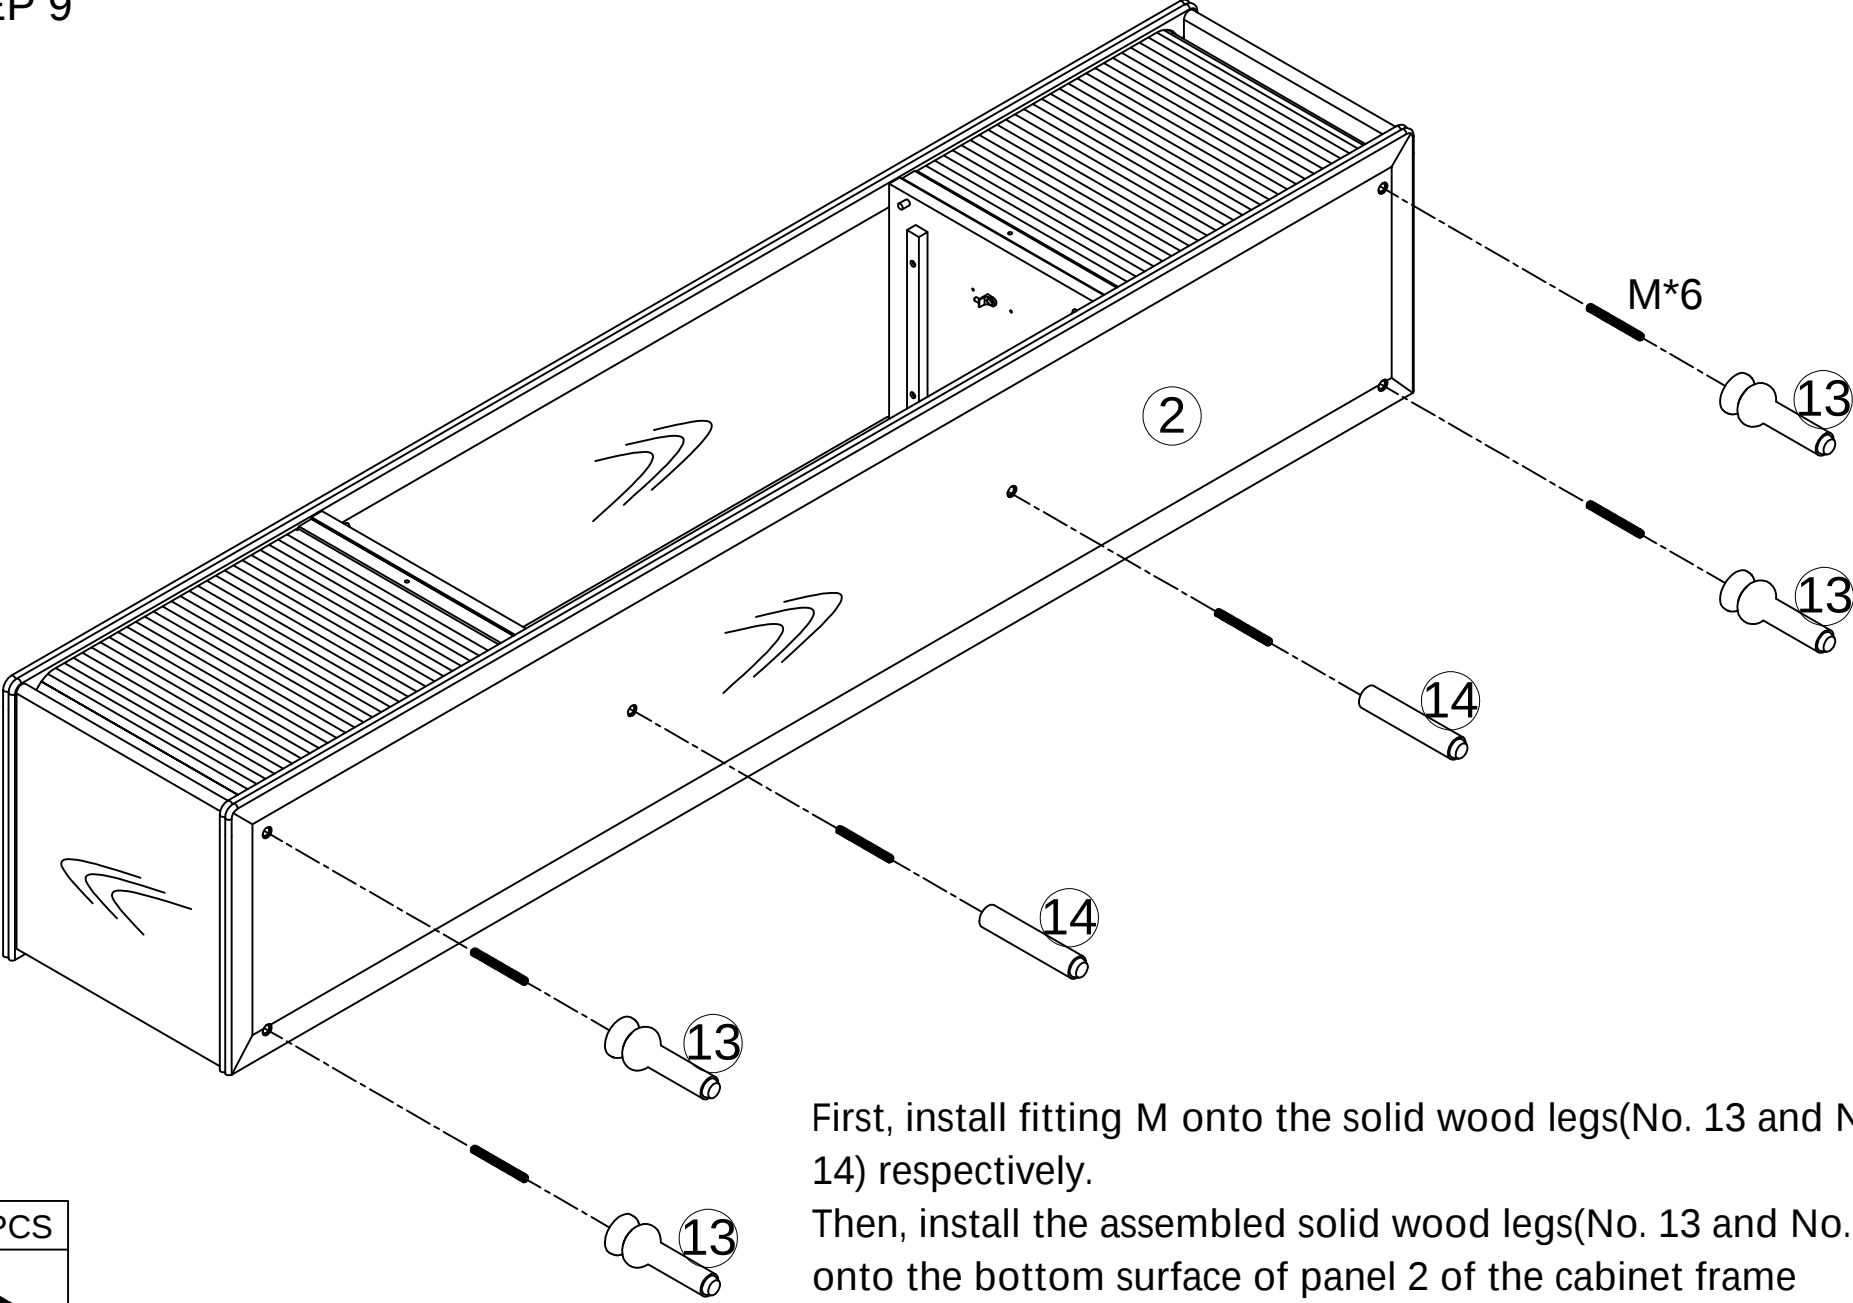

First, install fitting M onto the solid wood legs(No. 13 and No. 14) respectively.
Then, install the assembled solid wood legs(No. 13 and No. 14) onto the bottom surface of panel 2 of the cabinet frame assembled in the previous step.

M	6 PCS
	
M8*35	



STEP 10

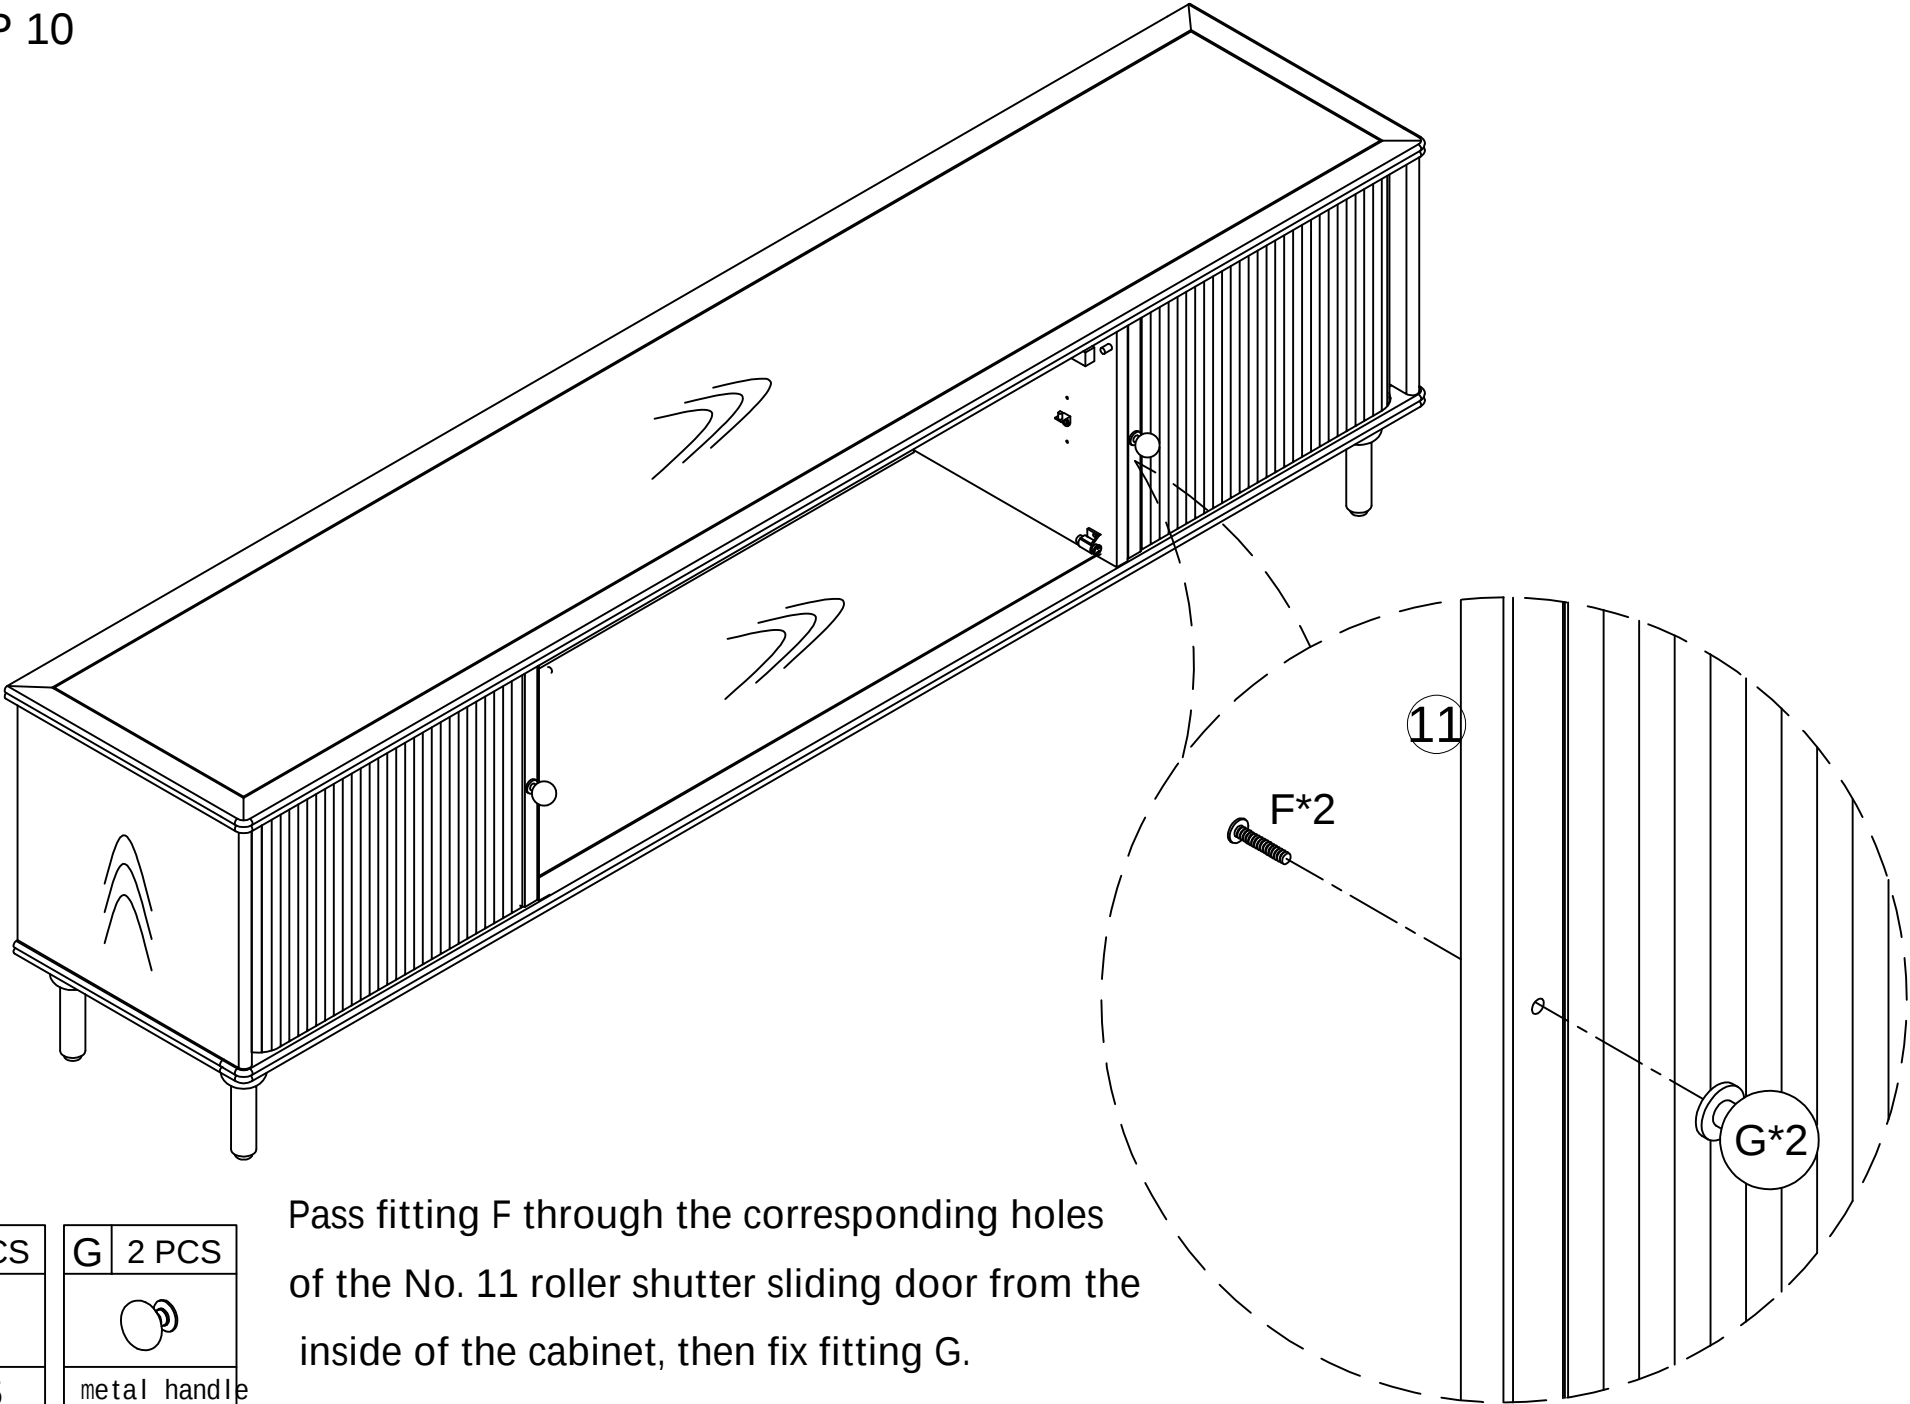

Pass fitting F through the corresponding holes of the No. 11 roller shutter sliding door from the inside of the cabinet, then fix fitting G.

F	2 PCS	G	2 PCS
			
M4*25		metal handle	


STEP 11

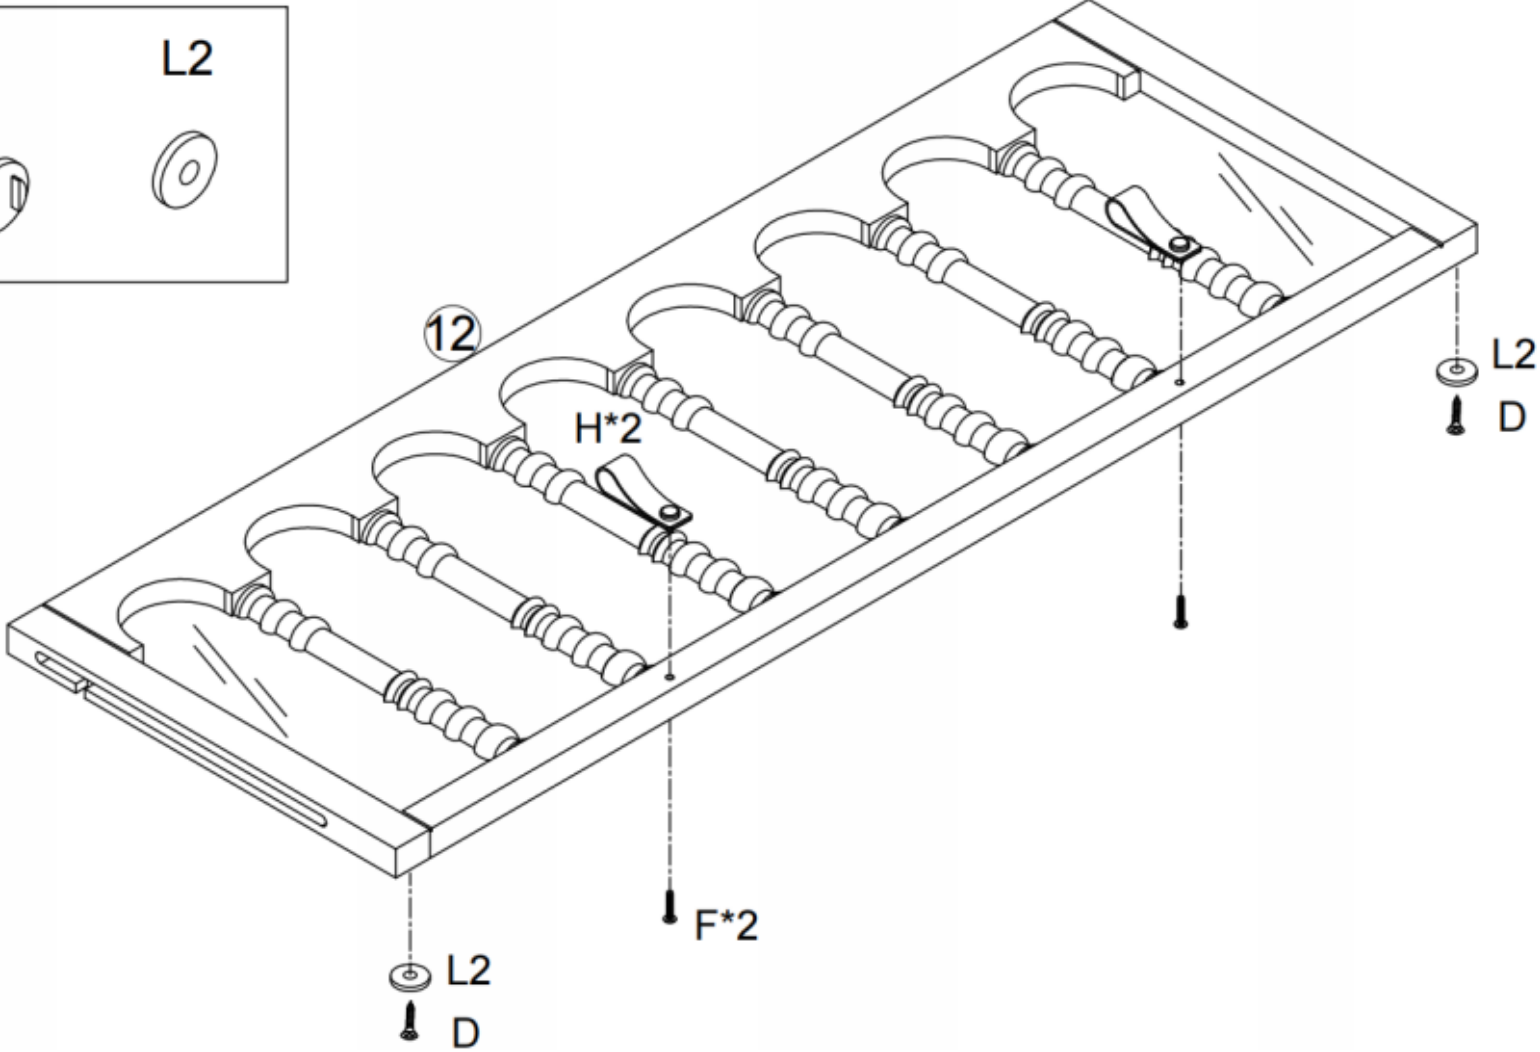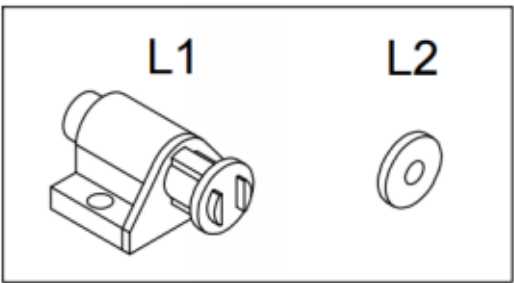

As shown , pass fitting F through the corresponding holes of the No. 12 flip-up door, then fix fitting H.


F 2 PCS	H 2 PCS	L 2 PCS	D 2 PCS
			
M4*25	leather hand	Magnet	M3.5*14

STEP 12

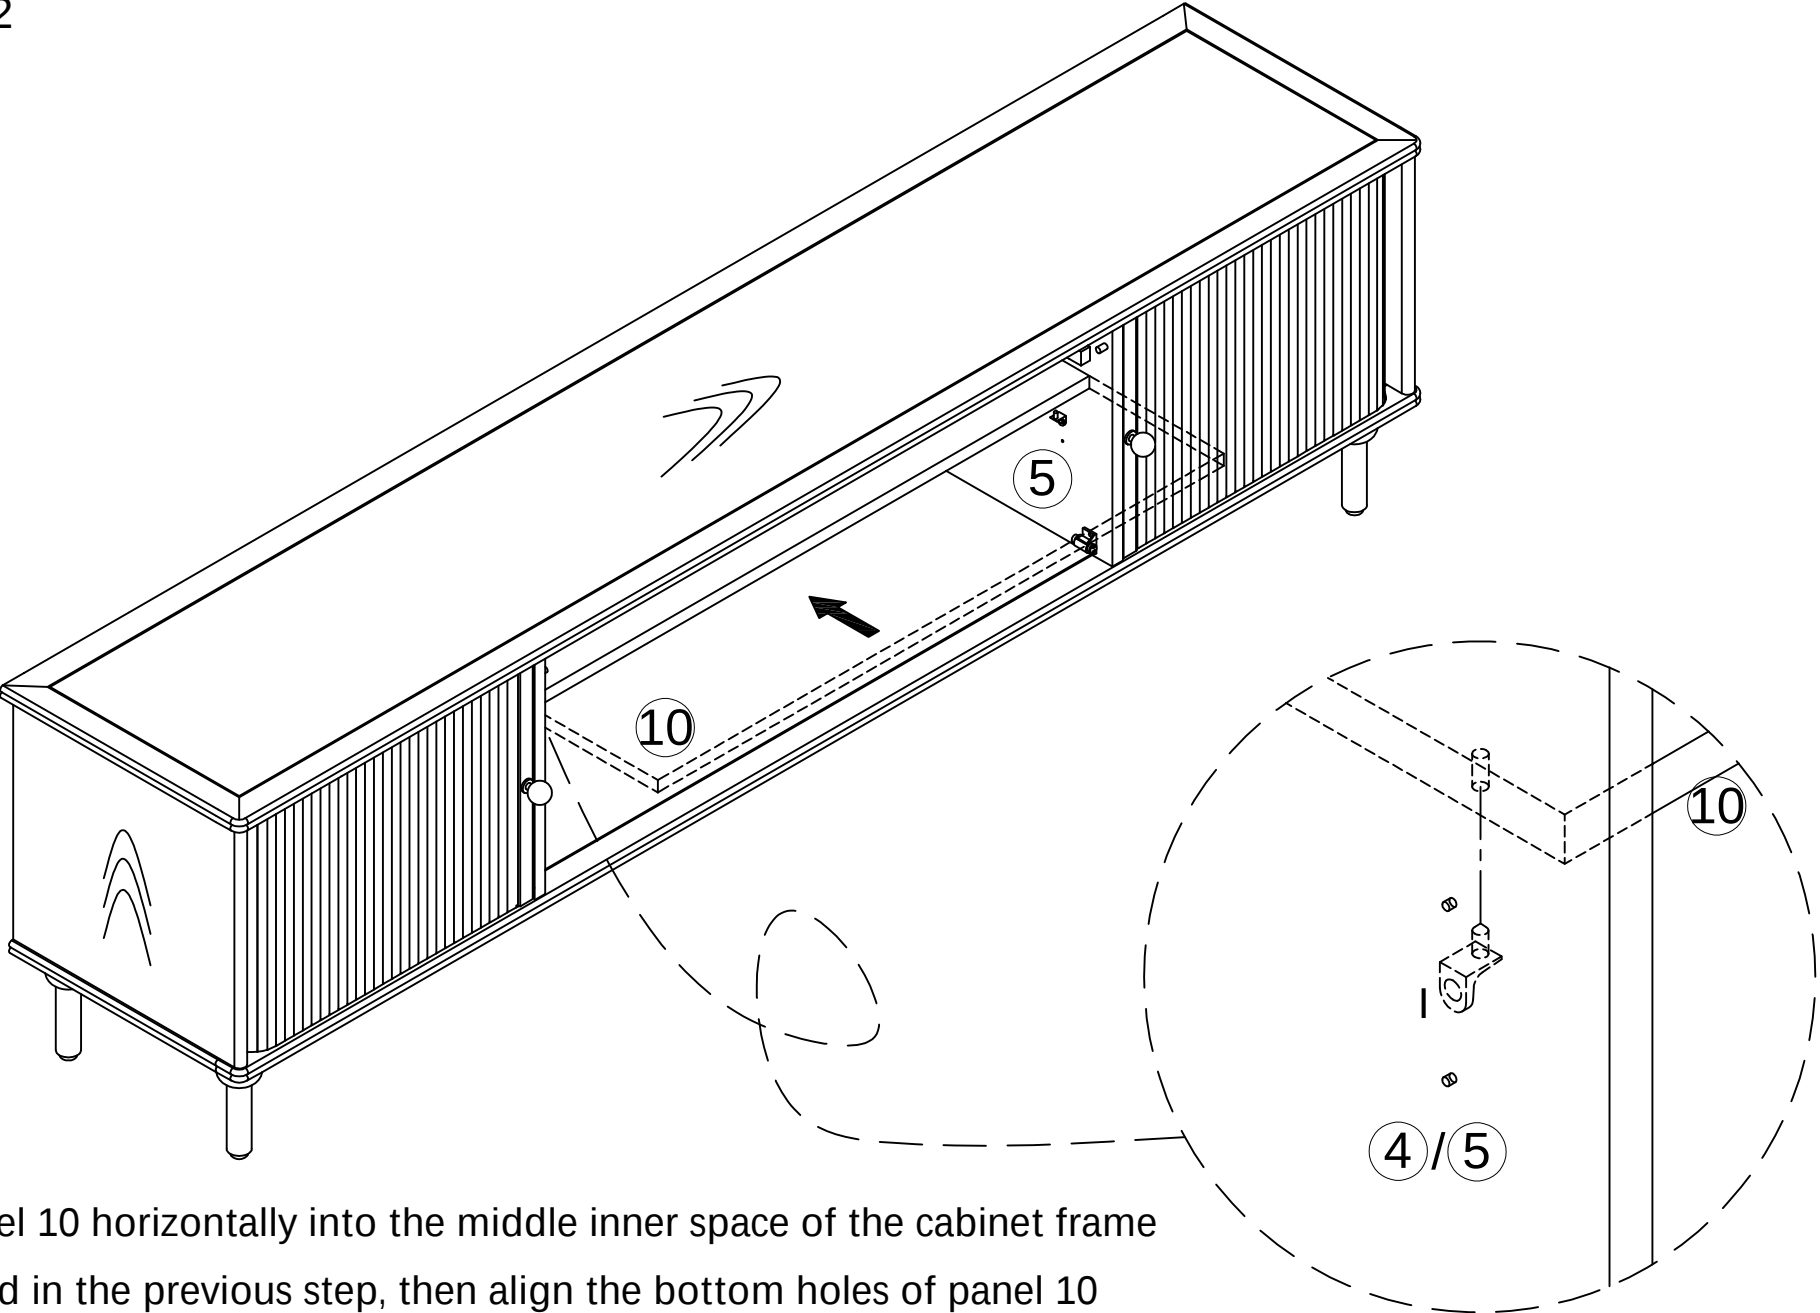


Slide panel 10 horizontally into the middle inner space of the cabinet frame assembled in the previous step, then align the bottom holes of panel 10 with fitting I on panel 4 and panel 5, and place it down.

STEP 13

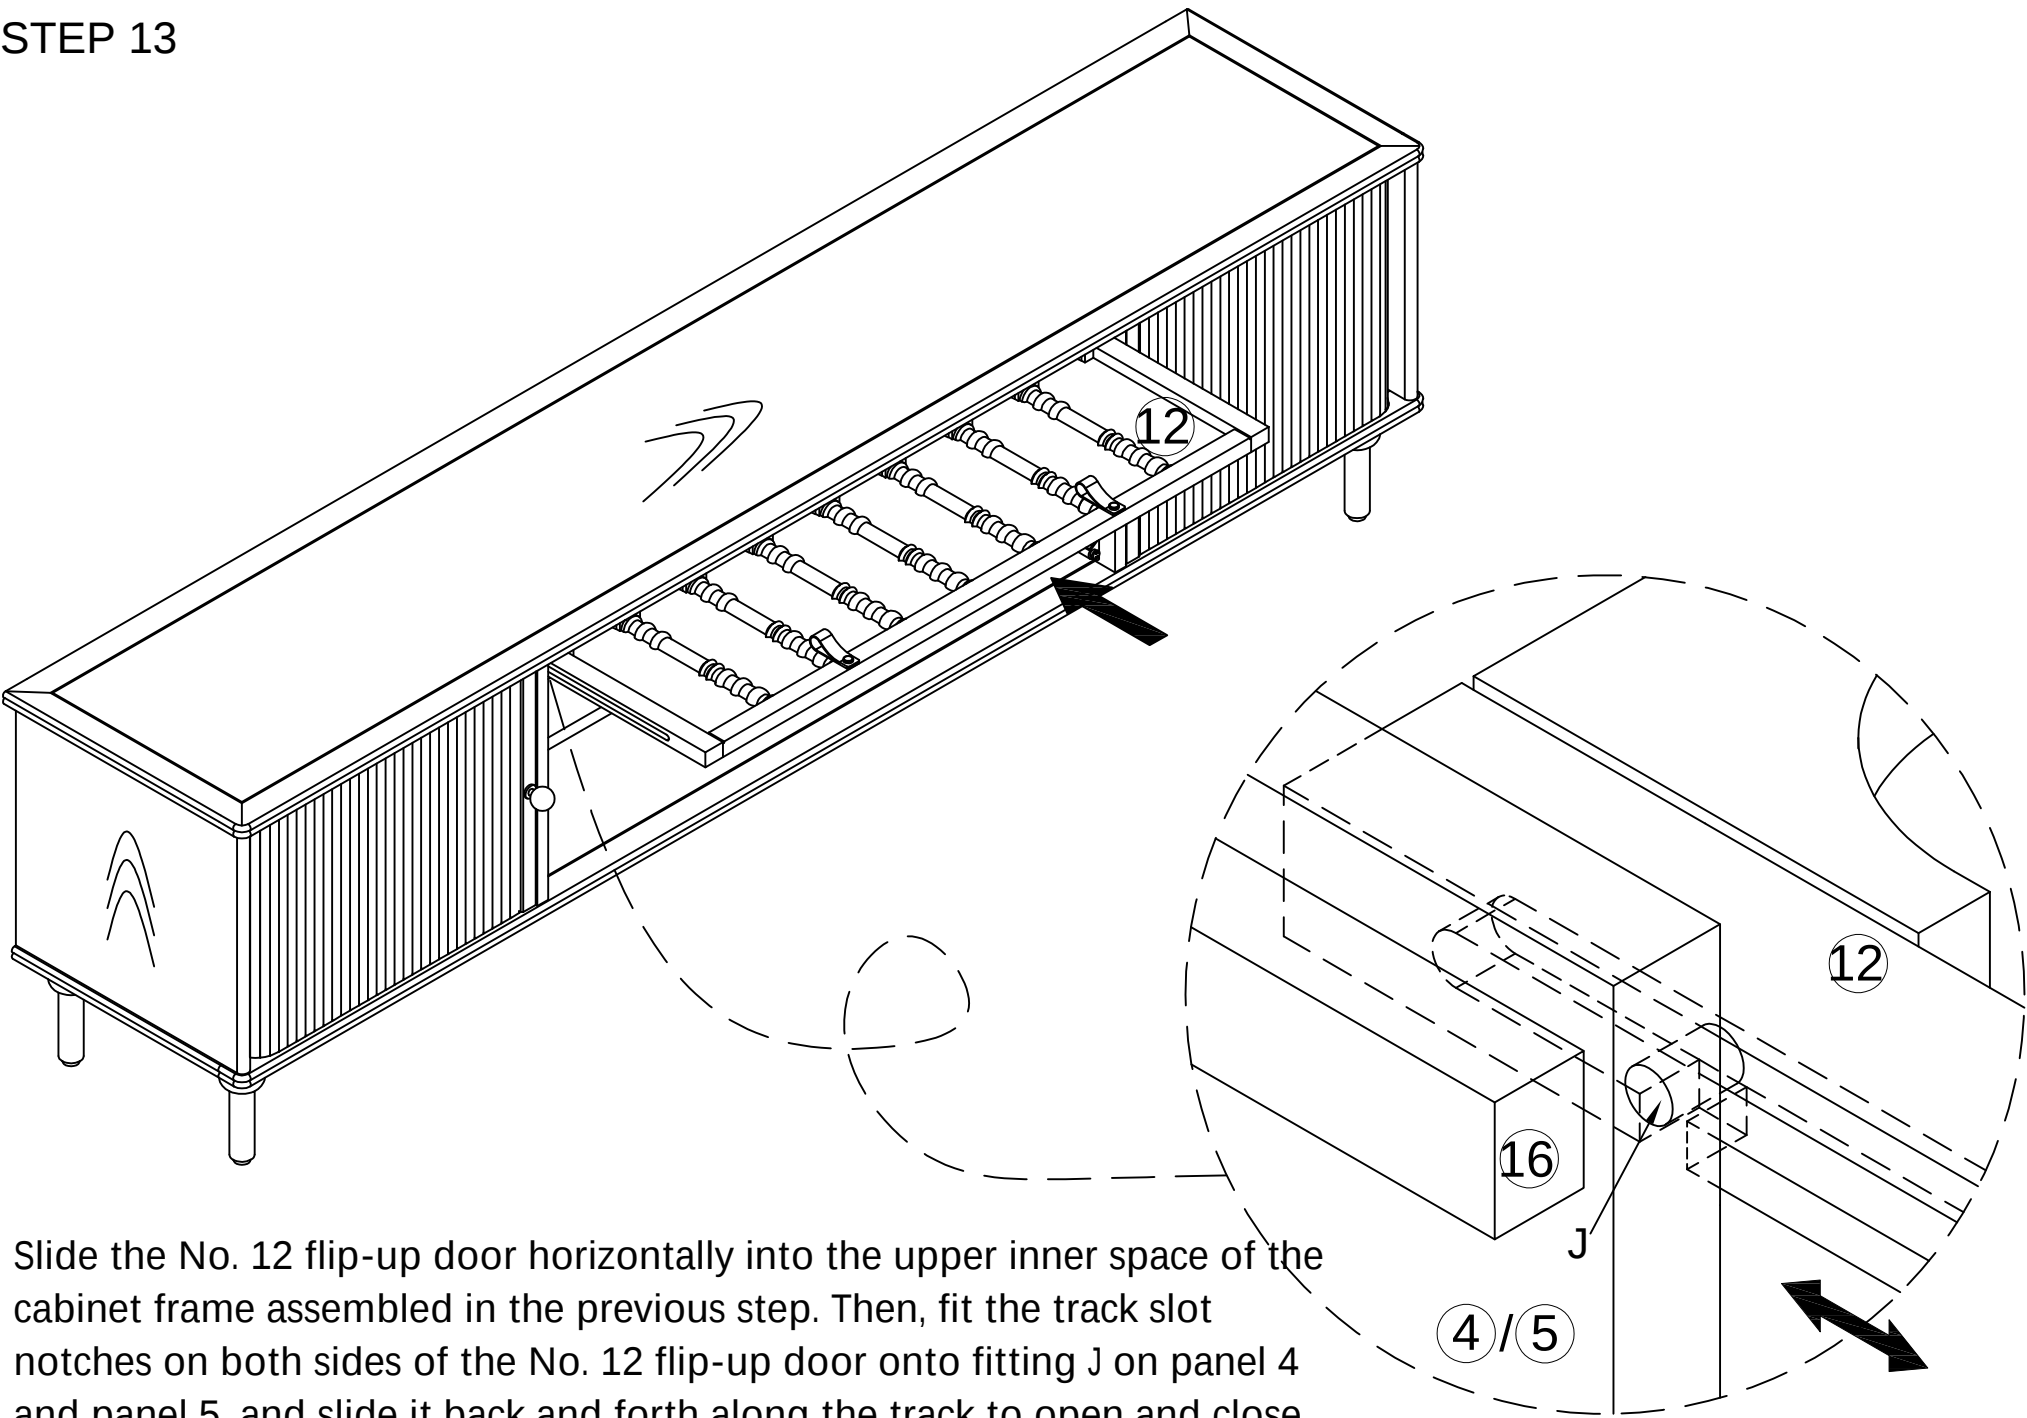

Slide the No. 12 flip-up door horizontally into the upper inner space of the cabinet frame assembled in the previous step. Then, fit the track slot notches on both sides of the No. 12 flip-up door onto fitting J on panel 4 and panel 5, and slide it back and forth along the track to open and close.

STEP 14

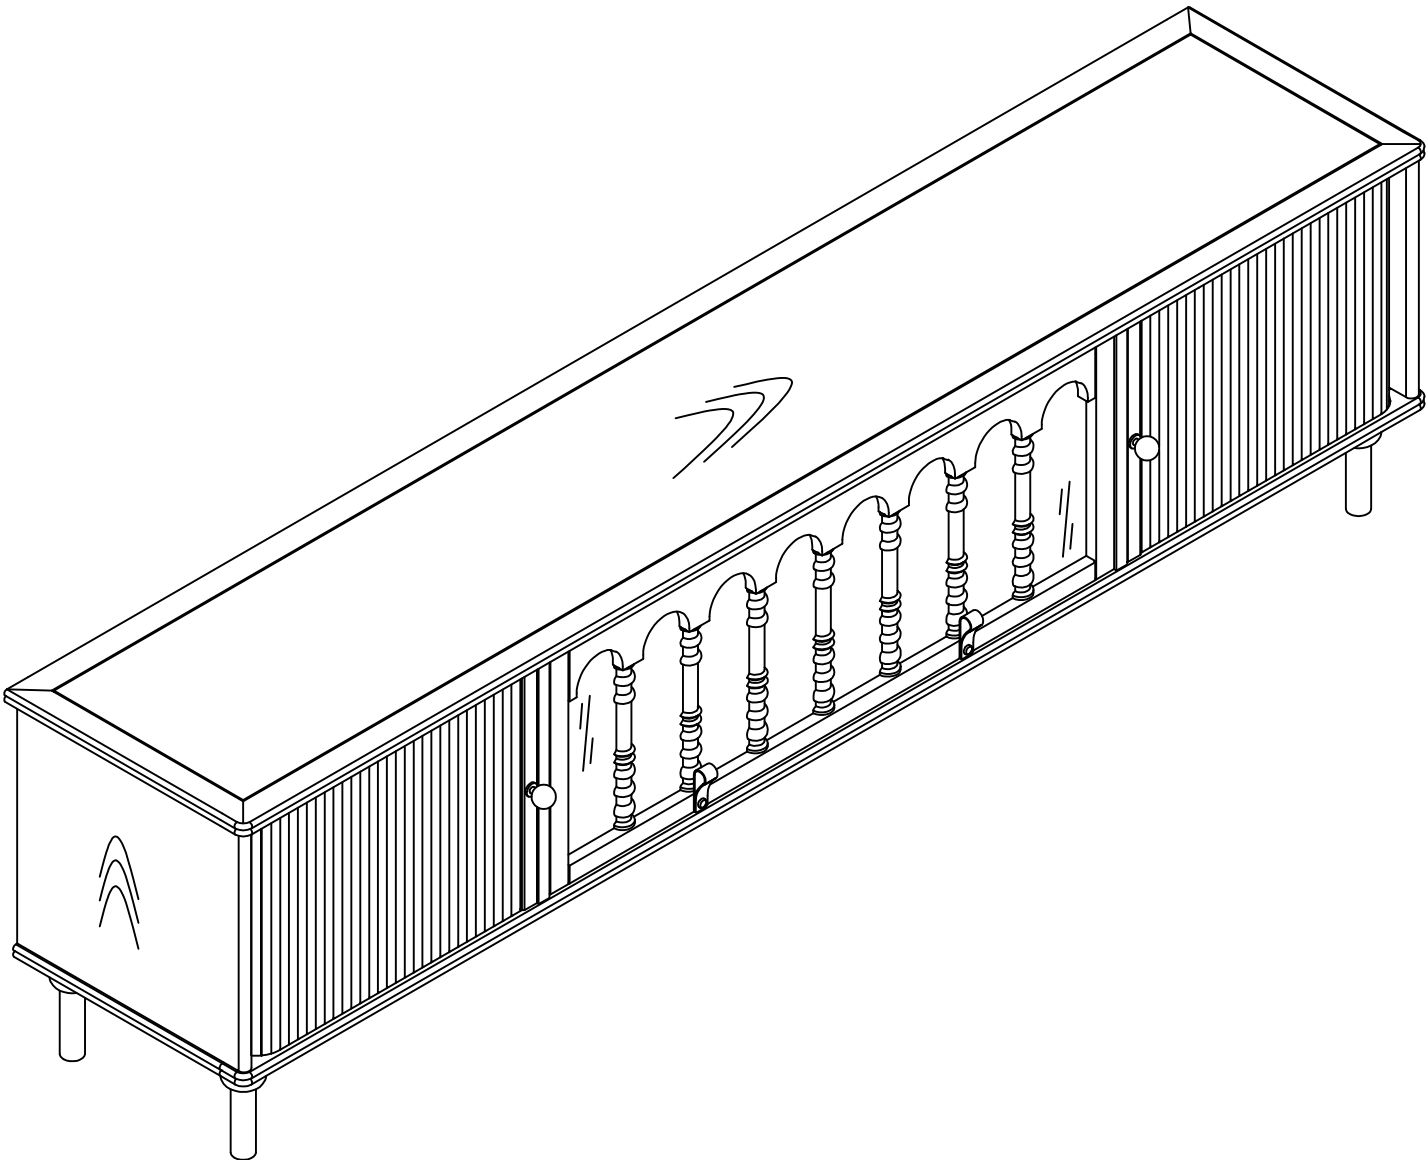

OK