

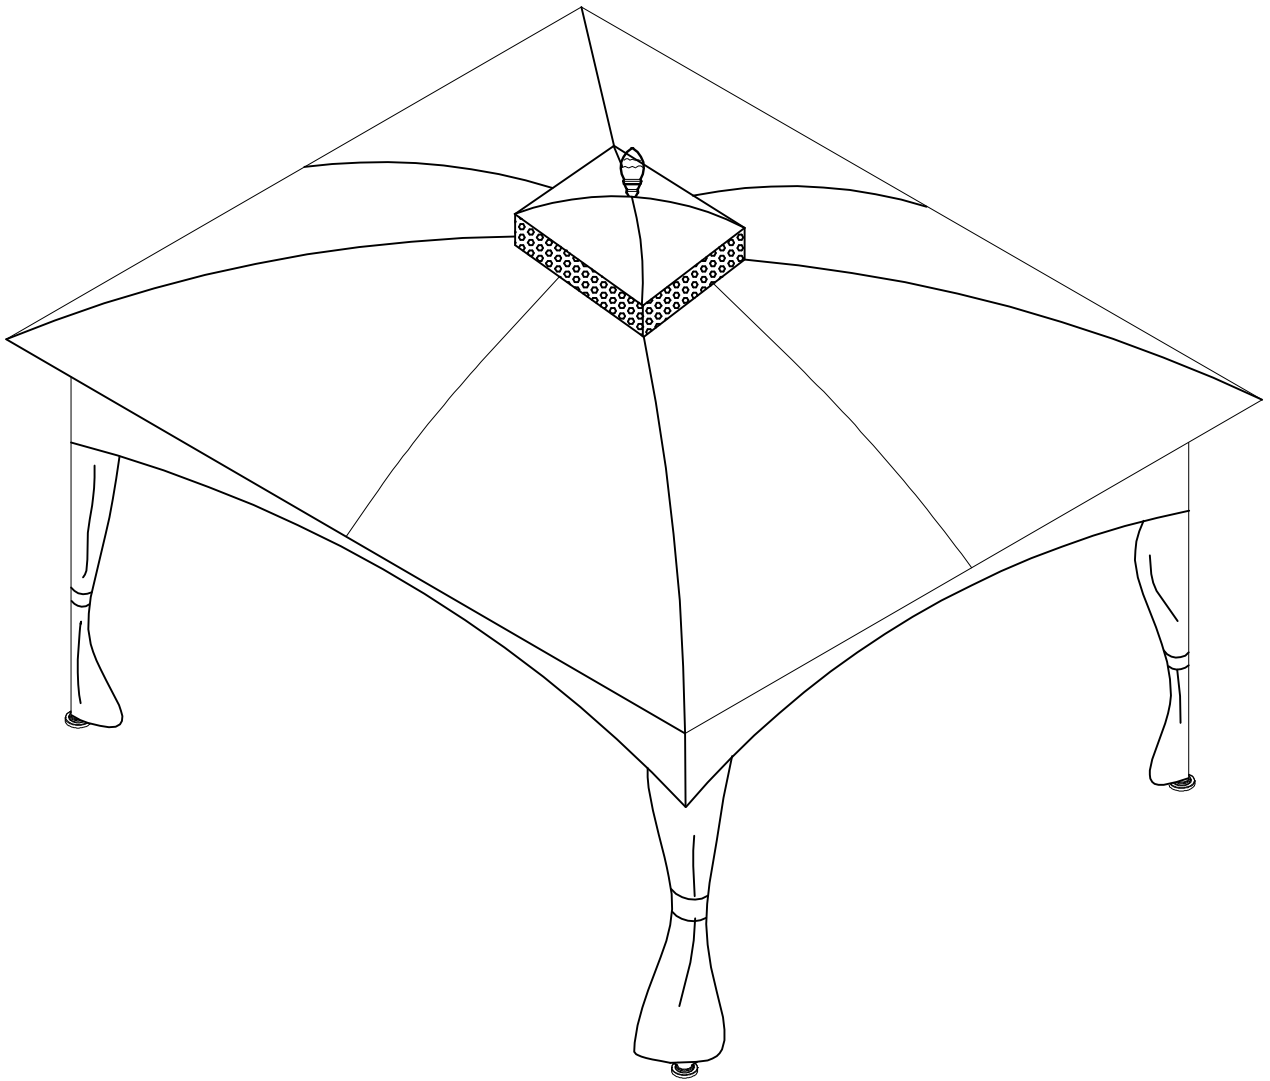







11x13ft Dome Top Patio Gazebo


Parts Name	Item No.	Parts Images	Qty.	Parts Name	Item No.	Parts Images	Qty.
Leg Post	A1		4	Long Extension Tube	K5		4
Short Side Beam C1	C1		2	Short Extension Tube	K6		4
Short Side Beam C2	C2		2	Big Canopy Cover	O1		1
Long Side Beam D1	D1		2	Small Canopy Cover	O2		1
Long Side Beam D2	D2		2	Privacy Curtains	P2		4
Upper Short Middle Bar	H1		2	Bolts DD	DD		32+2
Lower Short Middle Bar	H2		2	Stake	II		8
Long Middle Upper Bar	I1		2	Curtains Ring	LL		44+2
Upper Slant Bar	G1		4	Top Decoration	M1		1
Lower Slant Bar	G2		4	Top Decoration Tube	M2		1
Top Connector	J		1	Top Hook	N		1
Long Curtains Rod	E1		4	Wrench	JJ		1
Short Curtains Rod	E2		4	Sandbags			4




Hammer
Not Included

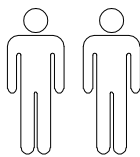

2 Person

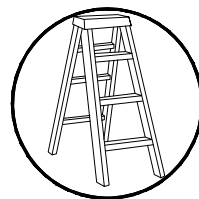


1

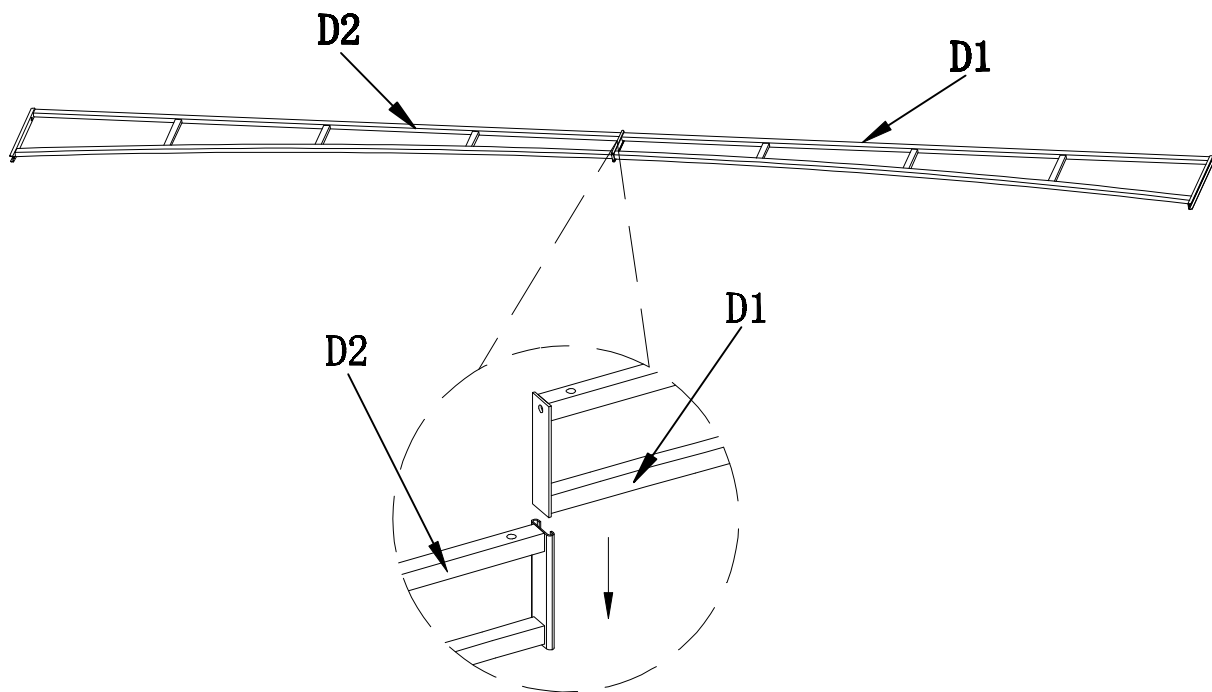

Connect two Long Side Beams (D1) to Long Side Beams (D2).


2

Connect Leg Post (A1) to assembled Long Side Beam (D1) by Bolt DD.

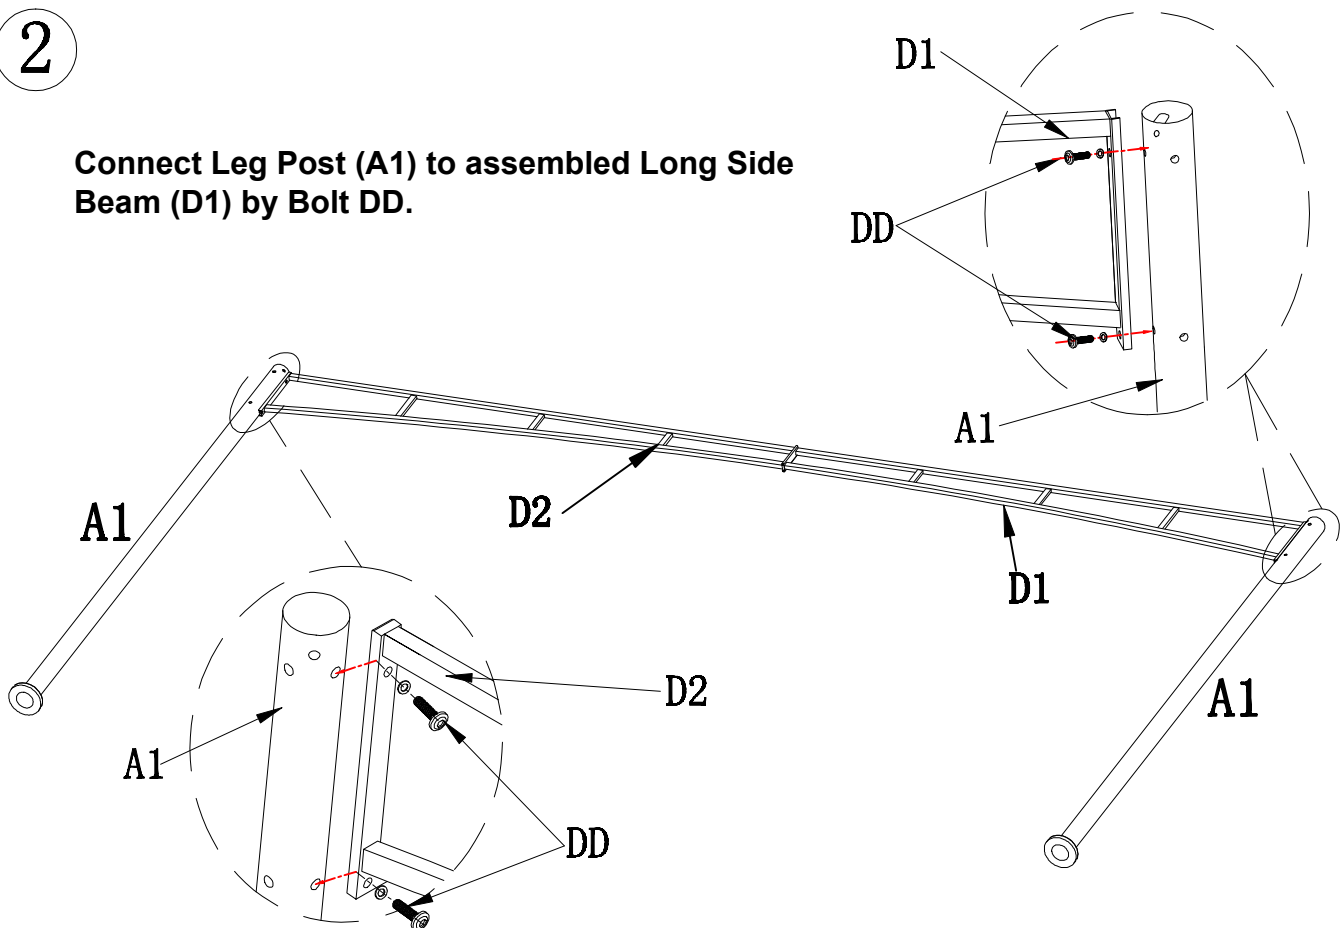


3

Connect Short Side Beams (C1/C2) to assembled Leg Post (A1) by Bolt DD.

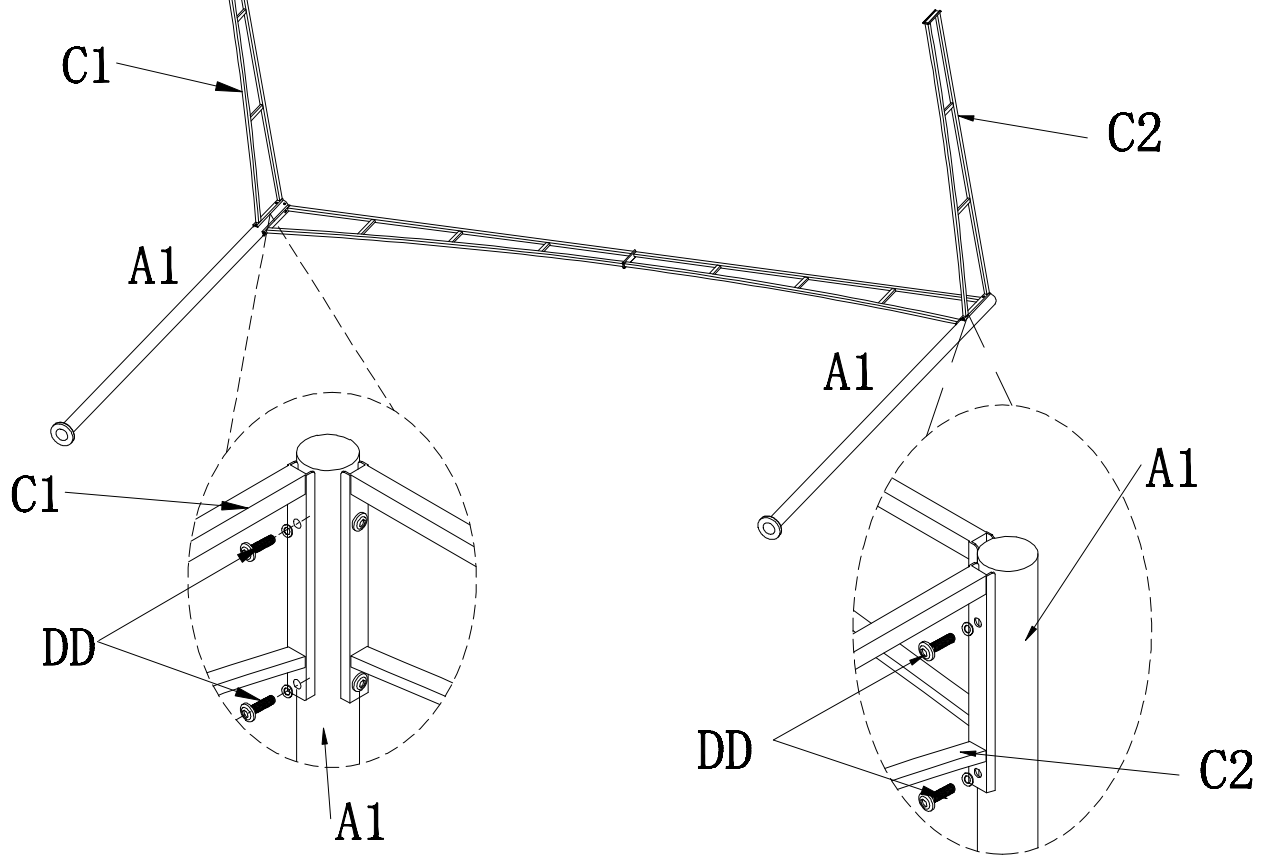


4

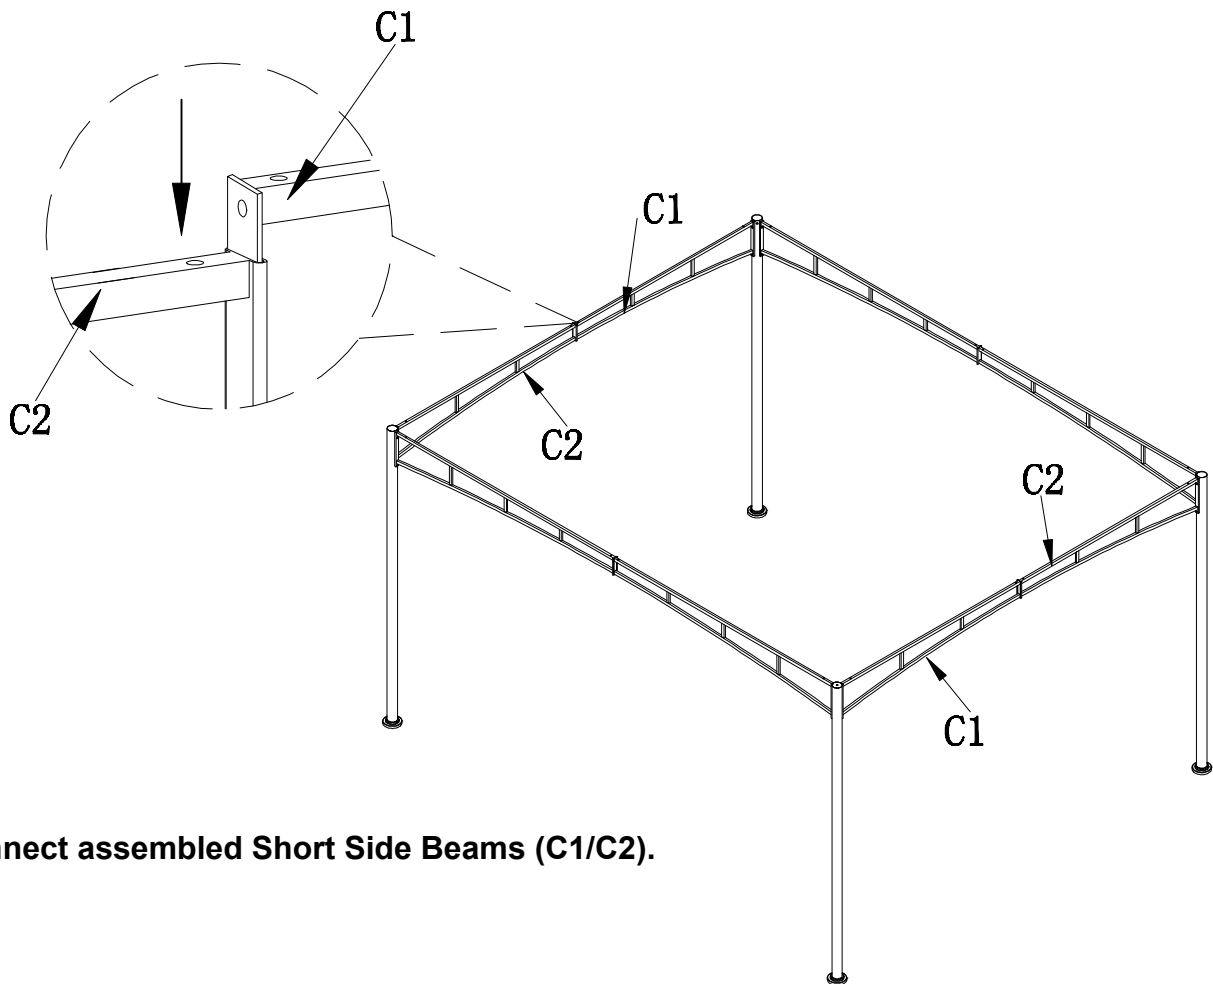

Connect assembled Short Side Beams (C1/C2).

5

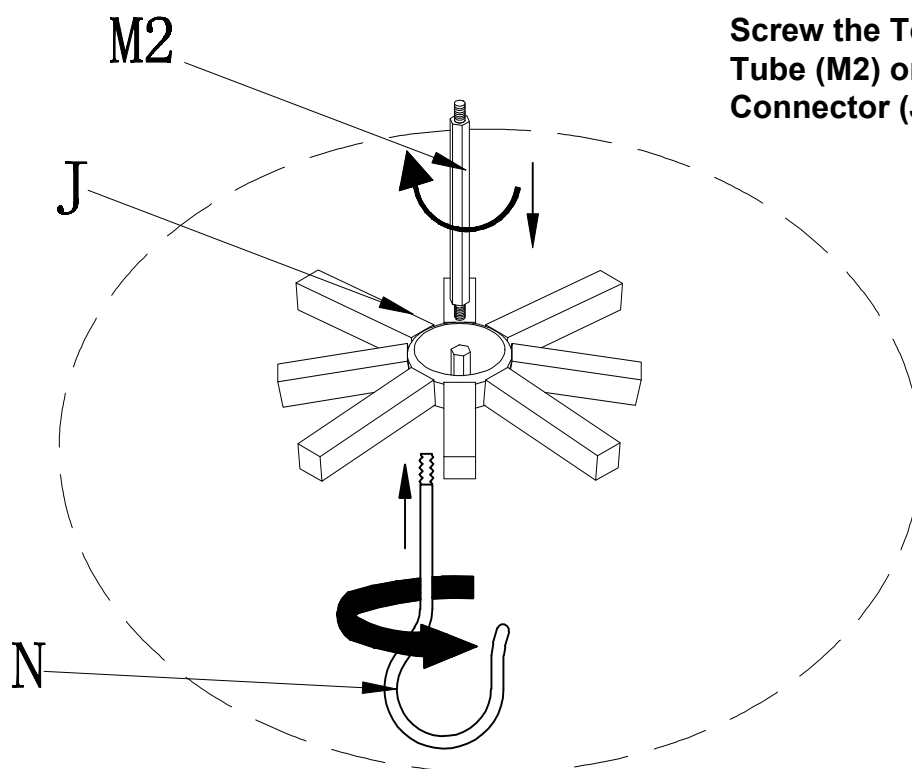


Screw the Top Decoration Tube (M2) on the Top Connector (J).

Attach the Hook (N) to the Top Connector (J).

6

Insert the Upper Short Middle Bar (H1) to Lower Short Middle Bar (H2).

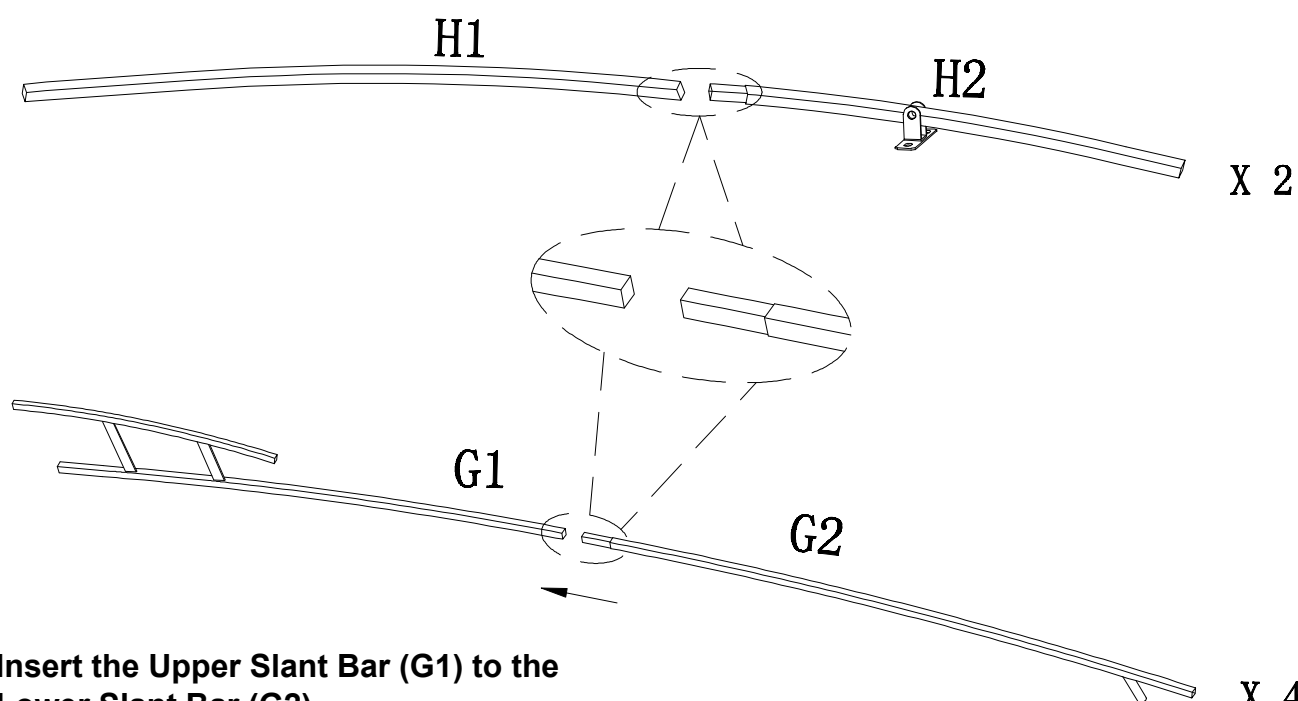


Insert the Upper Slant Bar (G1) to the Lower Slant Bar (G2).

X 2

X 4


7

Insert the Upper Short Middle Bar (H1) to the Top Connector (J).

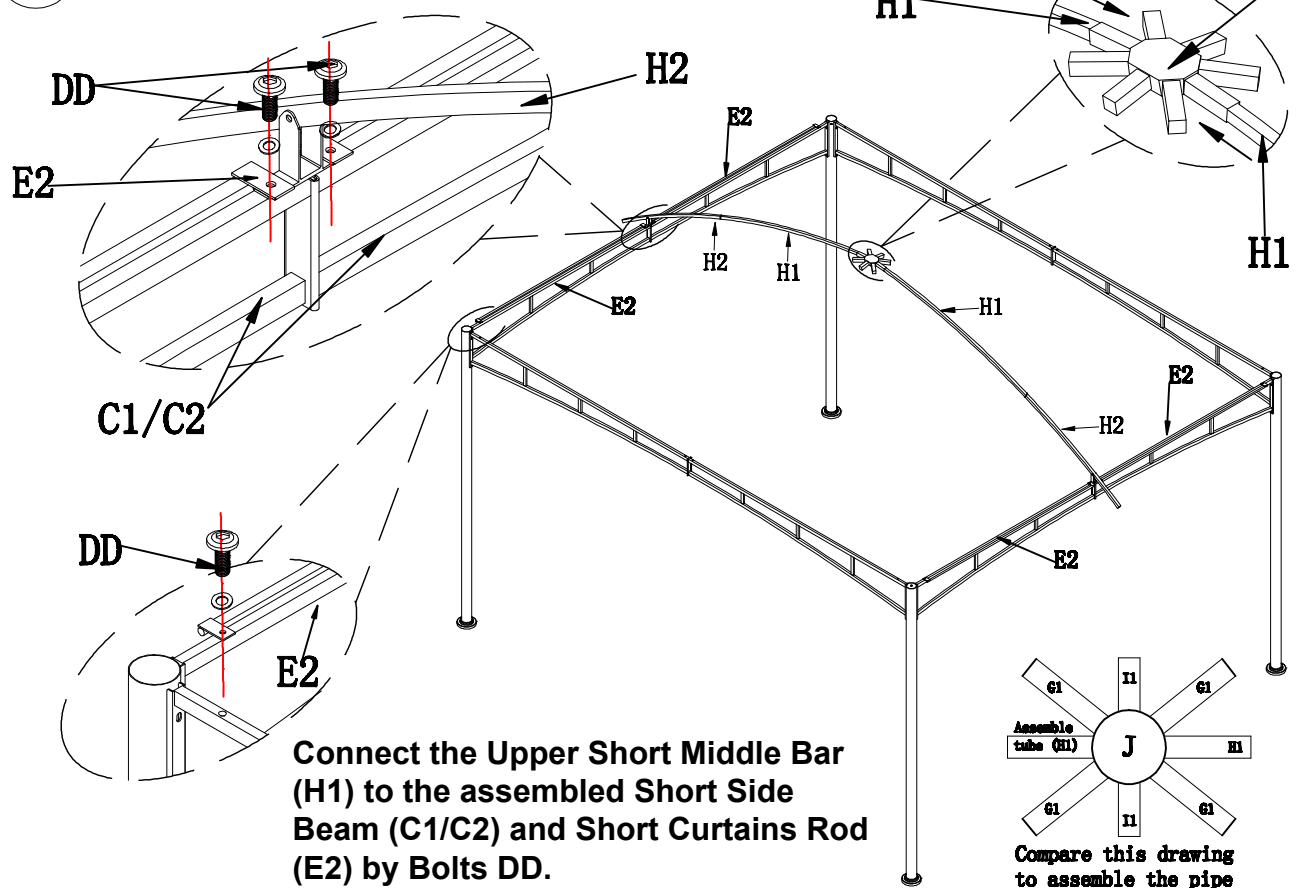


8


Insert the Long Middle Upper Bar (I1) to the Top Connector (J).

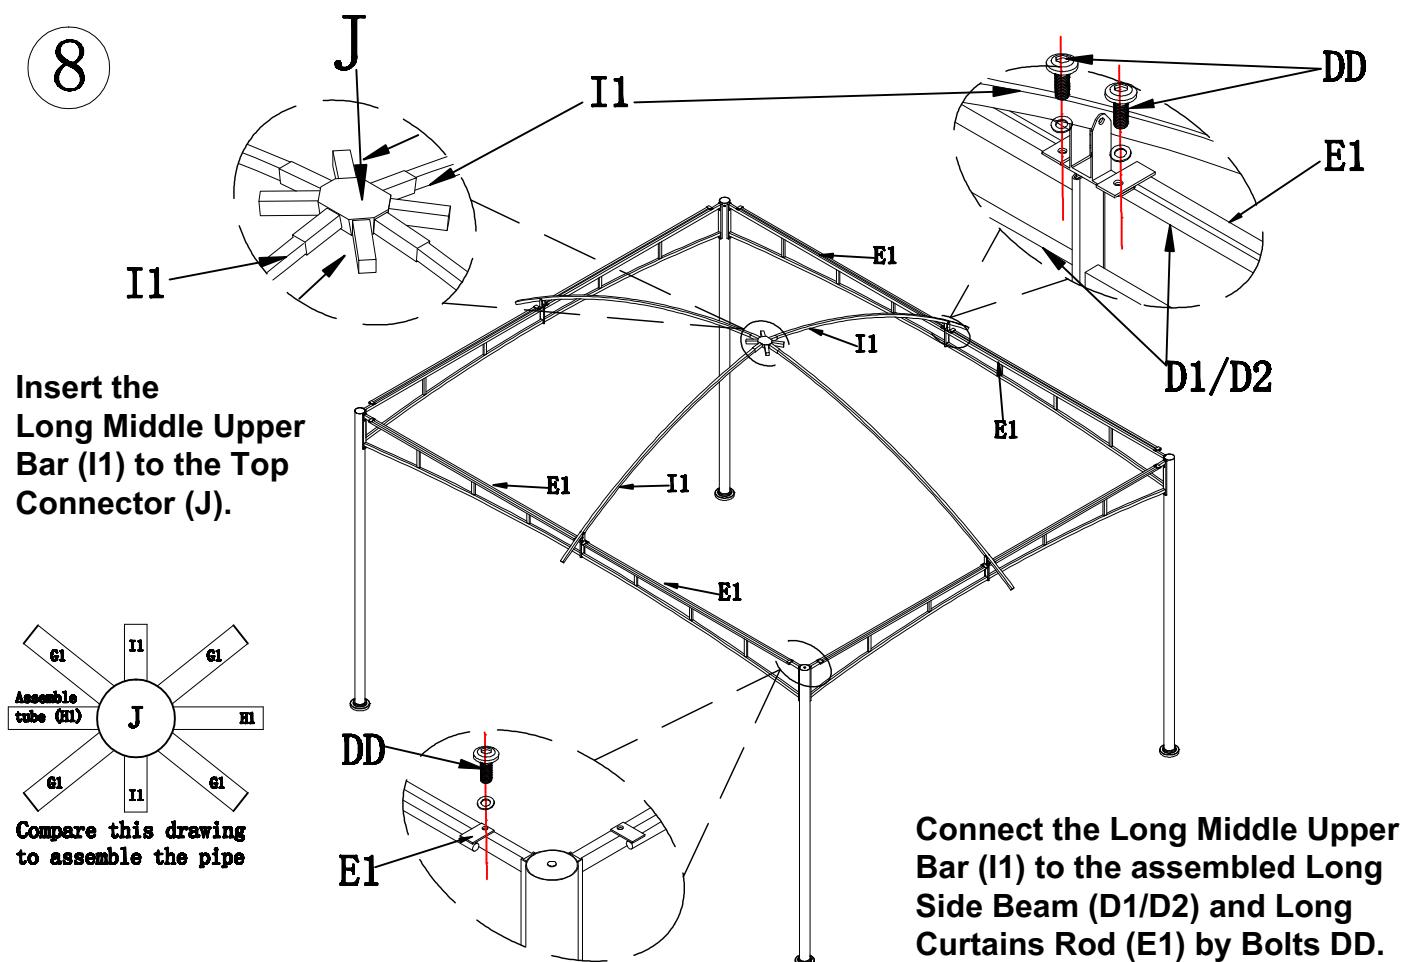

9

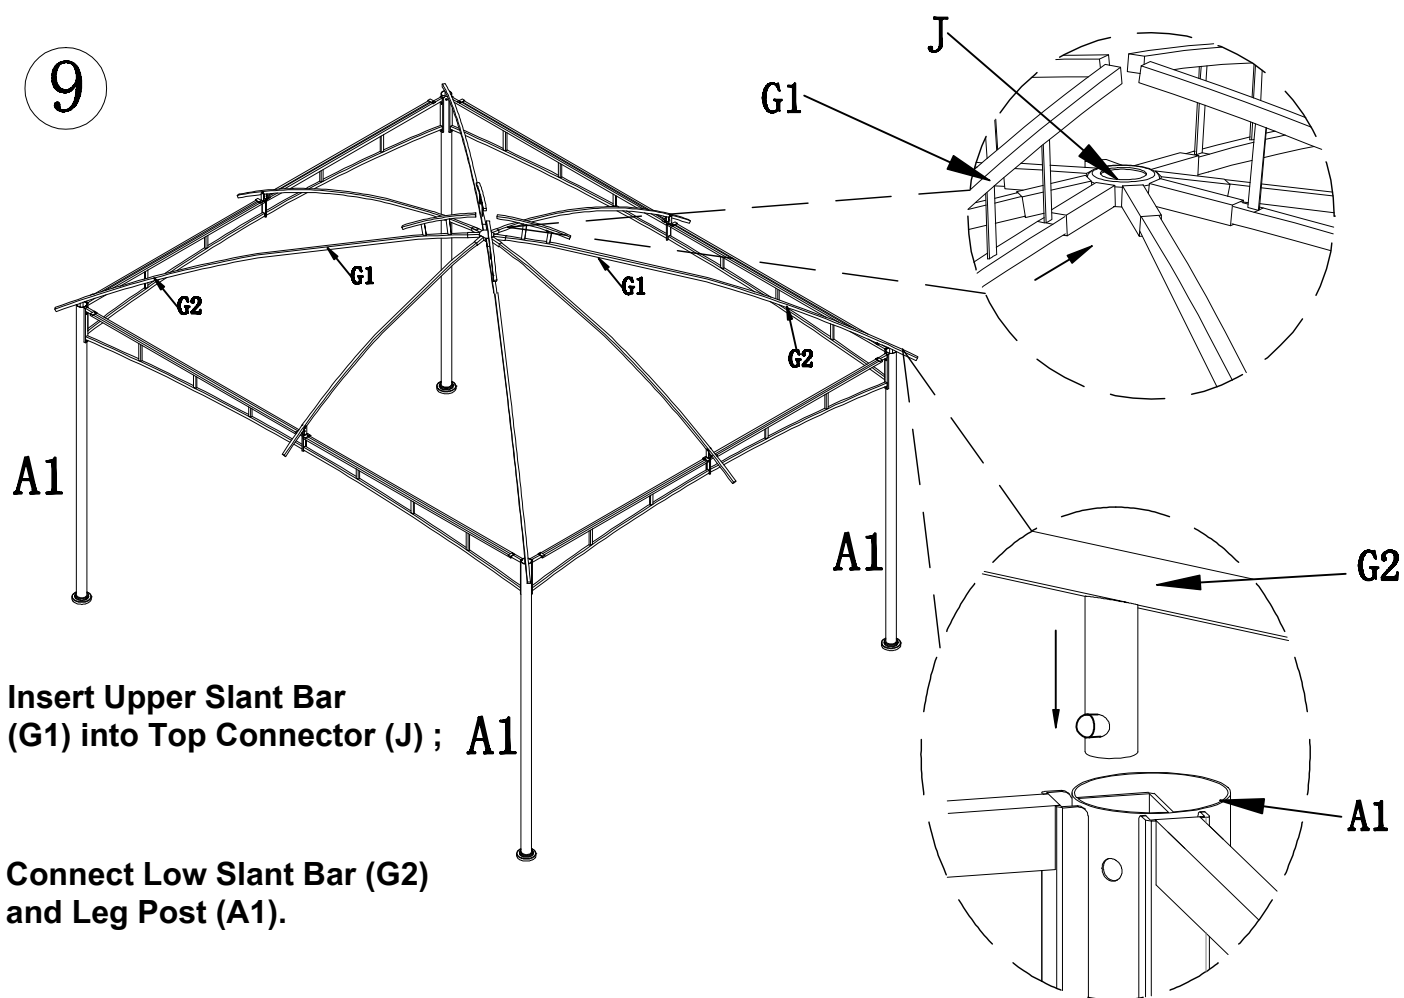



10

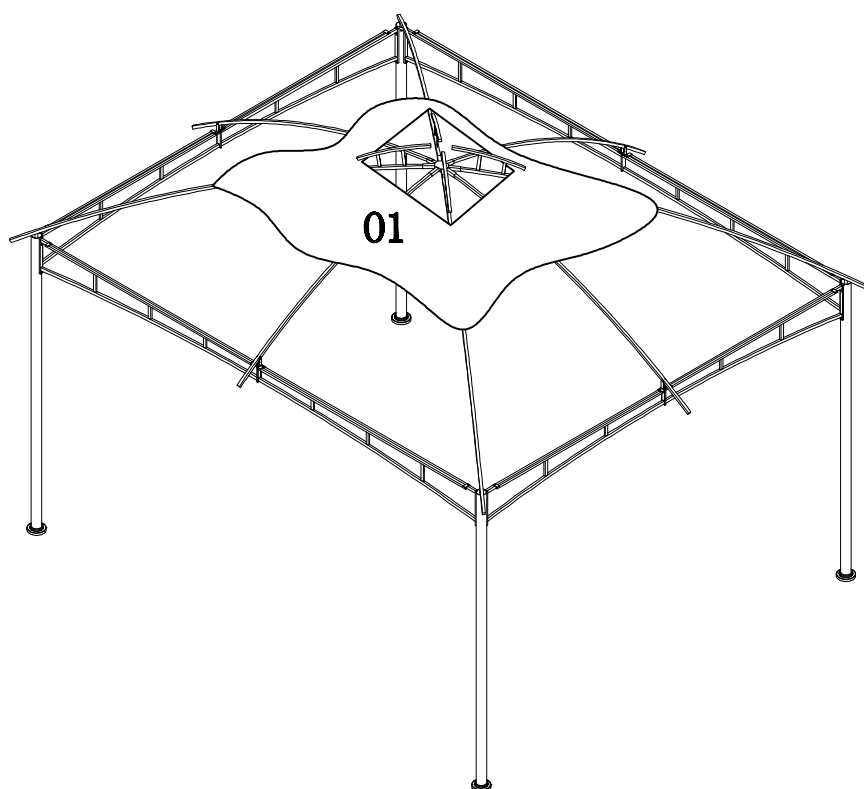


Put Big Canopy Cover (O1) on big roof frame.

11


Attach the Upper Slant Bar (G1) to Short Extension Tube (K6).

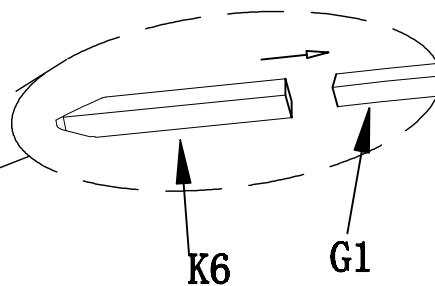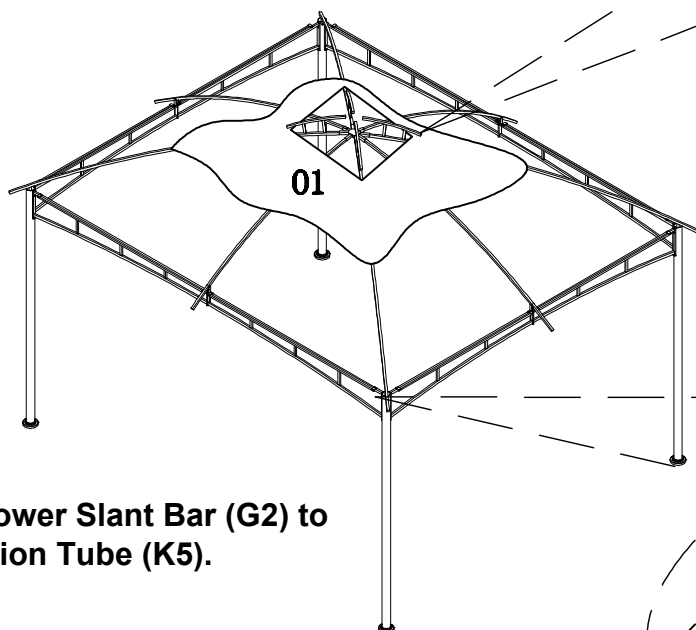

Attach the Lower Slant Bar (G2) to Long Extension Tube (K5).

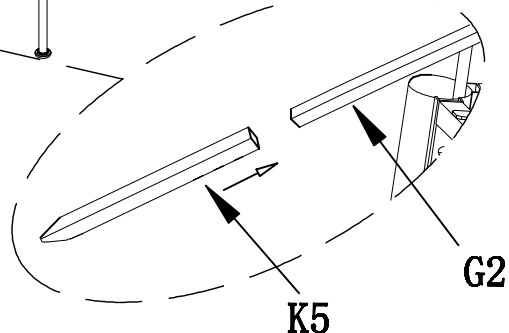

12

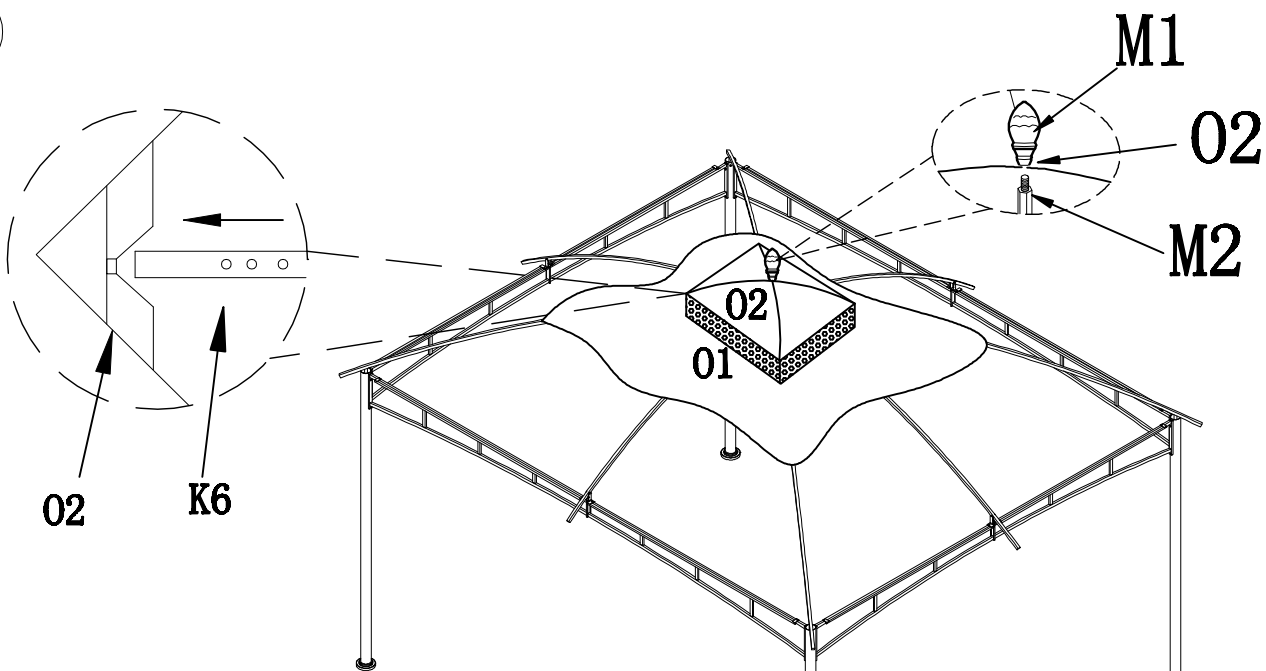


Put the Small Canopy Cover (O2) on the assembled Top Decoration Tube (M2).

Screw the Top Decoration (M1) on the Top Decoration Tube (M2).

To adjust the Short Extension Tube (K6) position to make sure the small canopy cover (O2) could be well fitted.

13

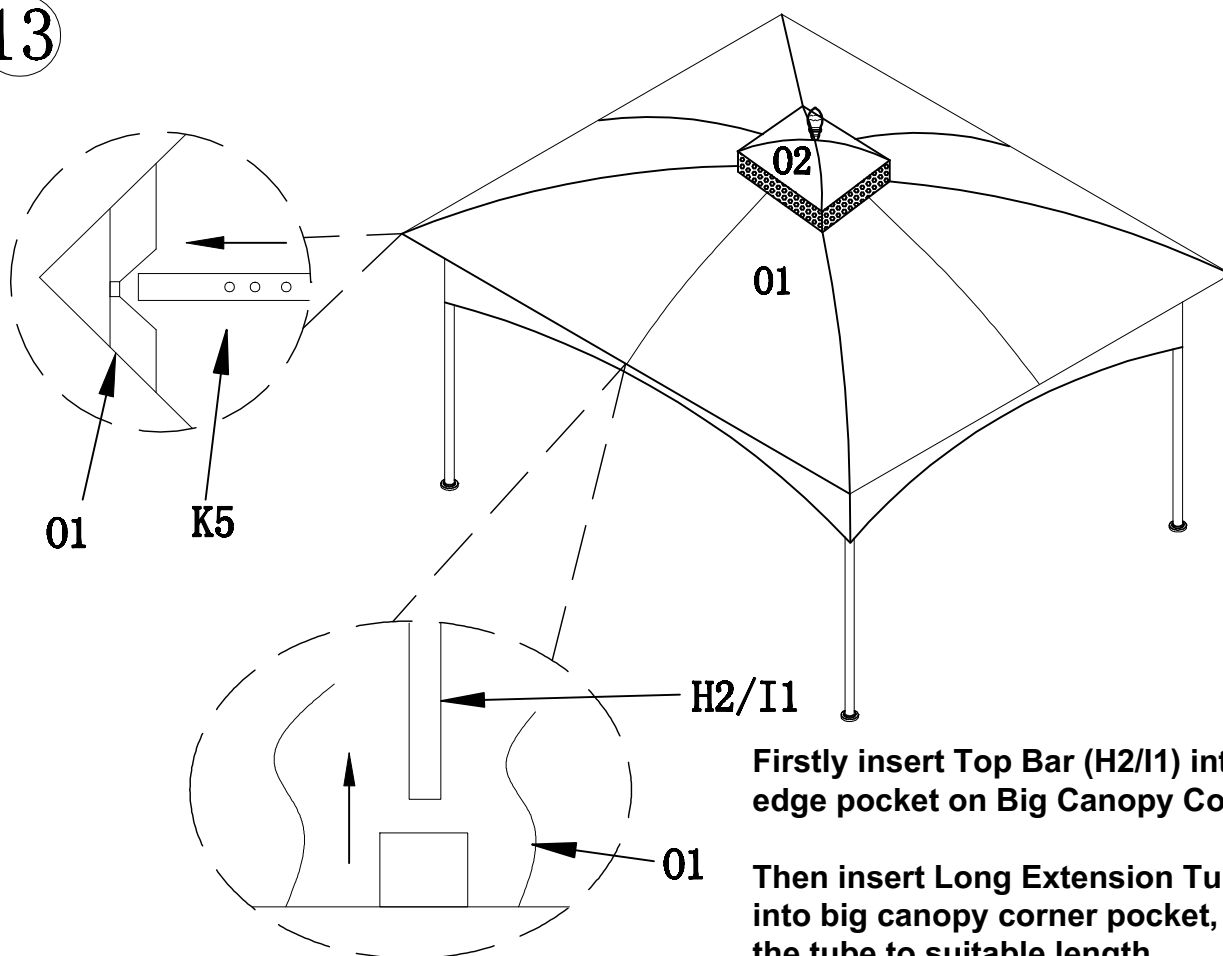


Firstly insert Top Bar (H2/I1) into side edge pocket on Big Canopy Cover (O1).

Then insert Long Extension Tube (K5) into big canopy corner pocket, adjust the tube to suitable length.

14


Hang Privacy Curtains (P2) on the outside of Curtains Rod (E1/E2) by Curtains Ring (LL).

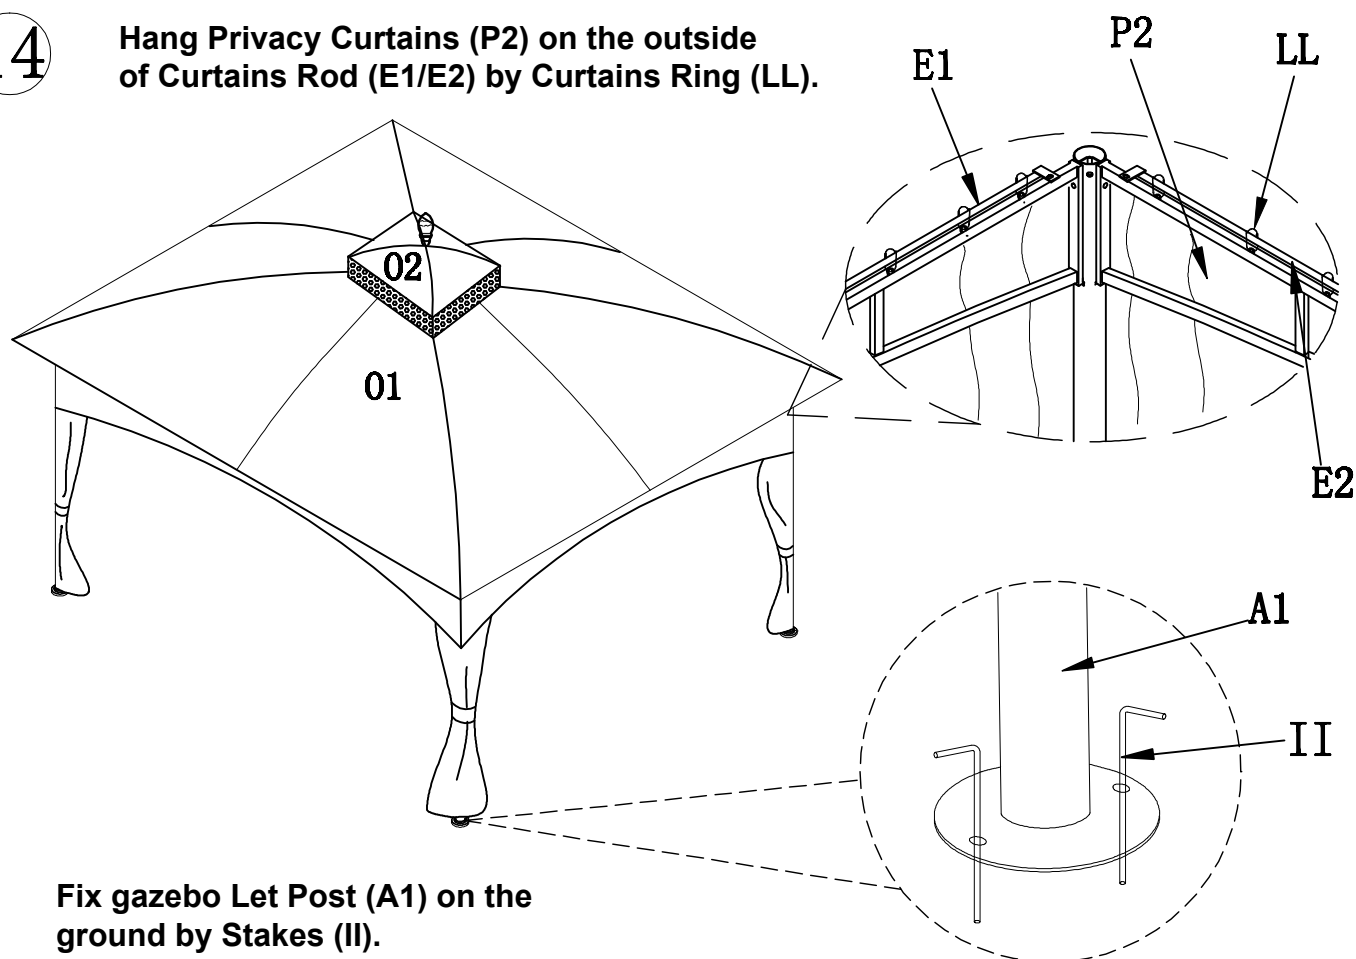

Fix gazebo Leg Post (A1) on the ground by Stakes (II).


Sandbag

①

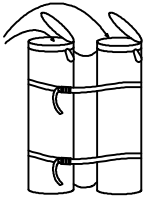


Open the bag and fill it with sand or something else heavy.

②

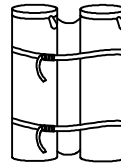


Zip up the sandbag.

③

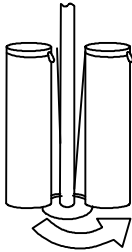

Place the sandbag next to the lower post.

④

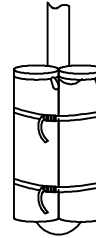

Fix the bag to the leg by velcro.

