
# 20 x 20 FT

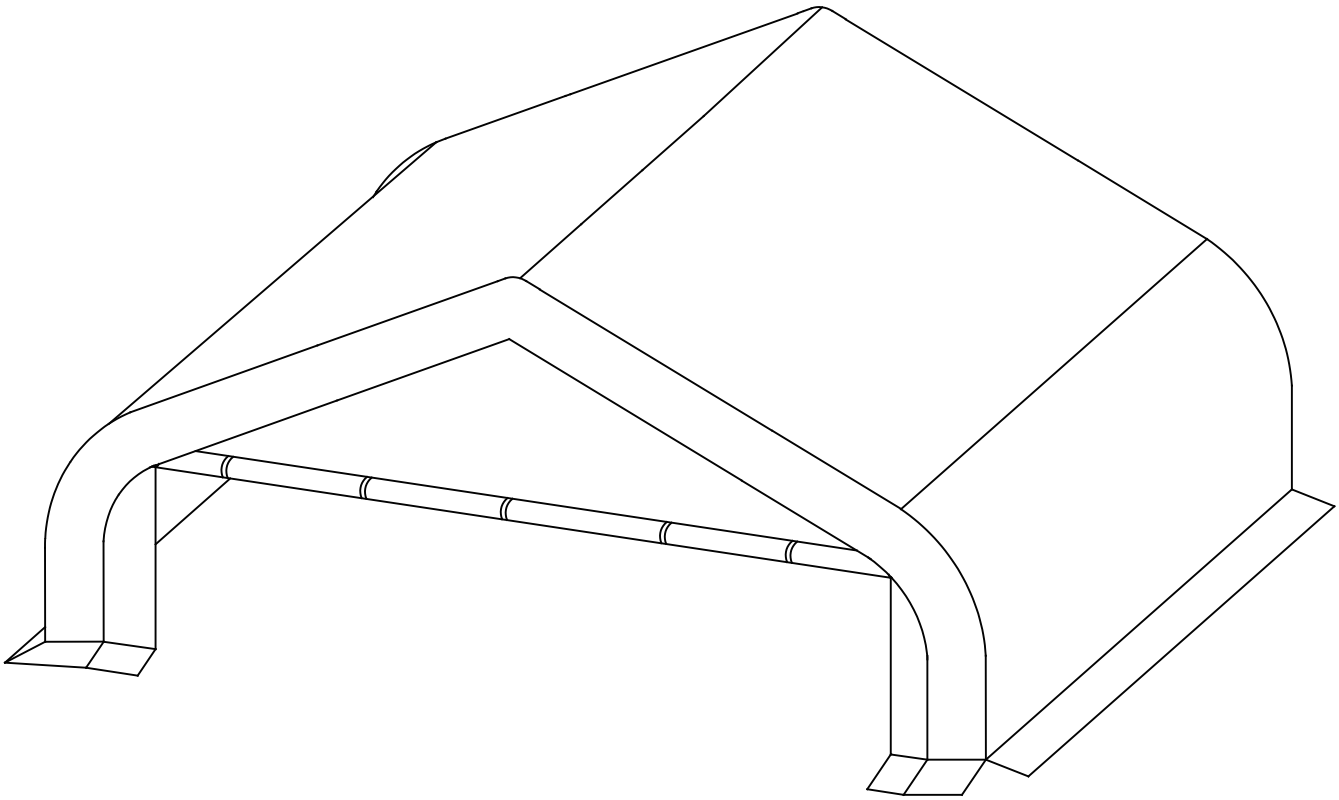


**Attention:**


Please read the manual completely before starting the installation(A ladder & an electric drill are recommended for the assem-bly.)

1. Please confirm that the parts are complete and undam-aged.(Corresponding part number is affixed to each part) If any parts are missing or damaged, please contact the cus-tomer support email to reissue or contact seller.


# Structural diagram

**Arrange and classify the parts neatly to facilitate installation. This is the part structure diagram of our product, you can combine this diagram and follow the steps to install**

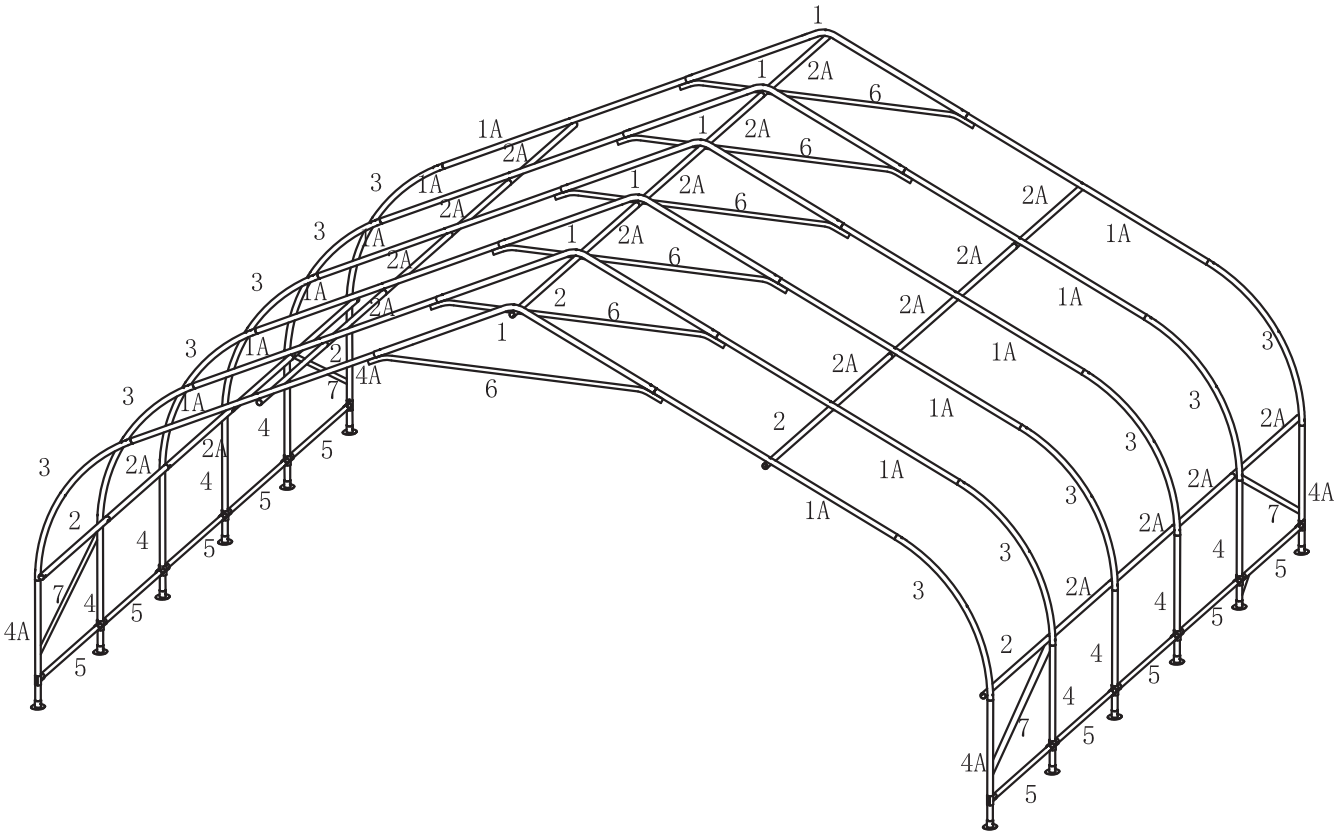









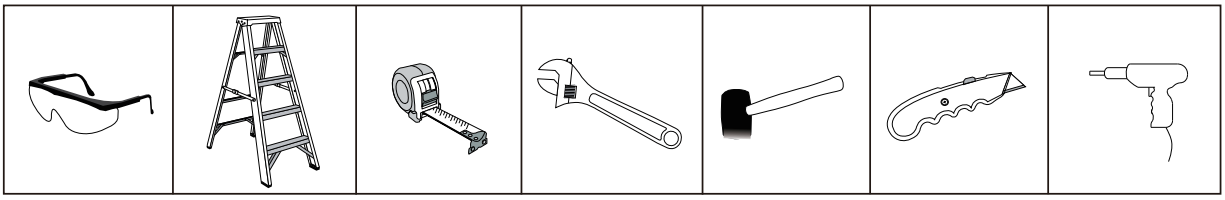



* All the optional tools listed above are not included in this product.

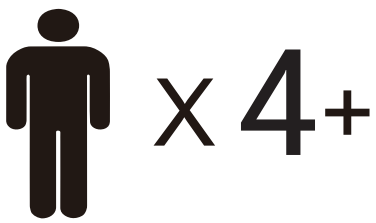






# PARTS LIST

| | | | | | |
|---|---|---|---|---|---|
| 1 |  | 6pcs | E |  | 41pcs |
| 1A |  | 12pcs | F |  M6×45 | 40pcs |
| 2 |  | 5pcs | G |  M8×80 | 30pcs |
| 2A |  | 20pcs | H |  M8×50 | 24pcs |
| 3 |  | 12pcs | I |  M8*50 | 4pcs |
| 4 |  | 8pcs | J |  M8×75 | 12pcs |
| 4A |  | 4pcs | K |  | 4pcs |
| 5 |  | 10pcs | L |  ϕ 4.5×170 | 24pcs |
| 6 |  | 6pcs | M |  | 1pc |
| 7 |  | 4pcs | N |  | 2pc |
| A |  | 8pcs | O |  M6/M8 | 2pc |
| B |  | 16pcs | P |  M8*60mm | 24pcs |
| C |  | 12pcs | |  | 2pcs |


1

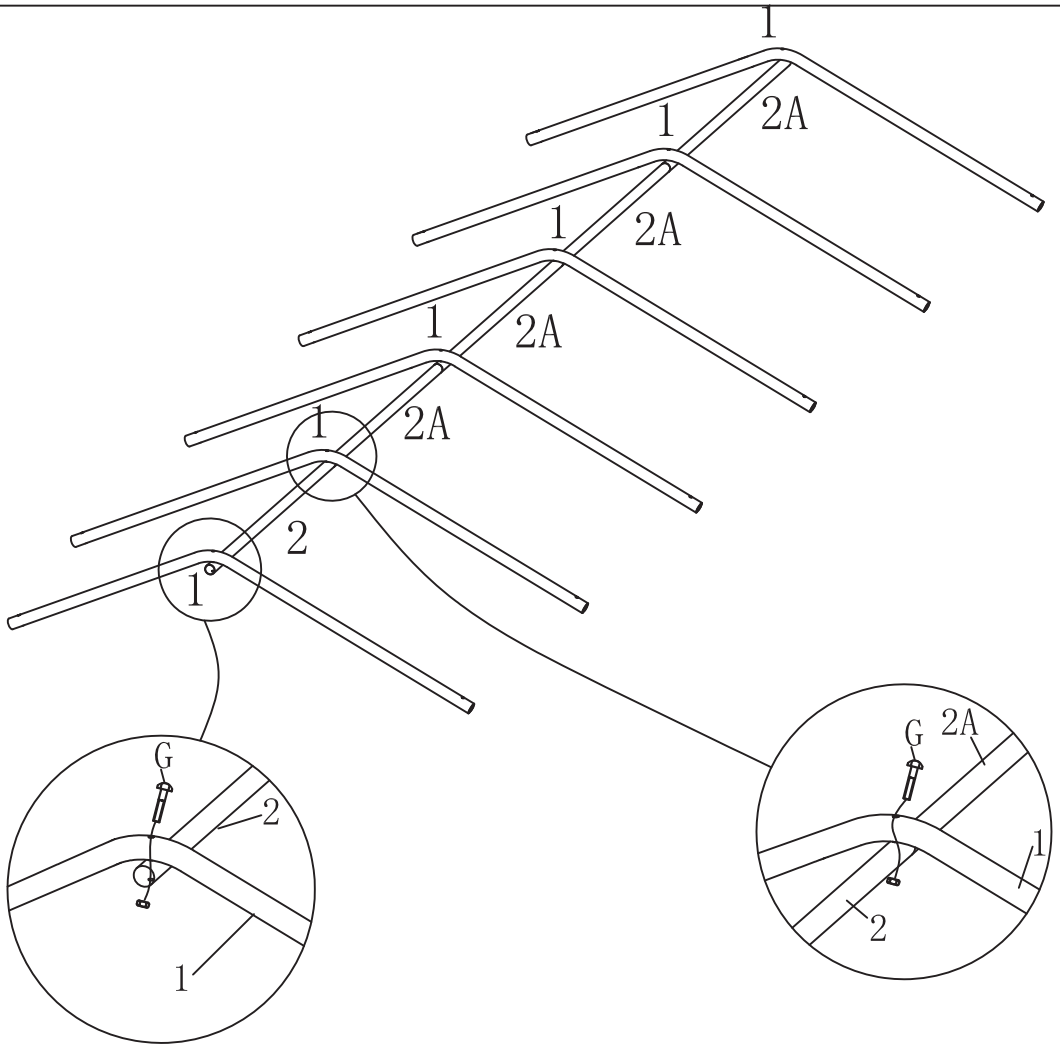
1
1
2A
1
2A
1
2A
1
2A
2
1
G
2
1
G
2A
1
2


2

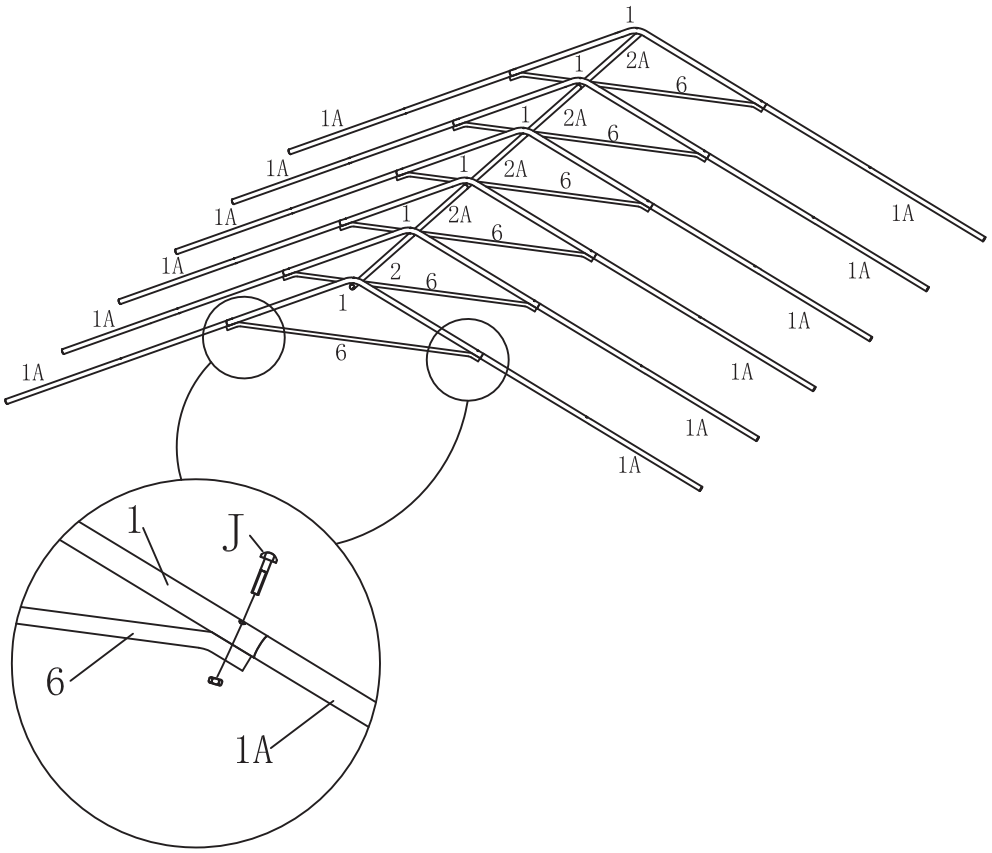
1
1
2A
6
1A
1
2A
6
1A
1
2A
6
1A
1
2A
6
1A
2
6
1
1A
6
1A
1A
1A
1A
1
J
6
1A


3

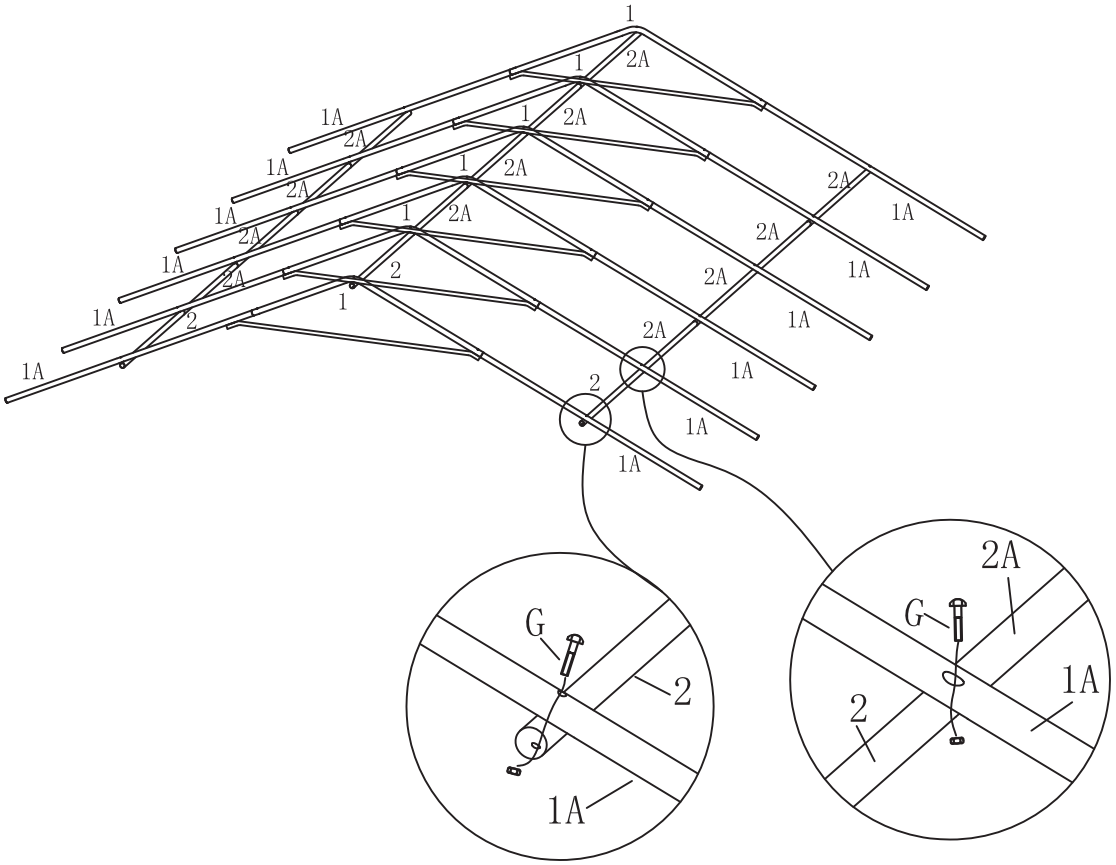



4

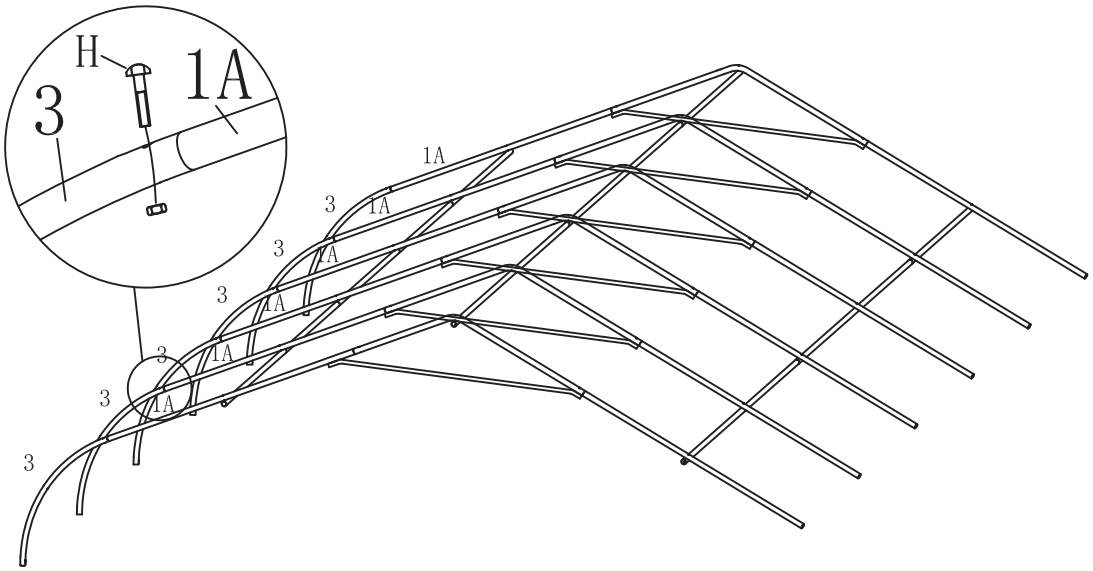


5

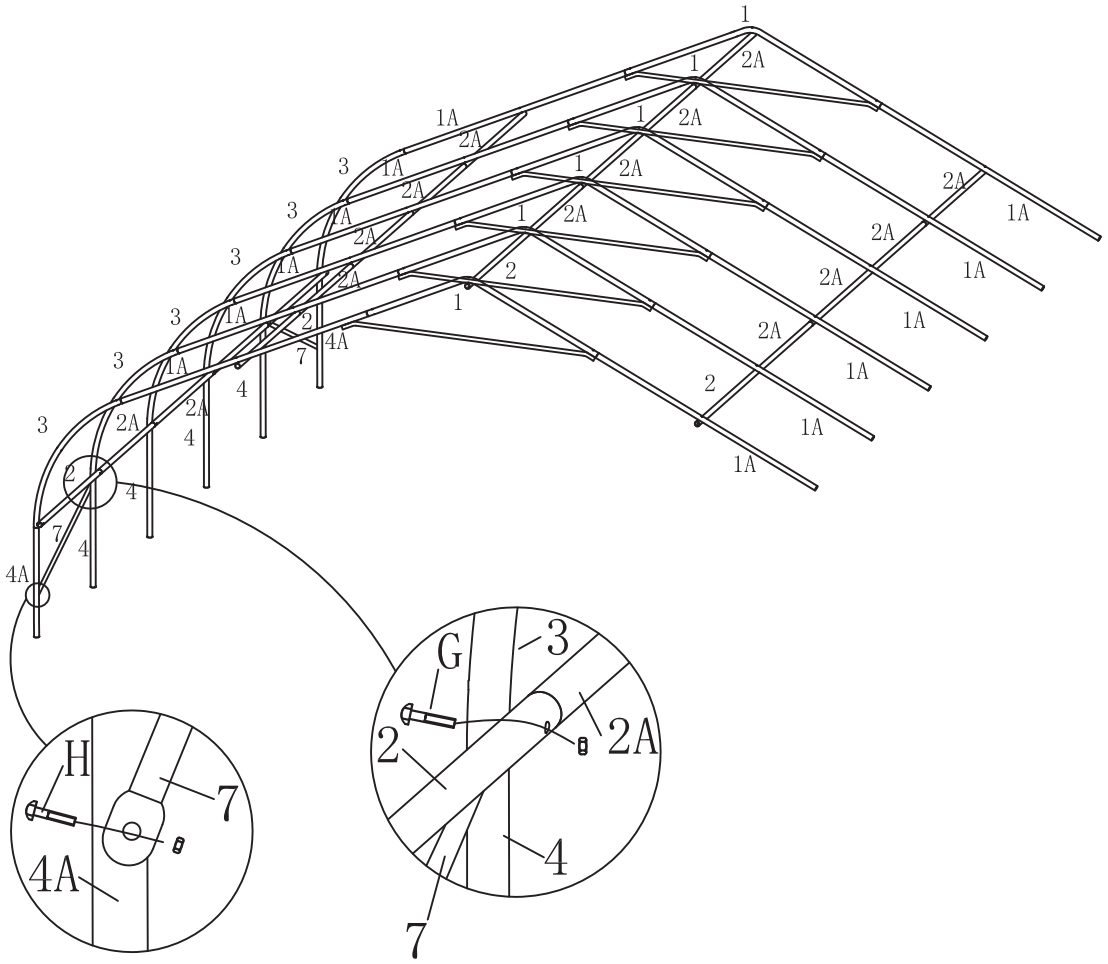



6

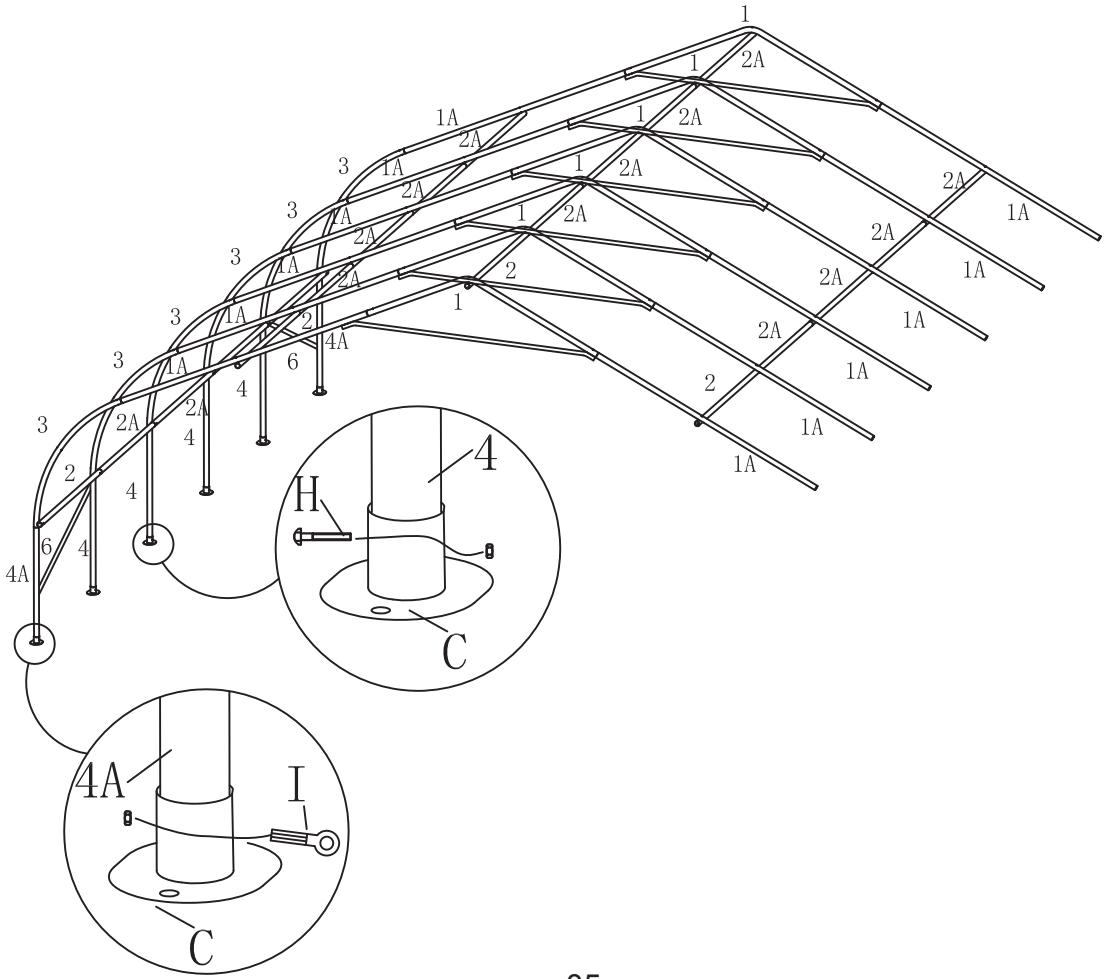


7

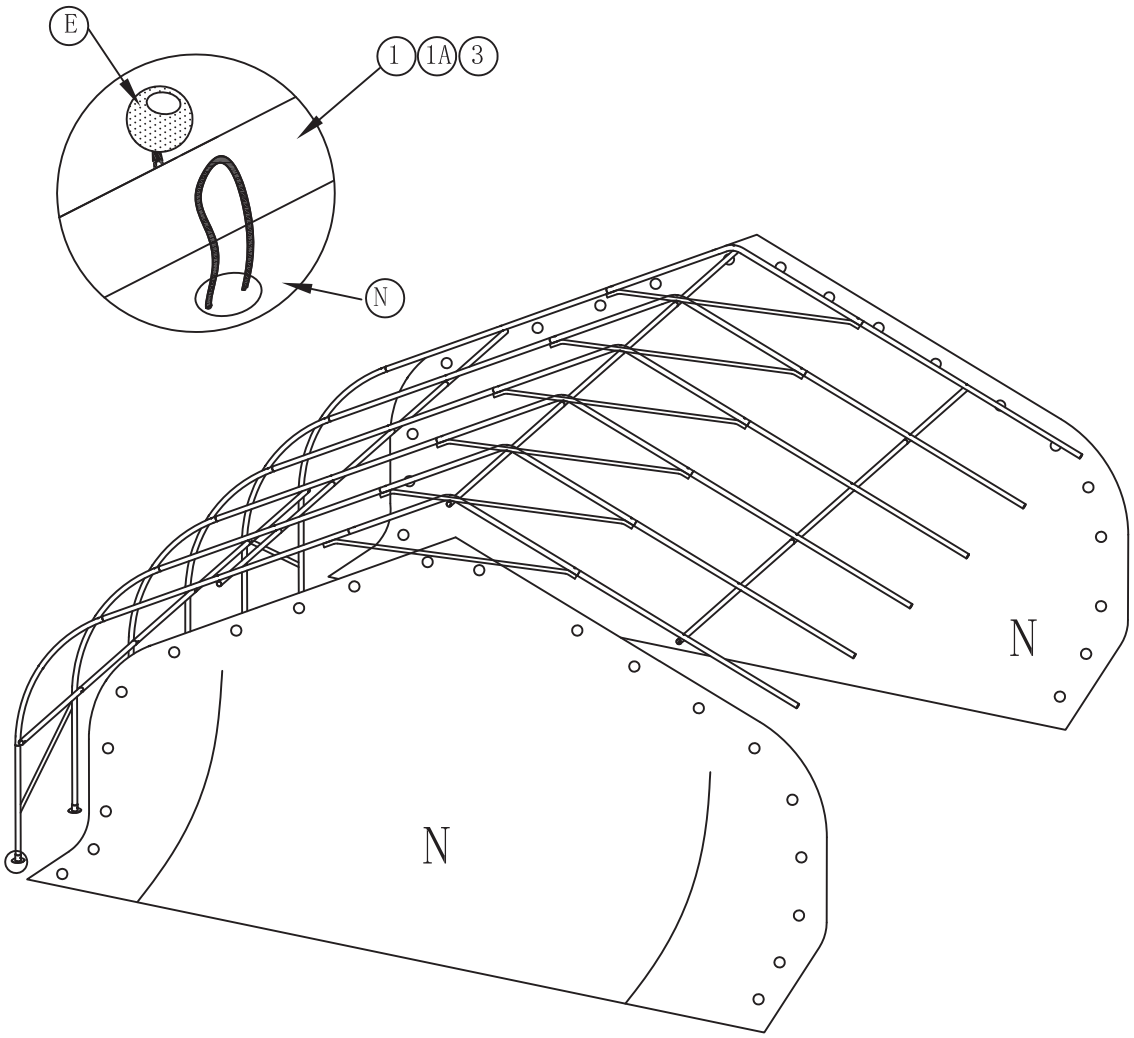



8

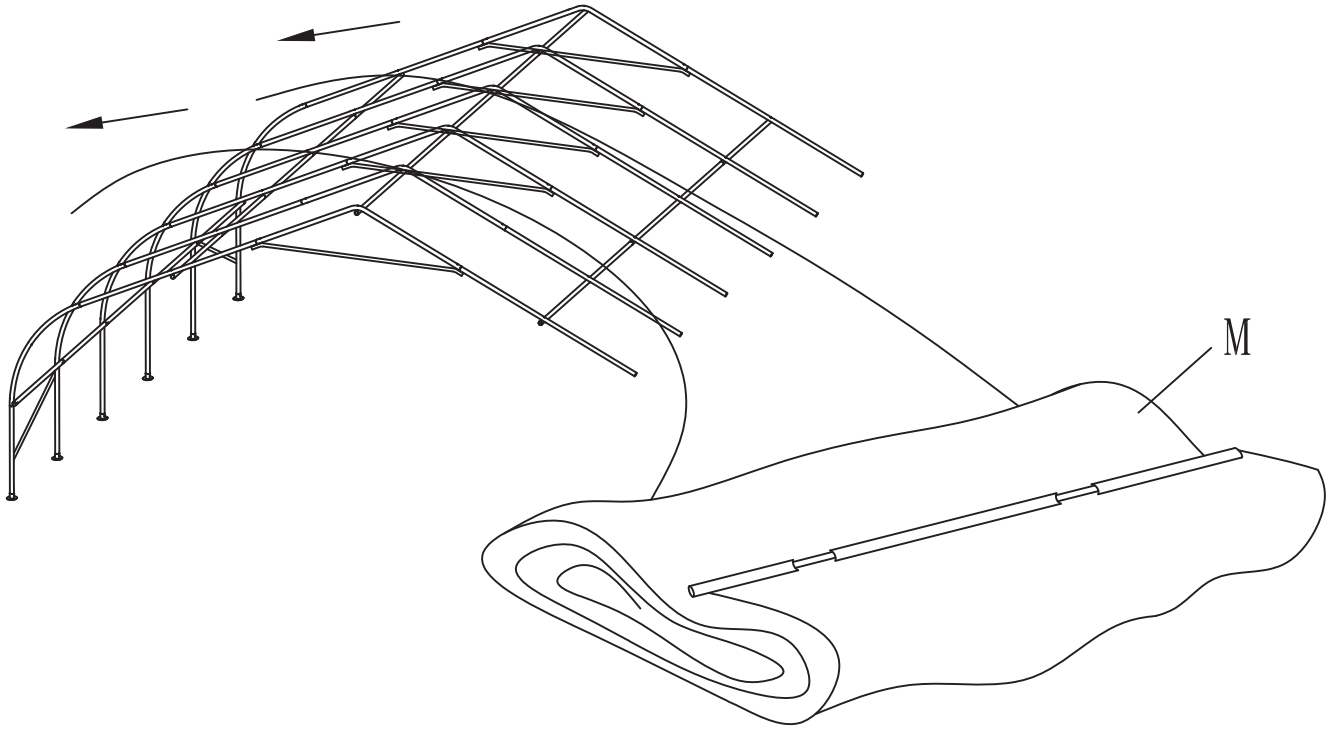


9

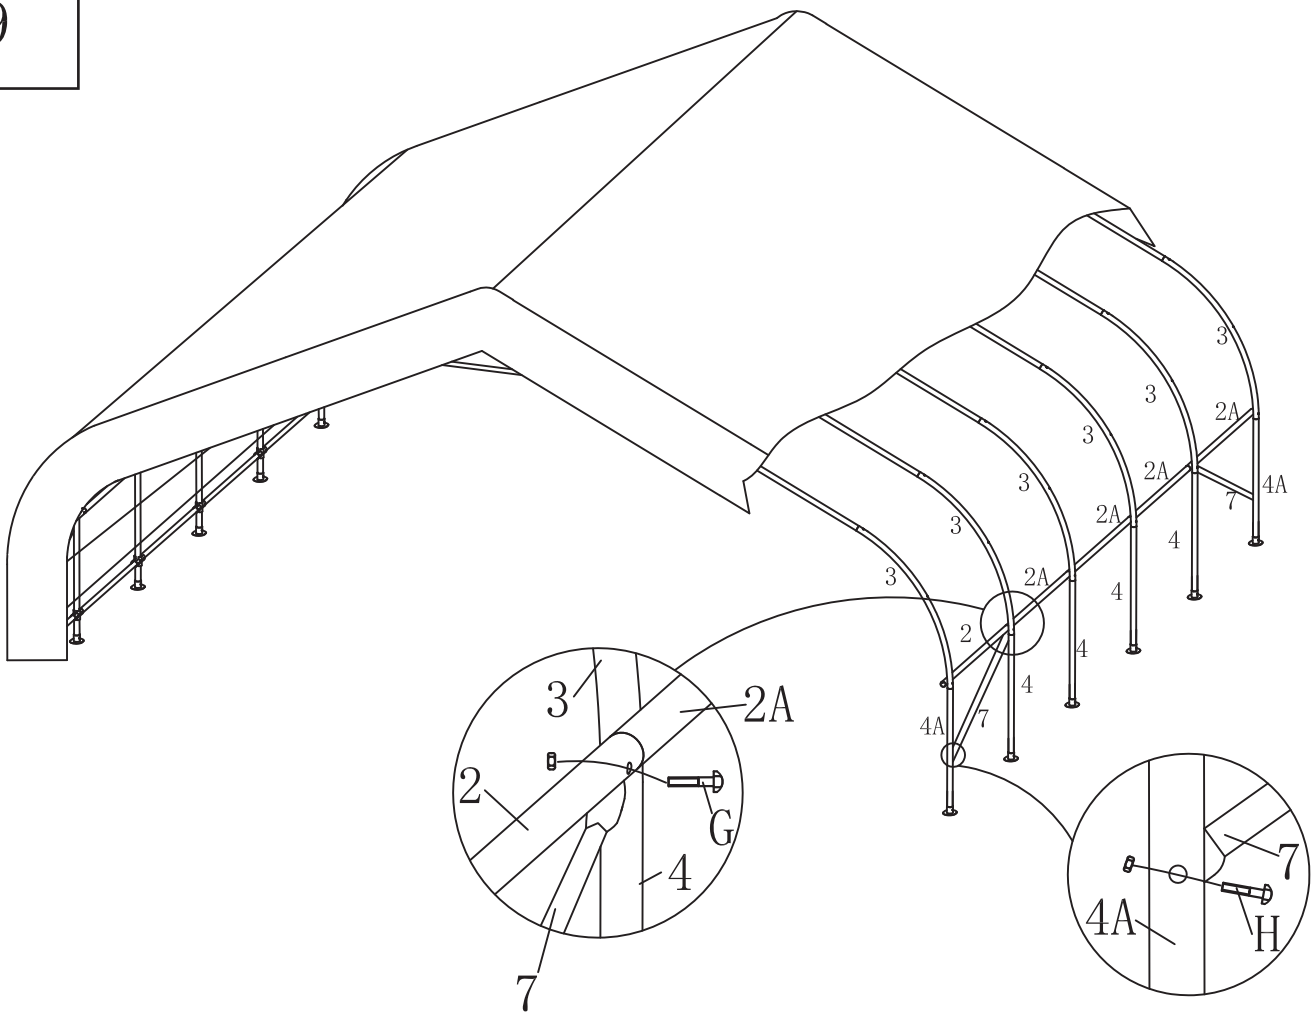



10

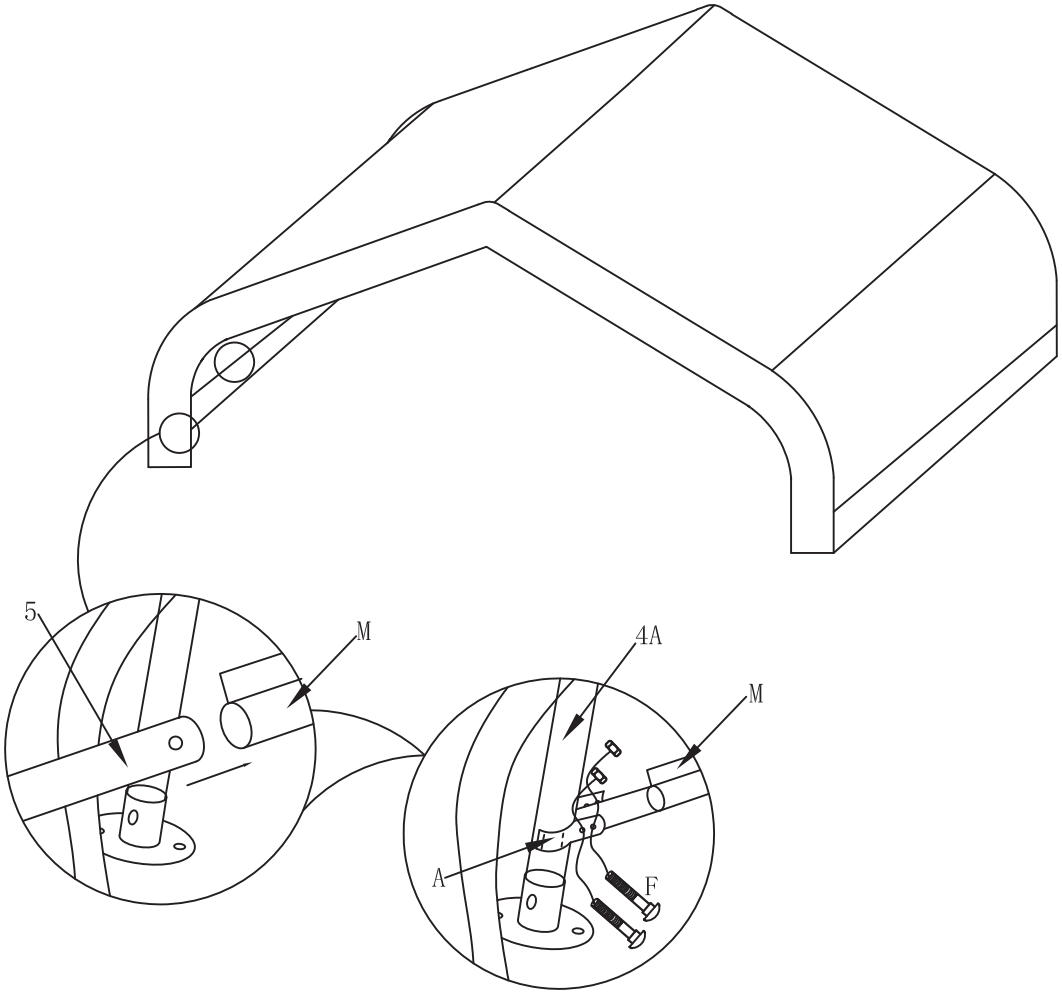


11

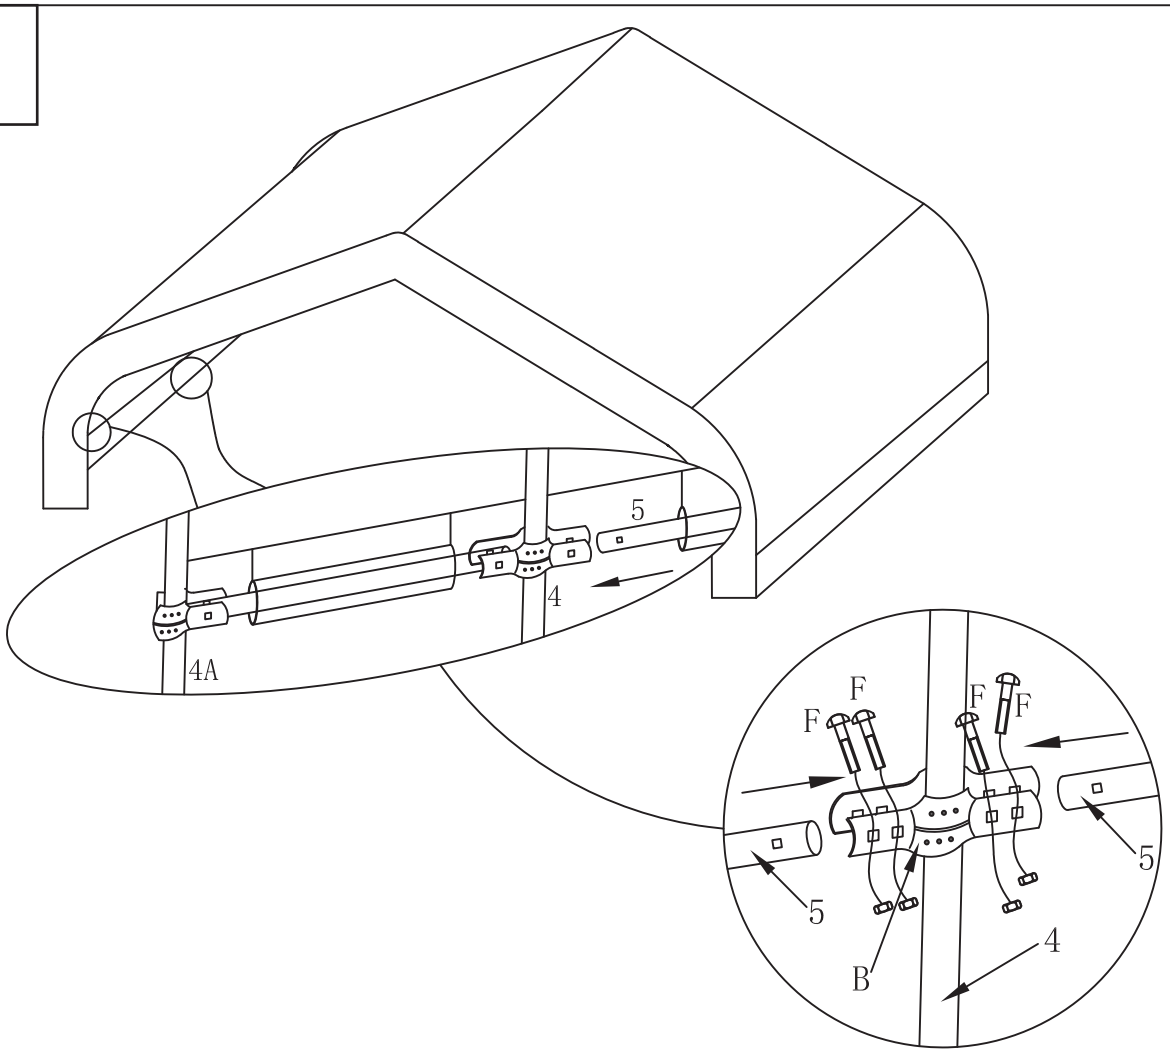



12

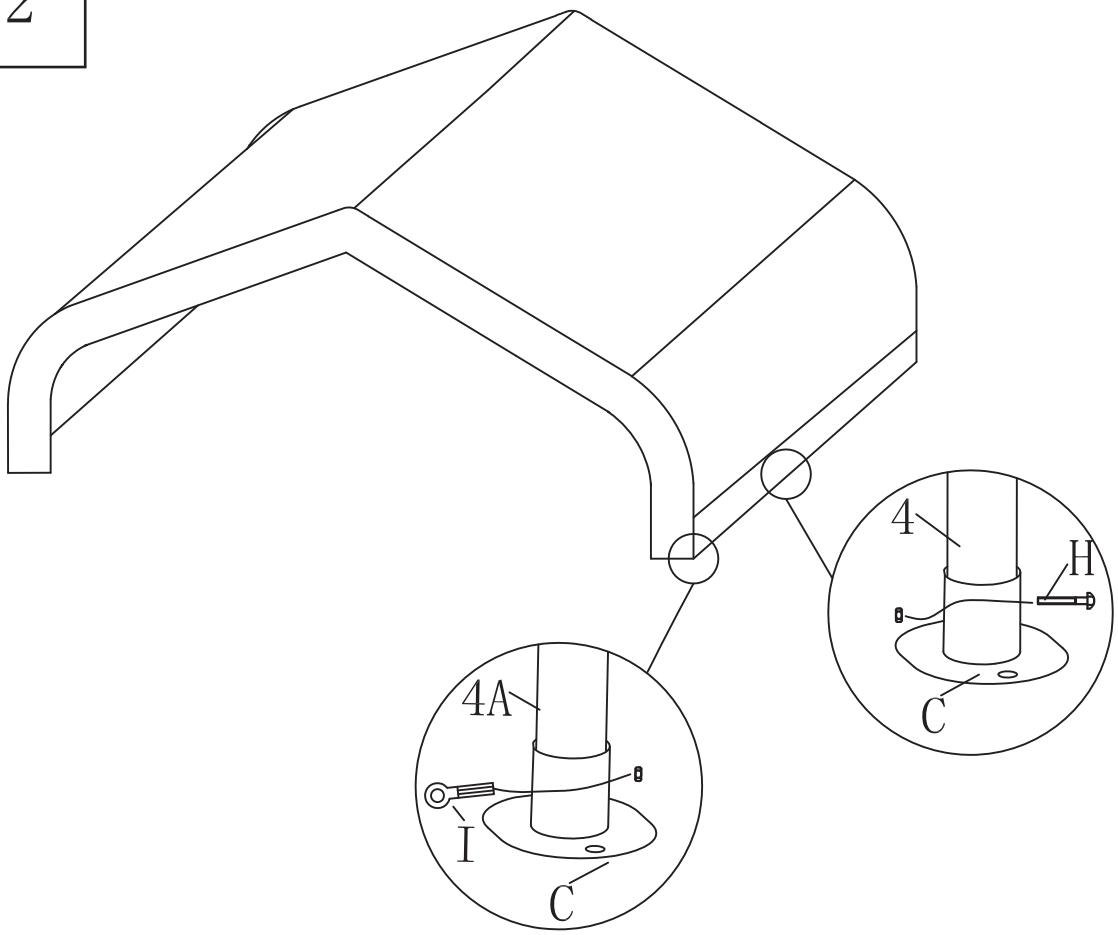

13

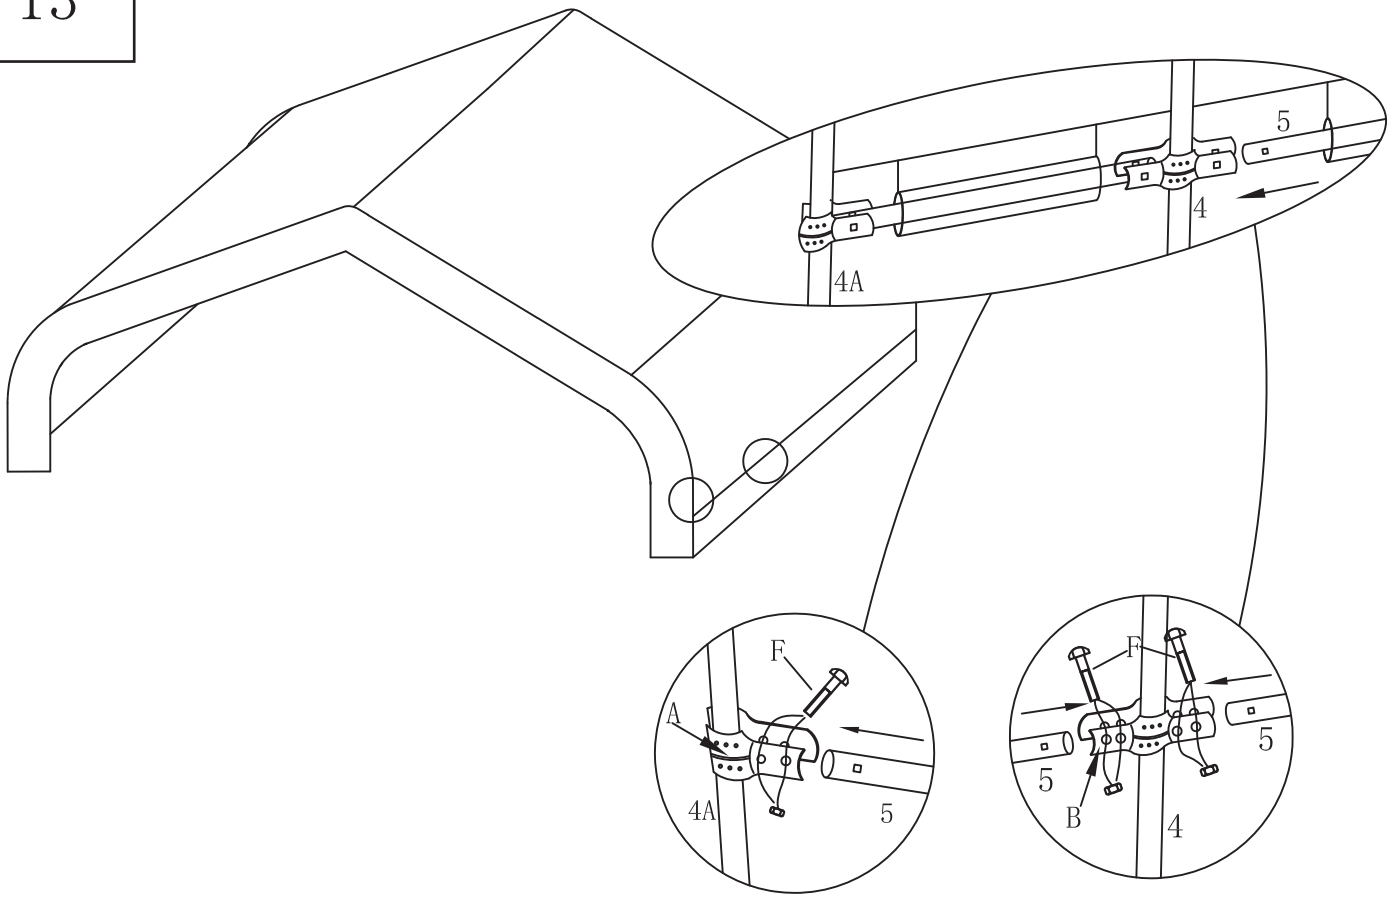


14

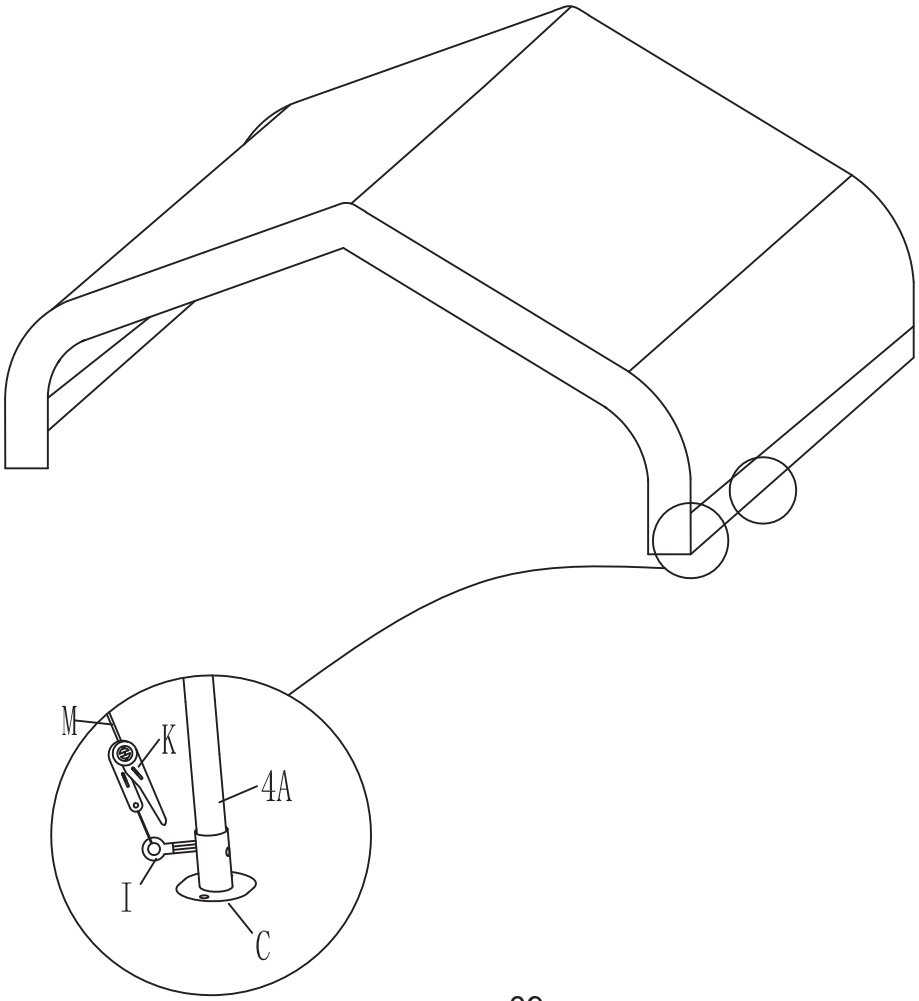

## Securing Ratchet Tie-Downs

**Note:** Use these instructions in the pages that follow.

1. Thread the strap through the Ratchet's (K) spindle as far as it will go.

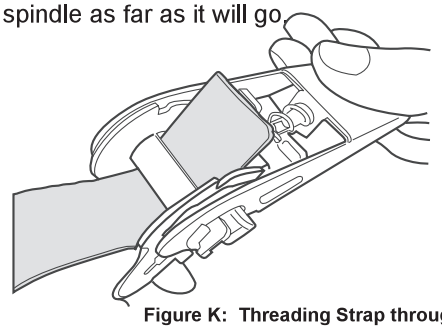


**Figure K: Threading Strap through Spindle**

2. Insert the S-hook of the Ratchet into the hole in the Corner Leg (I).

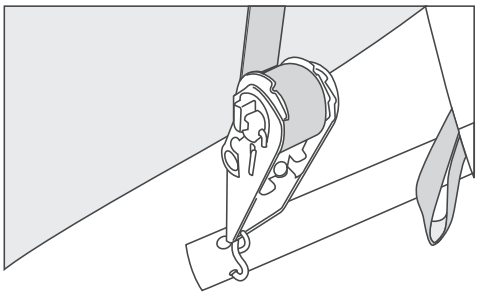


**Figure L: Inserting Hook into Corner Leg**

3. Lift and lower the Ratchet's handle to wind and tighten the strap onto the spindle.

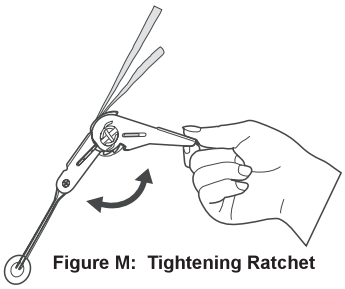


**Figure M: Tightening Ratchet**

**NOTICE: Excessive tightening will damage straps, Covers, and Corner Legs.**

## Releasing Ratchet Tie-Downs

1. Depress the spring-loaded bar on the handle.
2. Open Ratchet handle completely.
3. Unwind the strap.



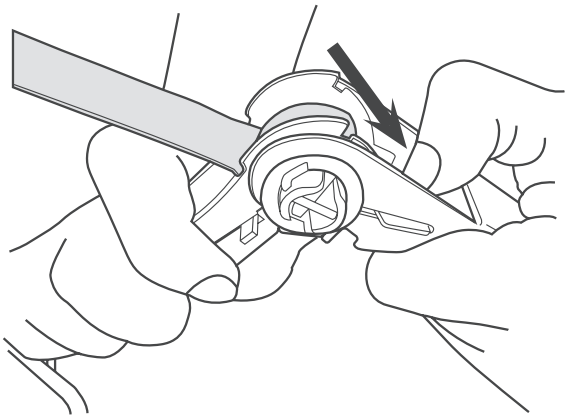



**Figure N: Releasing Ratchet**


15

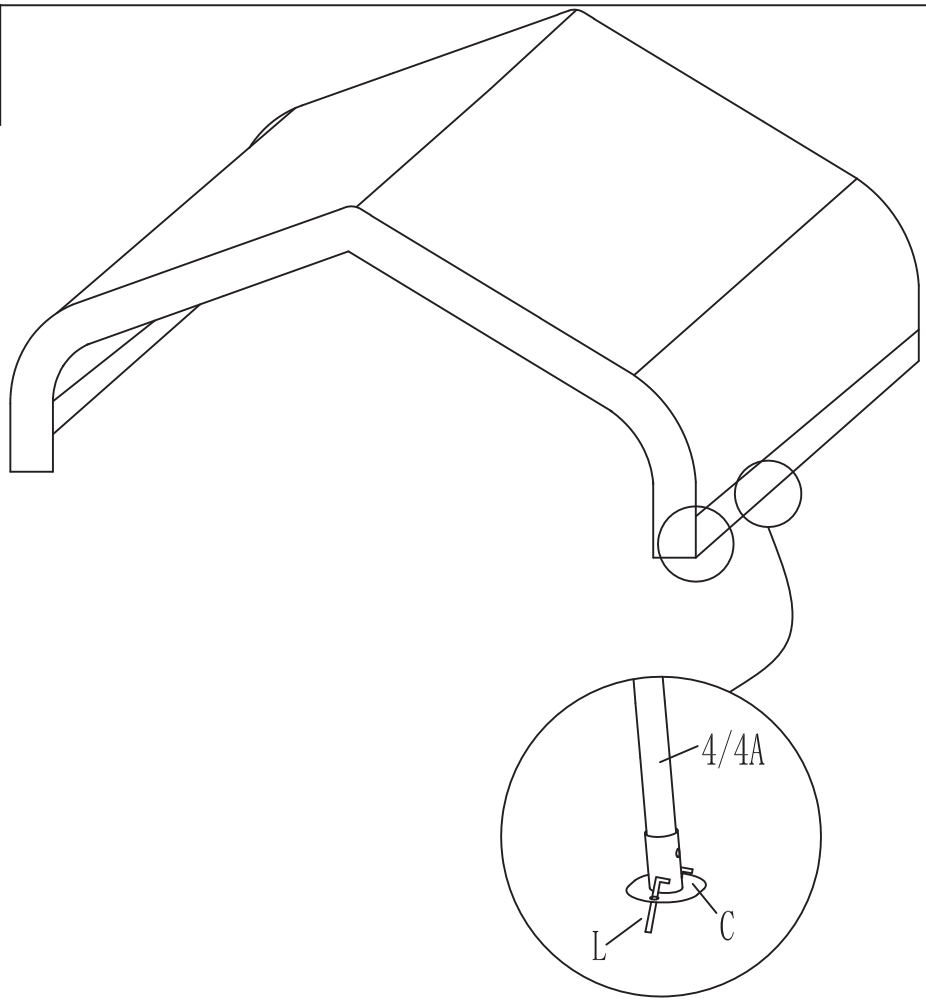


16

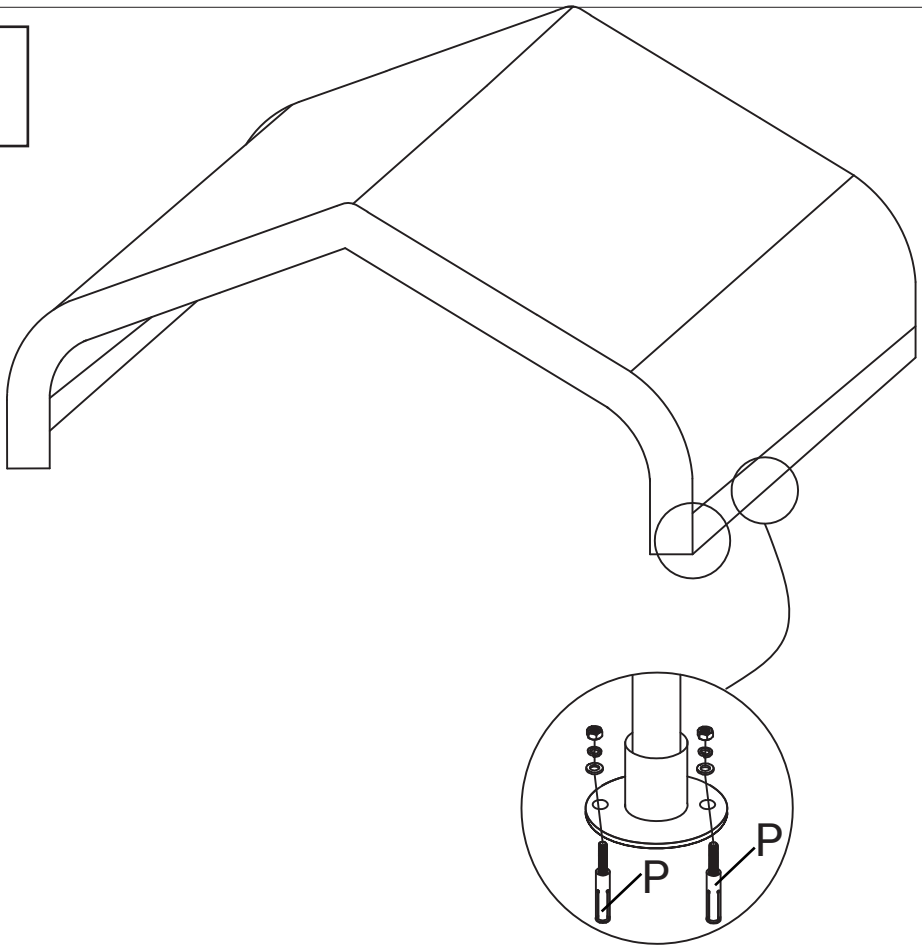

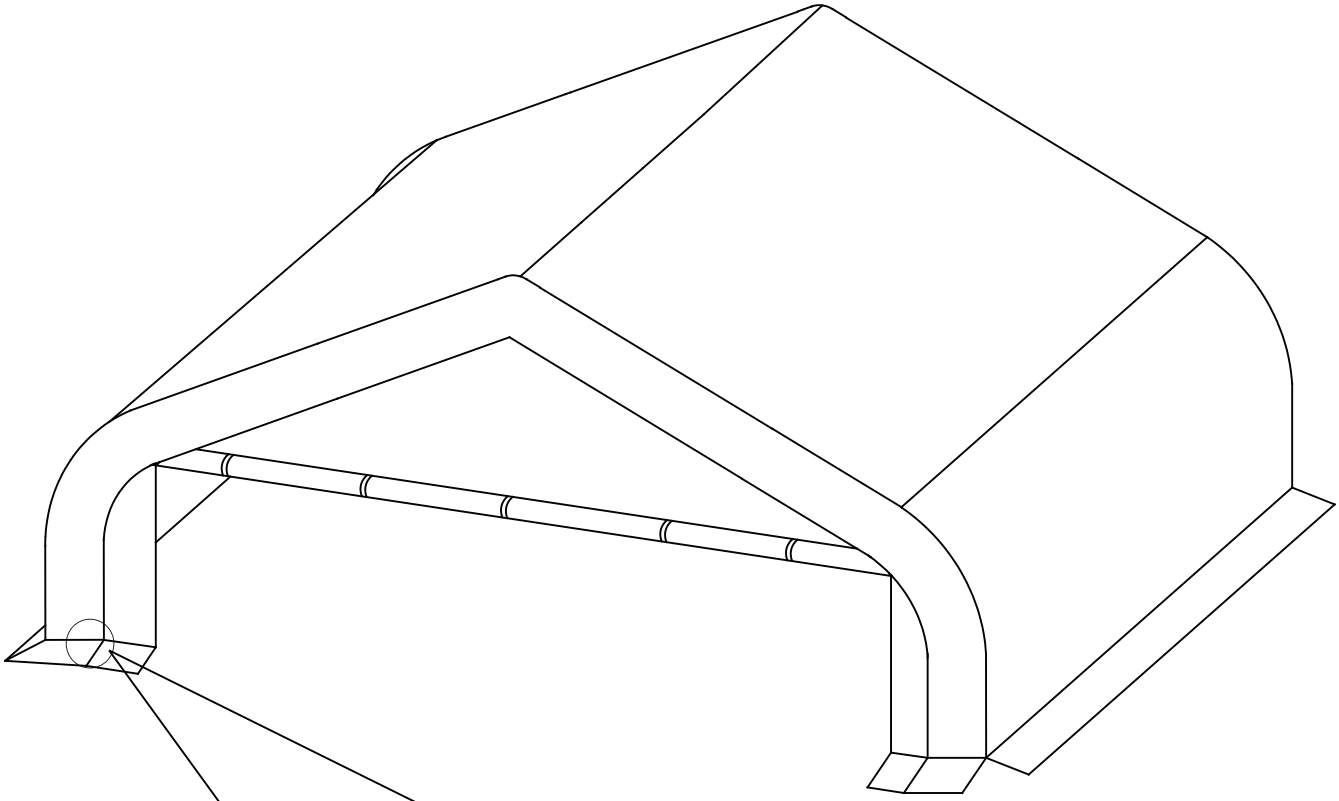

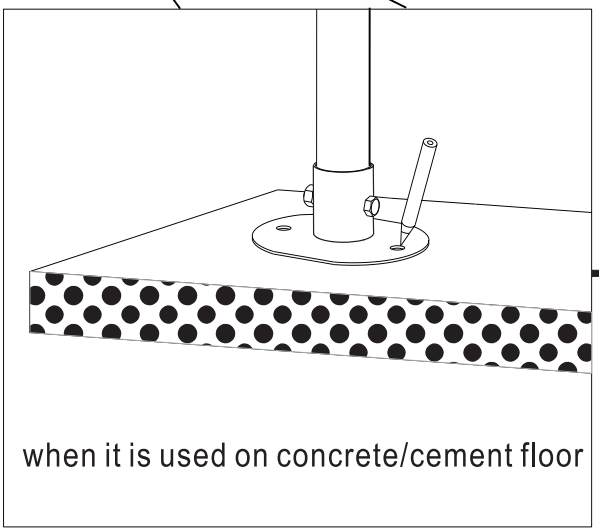

when it is used on concrete/cement floor

