



ASSEMBLY INSTRUCTIONS

QUEEN MURPHY CABINET BED WITH DRAWER

TYPE 1

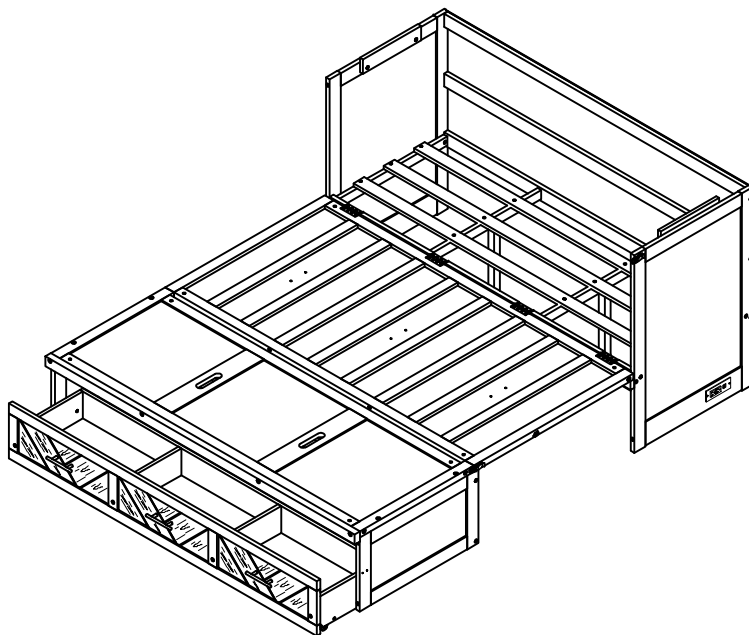


TYPE 2






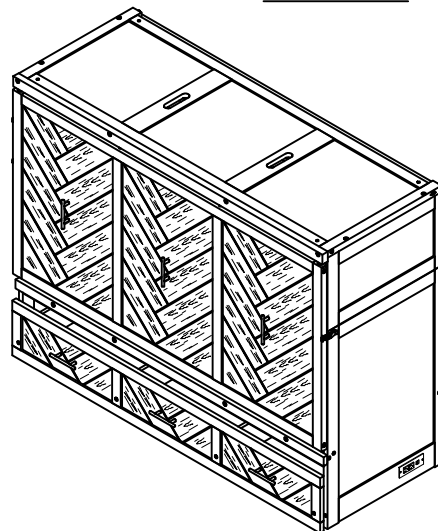





BSSLQQ075

Detail View








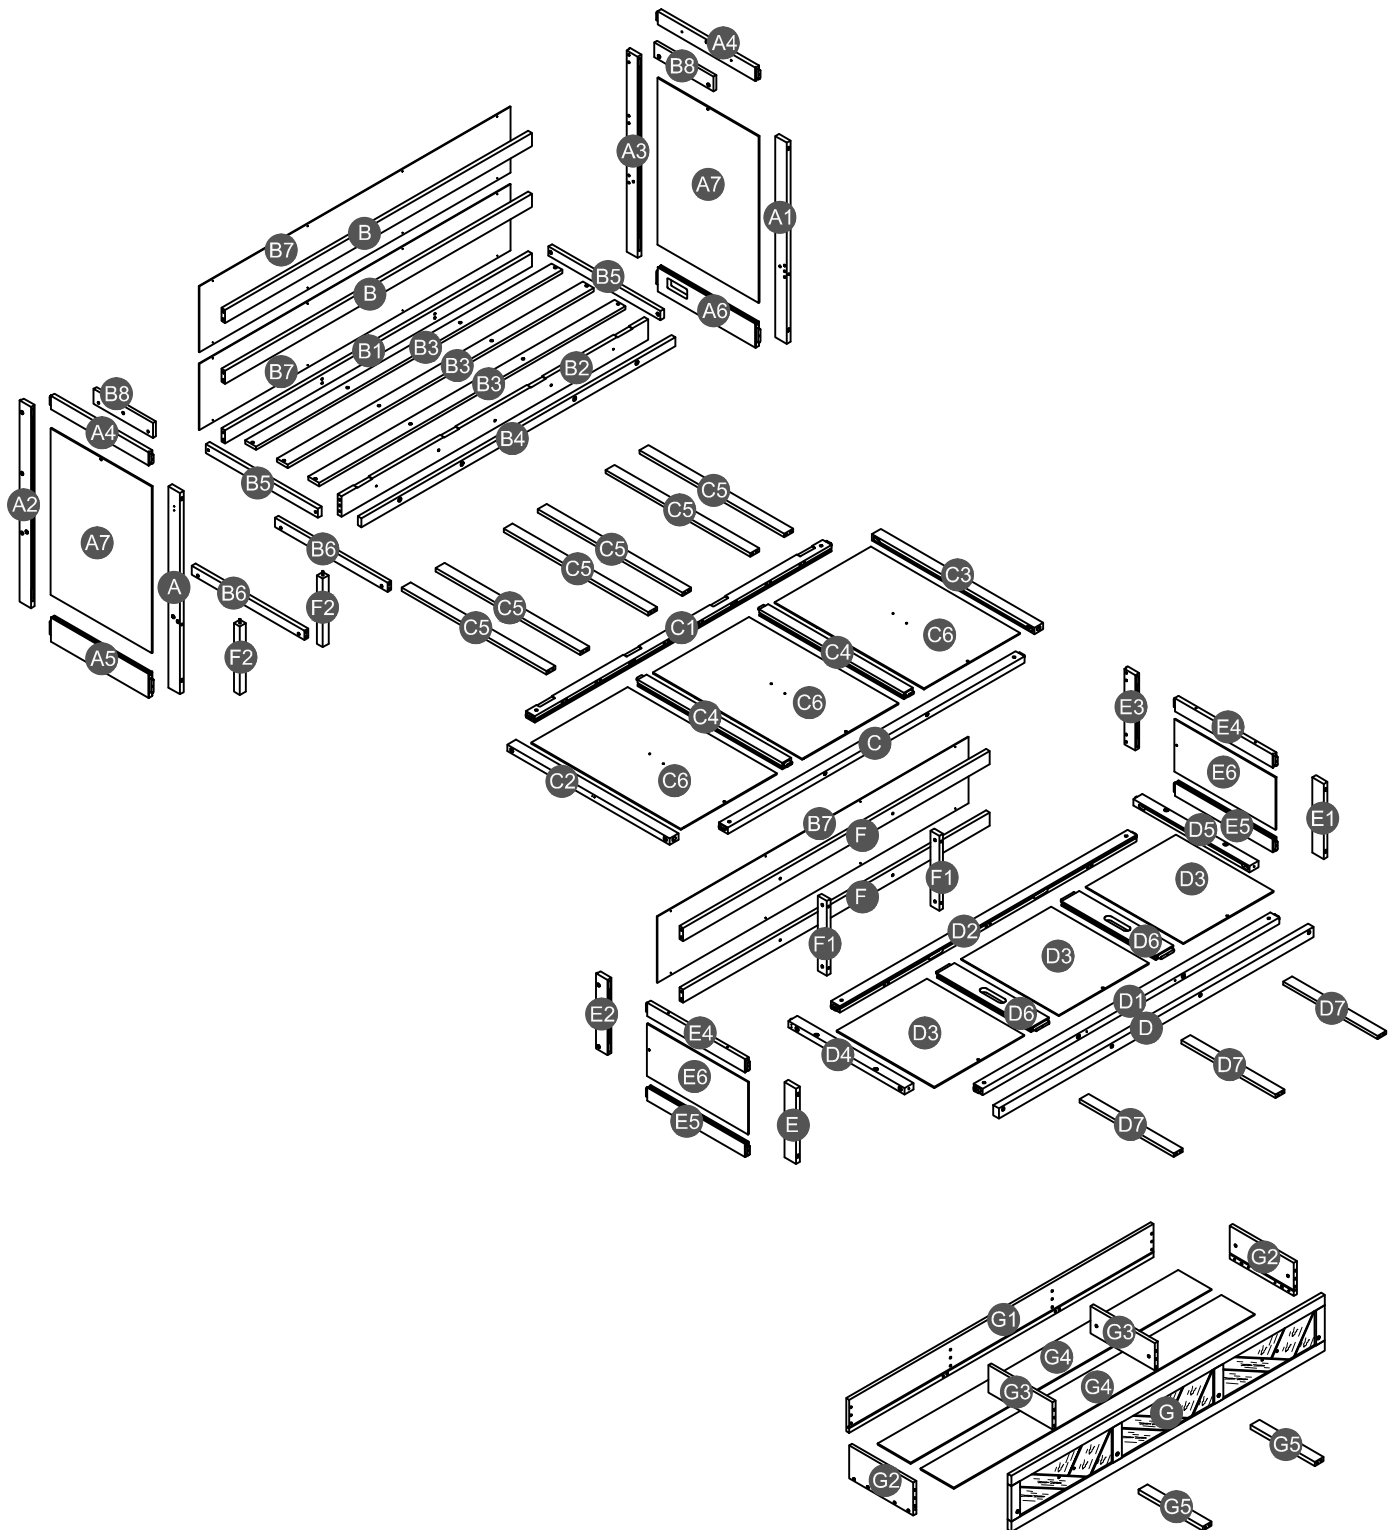


Part list (Box 1 - SA33844 (1-2))












A  Vertical bar HB (left front) -1pc	A1  Vertical bar HB (right front) -1pc	A2  Vertical bar HB (left back) -1pc
A3  Vertical bar HB (right back) -1pc	A4  Upper horizontal bar HB- 2pcs	A5  Lower horizontal bar HB (left) -1pc
A6  Lower horizontal bar HB (right) -1pc	B  Upper horizontal bar HB - 2pcs	B1  Lower horizontal bar HB -1pc
B2  Horizontal bar HB (front) - 1pc	B3  Slat - 3pcs	B4  Support HB (front) - 1pc
B5  Horizontal bar HB (left/right) - 2pcs	B6  Lower support slat - 2pcs	B7  Back panel HB/FB - 3pcs
C  Horizontal bar (front) - 1pc	C1  Horizontal bar (back) - 1pc	D  Support FB (front) - 1pc
D1  Horizontal bar FB (front) - 1pc	D2  Horizontal bar FB (back) - 1pc	D6  Divider horizontal bar FB - 2pcs
E  Vertical bar FB (left front) -1pc	E1  Vertical bar FB (right front) -1pc	E2  Vertical bar FB (left back) -1pc
E3  Vertical bar FB (right back) -1pc	E4  Upper horizontal bar FB- 2pcs	E5  Lower horizontal bar FB - 2pcs
F  Upper horizontal bar FB - 2pcs	F1  Vertical bar support FB -2pcs	G  Front drawer panel - 1pc

G1  Back drawer panel - 1pc	G2  Left / right drawer panel - 2pcs	G3  Divider drawer panel - 2pcs
G4  Drawer bottom - 2pcs	G5  Support drawer - 2pcs	

Part list & Hardware list (Box 2 - SA33844 (2-2))

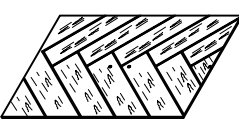A7  Side panel HB - 2pcs	B8  Support HB - 2pcs	C2  Horizontal bar (left) - 1pc
C3  Horizontal bar (right) - 1pc	C4  Horizontal bar - 2pcs	C5  Horizontal bar support - 6pcs
C6  Side panel - 3pcs	D3  Side panel FB - 3pcs	D4  Horizontal bar FB (left) - 1pc
D5  Horizontal bar FB (right) - 1pc	D7  Horizontal bar support - 3pcs	E6  Side panel FB - 2pcs
F2  Leg support - 2pcs		

Hardware List (Box 2 - SA33844 (2-2))

1  $\varnothing 10 \times 20 \text{mm}$ Wood dowel (6pcs)	2  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (81pcs)	3  $(\varnothing 15) 1/4 \times 80 \text{mm}$ Hex-Head bolts (10pcs)
4  $(\varnothing 12) 1/4 \times 60 \text{mm}$ Hex-Head bolts (26pcs)	5  $(\varnothing 12) 1/4 \times 35 \text{mm}$ Hex-Head bolts (4pcs)	6  $(\varnothing 12) 1/4 \times 65 \text{mm}$ Hex-Head bolts (24pcs)
7  $(\varnothing 12) 1/4 \times 40 \text{mm}$ Hex-Head bolts (8pcs)	8  $(\varnothing 12) 1/4 \times 30 \text{mm}$ Hex-Head bolts (6pcs)	9  $1/4 \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (36pcs)
10  $\varnothing 4 \times 30 \text{mm}$ Wood screws (20pcs)	11  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (26pcs)	12  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (28pcs)
13  $\varnothing 3.5 \times 19 \text{mm}$ Wood screws (36pcs)	14  $100 \times 52 \times 20 \text{mm}$ Wheels (4pcs)	15  $45 \times 20 \times 33 \text{mm}$ Wheels (2pcs)
16  $125 \times 47 \times 43 \text{mm}$ Power outlet (1pc)	17  $76 \times 42 \times 2 \text{mm}$ Hinger (4pcs)	18  $60 \times 28 \times 15 \text{mm}$ Metal bracket (4sets)
19  $125 \times 33 \times 10 \text{mm}$ Handle (6pcs)	20  $5/32 \times 10 \text{mm}$ Ph zinc(Knob) (12pcs)	21  $(1/4) 4.5 \times 58 \text{mm}$ Allen key (1pc)
22  $21 \times 17 \times 17 \times 2 \text{mm}$ Metal bracket (4pcs)	23  $\varnothing 9 \times 32 \text{mm}$ Plastic anchor (2pcs)	24  $58 \times 16 \times 16 \times (1.5 \text{mm})$ Metal bracket (2pcs)
25  $\varnothing 4 \times 38 \text{mm}$ Wood screws (2pcs)	ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)  (Phillip head screwdriver)  PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !	


STEP 1:

TYPE 1

6



8PCS

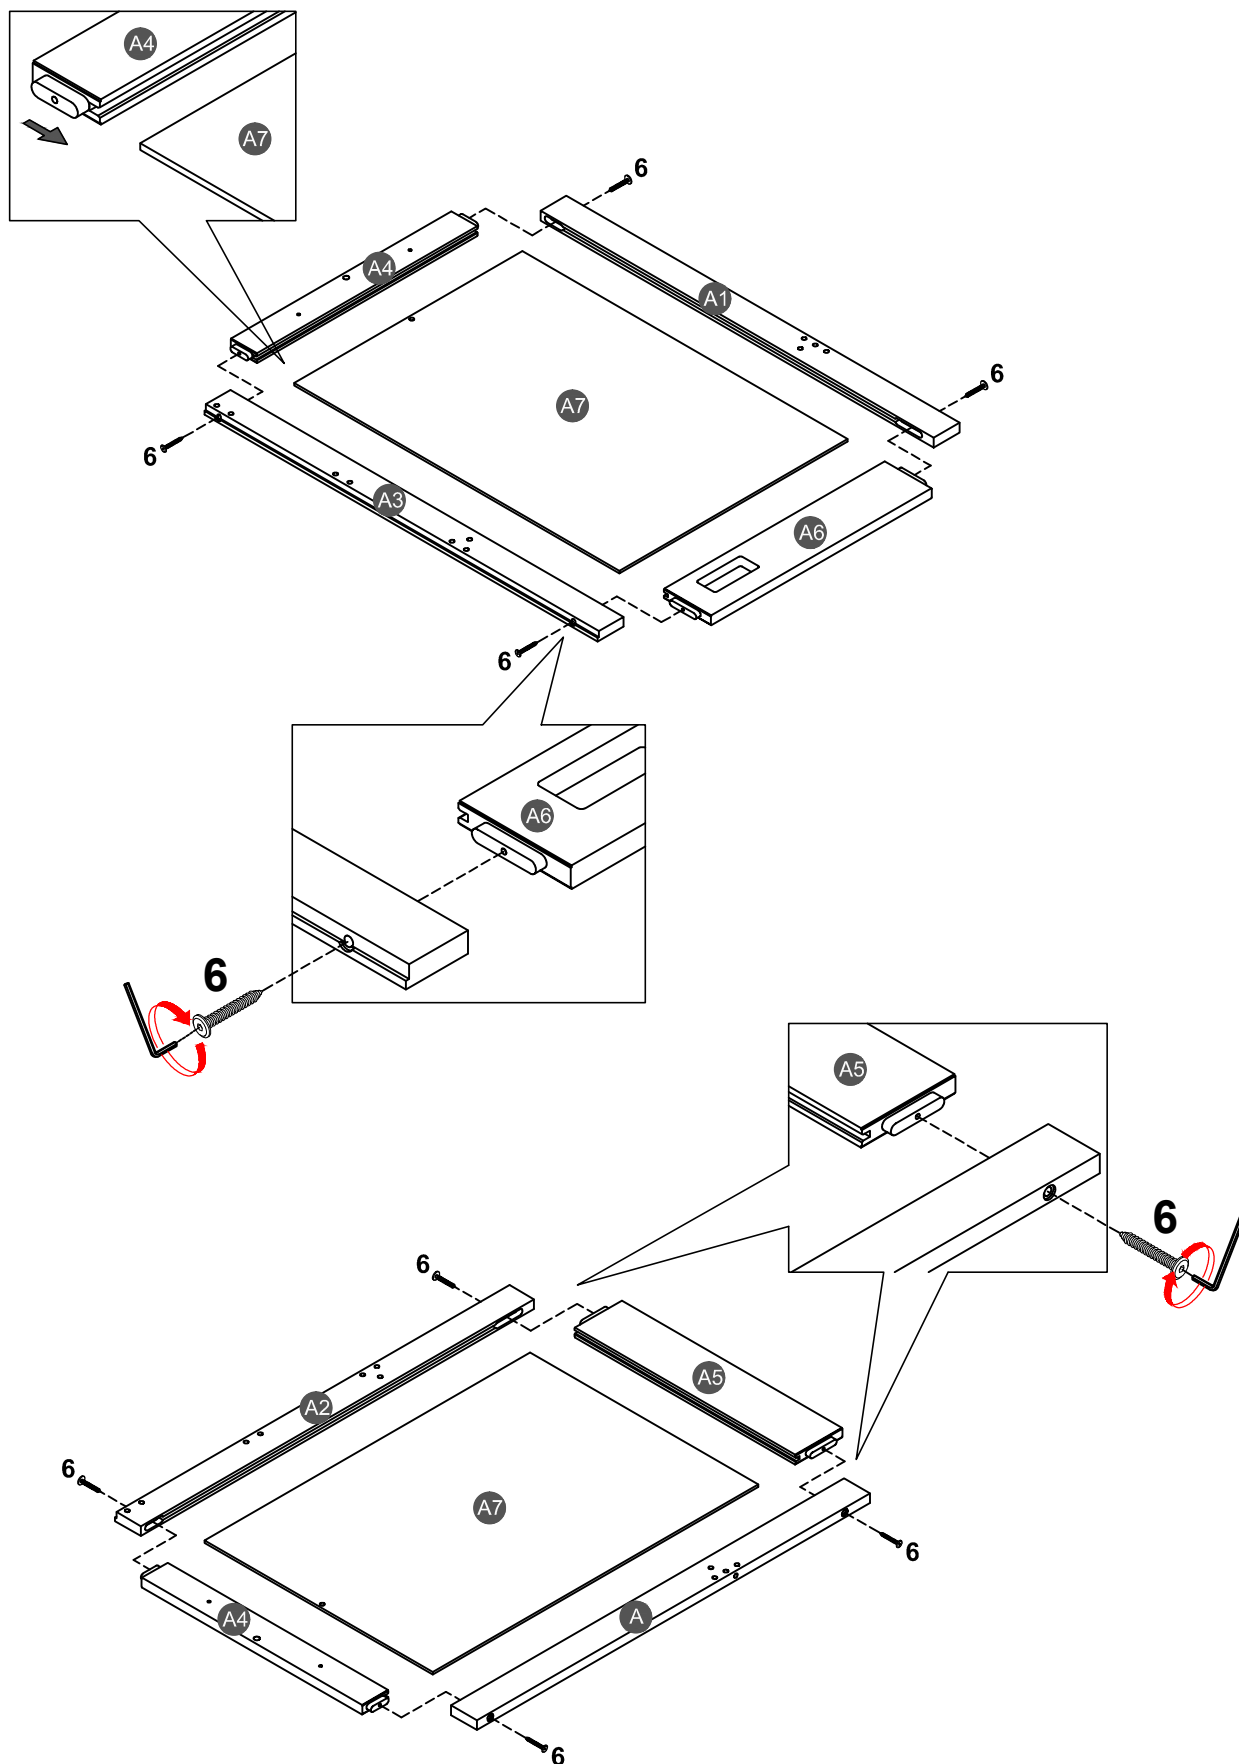


STEP 2:

TYPE 1

5



4PCS

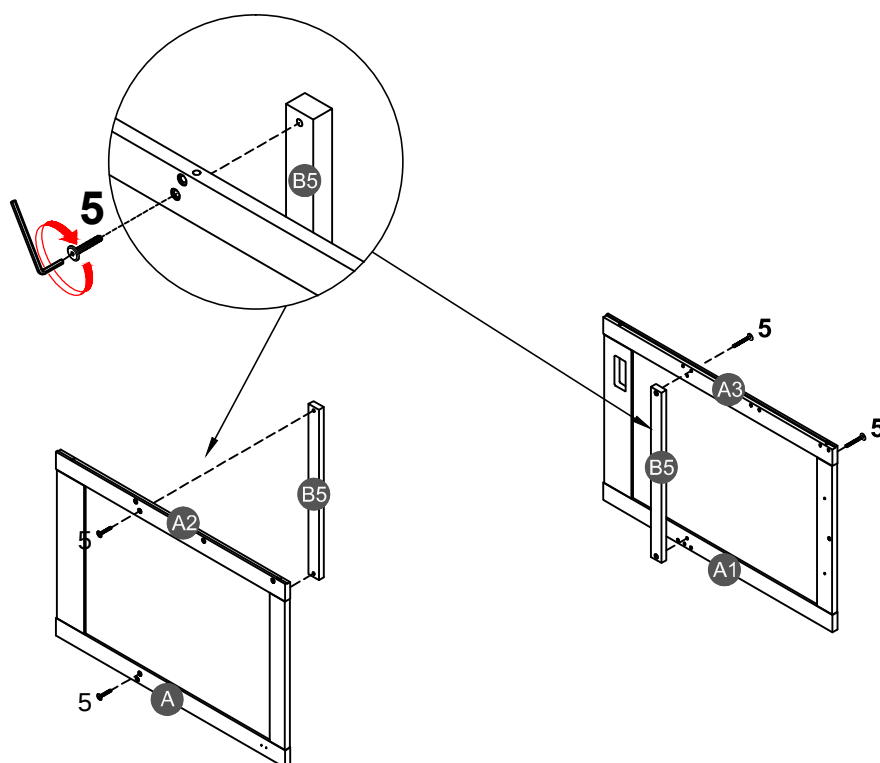

STEP 3:

TYPE 1

2



2PCS

4




2PCS

9




2PCS

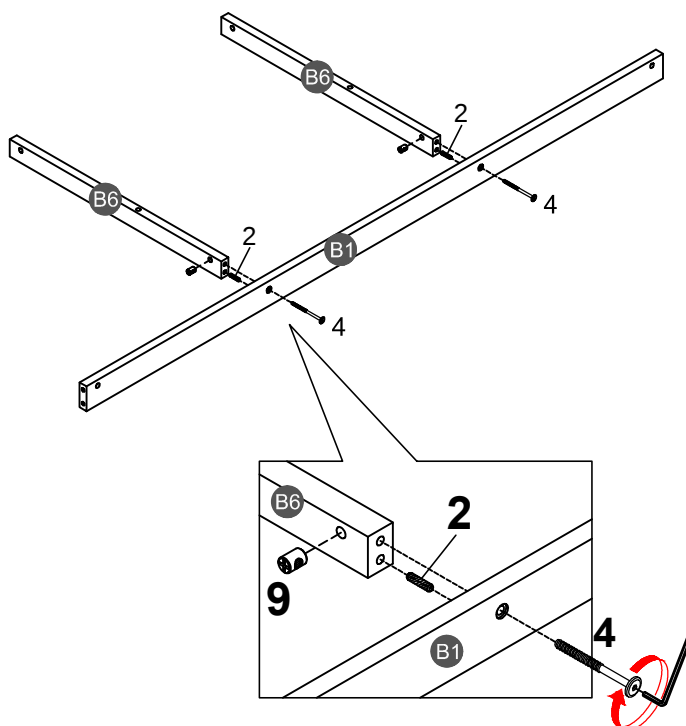


STEP 4:

TYPE 1

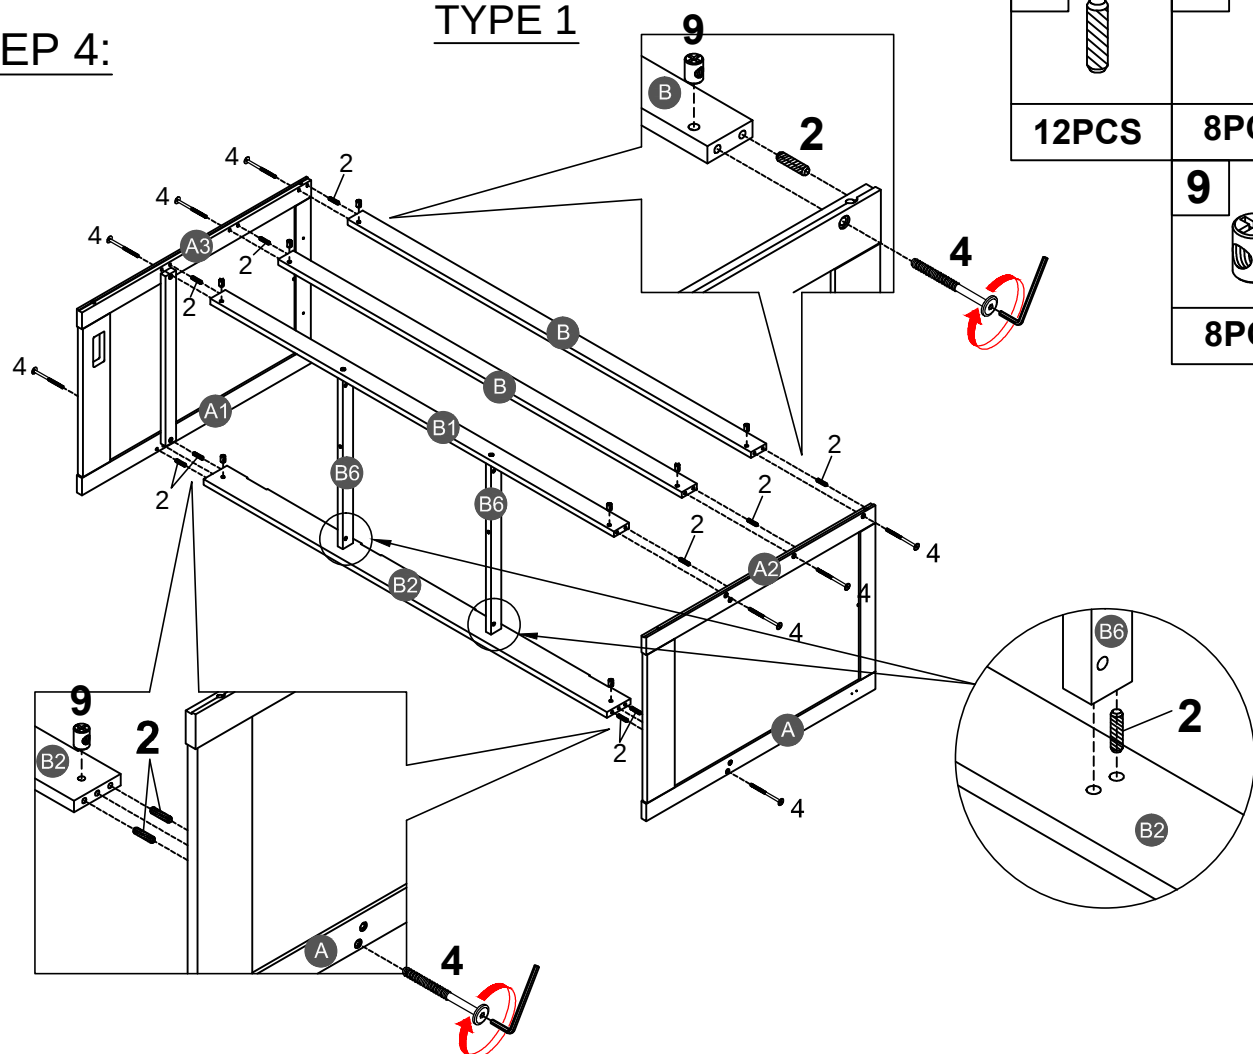


STEP 5:

TYPE 1

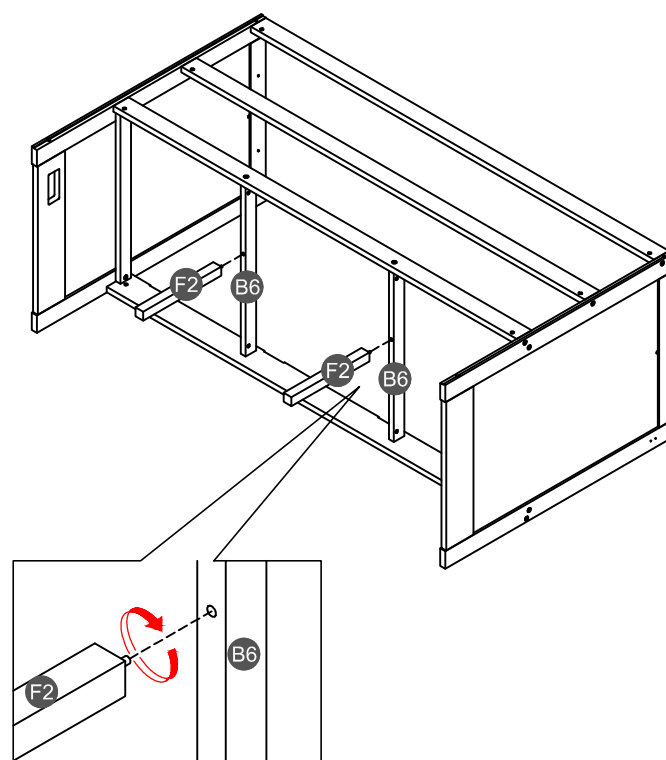

STEP 6:


TYPE 1

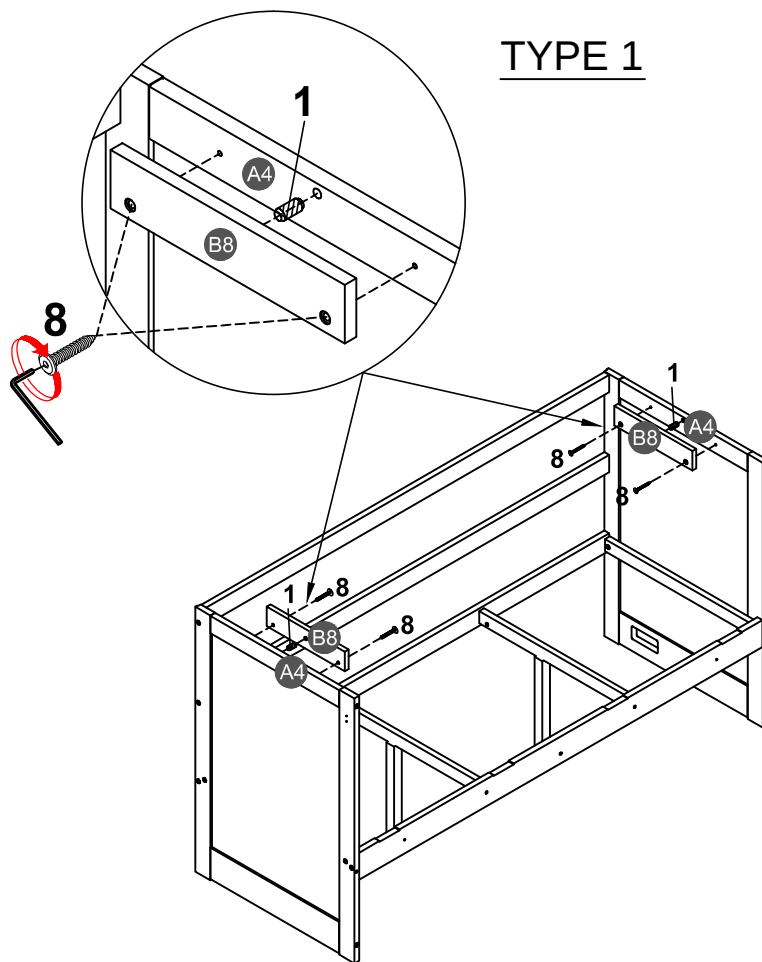

1	8
2PCS	4PCS

STEP 7:


TYPE 1

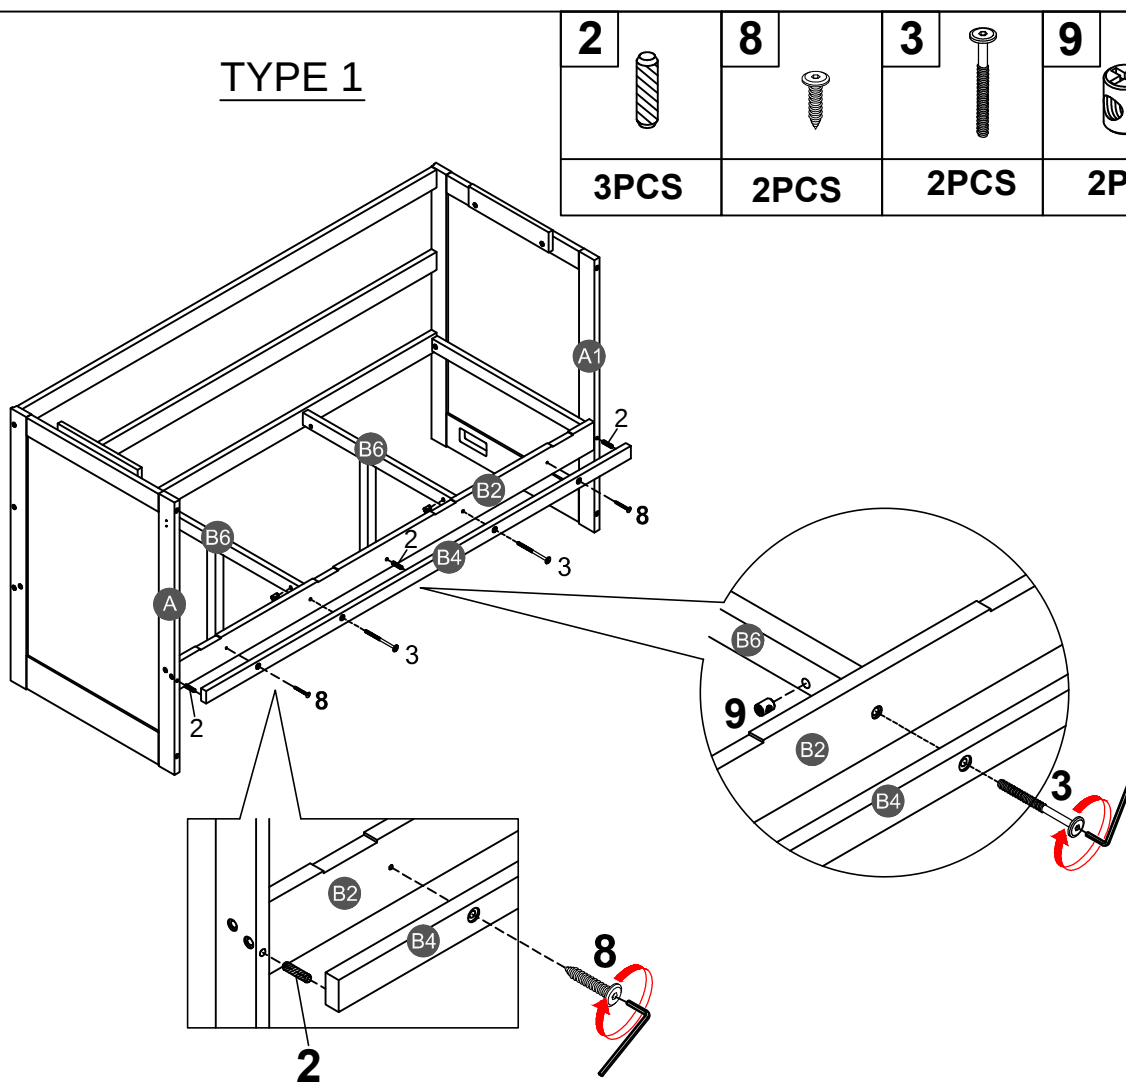

2	8	3	9
3PCS	2PCS	2PCS	2PCS

STEP 8:


TYPE 1

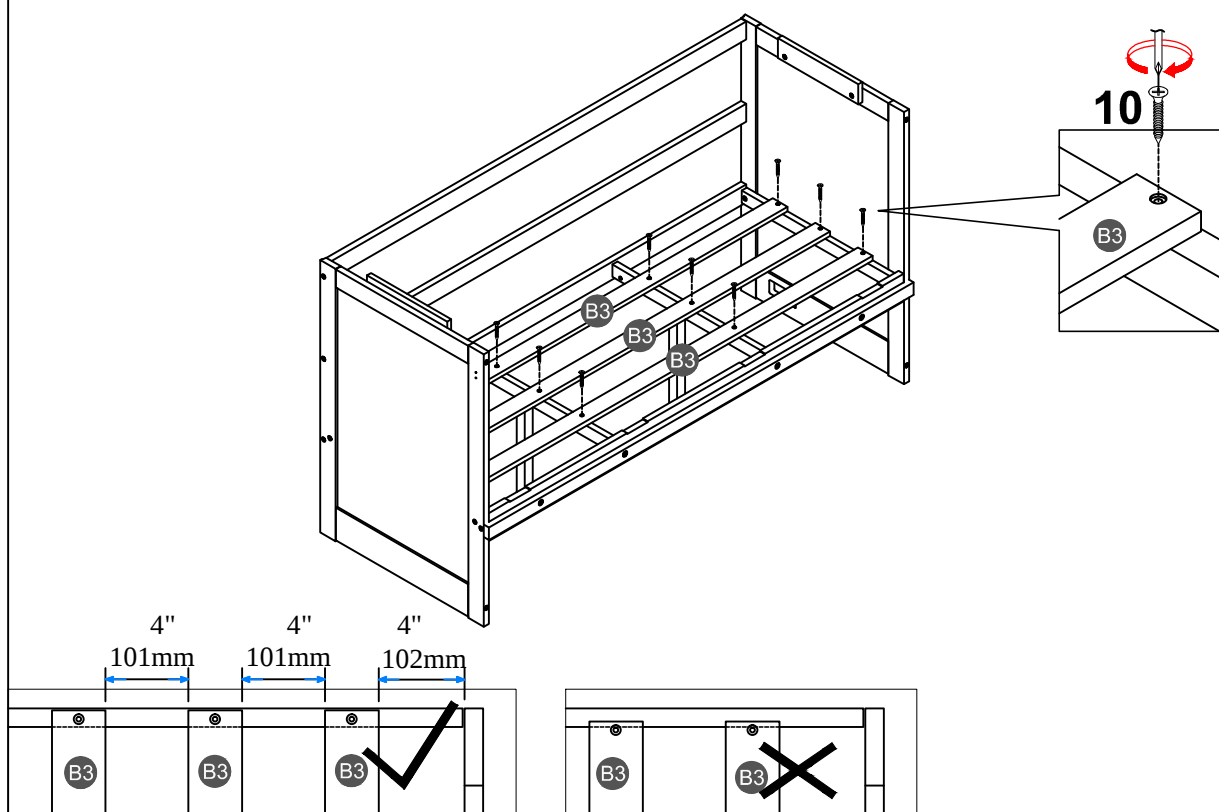10**12PCS**

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.


STEP 9:


TYPE 1

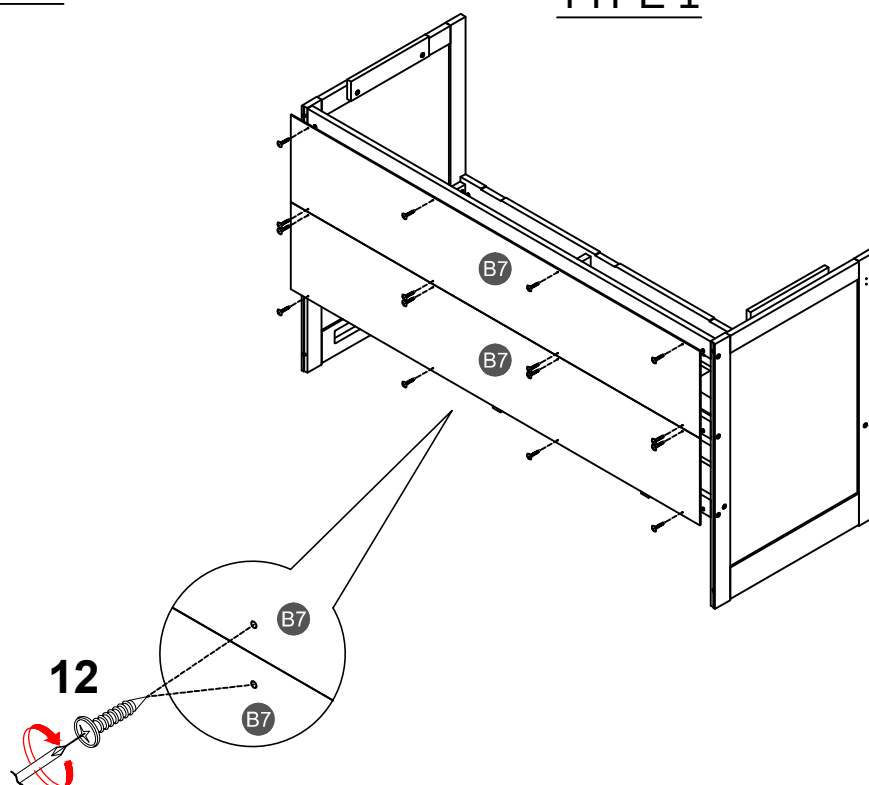12**16PCS**

STEP 10:


TYPE 1

11	16	18
		
6PCS	1PC	2PCS

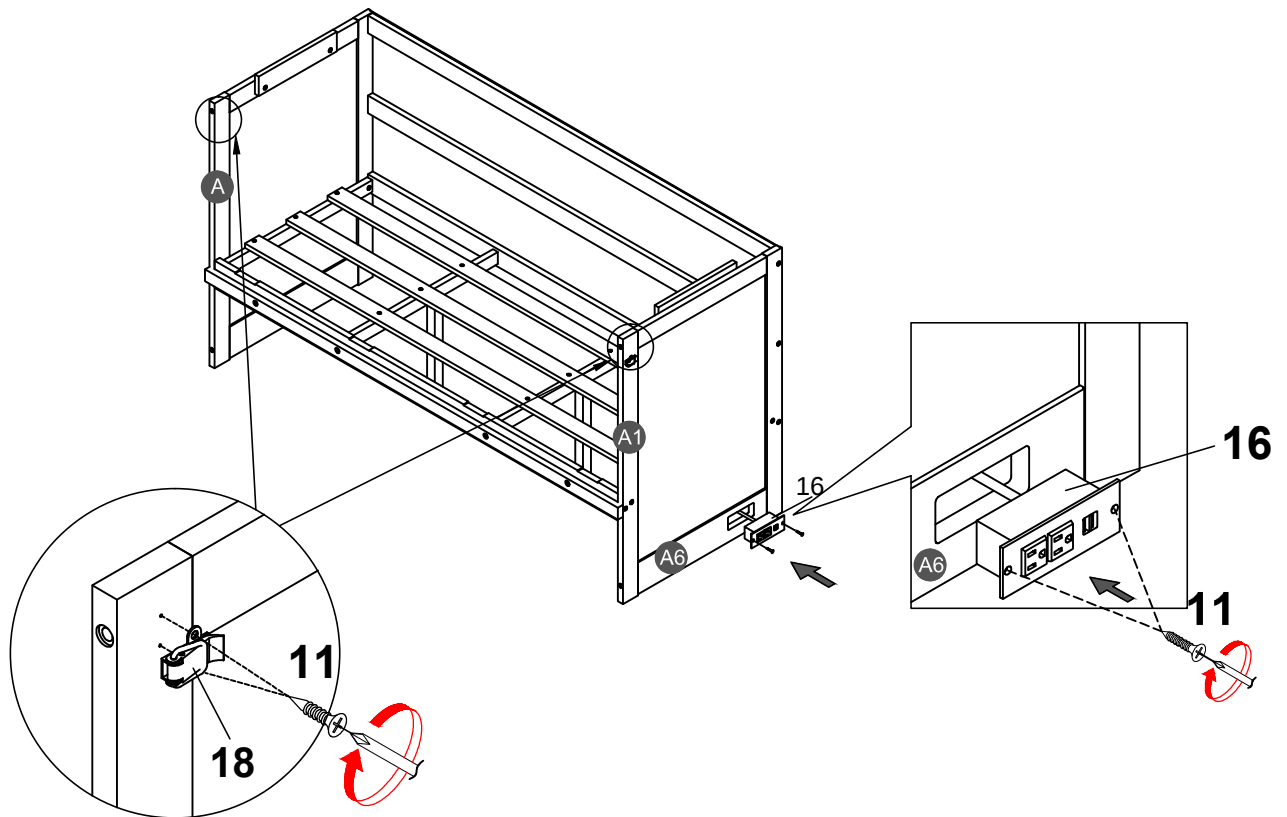

STEP 11:


TYPE 1

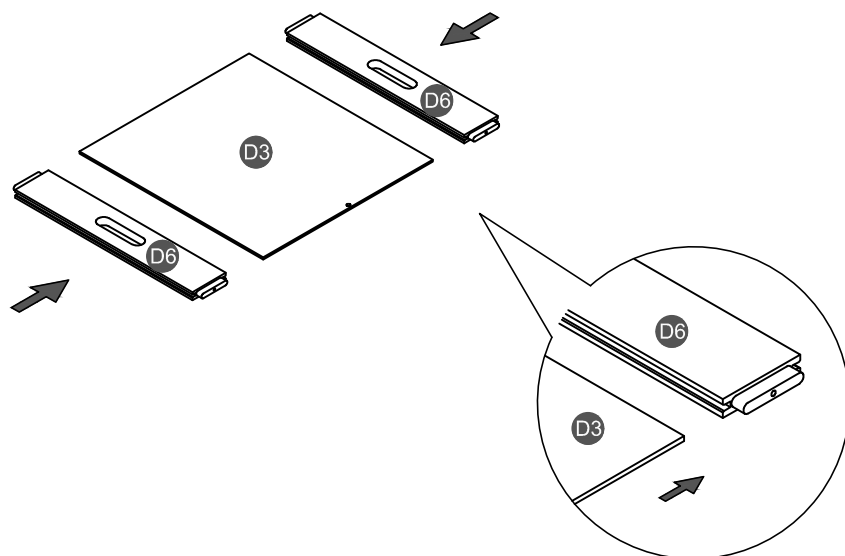

STEP 12:


TYPE 1

2		6	
12PCS		4PCS	

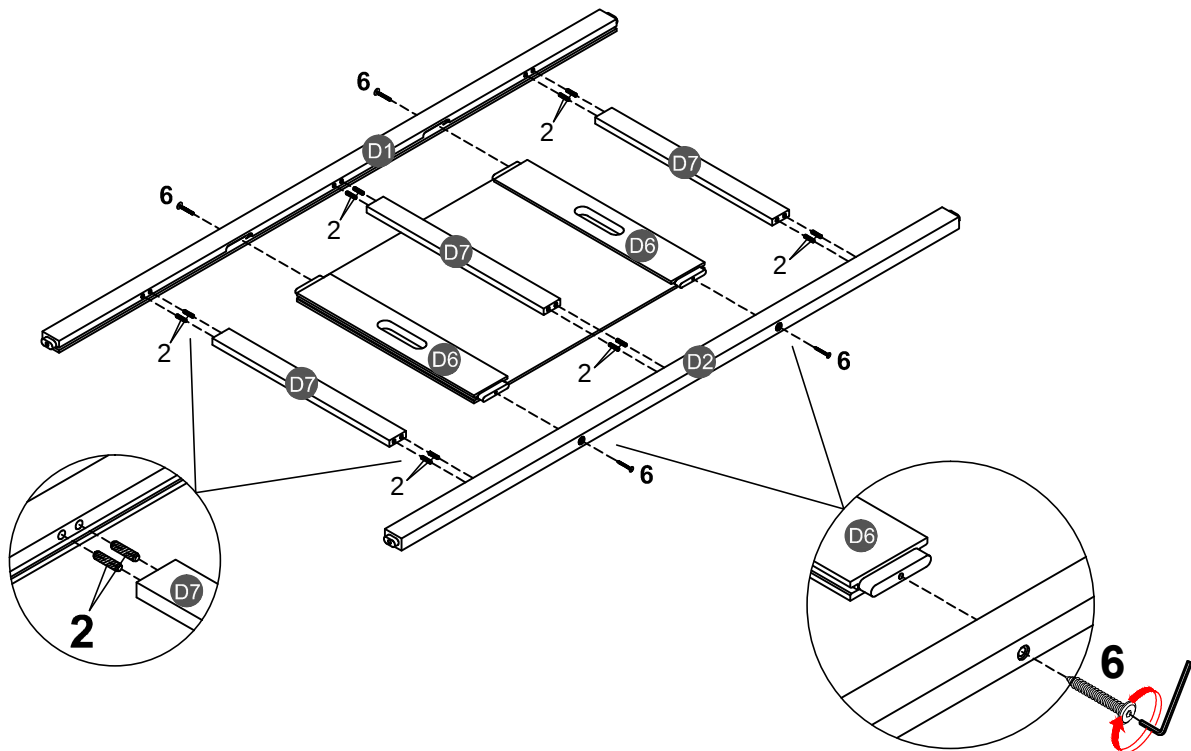

STEP 13:



TYPE 1

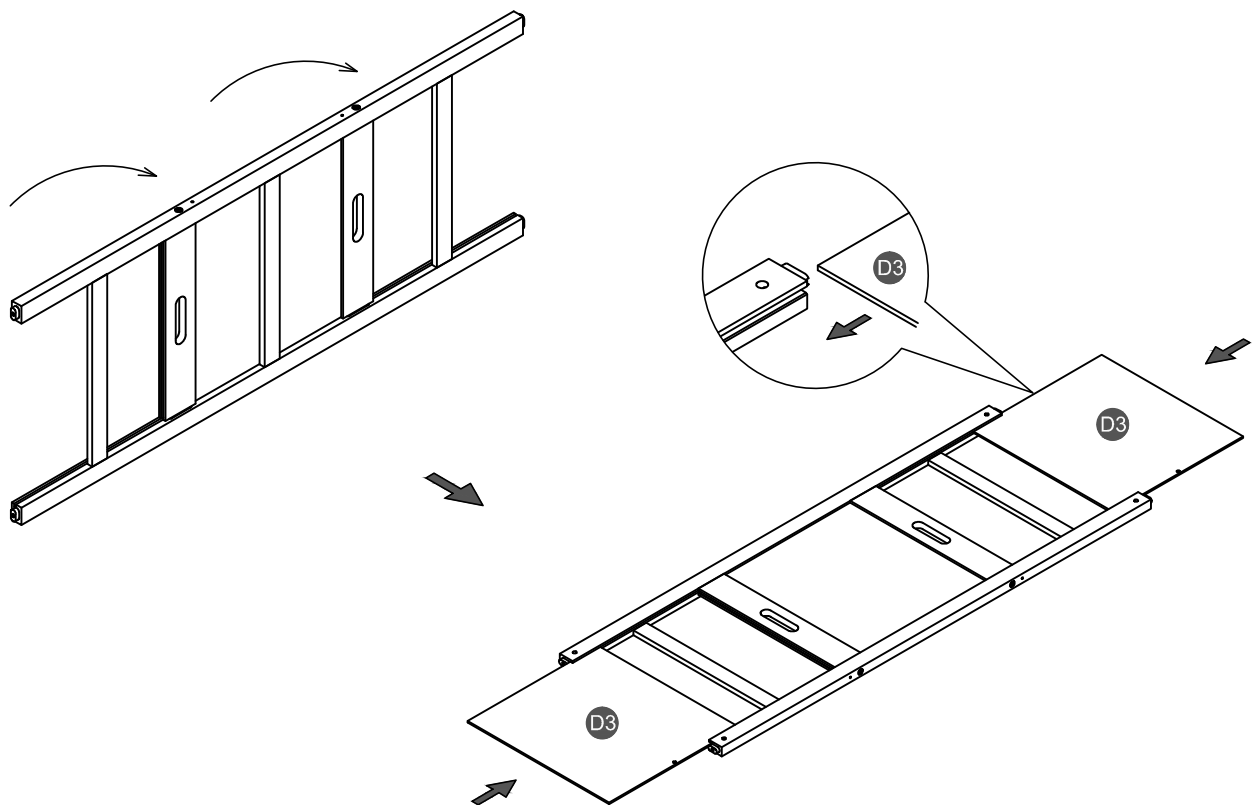

STEP 14:

TYPE 1

3		9	
4PCS		4PCS	

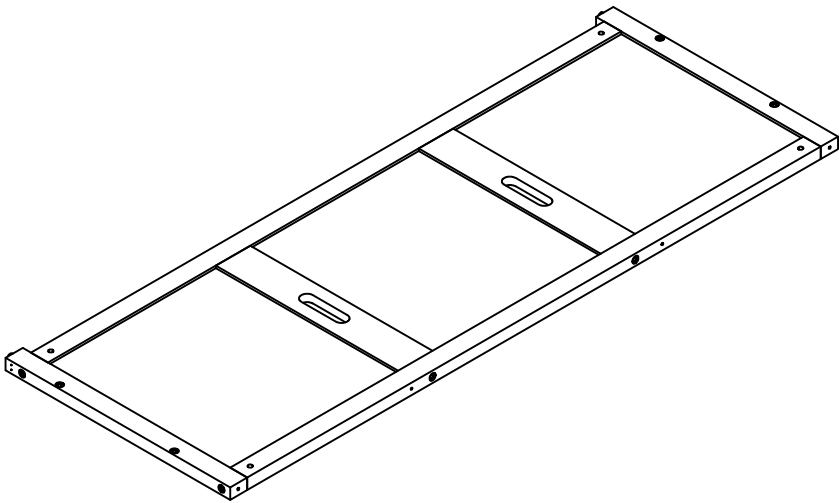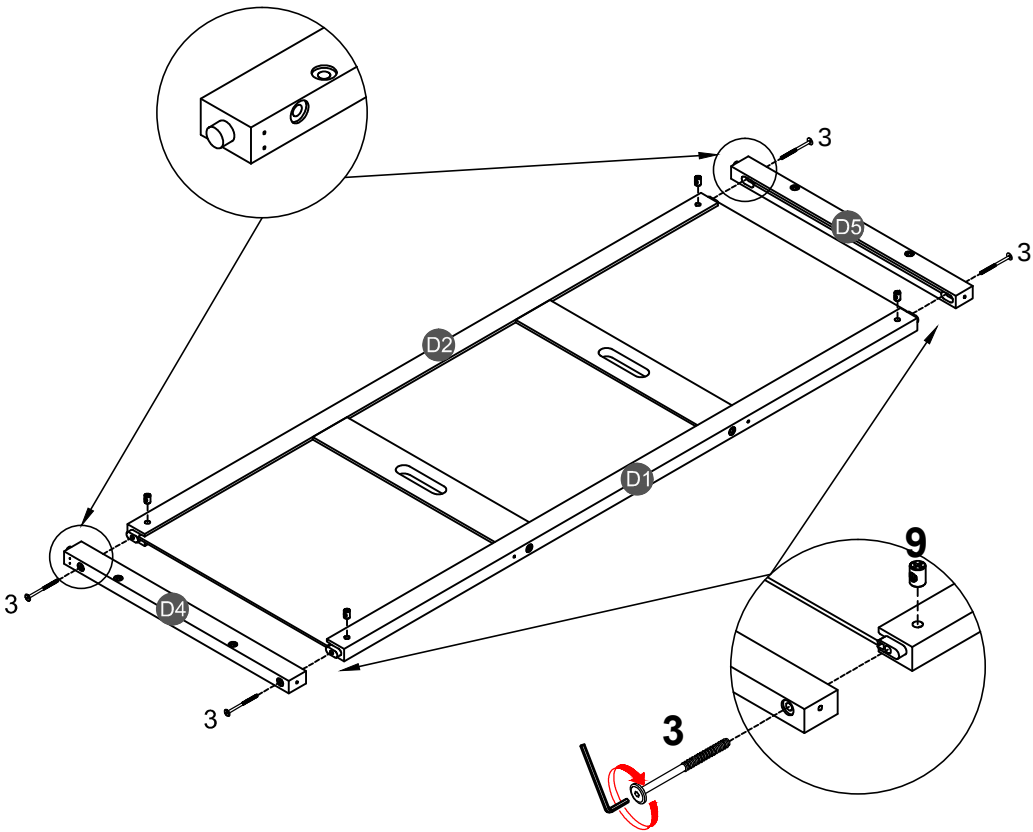


STEP 15:

TYPE 1

6



8PCS

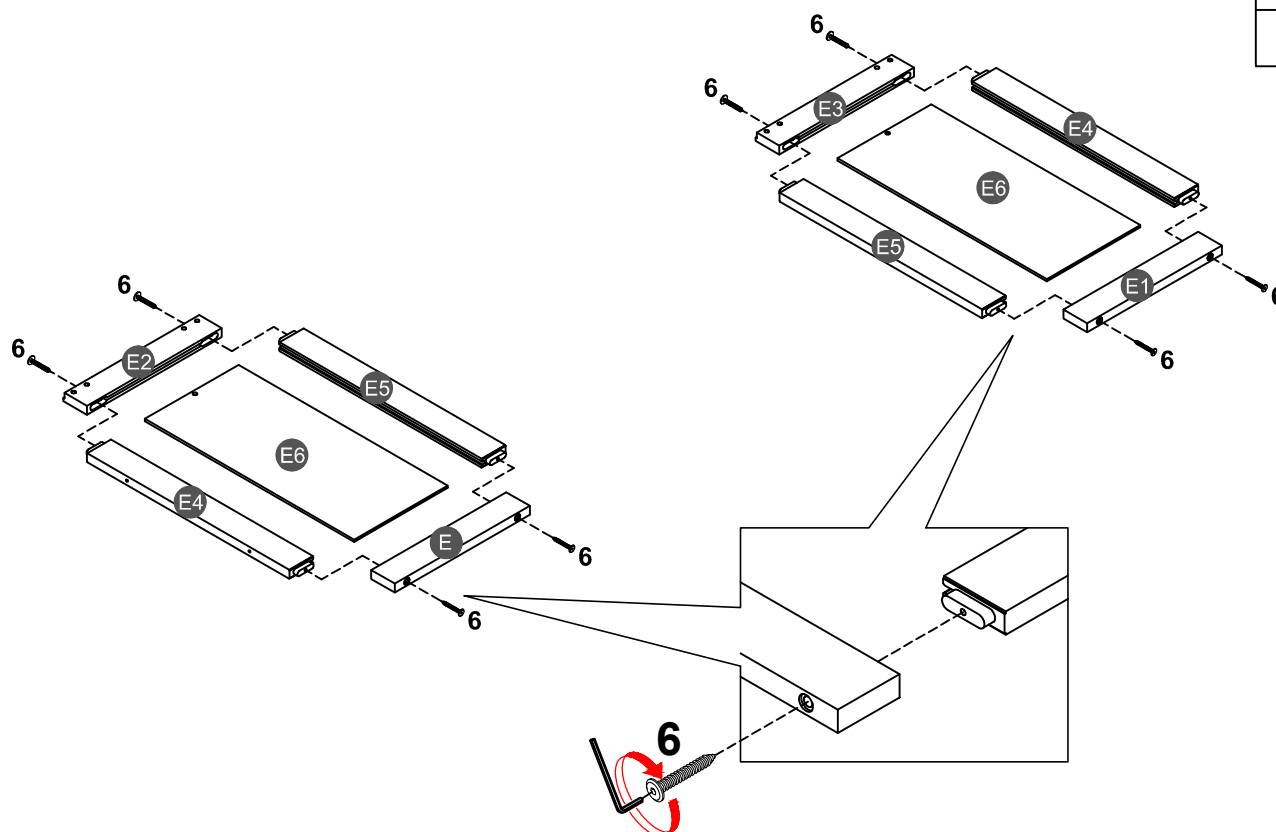

STEP 16:

TYPE 1

2



4PCS

4




4PCS

9




4PCS

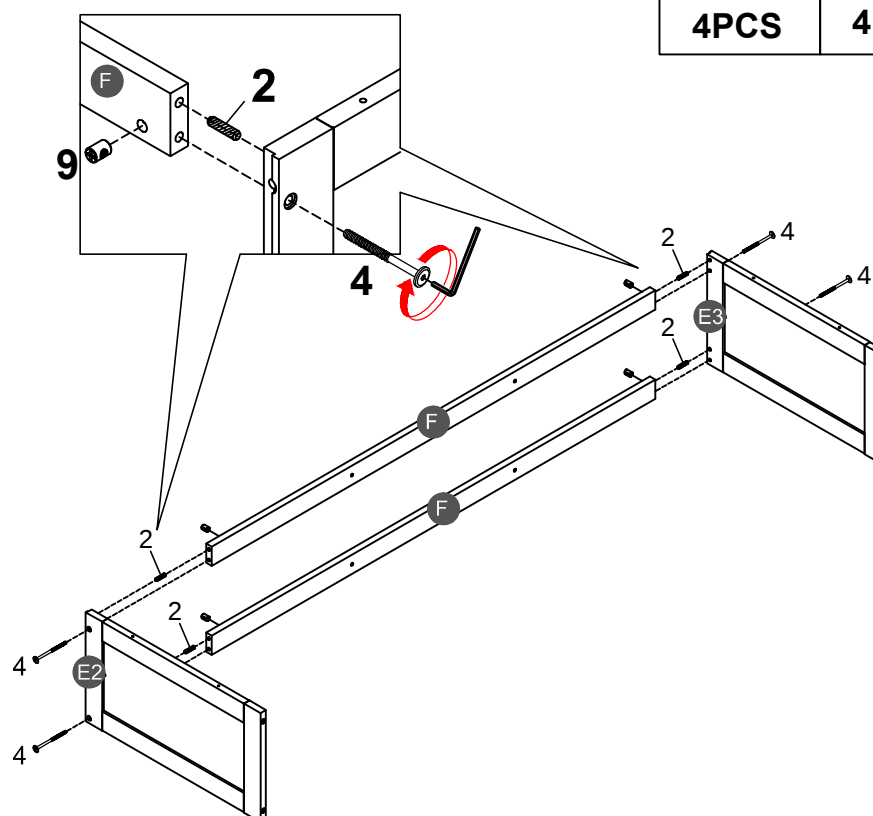

STEP 17:

TYPE 1


4		9	
4PCS		4PCS	

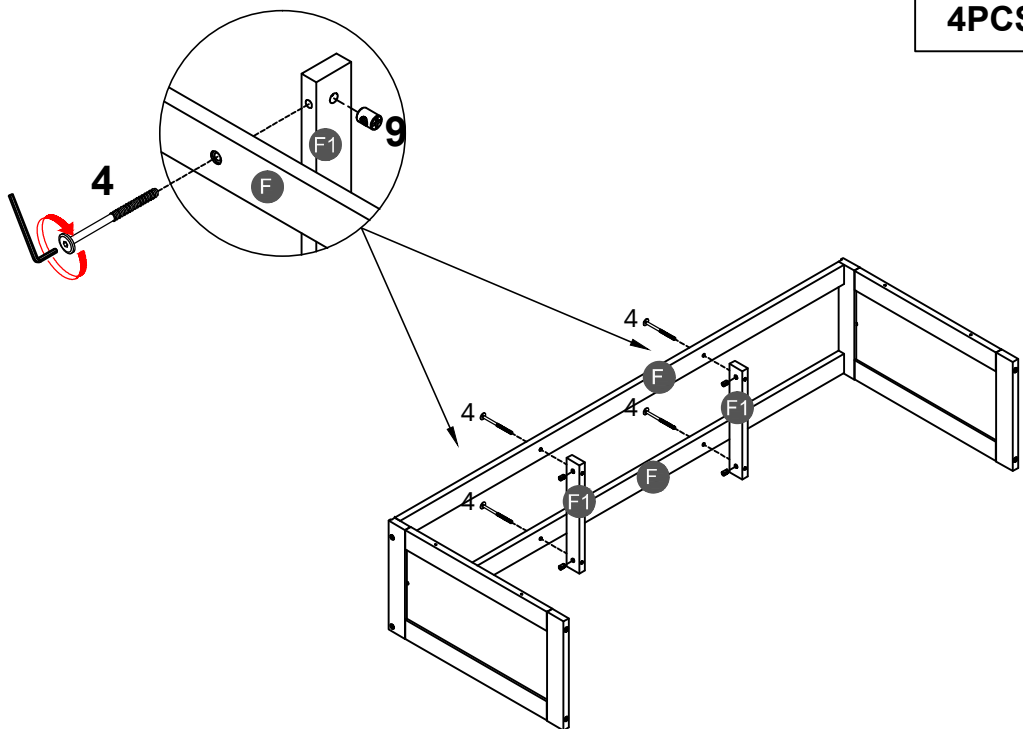

STEP 18:

TYPE 1

7	
4PCS	

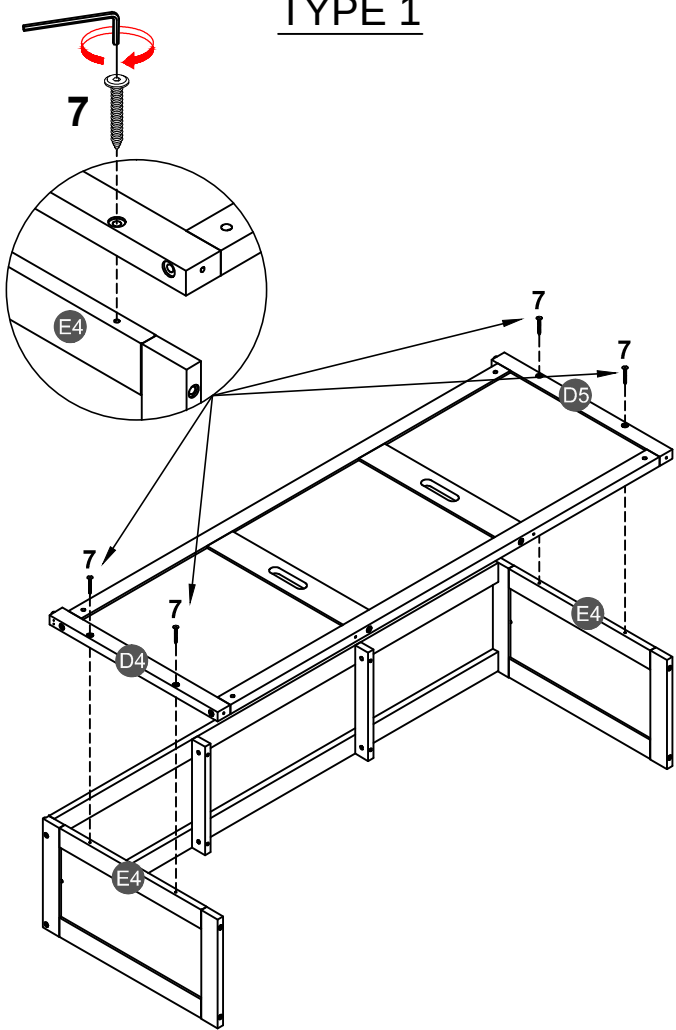


STEP 19:

TYPE 1

7



4PCS

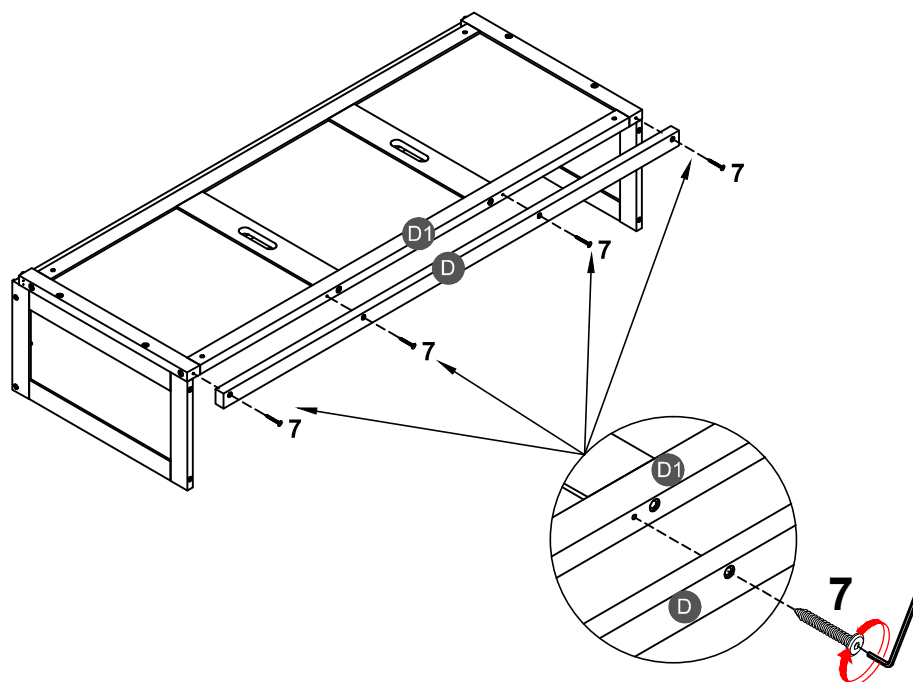


STEP 20:

TYPE 1

12




8PCS

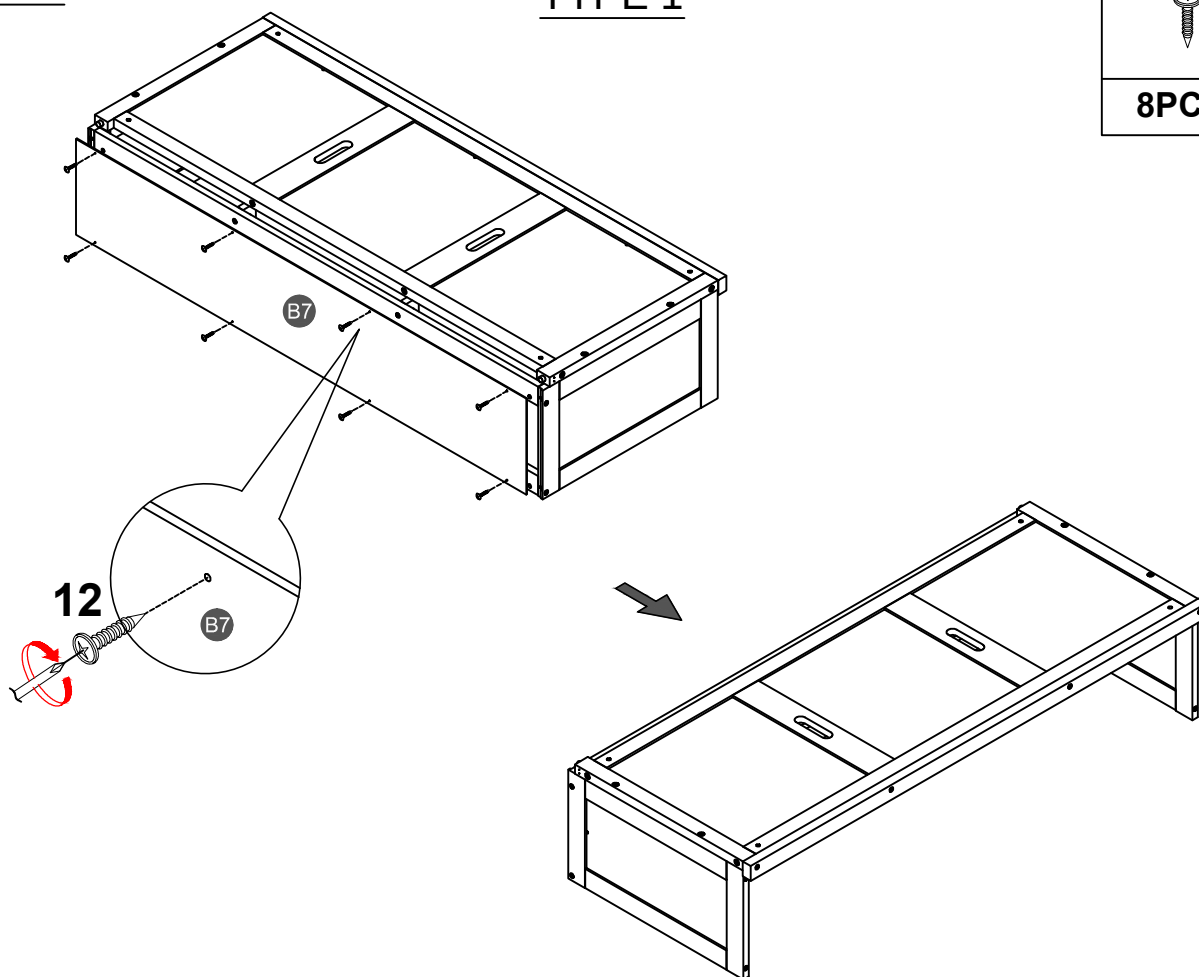

STEP 21:


TYPE 1

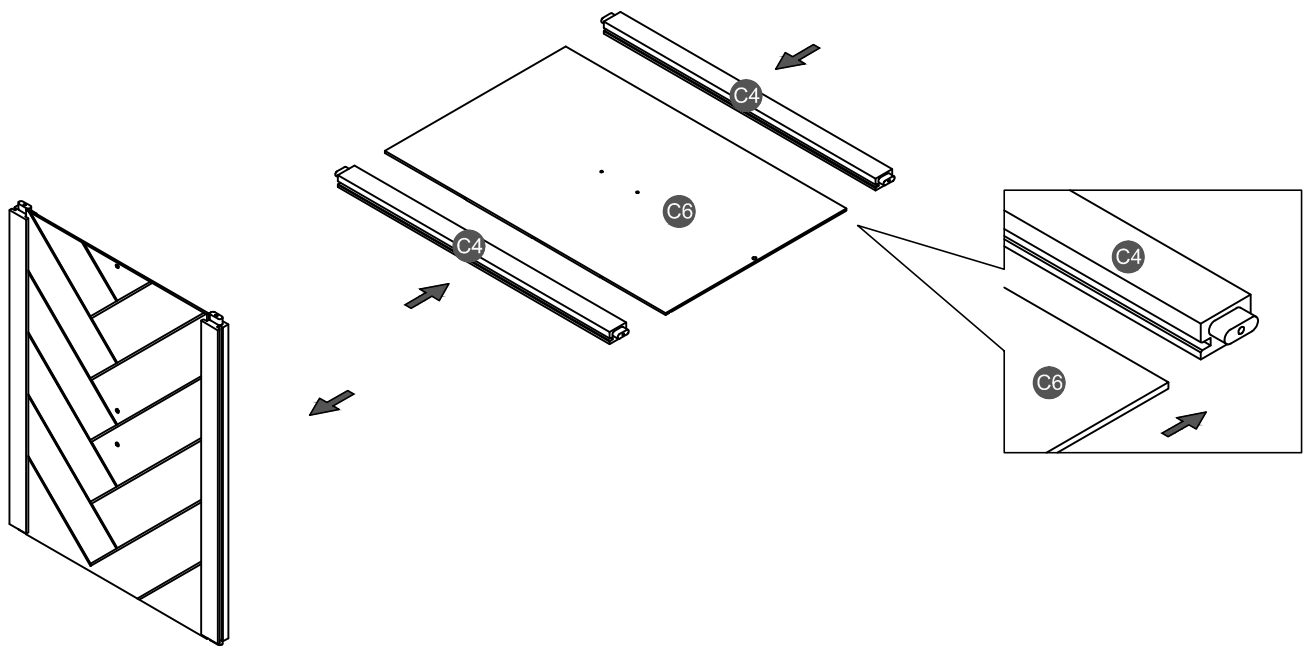

STEP 22:


TYPE 1

2		6	
24PCS		4PCS	

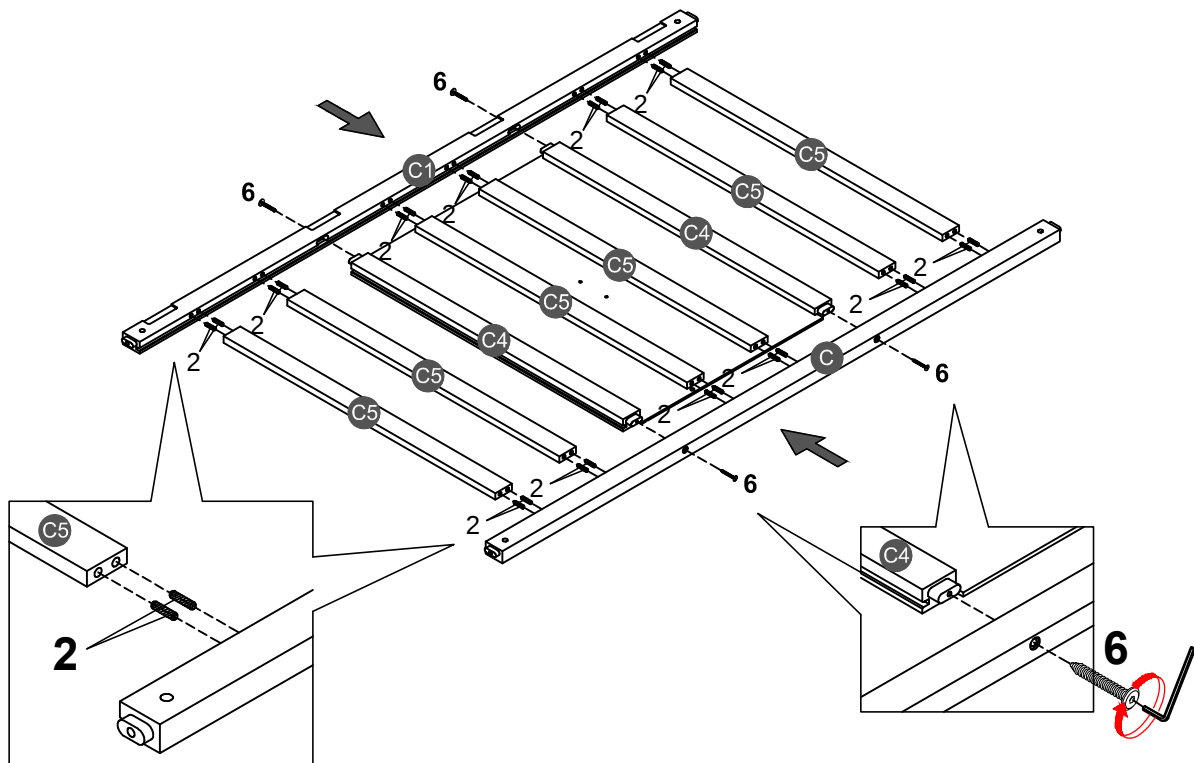


STEP 23:

TYPE 1

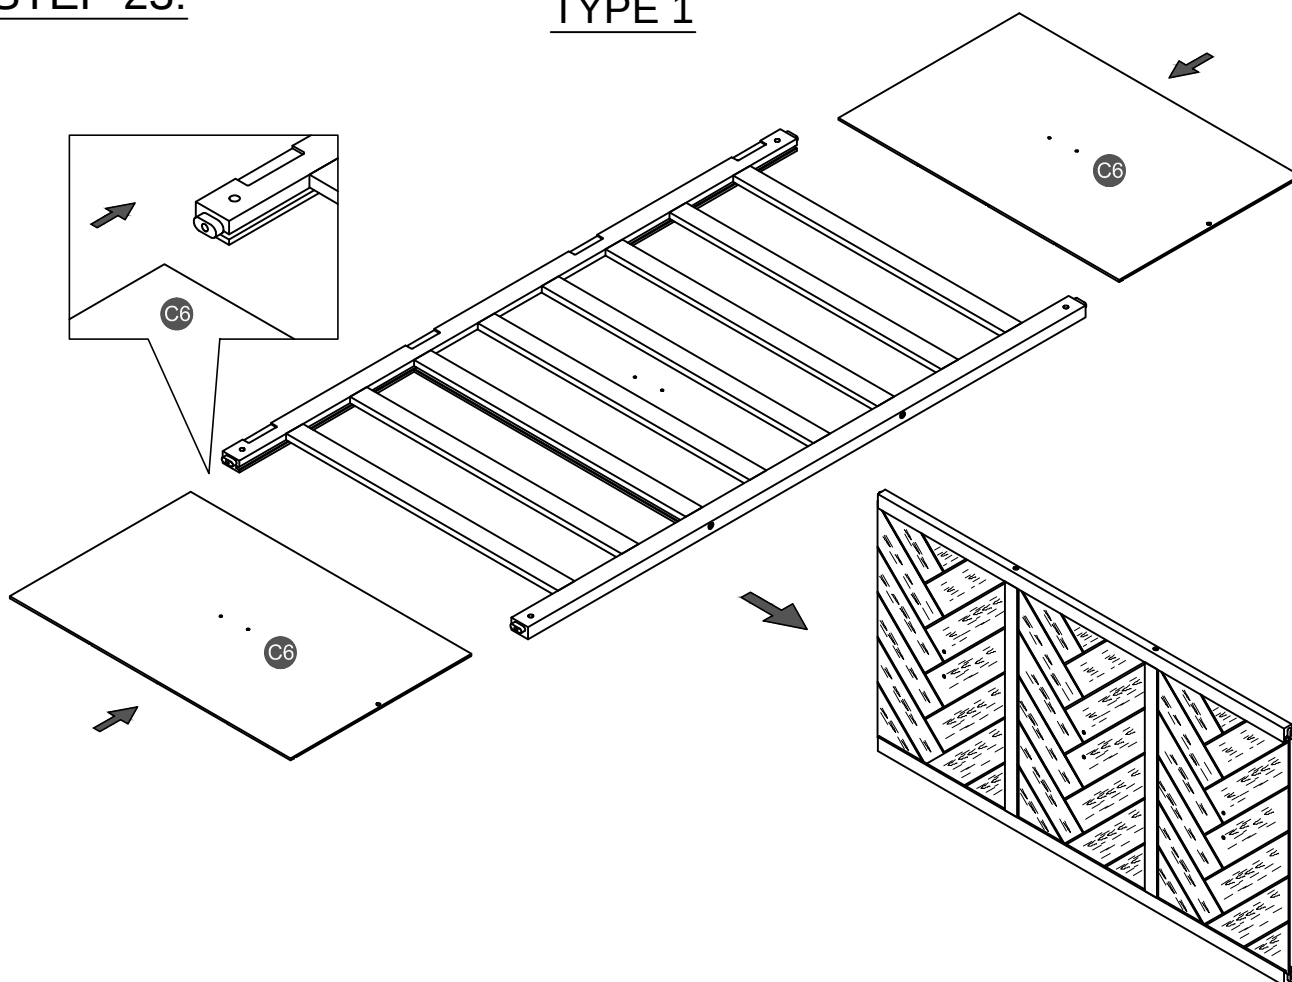


STEP 24:


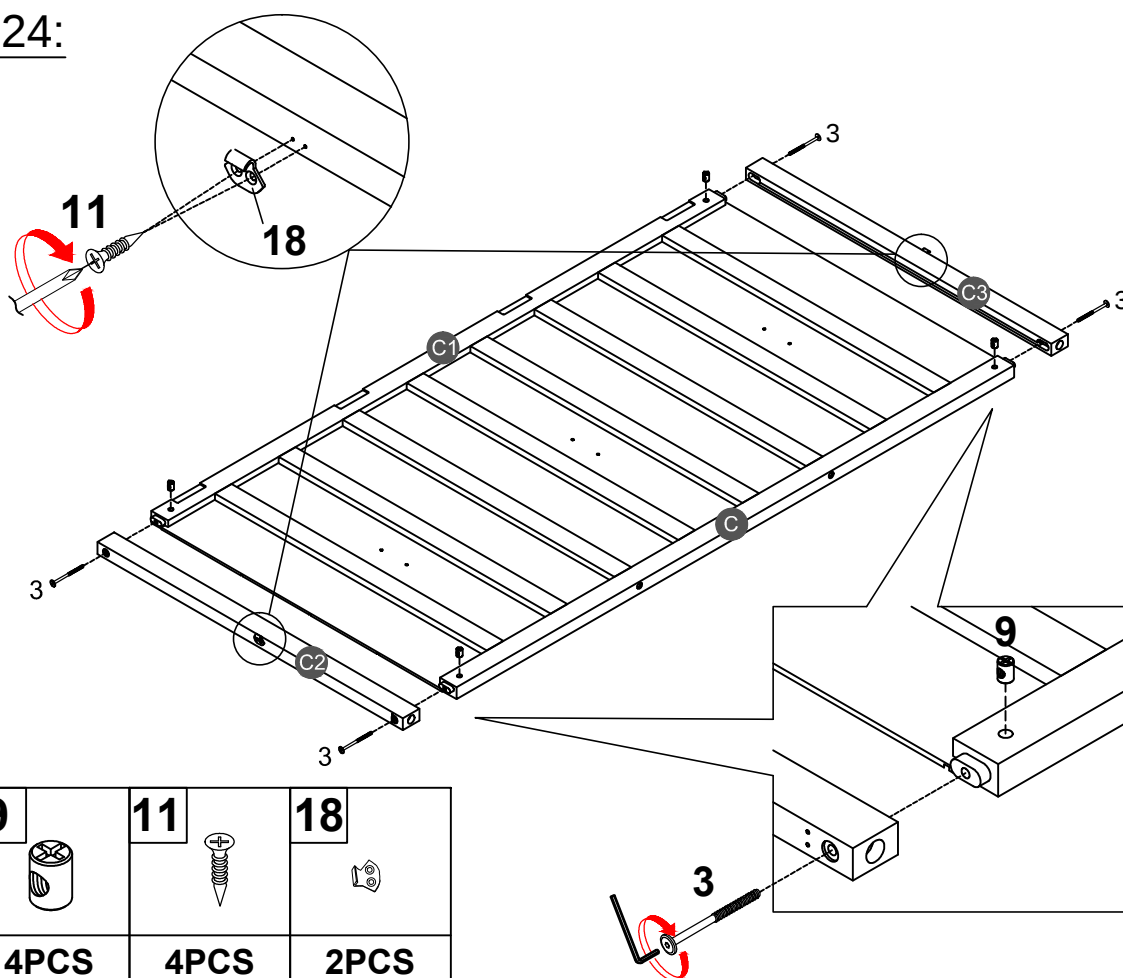


3	9	11	18
			
4PCS	4PCS	4PCS	2PCS

STEP 25:


TYPE 1

19	20
	
3PCS	6PCS

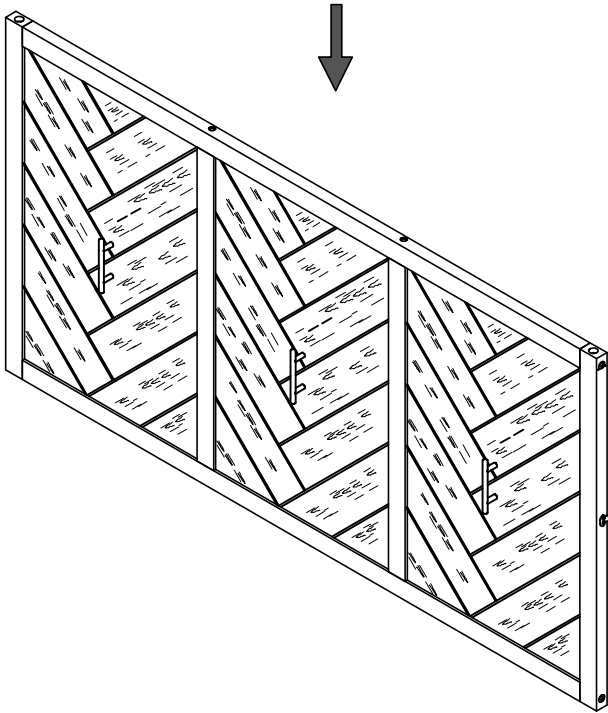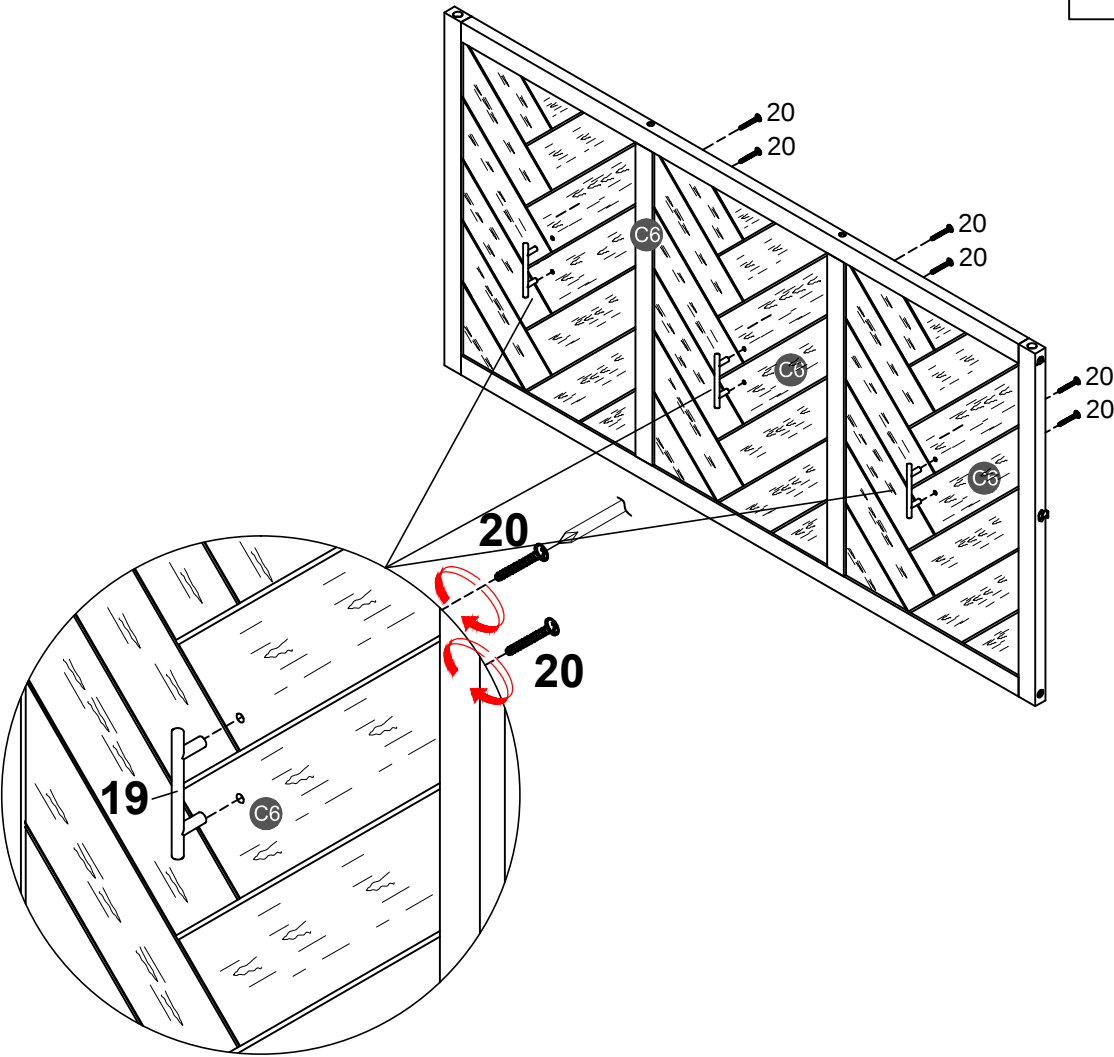


STEP 26:



TYPE 1

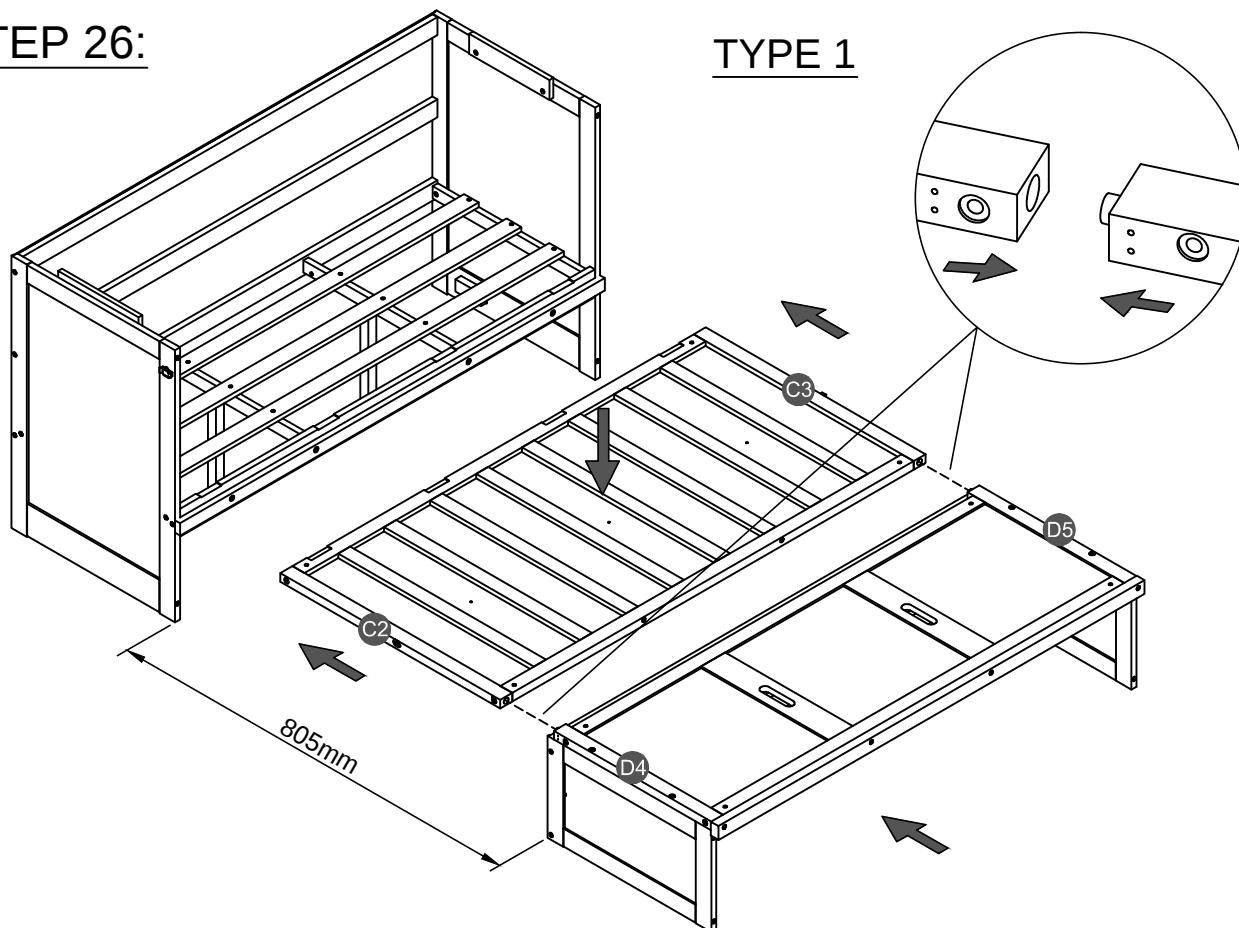

STEP 27:


TYPE 1

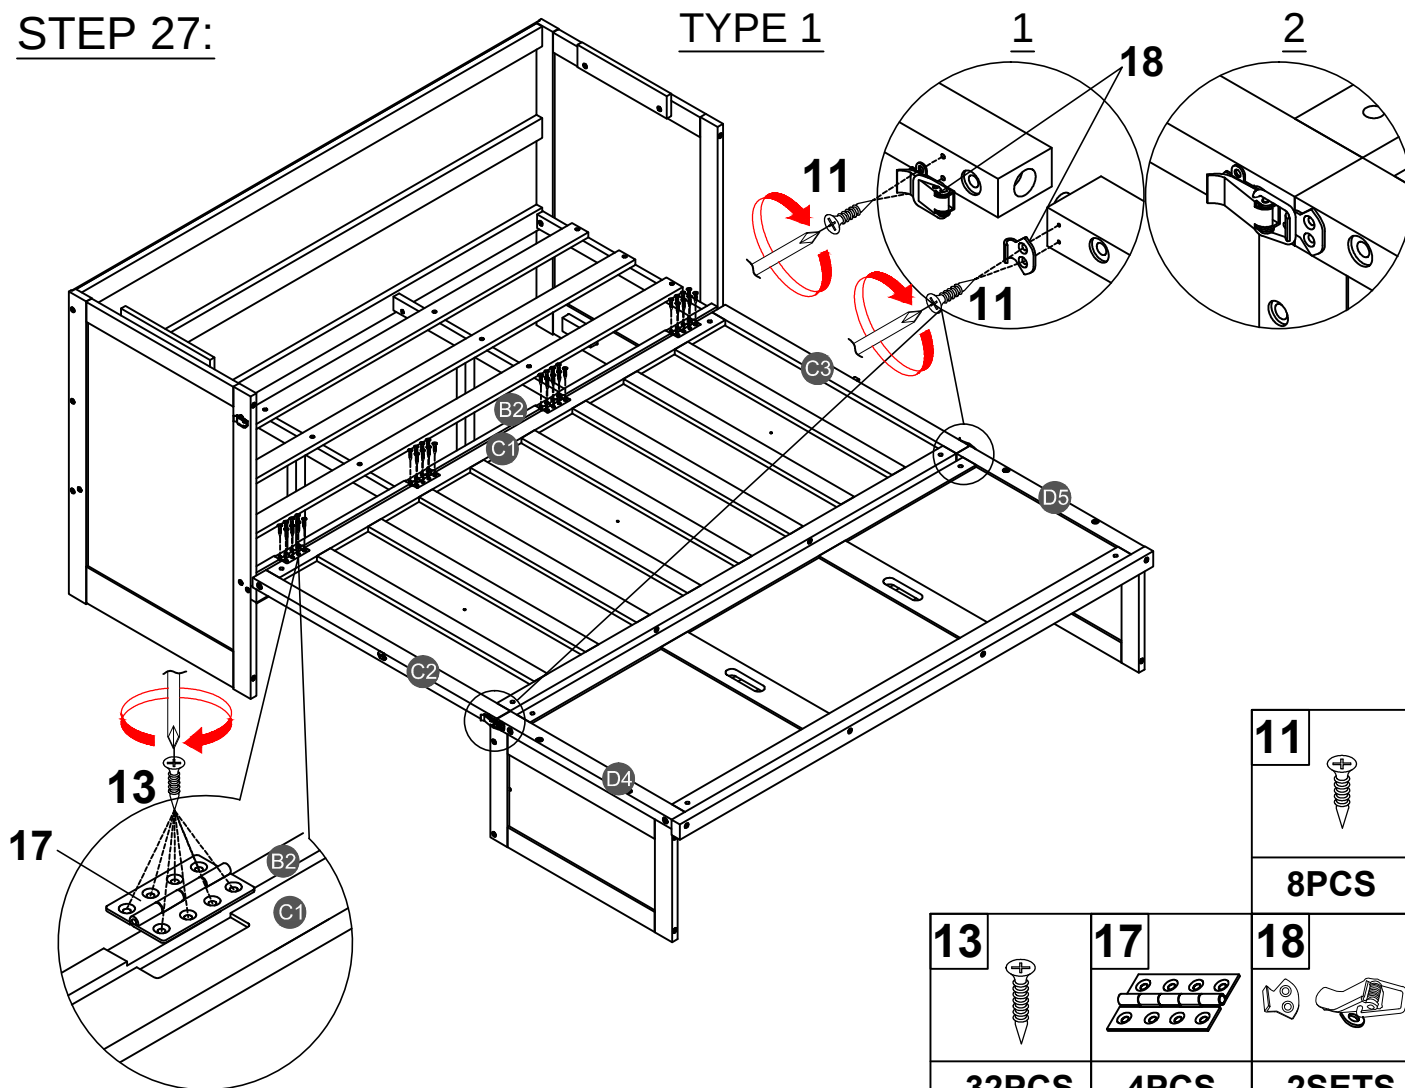

11	
8PCS	
13	
17	
18	
32PCS	
4PCS	
2SETS	

STEP 28:


2		4		9	
8PCS		4PCS		4PCS	

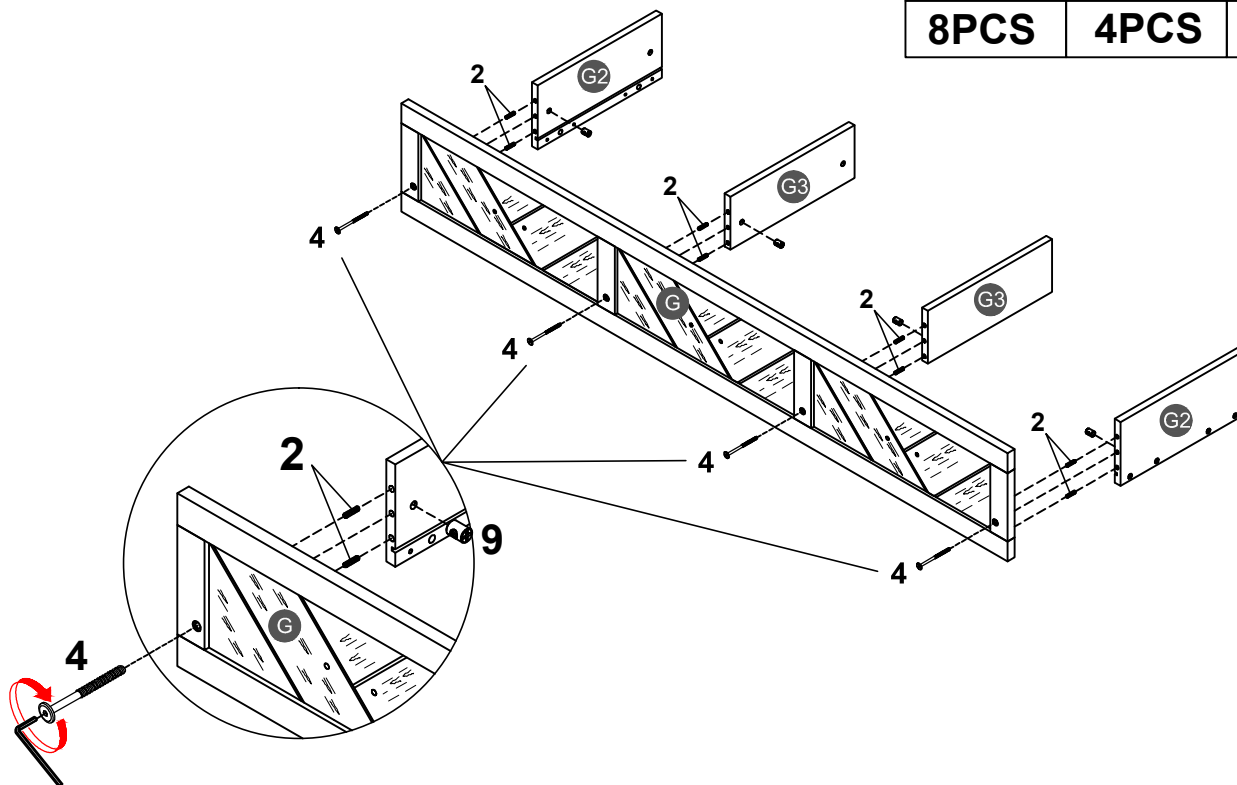


STEP 29:


TYPE 1

2		4		9	
16PCS		4PCS		4PCS	

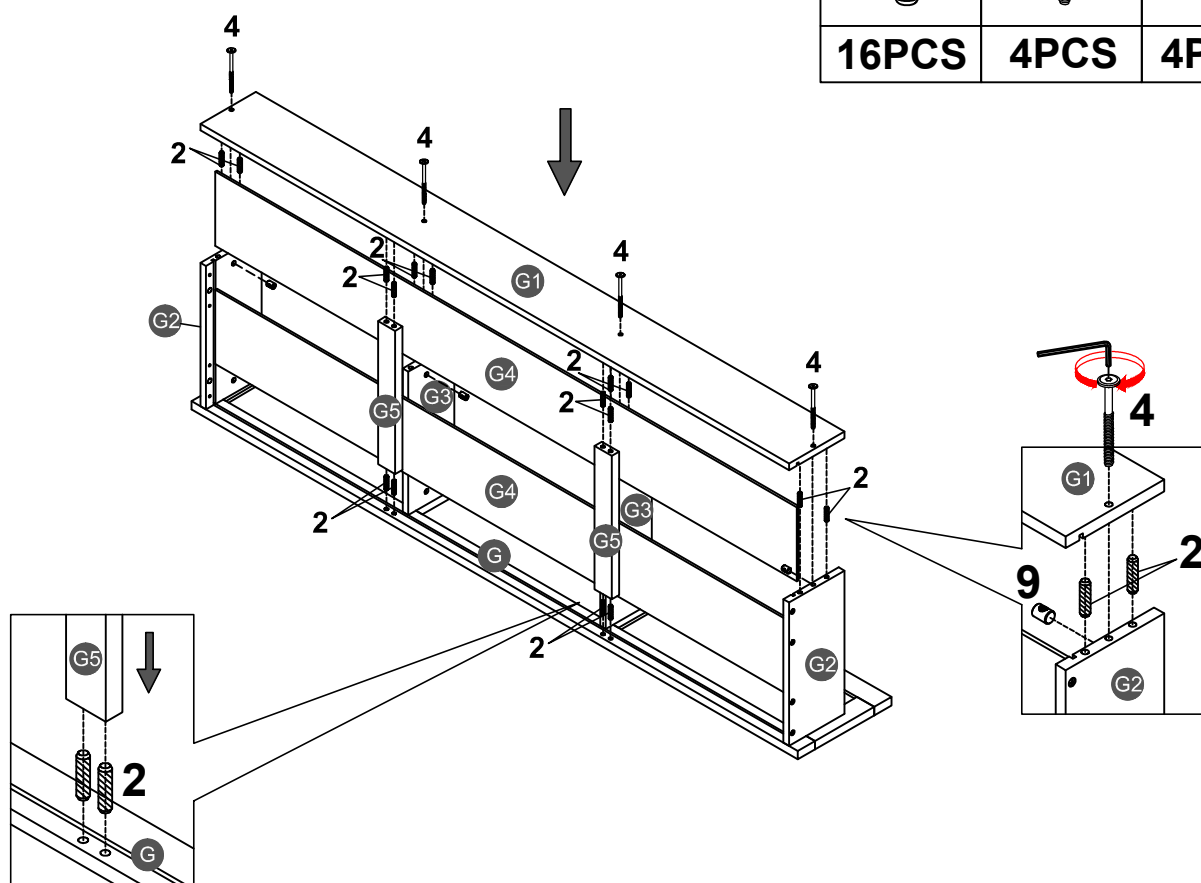


STEP 30:

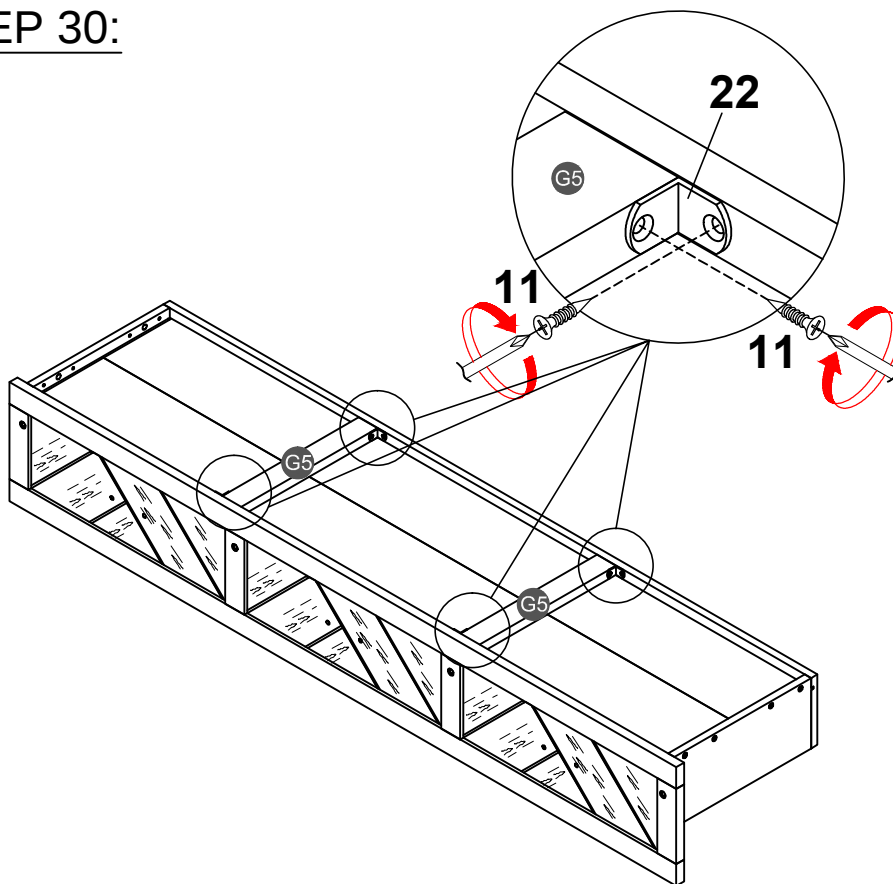


11	22
	
8PCS	4PCS



STEP 31:

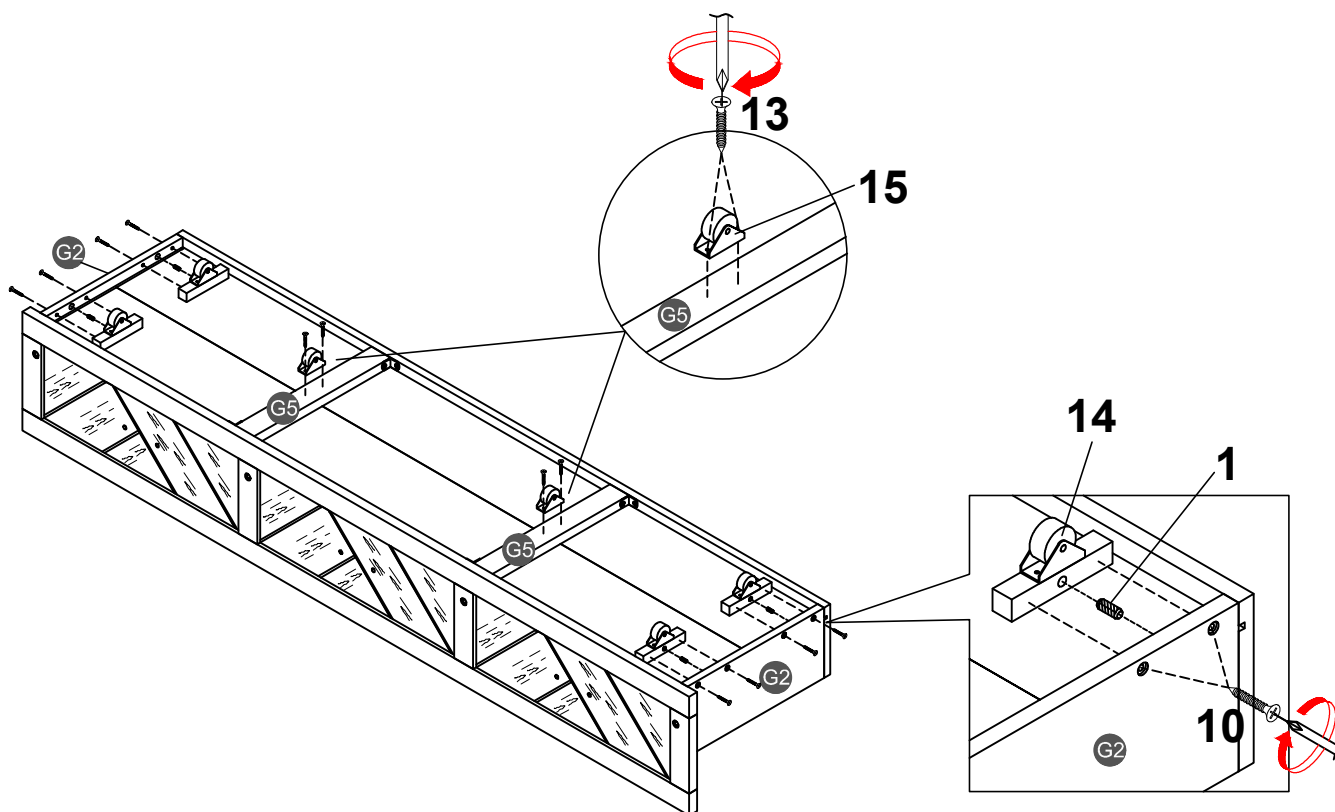

1	10	13	14	15
				
4PCS	8PCS	4PCS	4PCS	2PCS


STEP 32:

19	20
	
3PCS	6PCS

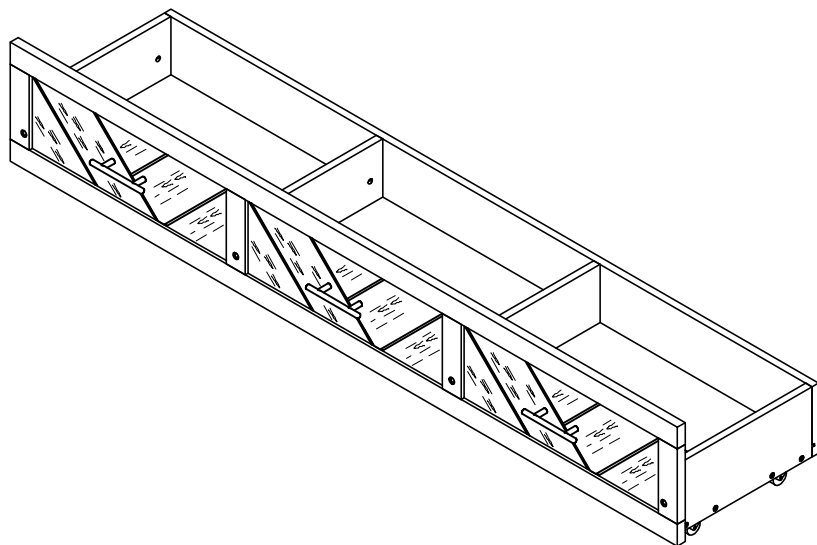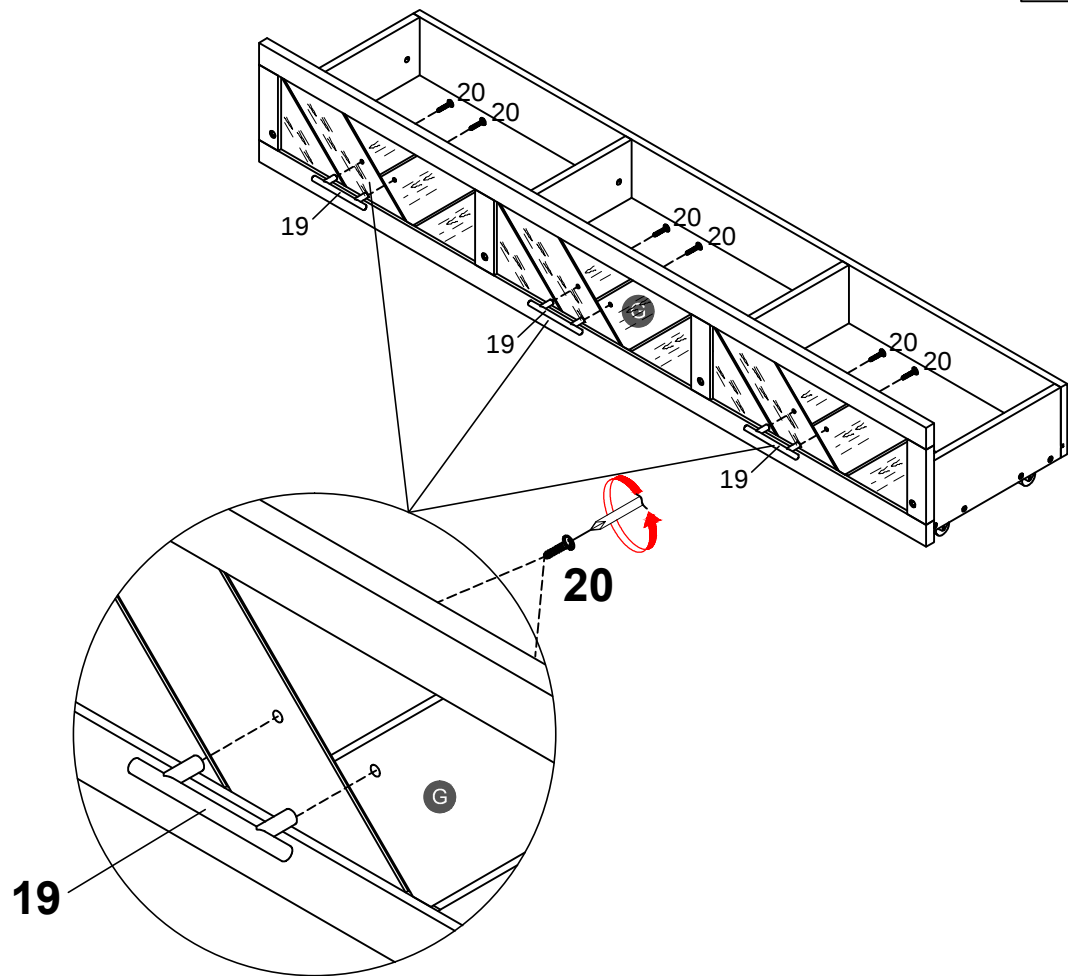

STEP 33:


TYPE 1

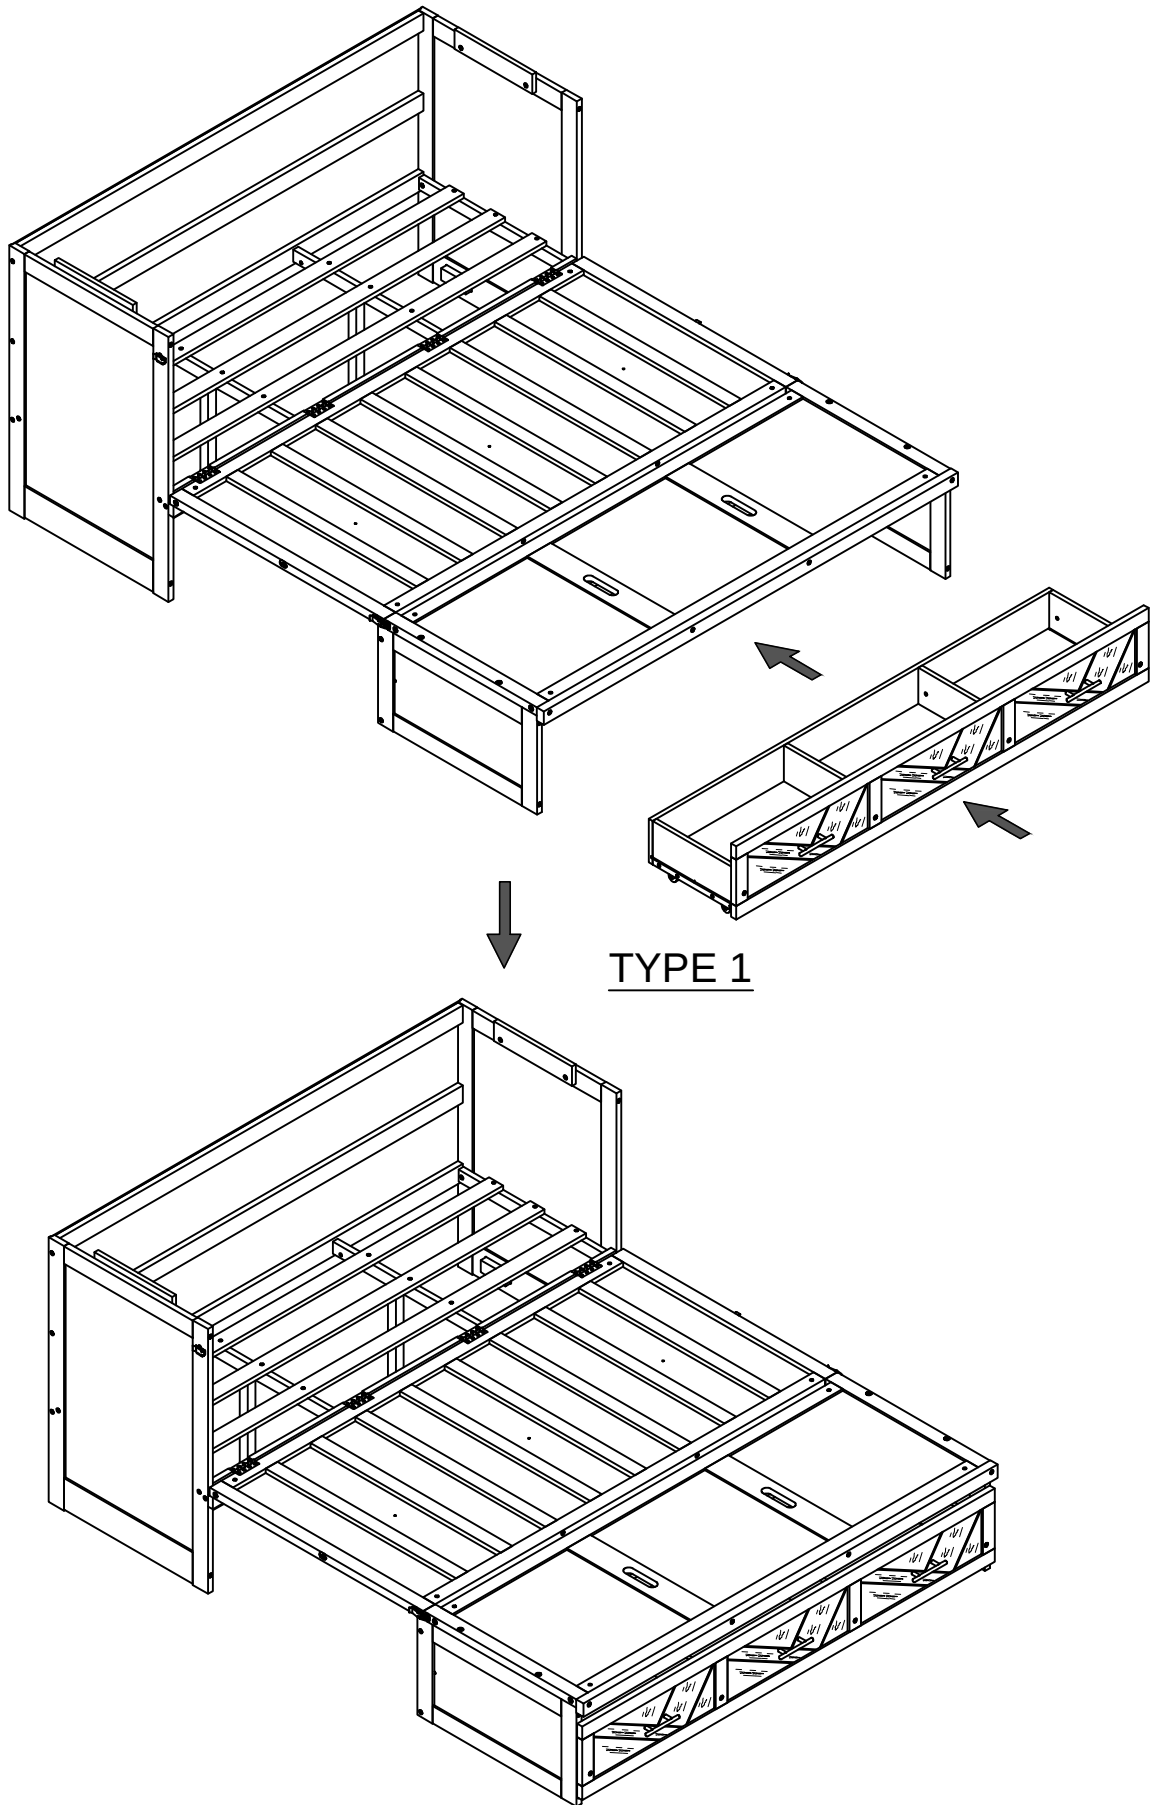

Make sure to tighten all the screws of the bed.


STEP 34:

TYPE 2

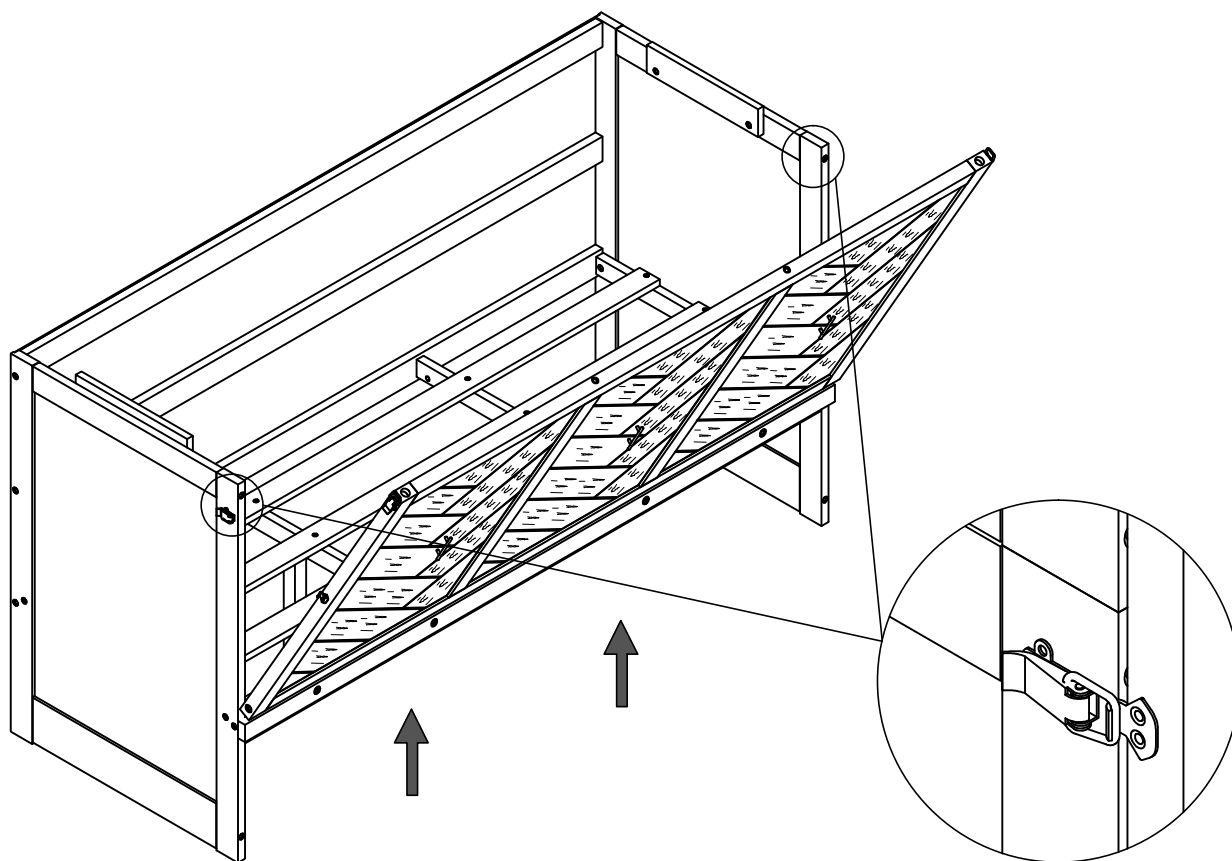


STEP 35:

TYPE 2

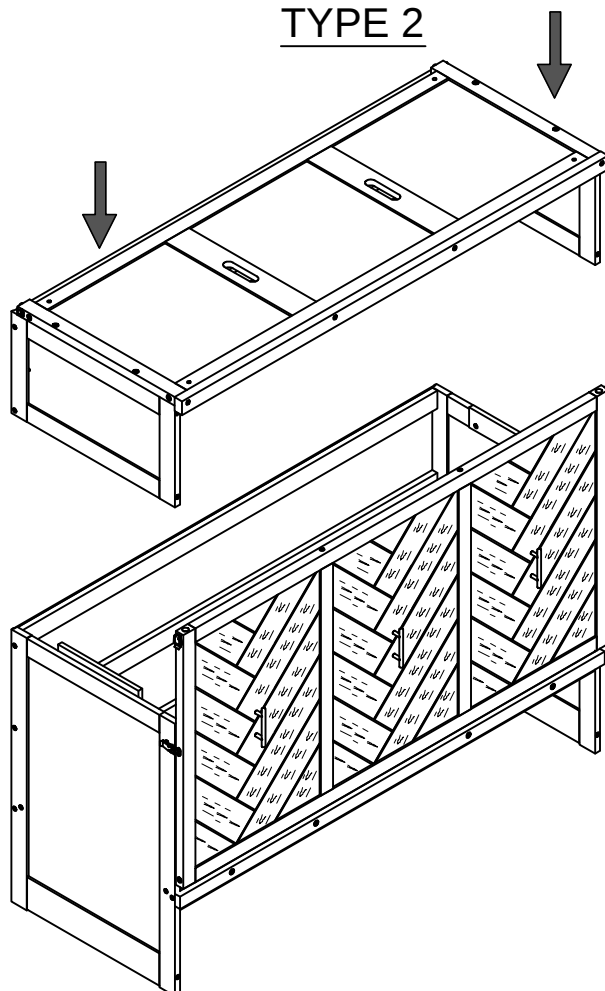

STEP 36:


TYPE 2

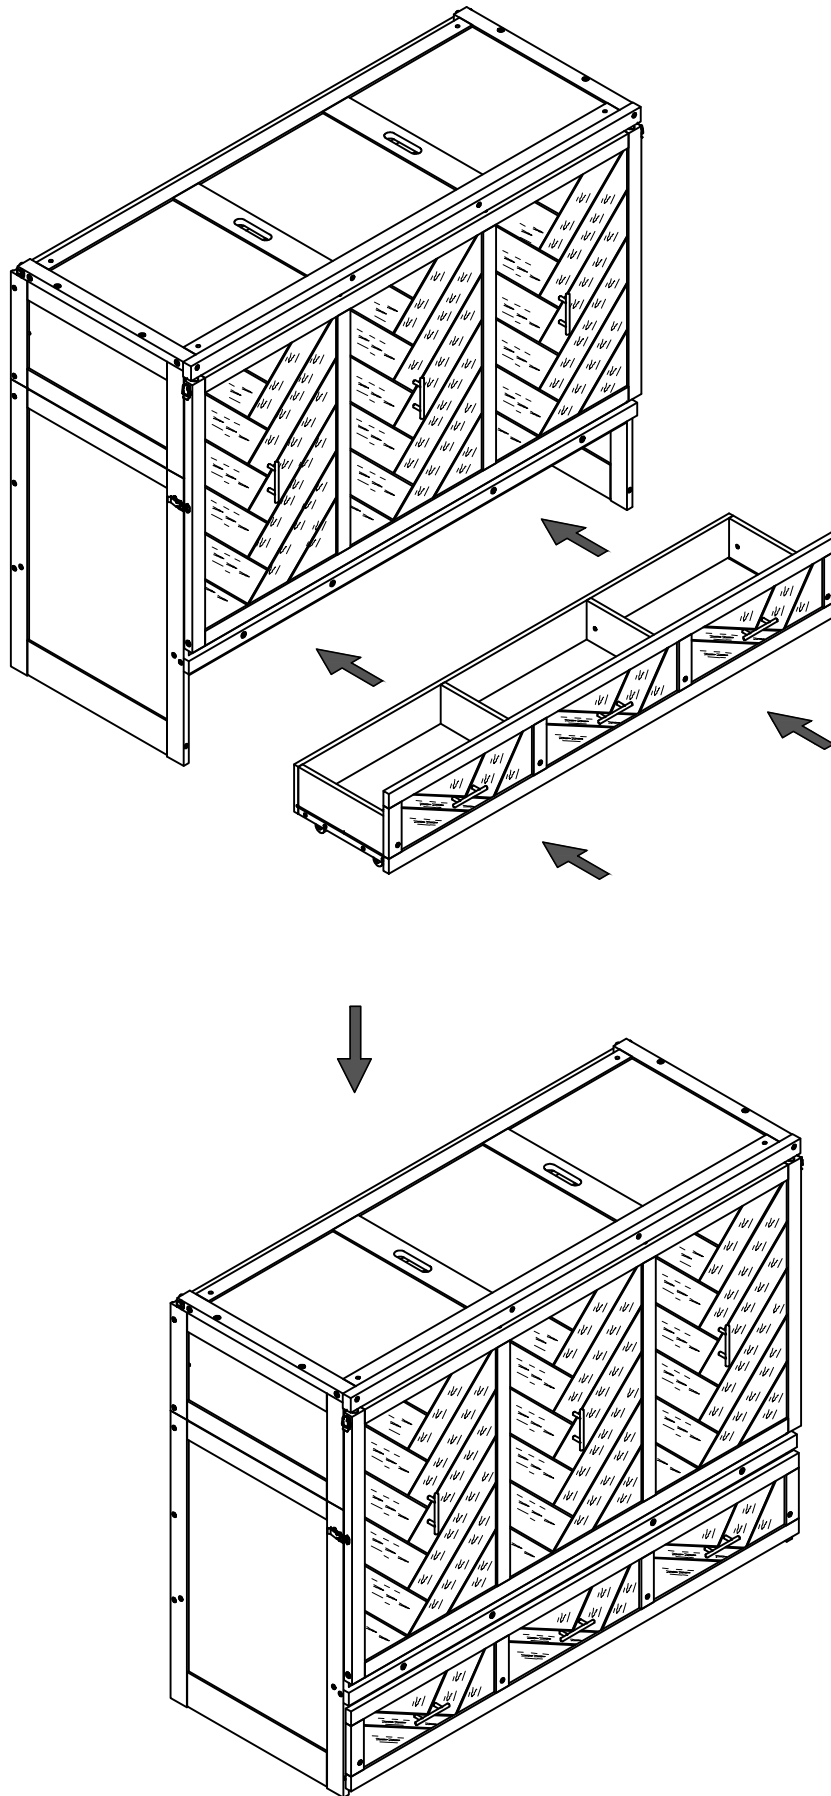

Make sure to tighten all the screws of the bed.


STEP 37:

TYPE 2

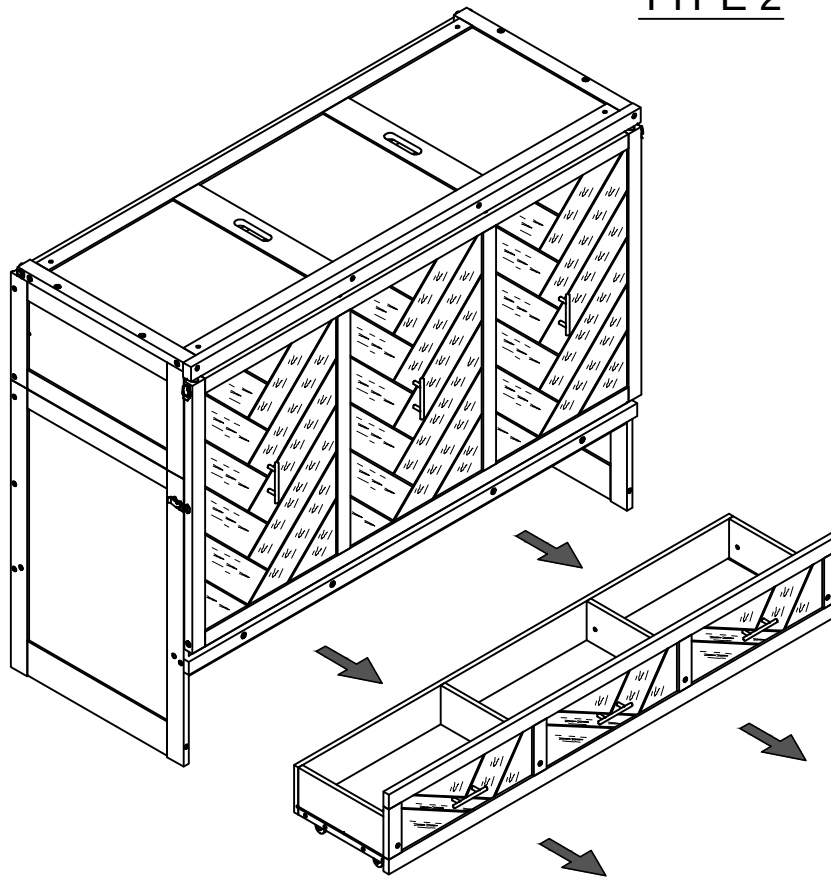


STEP 38:

TYPE 2

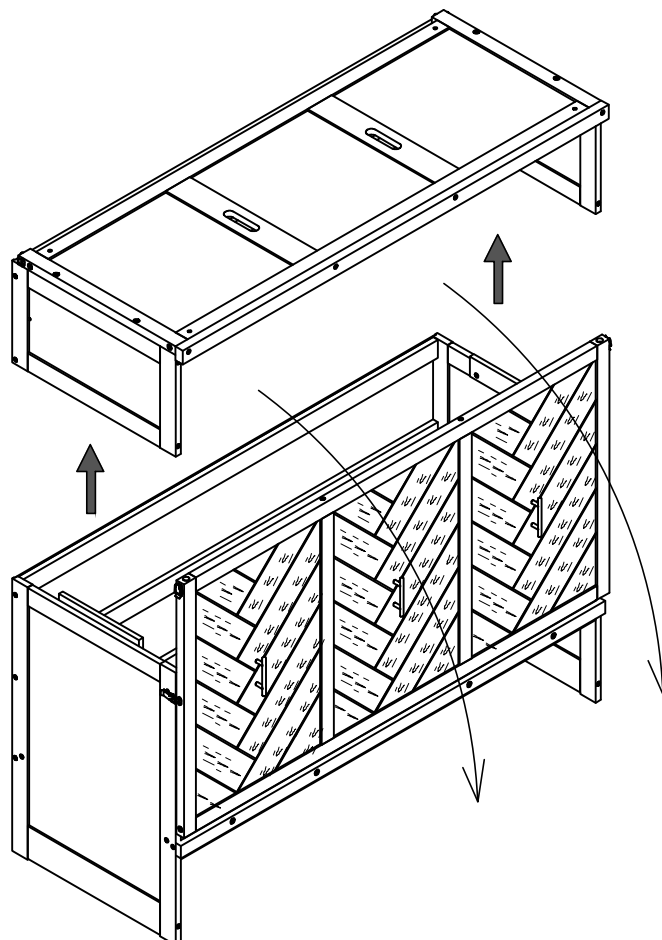


STEP 39:

TYPE 2

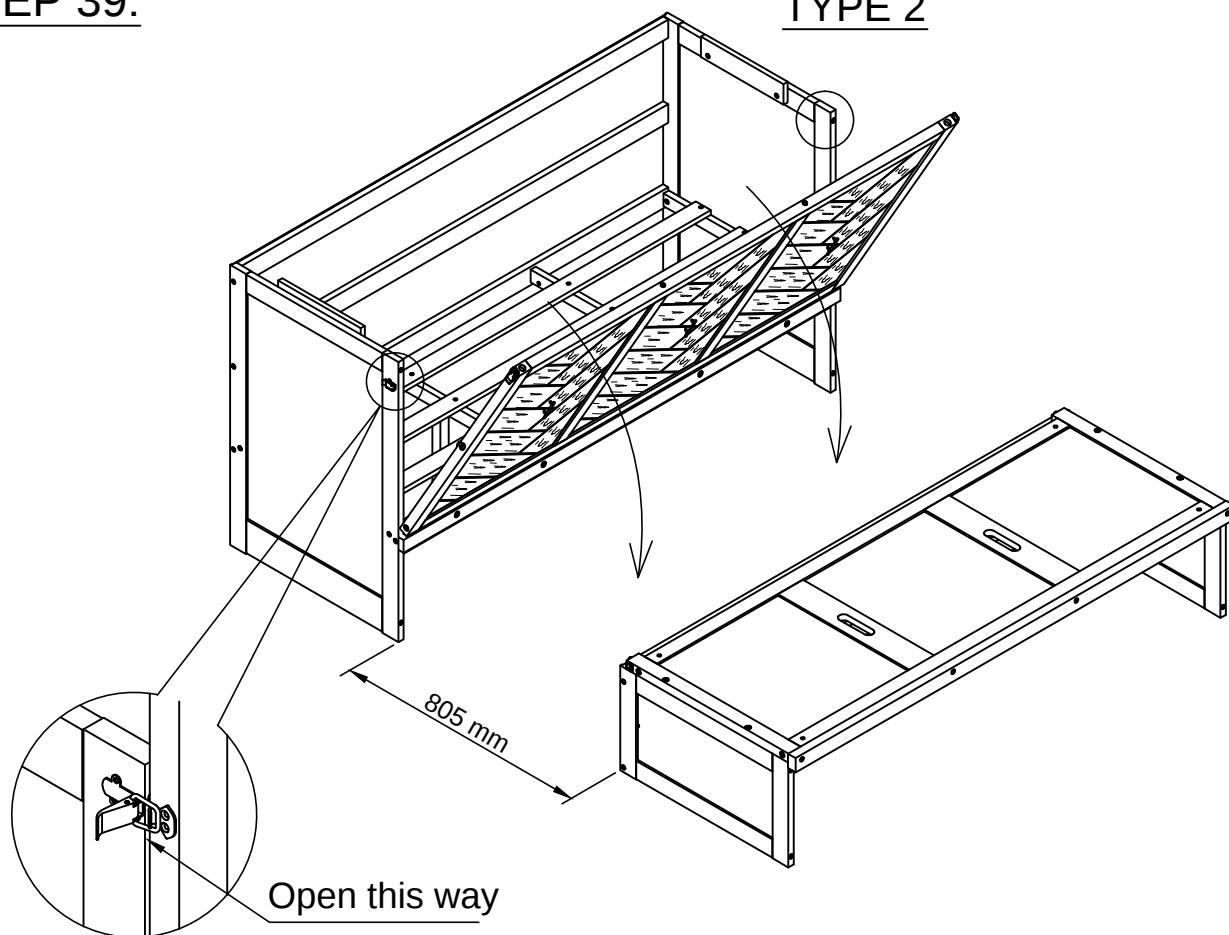


STEP 40:

TYPE 2

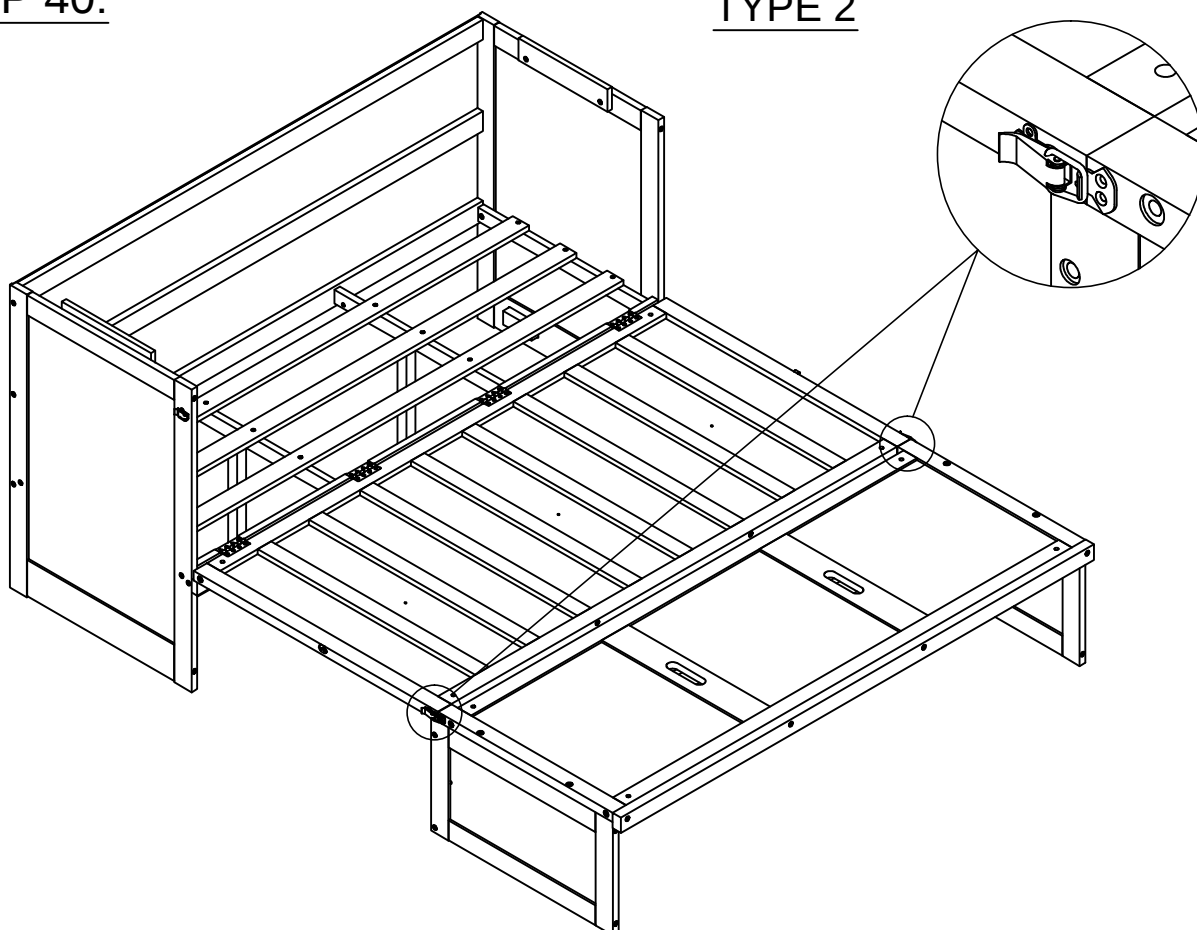


STEP 41:

TYPE 2

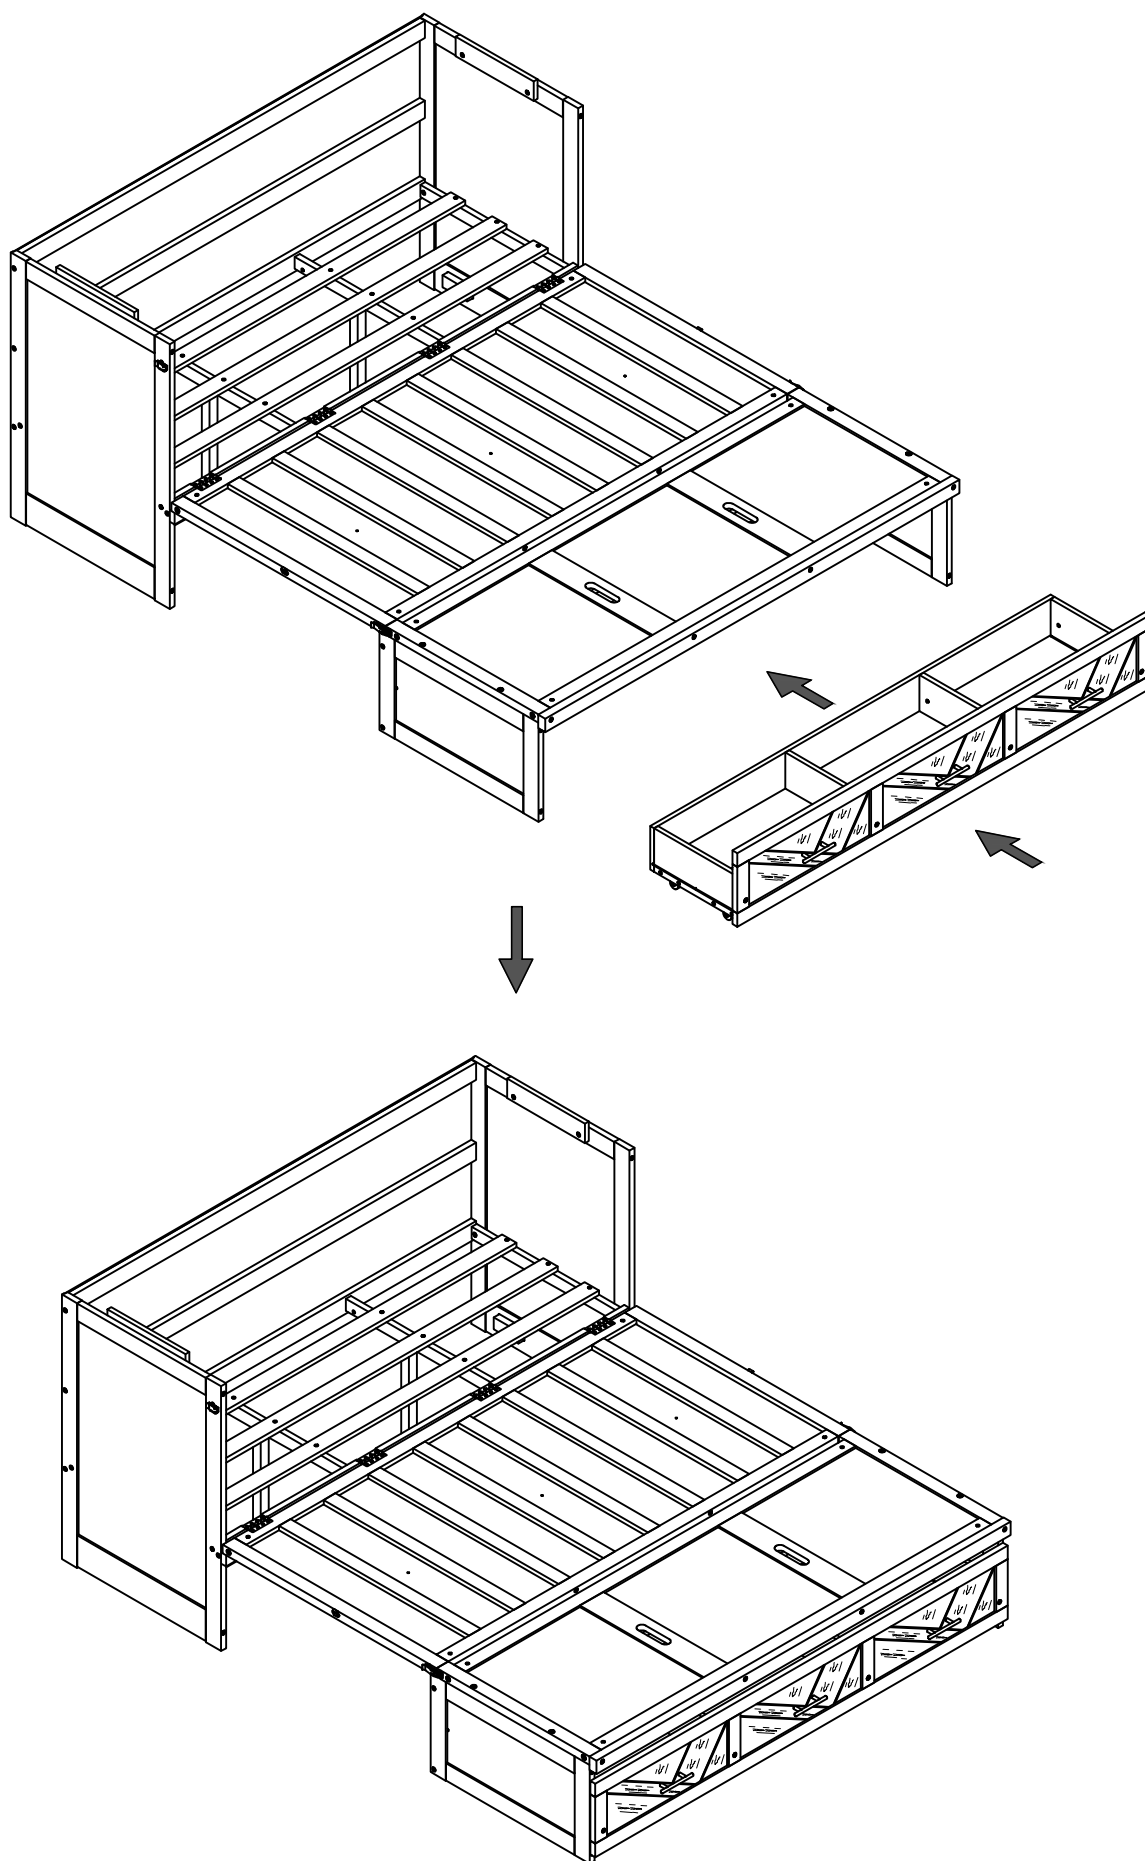

STEP A:

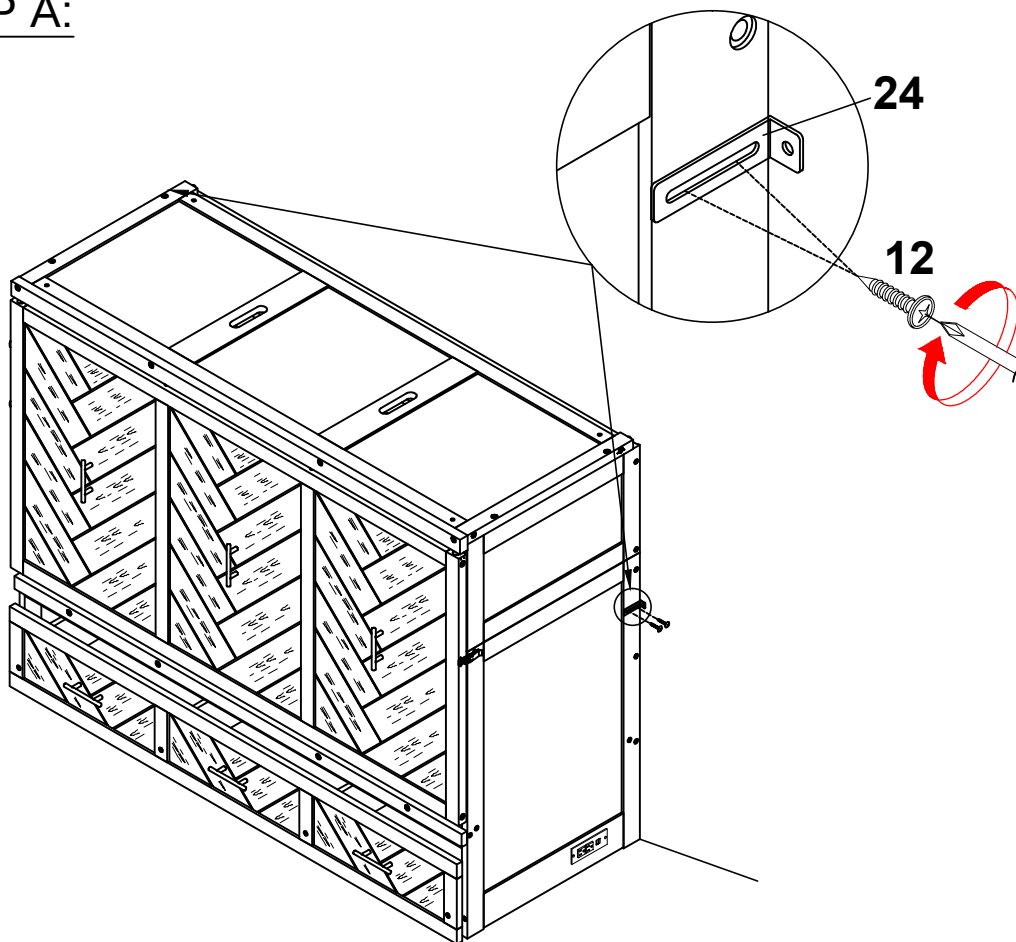

12



4PCS


24



2PCS

Installing the Anti-Tip Bracket.

STEP B:

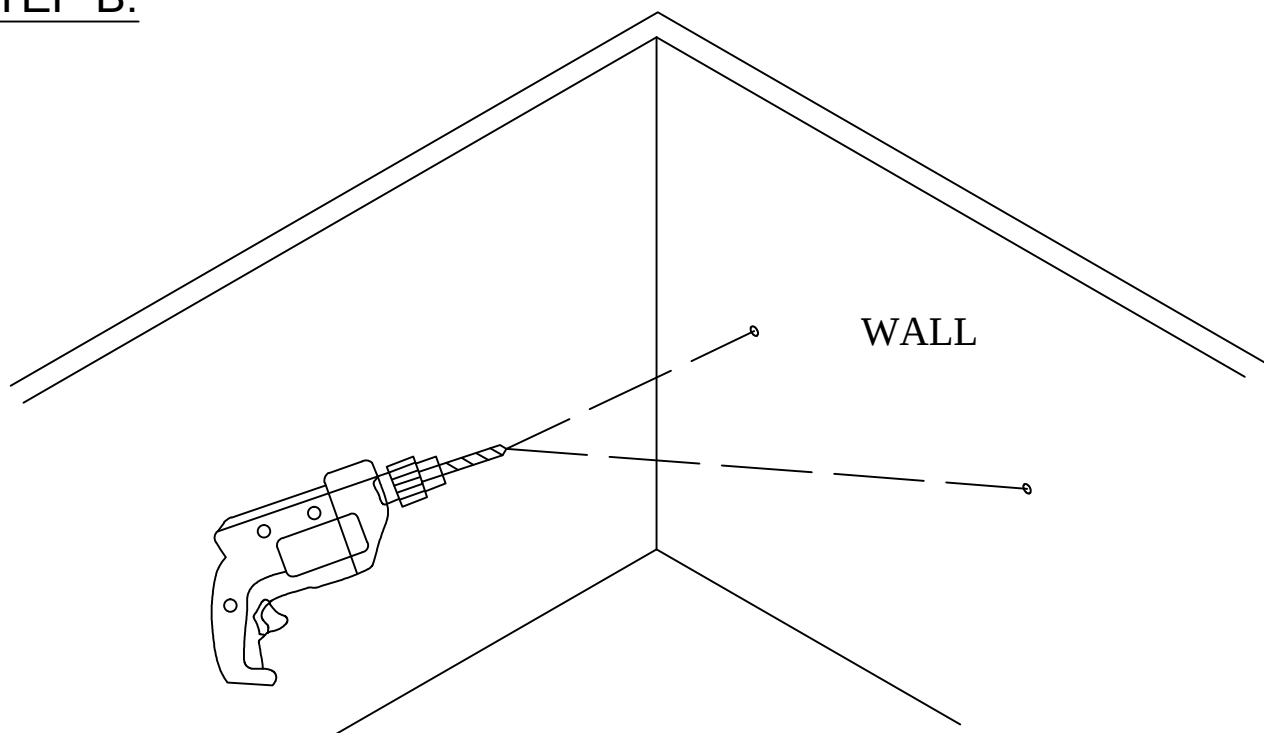


Drill holes in the wall.

STEP C:

23



2PCS

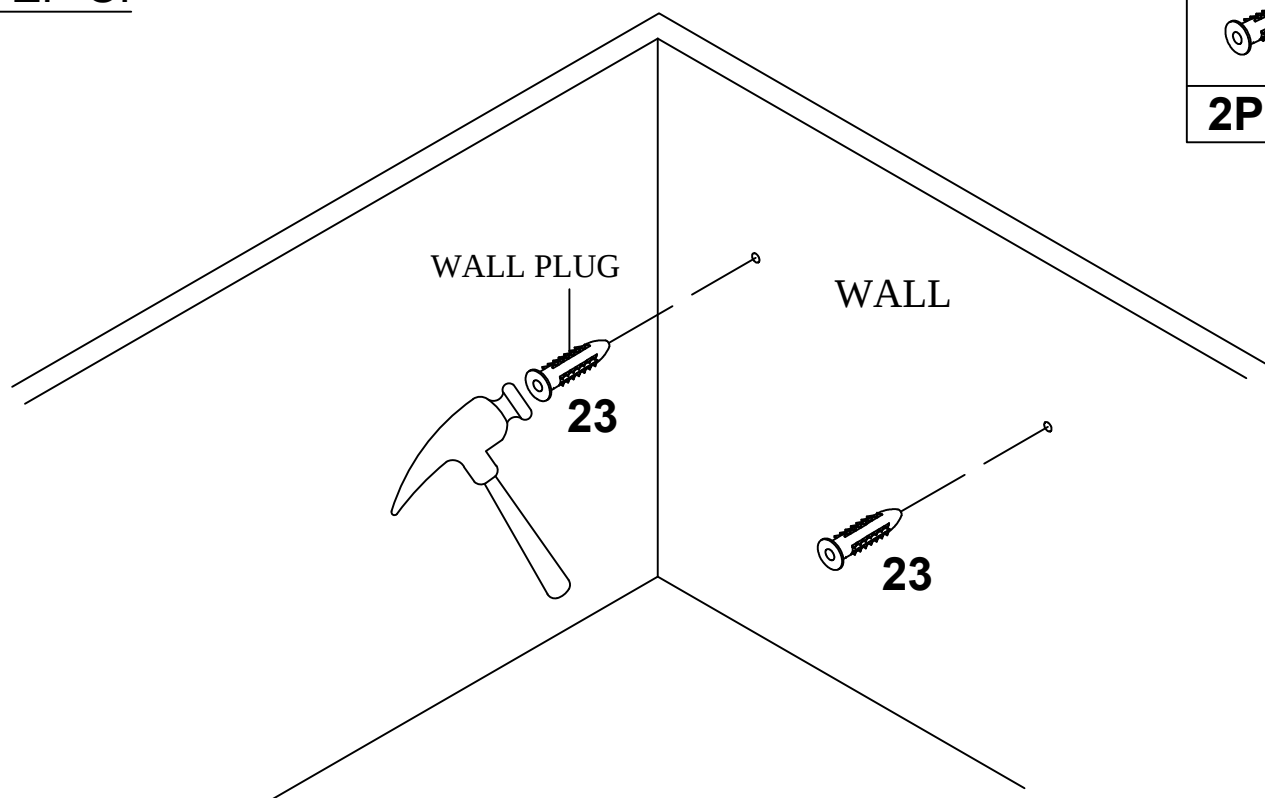

Tap plastic anchor in with a hammer or mallet.

STEP D:

Fix the bracket to the wall with screw.

25



2PCS

