

Assembly Instructions

Caution : You must read this before you proceed



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in CABINET SINK for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.







CABINET SINK : N765P514066 + KLD-9047S(36")











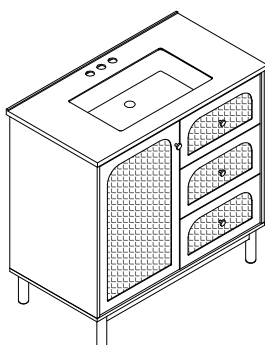




Parts List





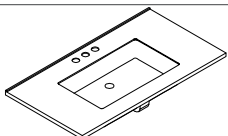
Label	Picture	Description	QTY
KLD-9047S(36")			
A		Sink	1




Parts List

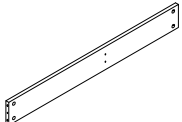Label	Picture	Description	QTY
N765P514066			
B		Bottom Panel	1
C		Door Panel	1
D		Right Front Rail Support	1
E		Middle Front Rail	1
F		Middle Vertical Panel	1
G		Lower Rear Rail	1

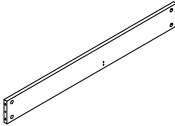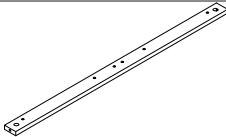
Parts List			
Label	Picture	Description	QTY
N765P514066			
H		Upper Rear Rail	1
I		Lower Front Rail	1
J		Upper Front Rail	1
K		Upper Drawer Front Panel	1
L		Left Side Panel	1
M		Right Side Panel	1
N		Adjustable Shelf	1
O		Lower Drawer Front Panel	2
P		Lower Drawer Left Side	2
Q		Lower Drawer Right Side	2
R		Lower Drawer Back Panel	2
S		Lower Drawer Bottom Panel	2


Parts List			
Label	Picture	Description	QTY
N765P514066			
T		Upper Drawer Right Side	1
U		Upper Drawer Left Side	1
V		Upper Drawer Back Panel	1
W		Upper Drawer Bottom Panel	1
X		Left Front Rail Support	1
Y		Front Vertical Support	1
Z		Cabinet Leg	4
Hardware			
Label	Picture	Description	QTY
N765P514066			
①		Knob	4
②		Bolt (Ø5/32" x 19mm)	4 Extra 1
③		Small Hinge	2

Hardware			
Label	Picture	Description	QTY
N765P514066			
④		Large Hinge	2
⑤		Shelf Pin	3
⑥		Tie Plate	1
⑦		Angle Bracket	1
⑧		Screw (Ø3 x 12mm)	24 Extra 2
⑨		Screw (Ø3 x 12mm)	6 Extra 1
⑩		Screw (Ø3 x 12mm)	3 Extra 1
⑪		Screw (Ø3.5 x 12mm)	24 Extra 2
⑫		Bolt with washer (Ø1/4" x 60mm)	4
⑬		Allen key (M4 x 57mm)	1
⑭		Cam bolt (Ø6 x 33mm)	29 Extra 2
⑮		Cam lock (Ø15 x 10mm)	29 Extra 2

Hardware			
Label	Picture	Description	QTY
N765P514066			
①⑥		Wooden dowel (Ø6 x 30mm)	36 Extra 2
①⑦		Screw (Ø4 x 38mm)	32 Extra 2
①⑧		Anti-Tip	2set
①⑨		Slider (12")	2set
		Phillips screwdriver	1


Assembly Preparation

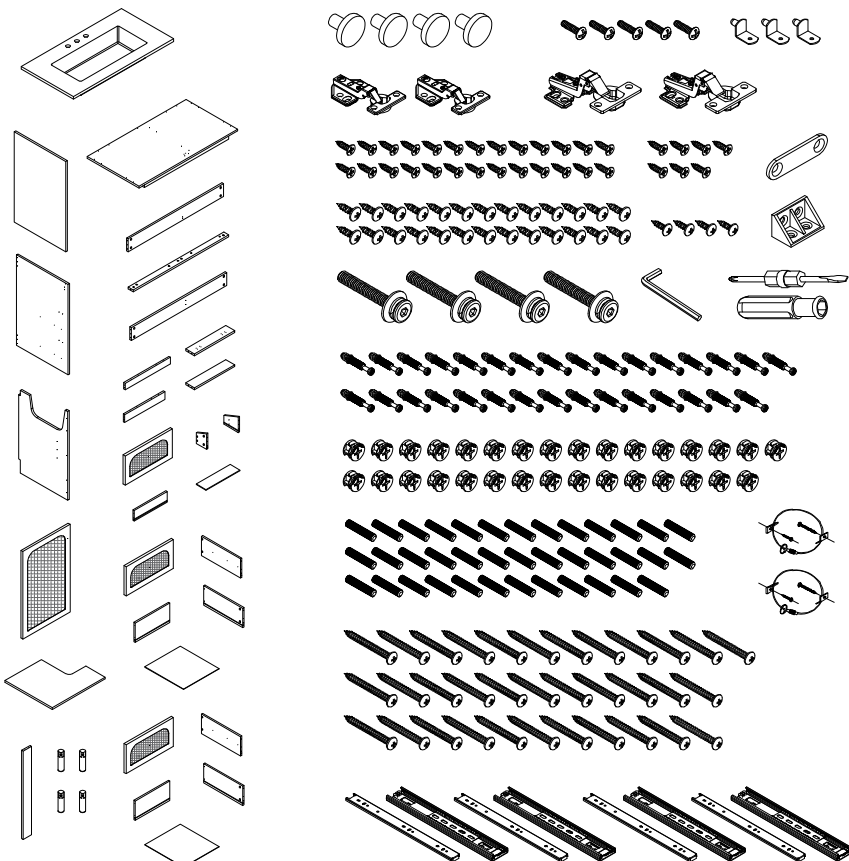Before Beginning Assembly:			
----------------------------------	--	--	--

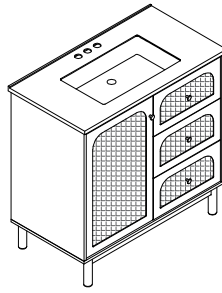

AssemblySteps


Overview

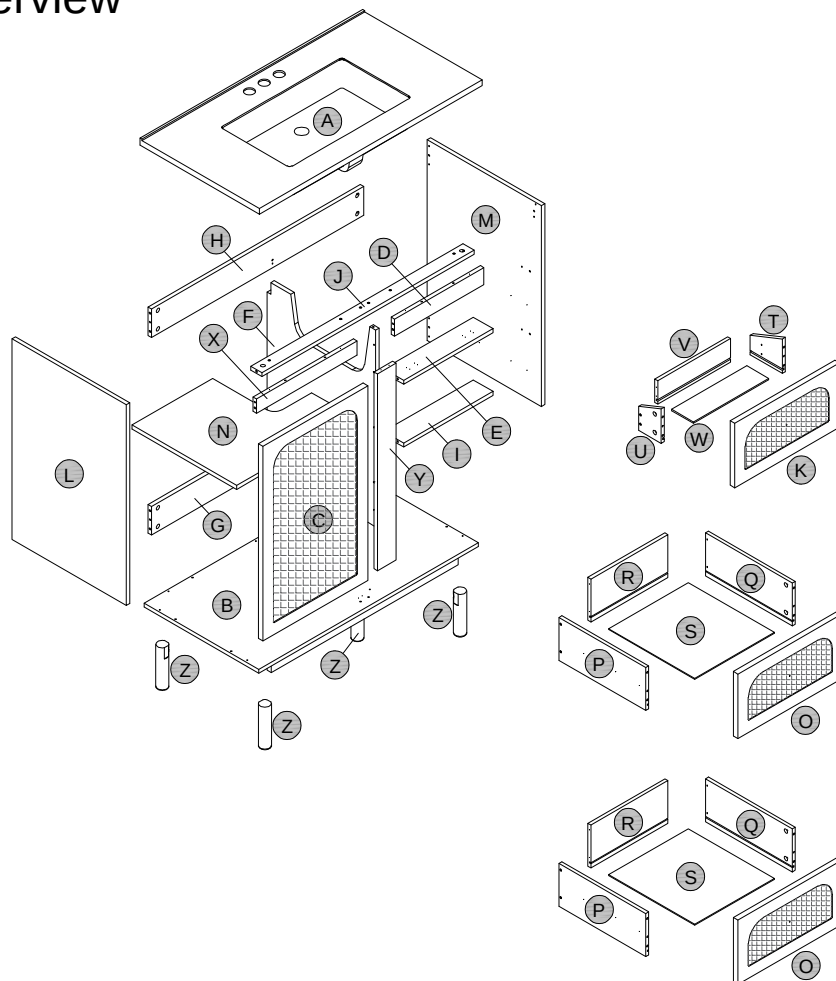

FRONT FACING

This CABINET SINK has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Lavabo 1 part, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Completed

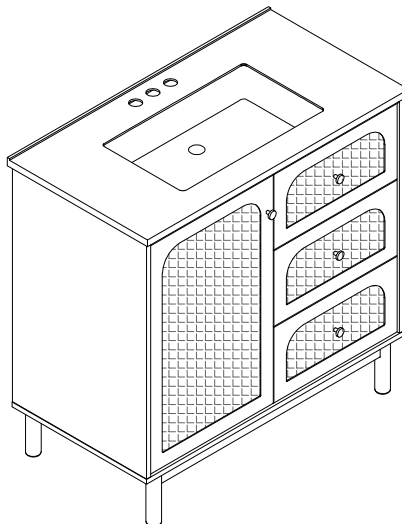

Turn the CABINET SINK right side up.
Place the CABINET SINK on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.

To tighten the screws at the base of the backrest, have another adult assist you.
You may be required to turn the CABINET SINK, to gain easy access to the secure points.
Turn the CABINET SINK in a synchronised manner.

CAUTION 1: When tightening these screws, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one.


This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process.

WARNING!! IF CABINET SINK IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.

The CABINET SINK is ready to be used.


Caution 2: This CABINET SINK can only be used on a flat, level surface.

Step 1

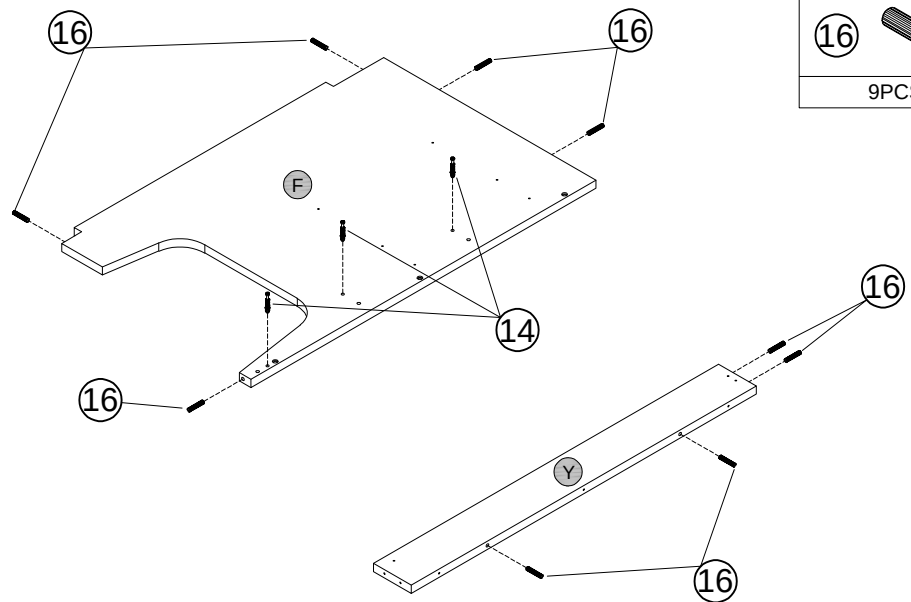


14	
3PCS	
16	
9PCS	

Step 2

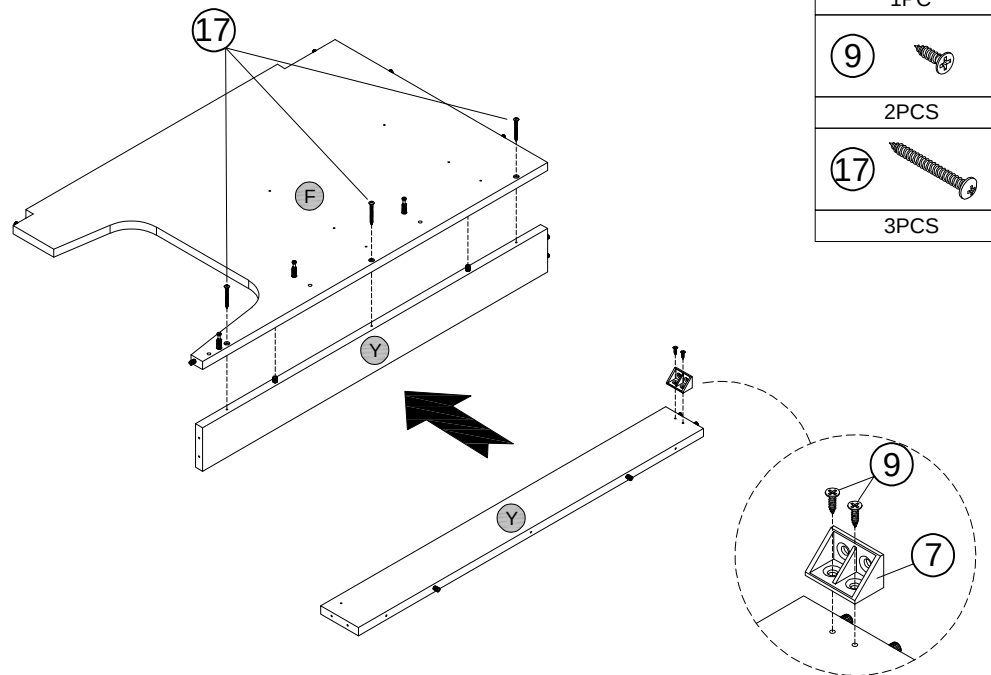


7	
1PC	
9	
2PCS	
17	
3PCS	


Step 3

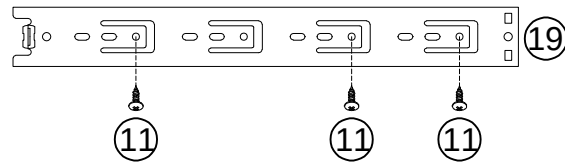

11	
6PCS	
19	
2PCS	


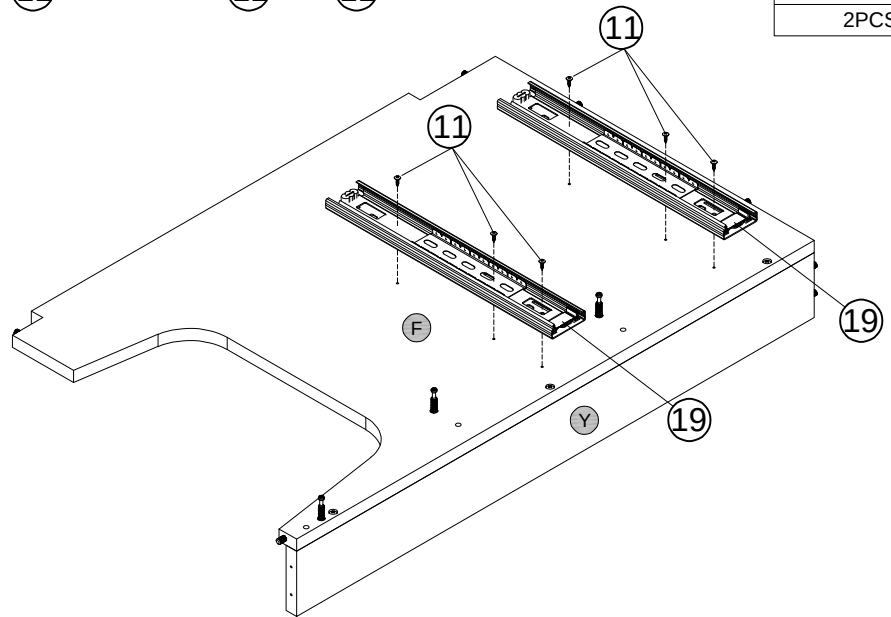


Step 4


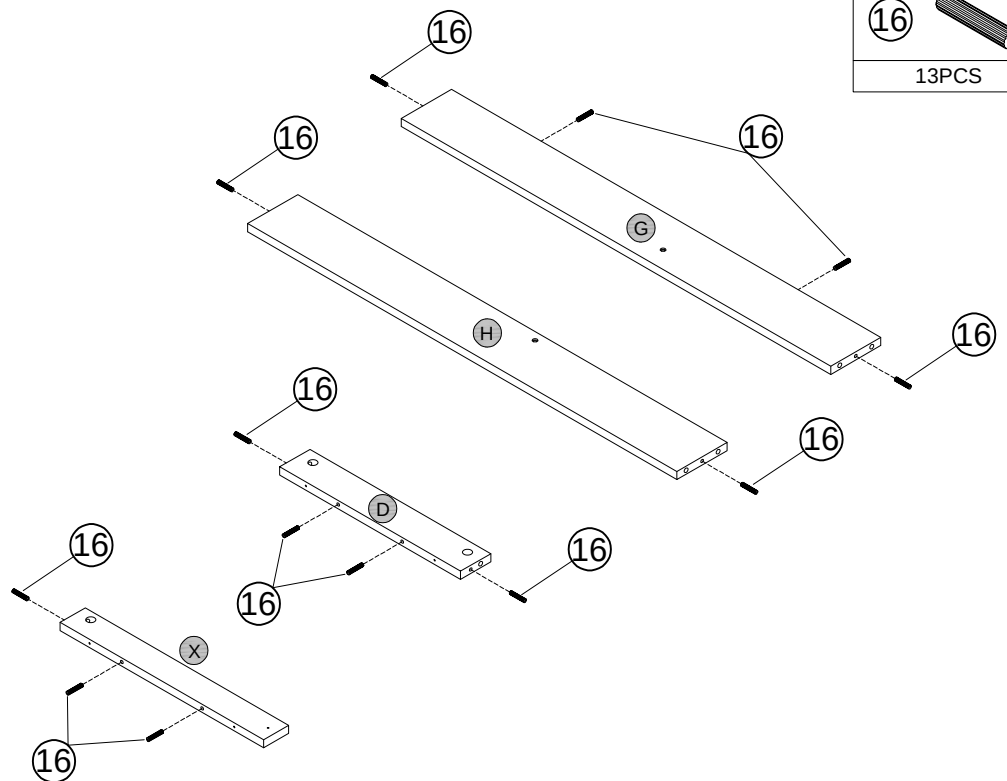


16	
13PCS	



Step 5

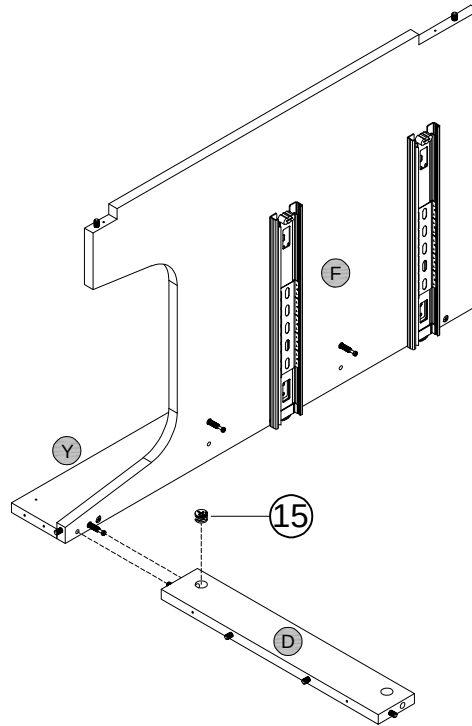



Step 6

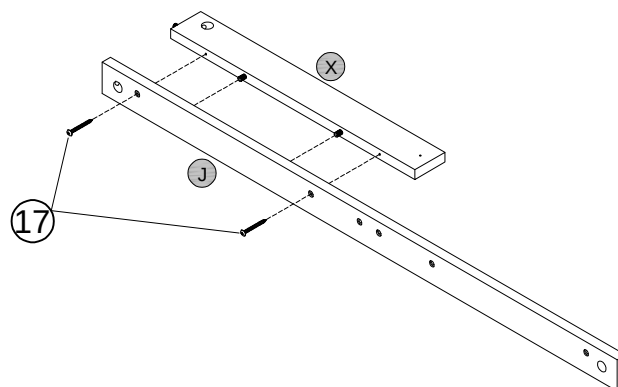


Step 7

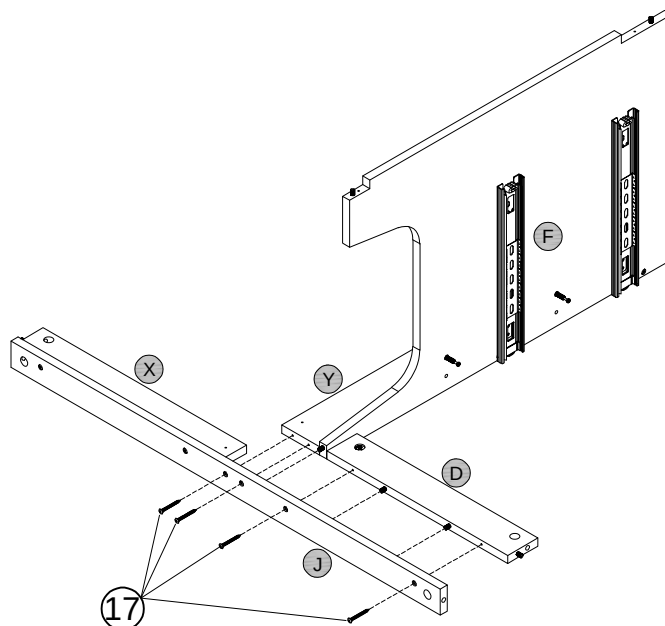


Step 8

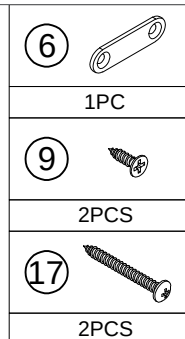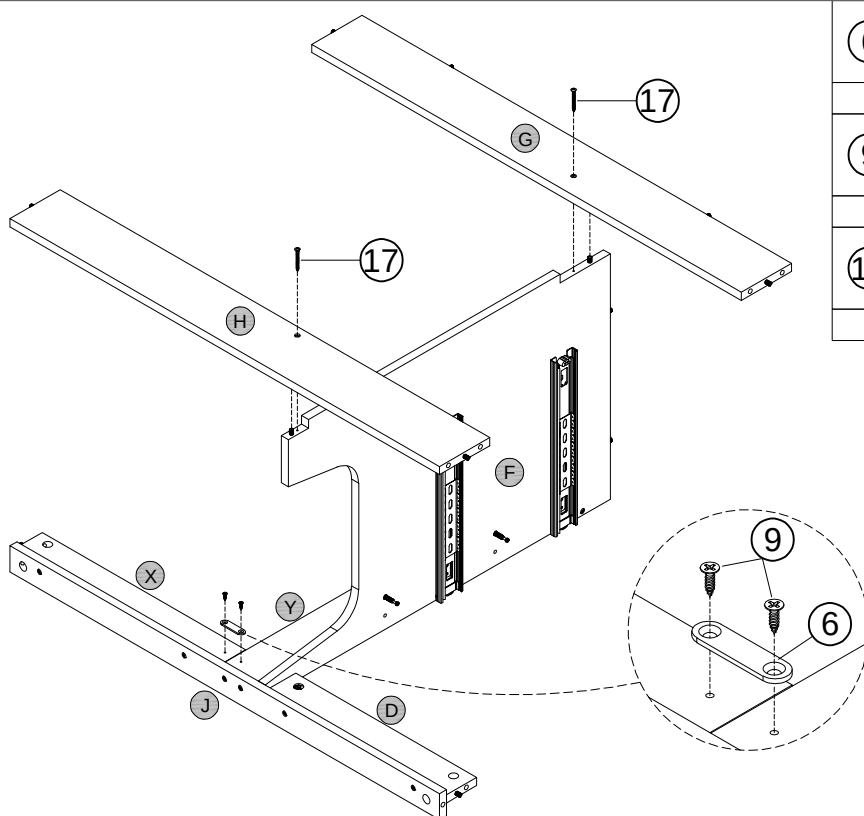



Step 9

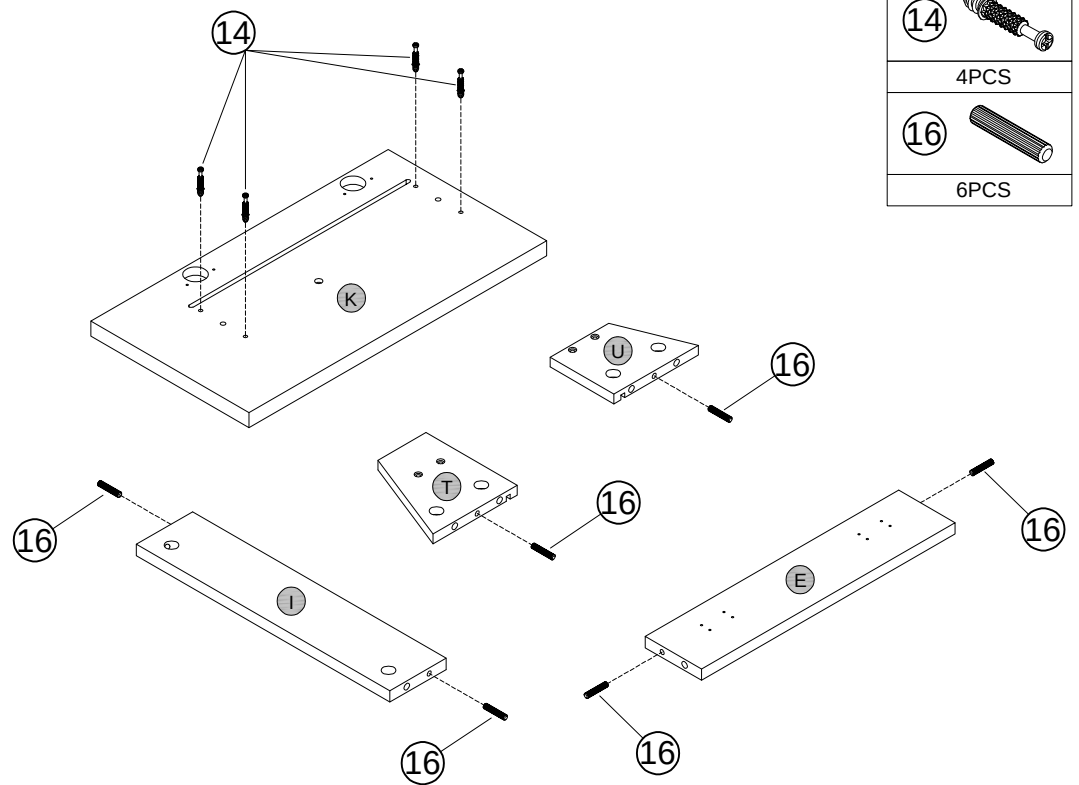



Step 10

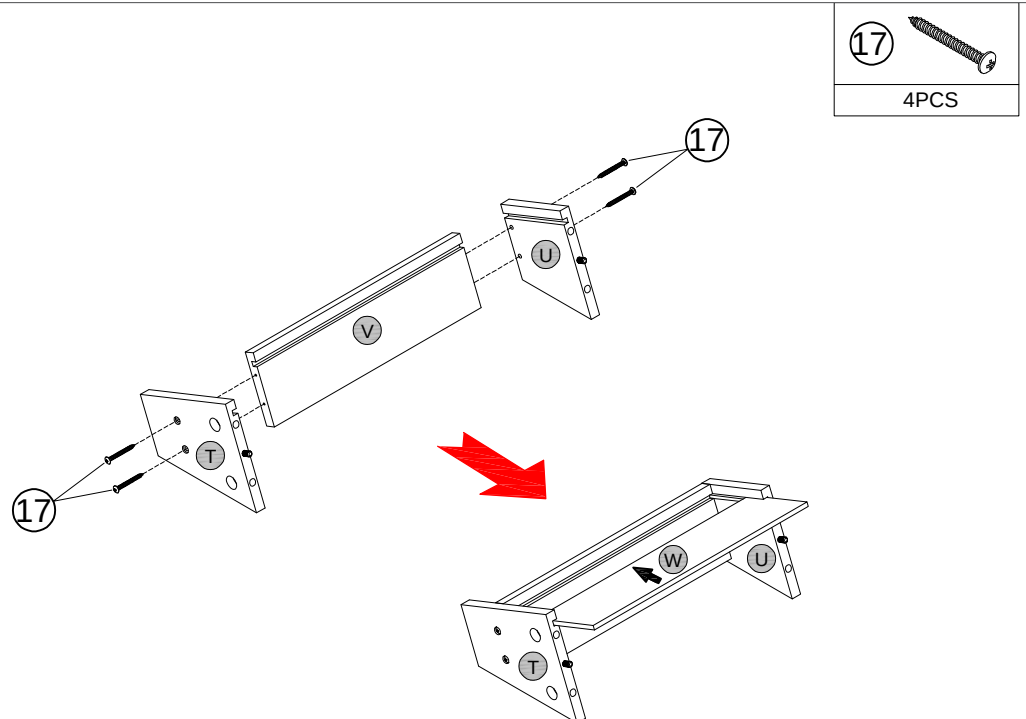

Step 11

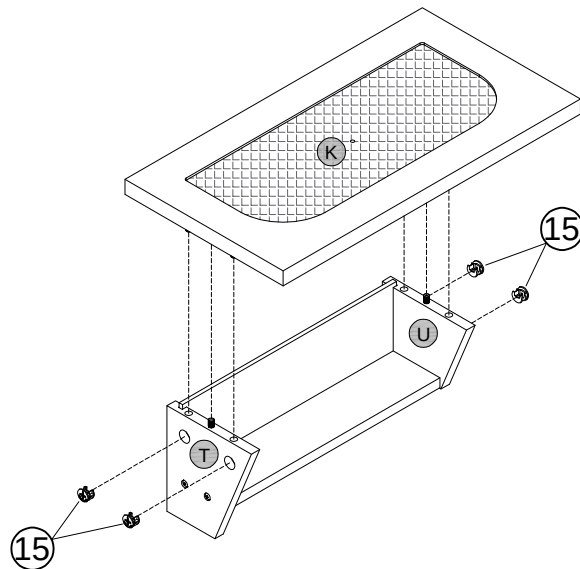


Step 12

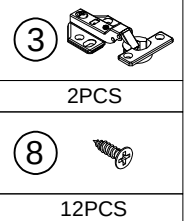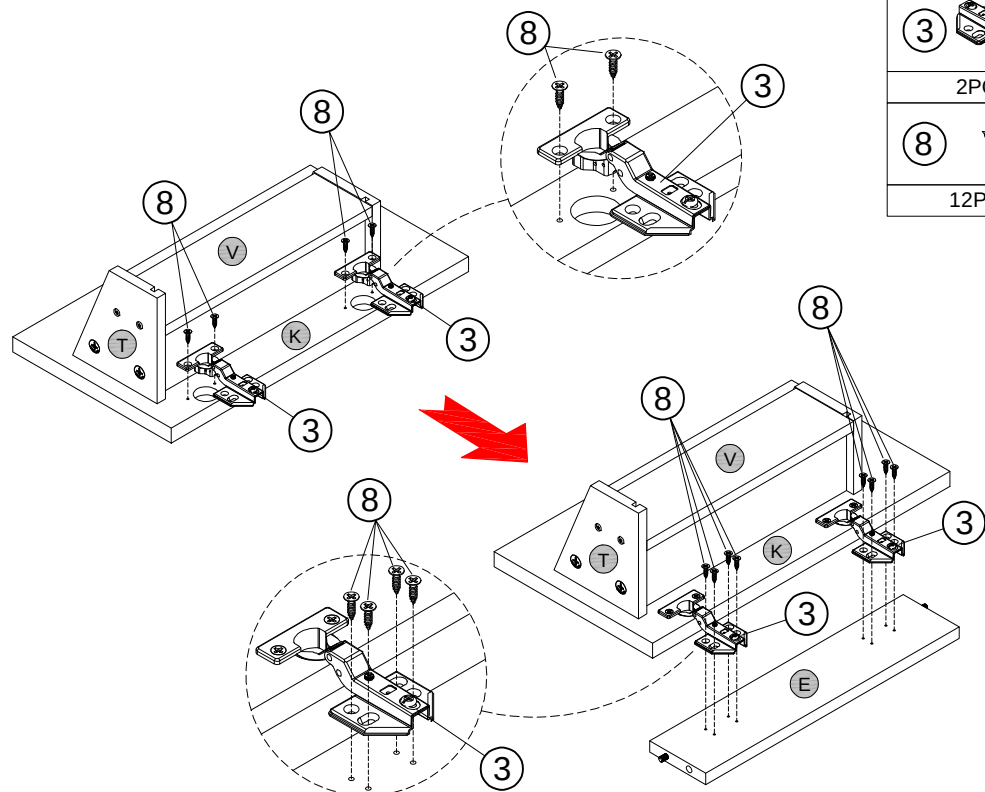


Step 13

For safety, it is recommended that two people turn the product over.

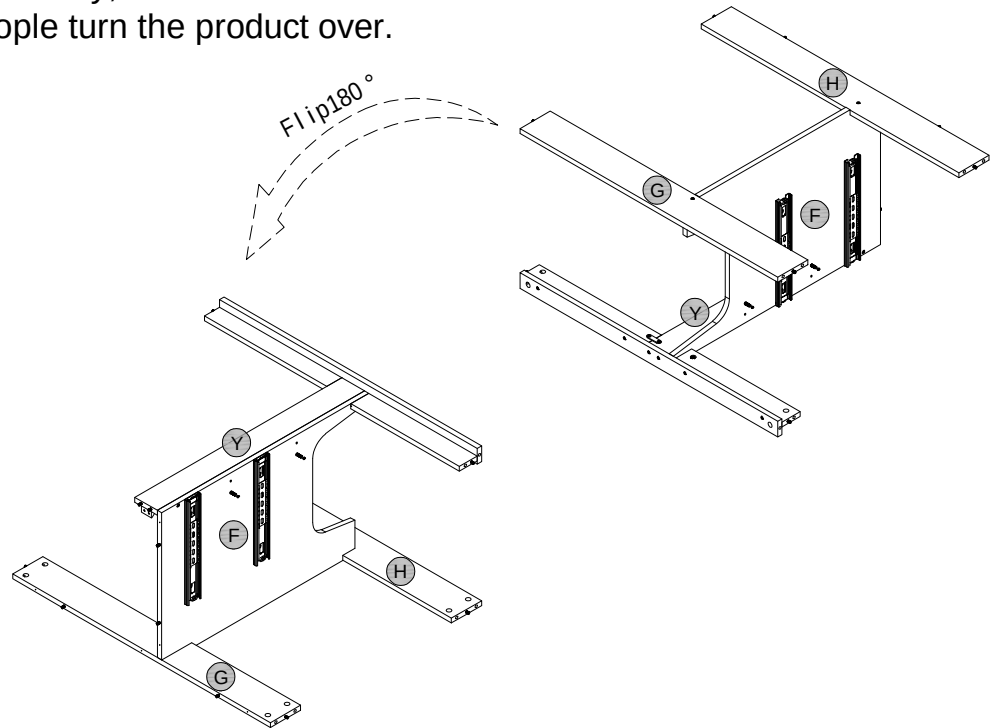



Step 14


15 
2PCS

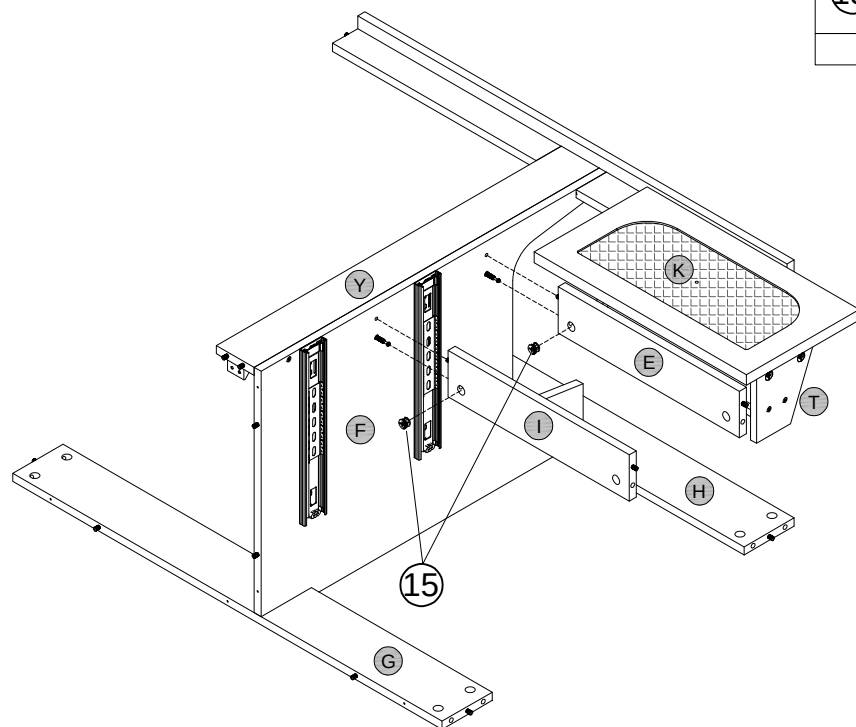


Step 15

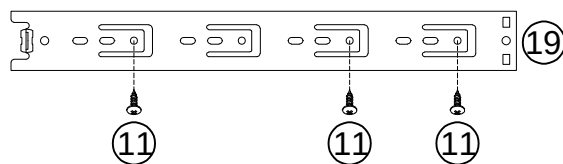

11	
6PCS	
19	
2PCS	

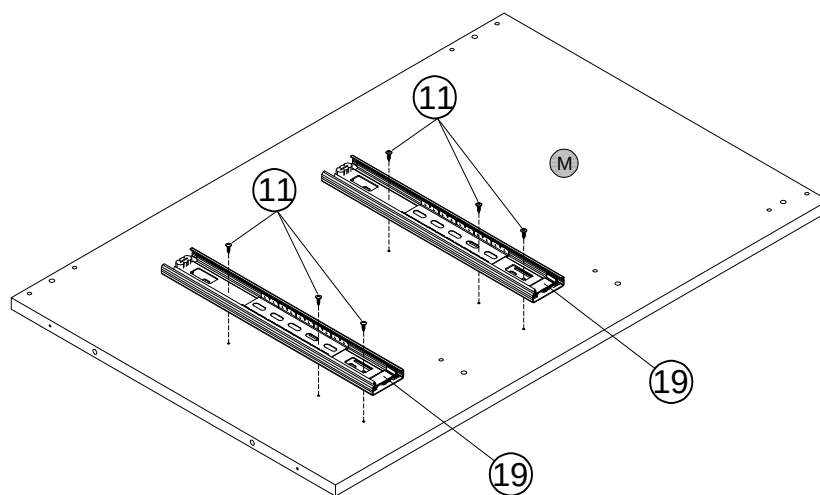


Step 16

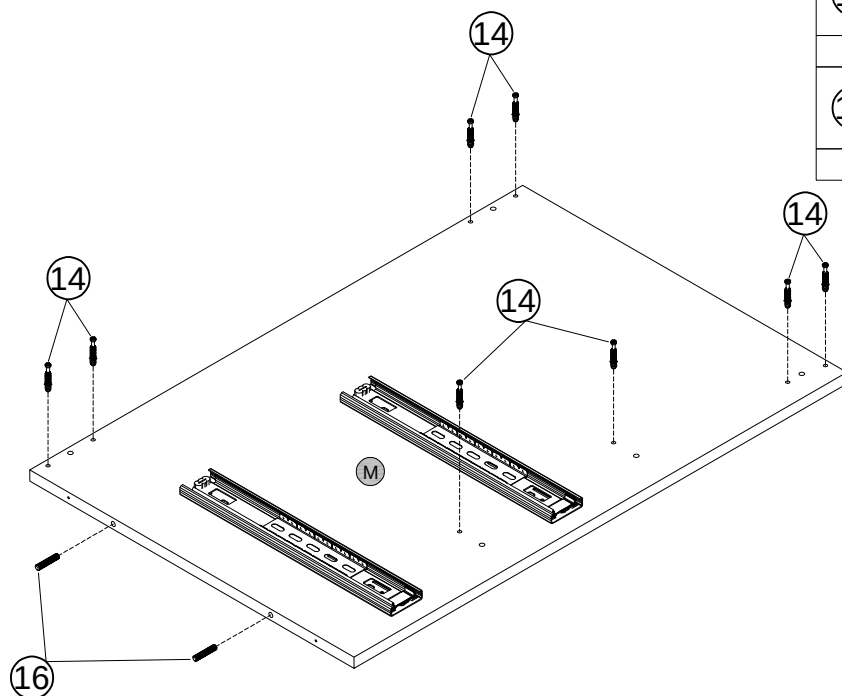

14	
8PCS	
16	
2PCS	


Step 17

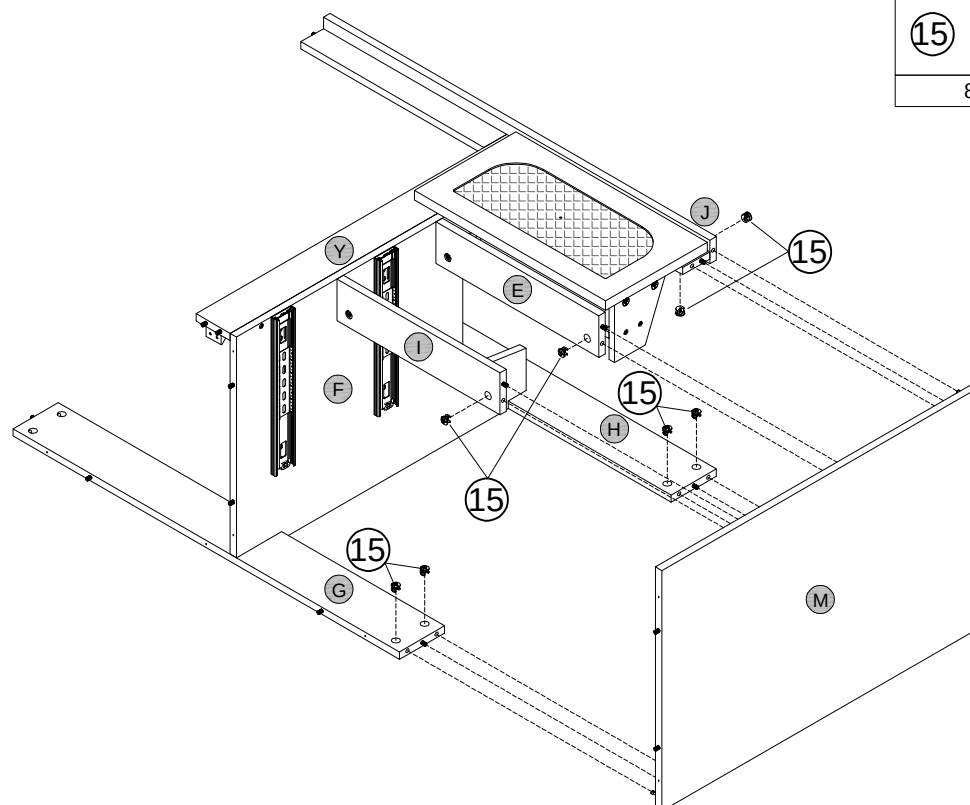

15

8PCS

Step 18

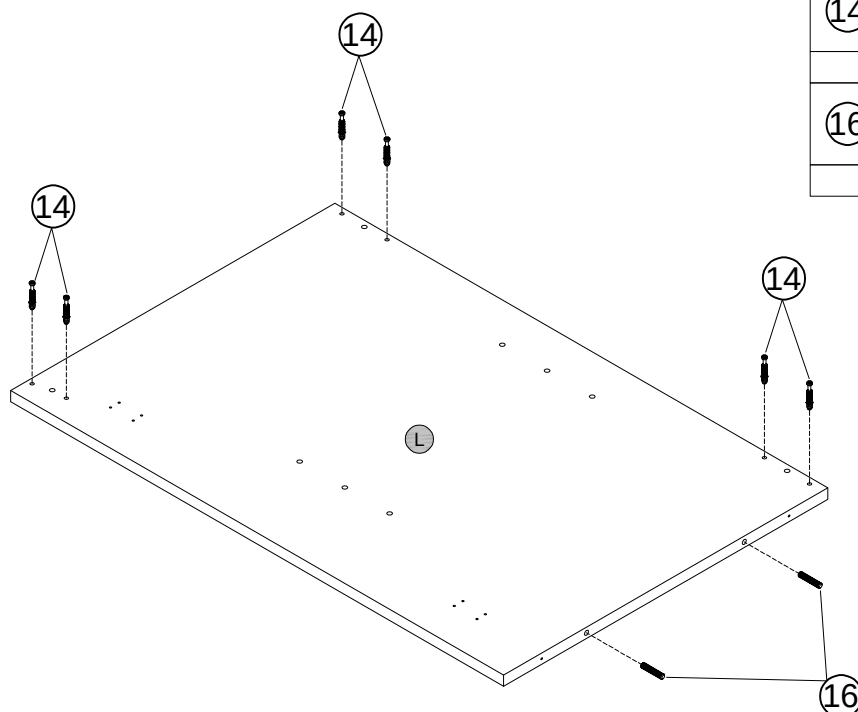


14

6PCS

16


2PCS

Step 19


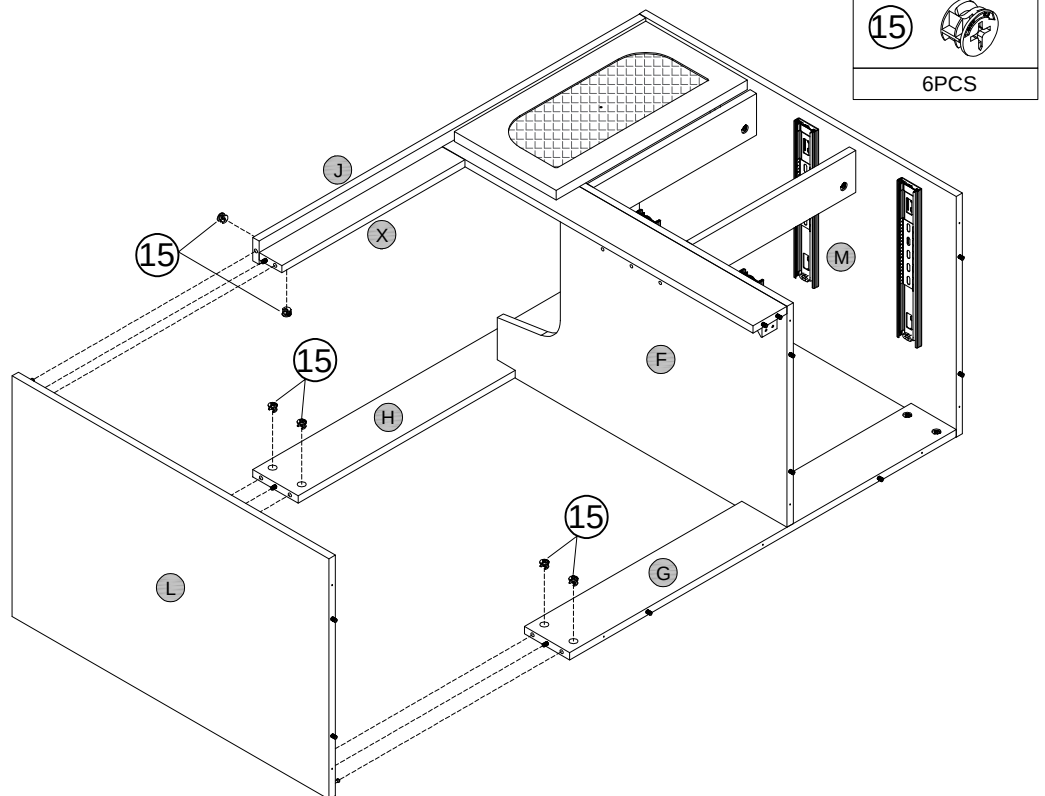


Step 20




For safety, it is recommended that two people turn the product over.

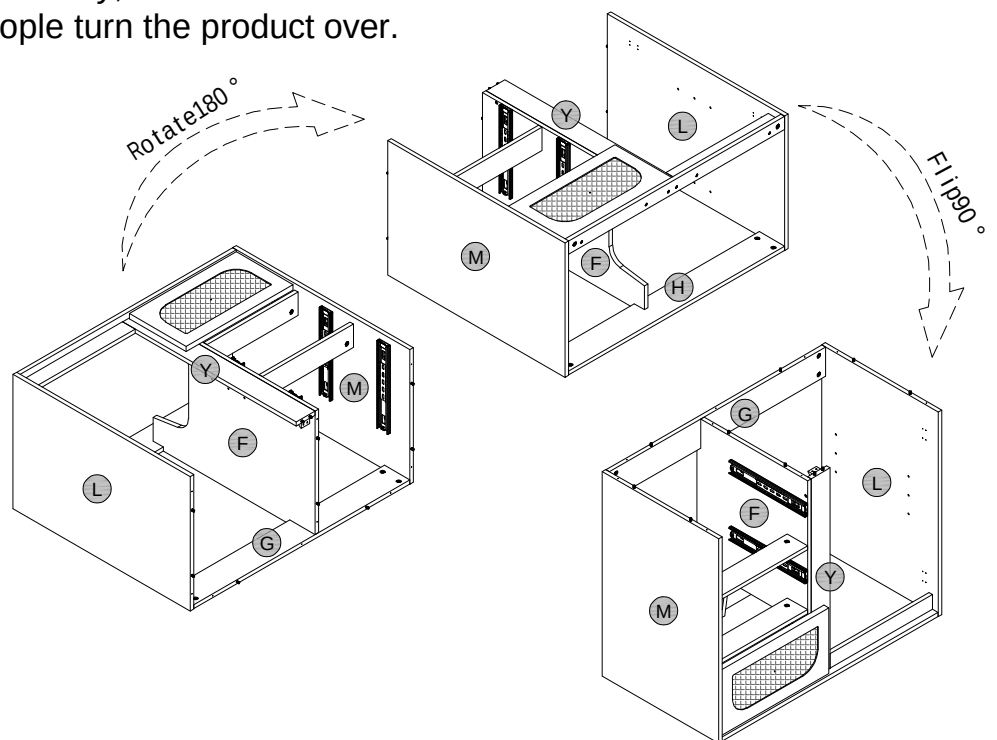

Step 21

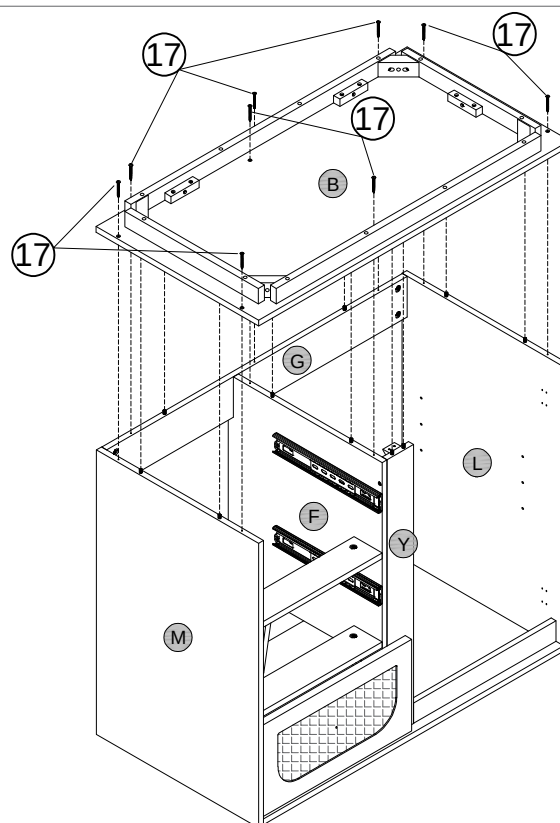


Step 22

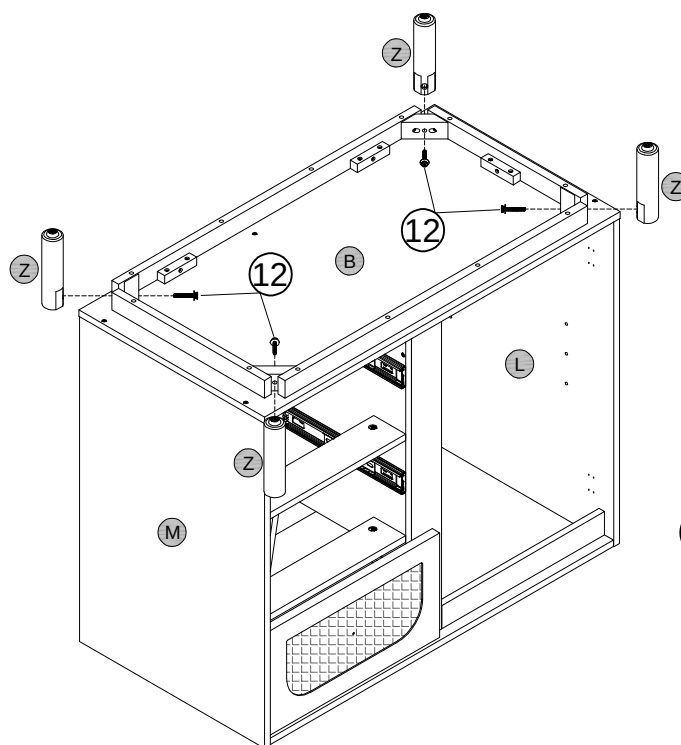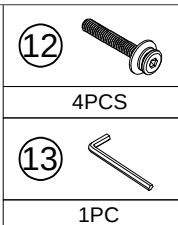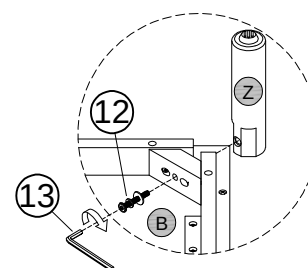


Step 23

For safety, it is recommended that two people turn the product over.


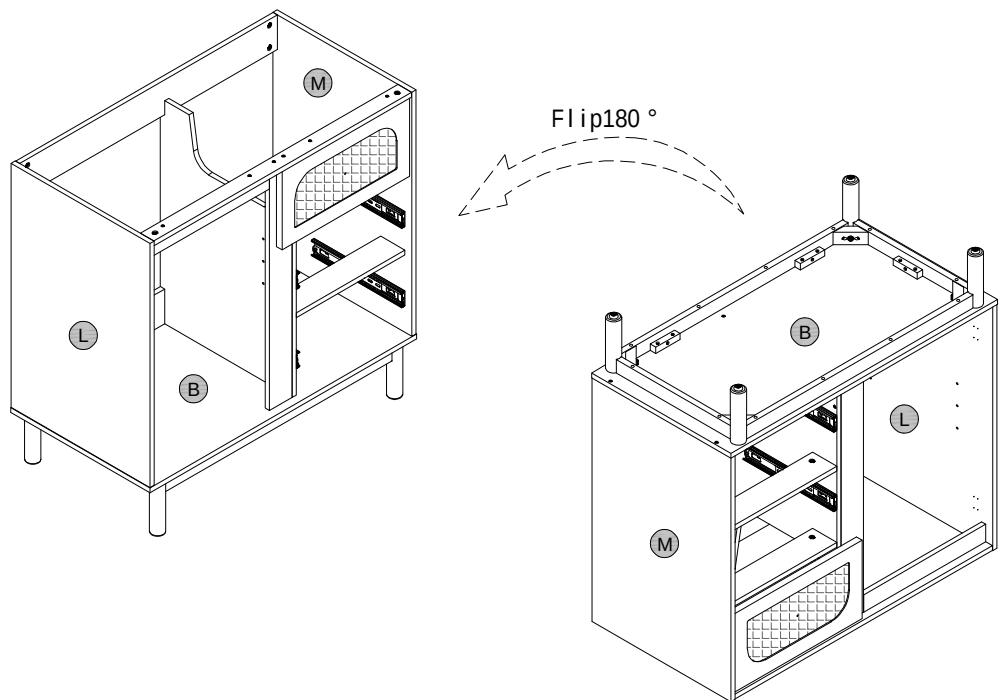


Step 24


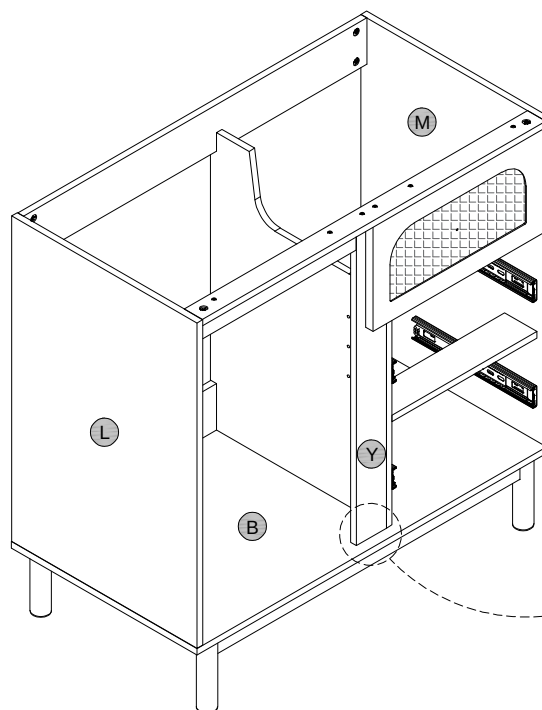


⑨ 
2PCS


Step 25

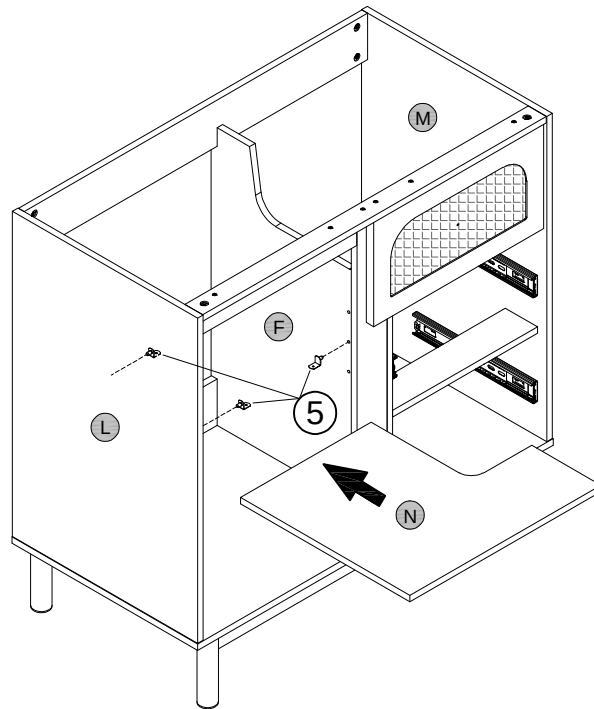


Step 26

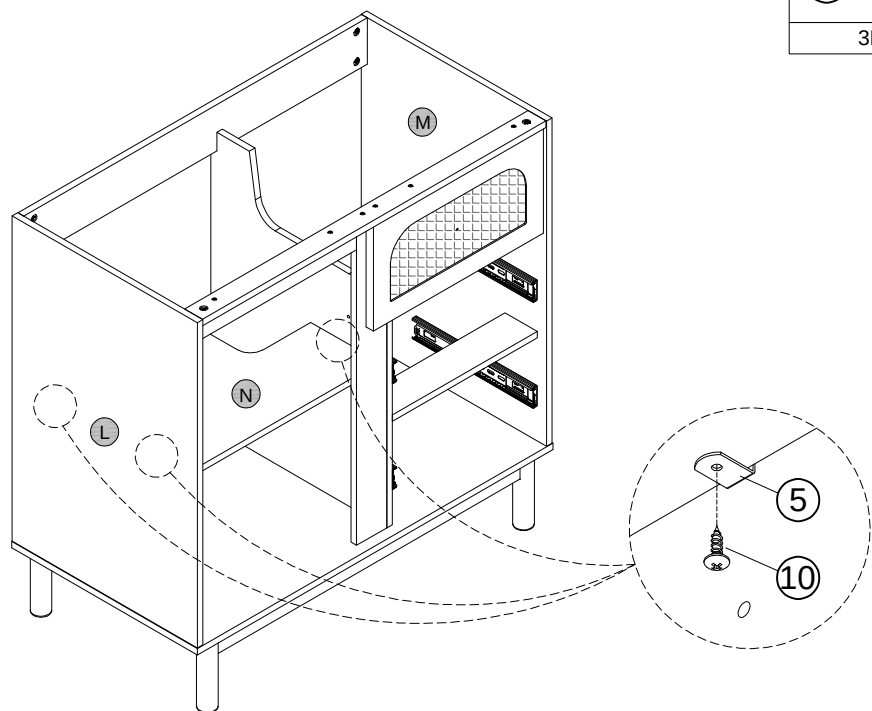


Step 27

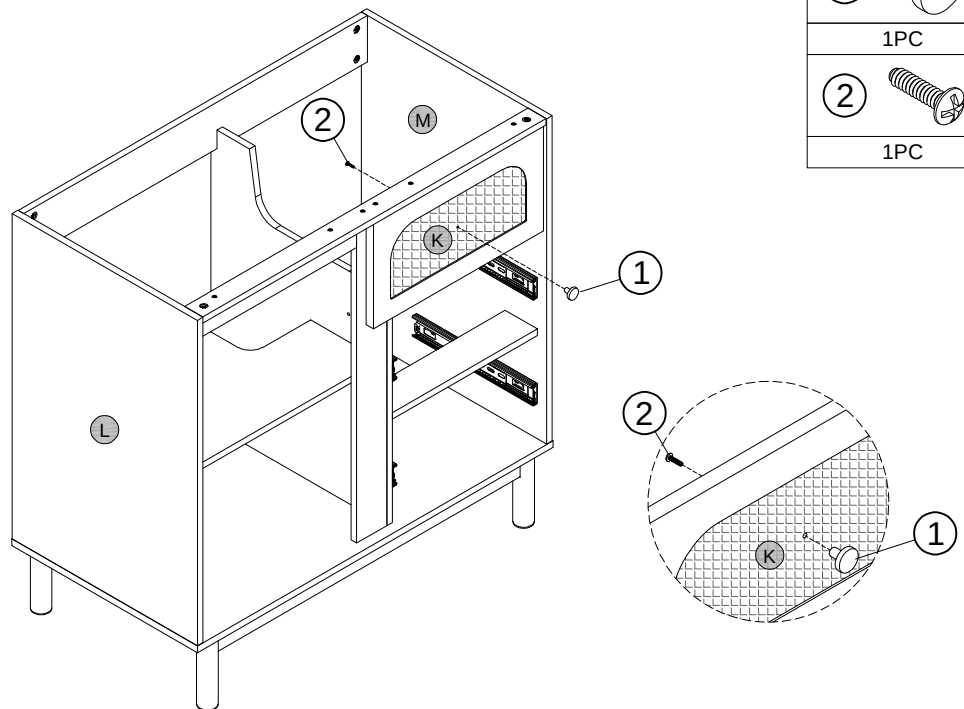

Step 28

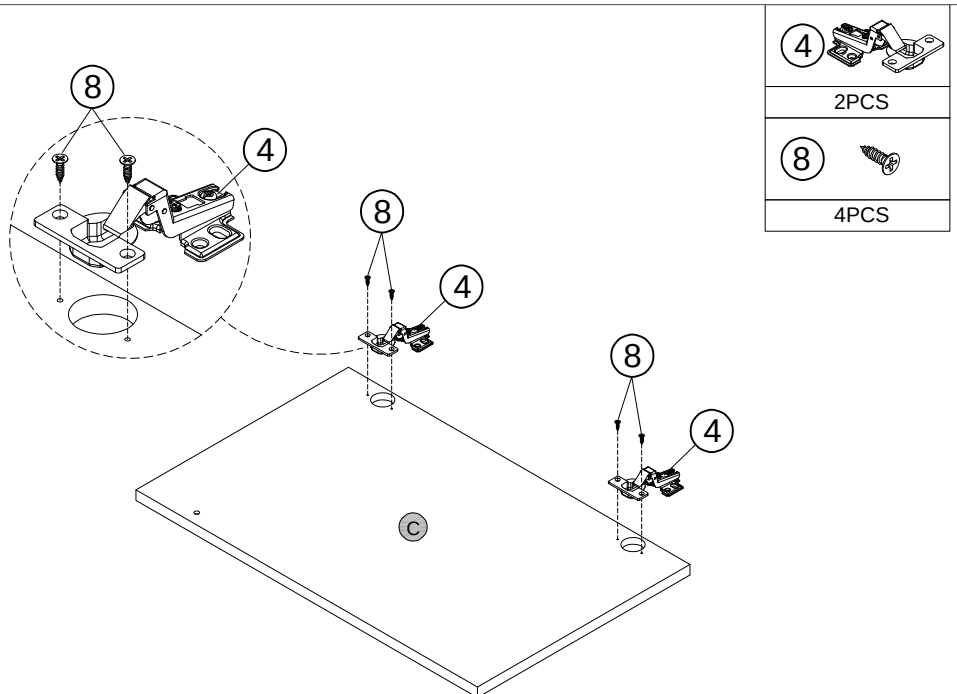


Step 29

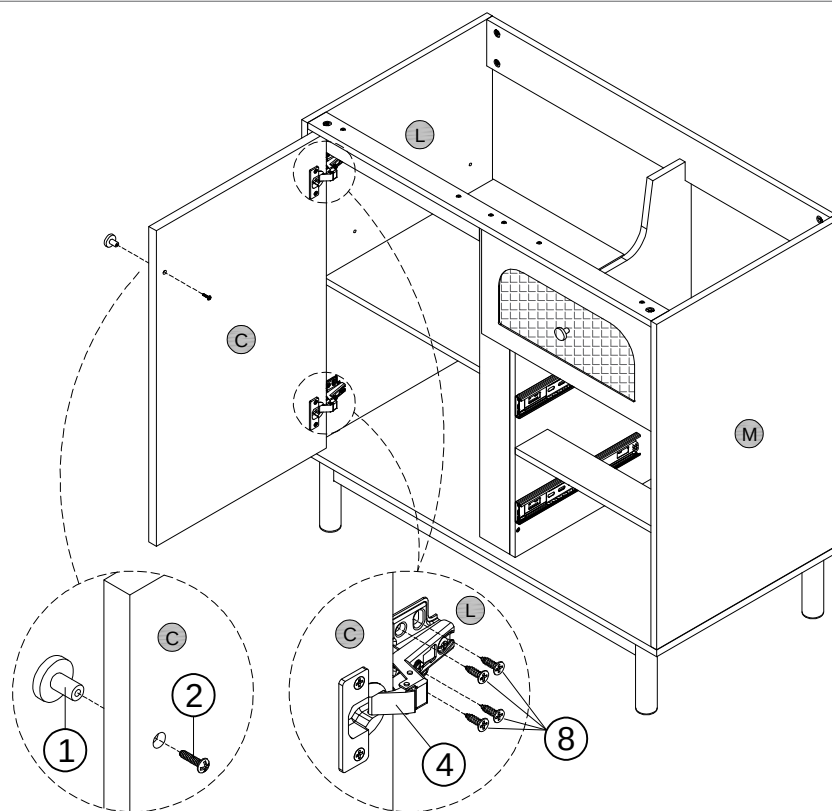

①	
1PC	
②	
1PC	
⑧	
8PCS	


Step 30

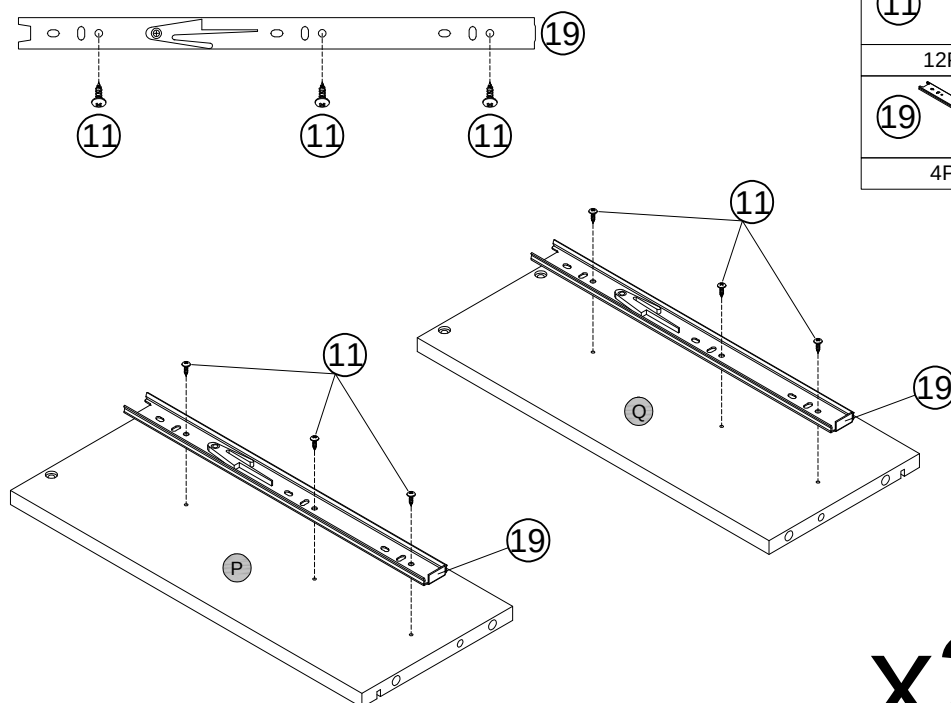


⑪	
12PCS	
⑲	
4PCS	

x2

Step 31

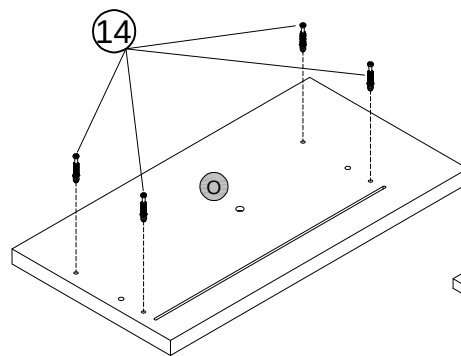


14	
8PCS	
16	
4PCS	

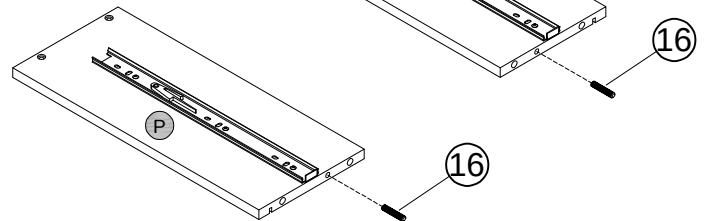


x2

Step 32

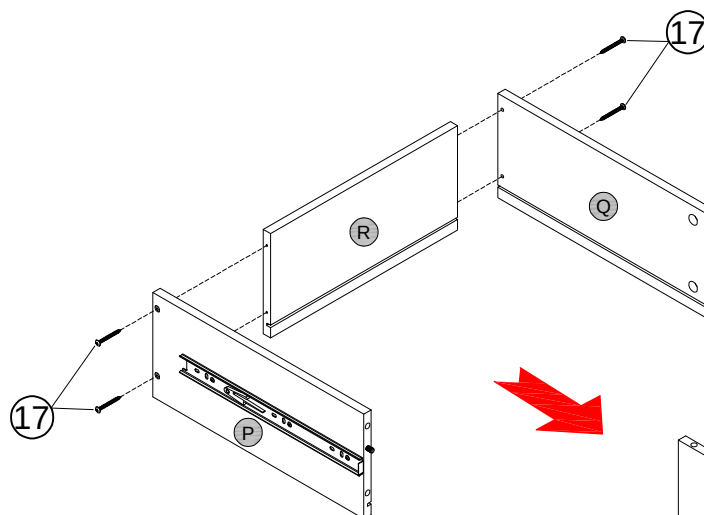

17	
8PCS	


x2

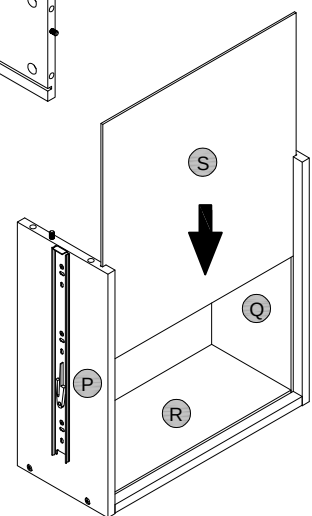

Step 33

15

8PCS

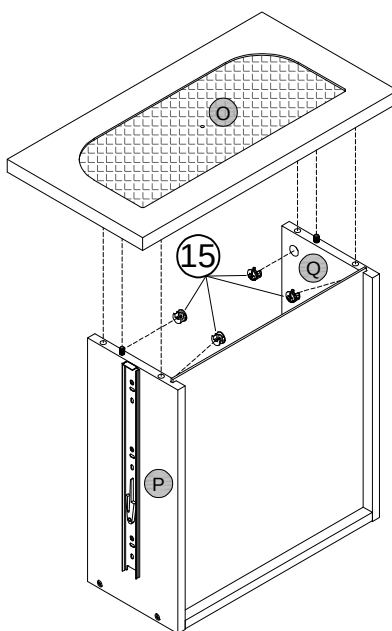

x2


Step 34

1

2PCS


2

2PCS

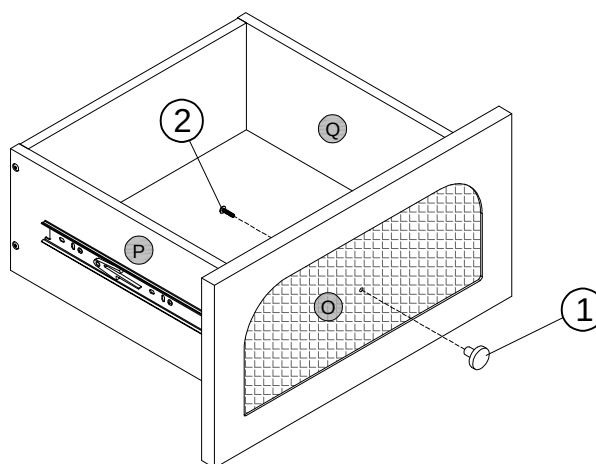


x2


Step 35

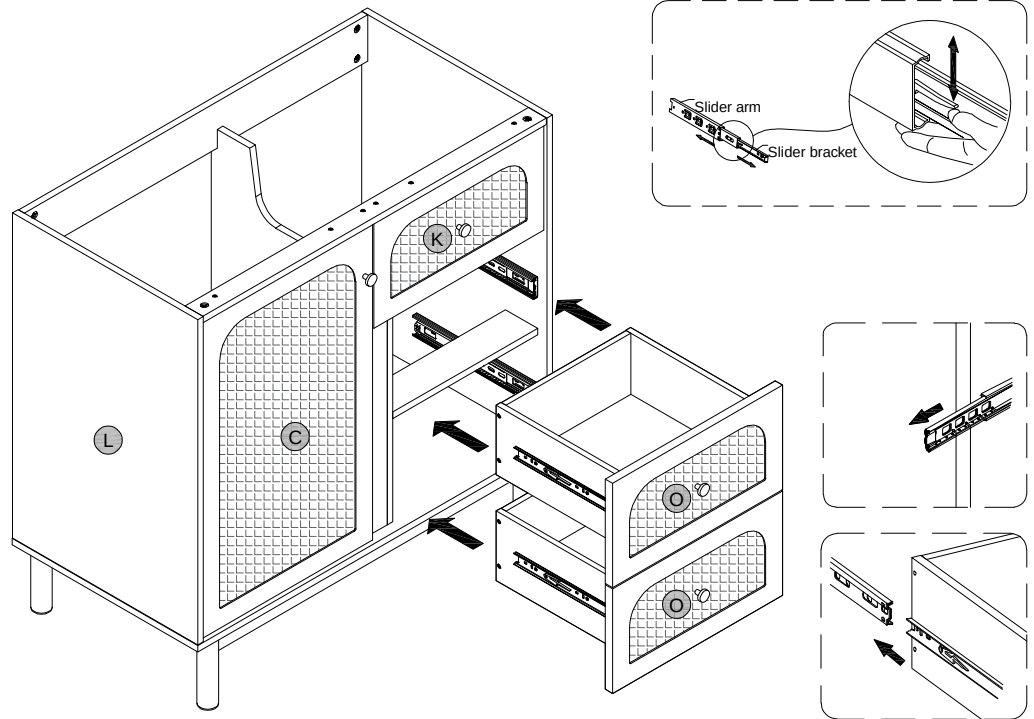


Step 36

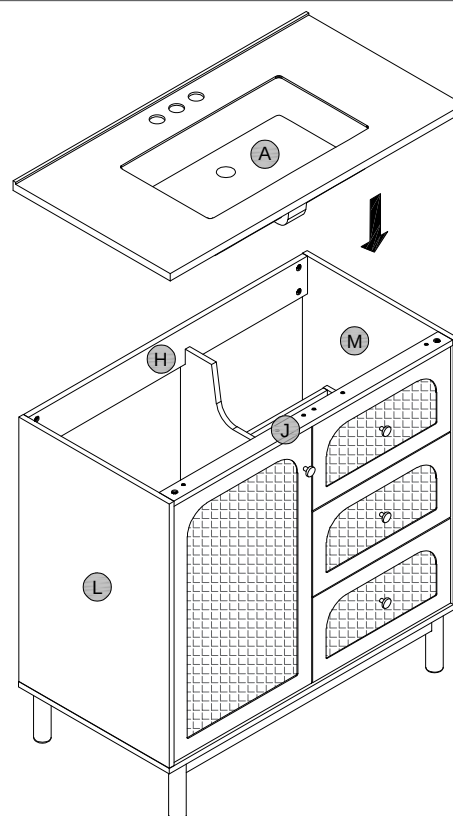


Adjust Height

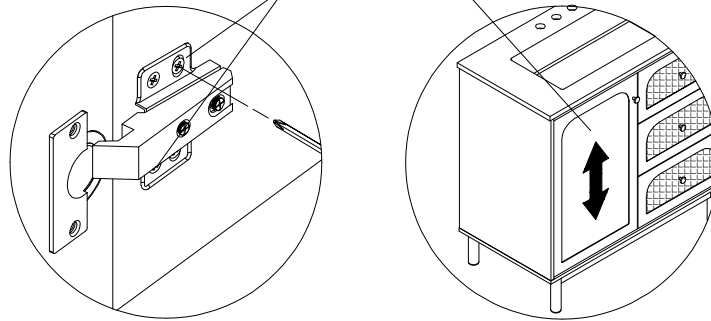

Adjust front and back

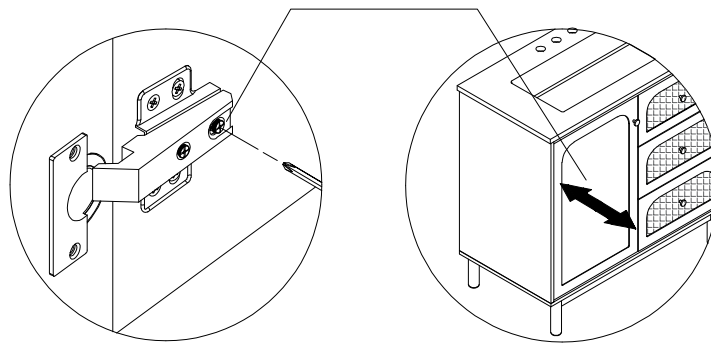


Adjust Left and right

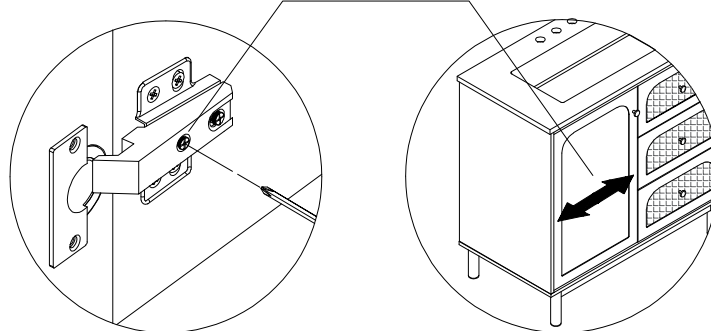

Step 37

18	
2SET	
Cleaning Abrasive Pad	
1PC	

Note: Remove the PE bag covering the wash basin. Inside the bag, you will find one cleaning abrasive sponge (100 × 75 × 5 mm). If there are any stains on the wash basin, use the abrasive side of the sponge to remove them. Be sure to use the rough (abrasive) side for cleaning.

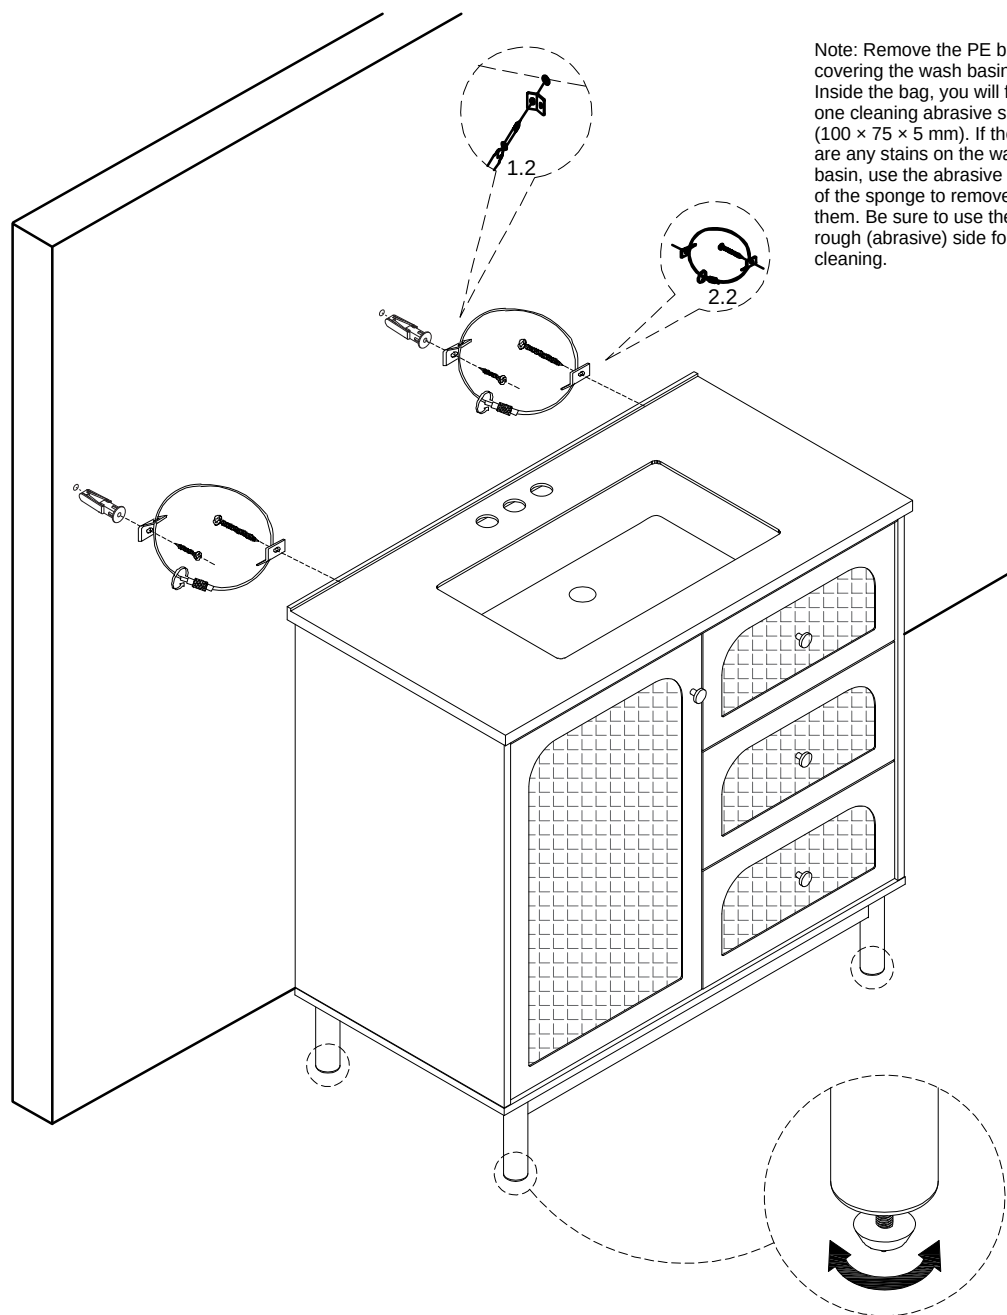

- 1.2 Attach the Metal Brackets, to the Wall Plugs, using Pan Head Screws and a Screwdriver
 2.2 Move the Cabinet Sink against the wall. Pull the anti-tip, through the Metal Bracket, on the wall and Cabinet Sink Base respectively and tighten the lock on the anti-dumping strap