

INCLUDED PARTS: *The components listed below are for a 50ft kit. For example, if you purchased a 100ft kit, you would receive 2X the components listed.*



(6) Straight Dog Arm Extensions

(1) Bag (100) UV Resistant Zip Ties

(1) 50 ft Fence Roll (Poly Mesh or Welded Wire)

Please note: Fasteners to attach the arms to your fence or wall are not included. The appropriate fasteners needed for different fence types are addressed within the instructions.


1 SECURE THE ARMS TO YOUR FENCE

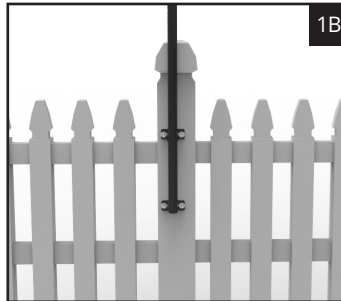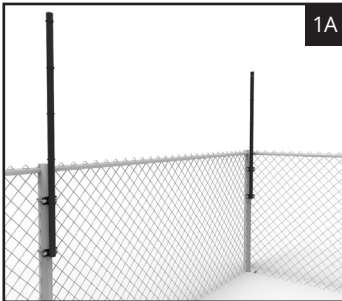

Determine Desired Fence Height

- 1A.** The arms have (2) mounting brackets to secure the arms to your fence post, gate, or wall. The open slots of the mounting brackets allow standard sized U-Bolts for metal posts, washer head screws for wood, and masonry fasteners for masonry.
- 1B.** Prior to securing the arms to your posts or wall, hold up the arms to your posts or wall to determine the finished height you want. String or chalk line can be used to keep the height consistent.

FASTENER BASED ON FENCE TYPE

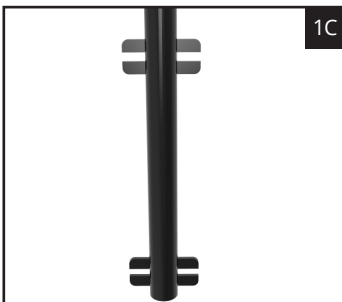

- 1C.** The width of the mounting slots allows the use of fasteners up to 5/16" in diameter. For smaller diameter fasteners like wood screws, it is recommended that a washer be used under the head of the screw so that the washer + screw catches the face of the mounting brackets. The open slots of the mounting brackets allow a number of standard sized U-Bolts to strap the arms to round or square metal posts.

Wood Fence – If you have 4x4 posts with the posts visible from the inside of the fence, use (4) appropriate fasteners to secure the arms directly to the posts. A screw/lag length of 2" or more is recommended. If you cannot see the posts from the inside of the fence, locate and posts and mark the locations on the inside of the fence. Determine what length of screws will be needed to reach and screw into the post at least 2 inches from the inside face of the fence. If your posts are round metal posts, follow the instructions for Chain Link fence.

Masonry Wall – The Fence Extender Arms most easily secure to a masonry wall with masonry fasteners. Walls vary greatly so it is difficult to say which fastener size and length would work best for your needs. A standard cinder block wall would use 1/4" or 5/16" diameter masonry screws 1 1/2" long. Longer screws are unnecessary due to the void spaces on cinder block.

Chain Link – The Fence Extender Arms will clamp onto the round metal posts with U-Bolts. Find the diameter of your chain link posts by measuring the post circumference with a soft measuring tape and divide that measurement by 3.14 (π) to get the diameter. We have U-bolts available in sets of two (one set good for one arm) in 1 3/8", 1 5/8", 2", and 2 1/2". U-bolts can also be found at hardware stores.



Decorative Aluminum and Steel Fences – This fence type looks similar to wrought iron estate fencing and has square posts. The Fence Extender arm can clamp onto the post with square U-bolts. We stock U-bolts for the most common size which is for 2" wide posts.

Vinyl Fence – Most vinyl fences have hollow posts. The simplest way to secure the arms to a vinyl post is to screw into a piece of wood placed inside of the post. Mark the post and drill holes through the face of the plastic posts for screws. Take the post cap off and insert an 18" to 24" section of 2x4 inside the post against the inside face with holes. Run screws through the Fence Extender Arm, through the drilled holes in the post and into the 2x4. Please note: Since the posts are hollow plastic, if enough force is placed on an arm, the post may shatter.



NOTE: Corners may require special corner adapters sold separately. Corner adapters generally are needed for any square corner post regardless of material type. <https://www.dogproofer.com/products/corner-adapter-for-houdini-dog-proofer-arms>

2 INSTALLING ARMS ON GATES




FOR INWARD SWINGING GATES WITH POLY MESH

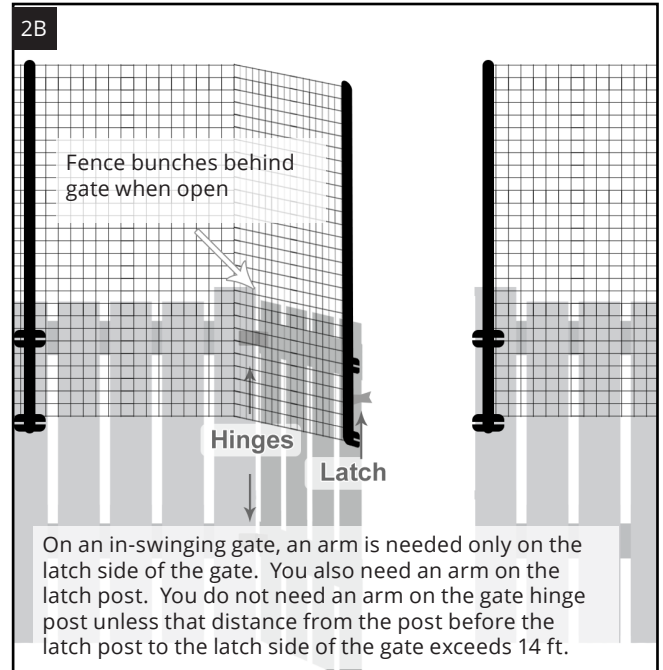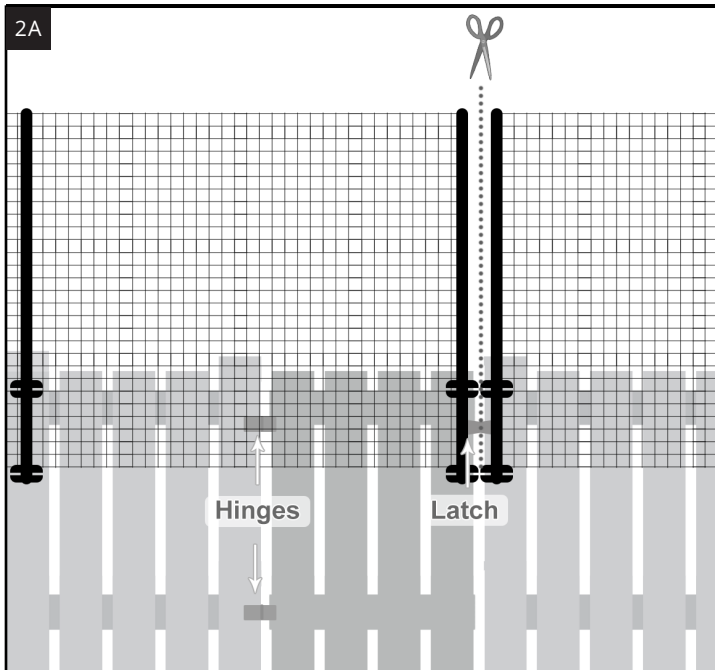

FOR OUTWARD SWINGING GATES & INWARD SWINGING GATES W/ WELDED WIRE METAL FENCE

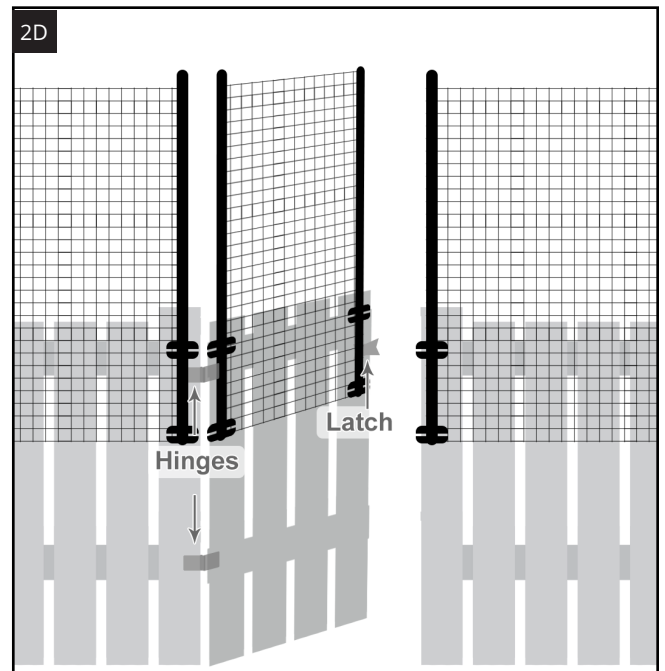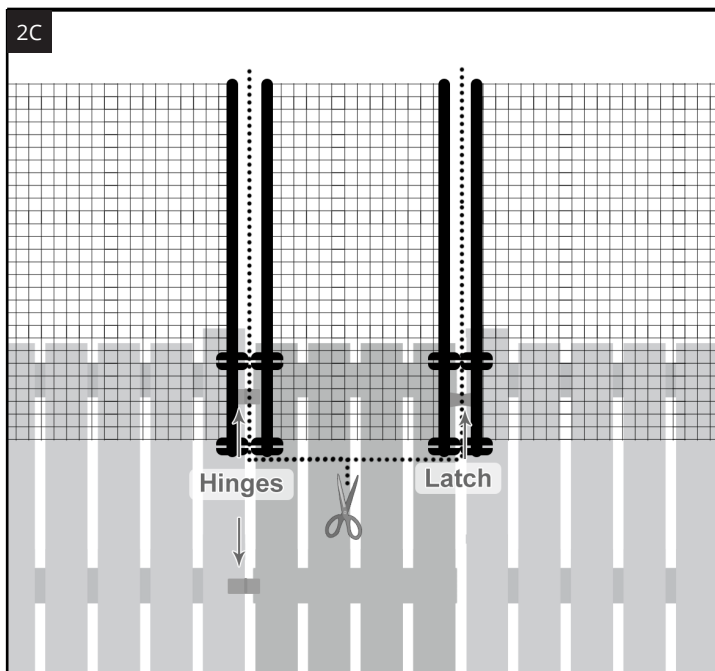

3 INSTALLING FENCING MATERIAL ONTO ARMS

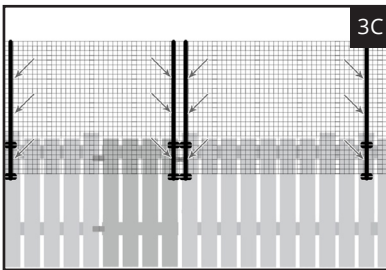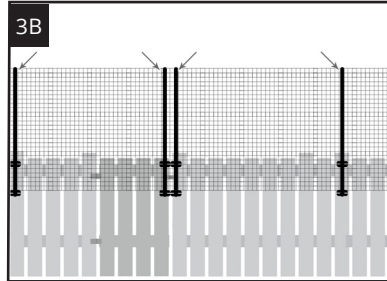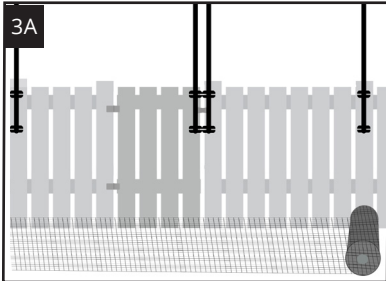





3A. Unroll the fence over a span of multiple posts.

3B Go back to the first post, lift up the fence to the top of the arm and secure the top of the fence to the top of the arm with a zip tie. Repeat until you are at a corner or end point.

3C Go back to the first post and add zip ties down the post (3-4 additional ties). Go to the end/corner and add 2-3 additional zip ties down the post.

Tip: (*poly mesh only*) If you have sags or bubbles, the fence does not stretch so you cannot pull out sags and bubbles by pulling harder arm to arm. You need to make small folds on the fence similar to pleats or darts in fabric. This is done at arms. Folds are really cinching cells of fence together with zip ties. If you have a sag at the top of the fence you may fold squares of fence together and secure with zip ties to remove them. This is purely for looks. It will not affect the performance of the system.

4 SECURING BOTTOM OF MESH FENCE

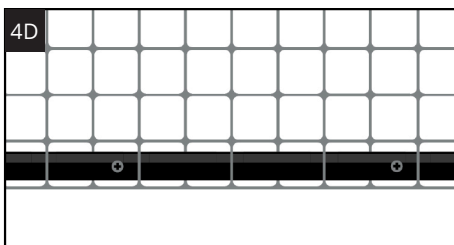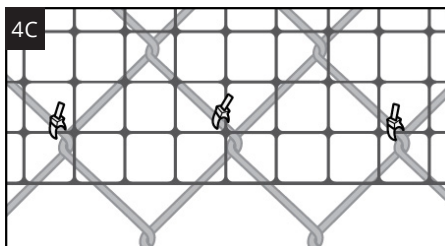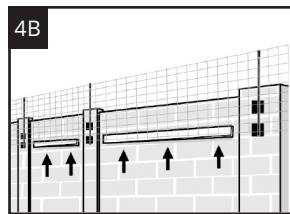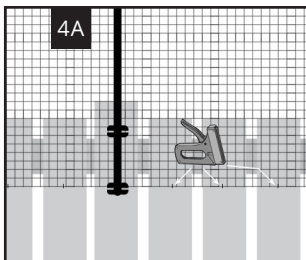

4A. Wood Fence - Use staples to secure the bottom edge of supplied fencing material to your fence. Stainless steel staples are recommended for staple gun-type staples. You can also use a pneumatic/battery narrow crown stapler. The best hammered staples are Romex staples found in the electrical dept of most home stores. Use three staples per foot.

4B. Masonry Wall - One option is to secure strips of wood to the wall between arms and staple the fencing to the wood. Another option is to use masonry screws with large (fender) washers to catch the grid joints of the fence. We also offer a thick band of nylon that can be secured to your wall every few feet and the fence secured to it with zip ties. It is stretched and acts like a tight bungee cord when properly installed ([see PVC/Wall Kit](#)). Please contact us for alternate suggestions.

4C. For Metal Fences - The dog fencing can be secured to your chain link fence or top rail with zip ties. We recommend Heavy Duty Ties like used to install the fencing to the Fence Extender Arms. Another option is hogrings to secure the dog fence directly to the chain link mesh. We recommend the Stanley Ringer Style Hogring tool ([see Hogringer & Rings](#)).

4D. Vinyl / PVC Fence - We offer a thick band of nylon that can be secured to your wall every few feet and the fence secured to it with screws. It is stretched and acts like a tight bungee cord when properly installed ([see PVC/Wall Kit](#)).

4E. Decorative Aluminum & Steel Fences (not shown) - Secure the dog fencing with zip ties to the pickets or top rail. We recommend Heavy Duty Zip Ties like those supplied to secure the dog fencing to the Fence Extension Arms.