

ASSEMBLY INSTRUCTION
(Instructions de montage)

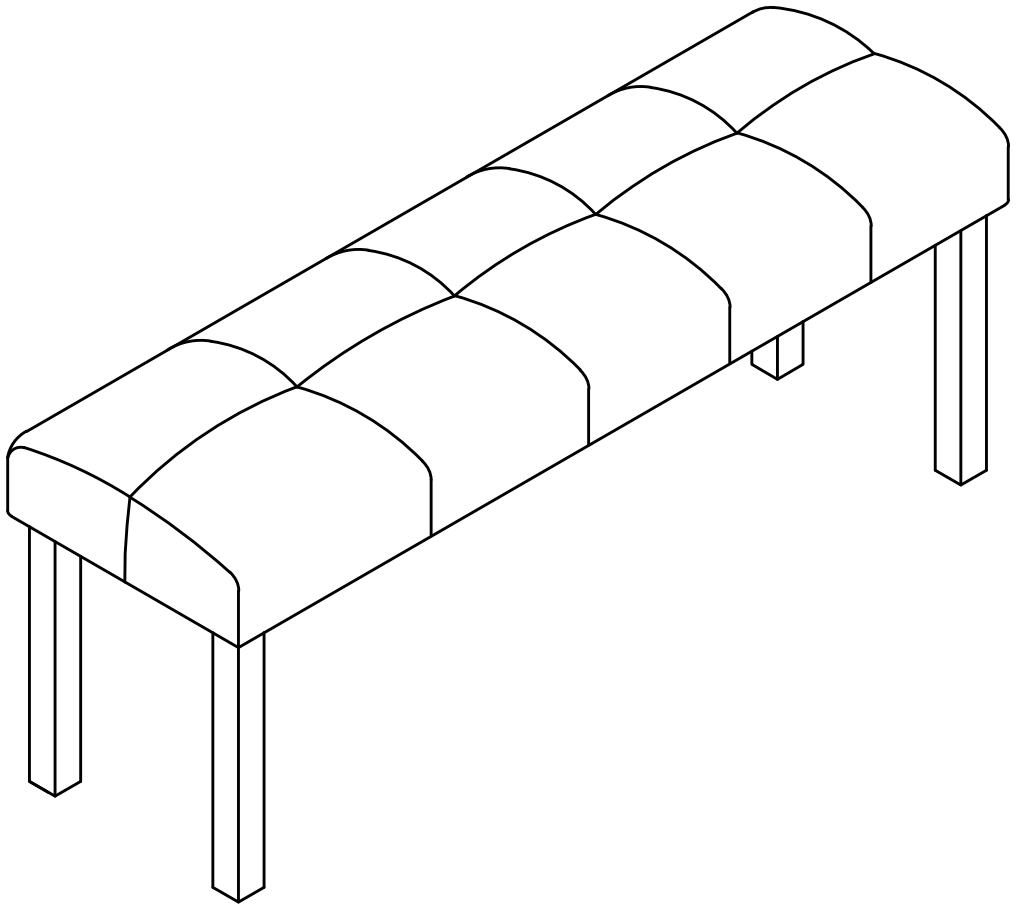

NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS
(REMARQUE: SERRER À 50% AVANT DE FIXER TOUS LES BOULONS)

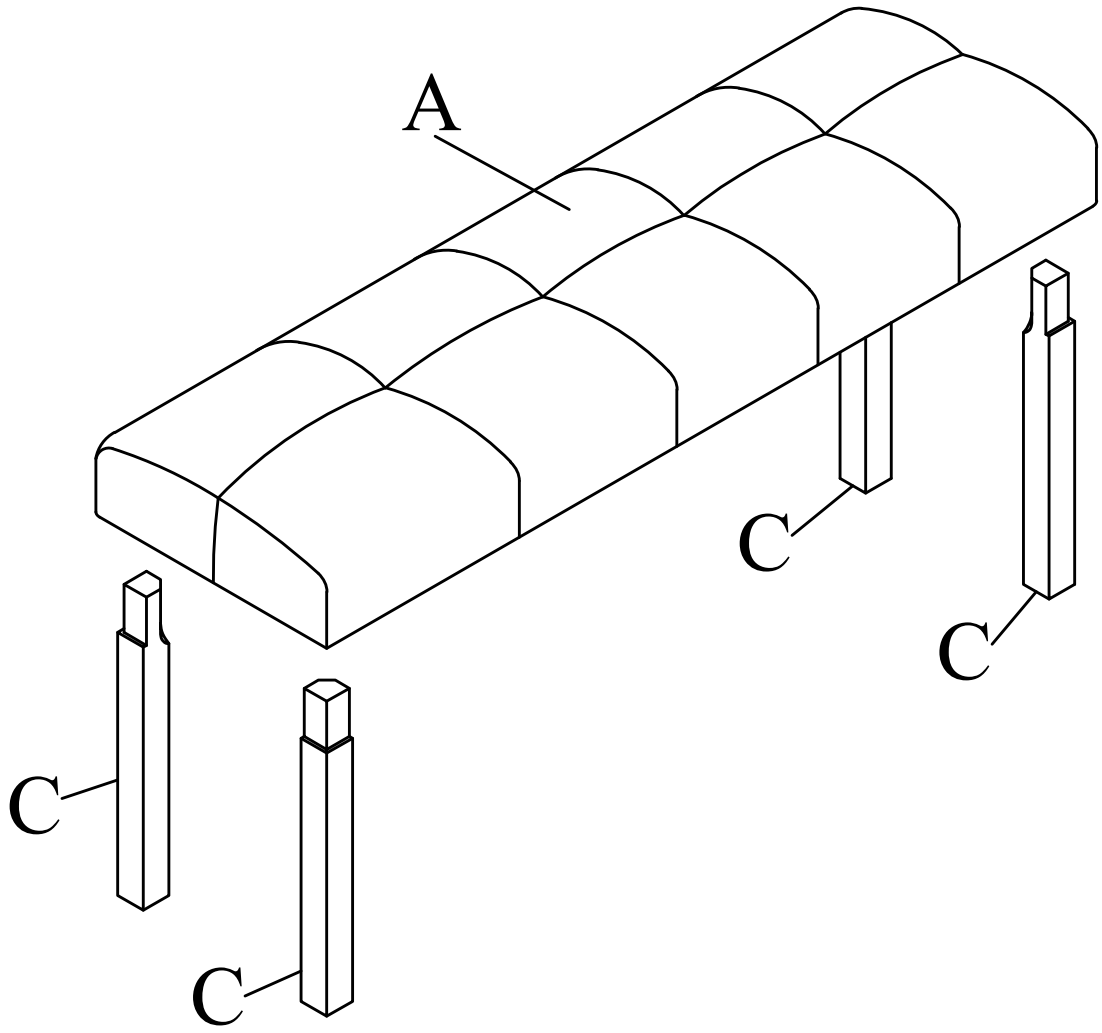


Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure itremains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all thescrews, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly,chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustmen tof the screws.


PART LIST(LISTE DES PIÈCES)

A

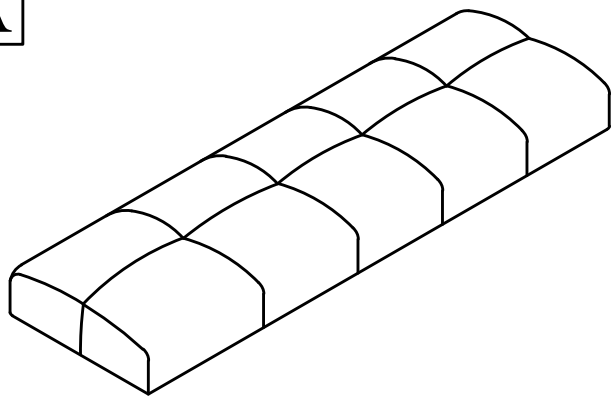

Seat Cushion (1pc)
(Coussin de siège)


C

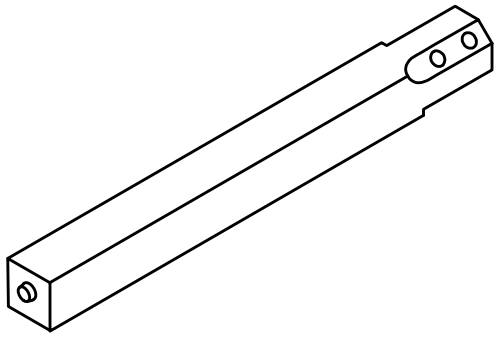

Leg (4pcs)
(Jambe)


HARDWARE LIST (LISTE DU MATÉRIEL)

1

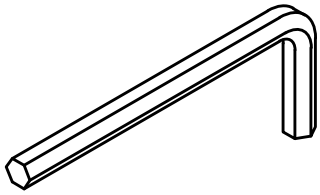


Allen key 5mm (1pc)
(Clé allen)

2




Bolt 5/16"x50mm(8pcs)
(boulon)

3

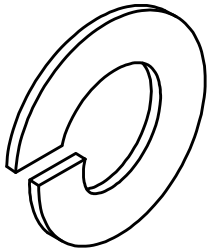


Lock washer Ø5/16" (8pcs)
(Rondelle élastique)



4

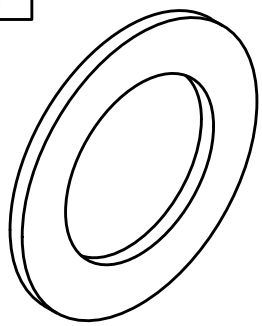


Flat washerØ5/16"*Ø22mm
(8pcs)
(Rondelle plate)

STEP 1

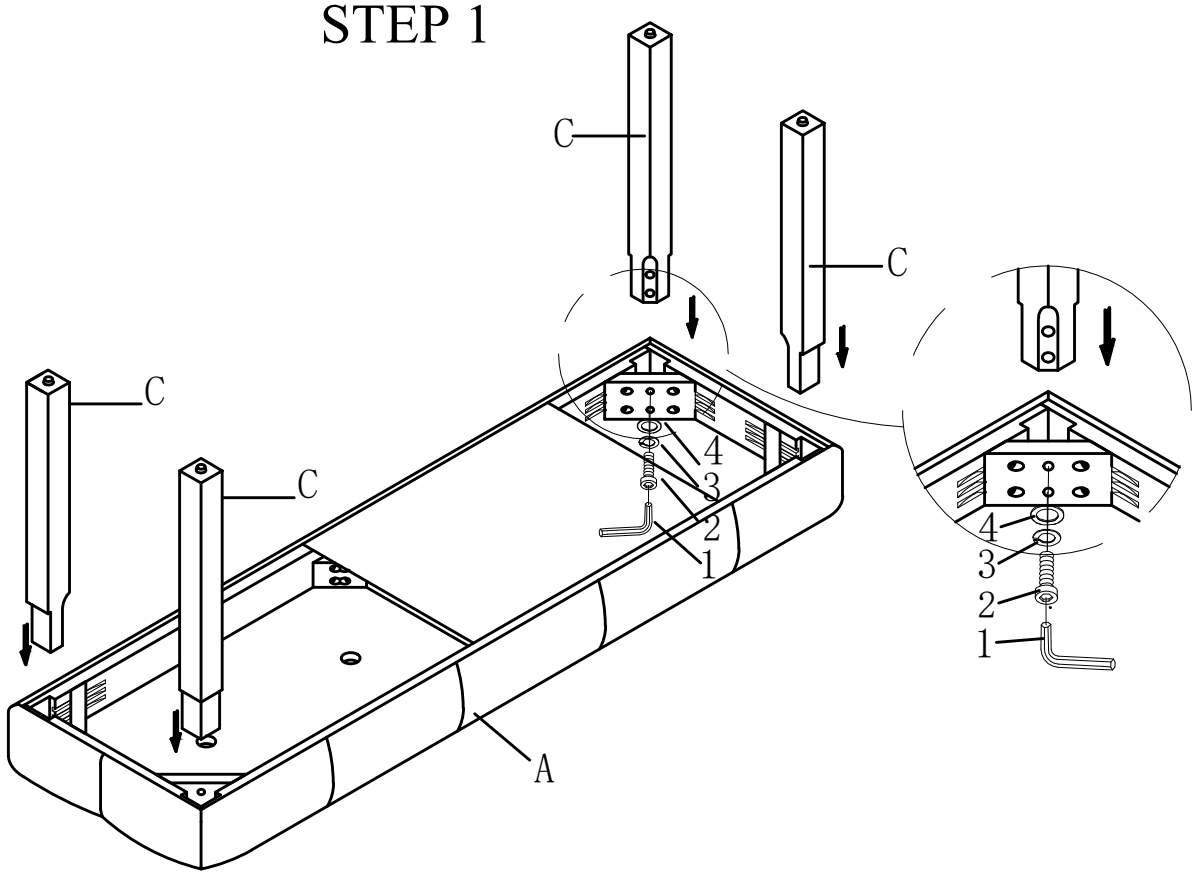



1		Allen Key 5mm (Clé Allen)	1pc		3		Lock washer Ø5/16" (Rondelle élastique)	8pcs
2		Bolt 5/16"x50mm (Boulon)	8pcs		4		Flat washer Ø5/16"*Ø22mm (Rondelle plate)	8pcs

STEP 2

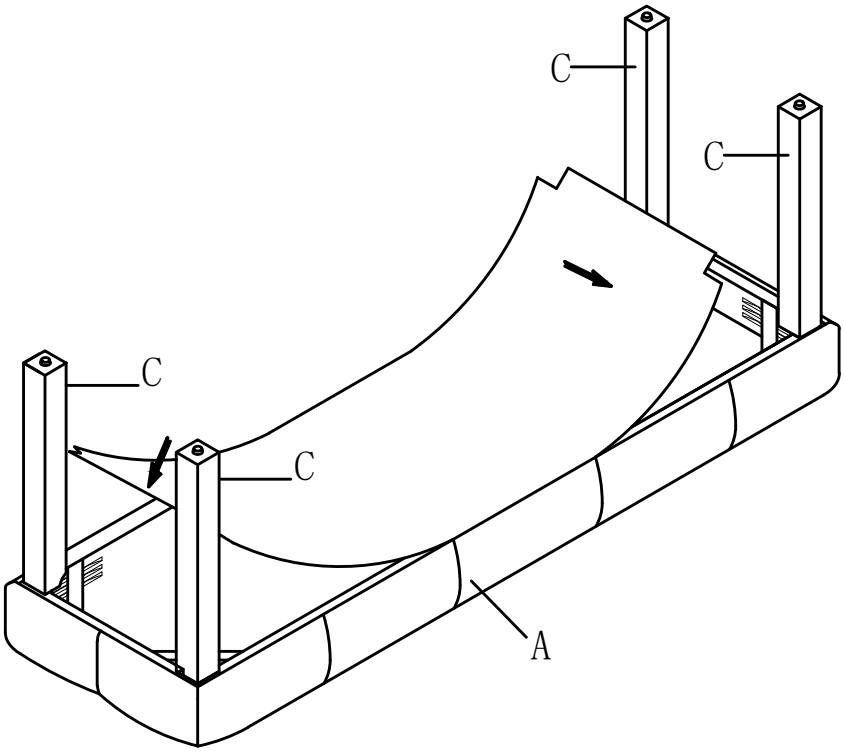

STEP 3

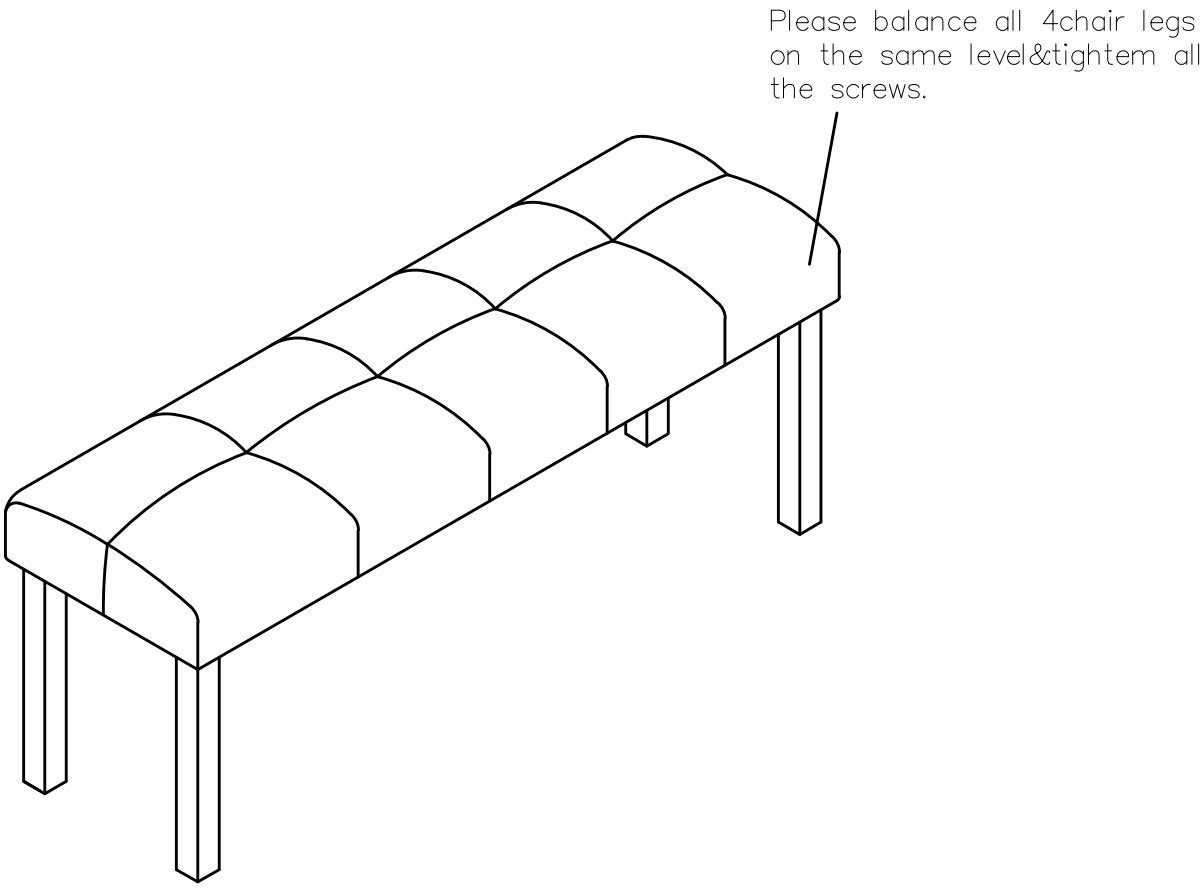

1		Allen Key 5mm (Clé Allen)	1pc

