ASSEMBLY INSTRUCTIONS 24INCH BATHROOM VANITY (COMBO)



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"




* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,


Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.

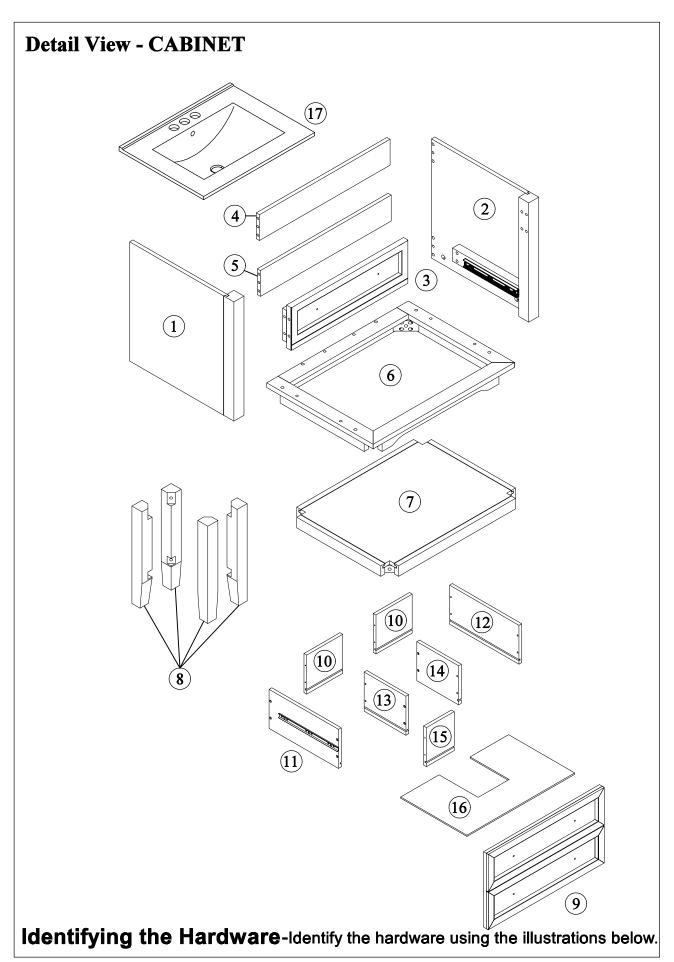



Part I	List		
1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Drawer Fake - 1pc		Rear Panel Top -1pc
5		6	
	Rear Panel Bottom -1pc		Frame Mid - 1pc
7		8	
	Frame Bottom - 1pc		Foot Cabinet - 4pcs
9		10	
	Drawer Face - 1pc		Drawer Rear - 2pcs
11		12	
	Drawer side(L) - 1pc		Drawer Side(R) - 1pc
13		14	
	Mid Drawer Side(L) - 1pc		Mid Drawer Side(R) - 1pc


Part List 15 Mid Drawer - 1pc Drawer Bottom - 1pc Sink - 1pc


Hardware List


		<u> </u>
A	B	[C]
		(*)
ø6x35mm	ø14.5x12mm	ø13x1/4"x28mm
Three in one bolts (14pcs)	Three in one lock (14pcs)	Hex-Head bolts (4pcs)
D	E	I
(a)—201111111123		
ø13x1/4"x38mm	ø1/4"x16x1mm	
Hex-Head bolts (8pcs)	Washer (12pcs)	Handle (6pcs)
J	K	L
ø5/32"x15mm	ø5/32"x25mm	ø8xø4x32mm
Handle screw (4pcs)	Handle screw (2pcs)	Round head screw (16pcs)
M	N	0
9////		
ø8x30mm	4mm	
Wood dowel (14pcs)	Allen key (1pc)	Anti fall hardware (1set)

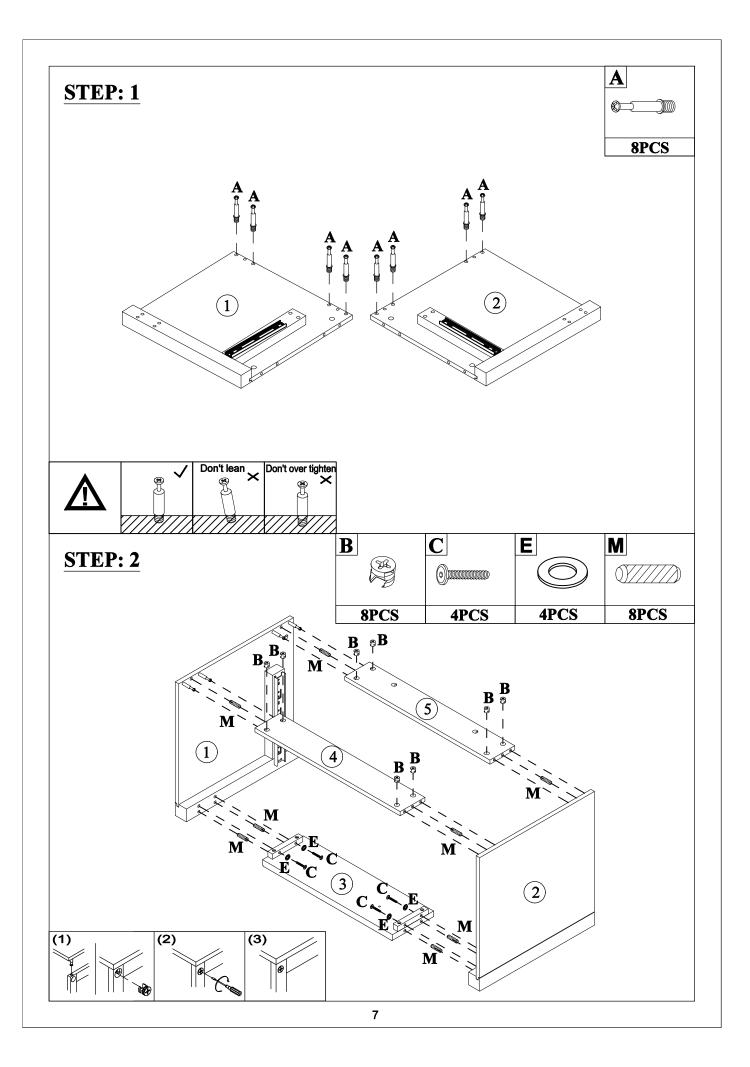


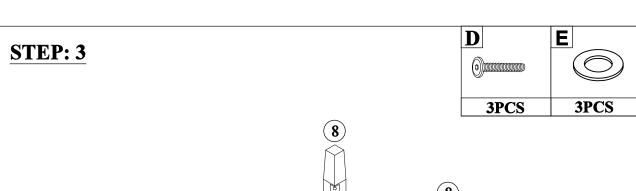


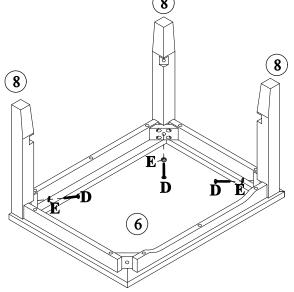


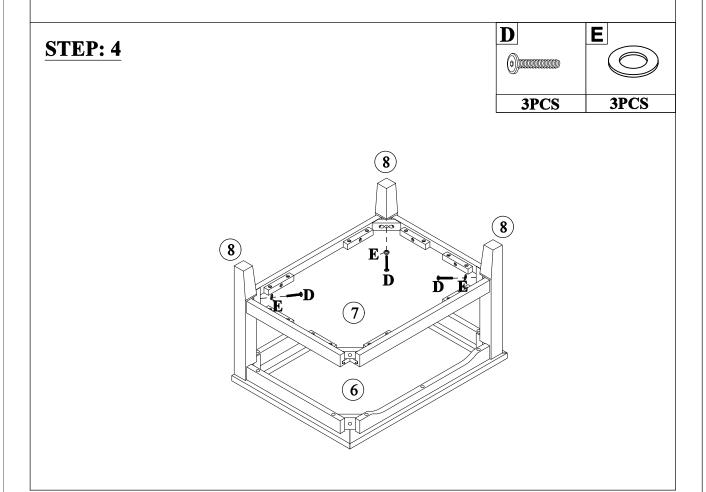

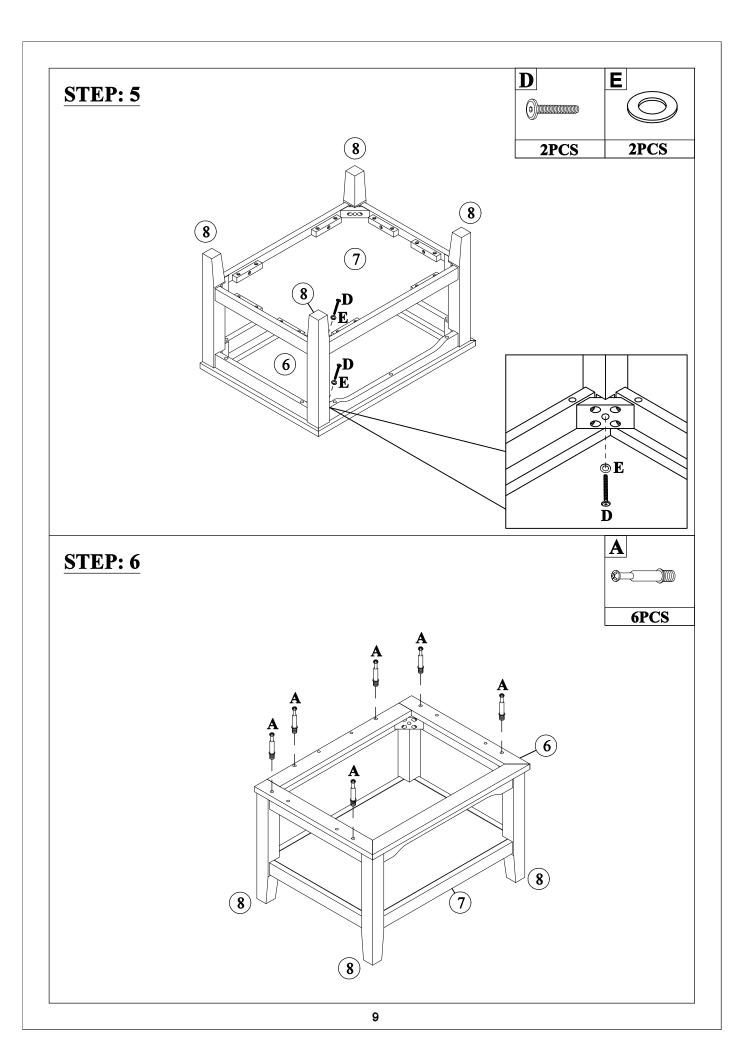

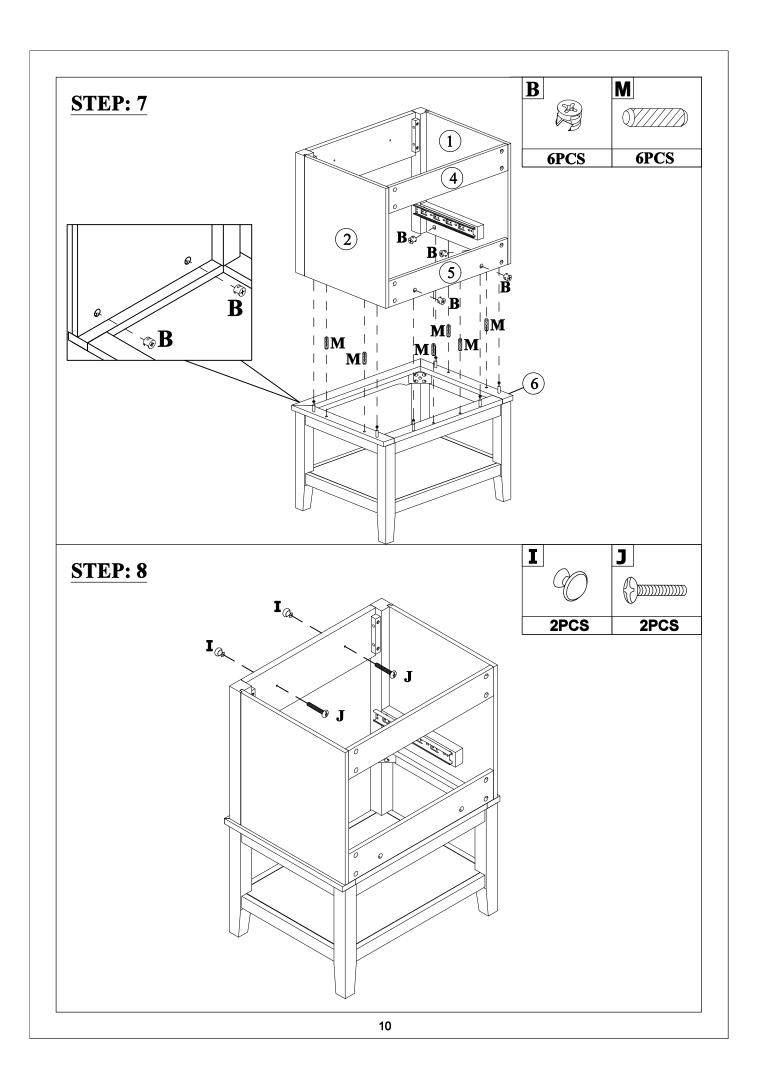

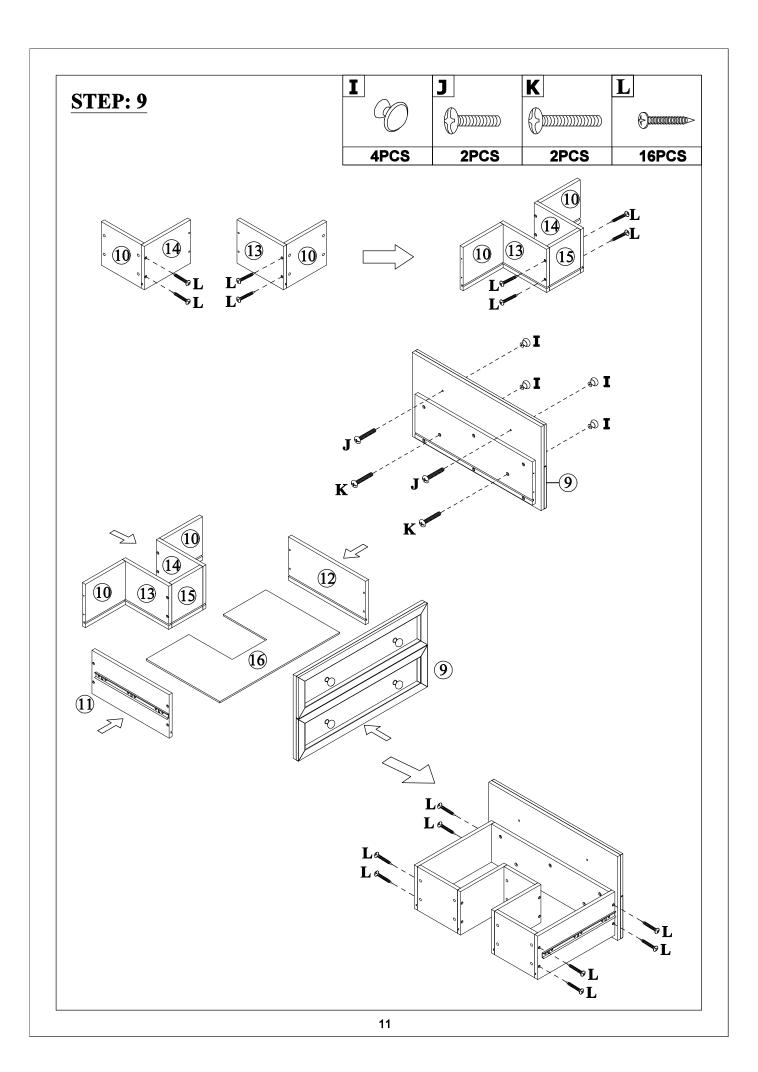

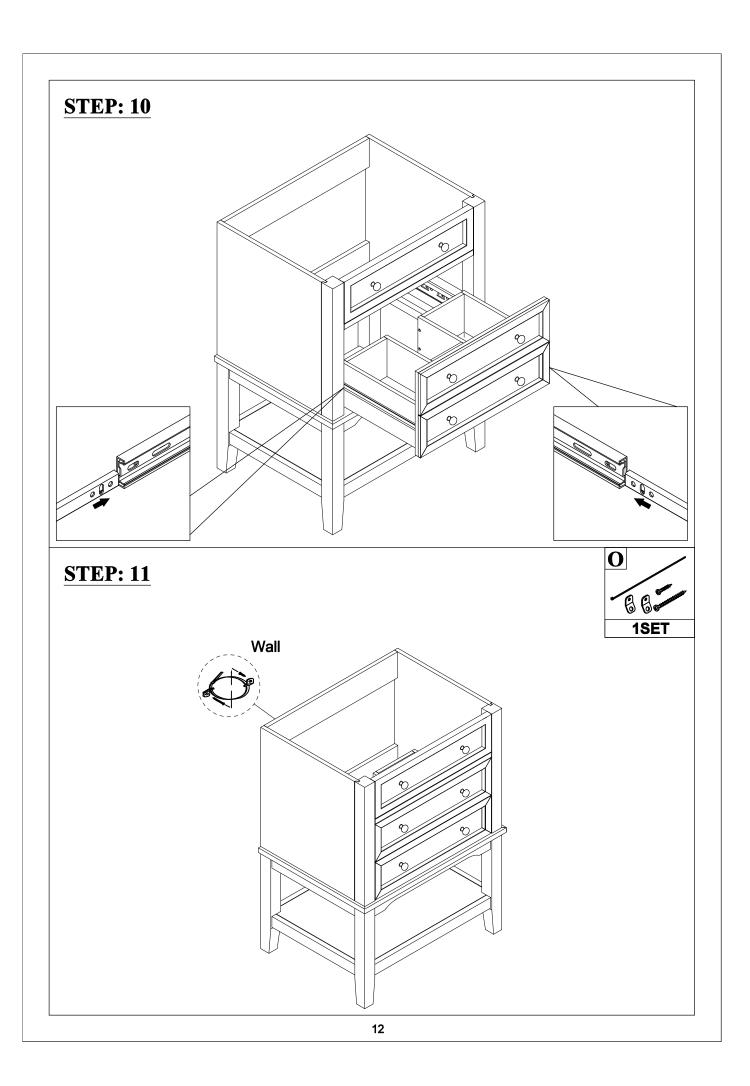



Install the sink on the cabinet with glue. Let stand for 24 hours



STEP: 13



