






Upholstered Bed

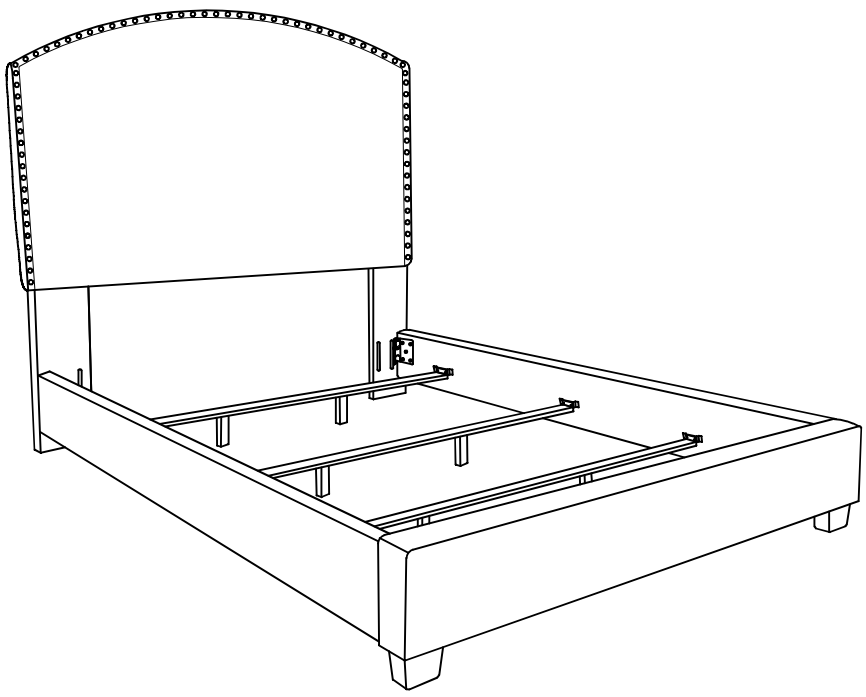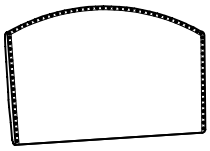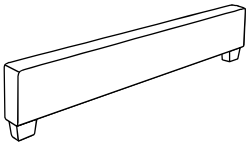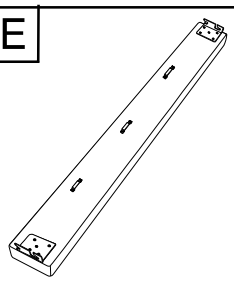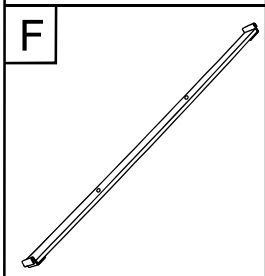


PART LIST

A	B	C	D	E
				
Headboard Panel 1 PC	Left Headboard Post 1 PC	Right Headboard Post 1 PC	Footboard Panel 1PC	Side Rail 2 PCS

F	G
	
Slat 3 PCS	Support Leg 6 PCS


*Please note headboard panel, left headboard post and right headboard post will ship separately


HARDWARE LIST

#1	#2	#3	#4
 5/16"x1-3/4"L			 M5
Bolt 11 PCS(Extra1)	Spring Washer 11 PCS(Extra1)	Flat Washer 11 PCS(Extra1)	Allen Wrench 1 PC

Step 1. Lay headboard panel (part A) down on a soft surface, such as carpet, as shown below. Attach left headboard post (part B) and right headboard post (part C) to headboard panel (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

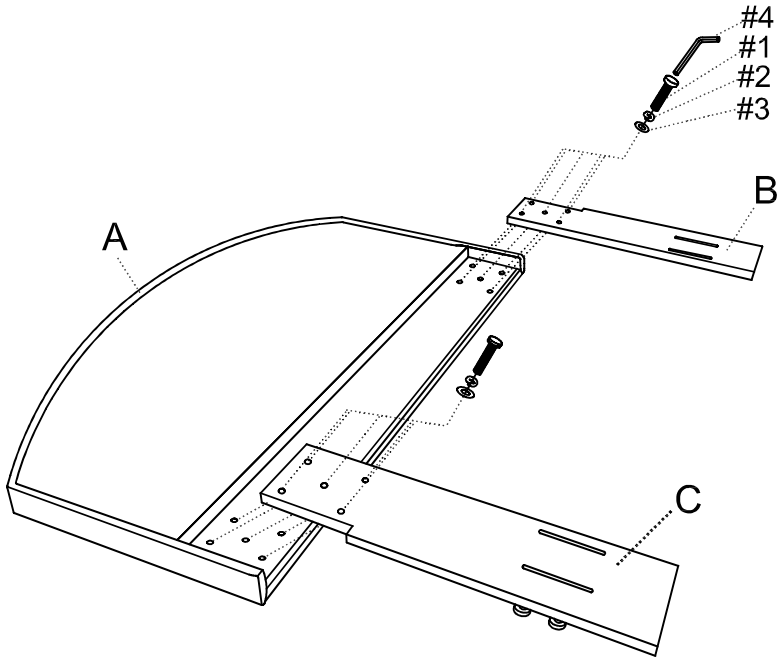

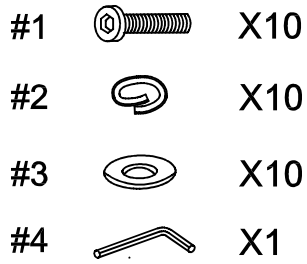


Step 2. Carefully turn assembled headboard upright. Attach side rails (part E) to headboard posts (parts B & C) and footboard panel (part D) using allen wrench (part #4) to screw out the bolts on the headboard posts (parts B & C) and footboard panel (part D), then hang up the side rails (part E) and secure the bolts using allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

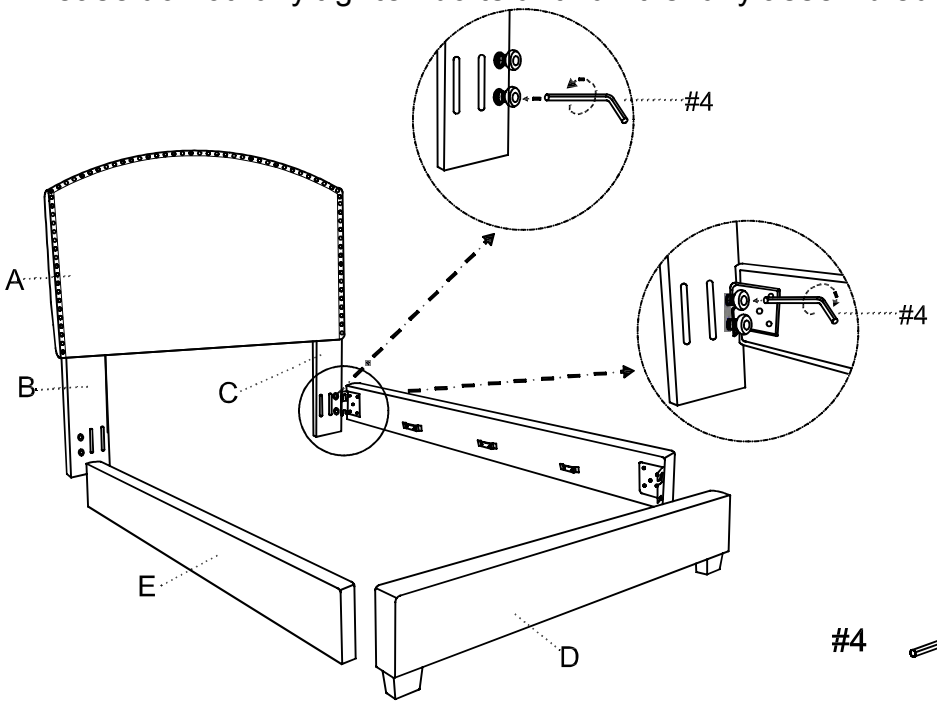



Step 3. Attach support legs (part G) to slats (part F).

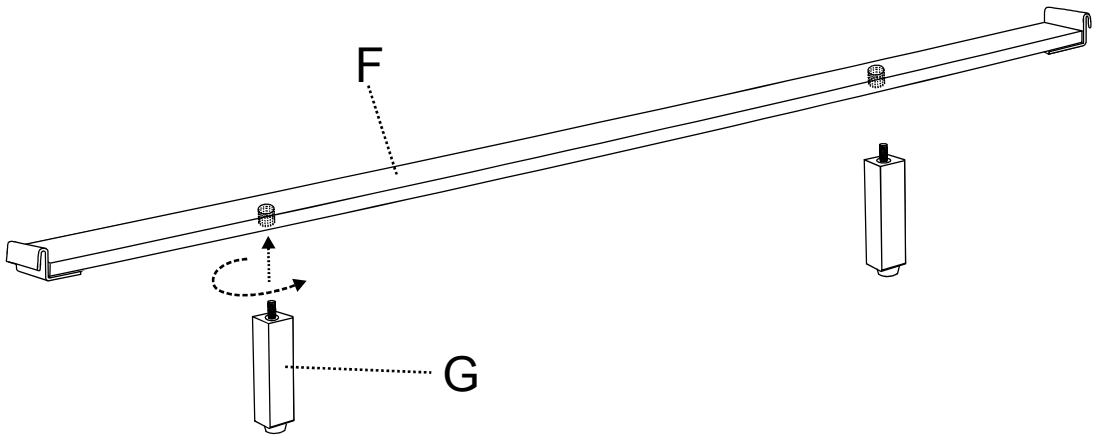

Step 4. Attach assembled slats (parts F & G) to side rails (part E) by fitting the metal supports in place.

NOTE: Please fully tighten all bolts at this time.

