




# 10'x10' Calais hardtop gazebo

# Assembly Manual

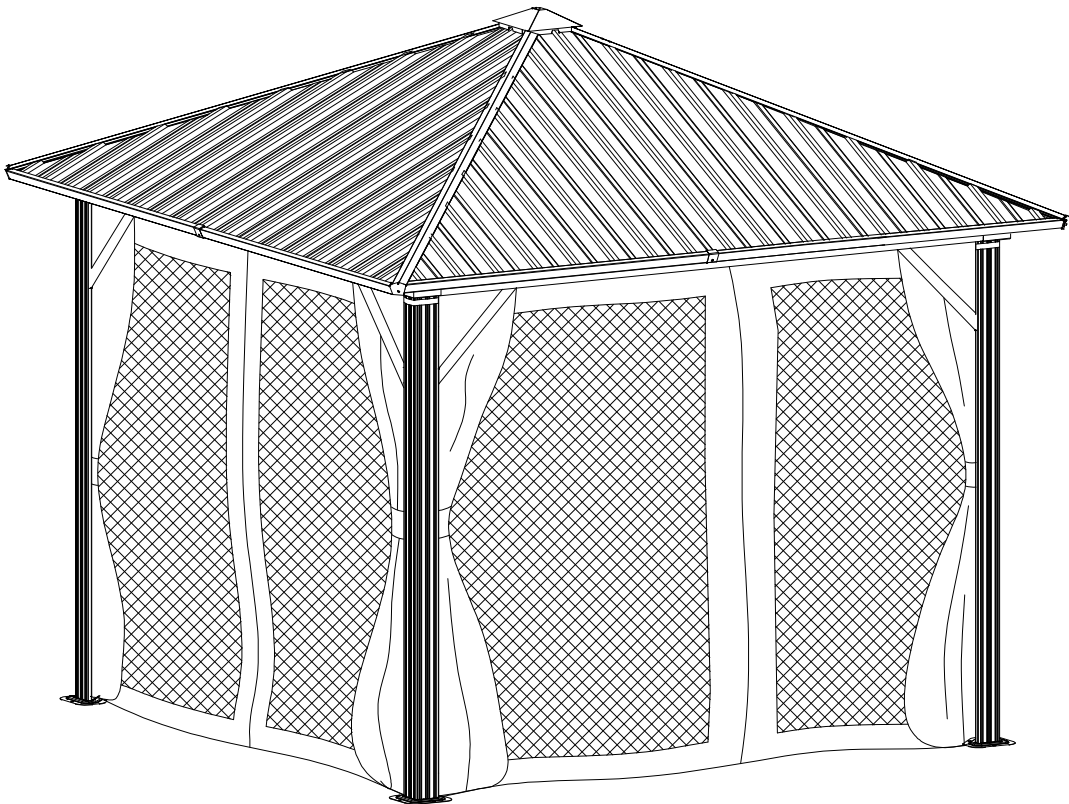

**Read the instructions before use of this product.**

Please keep this instruction manual for future reference.



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Use the hex keys in the box.



6. Please use a Phillips screwdriver.




7. Do not fully tighten screws prior to complete assembly.




















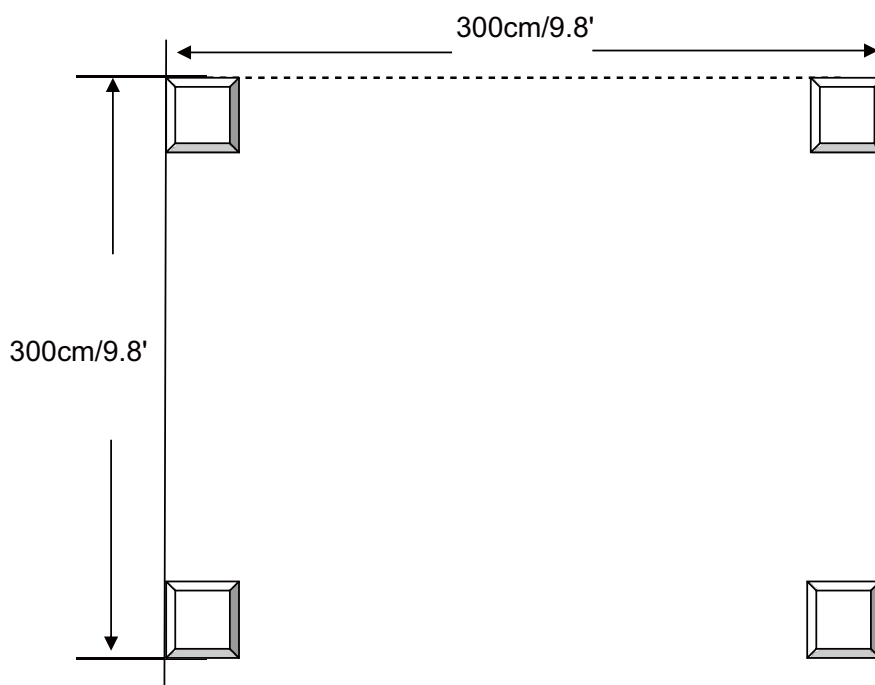















8. For ease of construction, you may need to use a drill.










---


## 10x10' ANCHOR BLUEPRINT



PARTS&HARDWARE LIST			
PART PIECE	ITEM/ARTICLE	DESCRIPTION	QTY/QTÉ
A		Pole	4
B		Beam	4
B1		Beam	4
D		Roof Bar	4
E		Corner Roof Bar	4
F		Corner Solidifying Bar	4
F1		Corner Solidifying Bar	4
G1		Finishing Bar	4
G2		Finishing Bar	4
H		Solidifying Bar	8
J1		Corner Cover	4
J2		Joint Cover	4
K		Outside Roof Connector	1
K1		Inside Roof Connector	1
L		Base	4
M1		Finishing End	4
M2		Finishing End	4
M3		Iron Angle	4


PART PIECE	ITEM/ARTICLE	DESCRIPTION	QTY/QTÉ
M4		Iron Angle	4
M5		Spacer	64
O1		Panels	4
O2		Panels	4
O3		Panels	4
O4		Panels	4
O5		Panels	4
O6		Panels	4
P		Union Bar	4
Q		Hook	64
D1		Metal Bracket	16
R		Metal Bracket	56
S	 M6*50	Screws	8+1
T	 M6*25	Screws	56+3
U	 M6*25	Screws	5+1

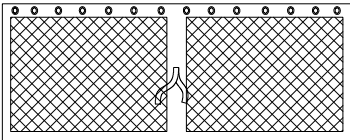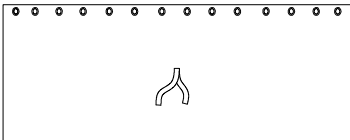PART PIECE	ITEM/ARTICLE	DESCRIPTION	QTY/QTÉ
V	 M6*15	Screws	100+4
W		Wrench	1
X		Screws	32+3
X1	 M6*45	Screws	4+1
Y	 5*10	Screws	56+3
Z		Allen Key	1
Z1		Mosquito Sidewall	4
Z2		Solide Sidewall	4
Z3		Screw Driver	1

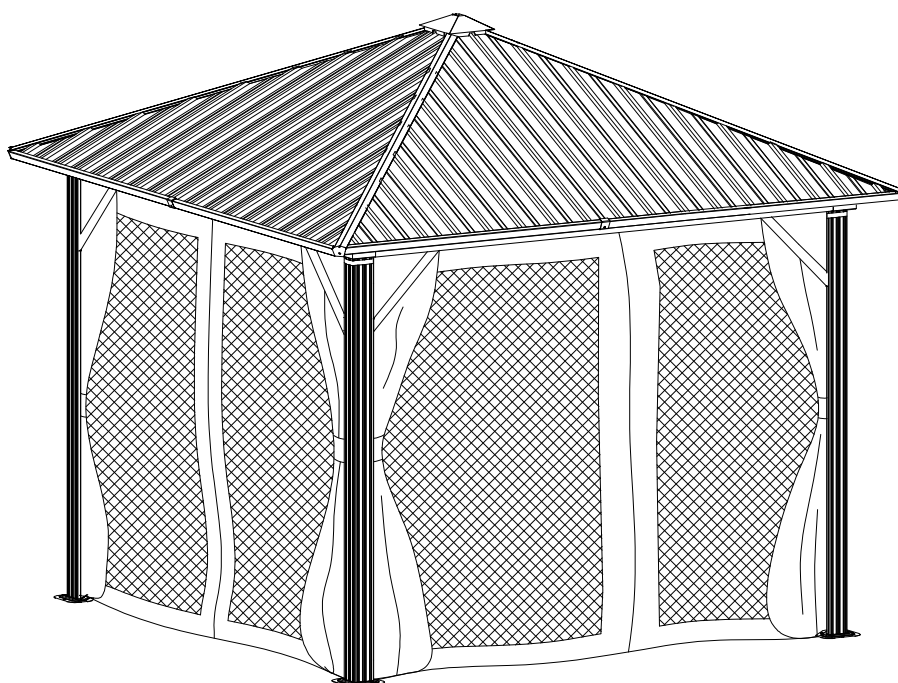

**STEP1**

Set up poles (Part A) with stand paletes (Part L) using screws V as shown in diagram.

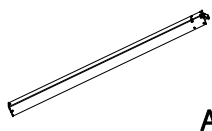

Ax4





Lx4



M6\*15

Vx12

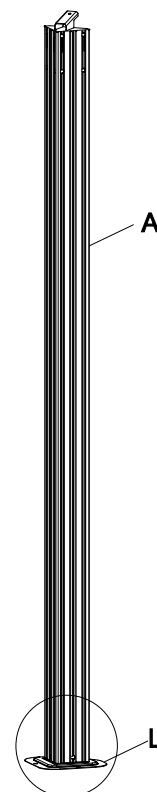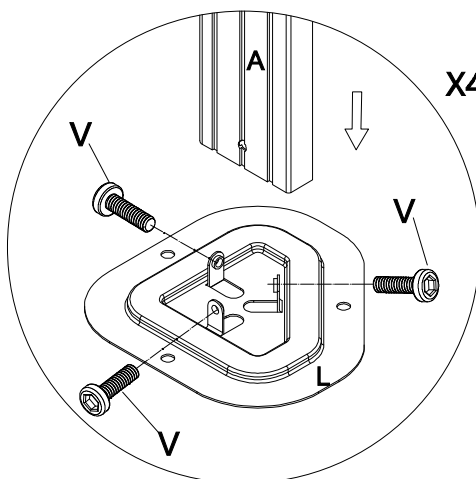**STEP2**


Put 4 Hooks to each slot of sidewall track (Part B and B1). Connect Part B and Part B1 into one beam using union bar Part P with screws V as shown in diagram.



Bx4



B1x4



Px4







Qx64



M6\*15

Vx32

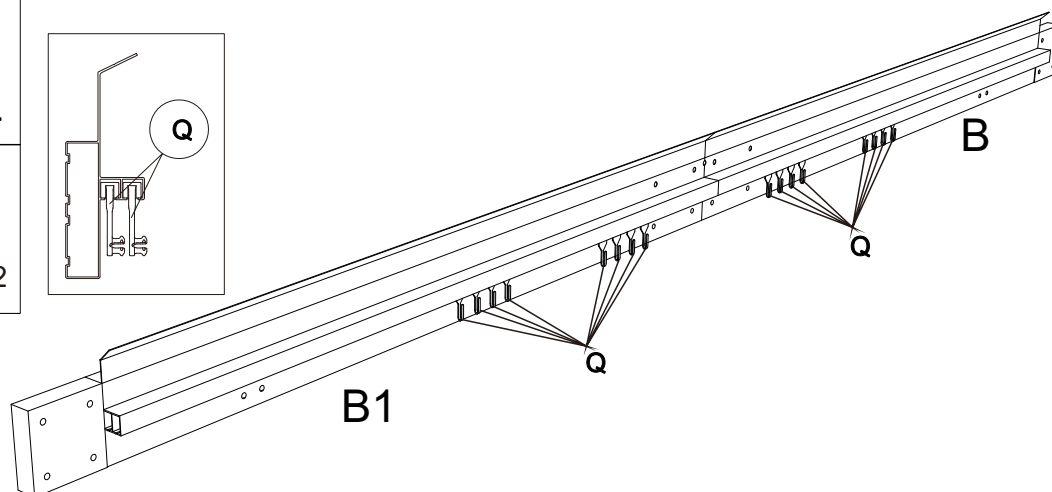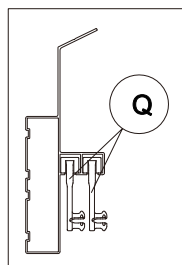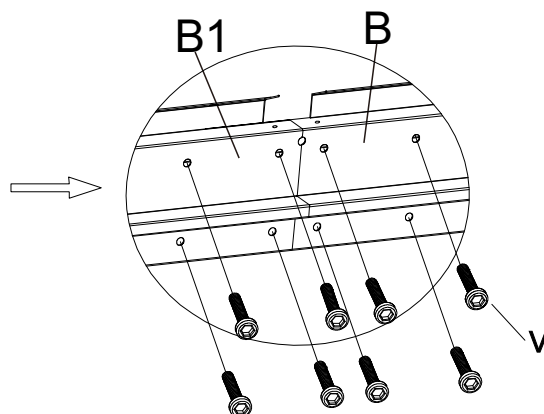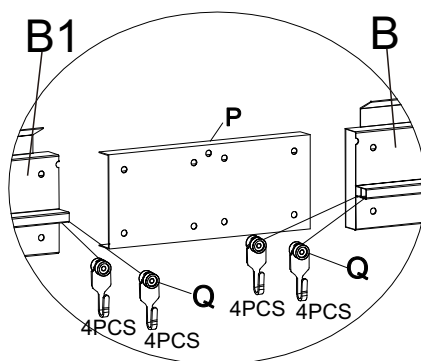


**STEP3**

Use screws X to connect poles and beams together as shown in diagram.




Xx32

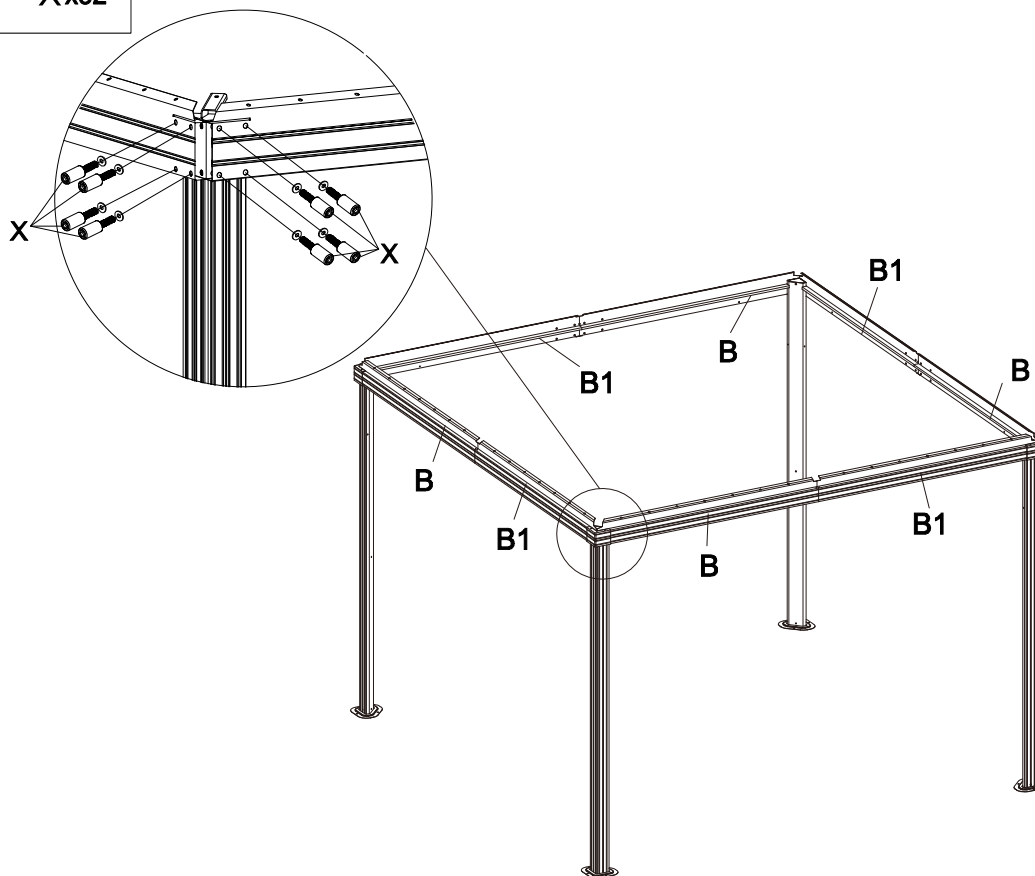**STEP4**

Affix the frame with corner solidifying bars (Part F and F1) using screws Y as shown in diagram.




Fx4



F1x4



Yx32

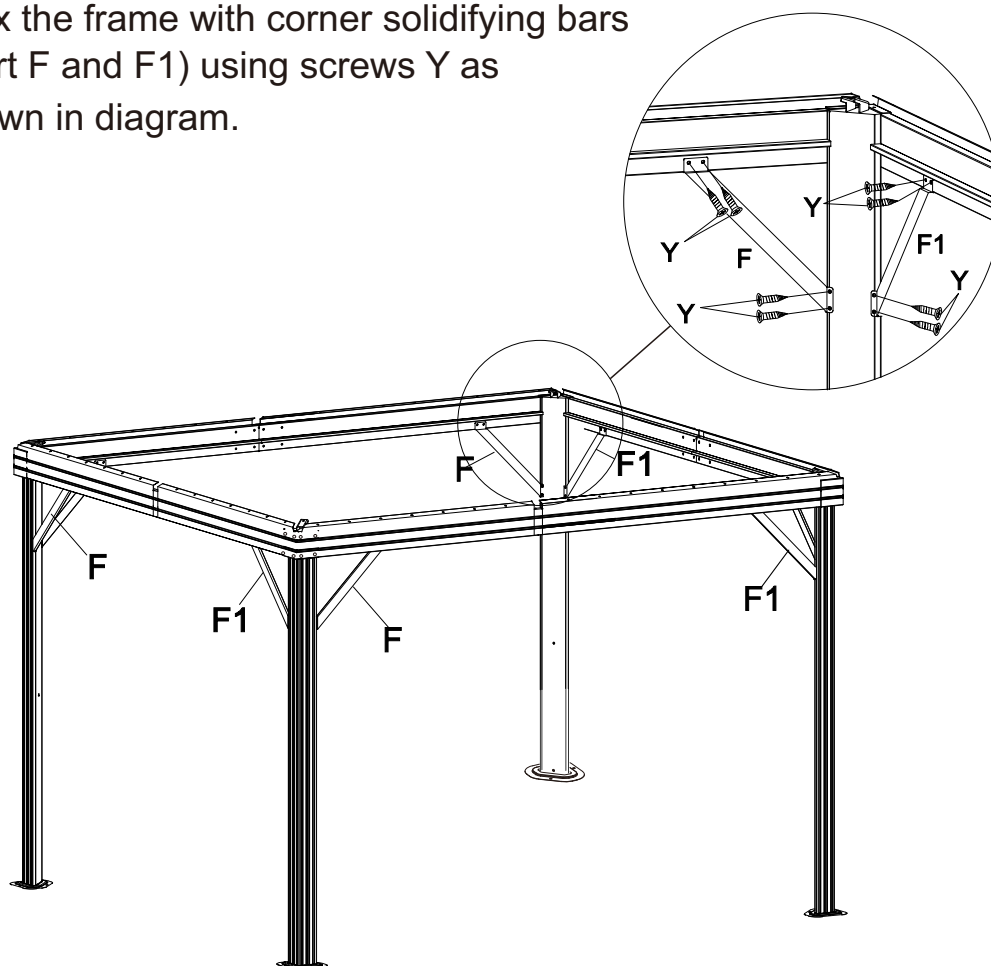

**STEP5**

J1x4




J2x4



Yx24

Affix middle beams using joint cover (Part J2) and screws Y as shown in diagram.

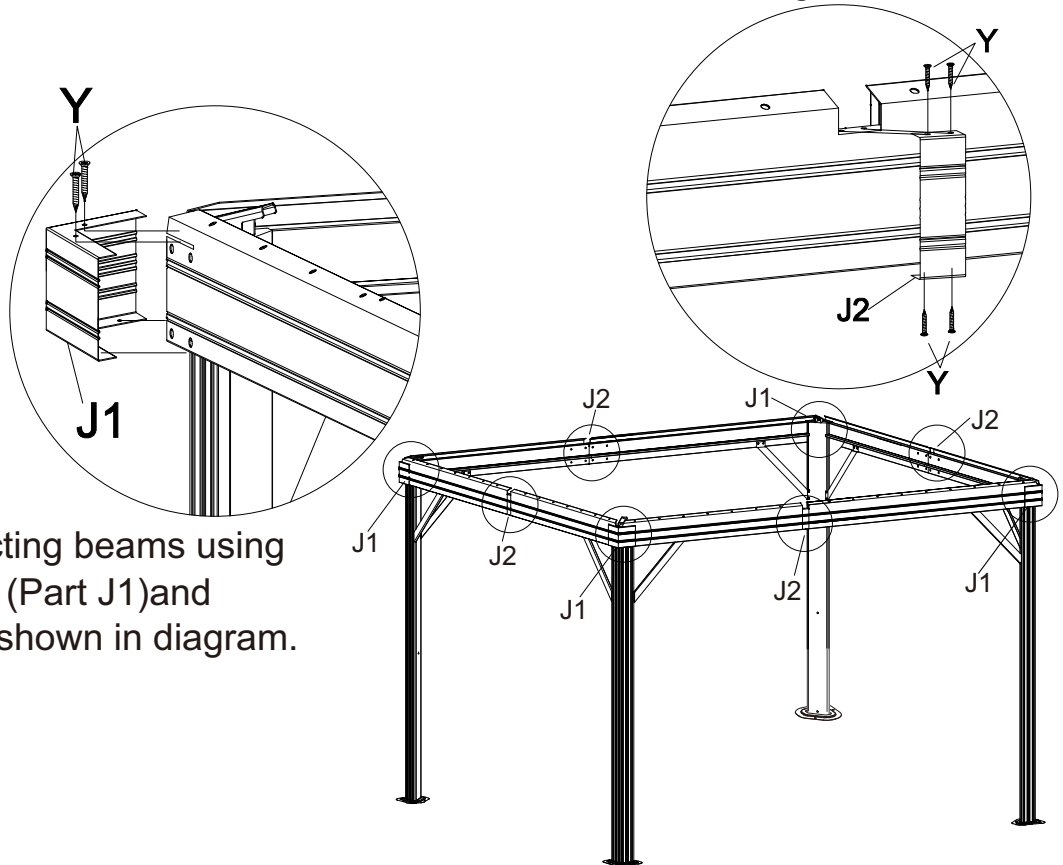

Finish connecting beams using corner covers (Part J1) and screws Y as shown in diagram.

**STEP6**

Ex4




K1x1



M6\*15

Vx8

Connect the inside roof connector (Part K1) with the corner roof bar (Part E) using screws V as shown in diagram.

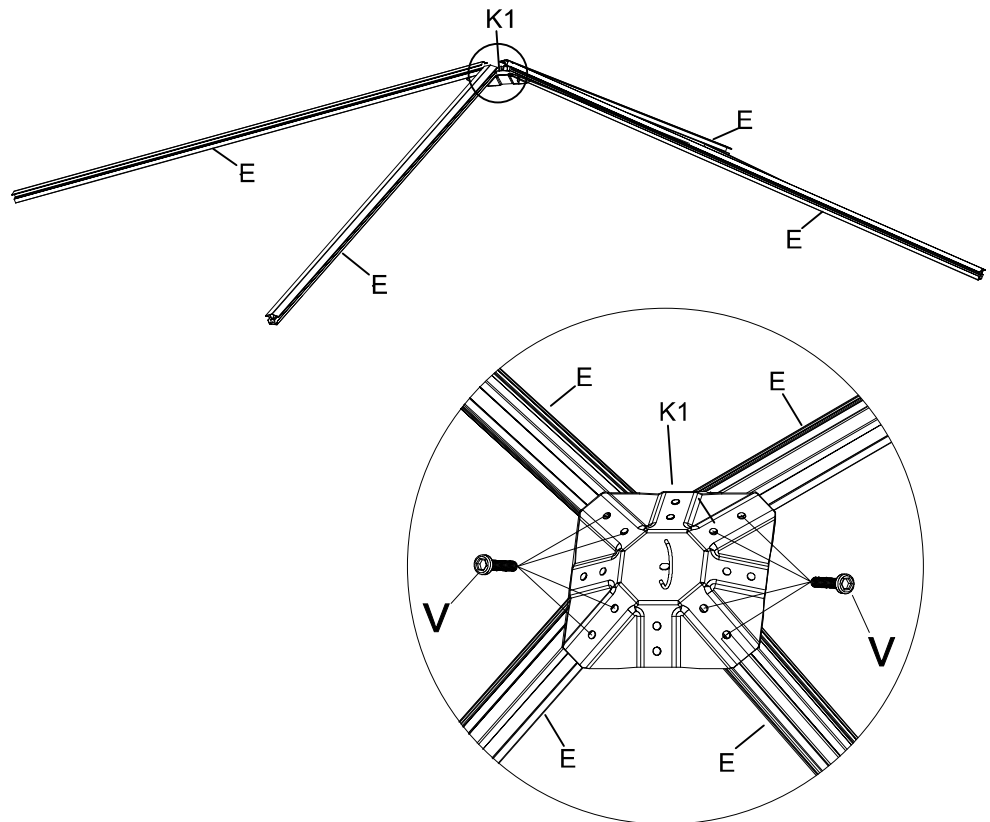




# STEP7

Attach corner roof bar (Part E) to main frame using screws V as shown in diagram.

M6\*15

Vx4

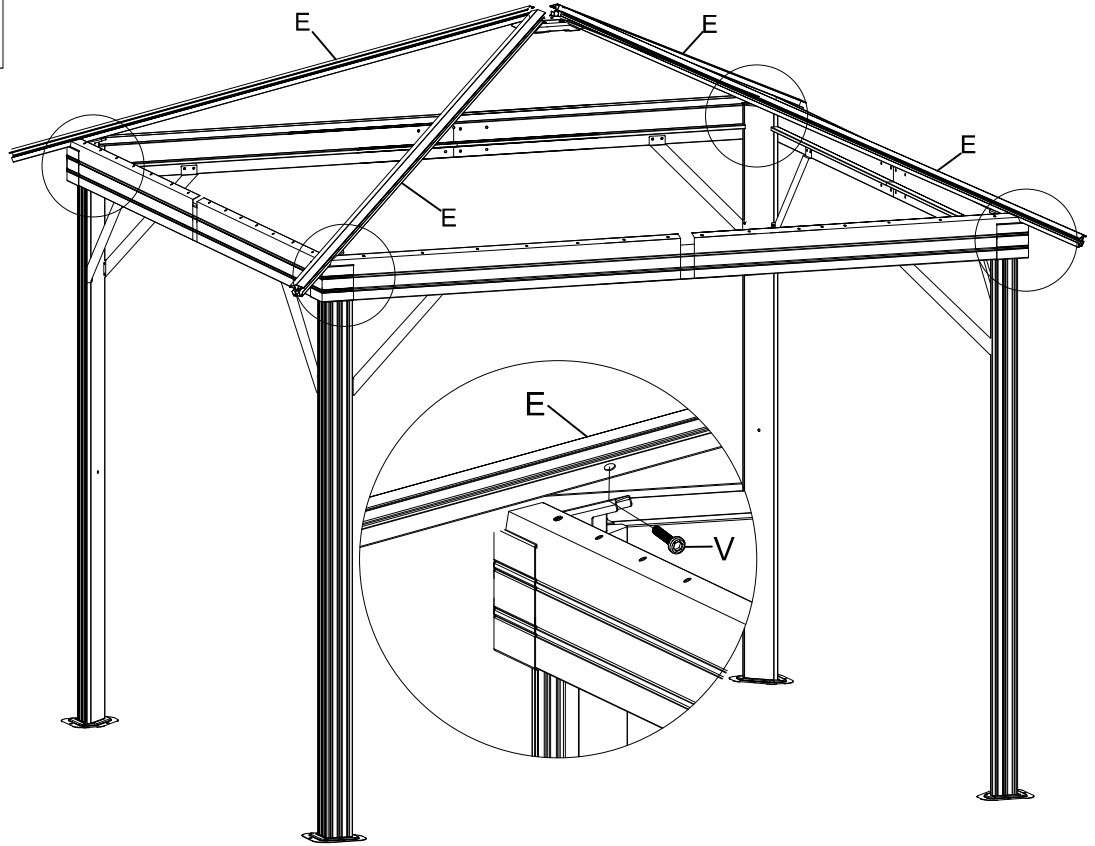


# STEP8




Dx4

M6\*15

Vx12

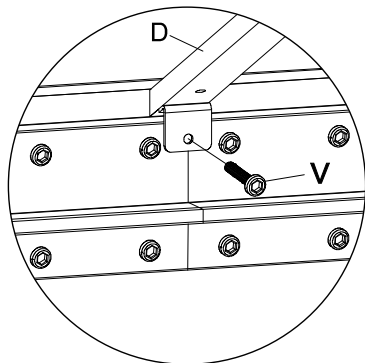

Attach roof bar (Part D) to main frame using screws V as shown in diagram.

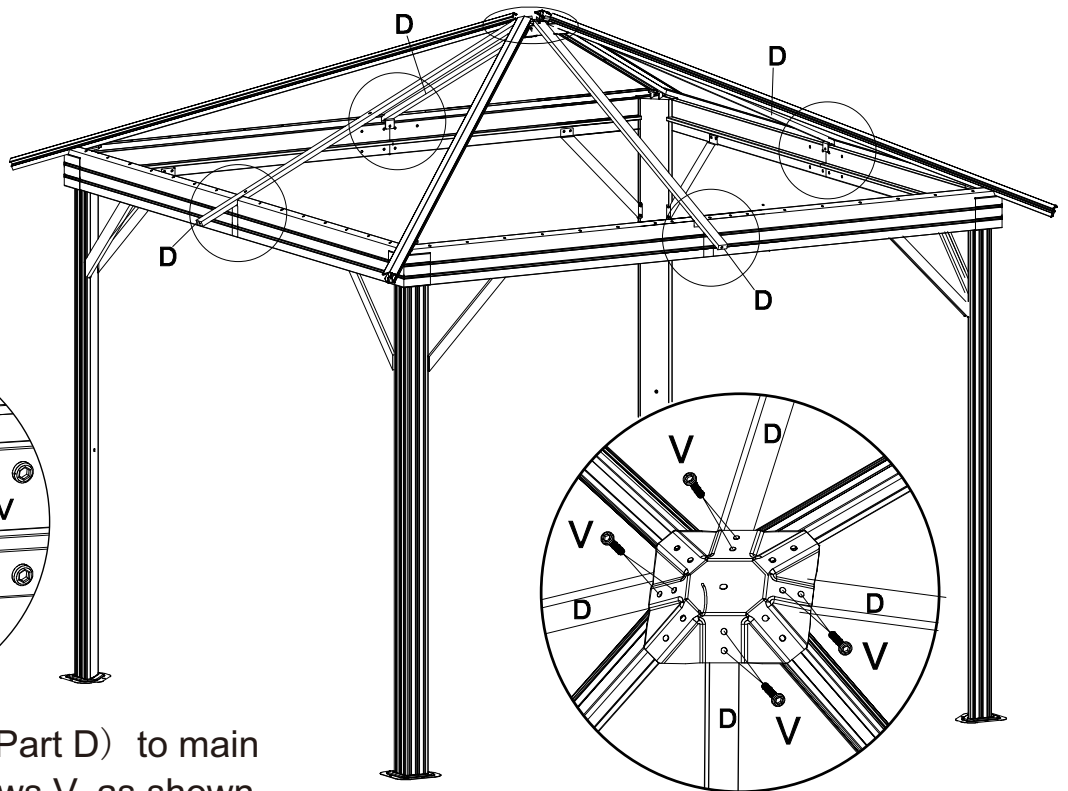

Attach roof bar (Part D) to inside roof connector using screws V as shown in diagram.

# STEP9


Connect outside roof connector (Part K) to inside roof connector (Part K1) using screws U as shown in diagram.



Kx1


M6\*25

Ux1

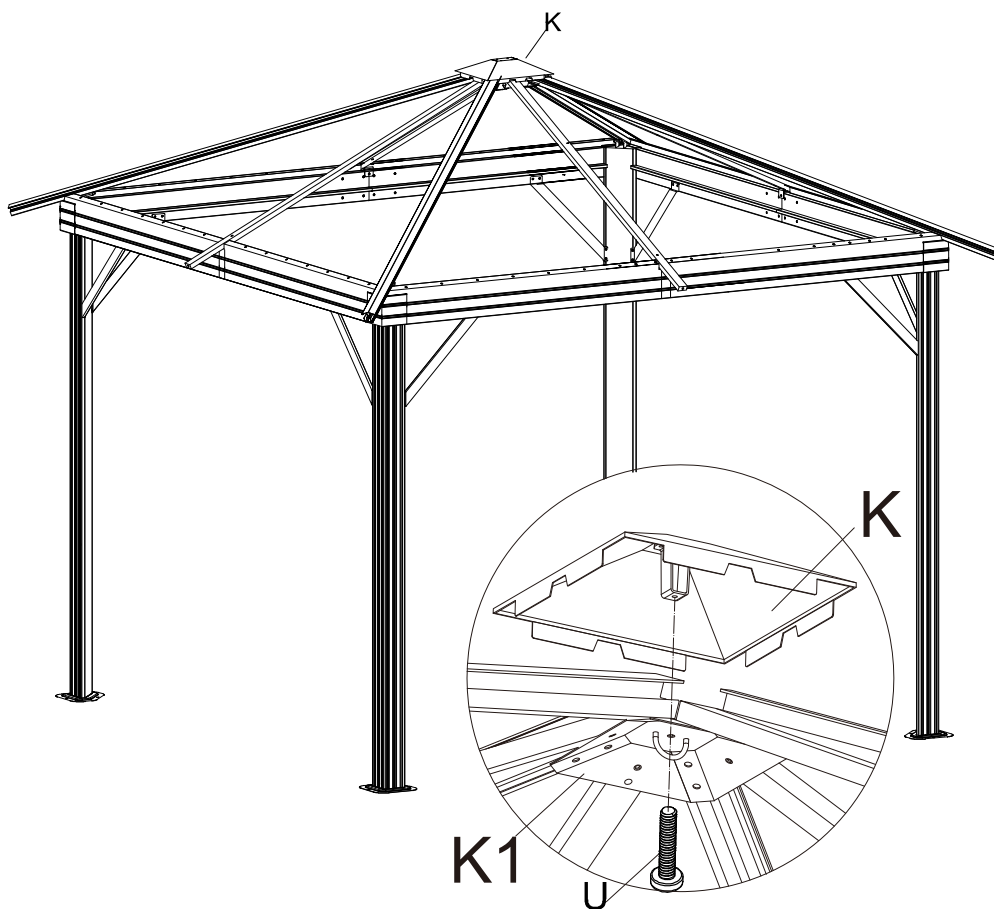

# STEP10

Affix solidifying bar (Part H) to roof bar (Part D) and corner roof bar (Part E) using iron angle (M3 and M4) and screws V as shown in diagram.



Hx8




M3x4



M4x4

M6\*15

Vx24

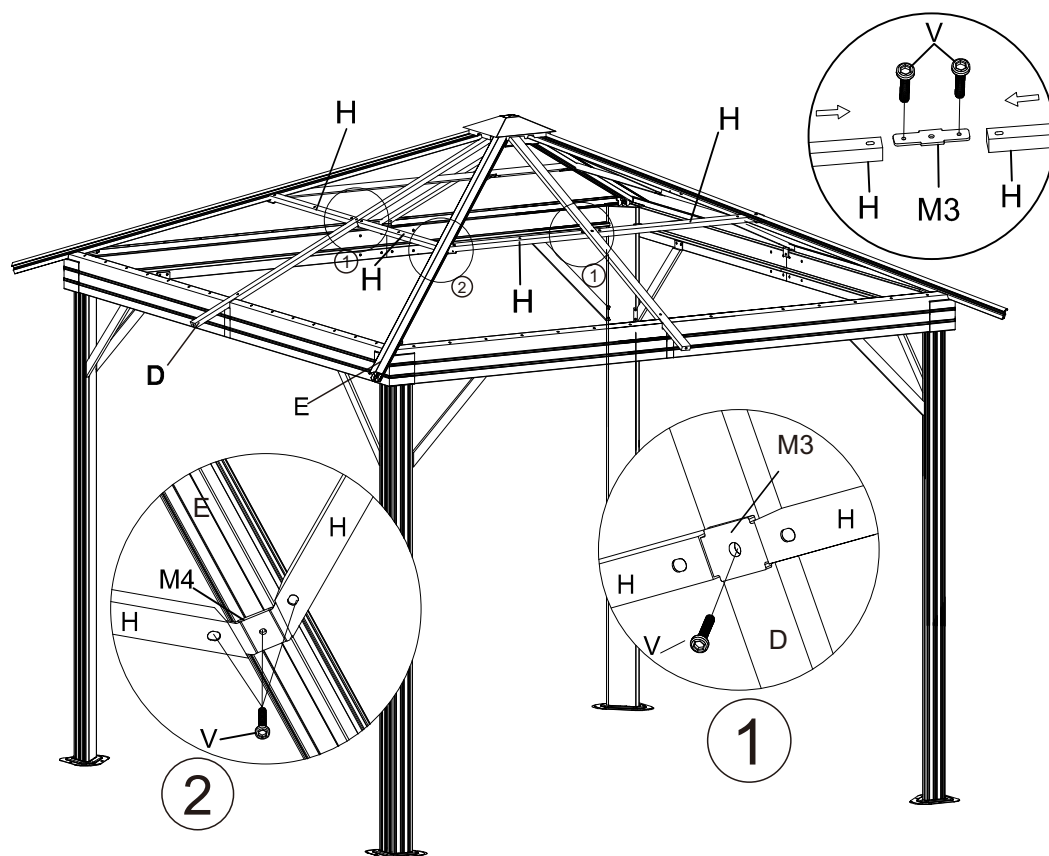

STEP 11

Cover metal brackets (Part D1 and R) to roof panels as shown in diagram.



O1x4



O2x4



O3x4



O4x4




O5x4






O6x4




D1x16



Rx56

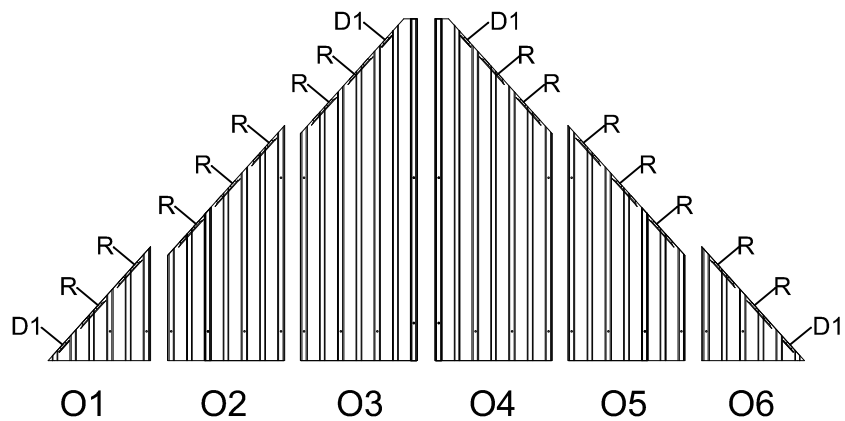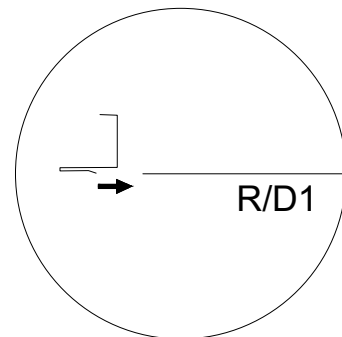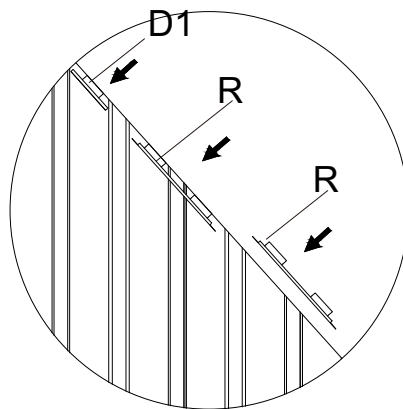

Overall roof assembly:

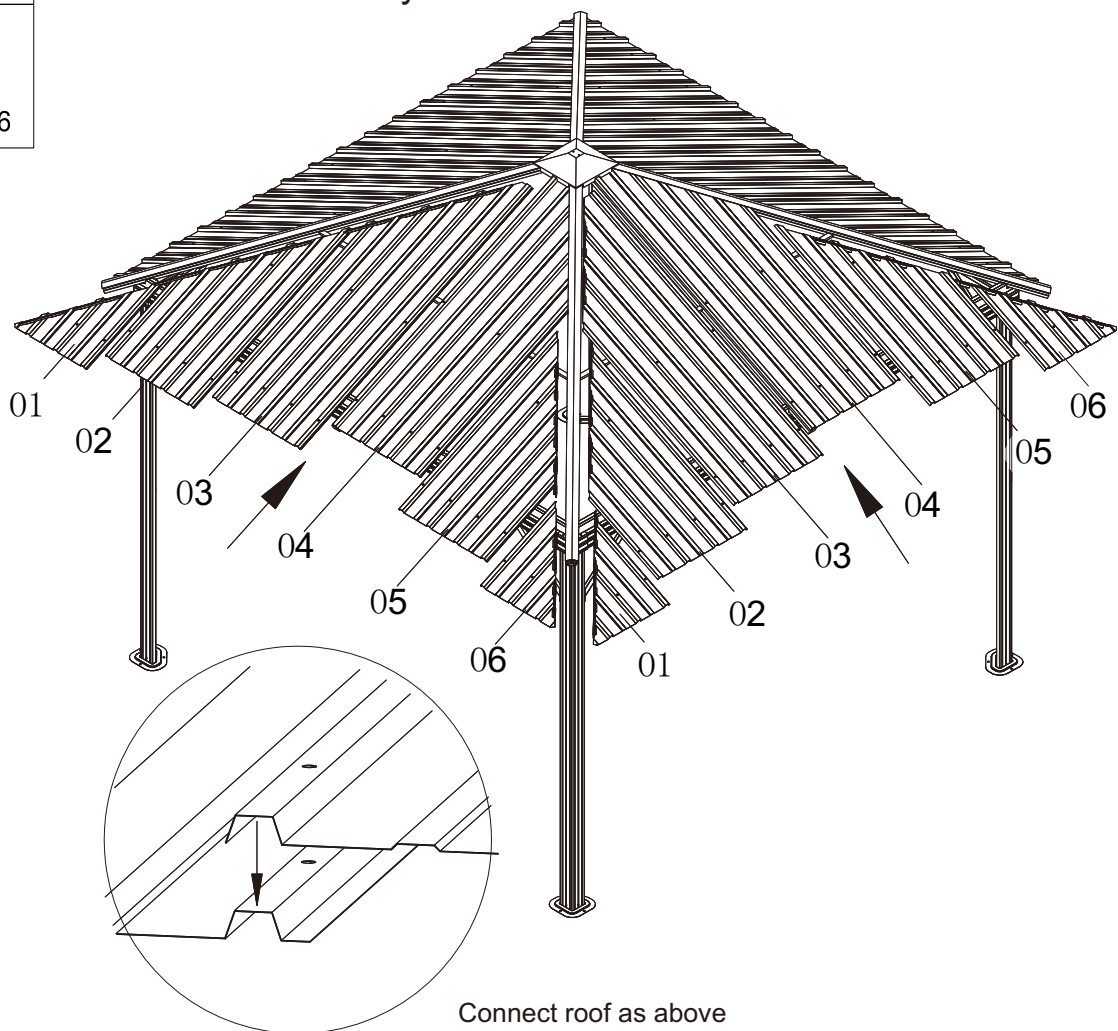

Connect roof as above

# STEP12

Affix roof panels using screws and spacer (Part M5) as shown in diagram.



M5x64



M6\*50

Sx8



M6\*25

Tx56








M6\*25

Ux4



M6\*45

X1x4

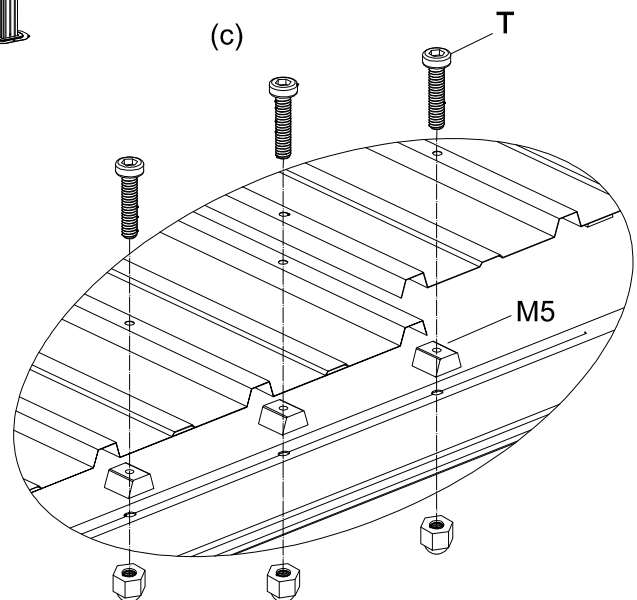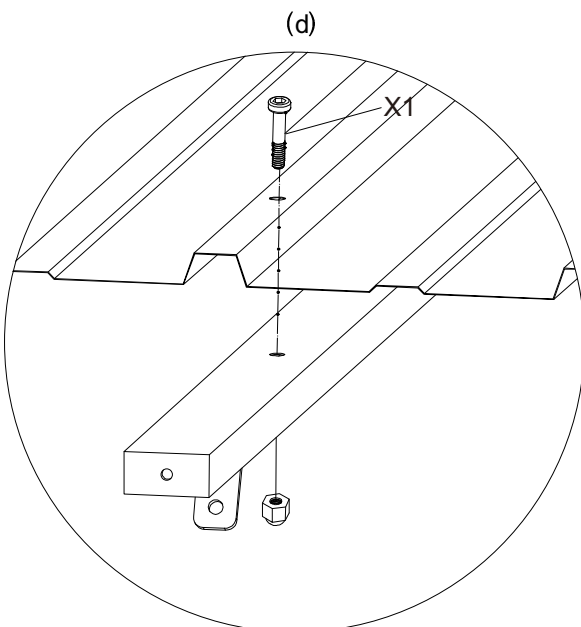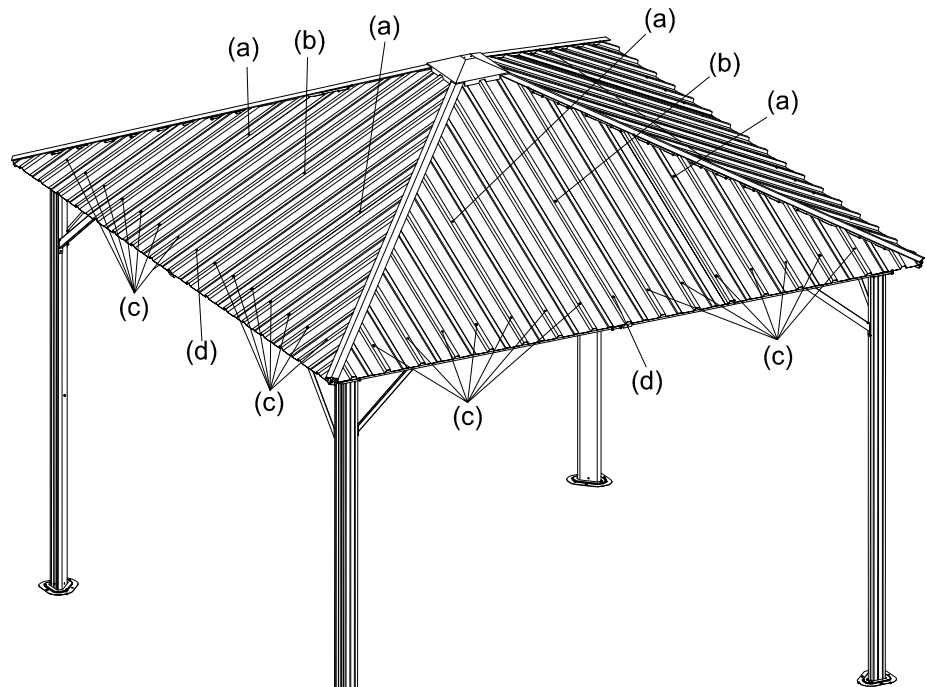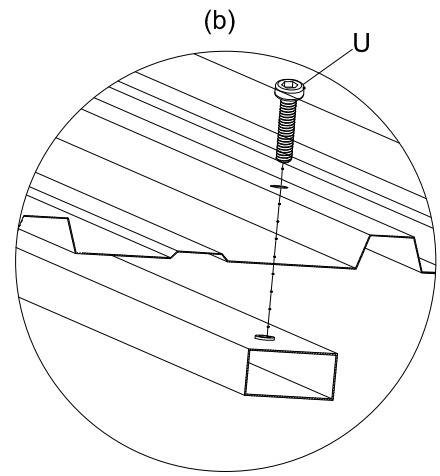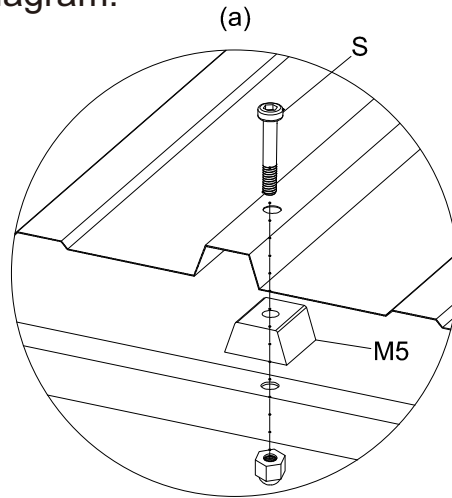

**STEP13**

Affix finishing bars (Part G1&G2) by (Part M1&M2) using screws V to roof bar and corner roof bar as shown in diagram.



G1x4



G2x4



M1x4






M2x4




M6\*15

Vx8

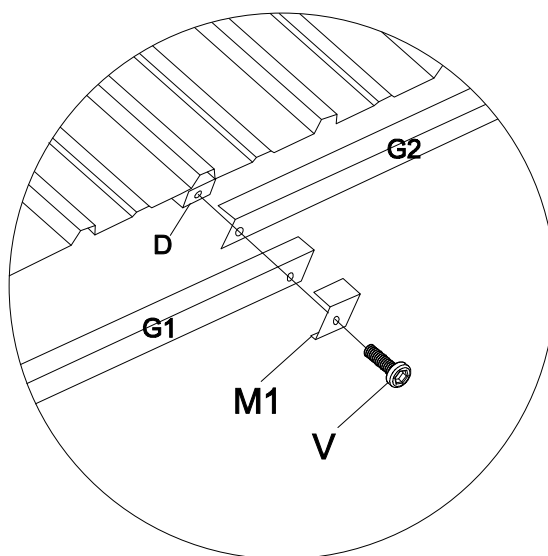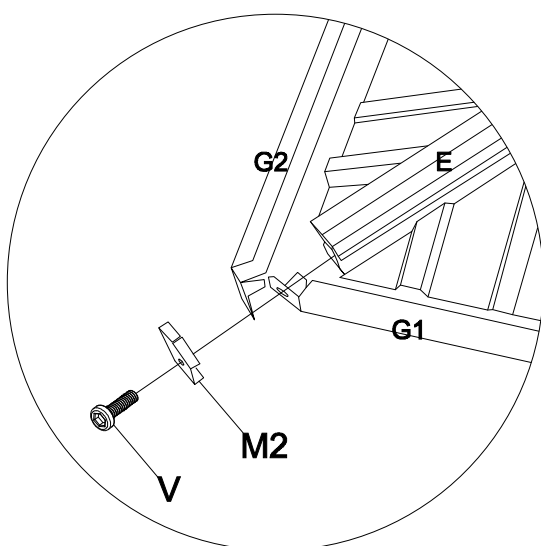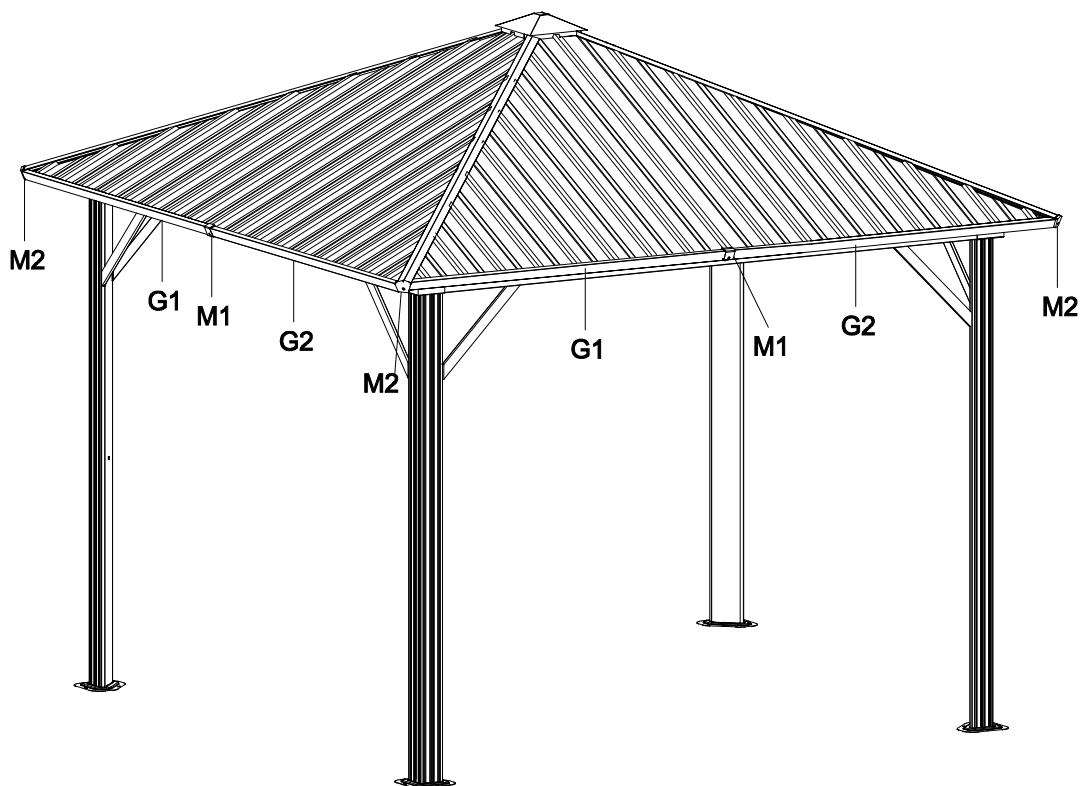


STEP14






Hang up sidewall (Part Z1&Z2) as shown in diagram.



Z1x4





Z2x4

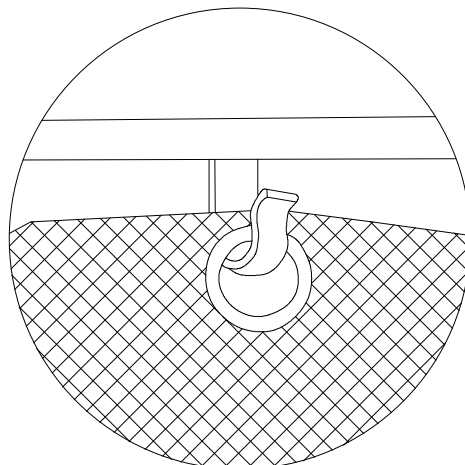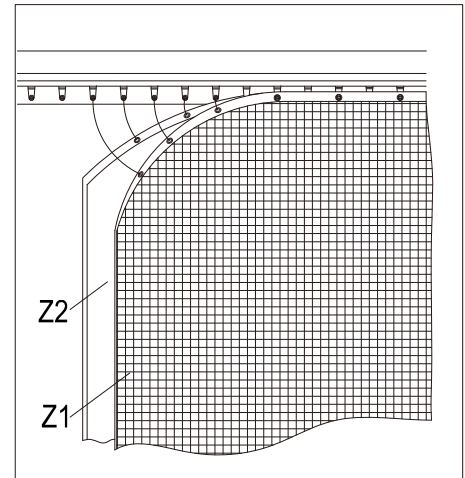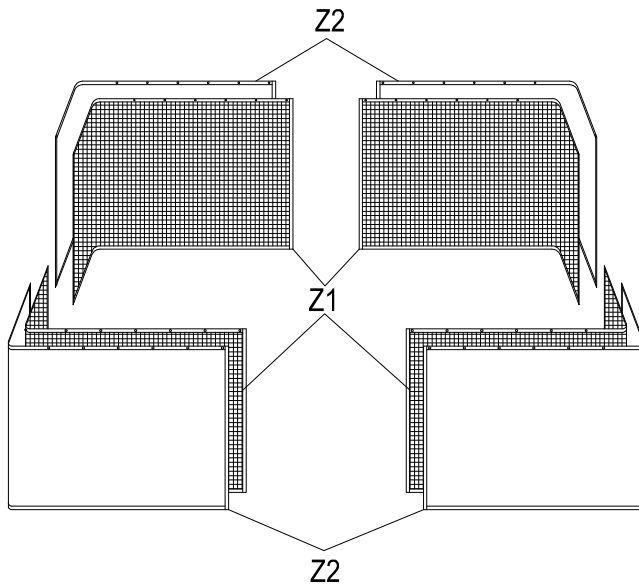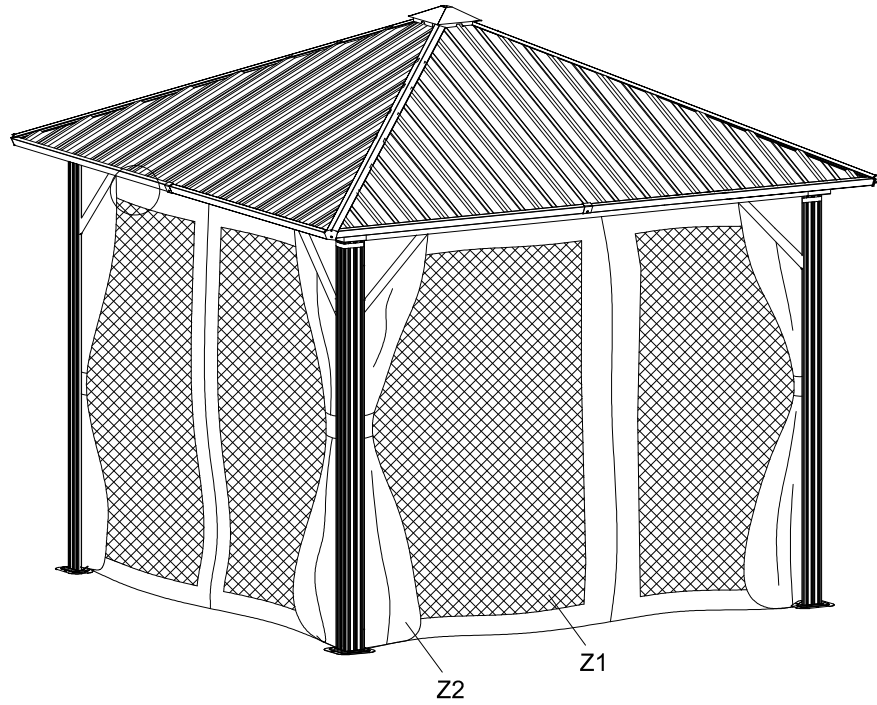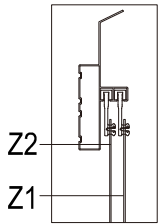





Step 15: There are three ways to secure your netting and curtains to the legs using the include 4 ties.

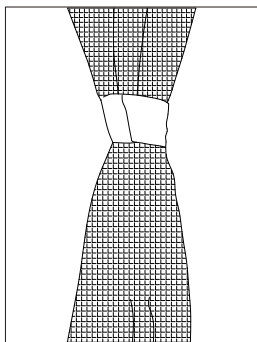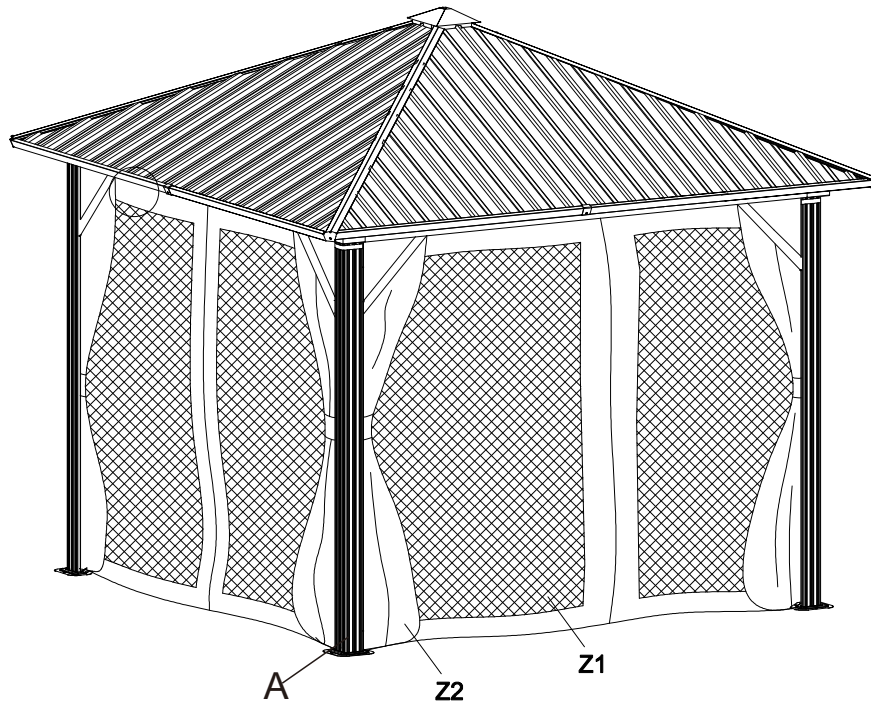

1. ) Securing just the netting

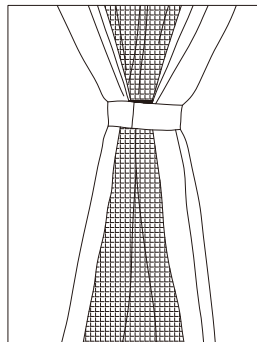

2.) Securing just the netting and curtains.

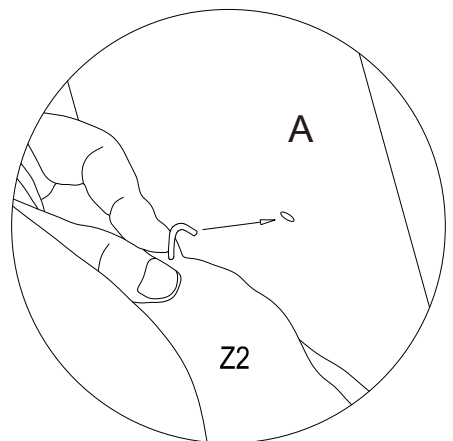

3.) Hanging the hook of curtain on the tube A.

In the end check all screws are fixed tightly before using.



PEAKHOME FURNISHINGS INC.  
970 Roosevelt #202, Irvine, CA 92620  
[www.peakhomefurnishings.com](http://www.peakhomefurnishings.com)

### **CONTACT US**

Toll free: 1-818-963-1558 Mon-Fri 10am - 6pm PST  
Email: [phf@peakhomefurnishings.com](mailto:phf@peakhomefurnishings.com)

If we missed you call, please leave a detailed message including your name and phone number. We will call back as soon as possible.

### **SOCIAL MEDIA**

Follow us on our Social Media by uploading a picture of our brands furnishings in your home, you will have chance to get our newest product free.

 [Facebook.com/Peak-Home-Furnishings-Inc-103544141243786/](https://Facebook.com/Peak-Home-Furnishings-Inc-103544141243786/)

 [Instagram.com/peakhomefurnishings](https://Instagram.com/peakhomefurnishings)

 [Twiter.com/peakhomefurnis1](https://Twiter.com/peakhomefurnis1)