


# Installation Steps

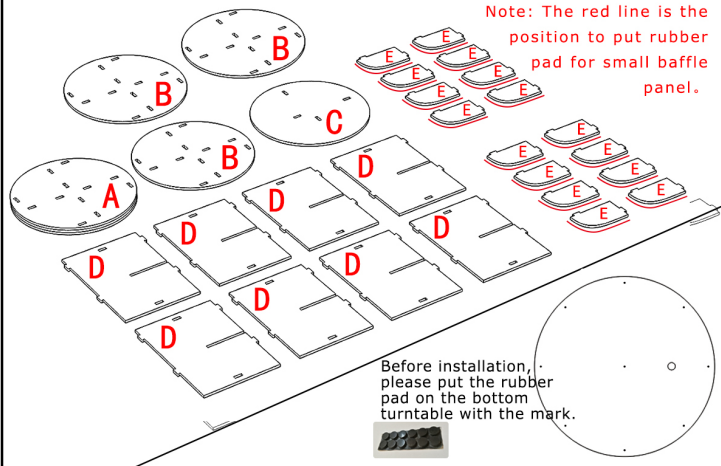

Please stick the rubber pad to small baffle panel before installation

