

DE0018WA01A

DE0018YM01A

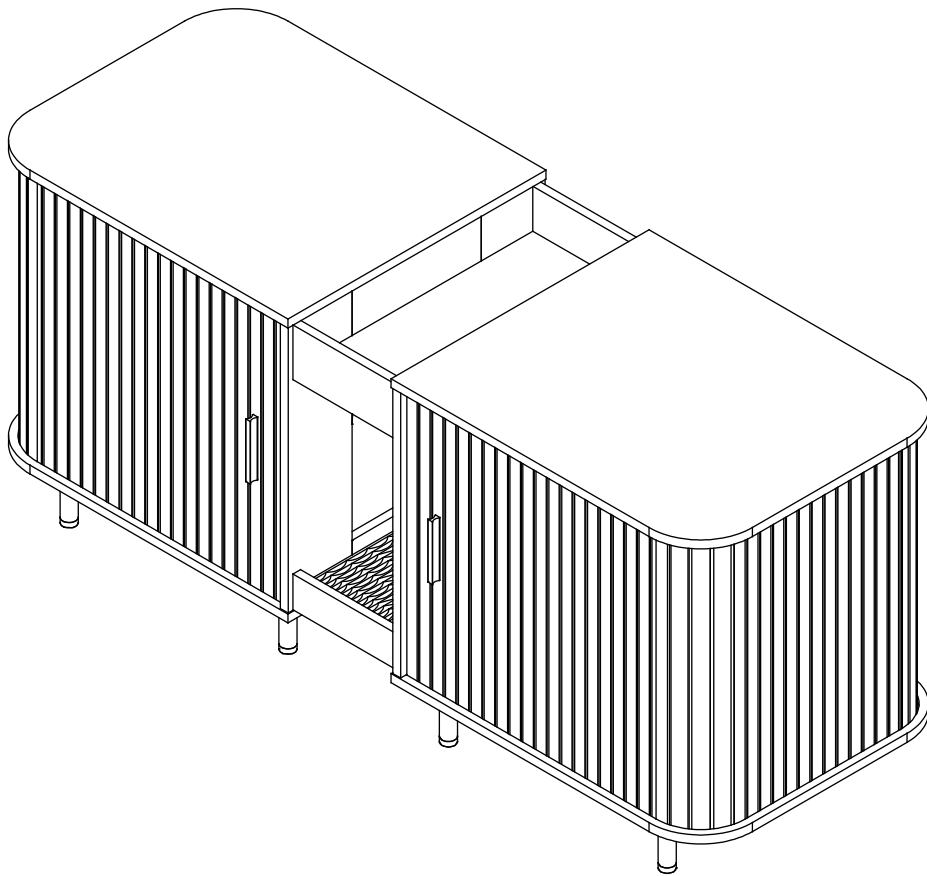


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

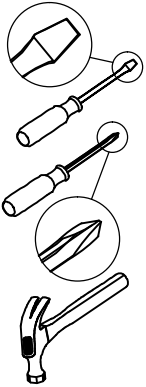

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

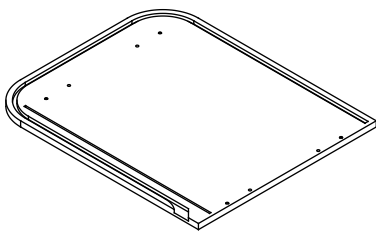


①

Qty: 1

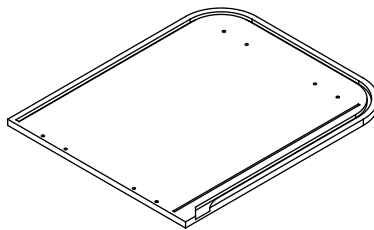


②

Qty: 1

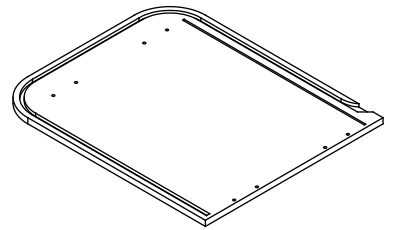


③

Qty: 1

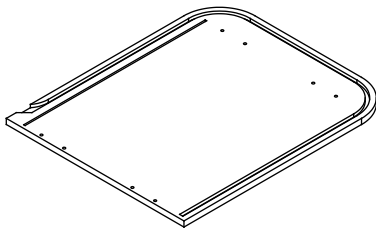


④

Qty: 1

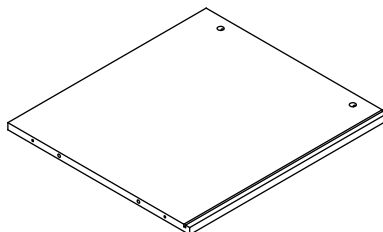


⑤

Qty: 1

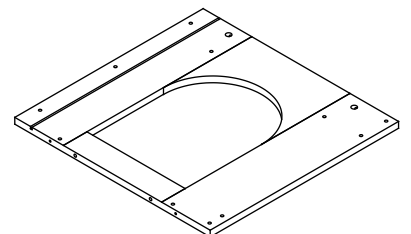


⑥

Qty: 1

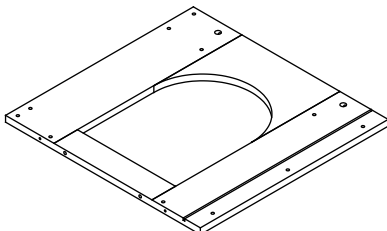


⑦

Qty: 1

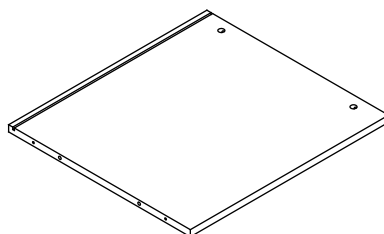

⑧

Qty: 1

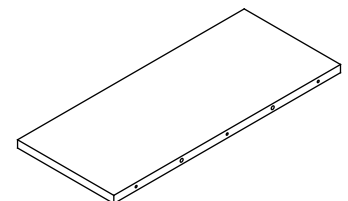


⑨

Qty: 1


Board Identification

Not actual size

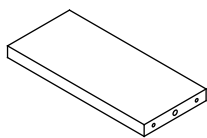


⑩

Qty: 1

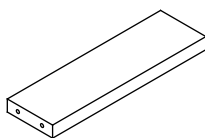


⑪

Qty: 1

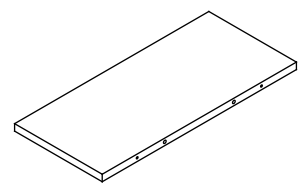


⑫

Qty: 2

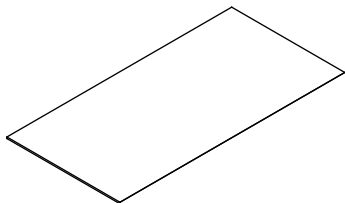


⑬

Qty: 4

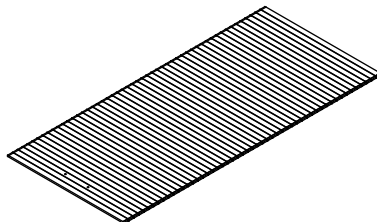


⑭

Qty: 2

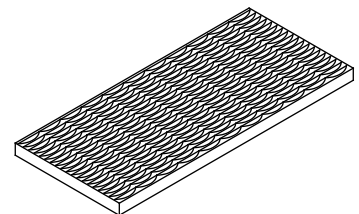

⑮

Qty: 1

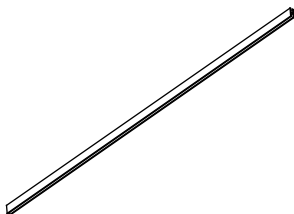


⑯


Qty: 2

Board Identification

Not actual size

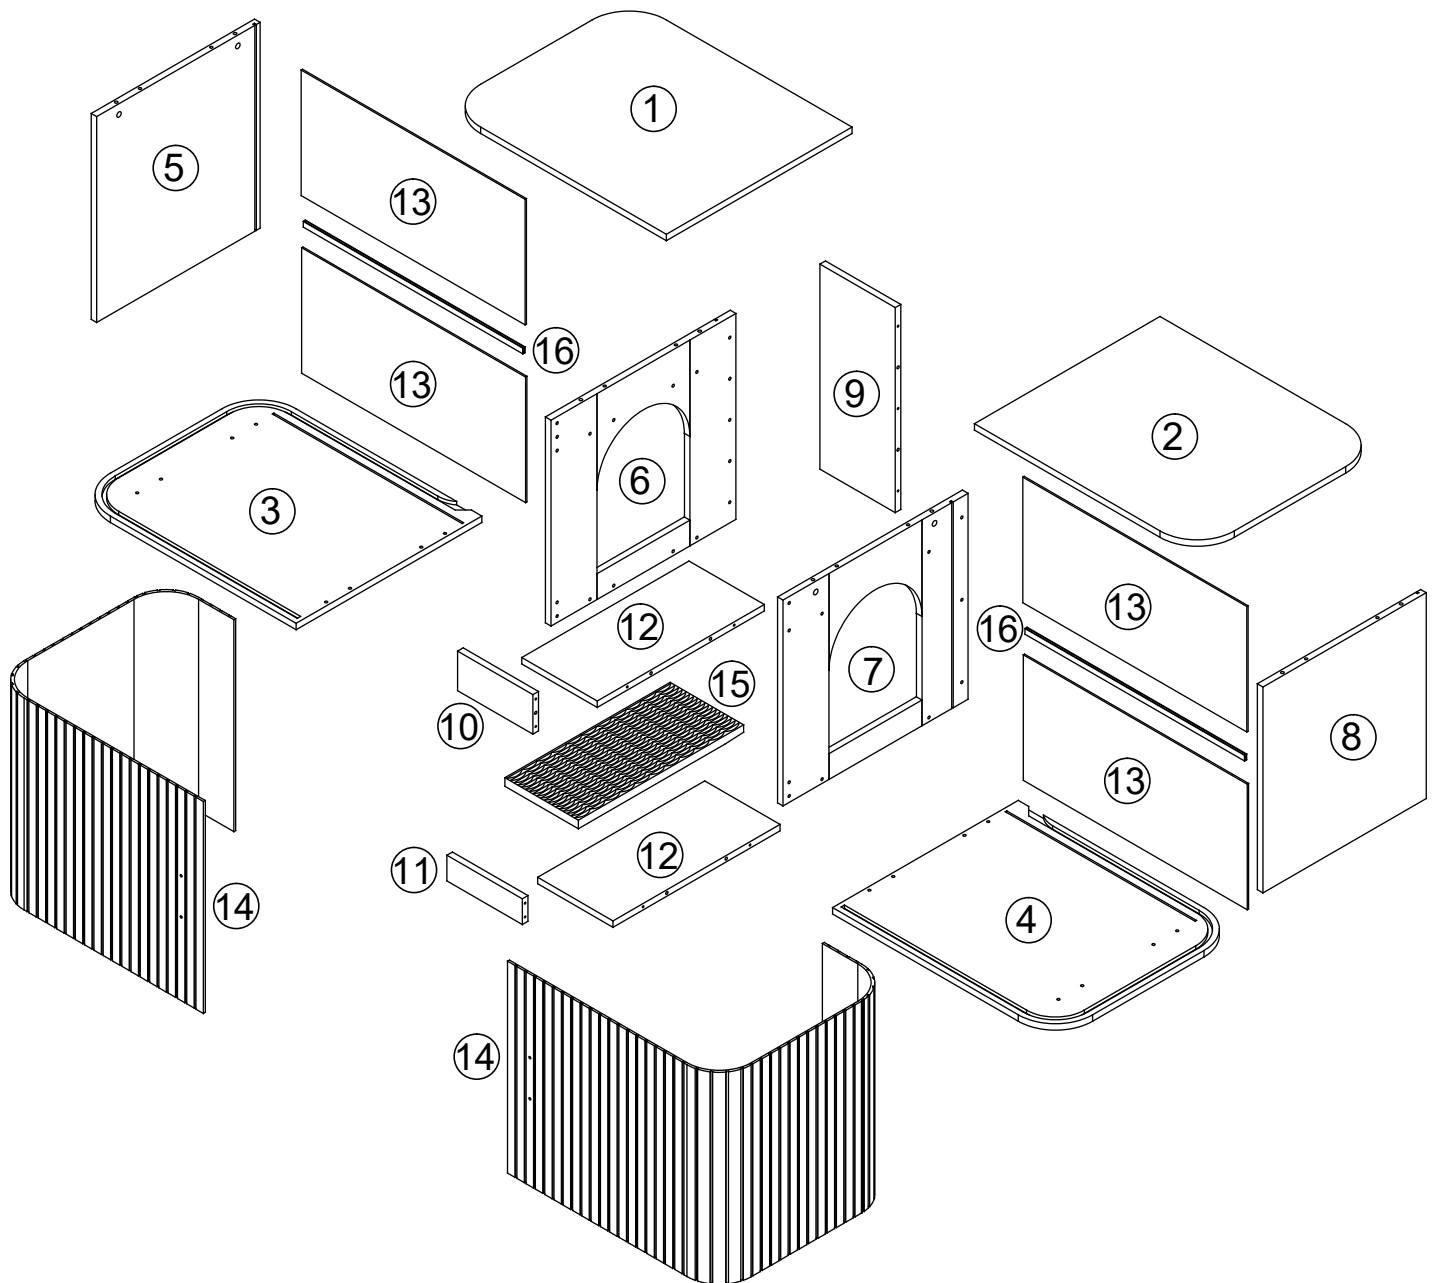

Part List




ø6.5X35mm

(A)

X 8

CAM BOLT
spare: 1

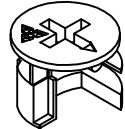

Ø15X9mm

(B)

X 8

CAM LOCK
spare: 1




ø6X30mm

(C)

X30

WOOD DOWEL
spare: 3



ø5X40mm

(D)

X30

SCREW
spare: 3



Ø4X12mm

(E)

X32

SCREW
spare: 3



M3

(F)

X1

HEX KEY




Ø4X8mm

(G)

X4


SCREW
spare: 1

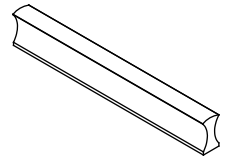

(H)

X2

HANDLE

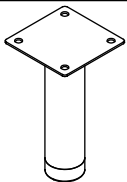

(I)

X8



(J)

X8

SCREW
spare: 1




(K)

X1


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

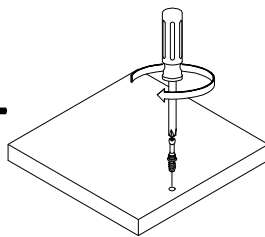

2

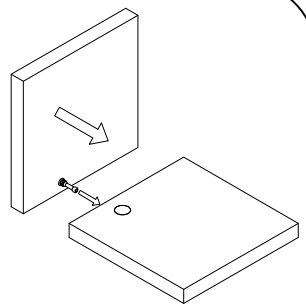


3

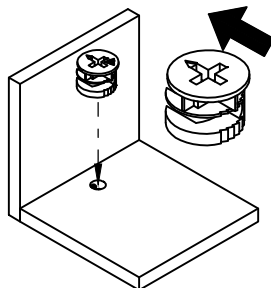


The opening must point toward the edge of the board






4

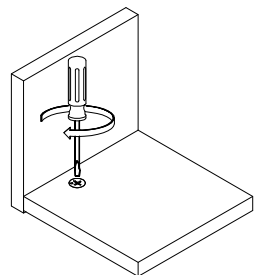

STEP1

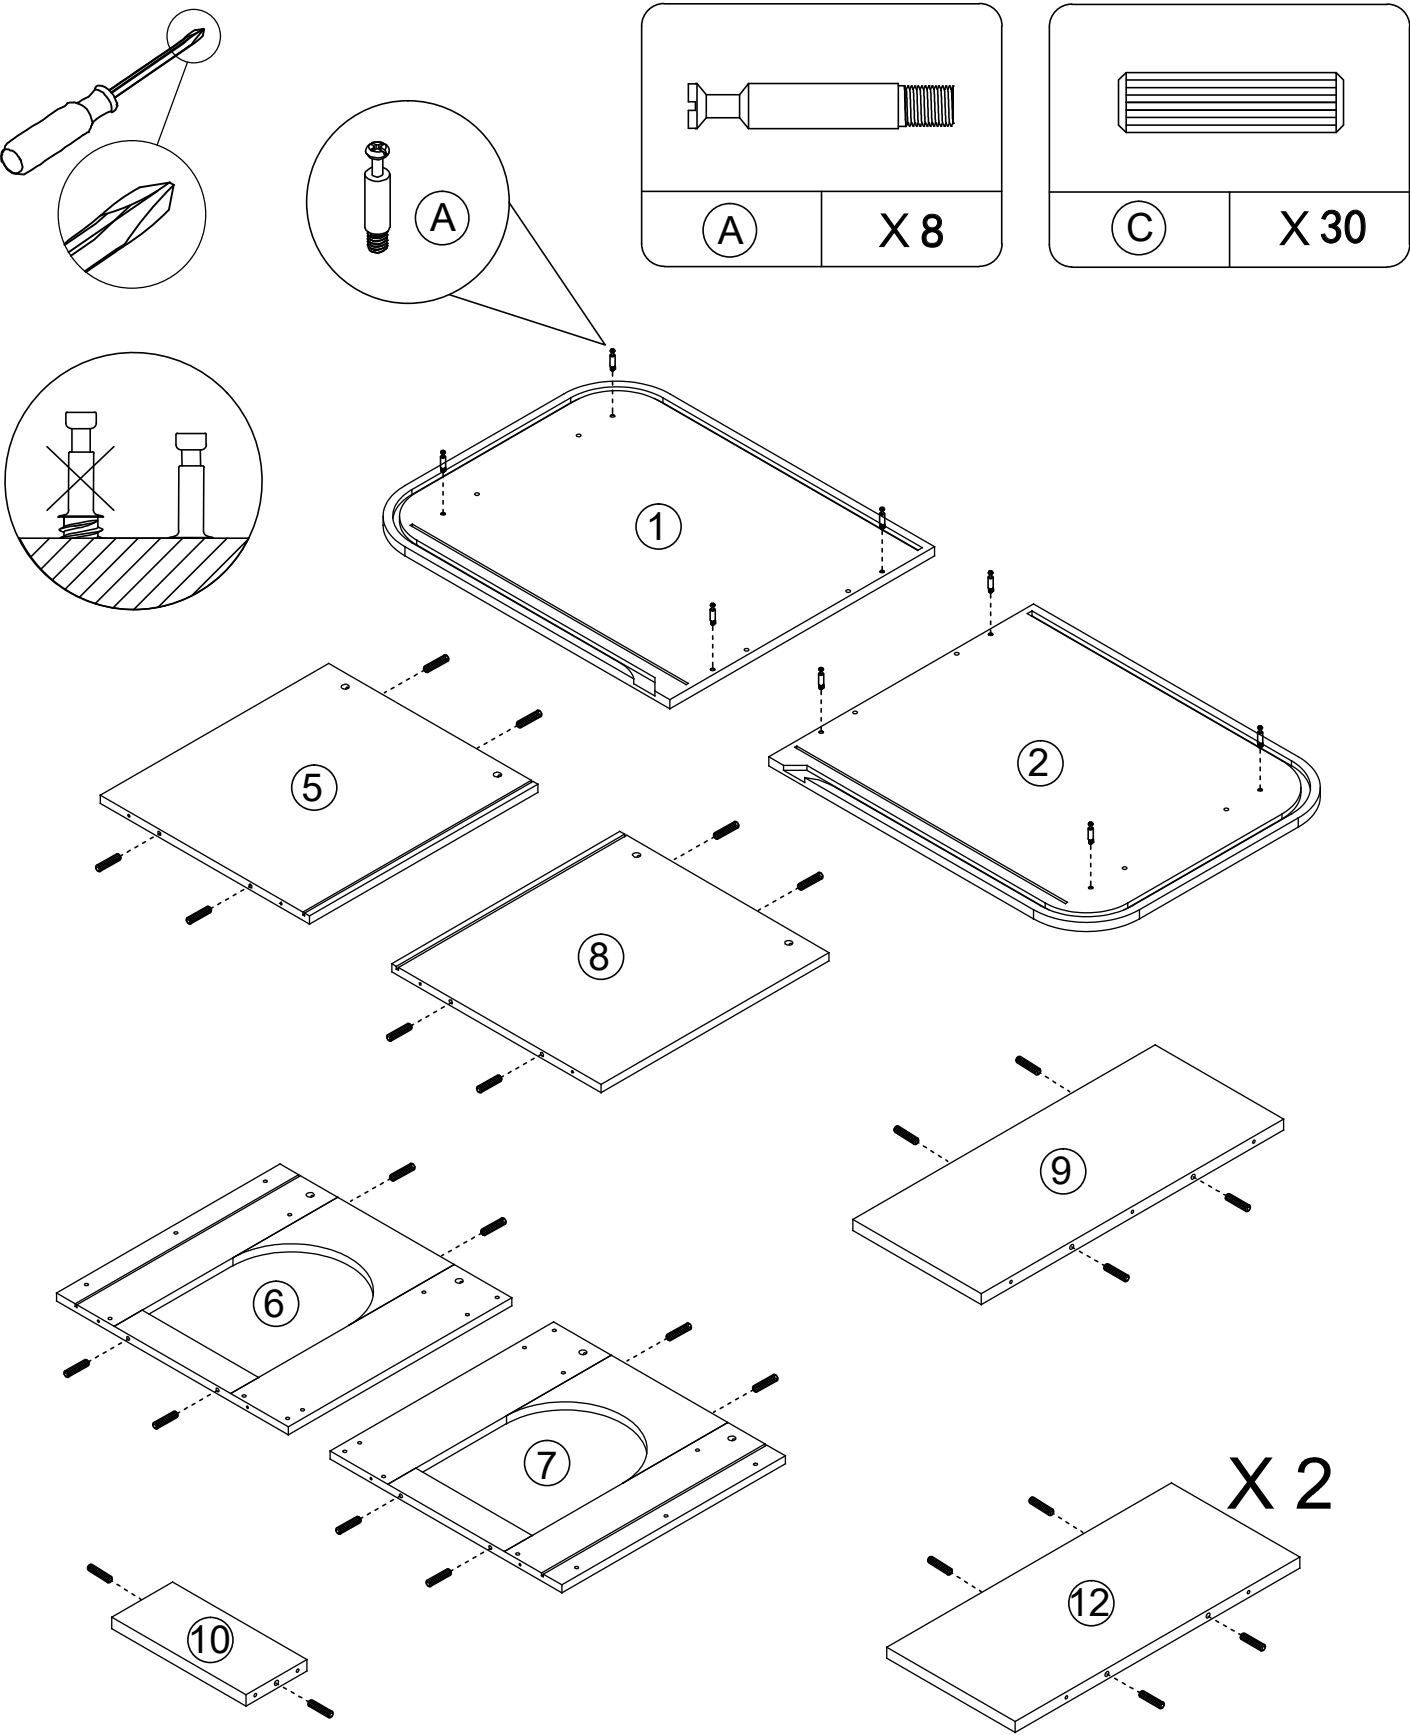



STEP2

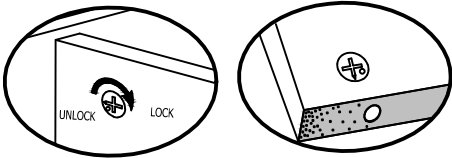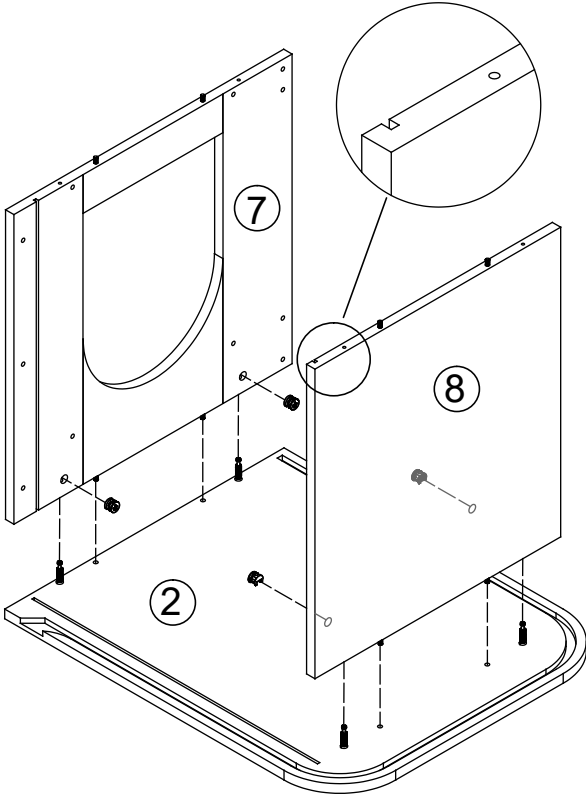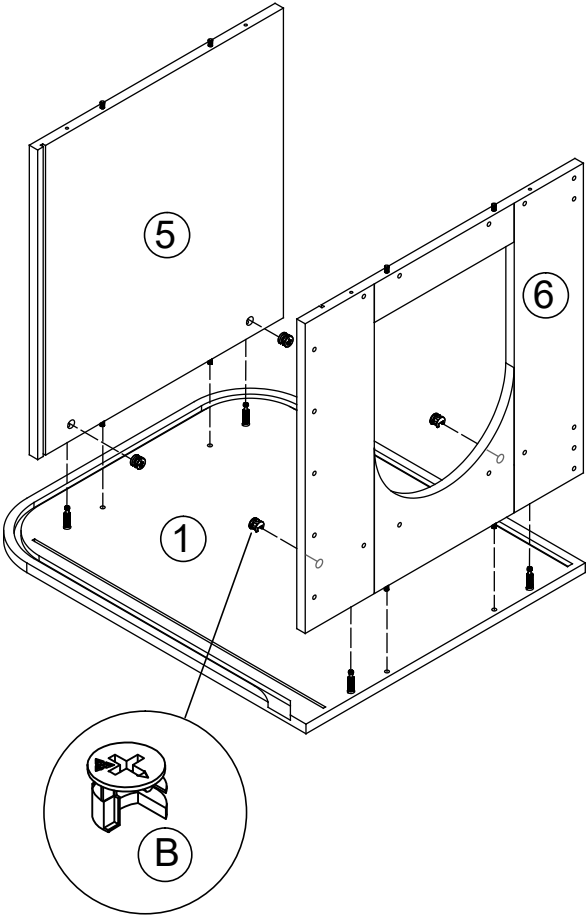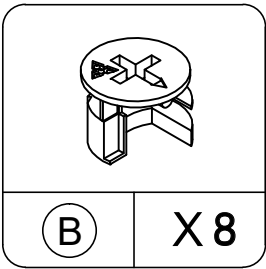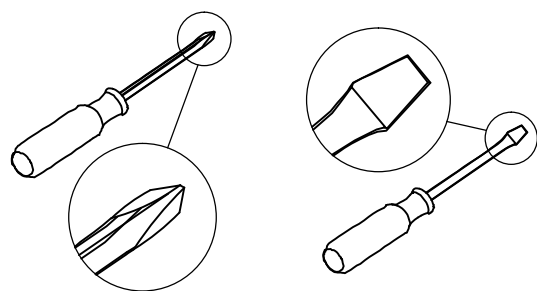




Proper orientation of CAM LOCK

STEP3




1

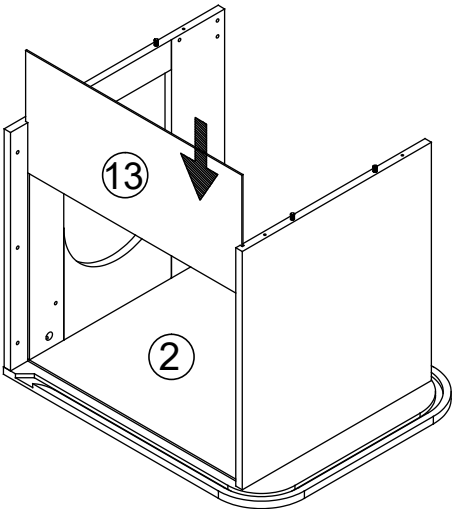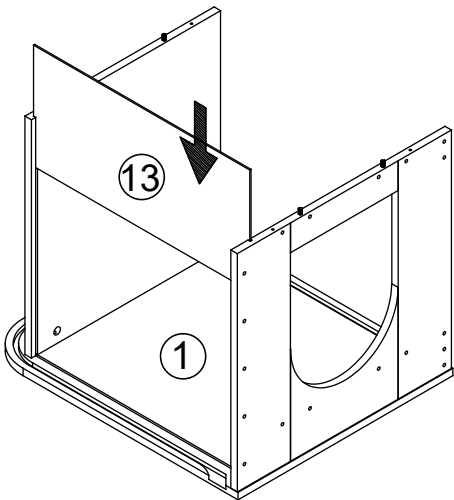






2

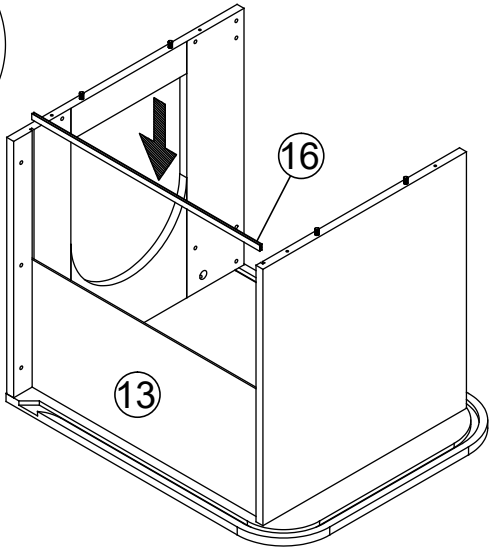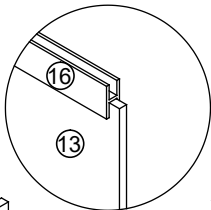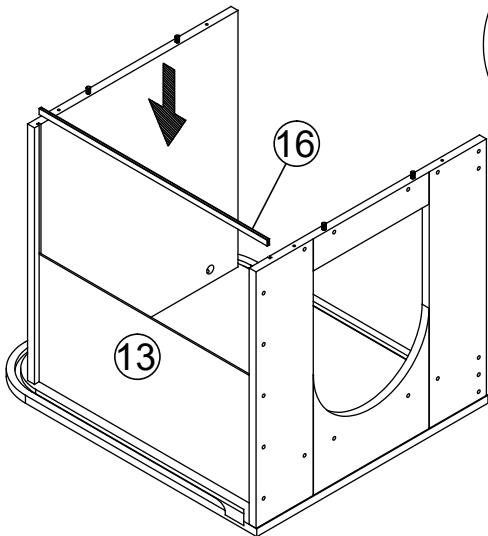






3

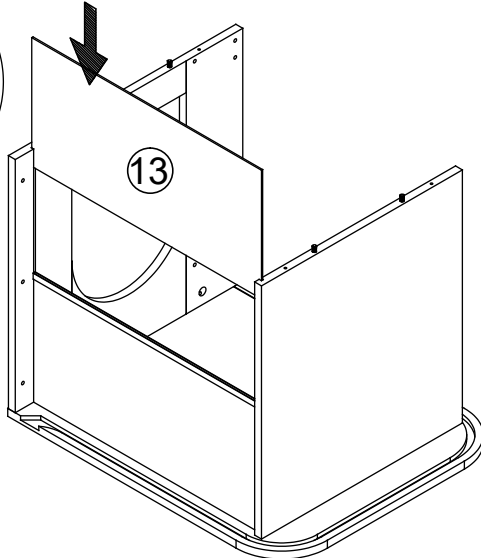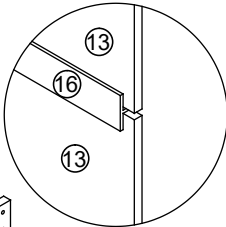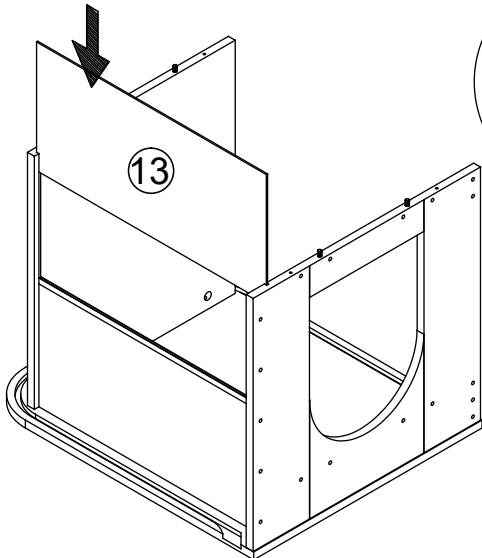






STEP4

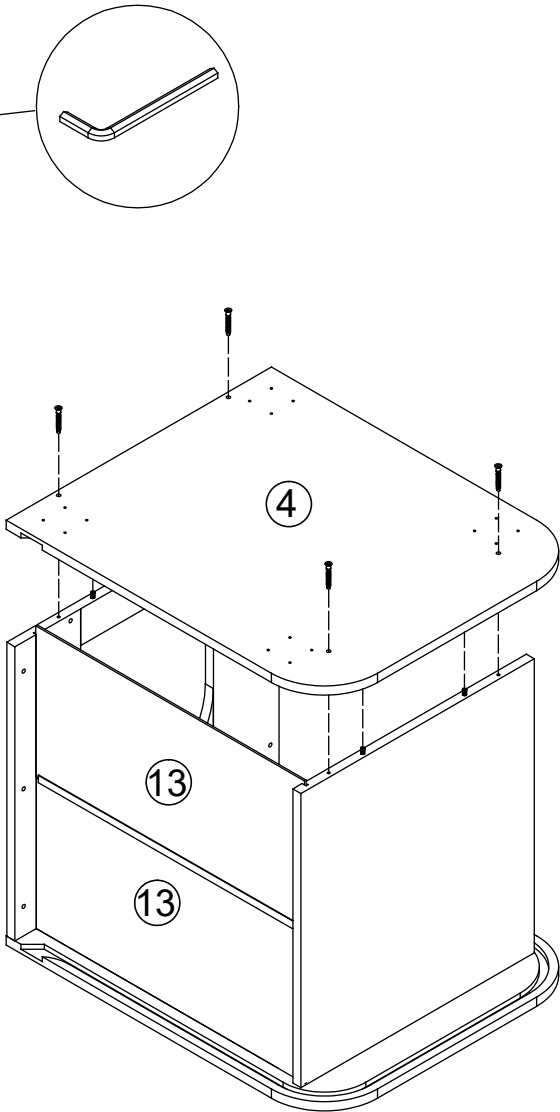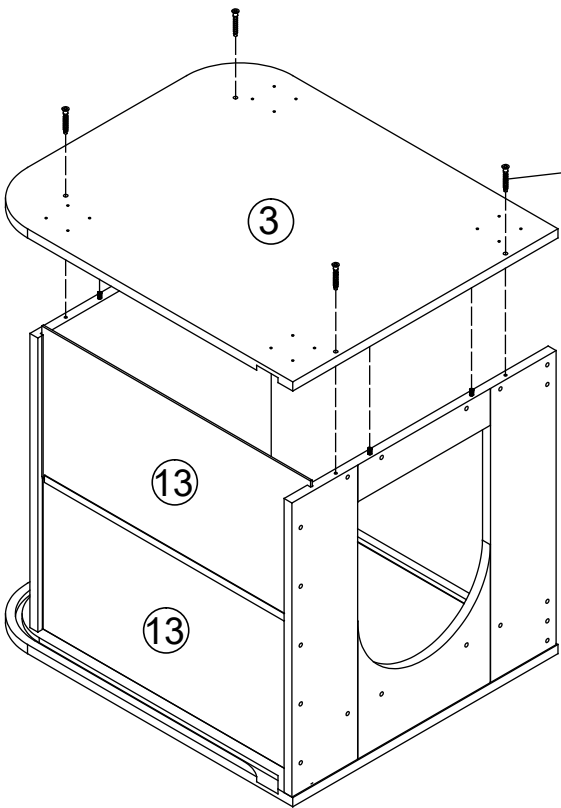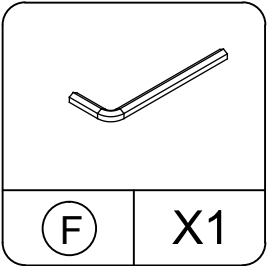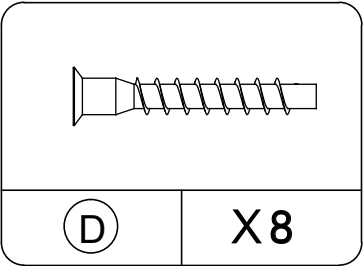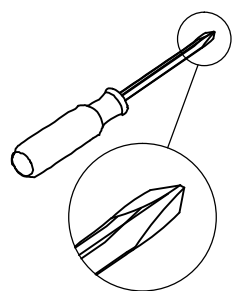





STEP5

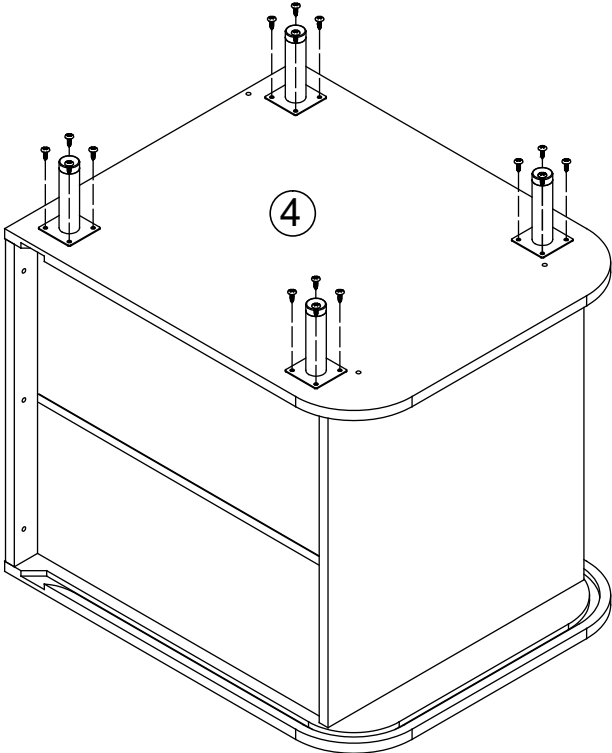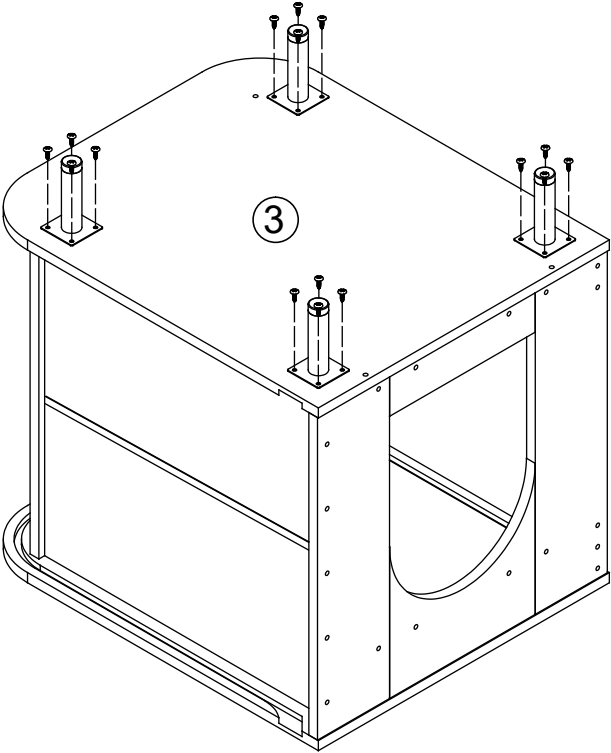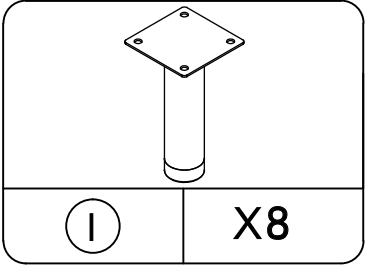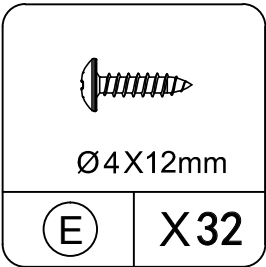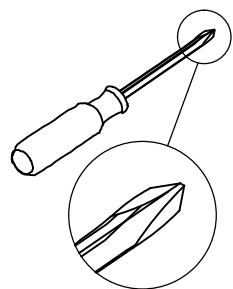










STEP6

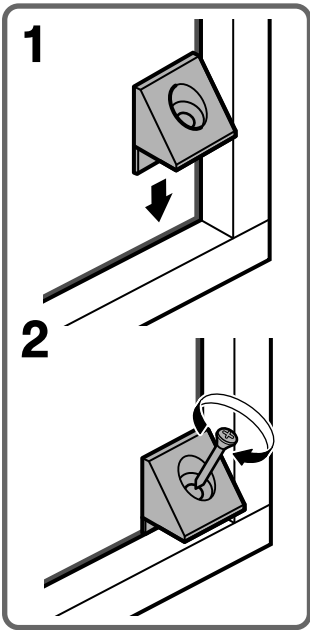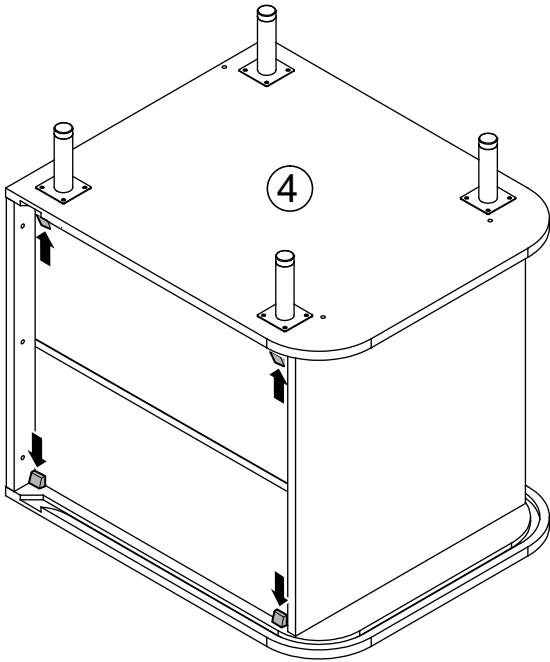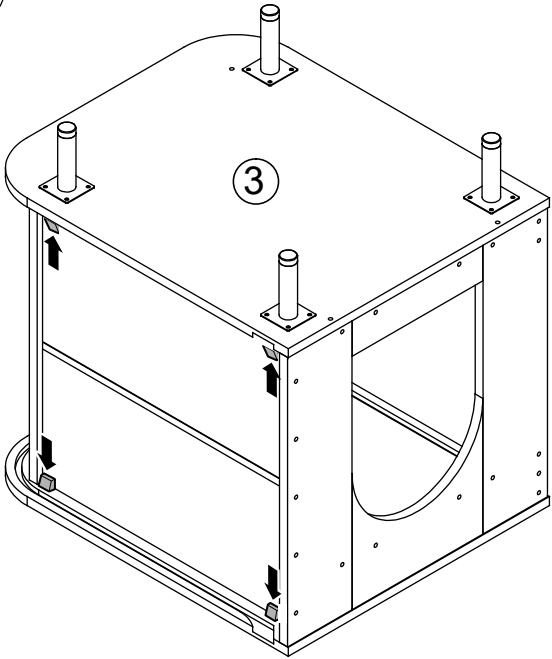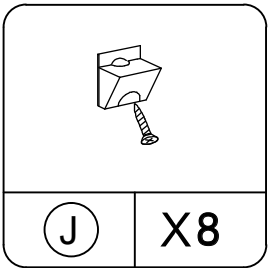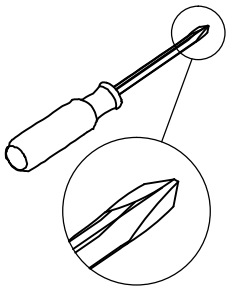

STEP7

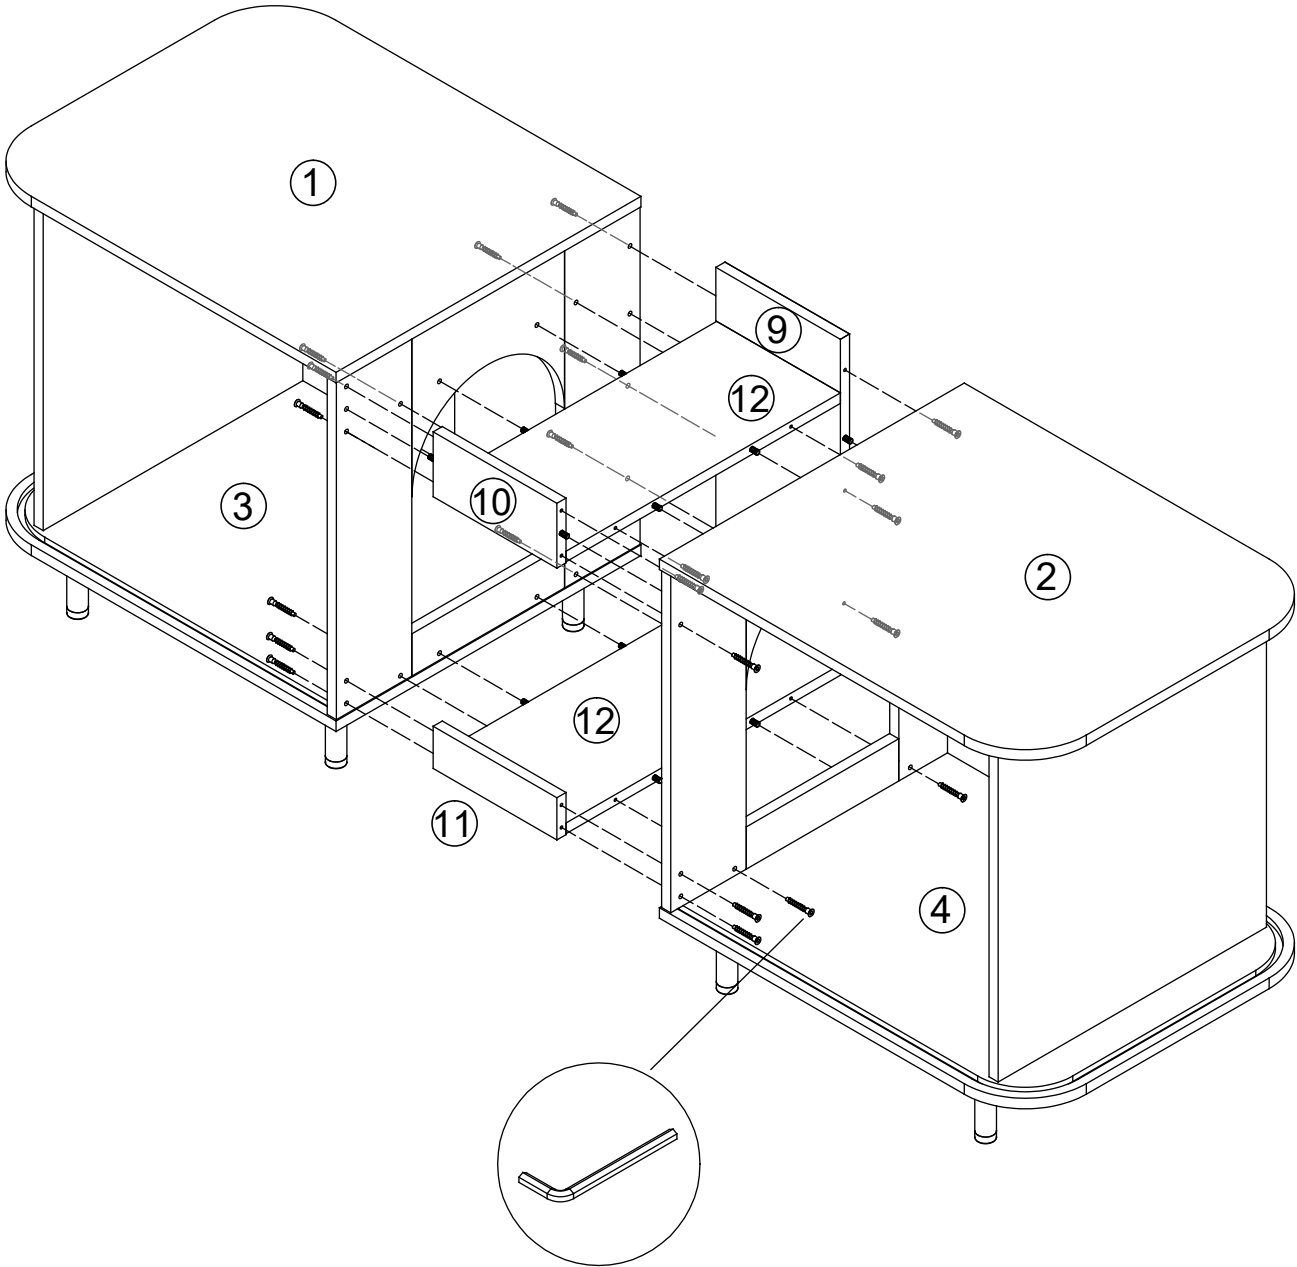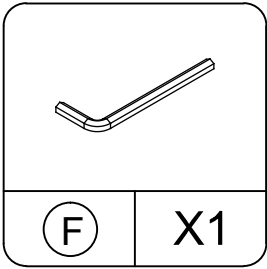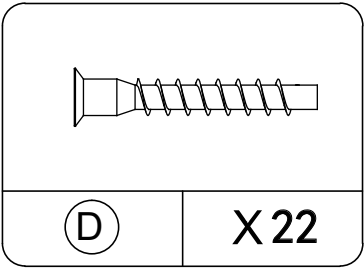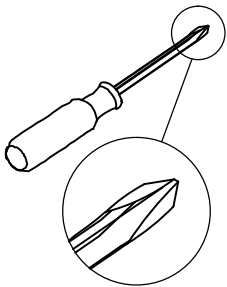

STEP8

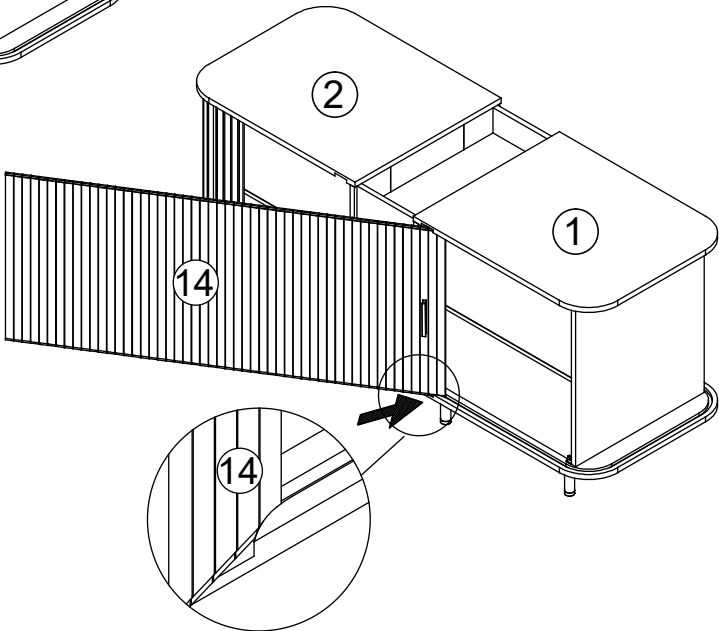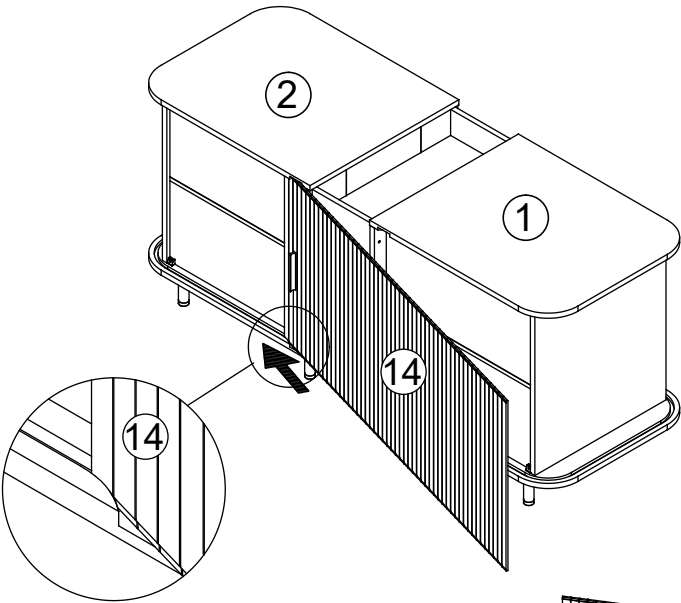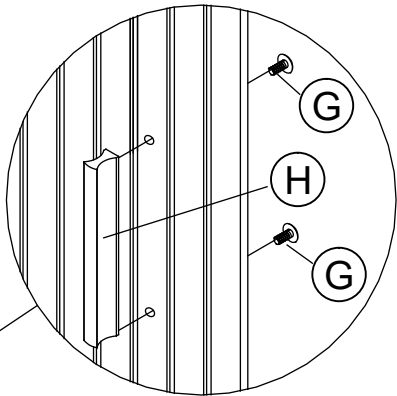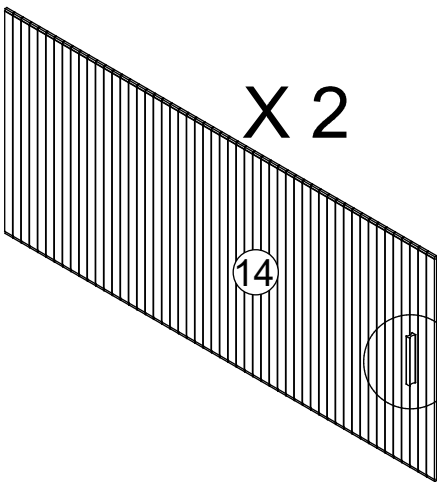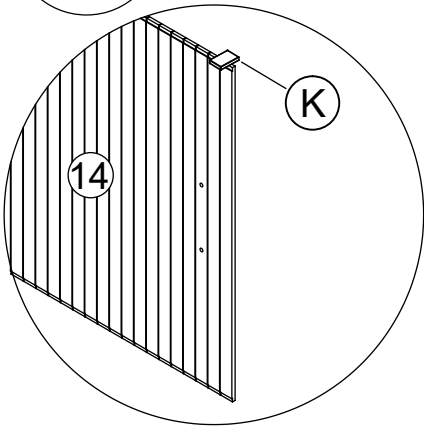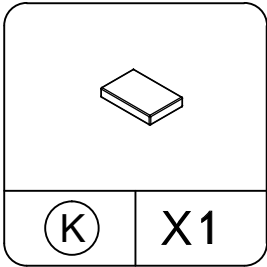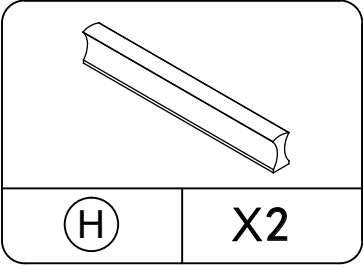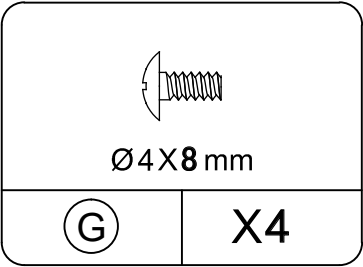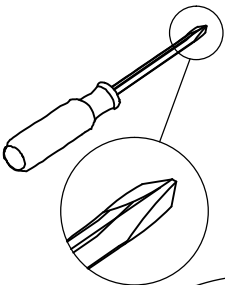

STEP9

