


ASSEMBLY INSTRUCTIONS

Wood Platform Bed


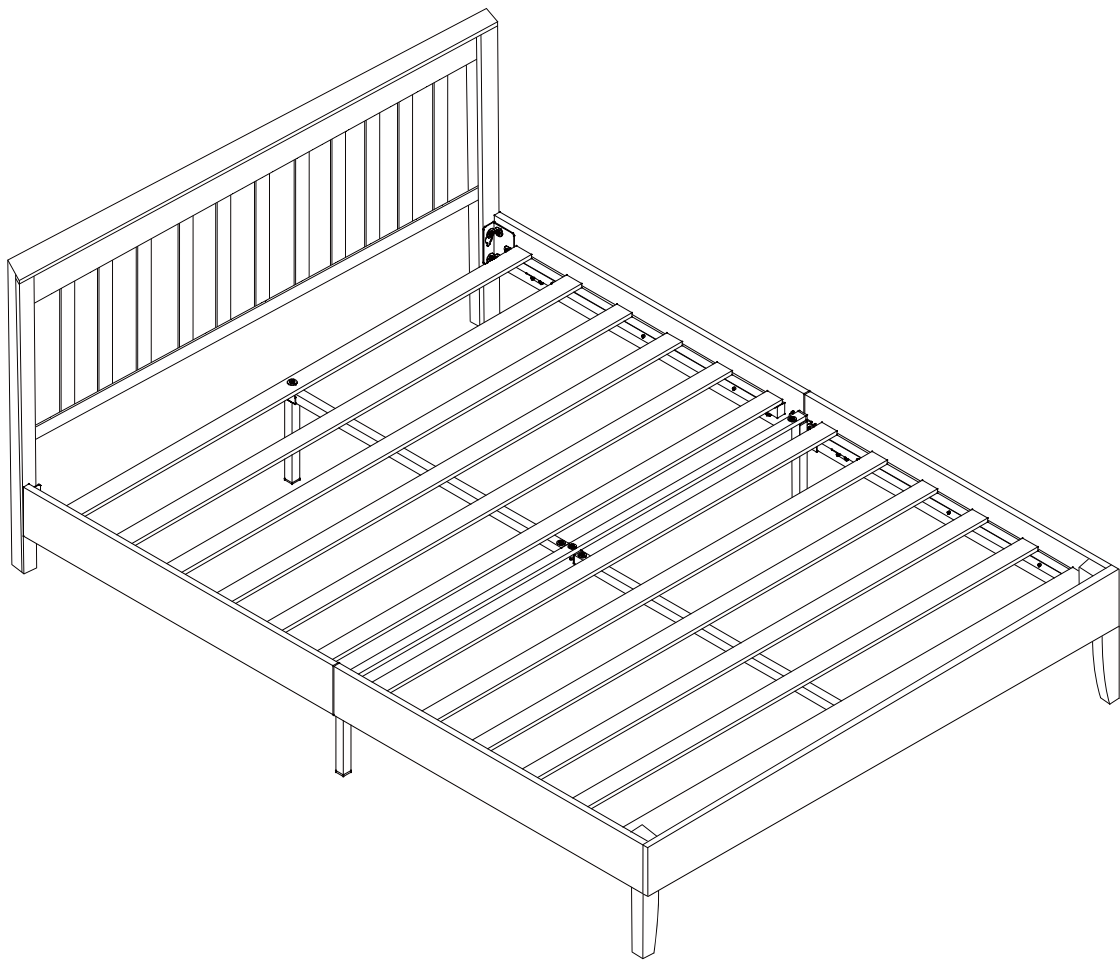


Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.



Please follow the instruction manuals and use a pad to protect the product during your assembly.

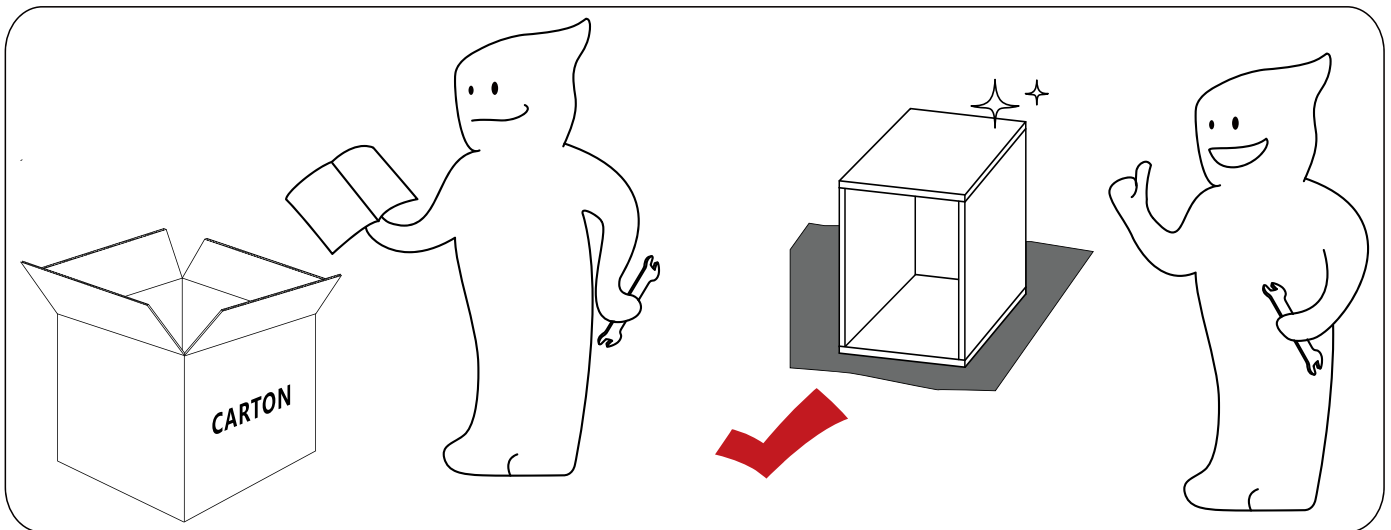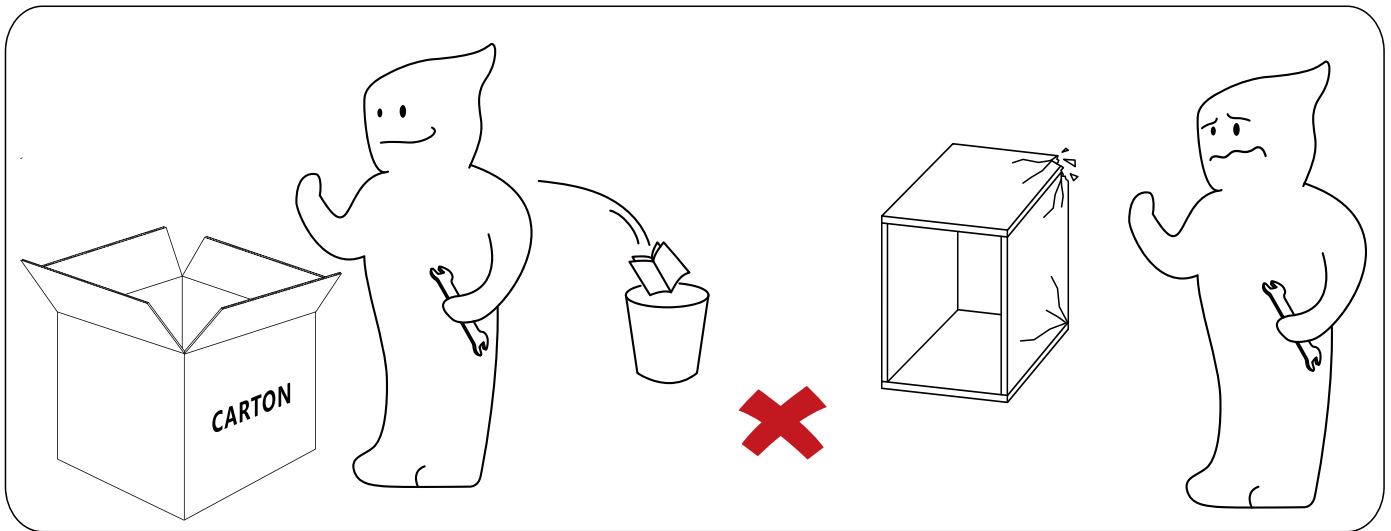


Note:








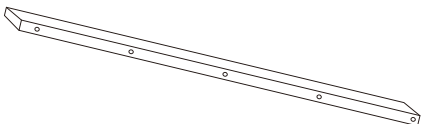
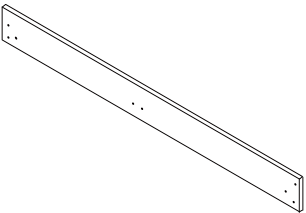
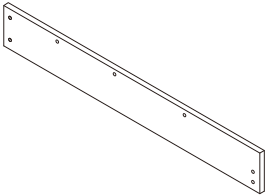
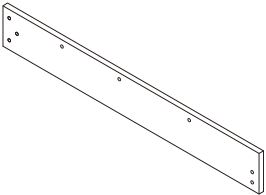
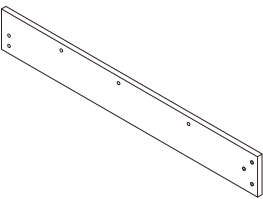


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.
3. **Finally, tighten all the screws manually.**

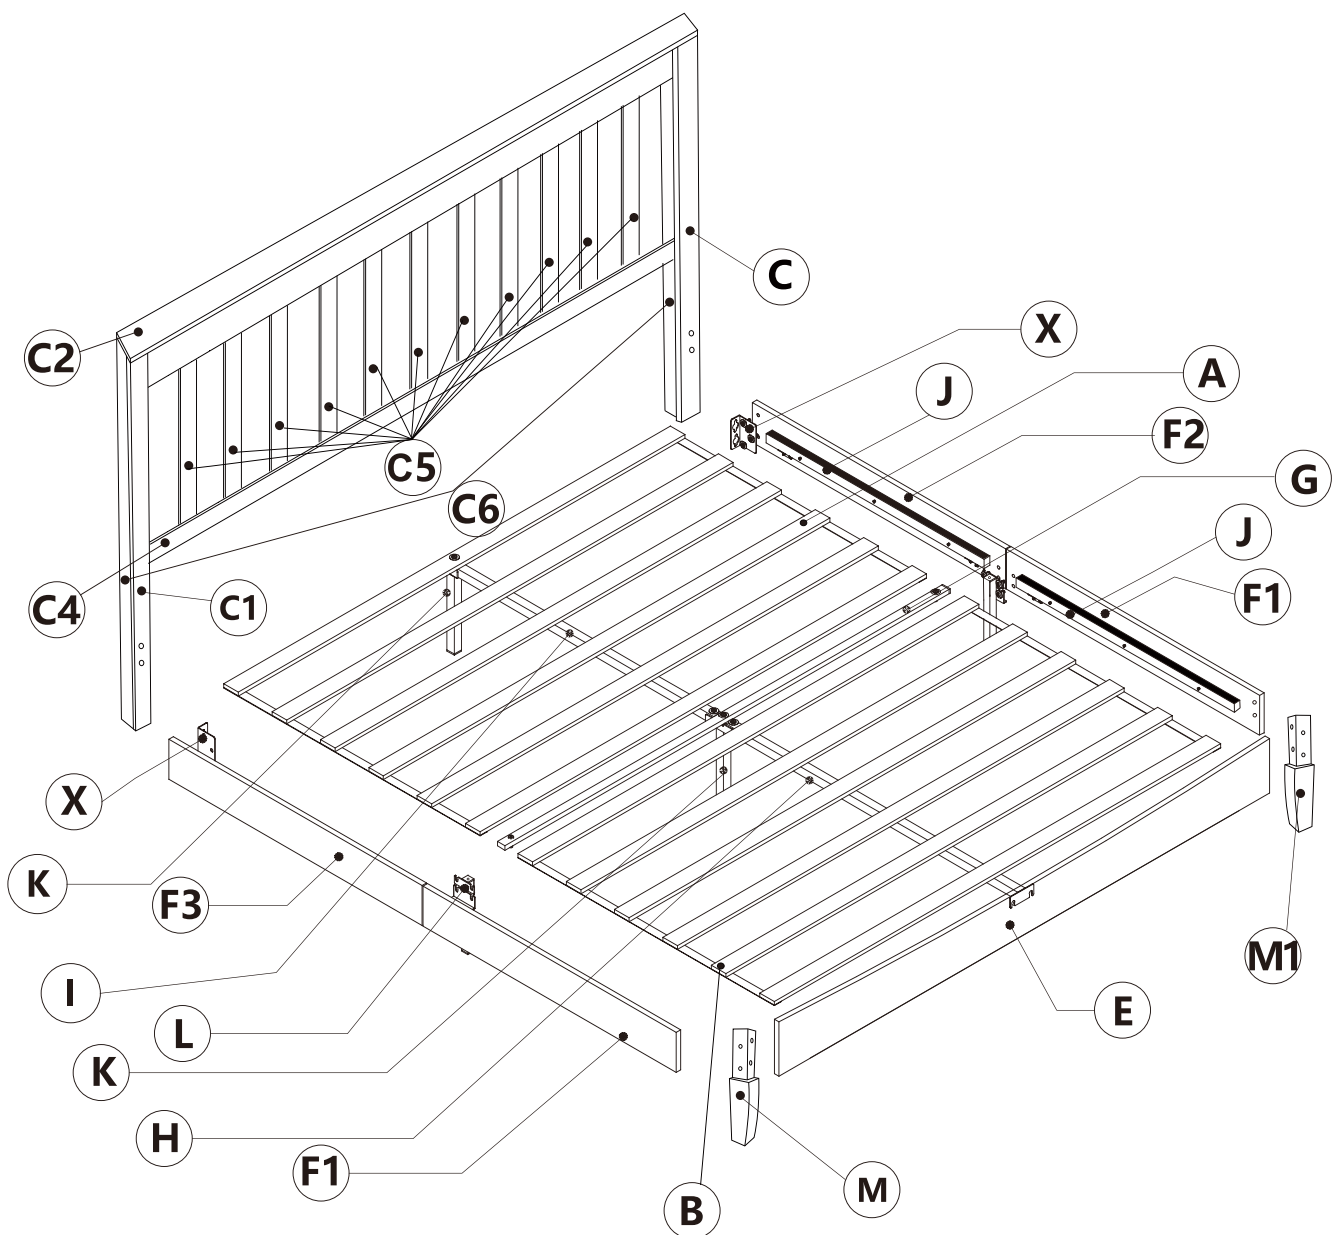













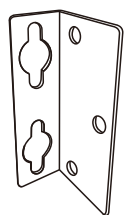


For easier and better assembly, **2** or more adults are required.

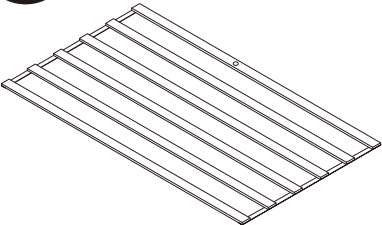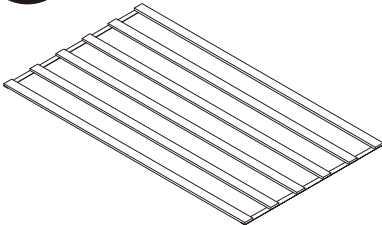

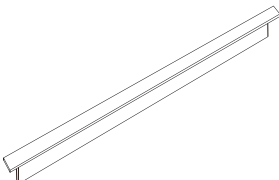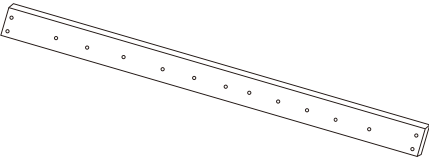ASSEMBLY INSTRUCTIONS


(A)  1pc	(B)  1pc	(C)  1pc
(C1)  1pc	(C2)  1pc	
(C4)  1pc	(C5)  11pcs	(C6)  2pcs
(E)  1pc	(F1)  2pcs	(F2)  1pc
(F3)  1pc	(M)  1pc	(M1)  1pc

ASSEMBLY INSTRUCTIONS
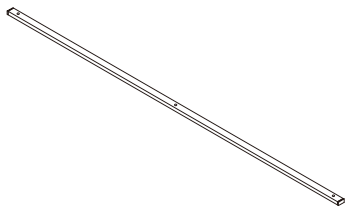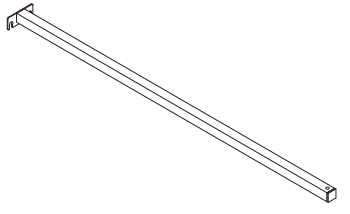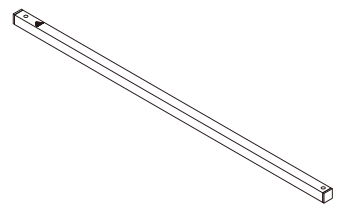
<p>(G)</p>  <p>1pc</p>	<p>(H)</p>  <p>1pc</p>	<p>(I)</p>  <p>1pc</p>
<p>(J)</p>  <p>4pcs</p>	<p>(K)</p>  <p>2pcs</p>	<p>(L)</p>  <p>2pcs</p>
<p>(N)</p>  <p>M6</p> <p>1pc</p>	<p>(P)</p>  <p>M8x35 mm</p> <p>5pcs</p>	<p>(Q)</p>  <p>φ 8x18x1.5 mm</p> <p>46pcs+1pc</p>
<p>(R)</p>  <p>M8x30 mm</p> <p>12pcs</p>	<p>(S)</p>  <p>M8x55 mm</p> <p>9pcs</p>	<p>(W)</p>  <p>M8x14 mm</p> <p>20pcs+1pc</p>
<p>(X)</p>  <p>100x2 mm</p> <p>2pcs</p>	<p>(T)</p>  <p>M6x25 mm</p> <p>8pcs</p>	<p>(U)</p>  <p>M6x20 mm</p> <p>22pcs+1pc</p>

ASSEMBLY INSTRUCTIONS


Ⓥ



M6x25 mm

10pcs


Ⓩ



M6

32pcs+1pc


Ⓨ

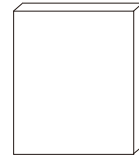




8pcs

ASSEMBLY INSTRUCTIONS


1

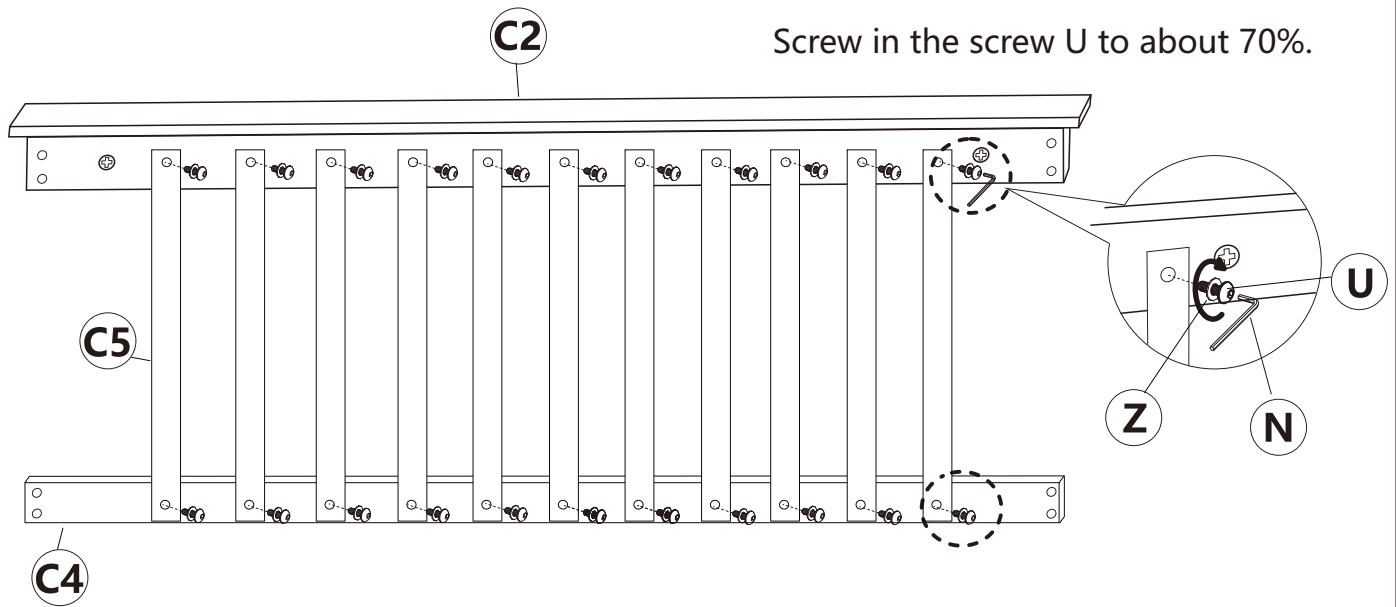



Note: The side with part label is the back.

U		22pcs
M6x20 mm		
Z		22pcs
M6		
N		1pc
M6		

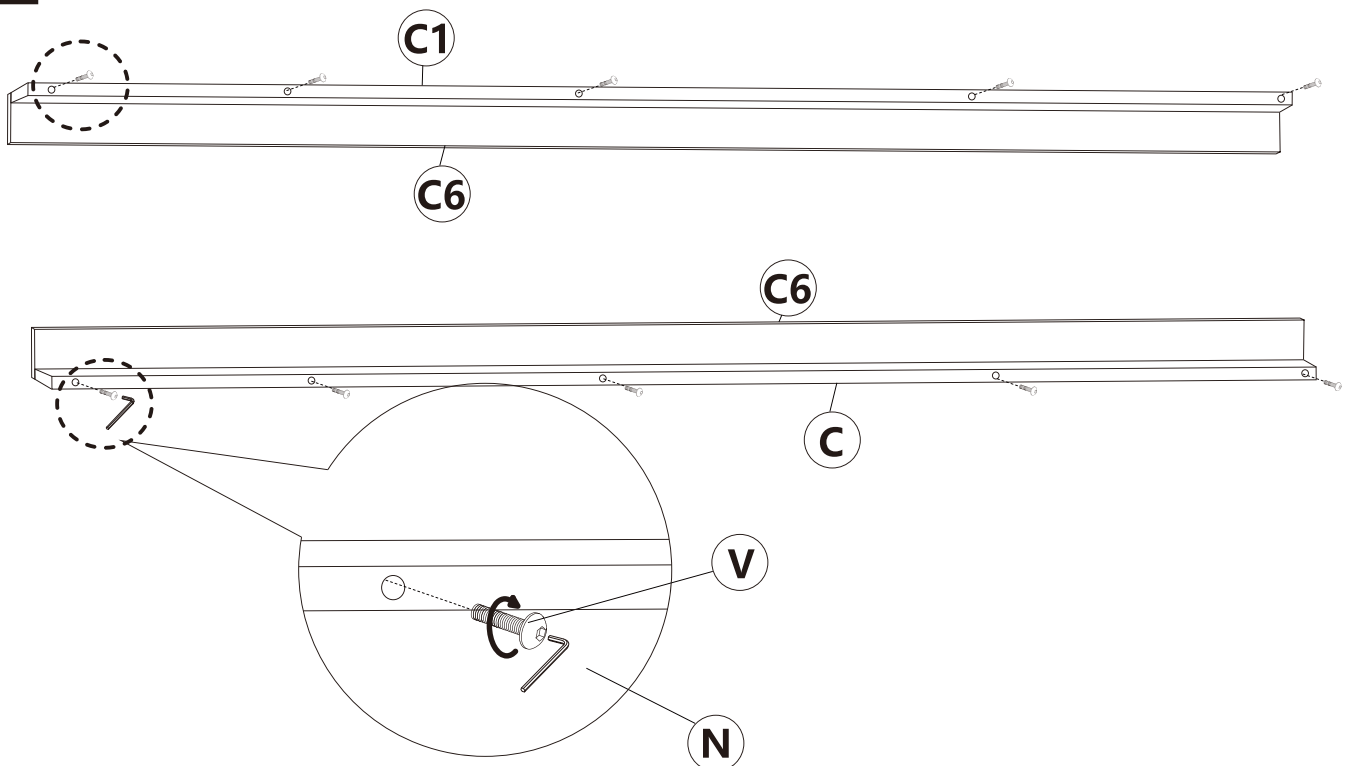
2






V		10pcs
M6x25 mm		
N		1pc
M6		


3

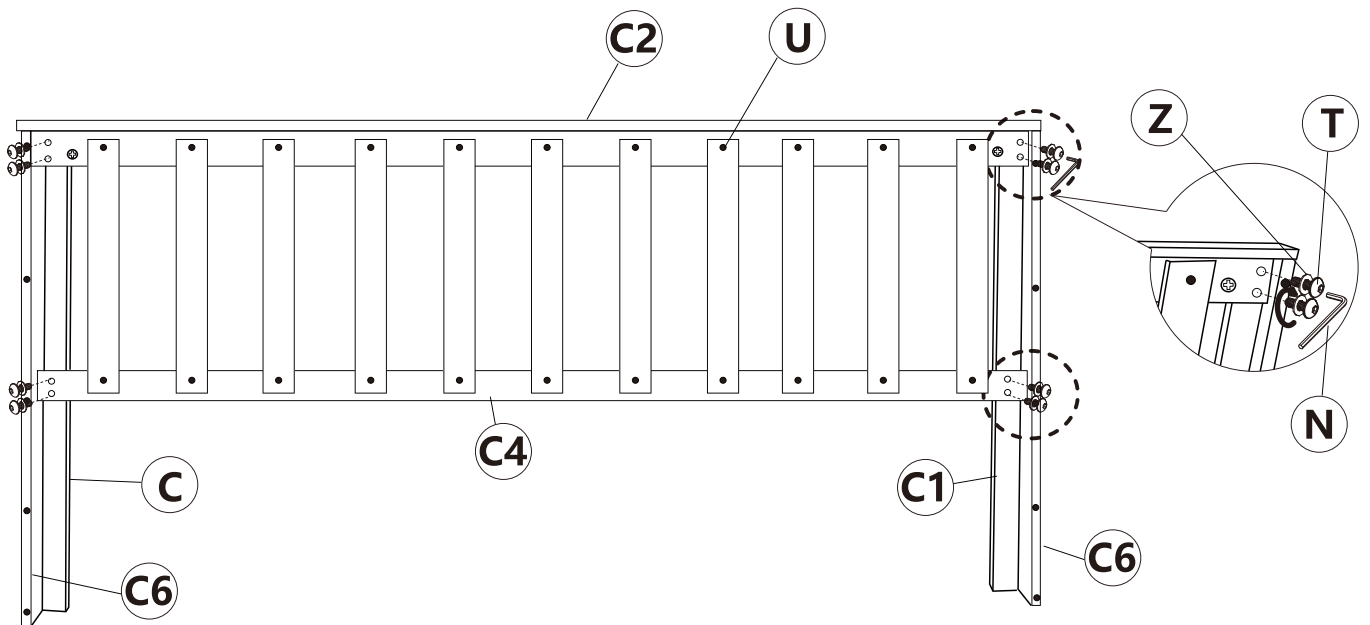


Tighten the screw U and screw T.



T	M6x25 mm		8pcs
Z	M6		8pcs
N	M6		1pc

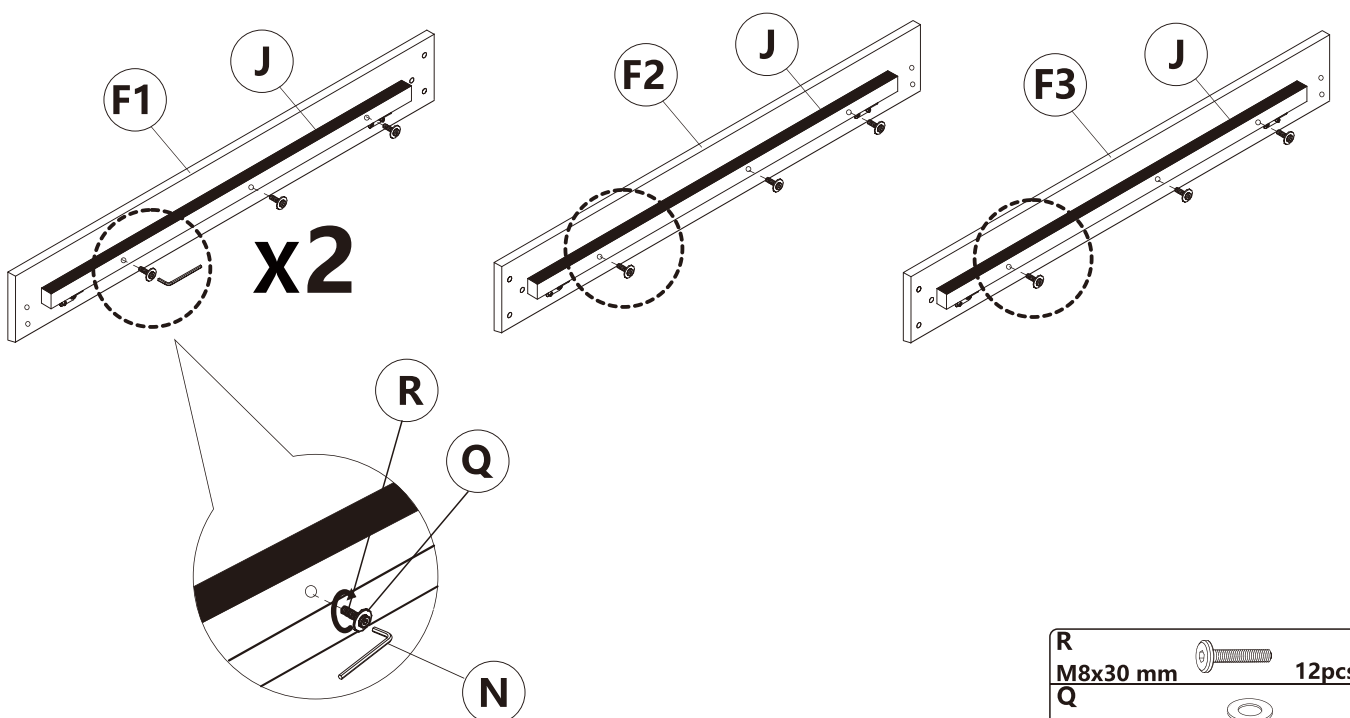
4



R	M8x30 mm		12pcs
Q	φ8x18x1.5 mm		12pcs
N	M6		1pc

5


Take out parts F1 and F3, and lock the iron frame foot L in the middle according to the figure. Note that there are **2 holes** located on the inner side of the board. Then lock the bed hanging pieces X on the front and rear of the board, with **3 holes** on each side.

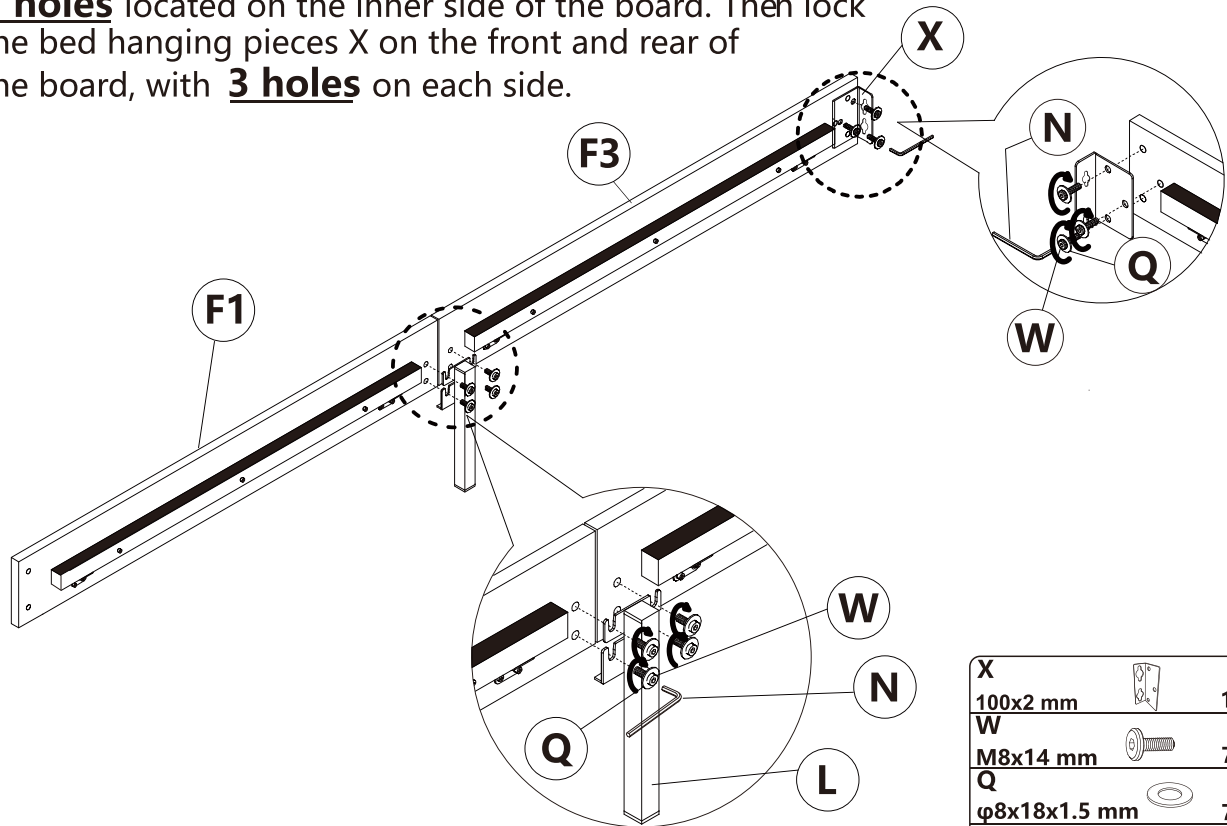

X		1pc
W		7pcs
M8x14 mm		
Q		7pcs
φ8x18x1.5 mm		
N		1pc
M6		

6


Same as Step 5

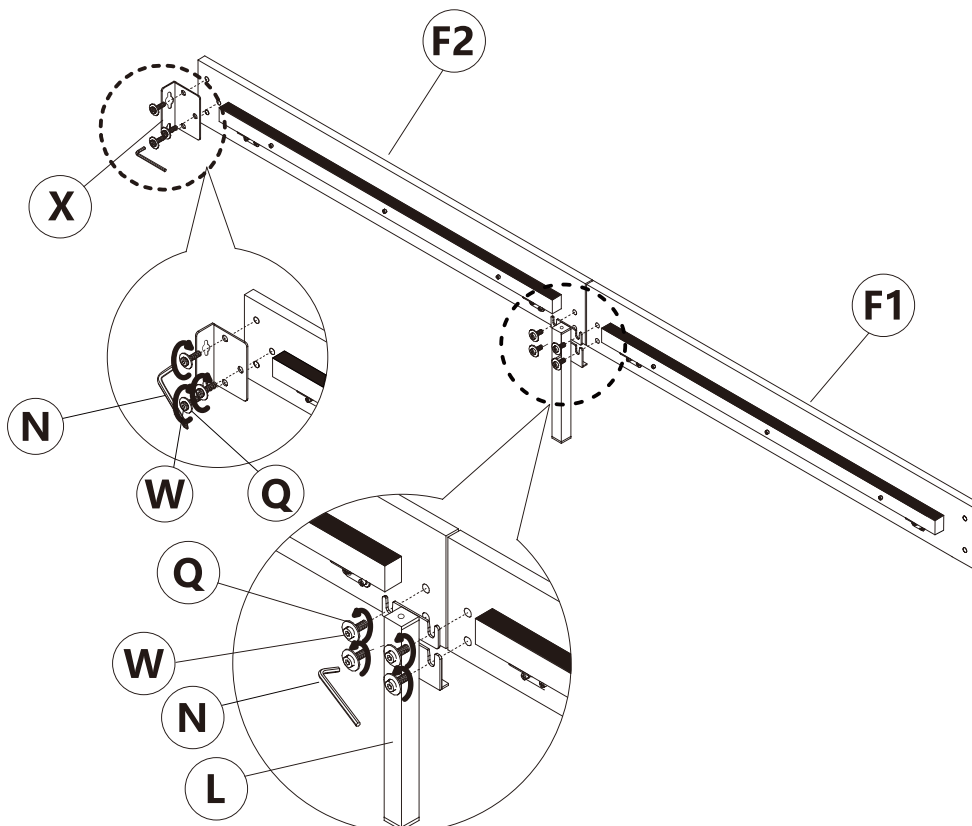




X		1pc
W		7pcs
M8x14 mm		
Q		7pcs
φ8x18x1.5 mm		
N		1pc
M6		


ASSEMBLY INSTRUCTIONS

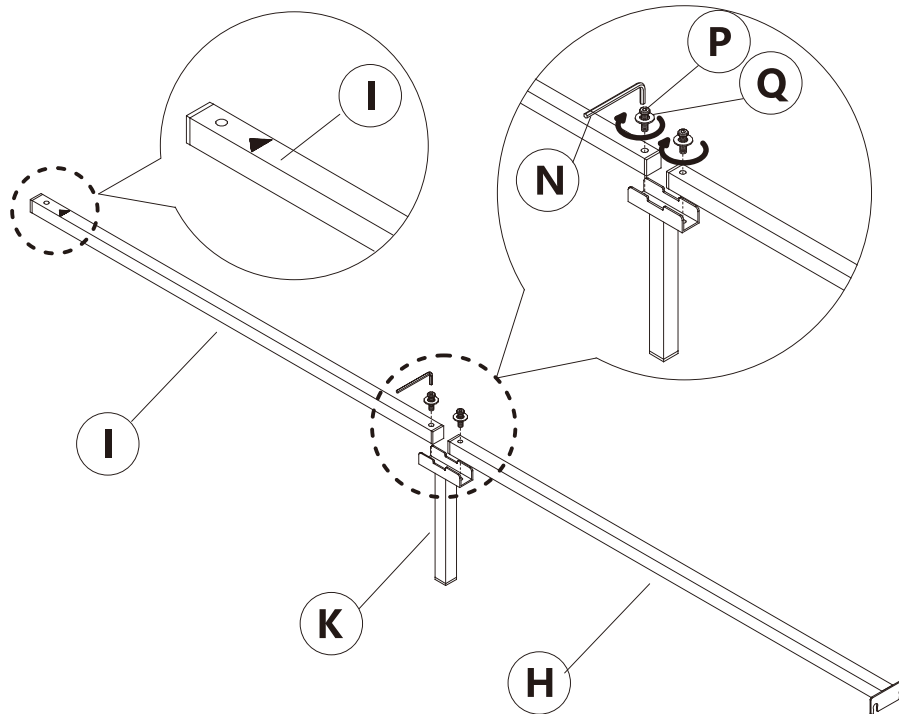7 Noted the direction of the arrow on the middle cross beam is pointing to the front.







P	M8x35 mm		2pcs
Q	φ8x18x1.5 mm		2pcs
N	M6		1pc

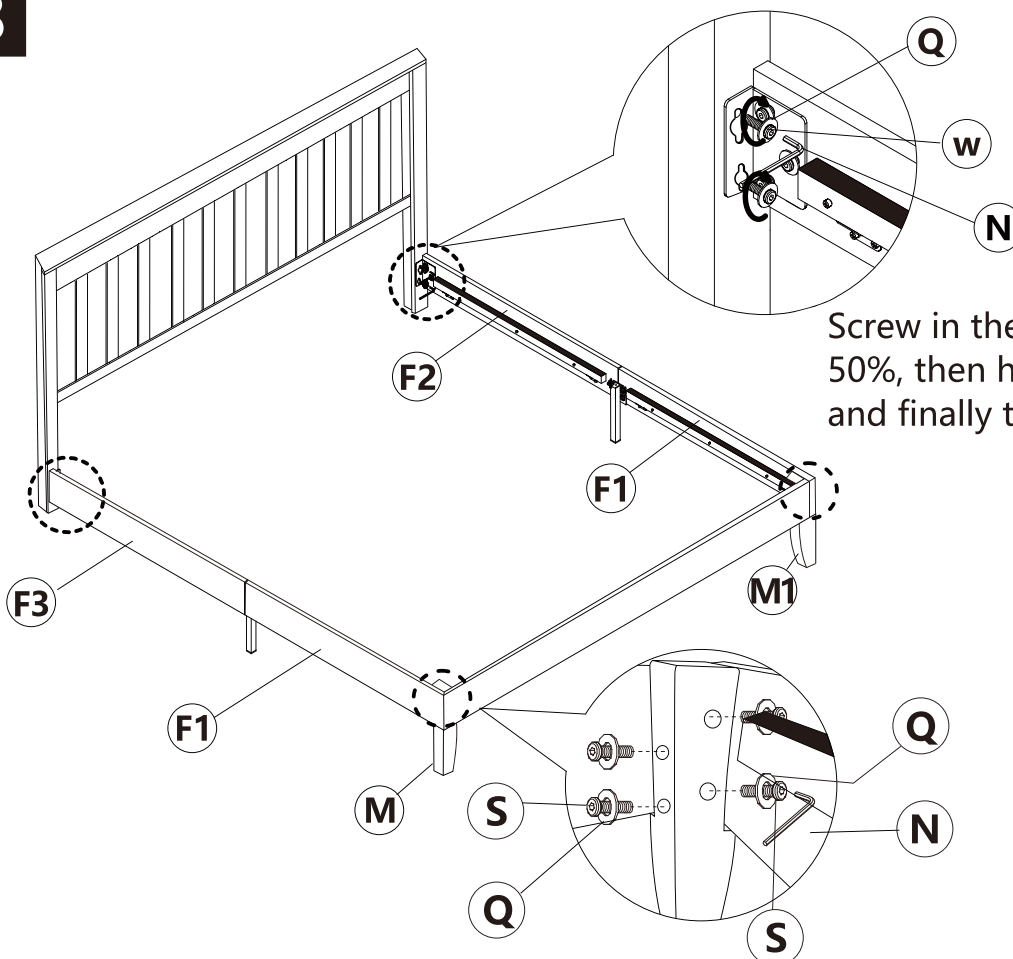
8




Screw in the screw W to about 50%, then hang the bracket on and finally tighten the screw W.

W	M8x14 mm		4pcs
S	M8x55 mm		8pcs
Q	φ8x18x1.5 mm		12pcs
N	M6		1pc


9

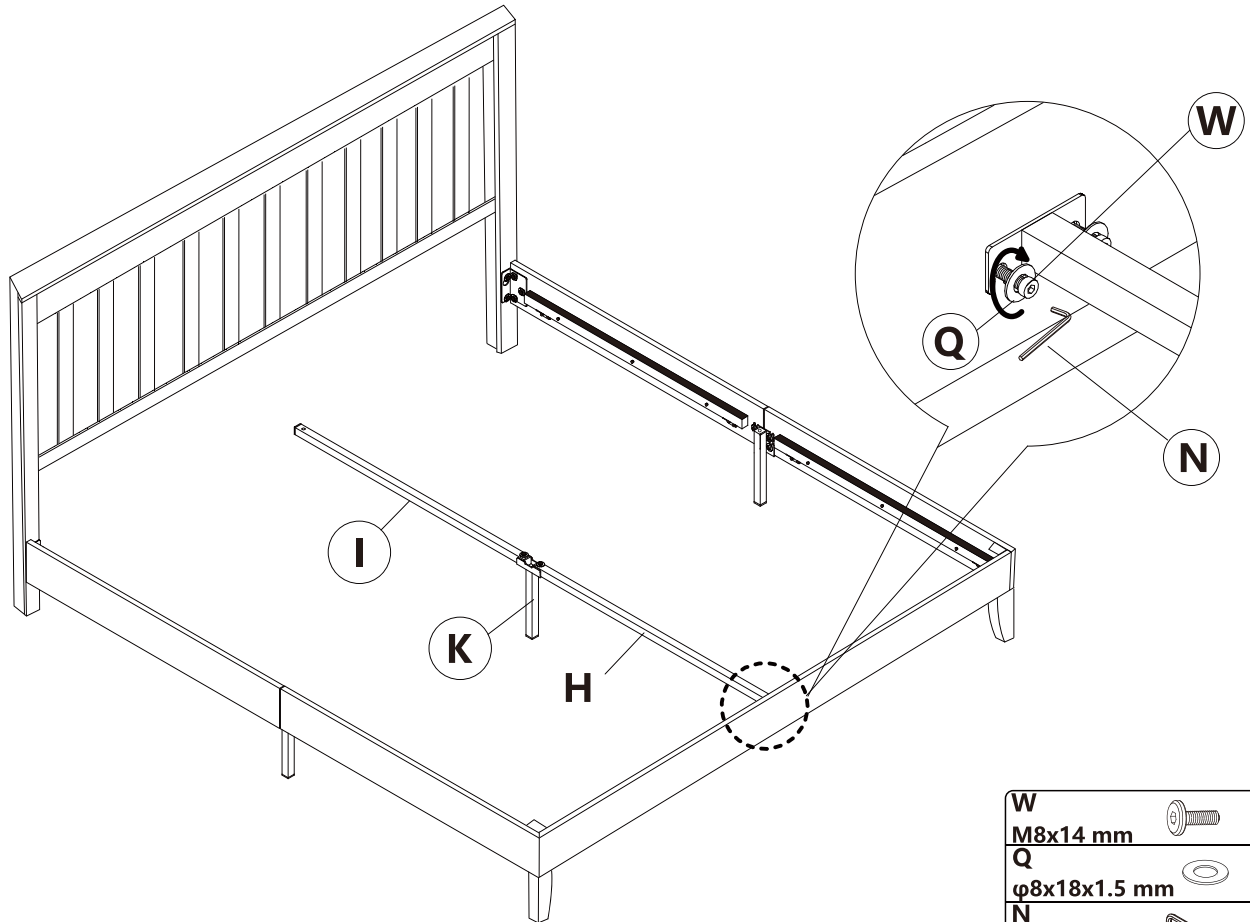

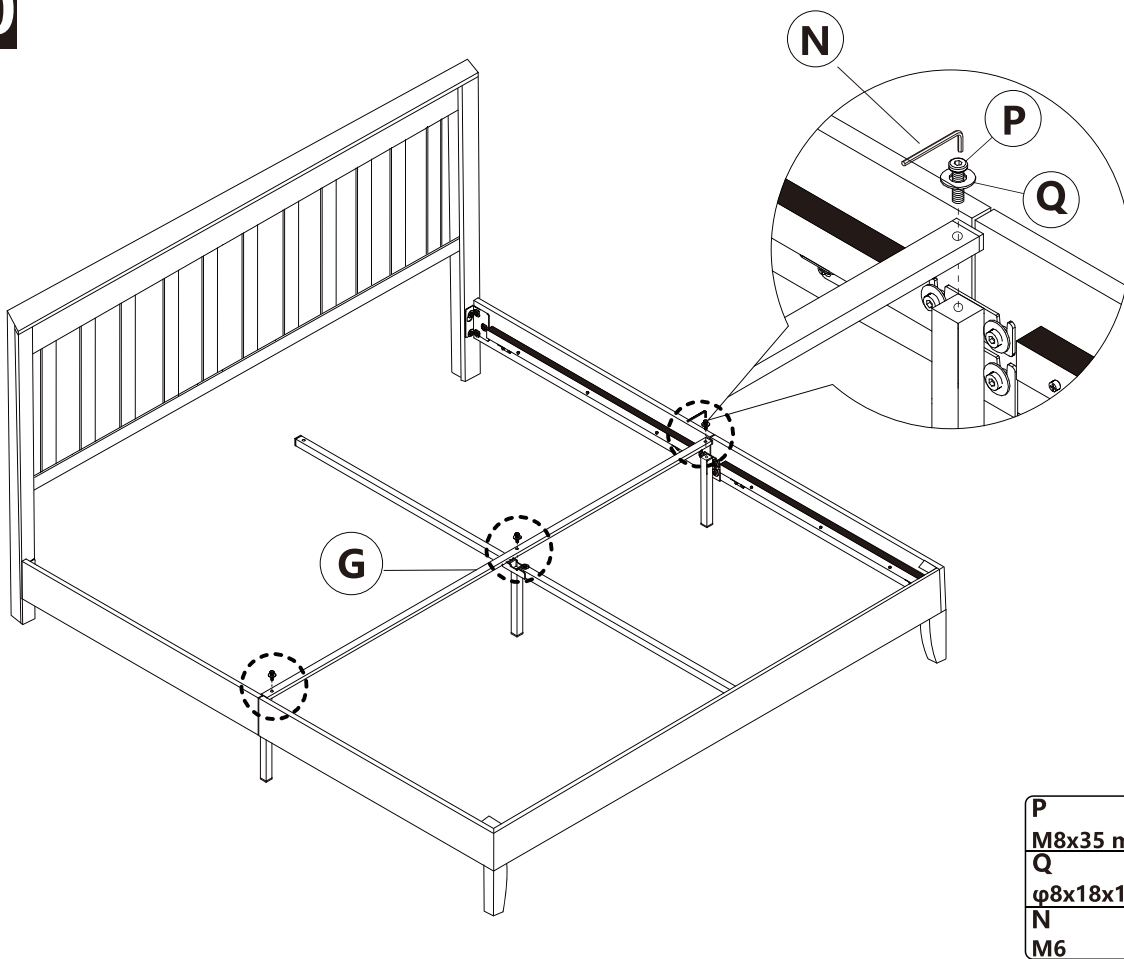


10

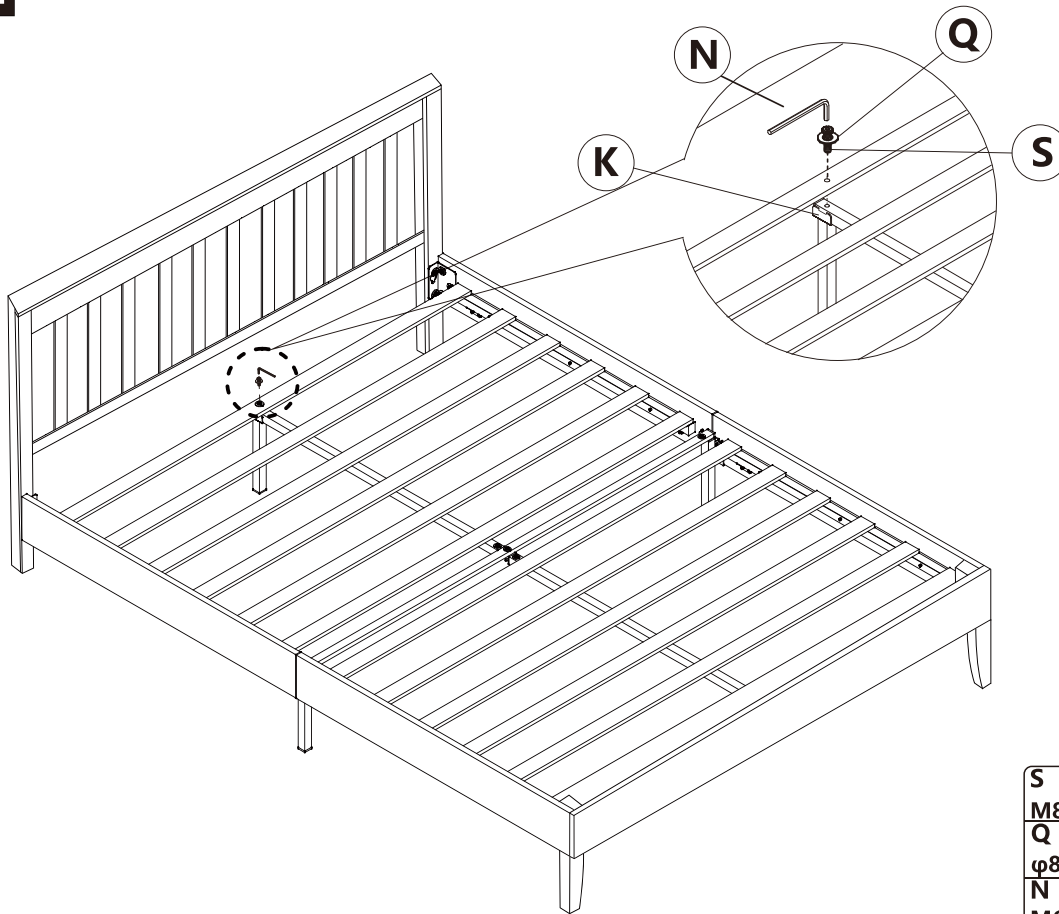


11




S		1pc
M8x55 mm		
Q		1pc
φ8x18x1.5 mm		
N		1pc
M6		

12 Stick Y on the back to avoid noise.

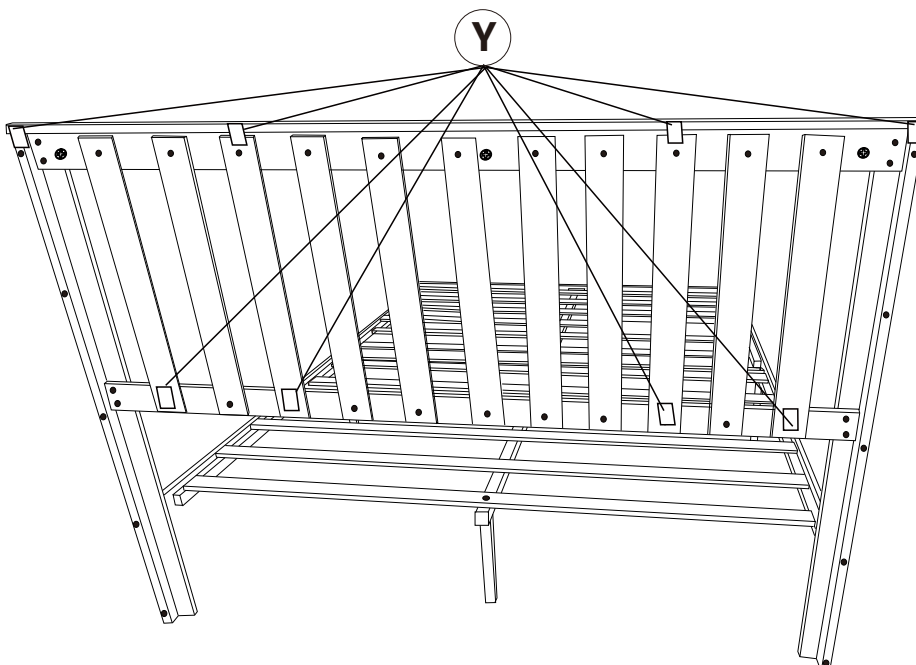

13

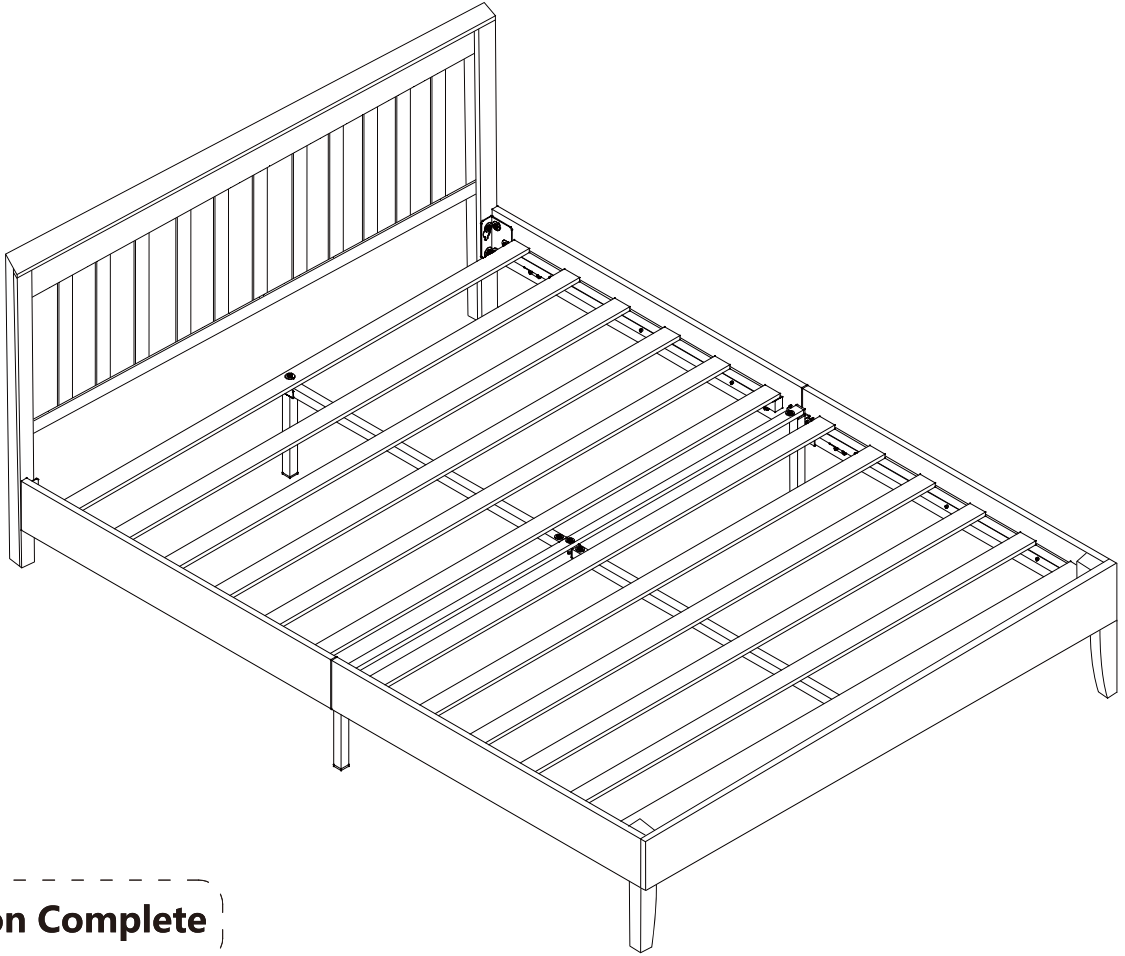

Installation Complete