


ASSEMBLY INSTRUCTION

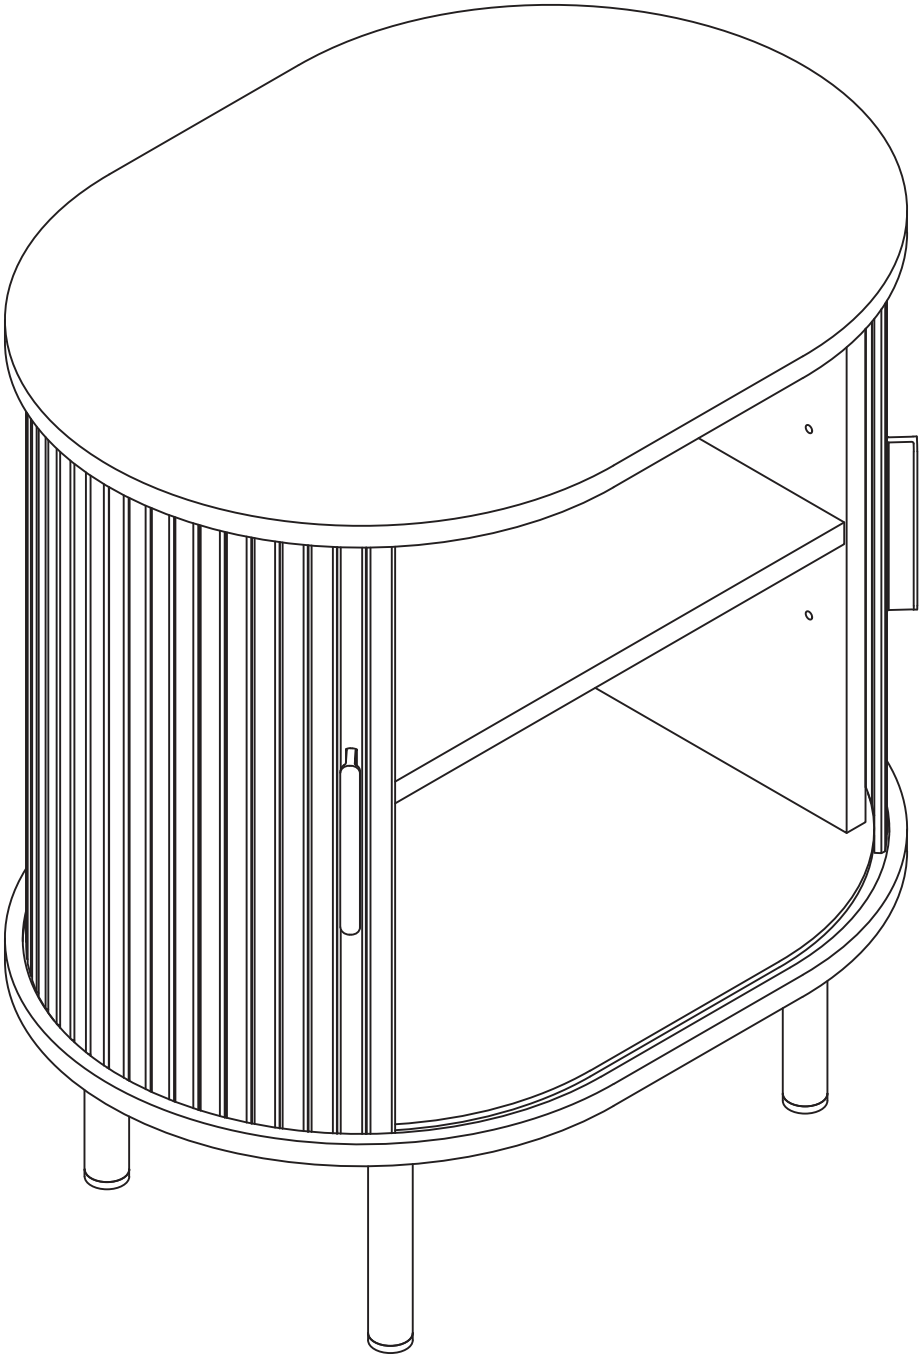


If you need any help during assembly, please contact us at **cs@wellzone.life.**
Sharing a video and a brief description of where you're stuck will help us assist you better.

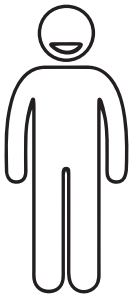

× 2

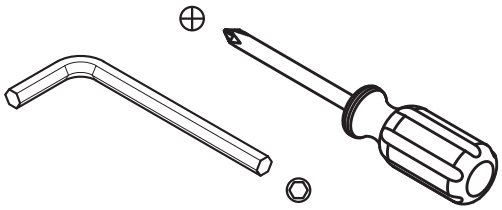

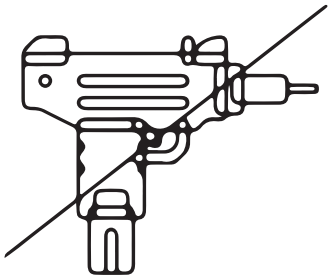


Before You Begin

Two people are recommended for the assembly.


Use the included tools.


If using a power tool, use low power and torque.


Installation of Eccentric Unit

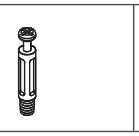	Bolt


	Connecting piece

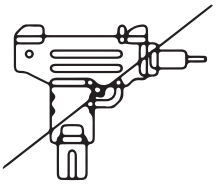

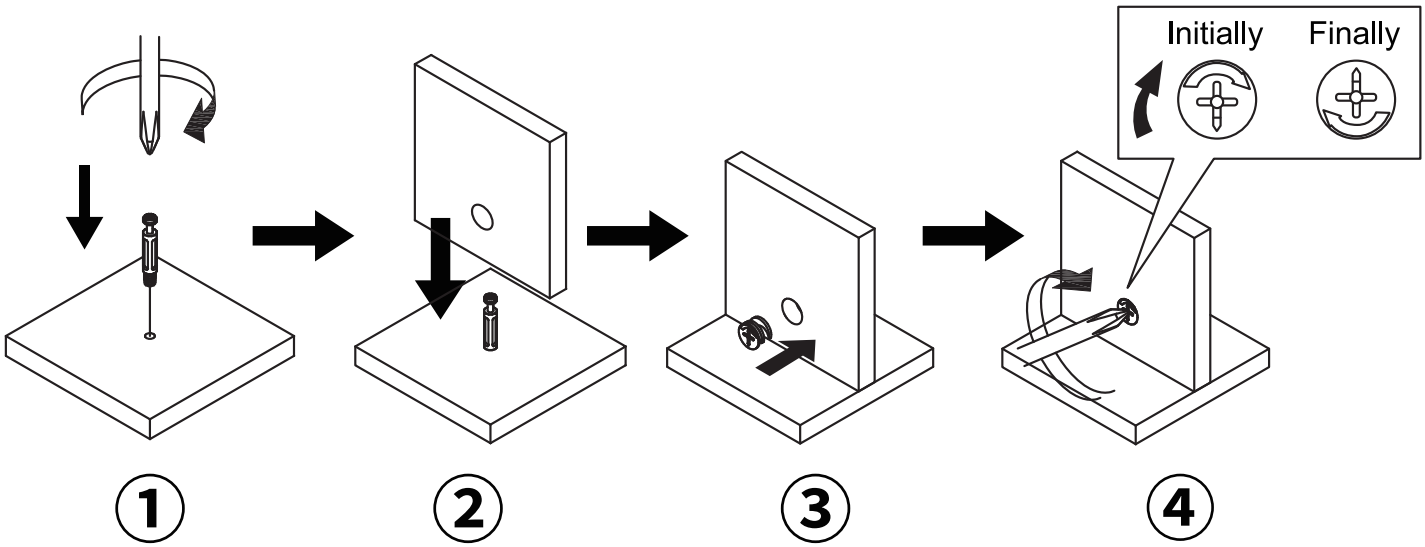

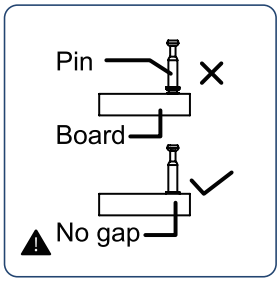


⚠ Adjust connecting piece direction as illustrated.

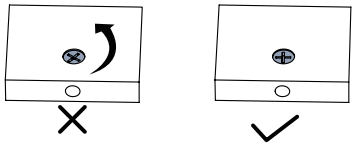

⚠

Insert bolt when the connecting piece is as shown in Figure 2.

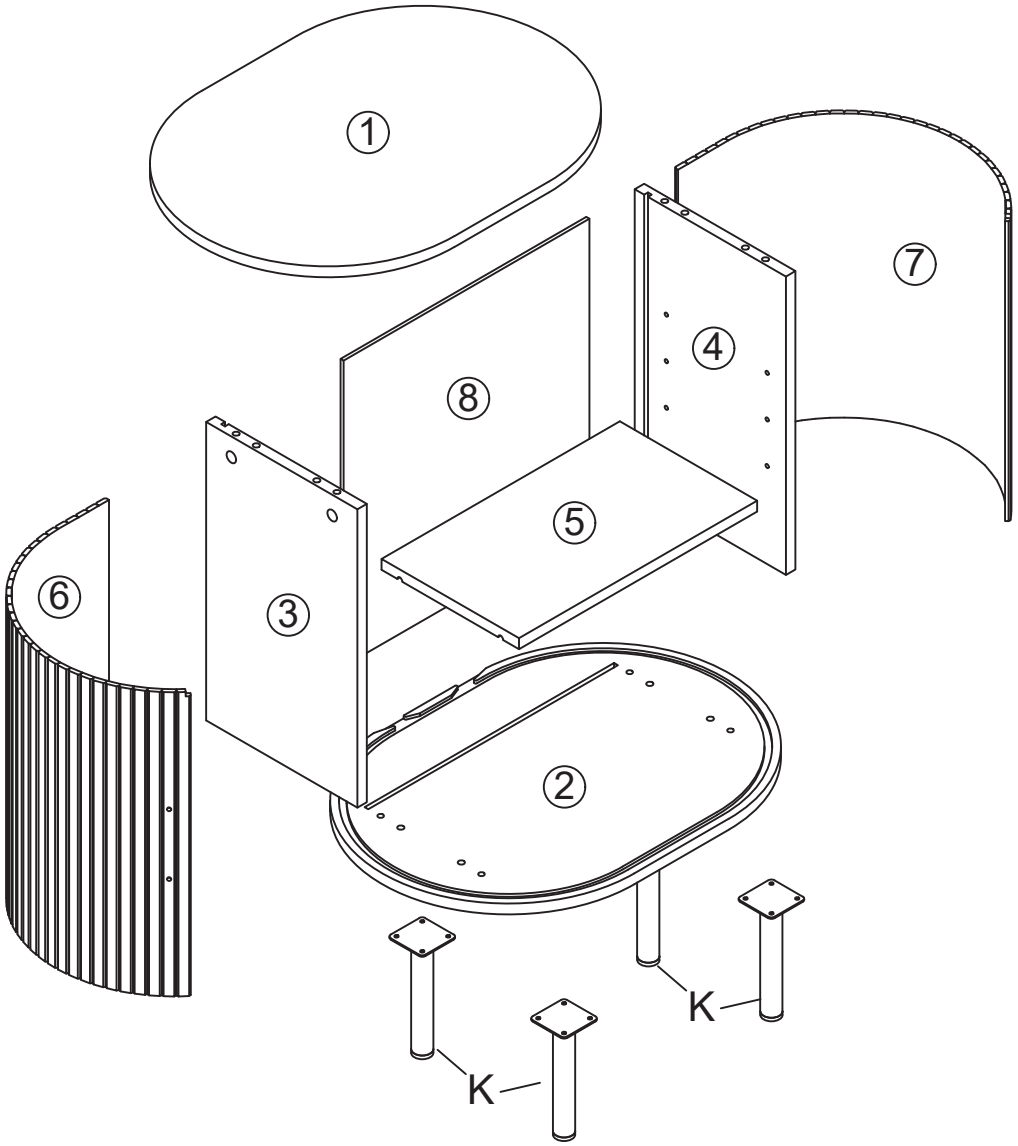


Package Contents: Hardware

Please count and verify all parts before assembly.


A × 4+1	B × 4+1	C × 8+1	D × 4+1	E × 16+2	F × 4+1	G × 2	H × 4	I × 4+1
Ø15X9.5mm	Ø6.5X35mm	Ø8X30mm	Ø6.3X50mm	M4X12mm	Ø4X9mm	115X11X17mm	Ø5X16mm	Ø3X14mm

J × 4+1	K × 4	L × 1	M × 1
Ø21mm			

1

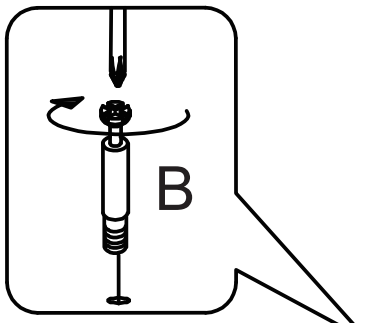


Make sure to screw the bolt in vertically.

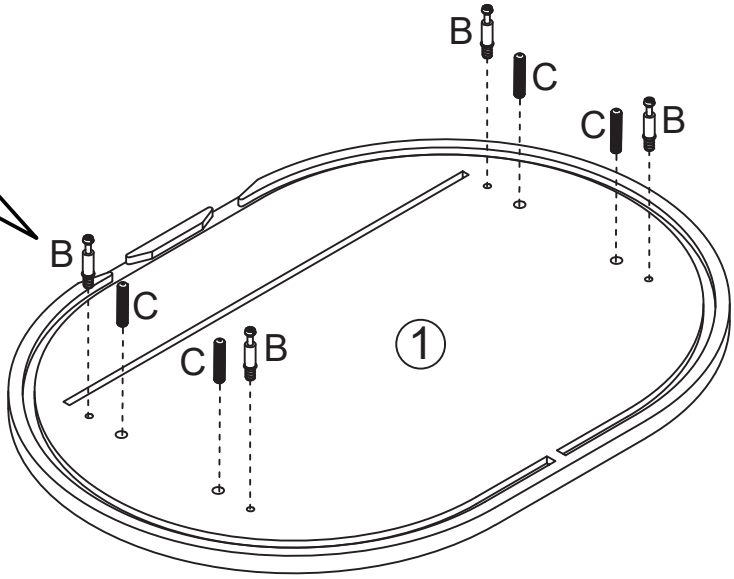

B × 4	C × 4	M × 1
		

Twist Bolts (B) and insert Dowels (C) into Board (1).


2

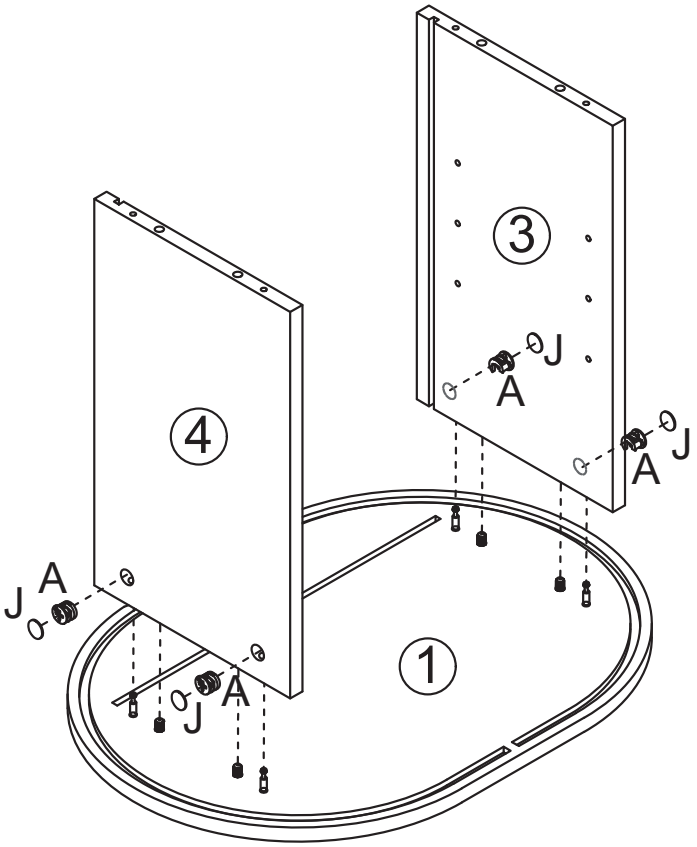

A × 4	J × 4	M × 1
		

Connect Boards (3) (4) to Board(1), secure them with Cam Locks (A). Attach (J) to cover (A).


3

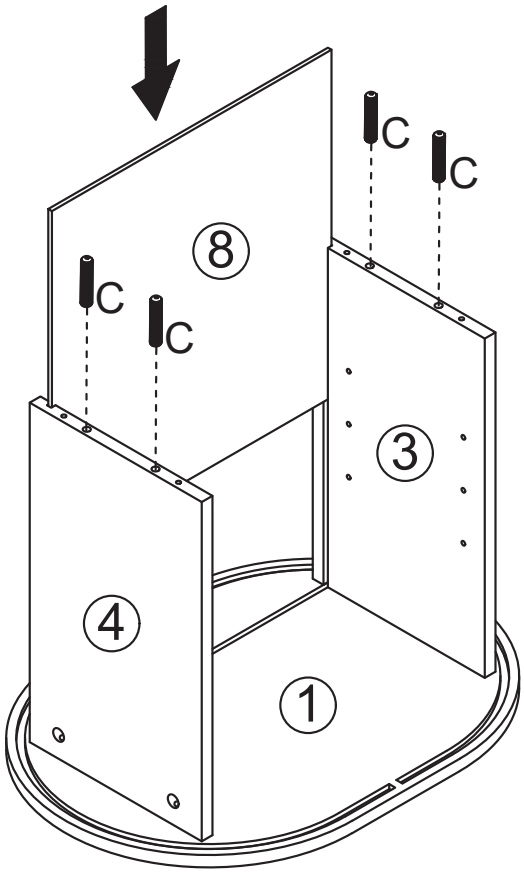

C × 4


Insert Board (8) into the grooves of Board (1)(3)(4).
Insert Dowels (C) into the holes in Board (3)(4).


4

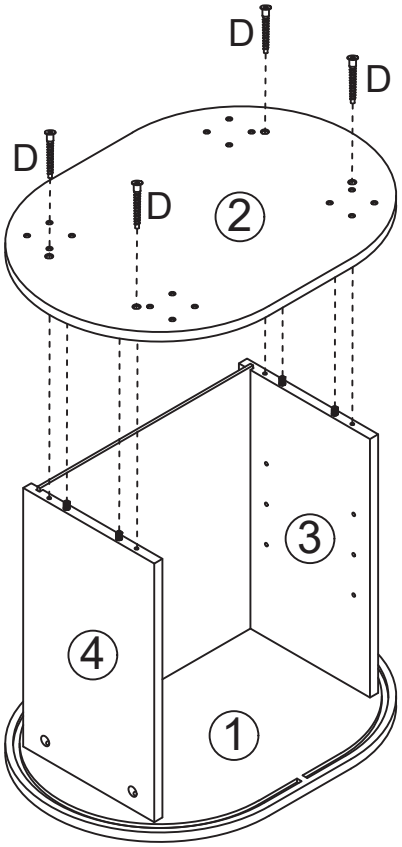

D × 4	L × 1
	

Connect Board (2) to Boards (3)(4),then secures with Screws (D).


5

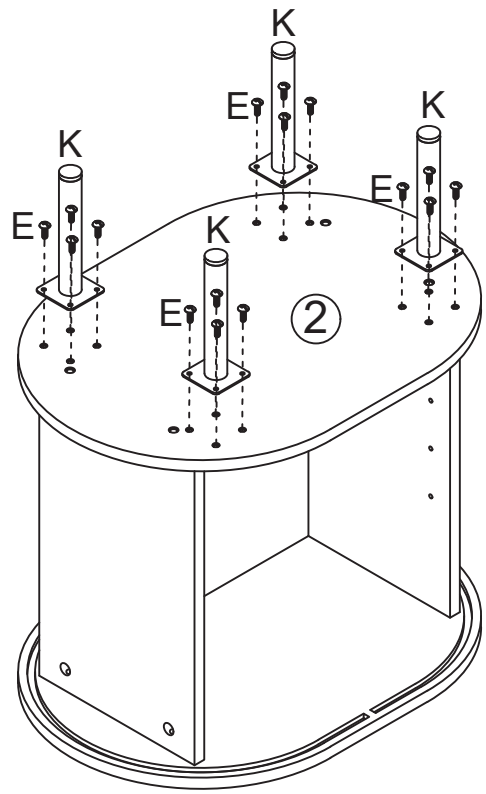

E × 16	K × 4	M × 1
		

Twist Screws (E) to connect Legs (K) to Board (2).
Note: The adjustable foot pads allow height adjustment on uneven floors.


6

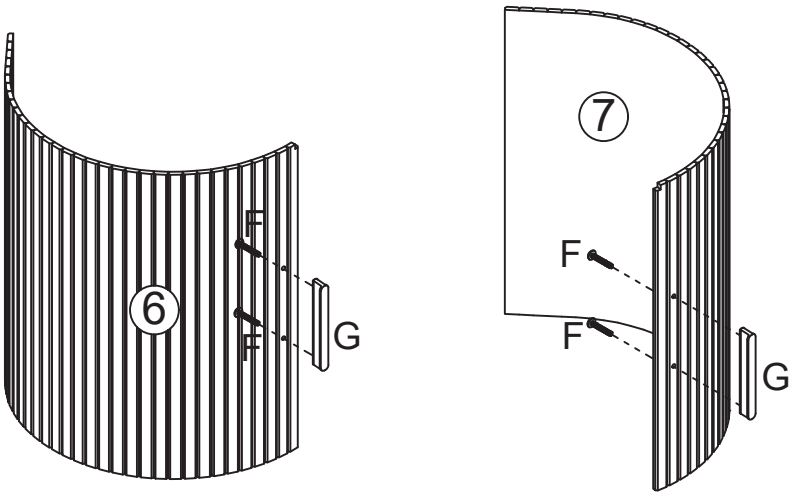

F × 4	G × 2	M × 1
		


Twist Screws (F) to connect Handle (G) to Boards (6) (7).

7

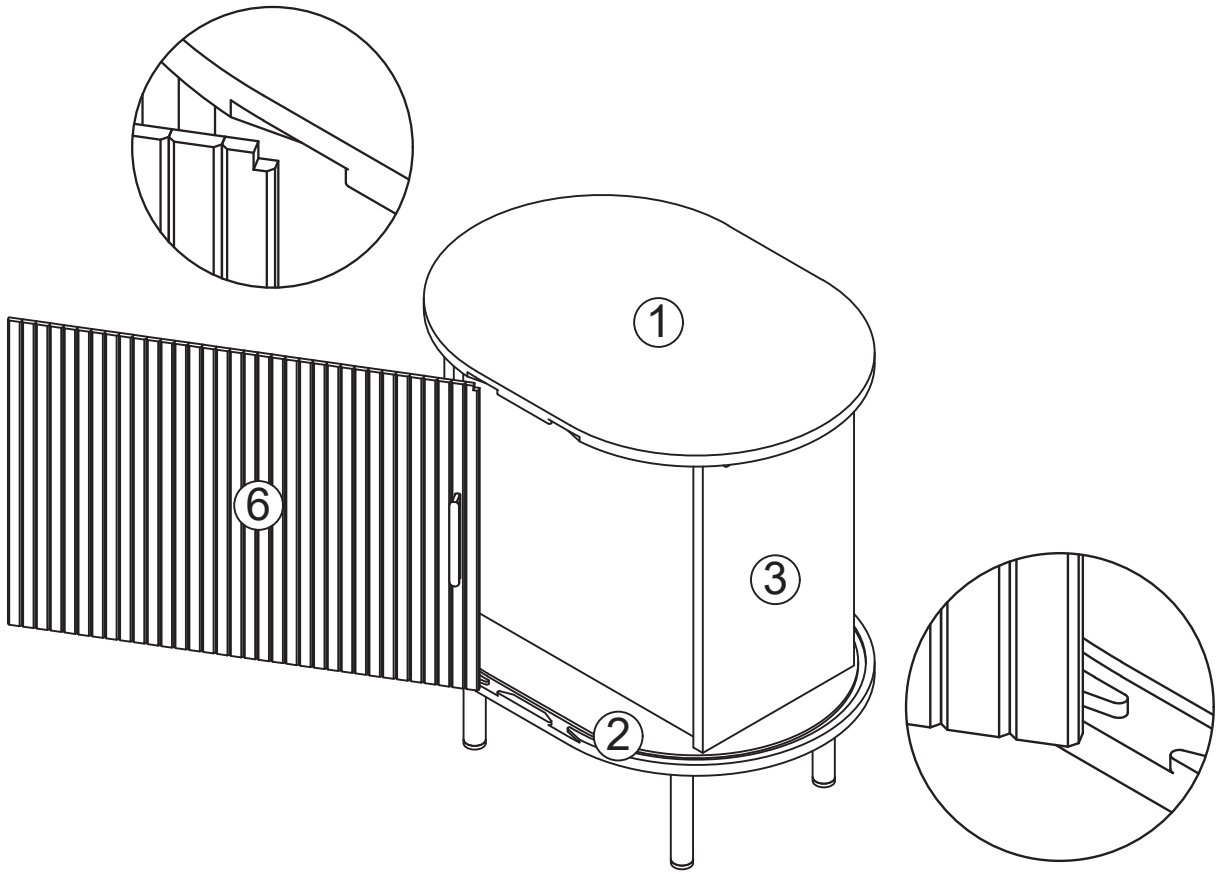


Insert Board (6) into the tracks of Boards (1)(2), then slide it from left to right.

8

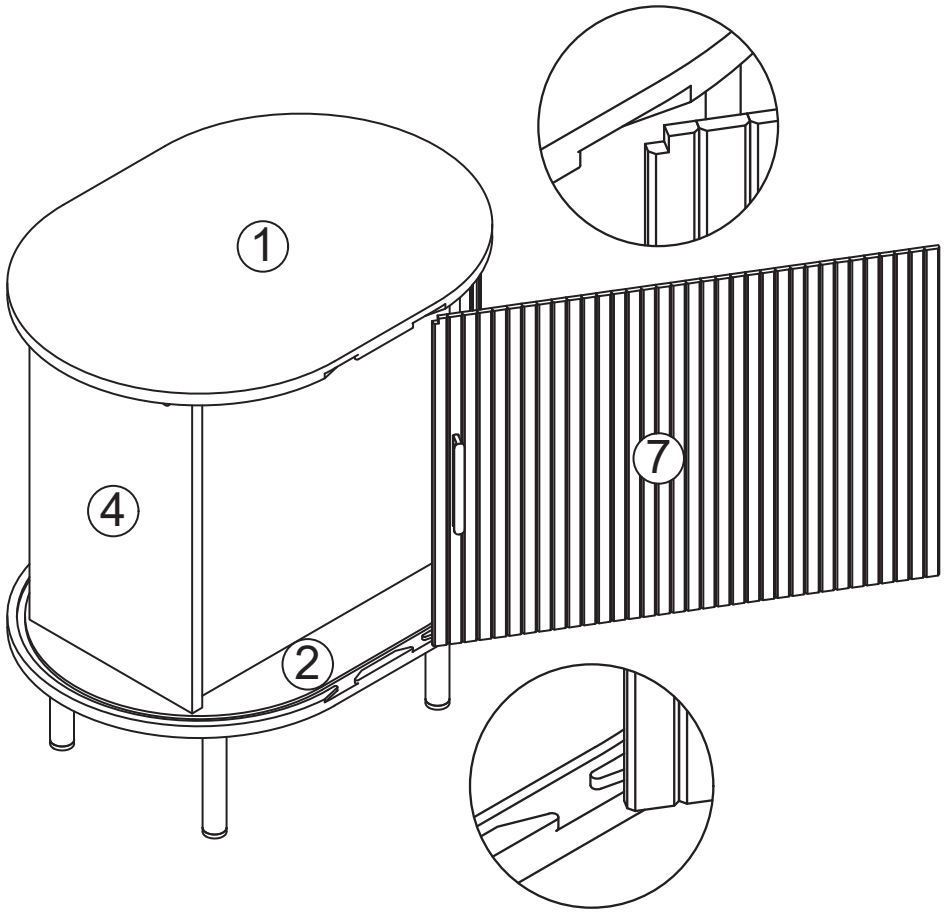

Insert Board (7) into the tracks of Boards (1)(2), then slide it from right to left.


9

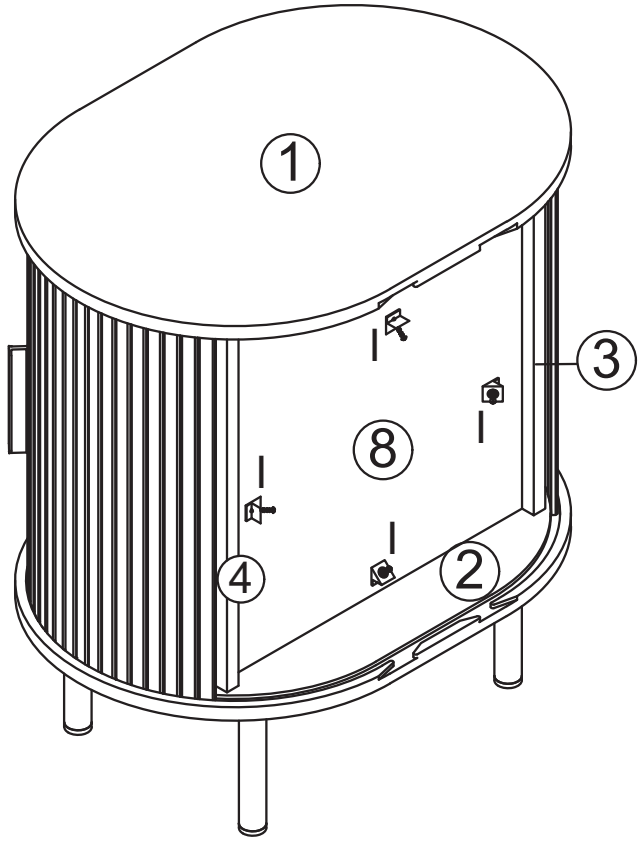

I × 4	M × 1
	

Insert Fastener (I) into the back of the cabinet, then twist Screws of Fastener (I) to secure.

10

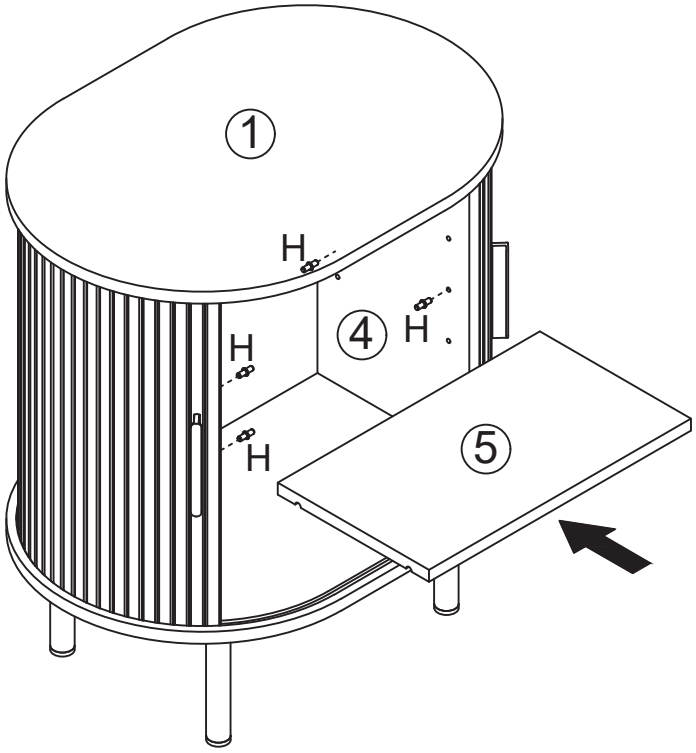

H × 4


Insert (H) into the holes in Boards (3) (4). Place Board (5) on top of (H).