




# INSTRUCTION

**SRGWALSCKD**

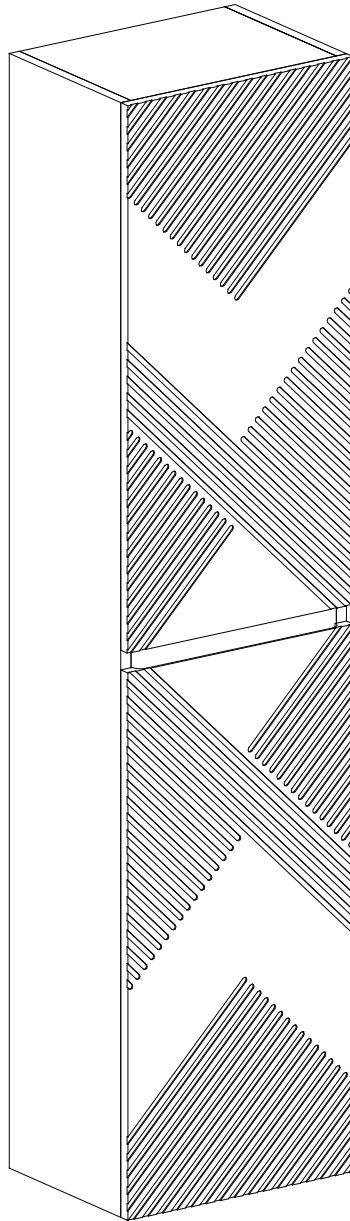


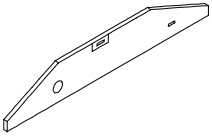


Spirit level





Tape measure  
(3m~5m)

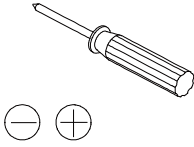

Screwdriver

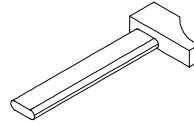

Hammer

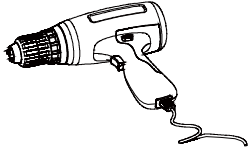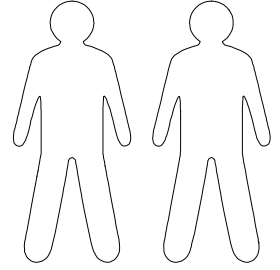


Electric drill




Drill bit  
(Ø8)



Pencil

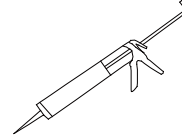


Silicone

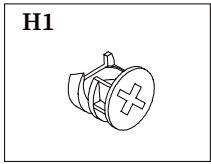


H1

16\*

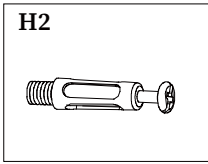


H2

16\*

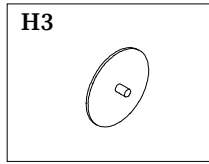


H3

16\*

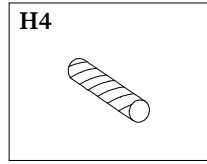


H4

28\*φ8\*30

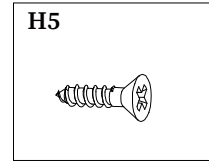


H5

36\*φ4\*16

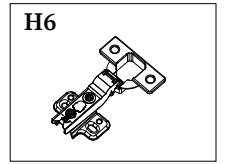


H6

4\*

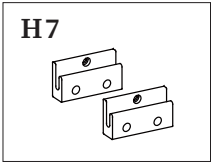


H7

2

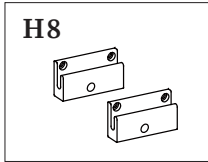


H8

1\*

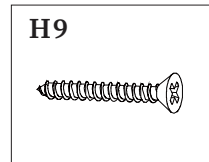



H9




6\*Ø4x50

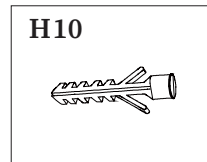





H10


6\*Ø8x40

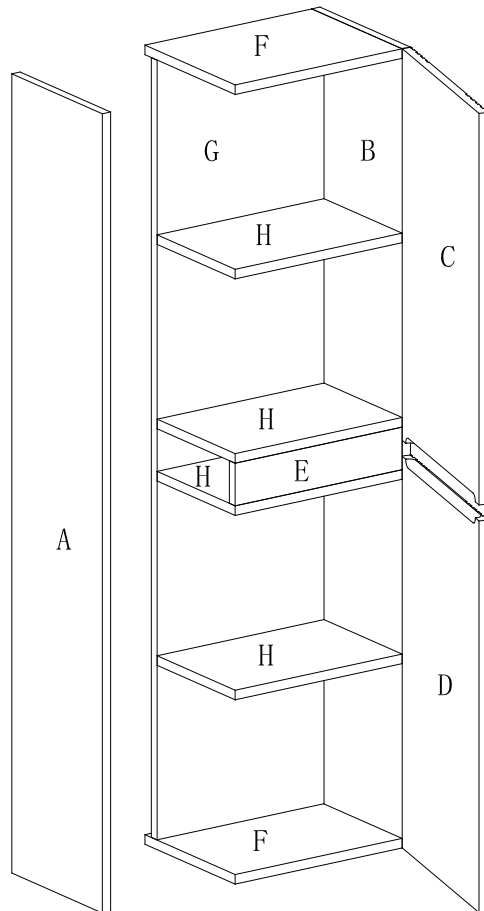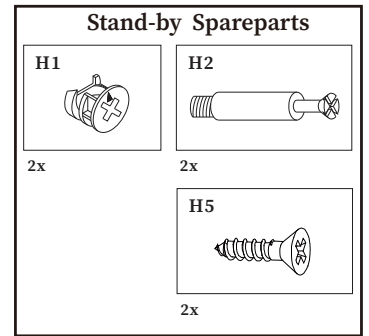

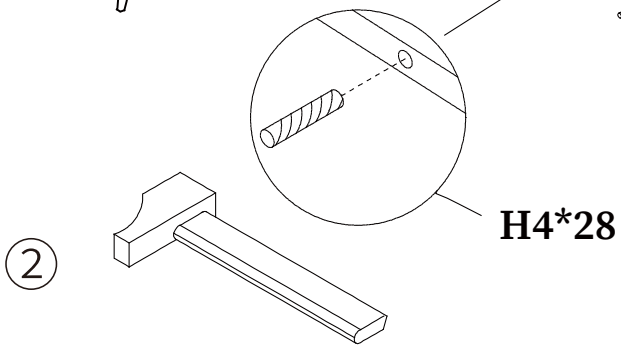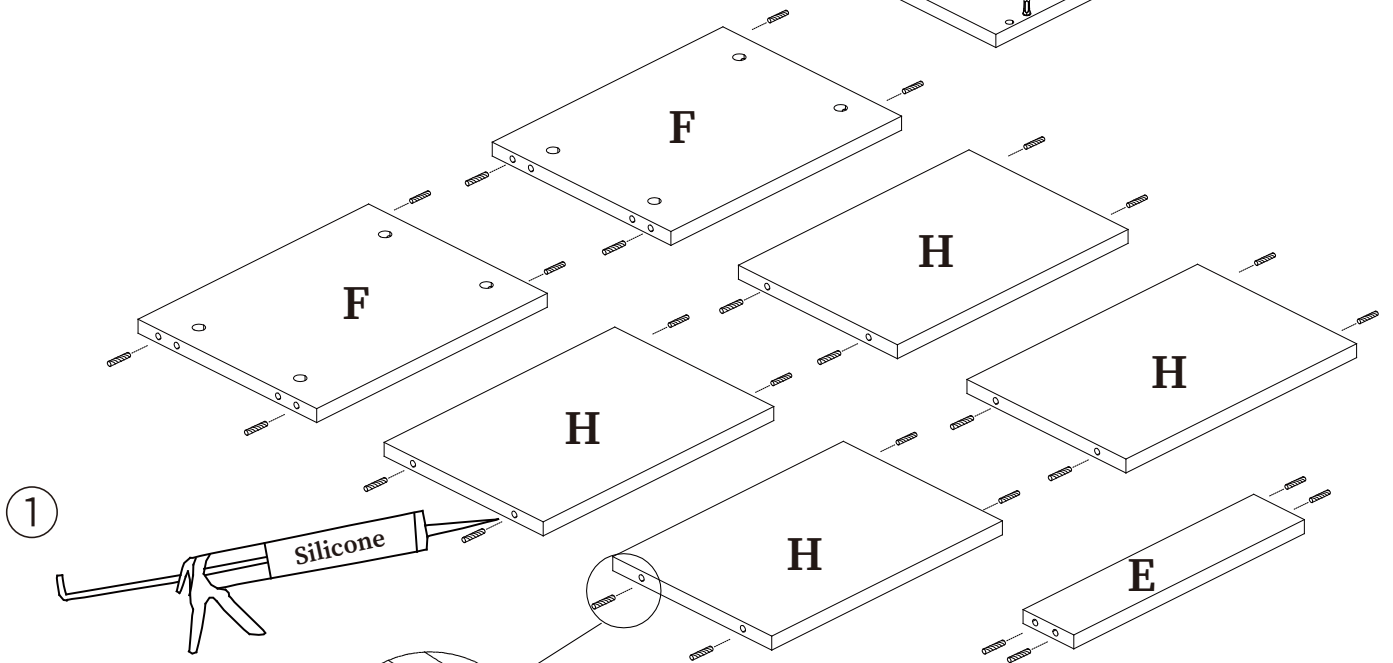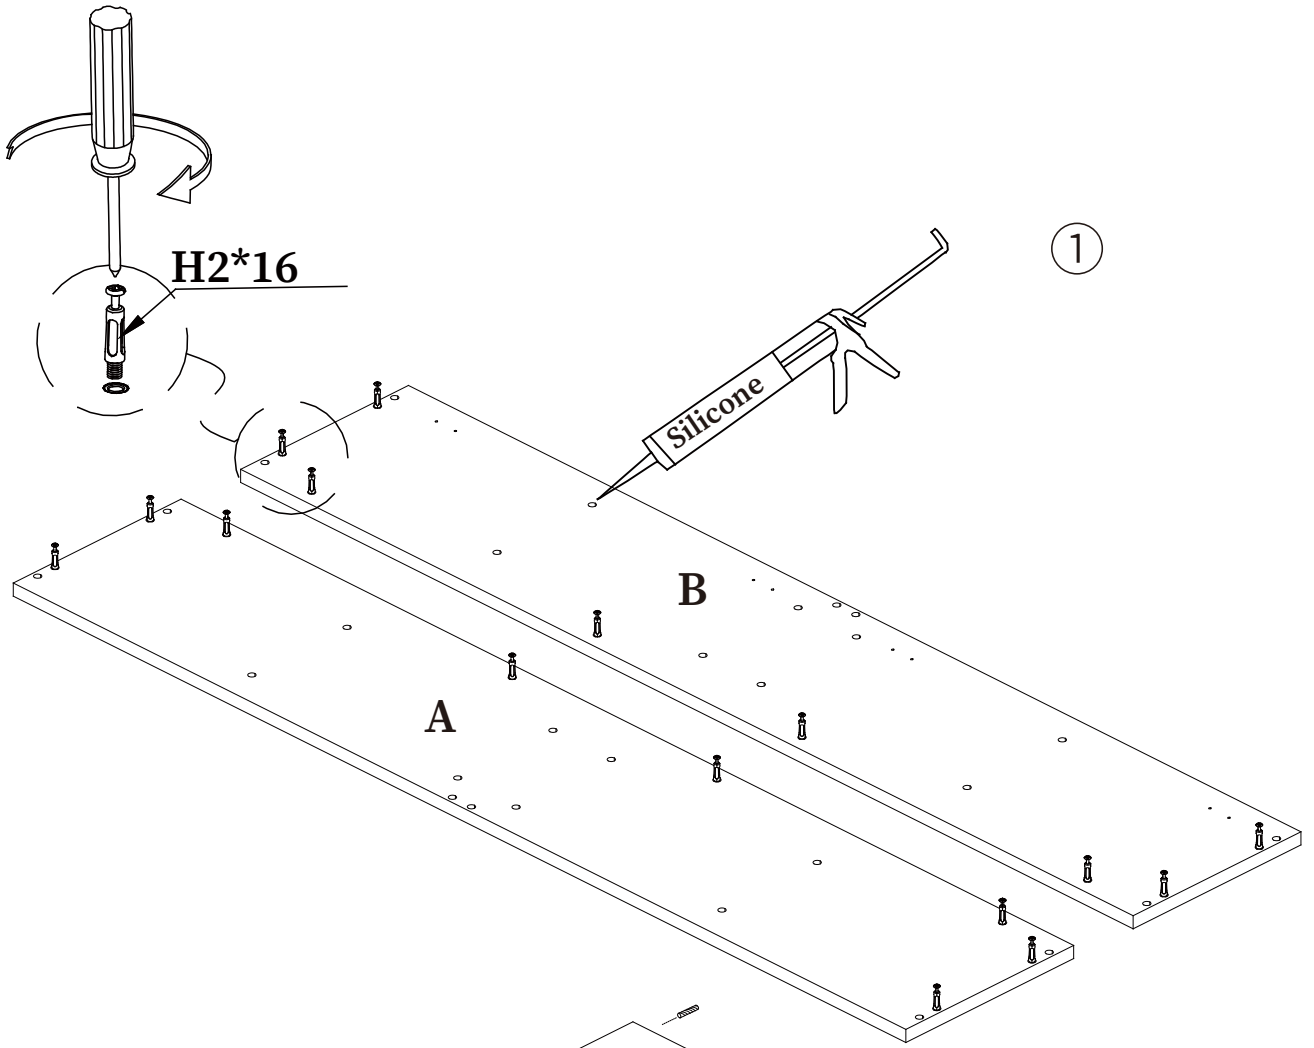

2

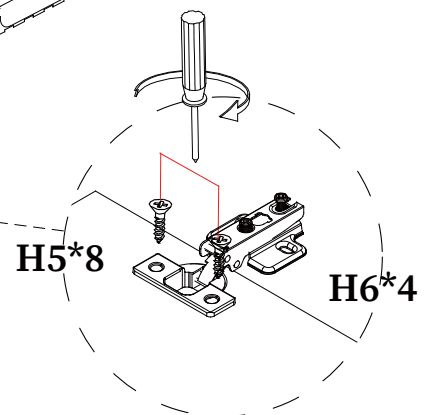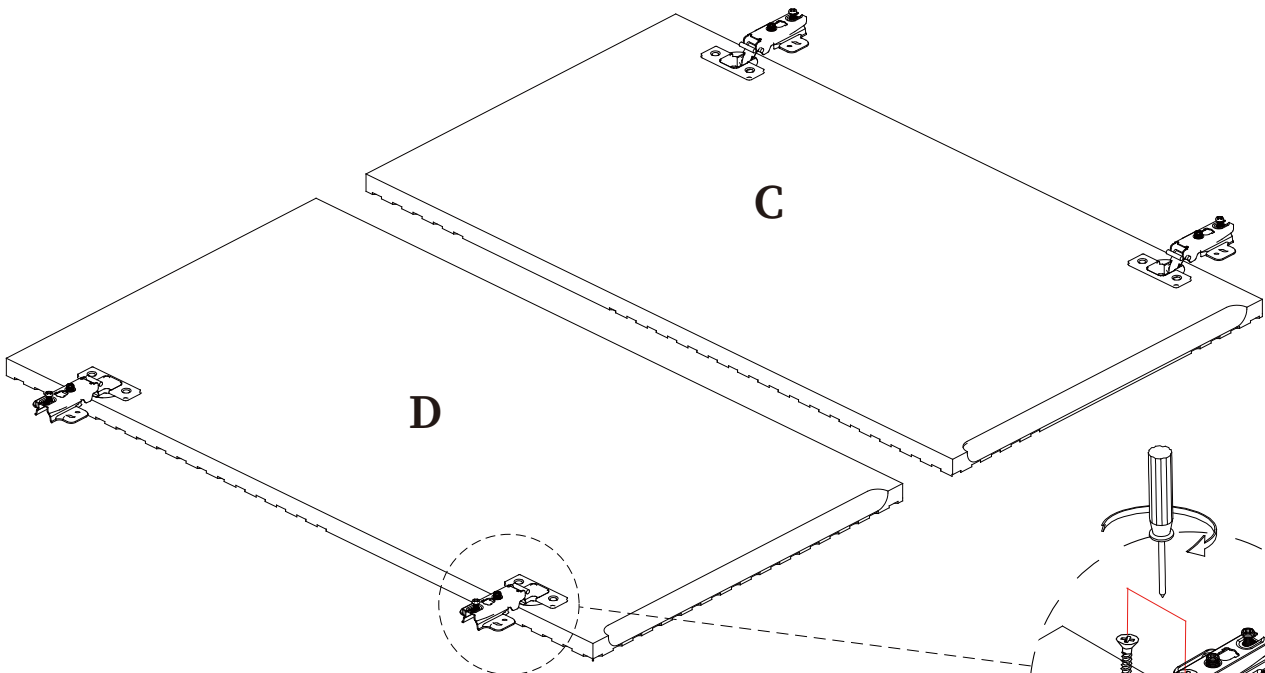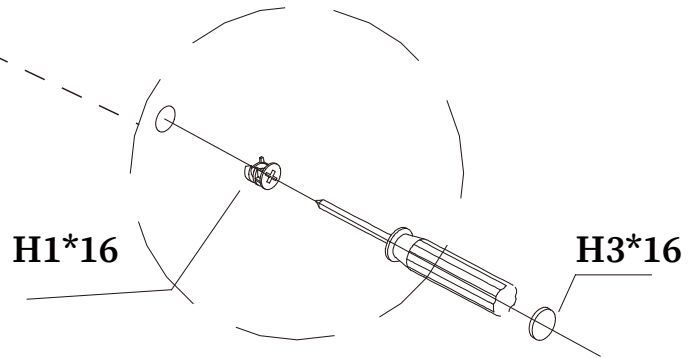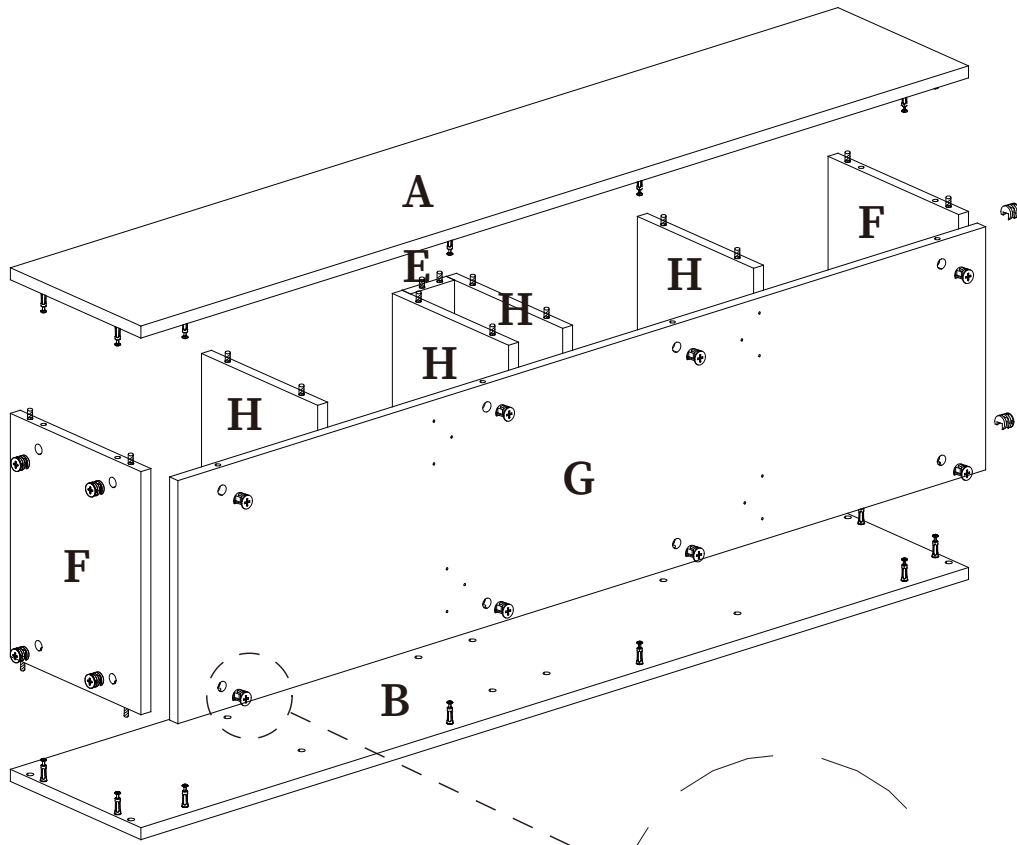

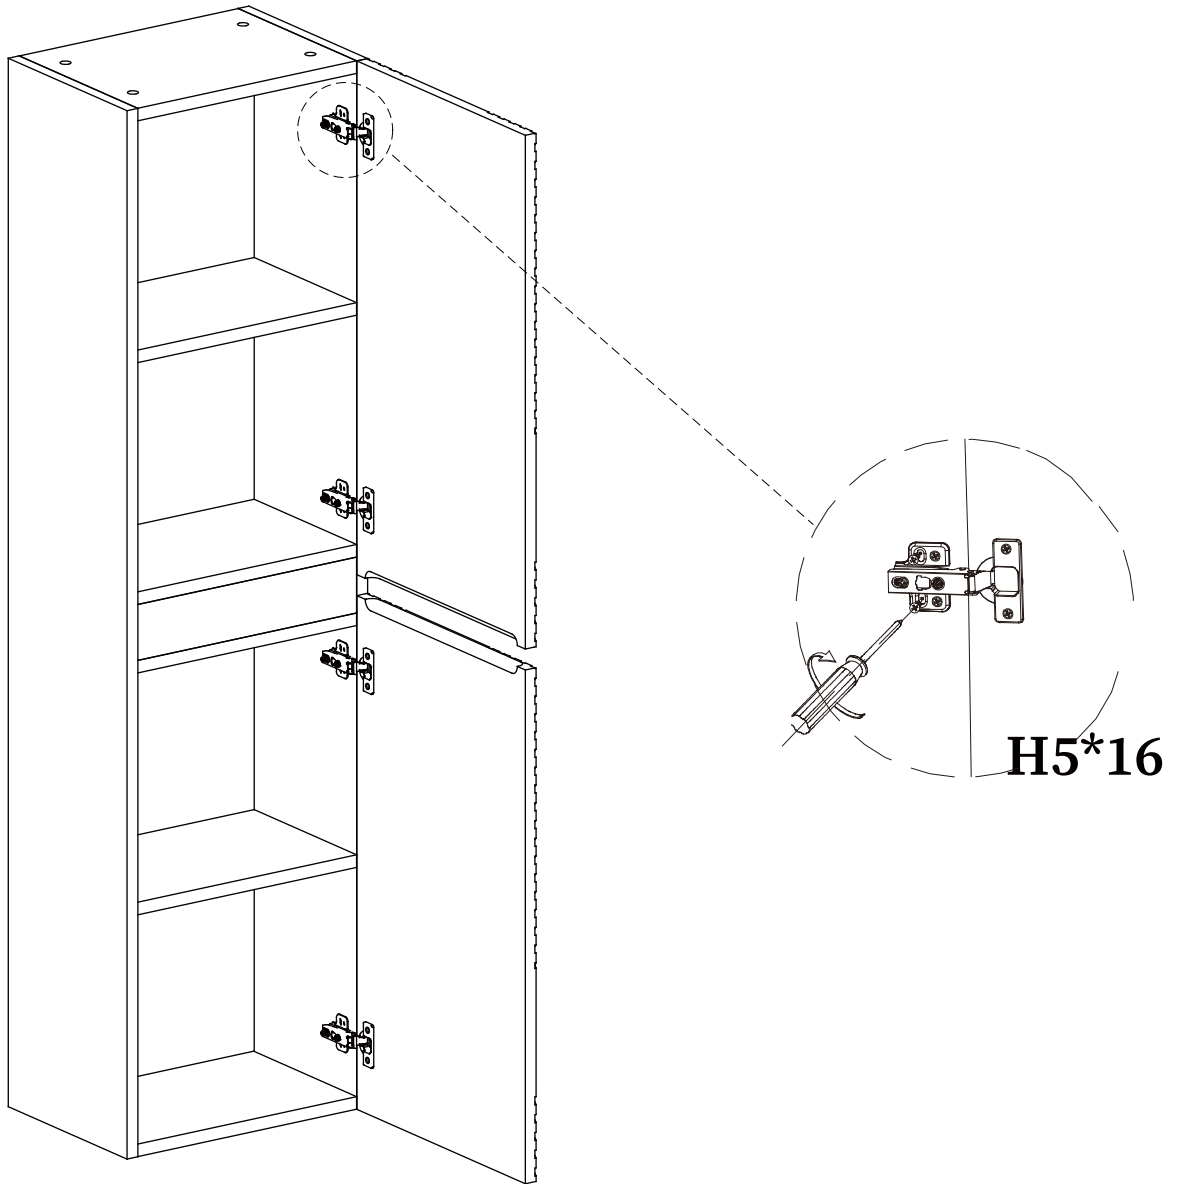

**DOOR ADJUSTMENT**

