




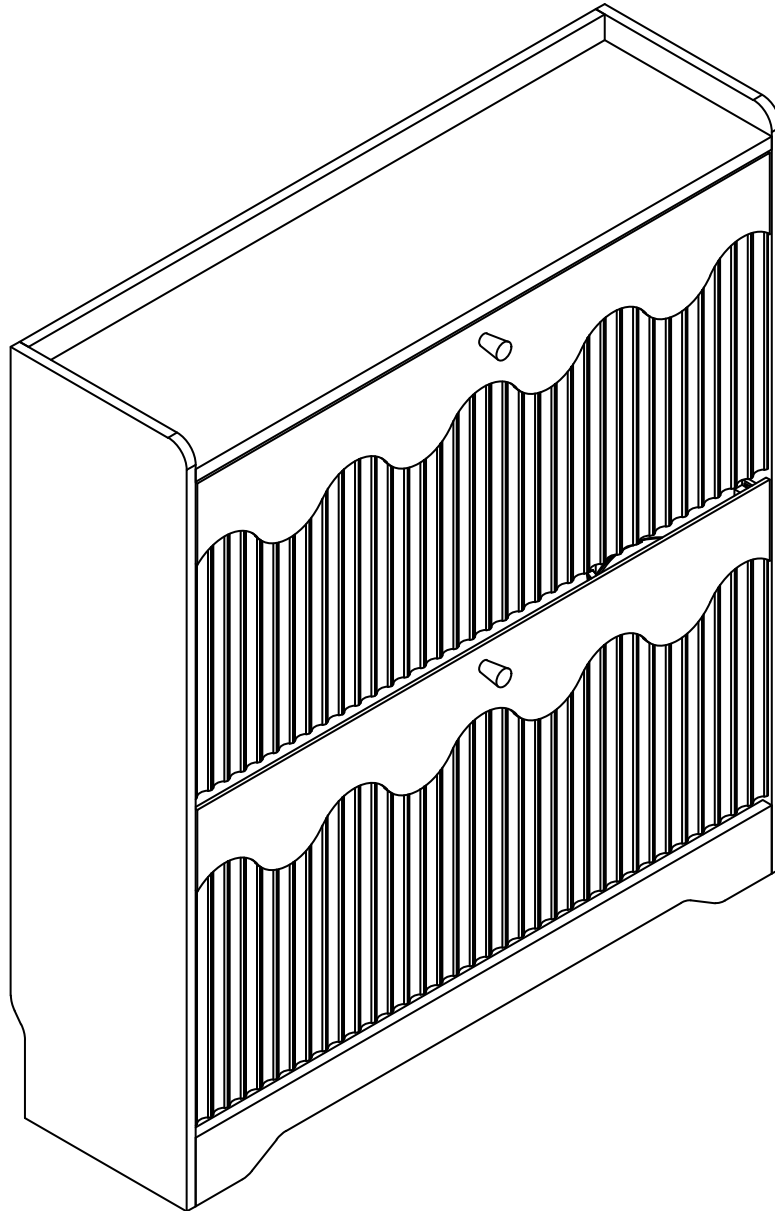


**Please note: Items cannot be returned once assembled.**


## Installation & Assembly




**IT IS RECOMMENDED  
TO USE POWER TOOLS**

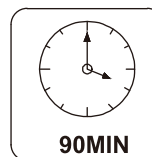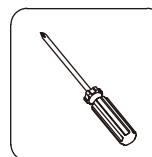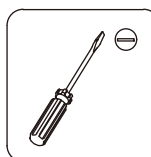


**90MIN**

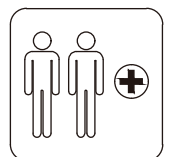


**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

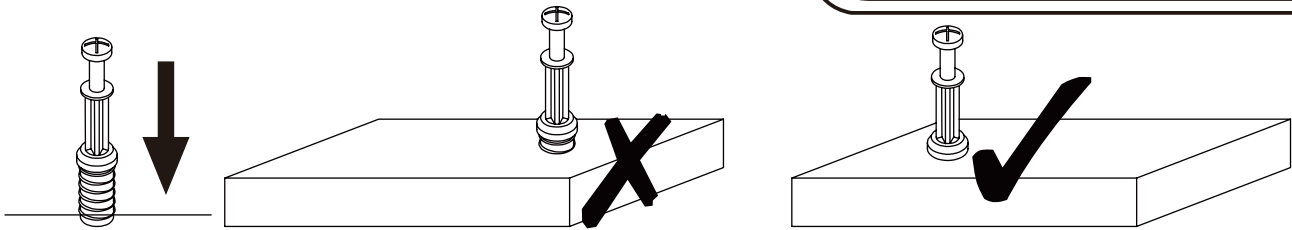


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

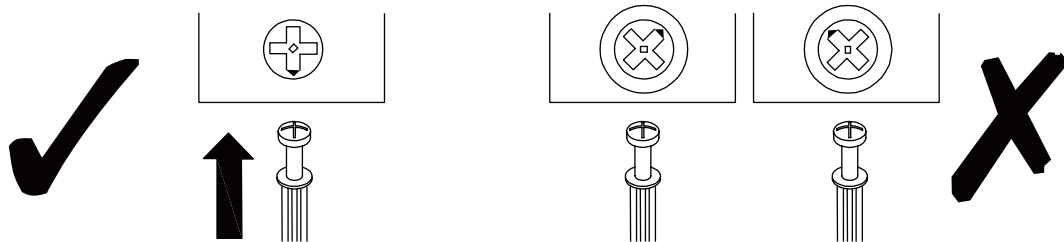










**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


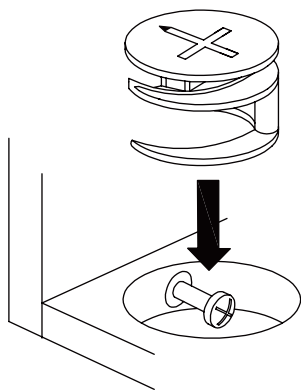






**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.

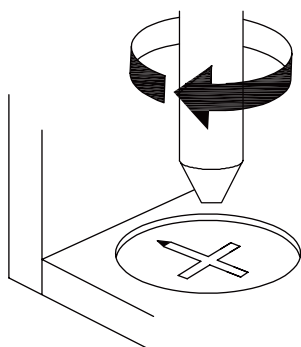

**EN\_Turn** cam lock clockwise to tighten.

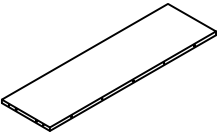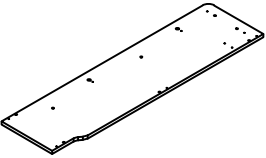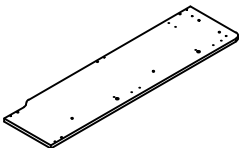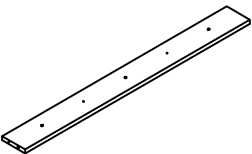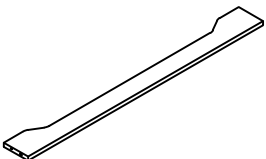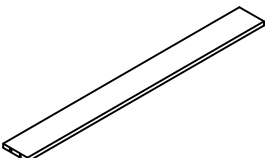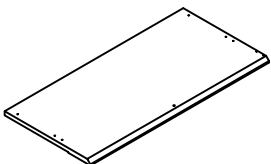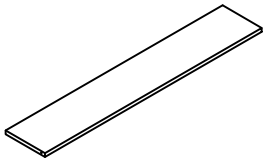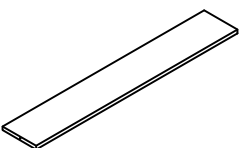
| NO. | PARTS                                                                                               | QTY | SPARE |
|-----|-----------------------------------------------------------------------------------------------------|-----|-------|
| ①   |                    | x1  |       |
| ②   |                    | x1  |       |
| ③   |                    | x1  |       |
| ④   |                    | x1  |       |
| ⑤   |                  | x1  |       |
| ⑥   |                  | x2  |       |
| ⑦   |                  | x2  |       |
| ⑧   |                  | x4  |       |
| ⑨   |                  | x2  |       |
|     | <br>Hardware Kit | x1  |       |



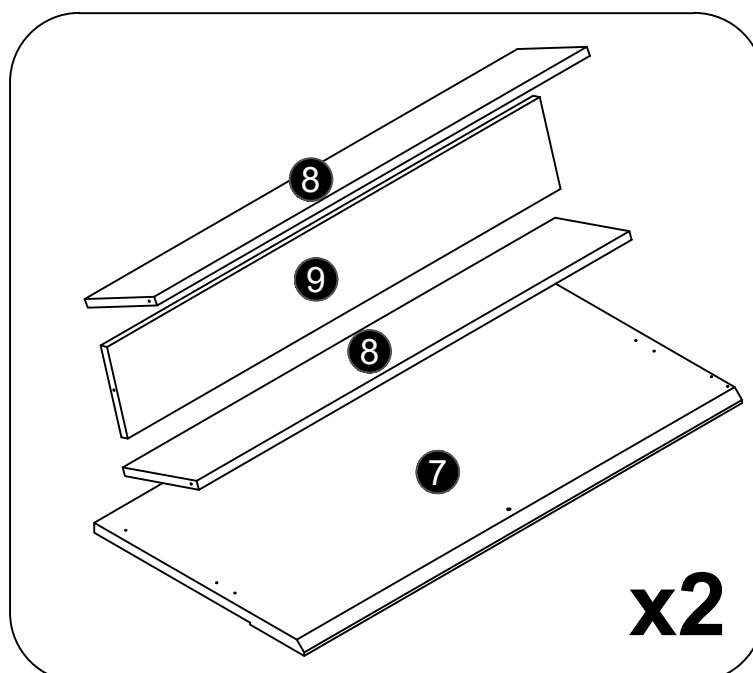
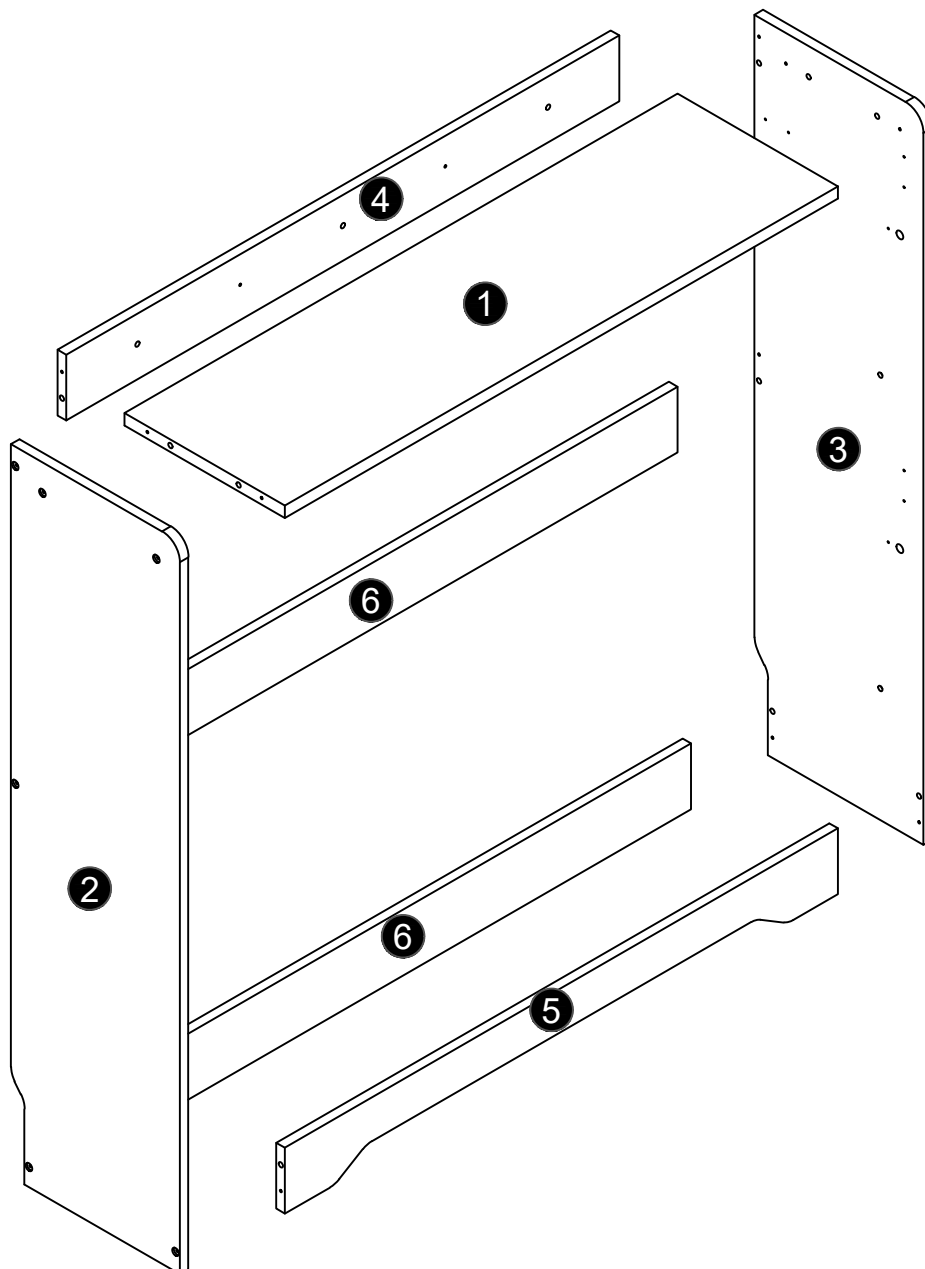


|                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                           |                                                                                                                                                         |                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                               |                                                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <div><div>A x2</div><div></div><div>A-1</div></div> <div><div>A x2</div><div></div><div>A-2</div></div> | <div><div>B x2</div><div></div><div>B-1</div></div> <div><div>B x2</div><div></div><div>B-2</div></div> | <div><div>C x15</div><div></div><div>Ø6x30mm<br/>+1(spare)</div></div> | <div><div>D x16</div><div></div><div>Ø4x35mm<br/>+1(spare)</div></div>                                                                                                                   | <div><div>E x28</div><div></div><div>Ø3.5x12mm<br/>+2(spare)</div></div>                                                                                                                   | <div><div>F x4</div><div></div><div>+1(spare)</div></div> |
| <div><div>G x4</div><div></div><div>+1(spare)</div></div>                                                                                                                                | <div><div>H x4</div><div></div><div>+1(spare)</div></div>                                                                                                                                | <div><div>I x1</div><div></div></div>                                  | <div><div>J x2</div><div></div><div>J-1</div></div> <div><div>J x2</div><div></div><div>J-2</div></div> | <div><div>K x2</div><div></div><div>K-1</div></div> <div><div>K x2</div><div></div><div>K-2</div></div> | <div><div>L x2</div><div></div></div>                     |
| <div><div>M x12</div><div></div><div>+2(spare)</div></div>                                                                                                                               | <div><div>N x2</div><div></div><div>Ø6x30mm</div></div>                                                                                                                                  |                                                                                                                                                         |                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                               | <div><div>R x2</div><div></div></div>                     |

|                                                                                           |                                                                                            |                                                                                          |                                                                                          |
|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| <br>B-1 | <br>B-2 | <br>E | <br>F |
|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|

01



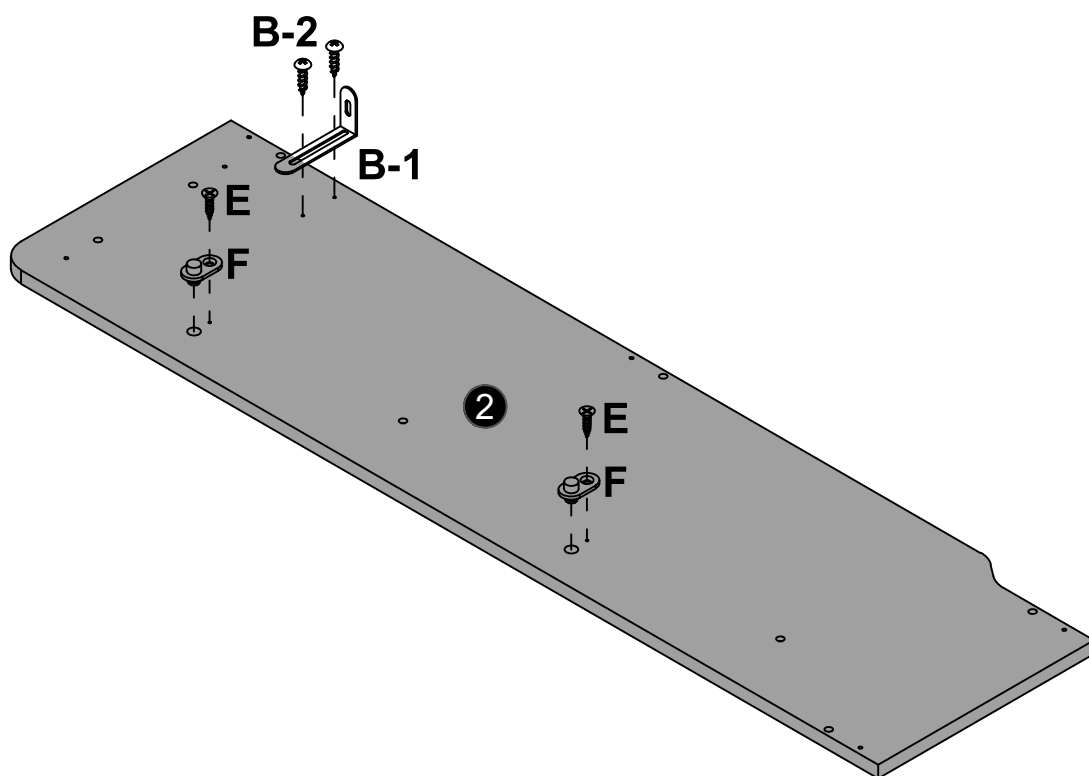


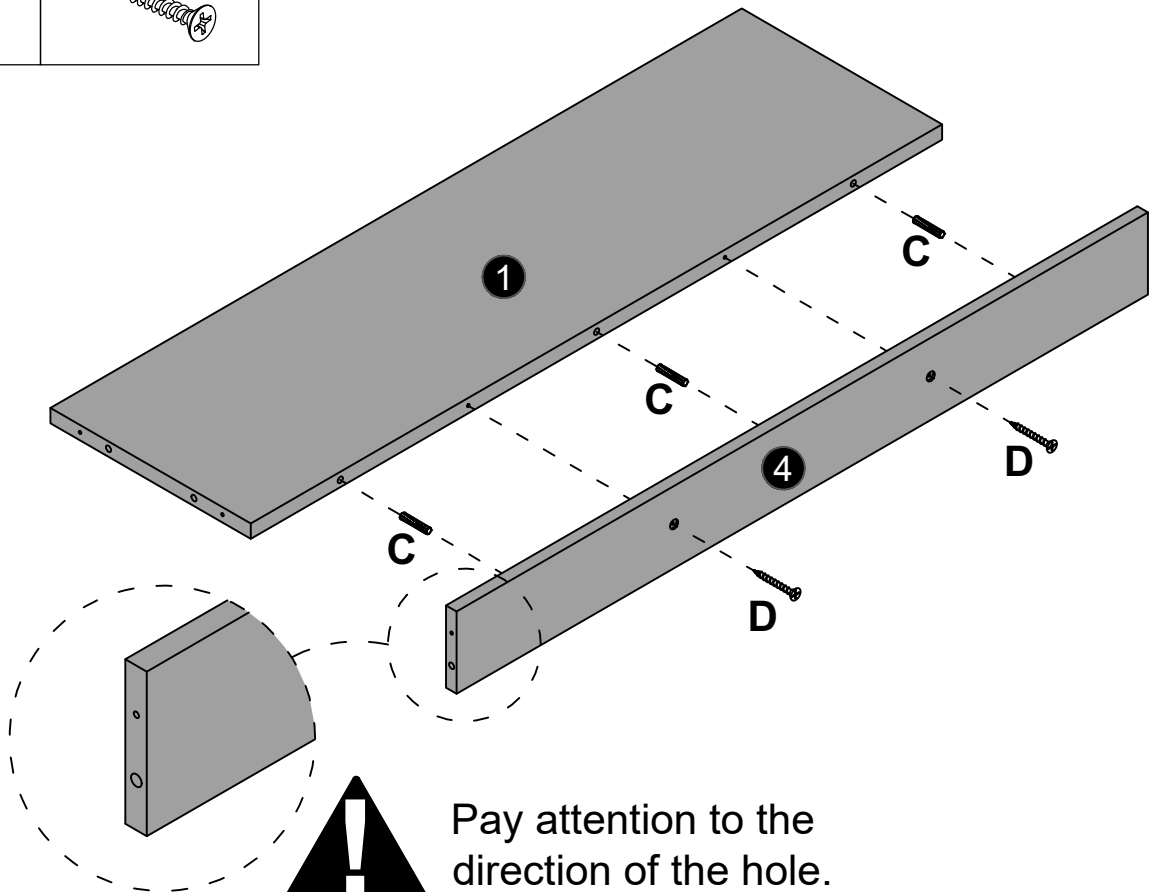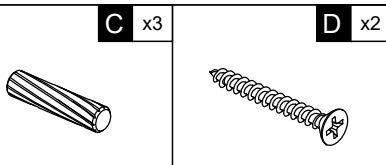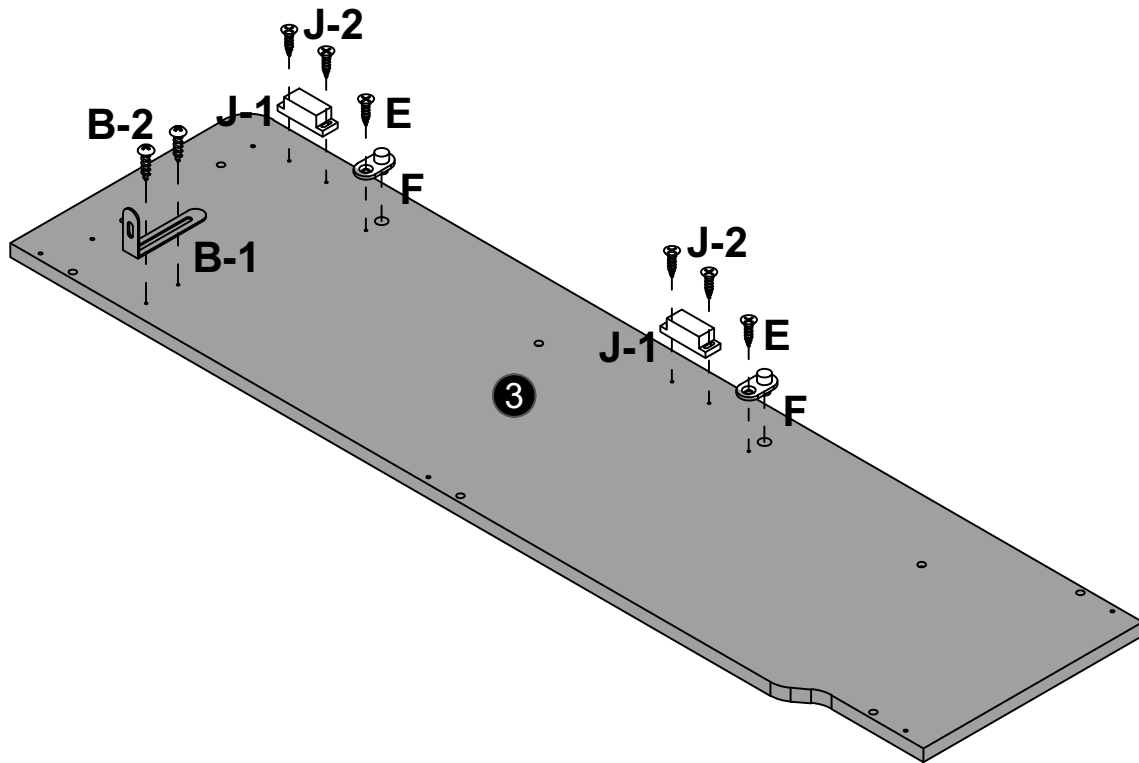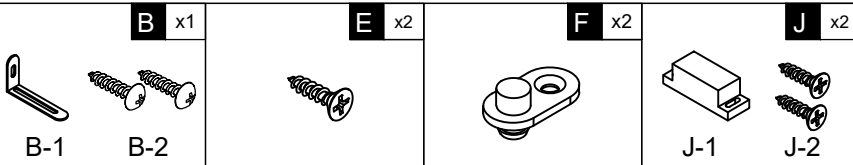

04

C x6



D x6

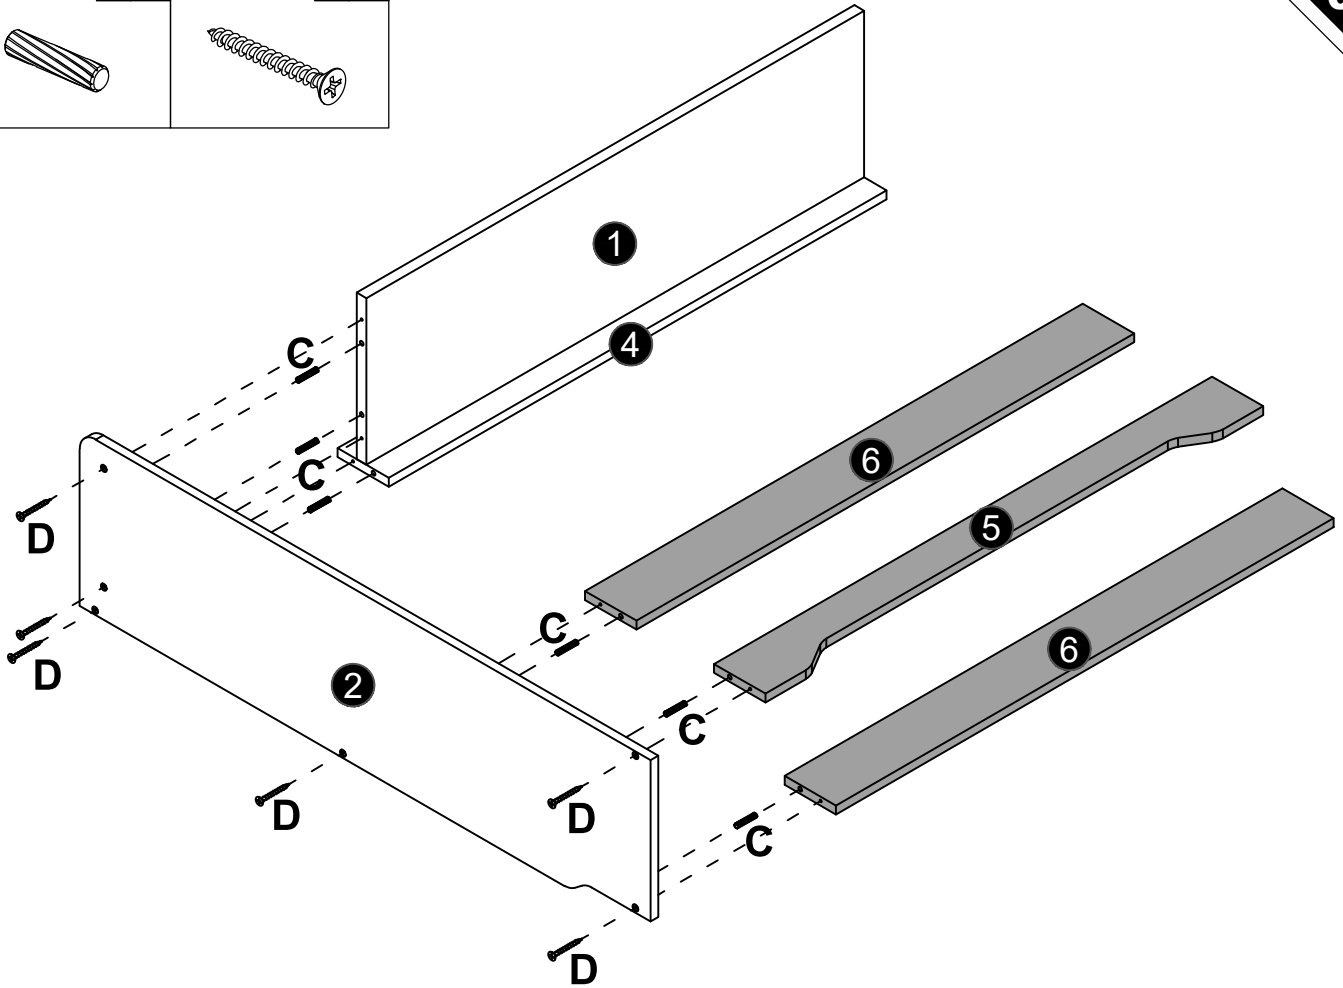


05

C x6


D x6

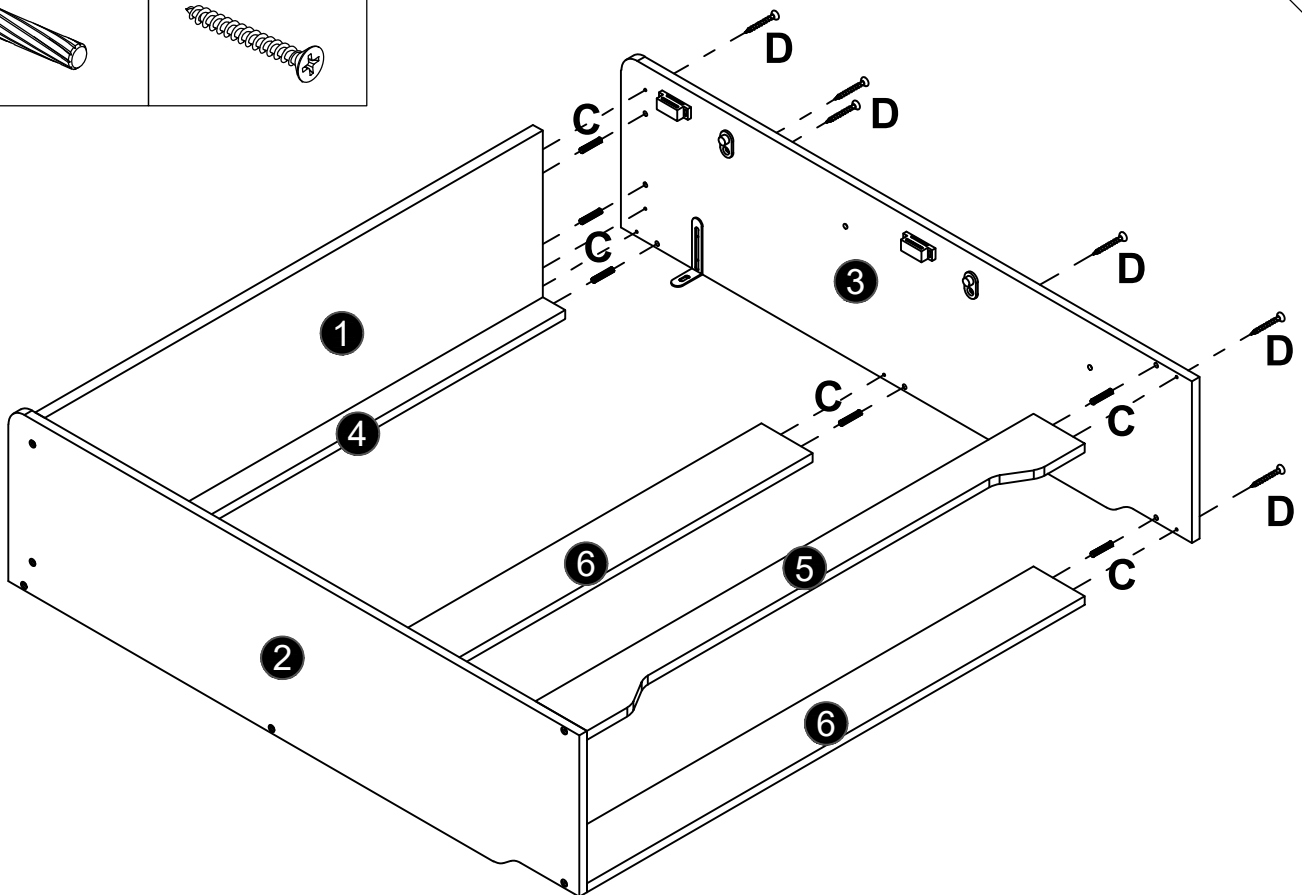


D x2



N x2

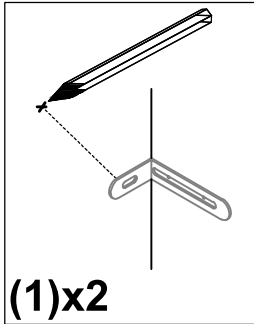


First fix the anti-rewind screw in the reserved hole of the product.

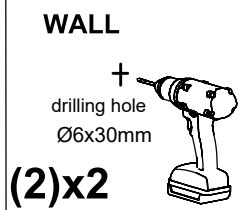


Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

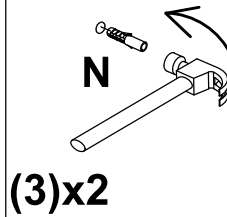





Then, put the expansion bolt into the hole

WALL

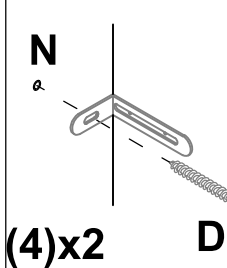


Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

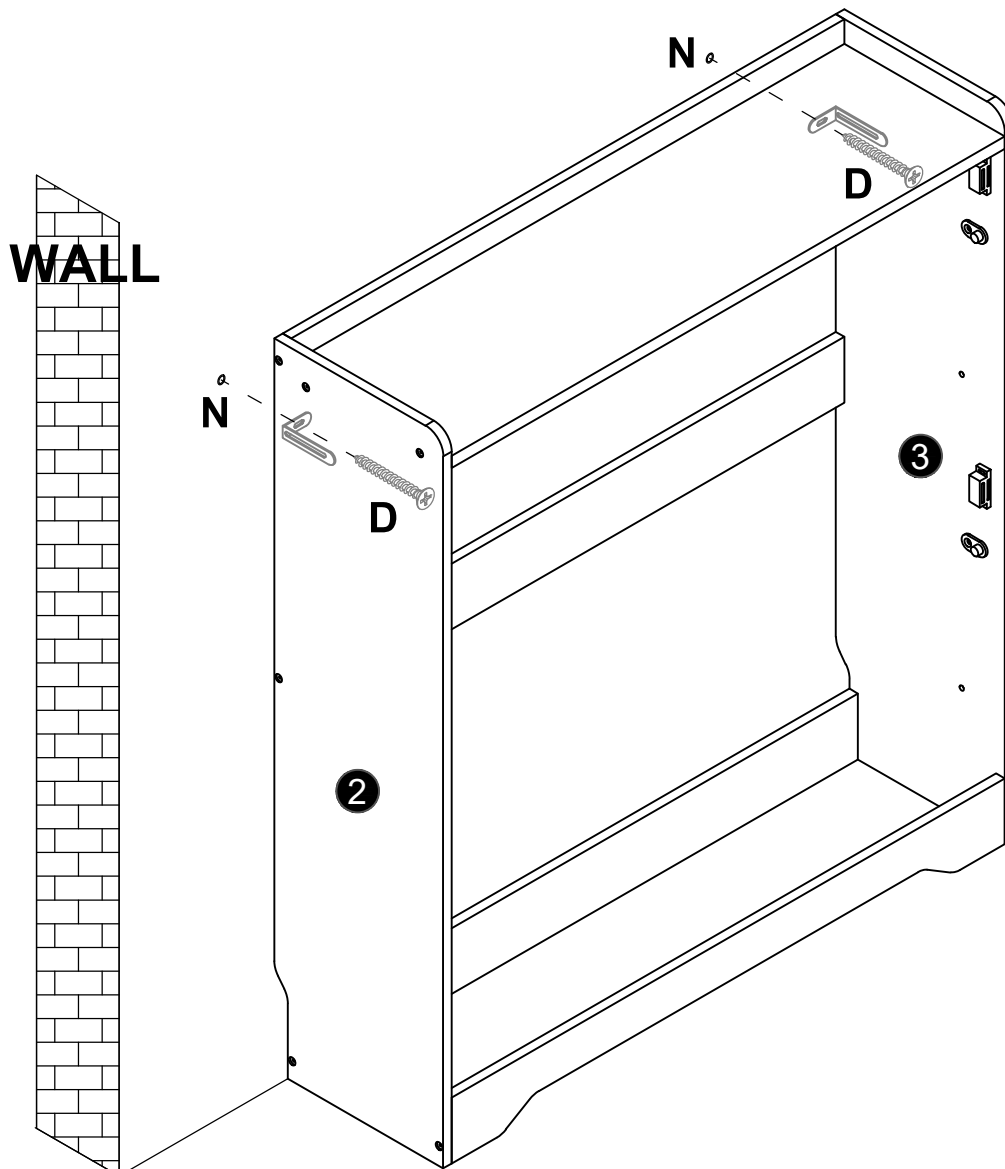

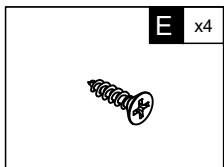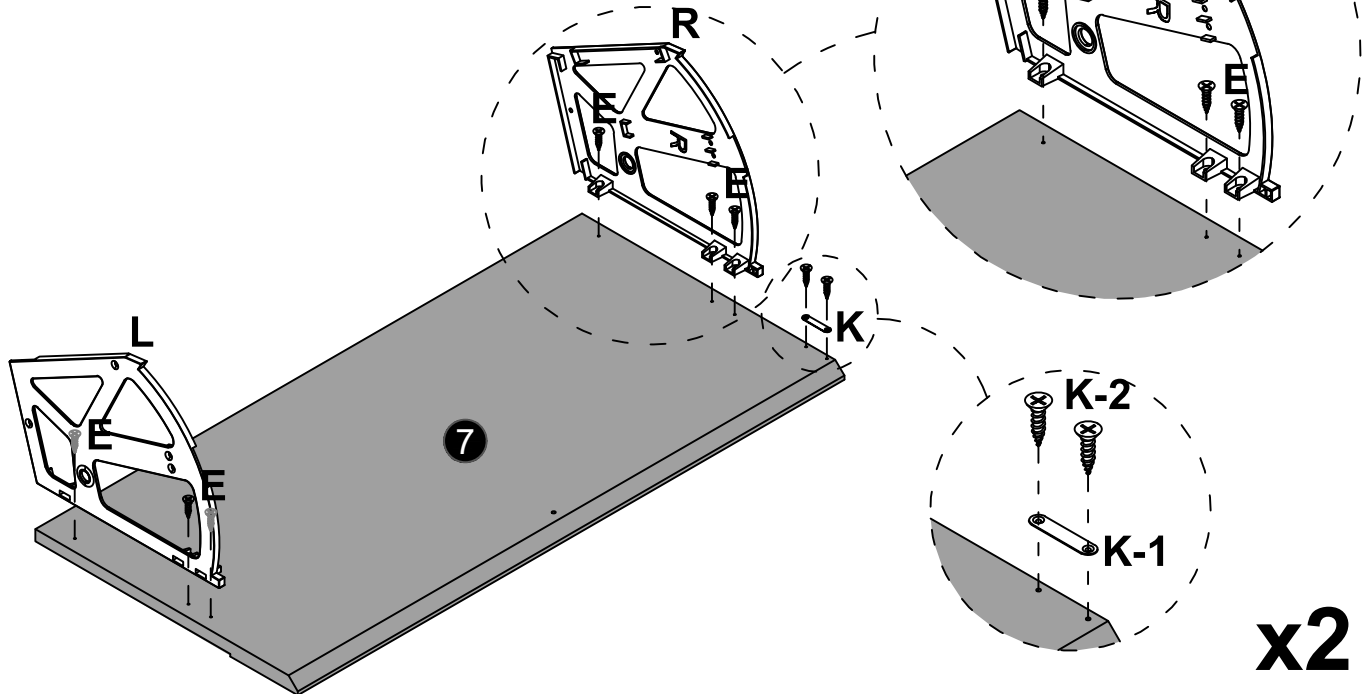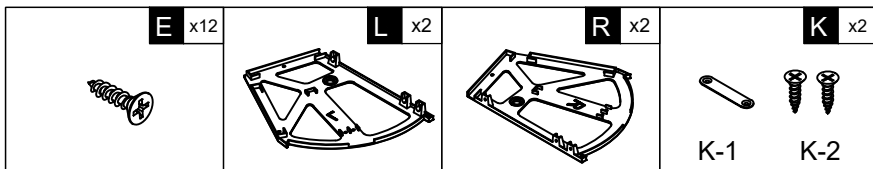


Please push the shoe racks L and R slightly with your hands. As shown in the figure, facing towards both sides, Place the 9th back panel into the back panel slot As shown in the figure.

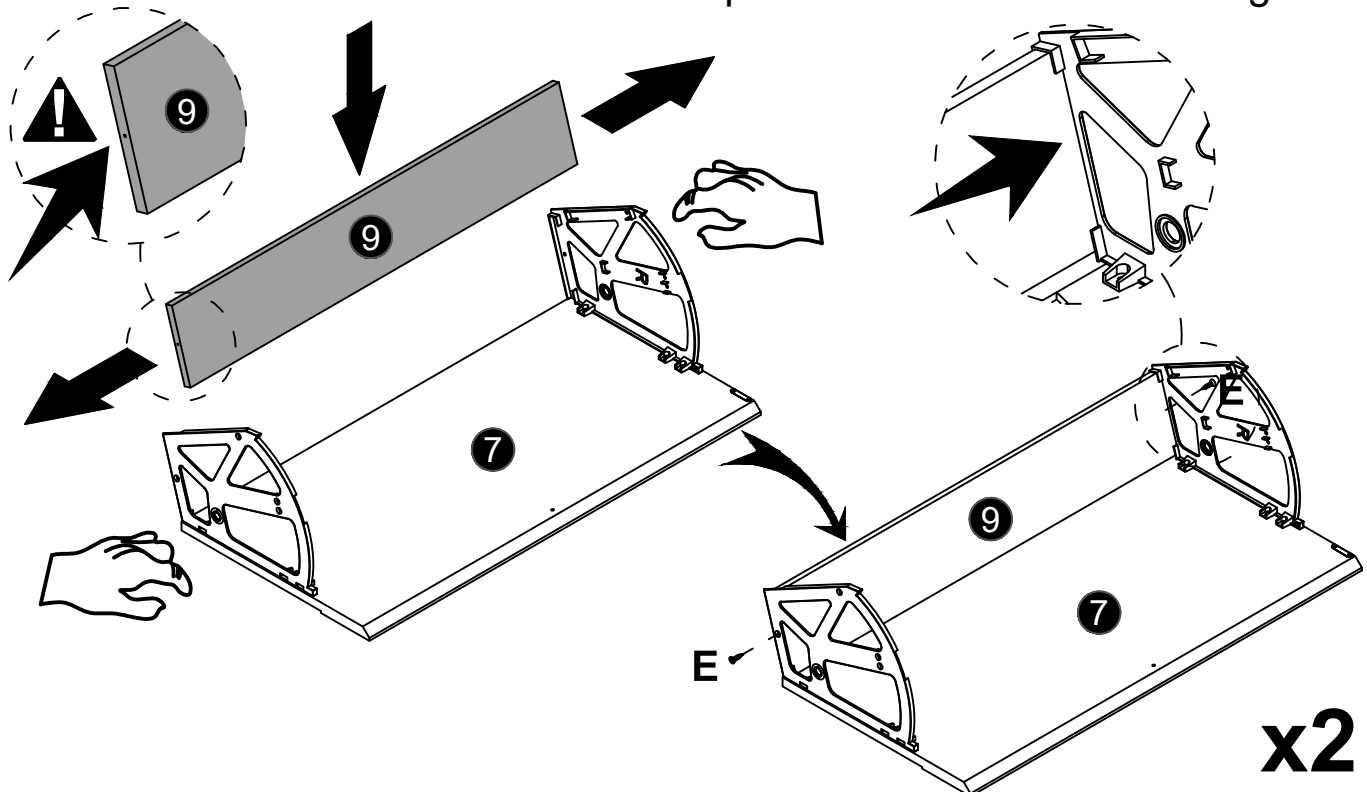

E x4

09

Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 8th back panel into the back panel slot As shown in the figure.

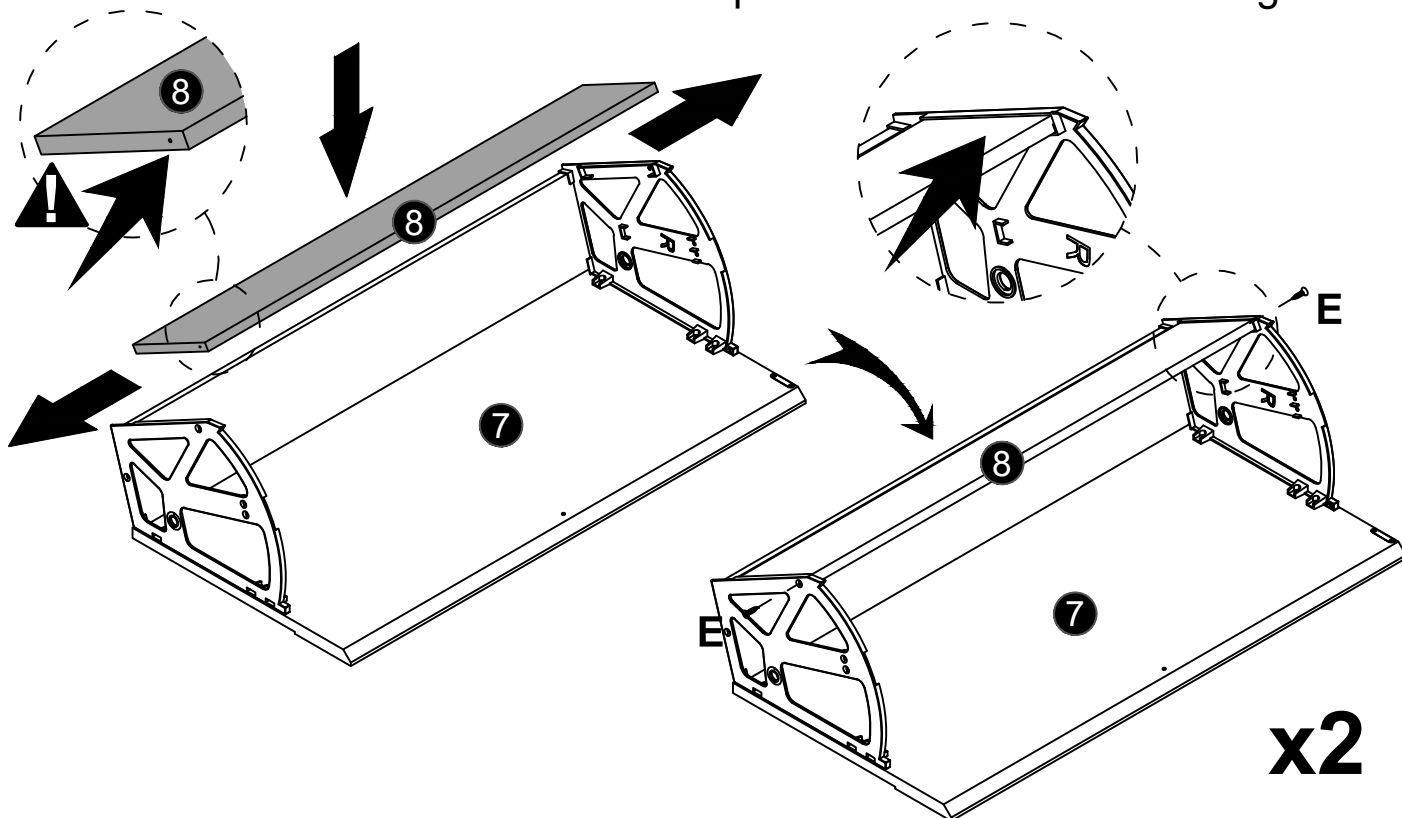

A x2


10



A-1



A-2

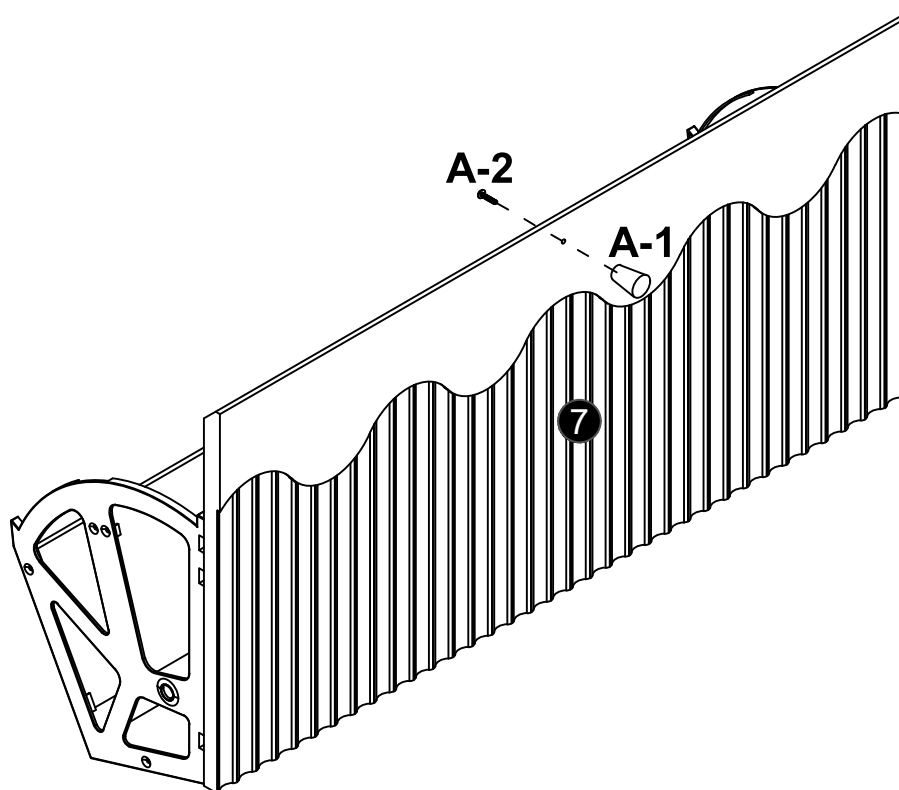


x2




G x4




H x4




I x1

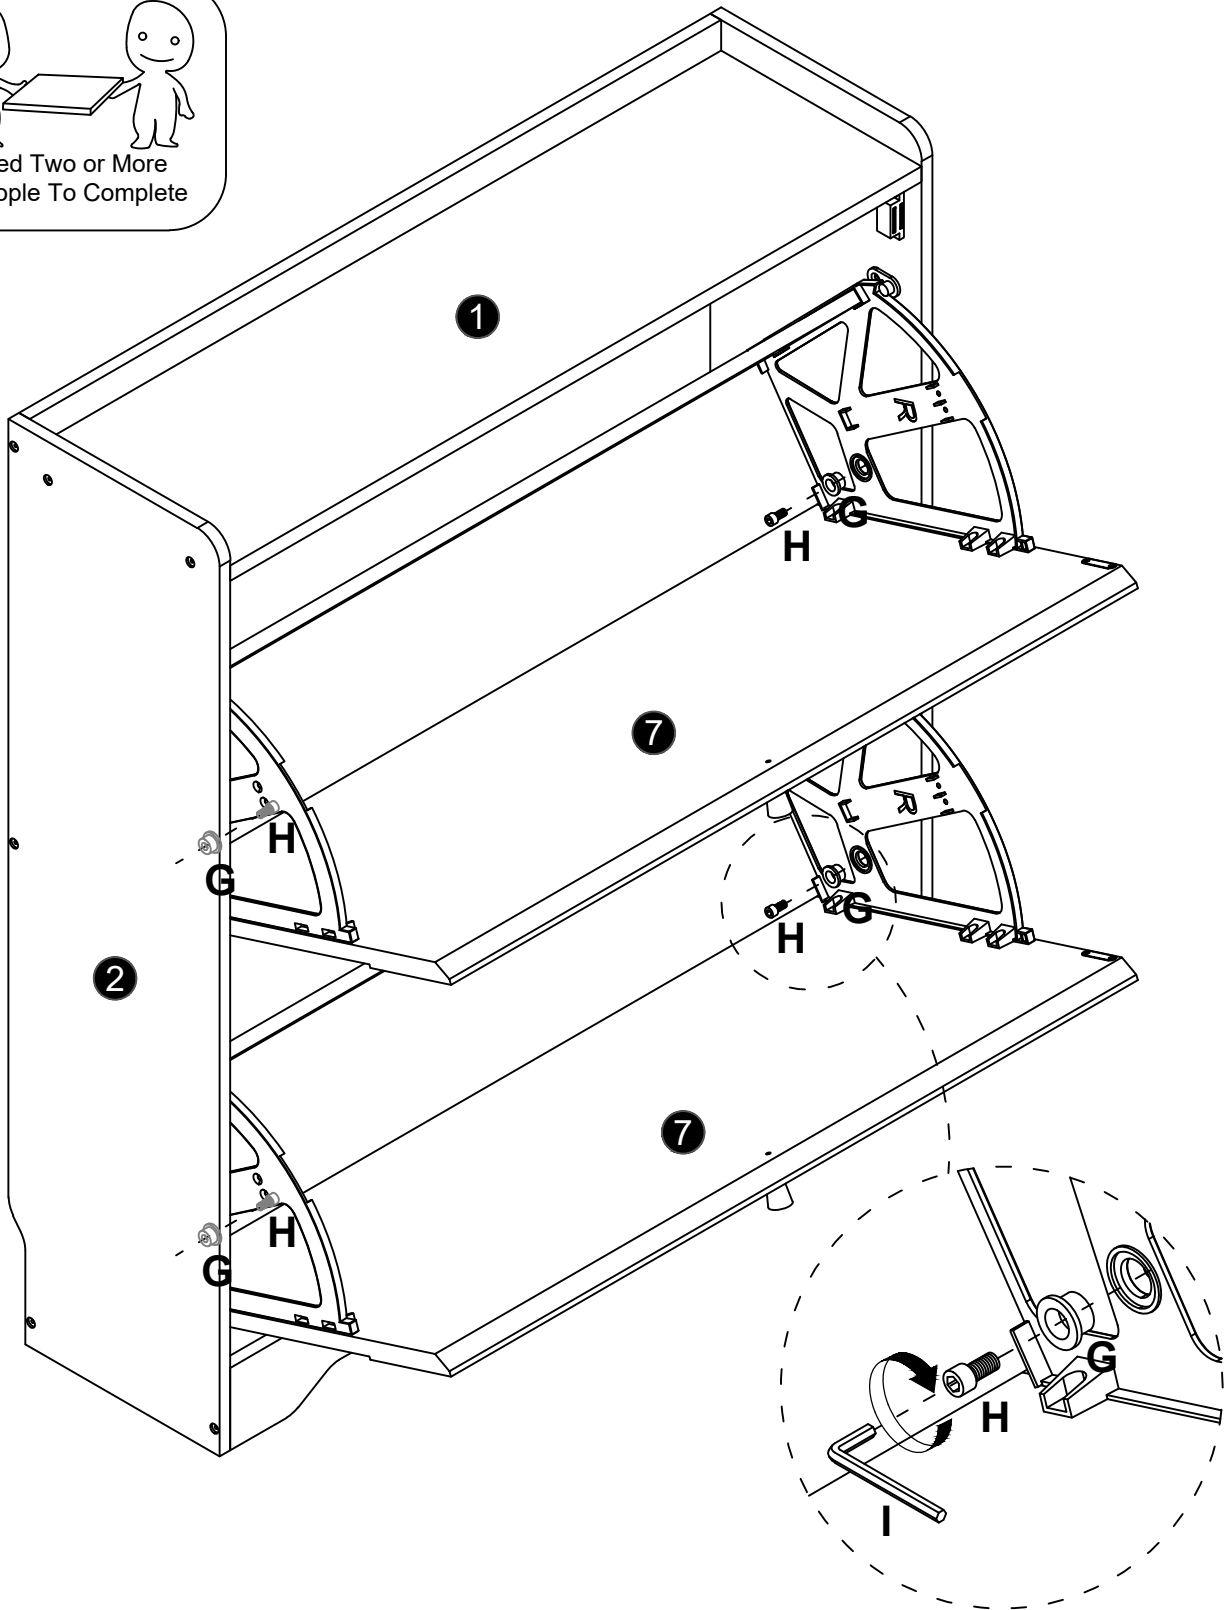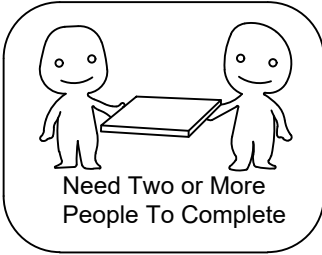


Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

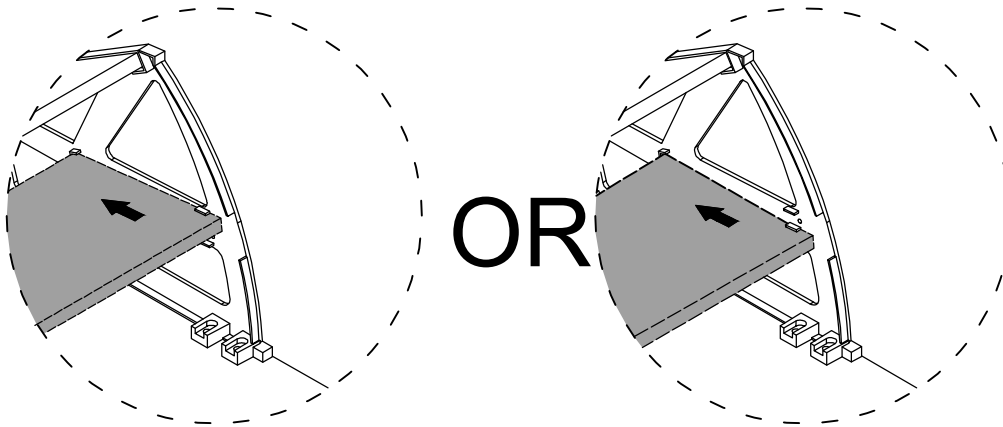

Adjustments can be made  
according to your own needs.

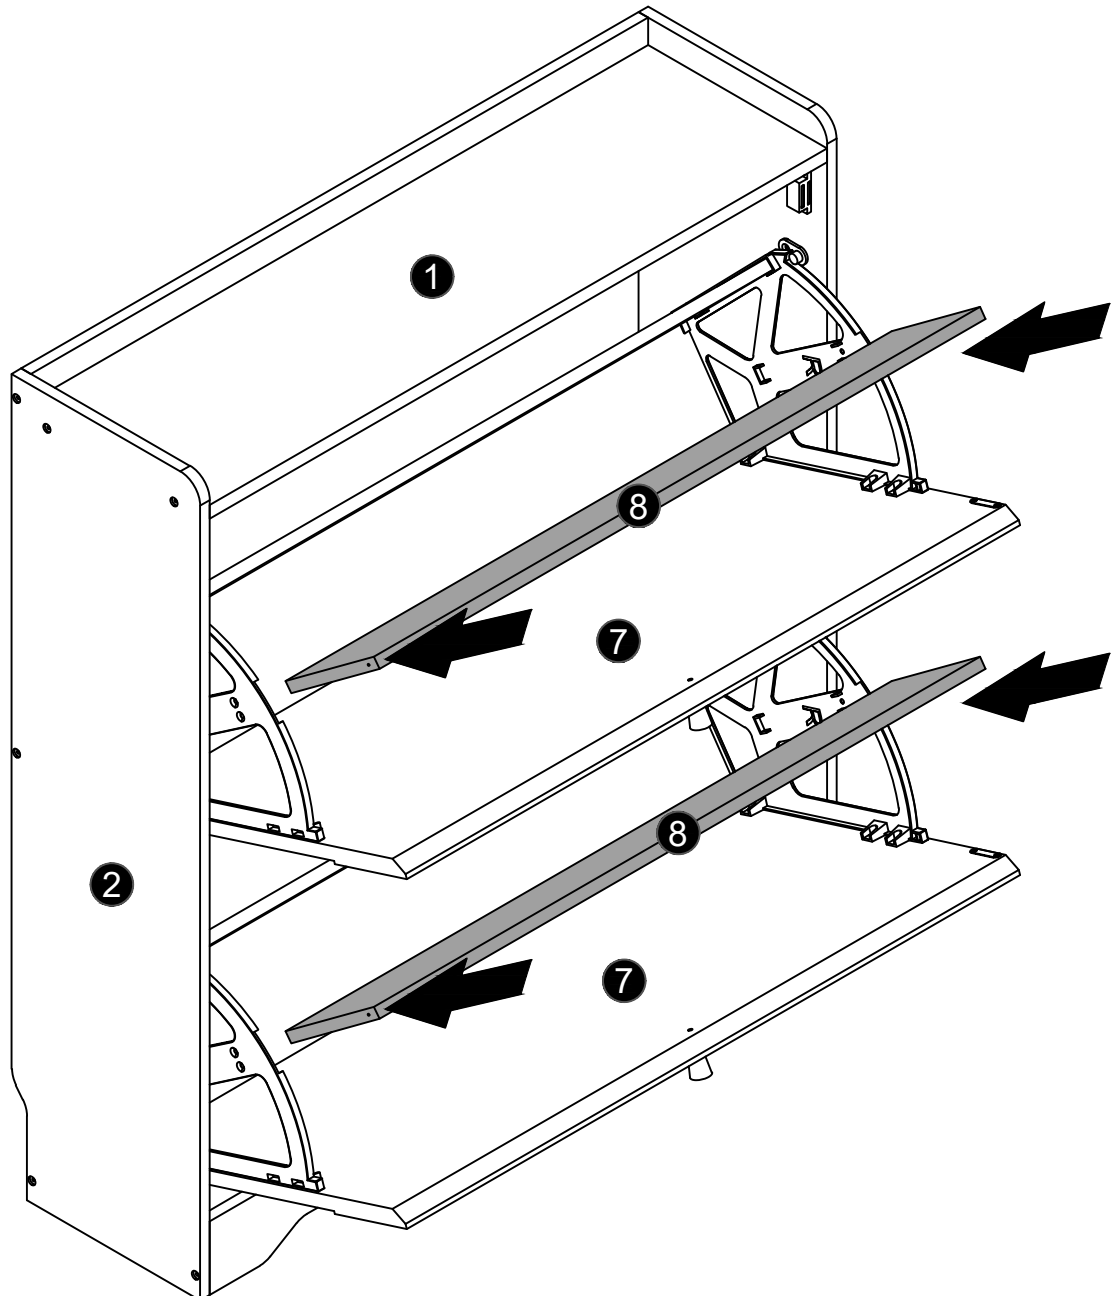

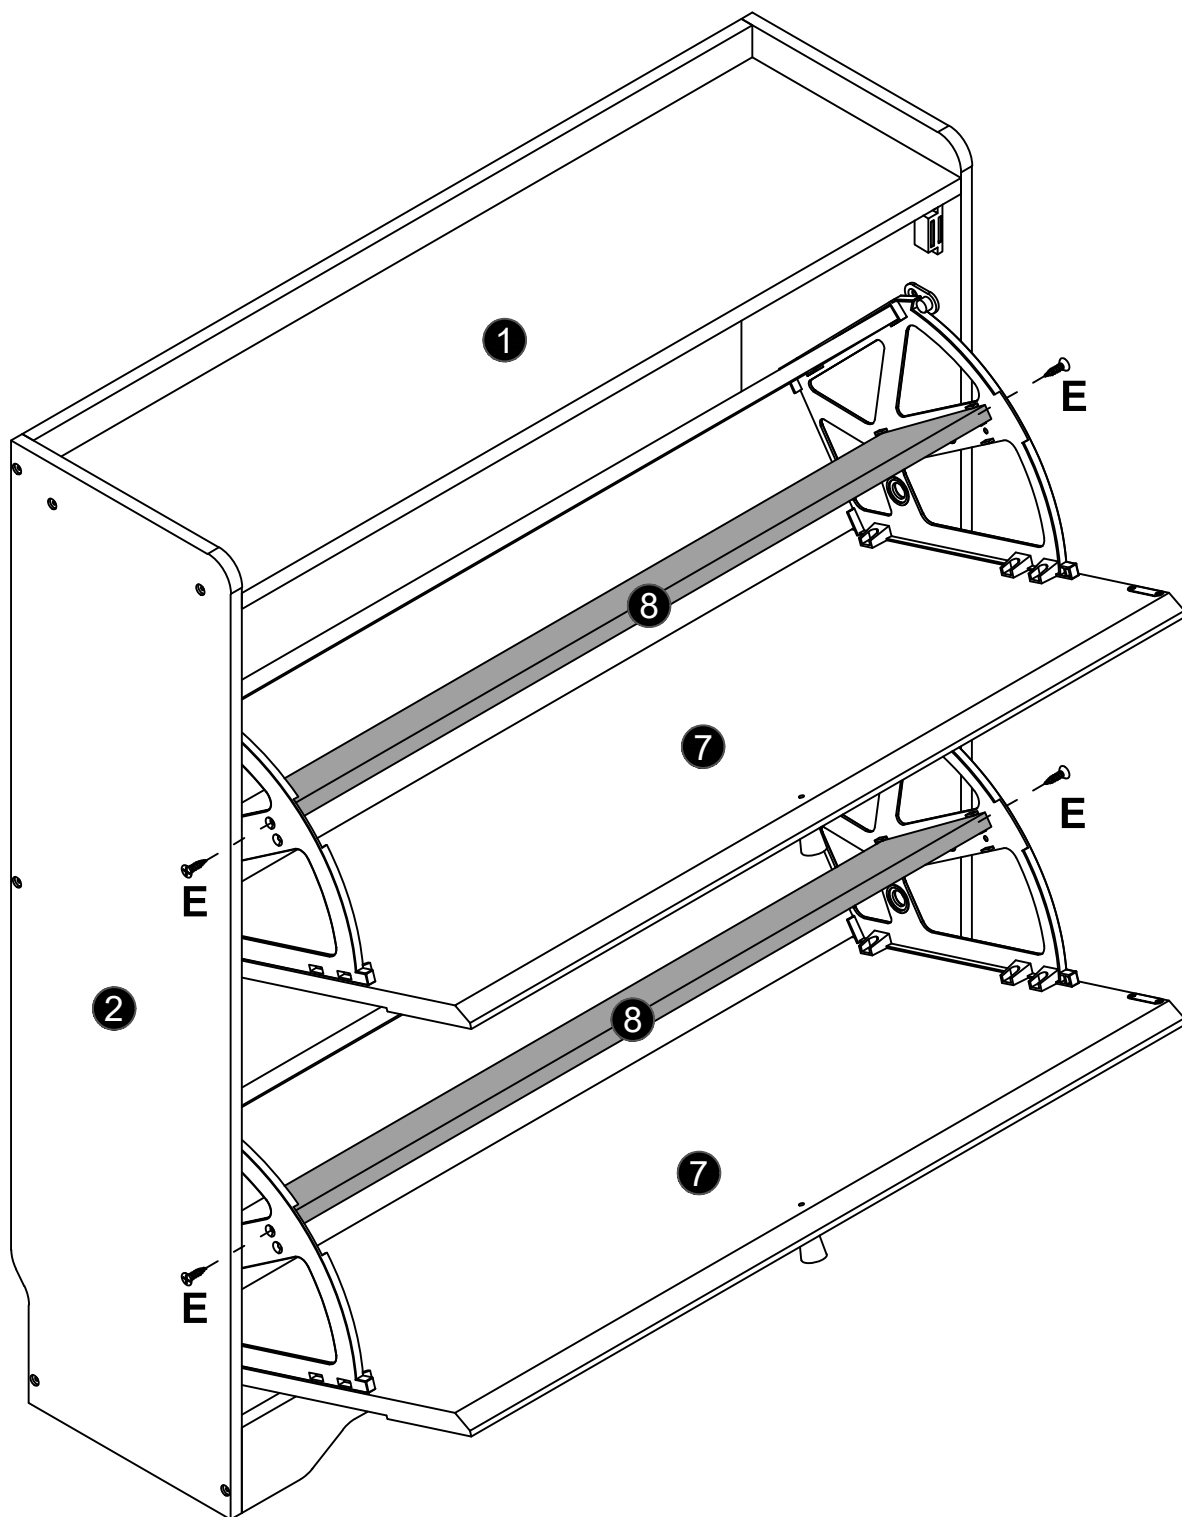

M x12

Done

