ASSEMBLY INSTRUCTIONS

KING STORAGE BED

(Box 1) BOX OF HEADBOARD & FOOTBOARD

(Box 2)

BOX OF THE REBOUND & TOO TBOTHED		
No	ITEM	Qty
A	Headboard	1 pc
В	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs

(Box 1)

HARDWARE LIST (HEADBOARD)

No	ITEM	Qty
1	JCBC M6 x 30mm	6 pcs
2	SPRING WASHER 1/4" Rbw	6 pcs
3	Flat Washer 1/4"ID x 13mmOD Blk	6 pcs
4	ALLEN KEY m4x65mm Blk	1 pc

(Box 2)


HARDWARE LIST (SIDE RAIL)

BOX OF SIDE RAIL		
No	ITEM	Qty
D	Side rail	2 pcs
Е	Center slat drawer	1 pc
F	Bed slat	3 pcs
G	Bed slat support	8 pcs
Н	Drawer slat support	1 pc
I	Concealed panel	6 pcs
J	Drawer support rail	2 pcs
K	Bed slat with marking	2 pcs

No	ITEM	Qty
5	CSK M4 x 32mm	14 pcs
6	Pan Head Screw M3.5 x 20 blk	30 pcs
7	JCBC M6 x 35mm	2 pcs
8	JCBC M6 x 50mm	9 pcs
9	SPRING WASHER 1/4" Rbw	2 pcs
10	Flat Washer 1/4"ID x 13mmOD	2 pcs
11	ALLEN KEY m4x65mm Blk	1 pc
12	ALLEN KEY m5x65mm Blk	1 pc

(Box 3) BOX OF DRAWER

No	ITEM	Qty
L	Drawer	2 pcs

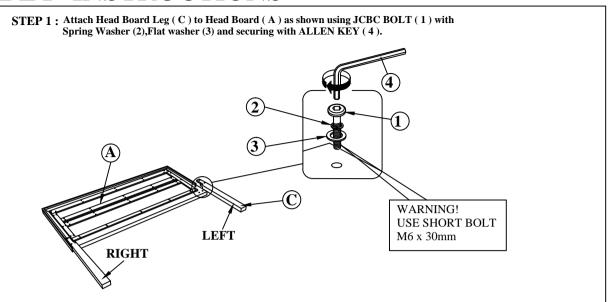

STEP 2: Loosen the JCBB Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (12). Attach the Side Rail (D) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it.

Tighten the JCBB Bolt by ALLEN KEY (12).

