

YARDGRACE

OUTDOOR LIVING SOLUTIONS




WEATHER
RESISTANT



INTEGRATED
NETTING






















EASY
ASSEMBLY

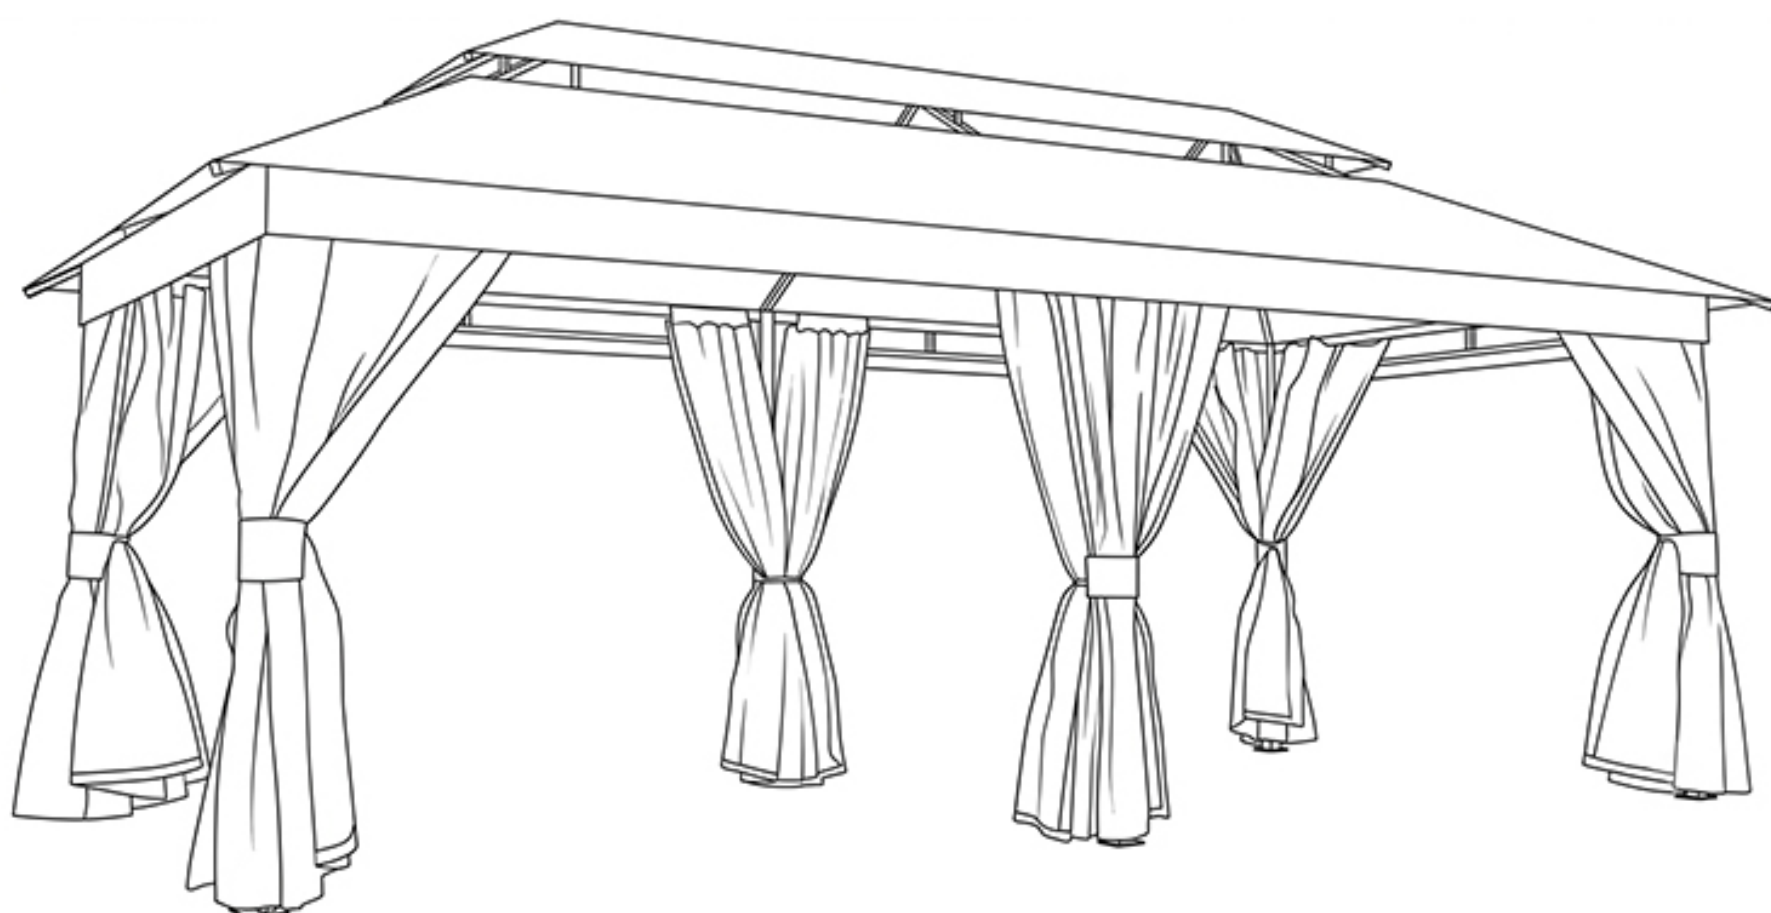


PREMIUM GARDEN GAZEBO WITH NETTING & CURTAINS


10FT×20FT // Assembly & User Manual

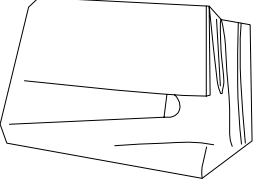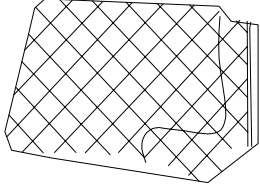PARTS#	QTY	DESCRIPTION	PARTS#	QTY	DESCRIPTION
A	4		AA	72	 6x12
B1	12		BB	12	 6x28
A2	2		CC	8	 6x23
C1	4		GG	6	 6x35
D3	6		DD	26	 M6
G	4		S	6	 3M
H	12		R	6	
D2	12		Q	12	
F	2		T	18	
U	6		FF	1	
L	1		EE	1	
K	1		HH	1	 Rope cleat
M	4	 Privacy Curtain	V	8	
			C2	4	
N	4	 Mosquito Mesh	M1	2	
			M2	2	
V1	2		F1	1	
C3	4		D1	2	
M5	1		M3	1	
F2	1				


01



A X4



H X6

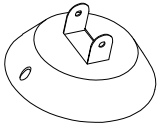


G X4







6x12

AA X18




A2 X2

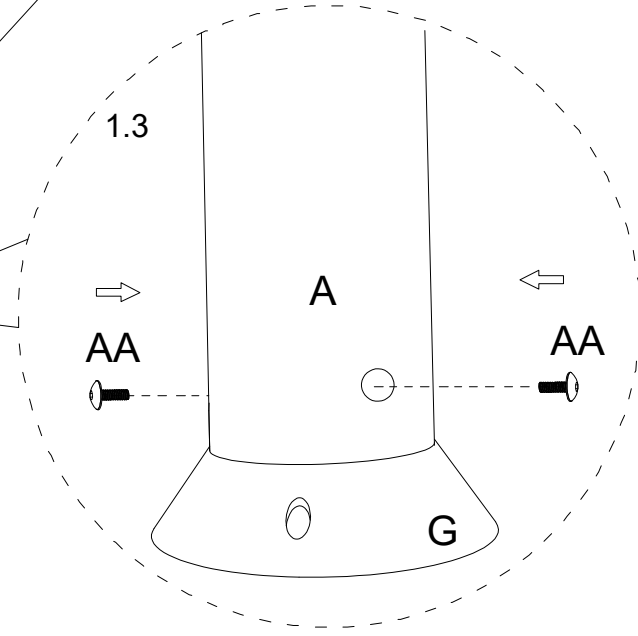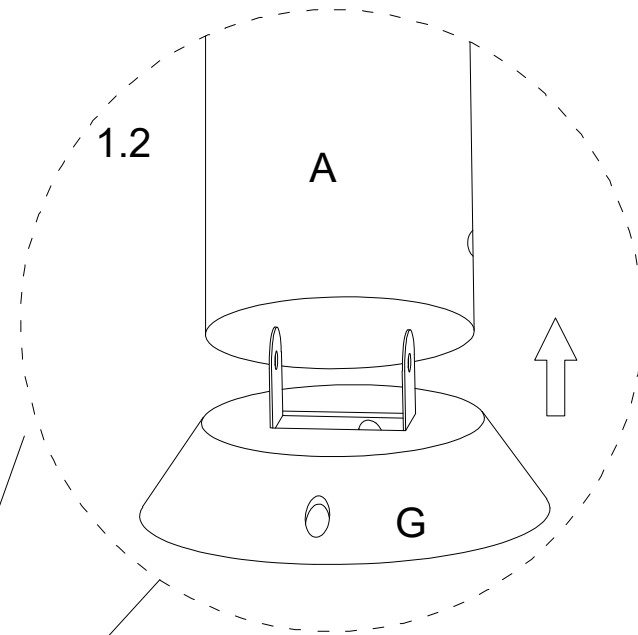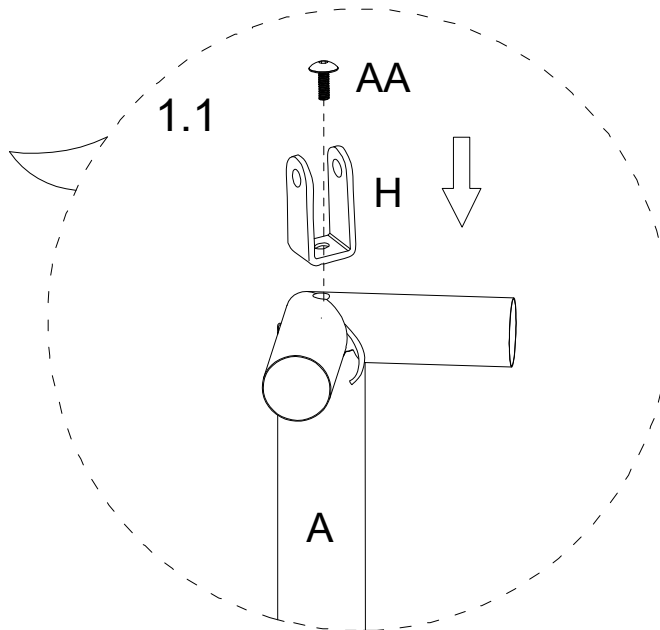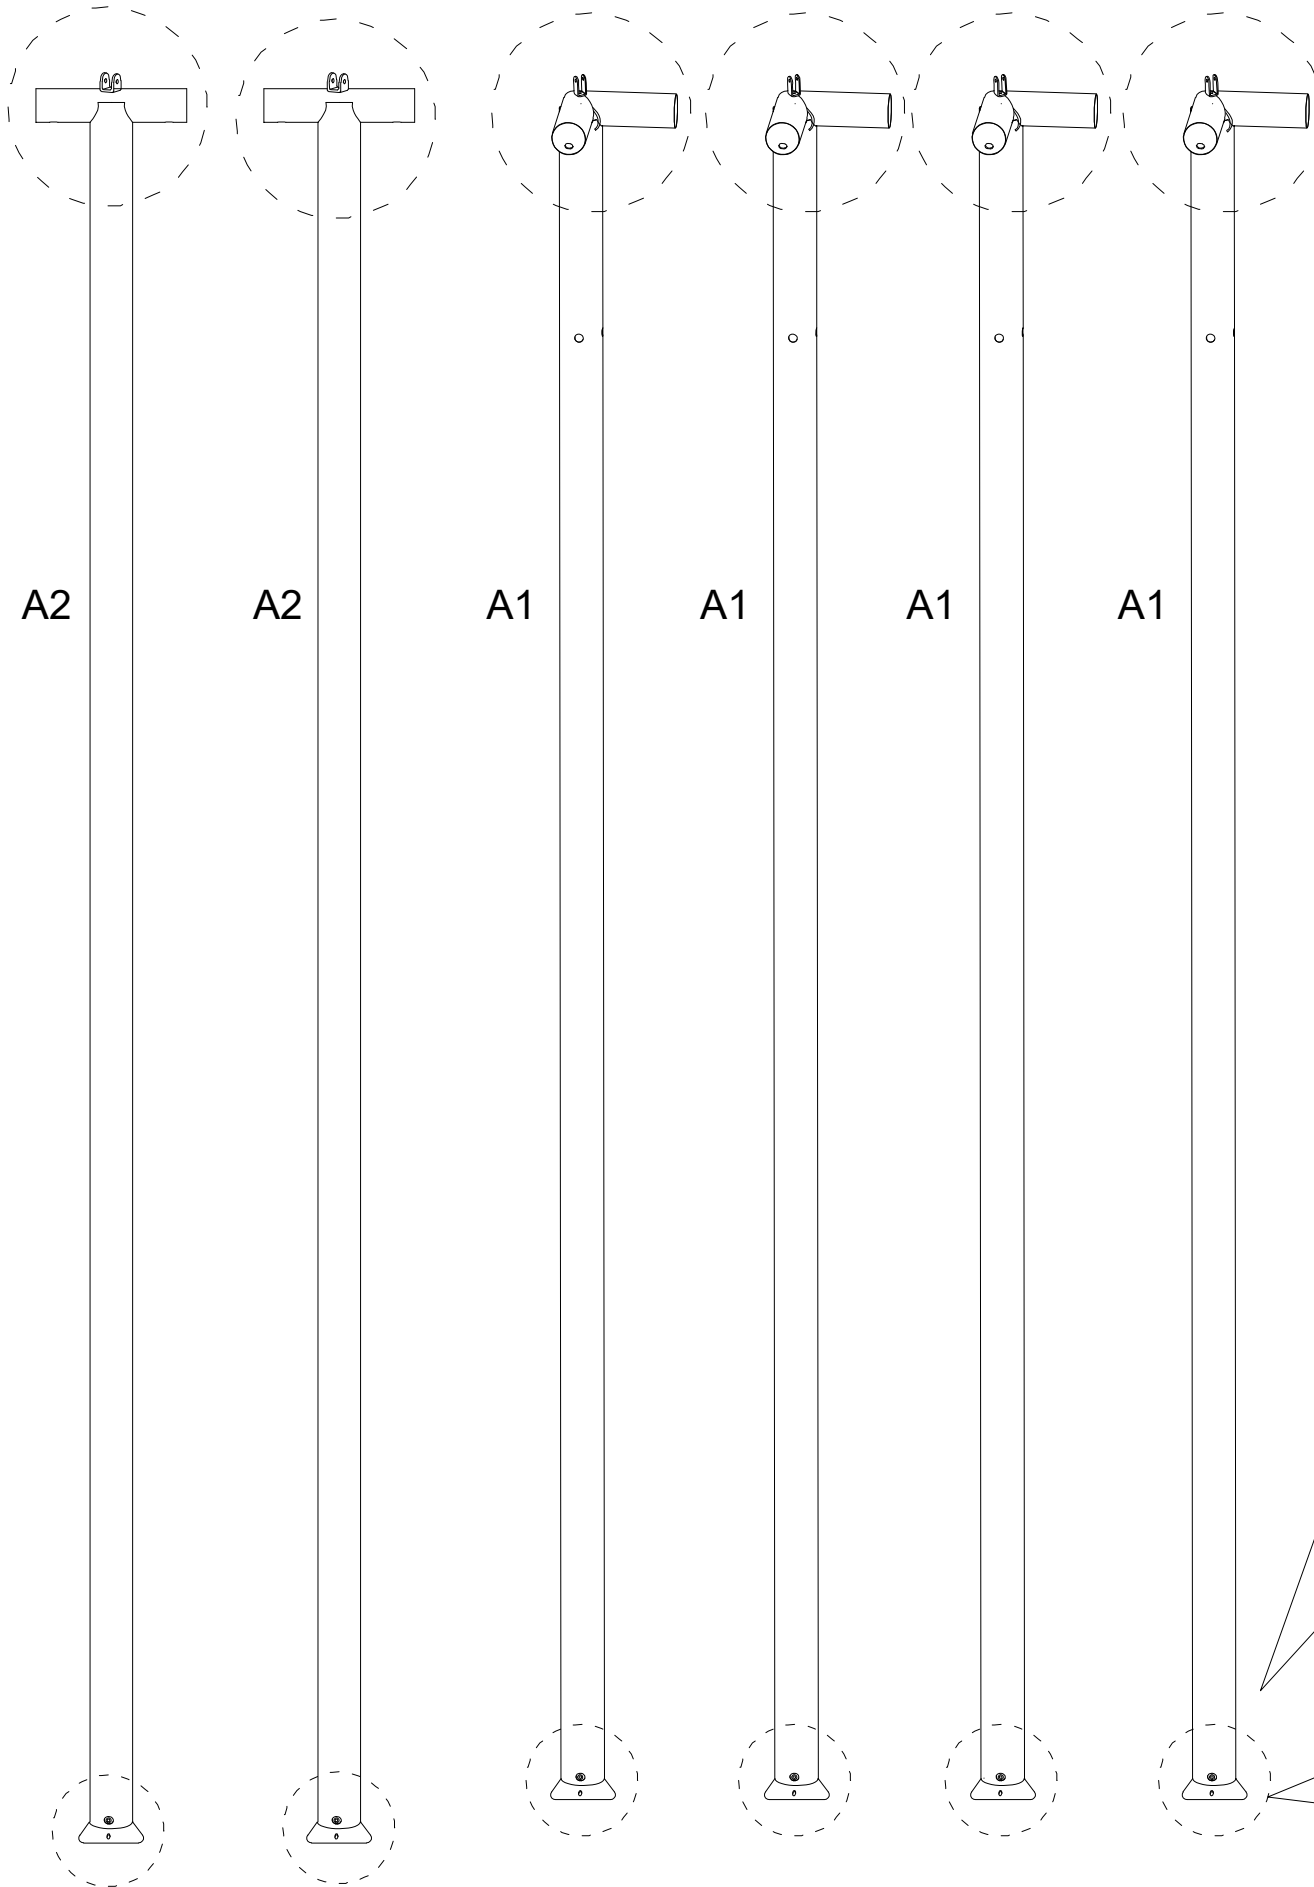


NOTE!
Install all bolts by hang loosely threaded
before fully tightening any bolts. After
all bolts are installed loosely,then secure
the bolts before moving on to the next step.


02



B1 X4

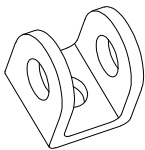


H X6





6x12 AA X18




U X6



B2 X4

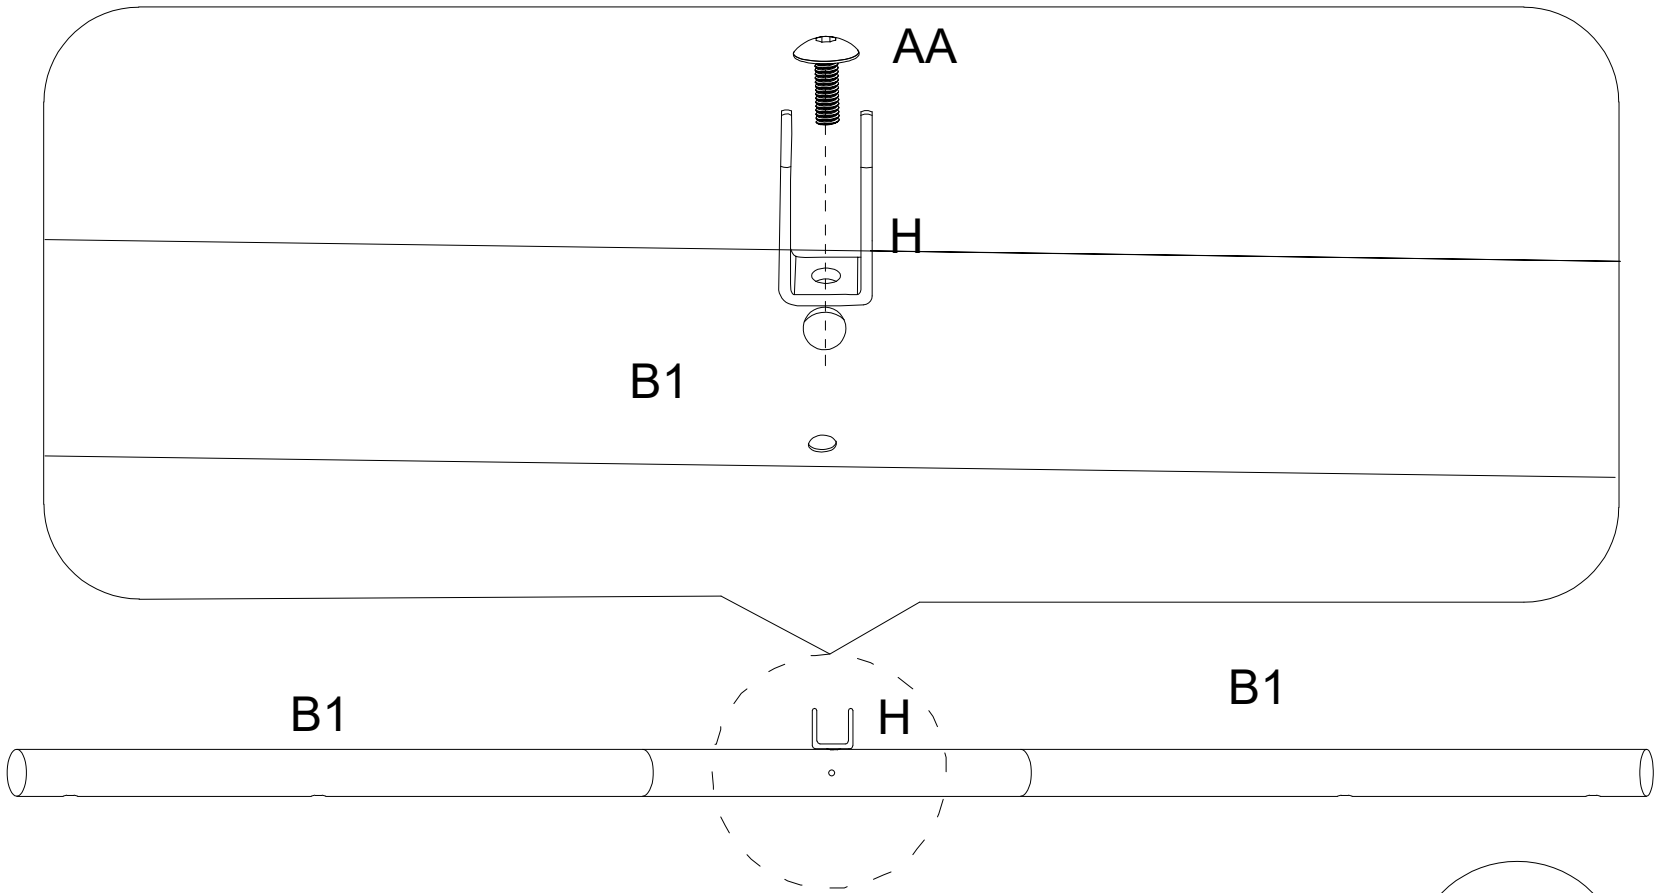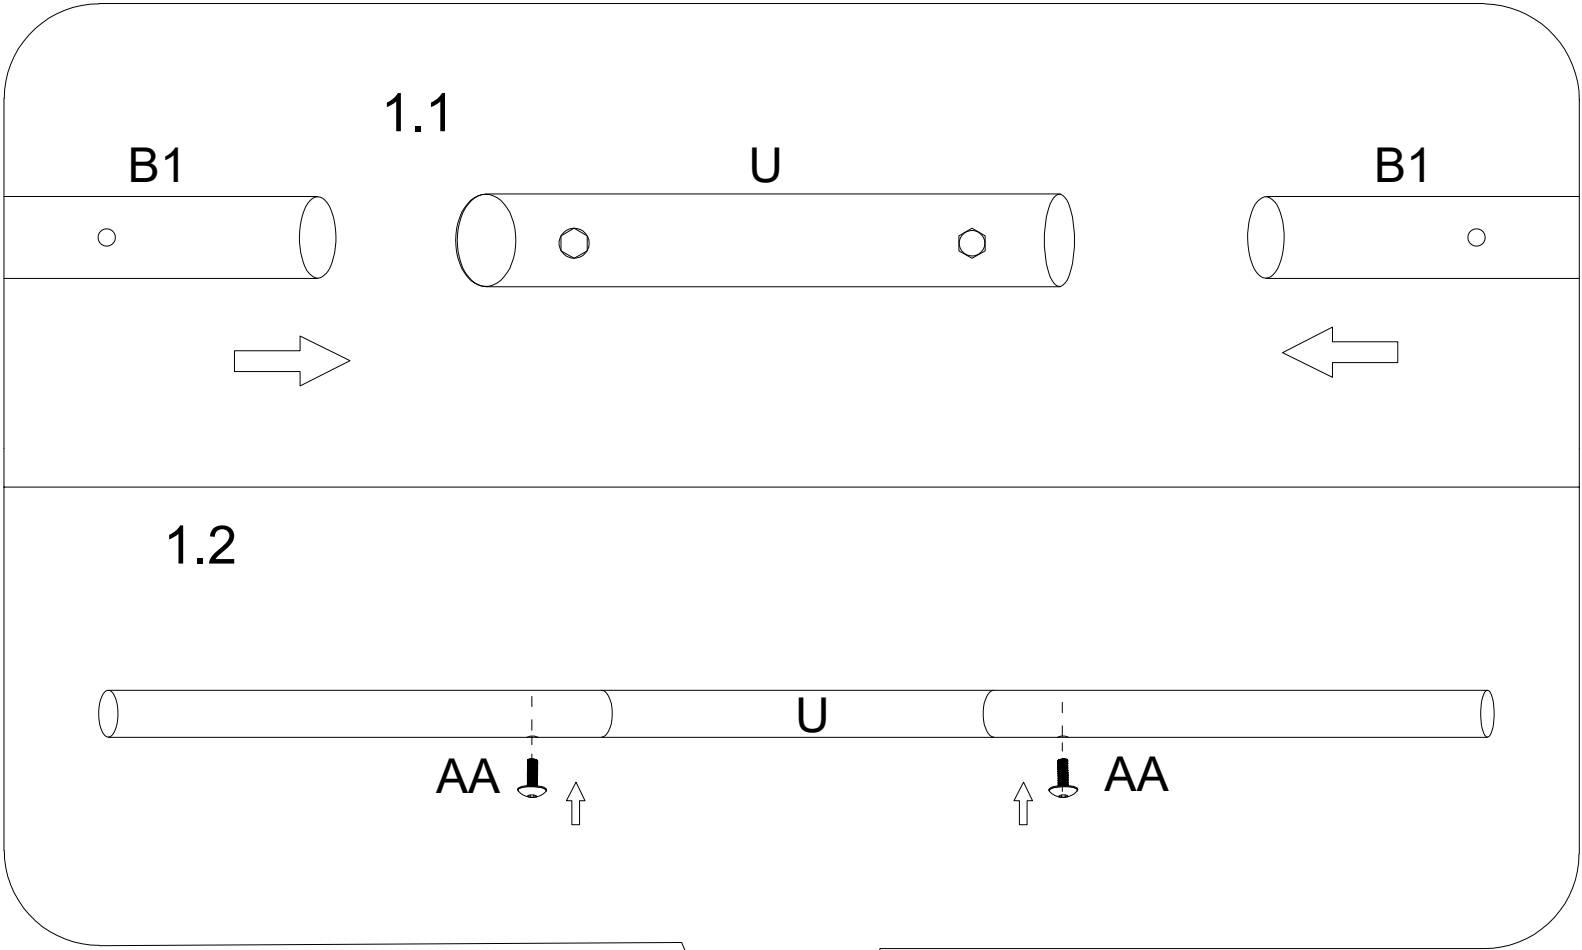







X6




D2 X4



6x12 AA X12

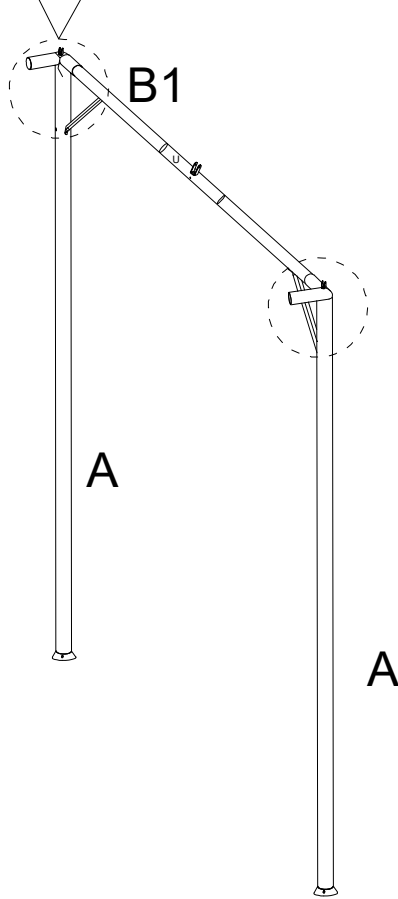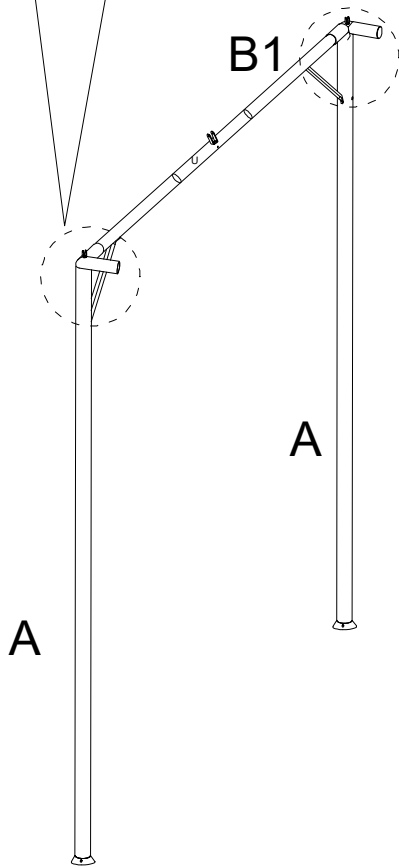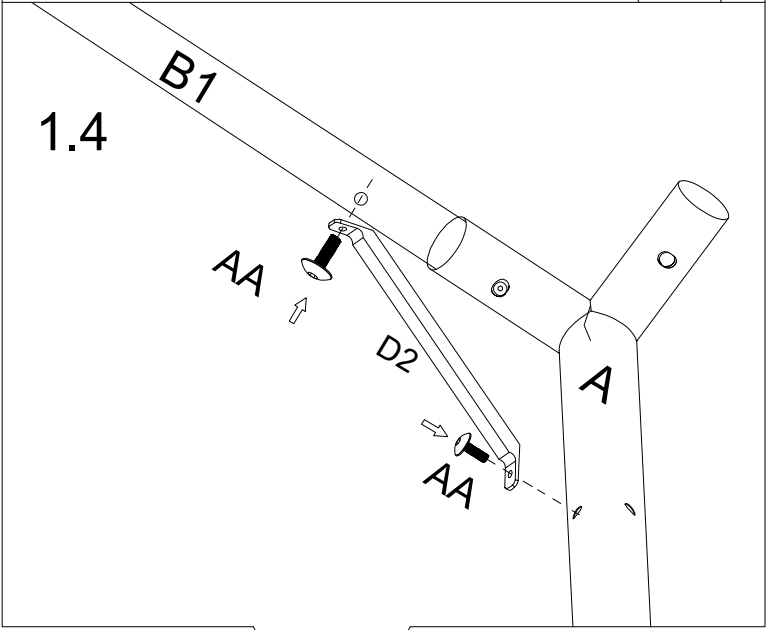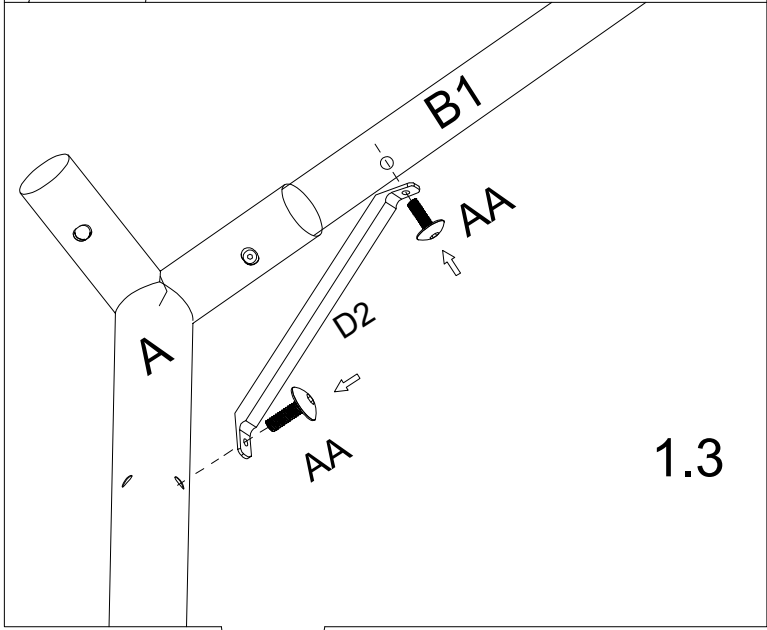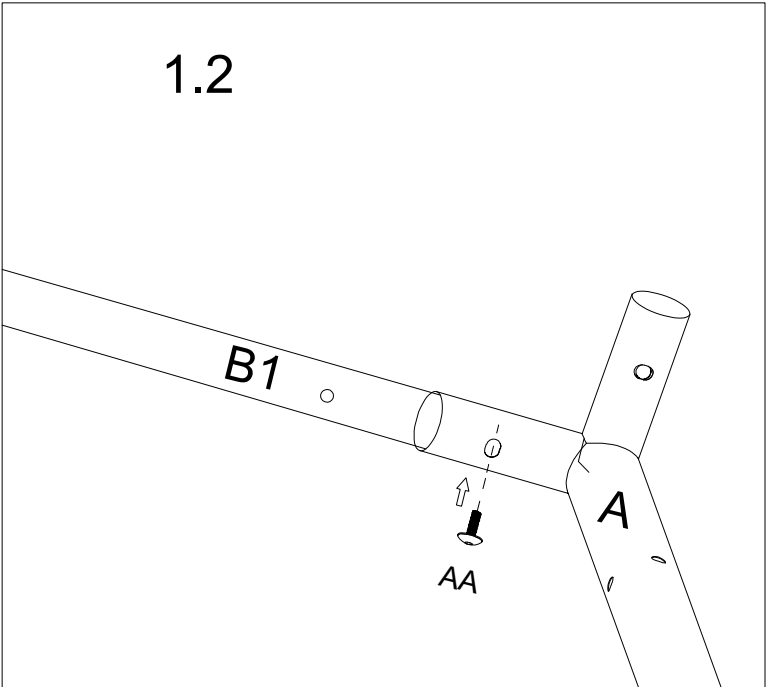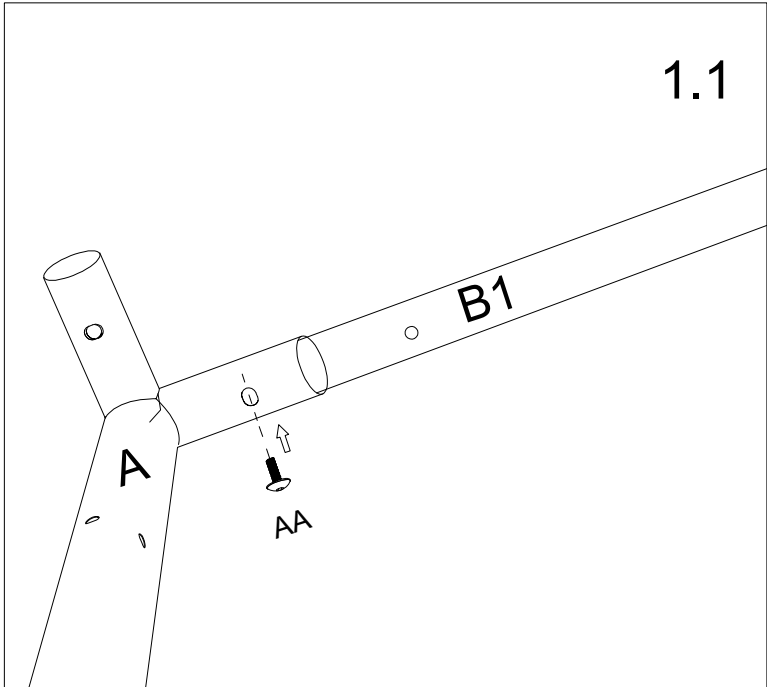

04



D2


X2





6x12

AA


X6

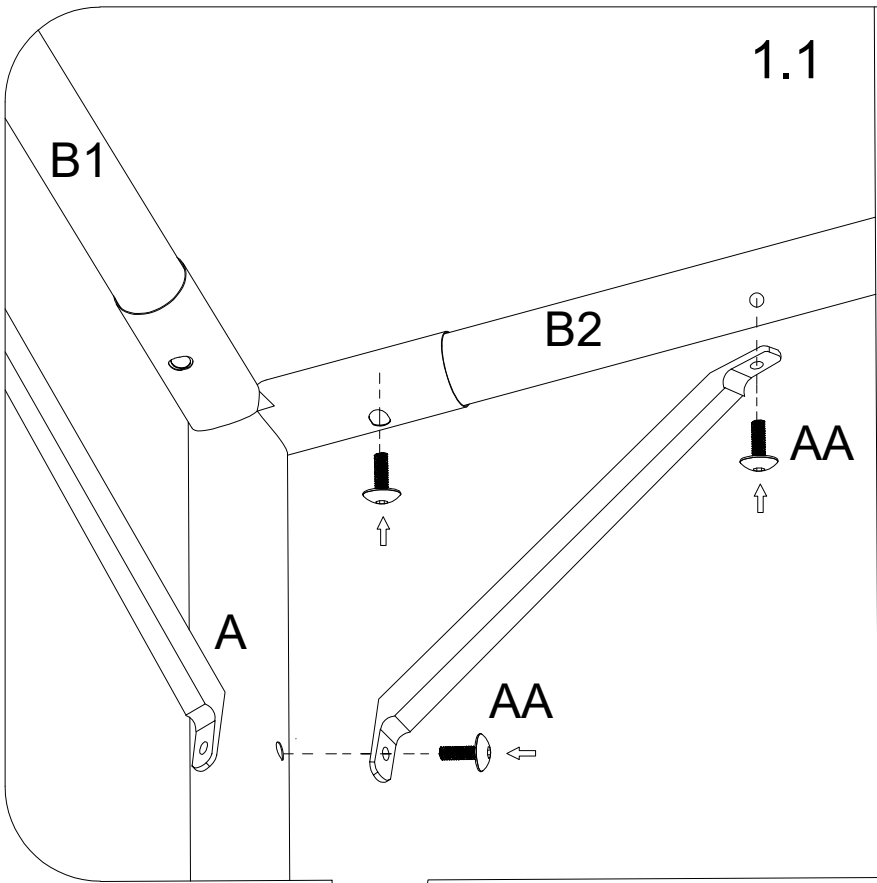

1.2

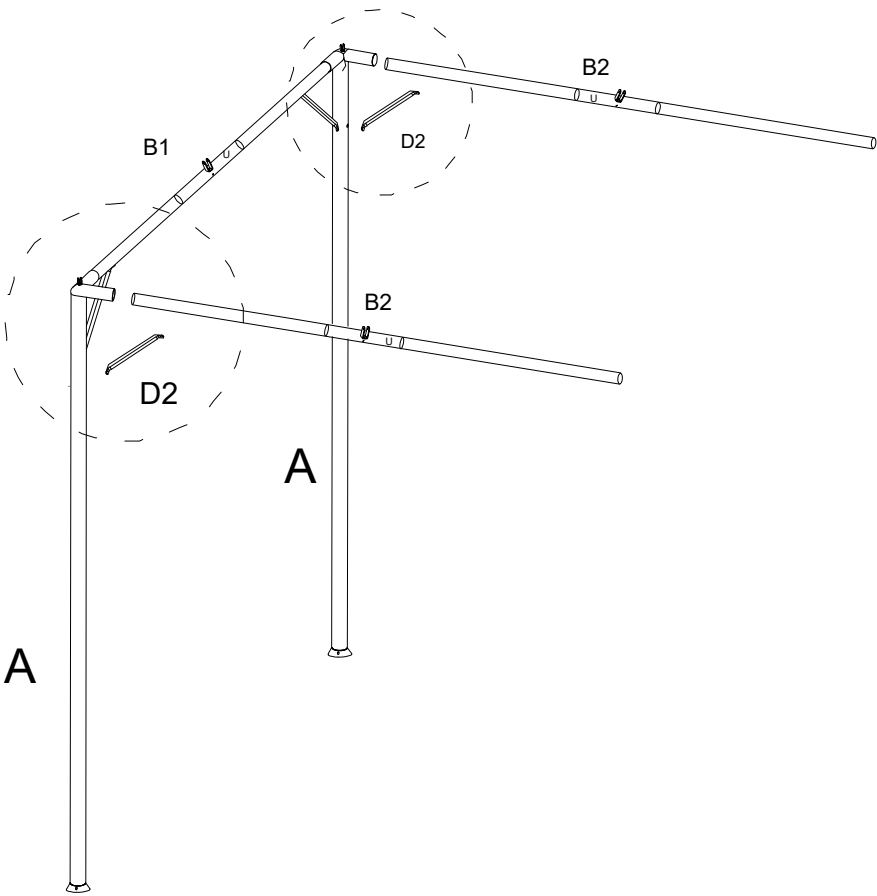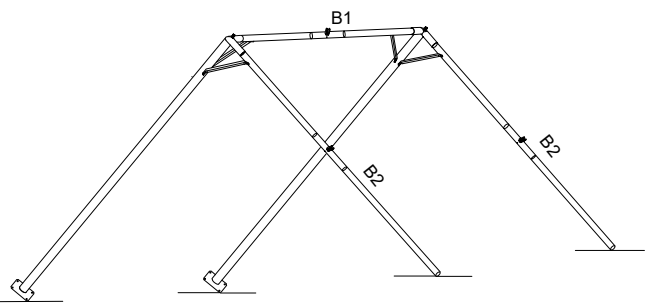

05





D2 X2




6x12


AA X6

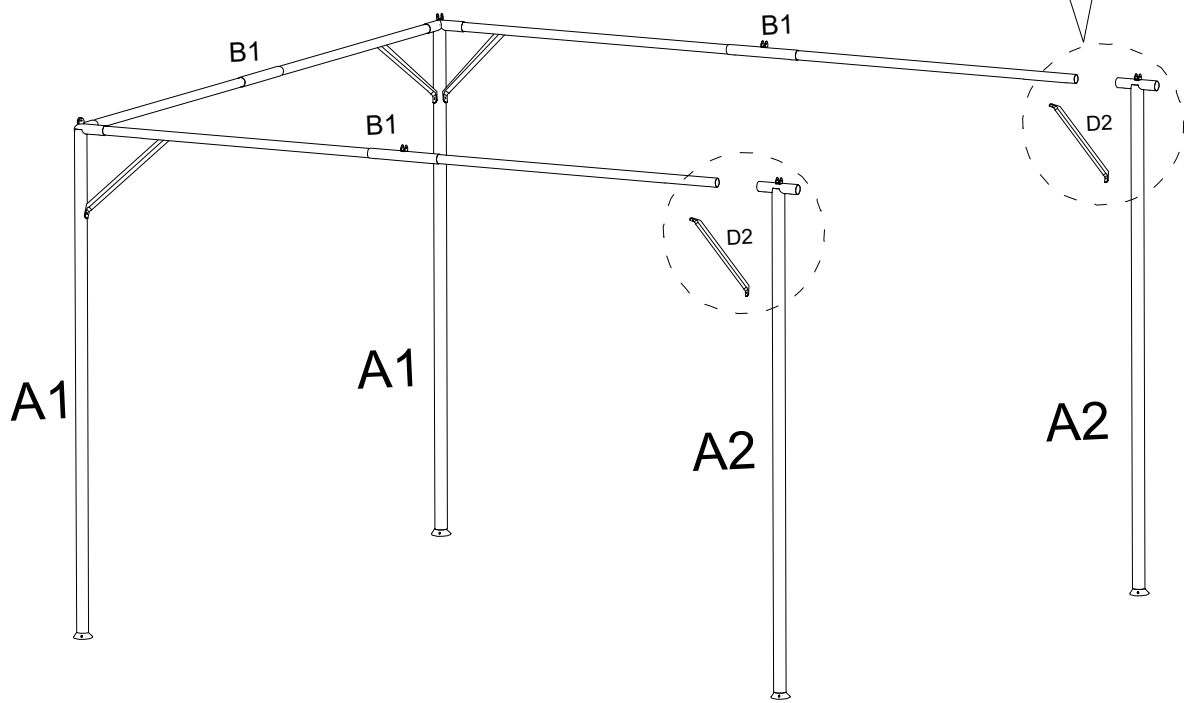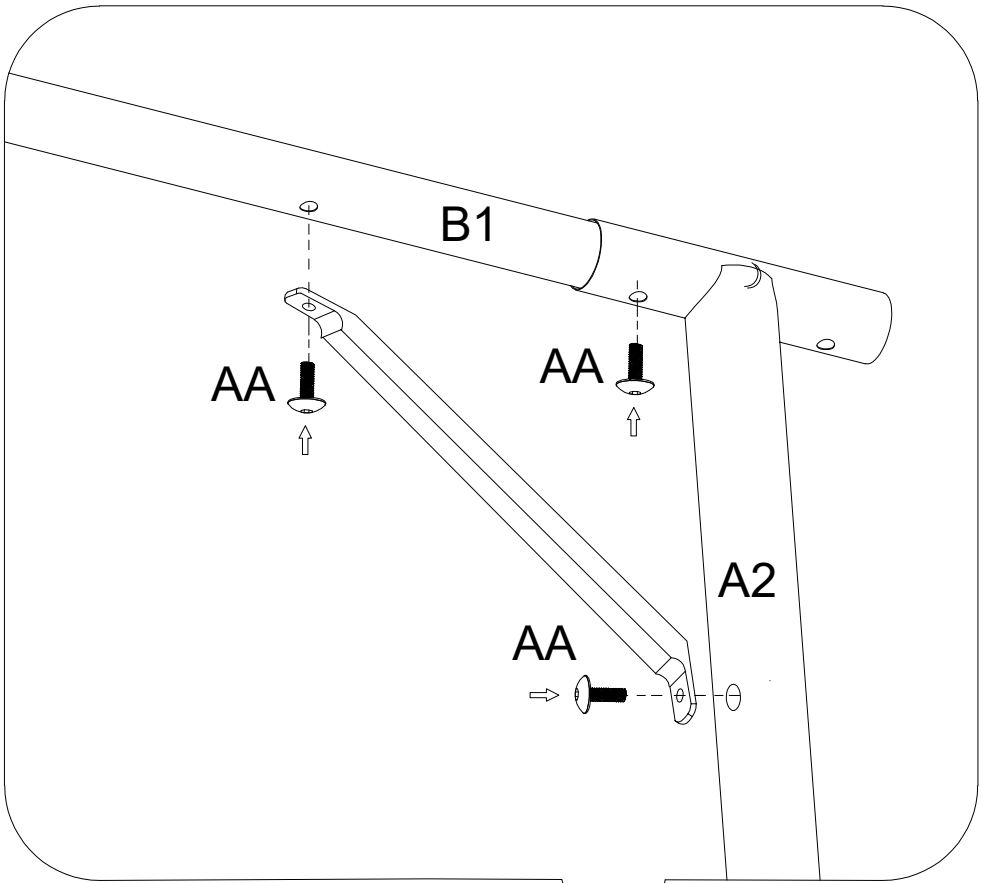

This Step needs 2-3 people

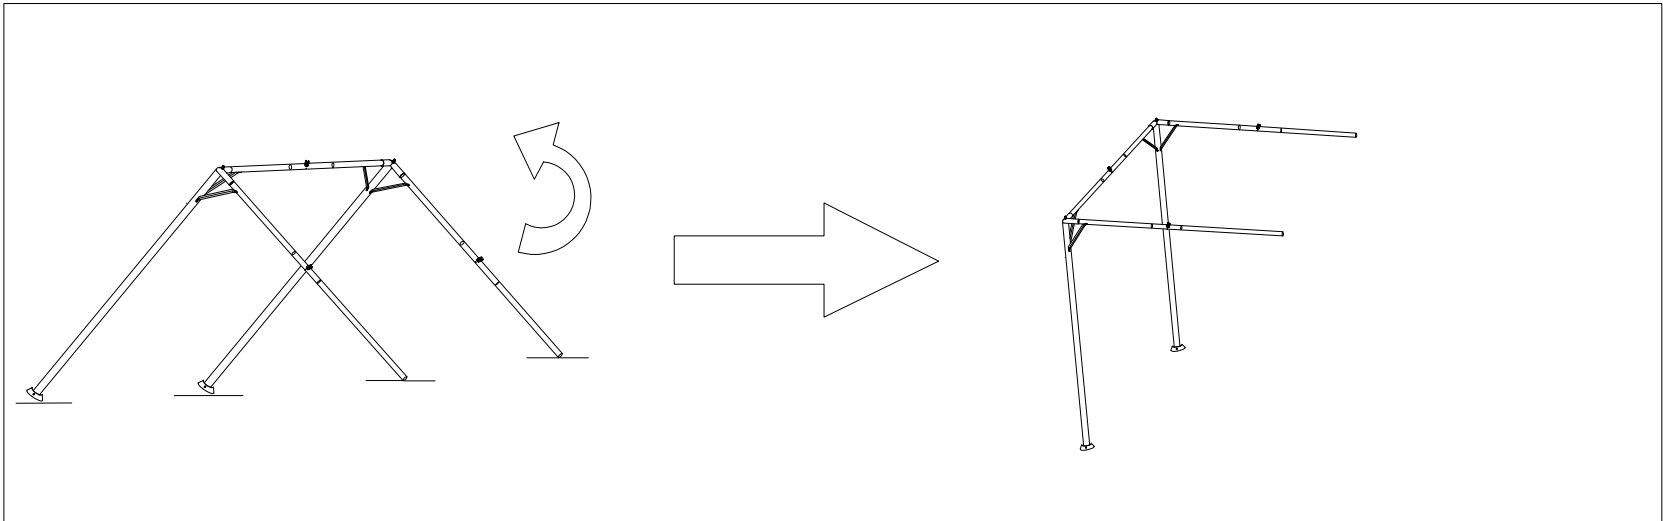

06






D2 X2







6x12

AA X6

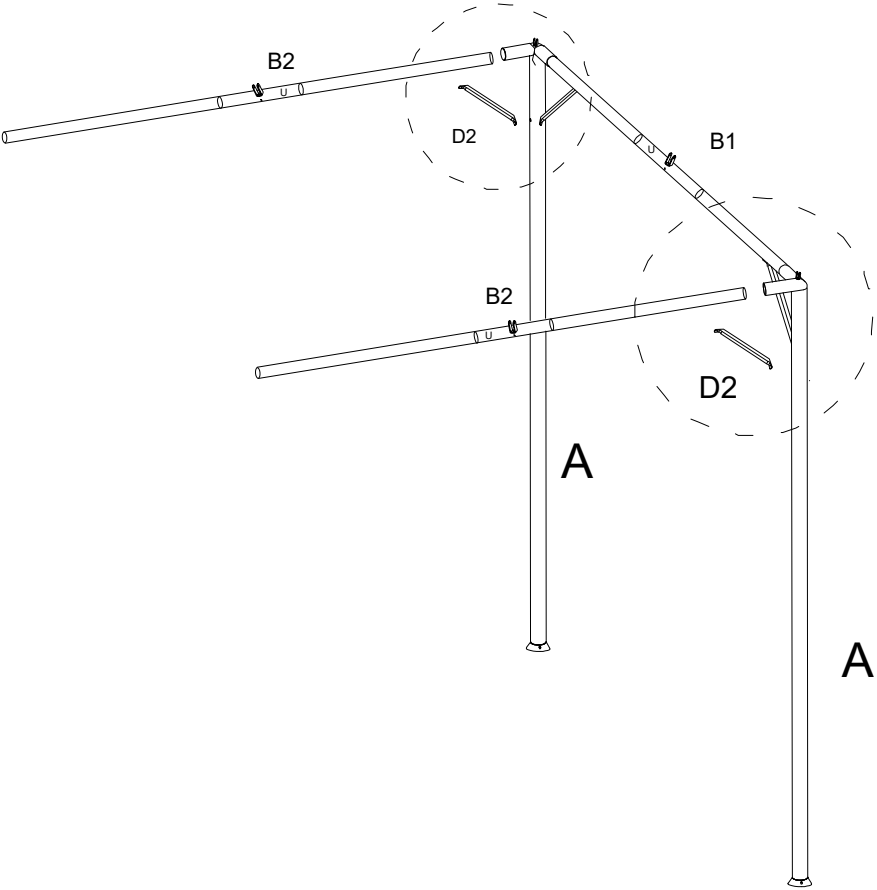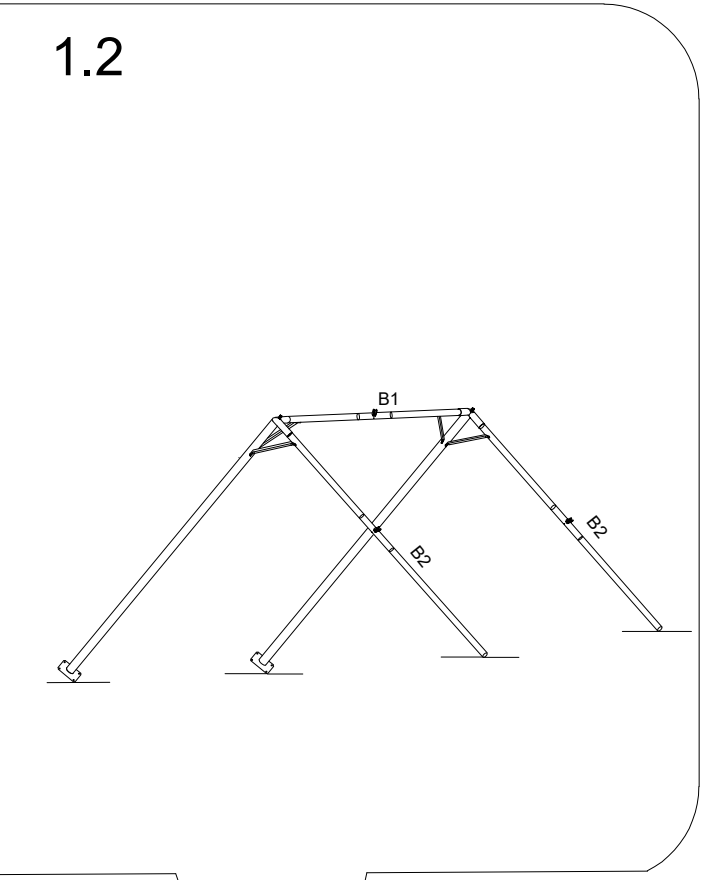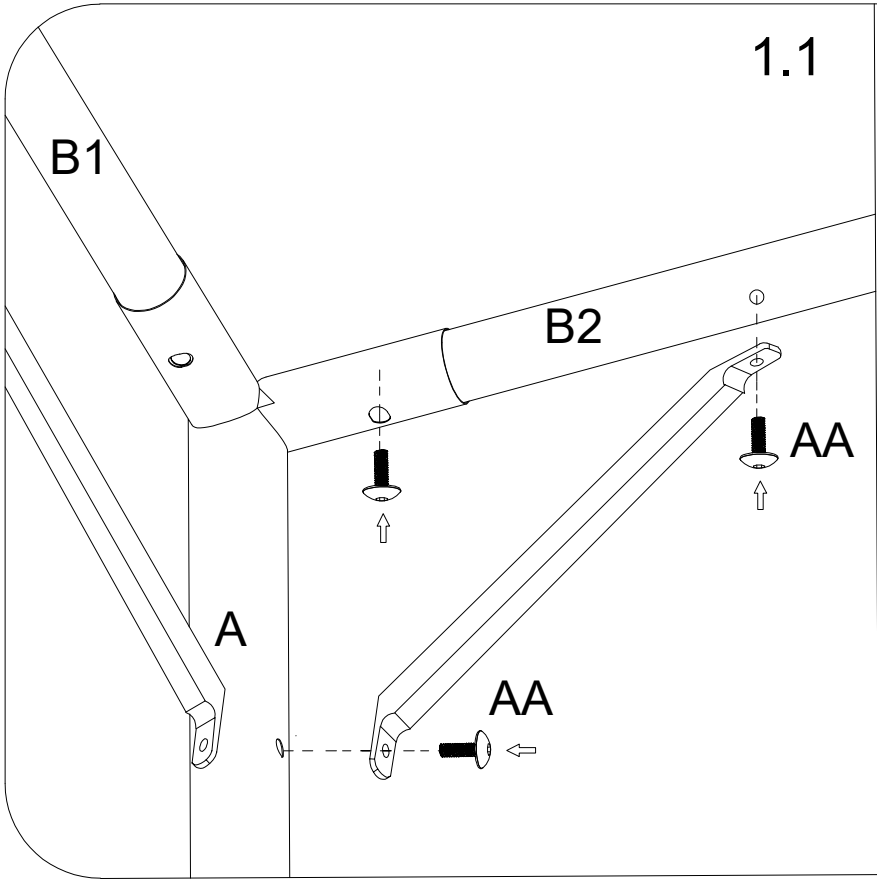


07

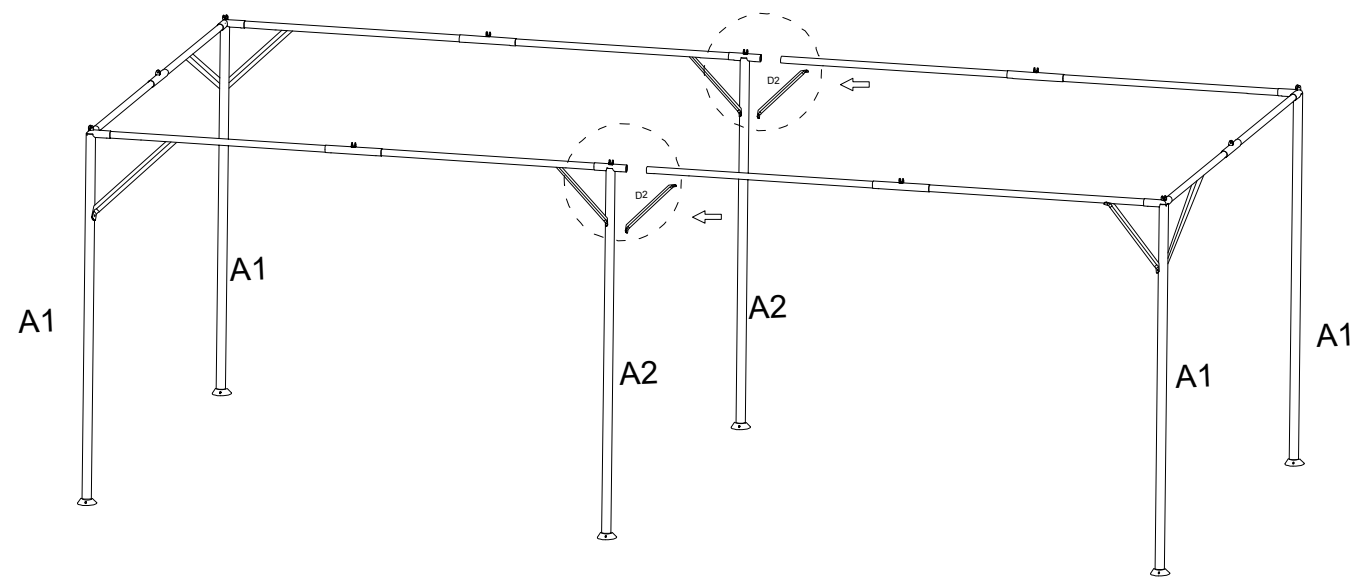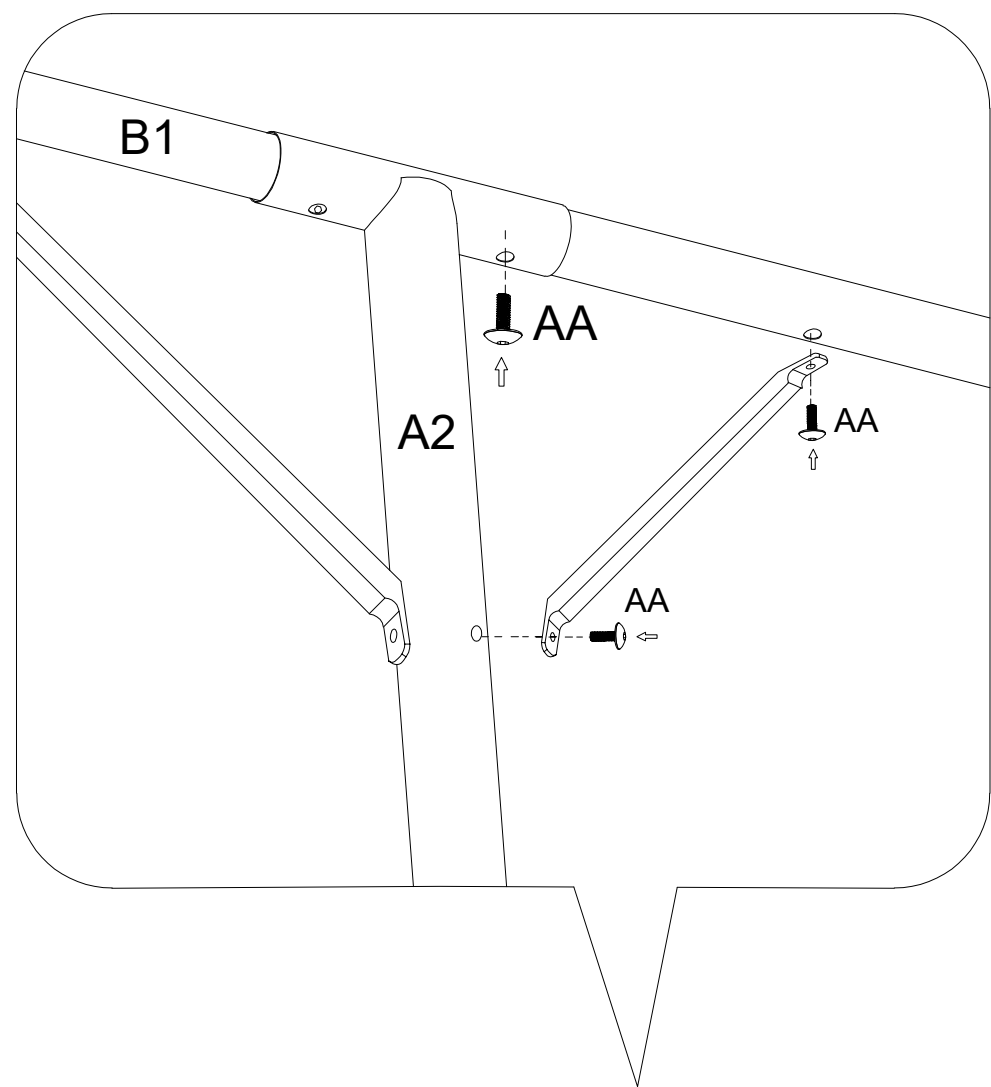


This Step needs 2 people

08




V X8







Rope cleat


HH X1

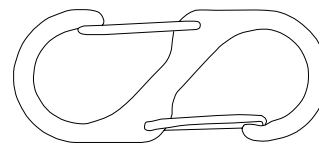

M5 X1

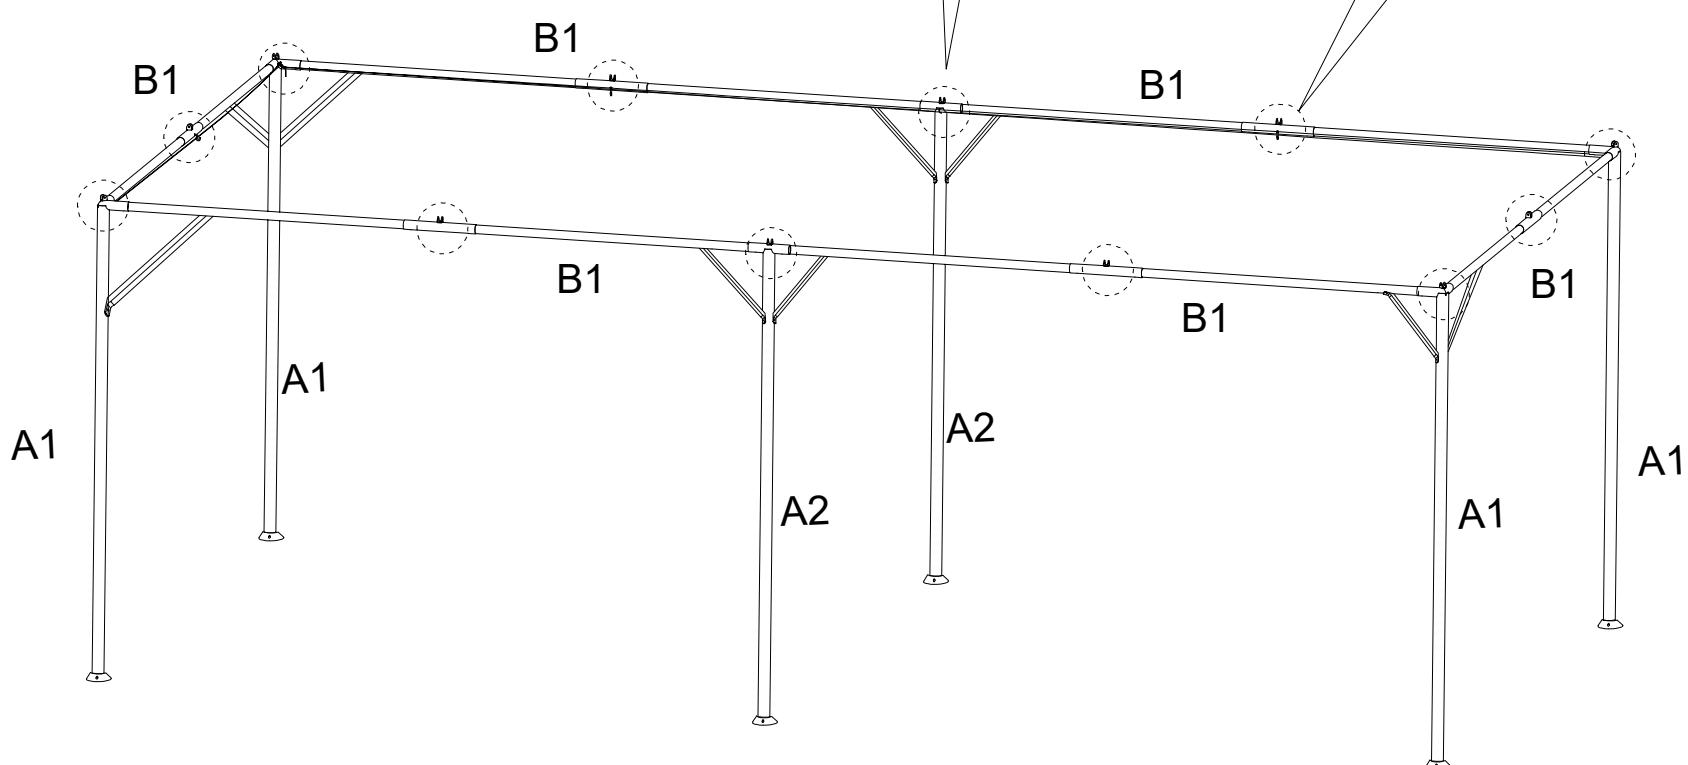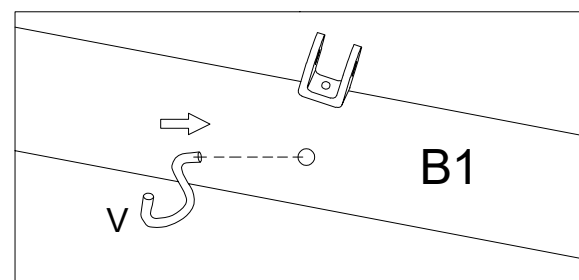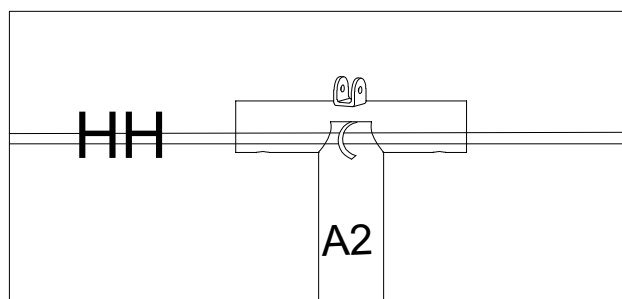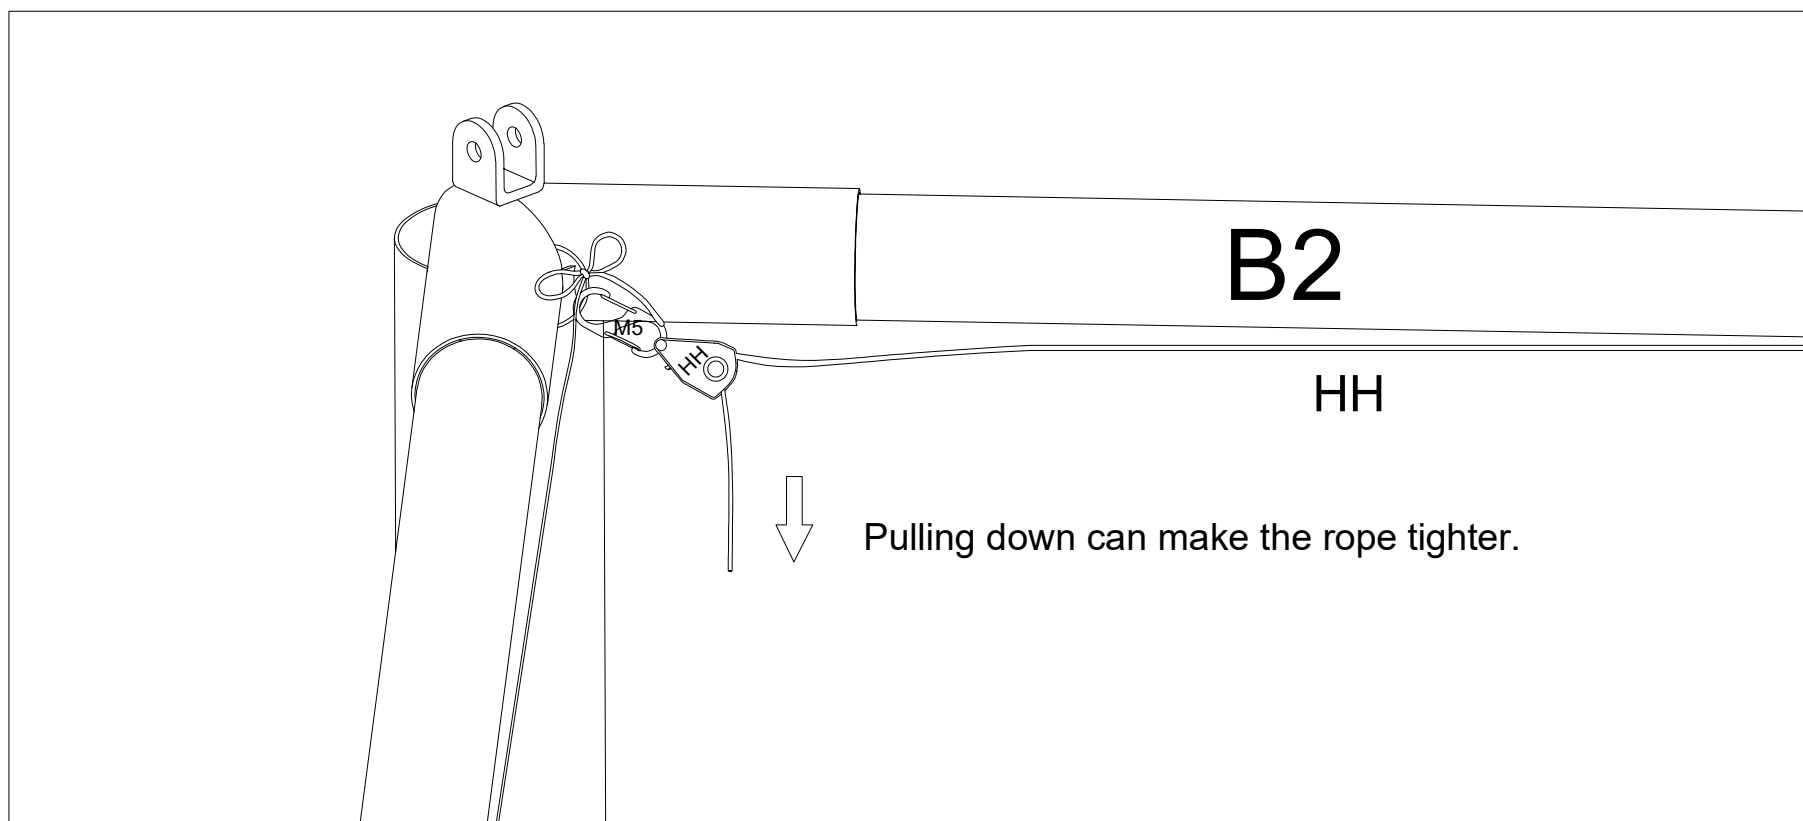

09




6x28

BB X2



M6

DD X6




6x35


GG X4



M1 X2



F1 X1




F2 X1



M2 X2



D1 X2




F X2




V1 X2


1.1

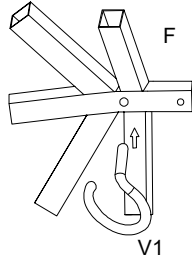


1.3

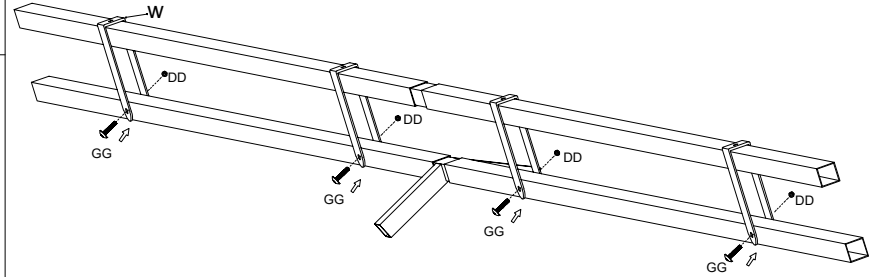


1.2

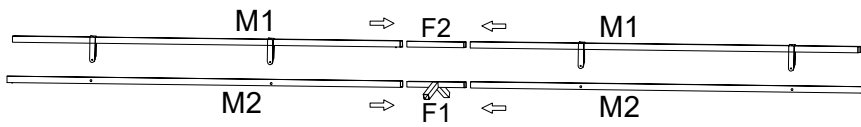


1.4

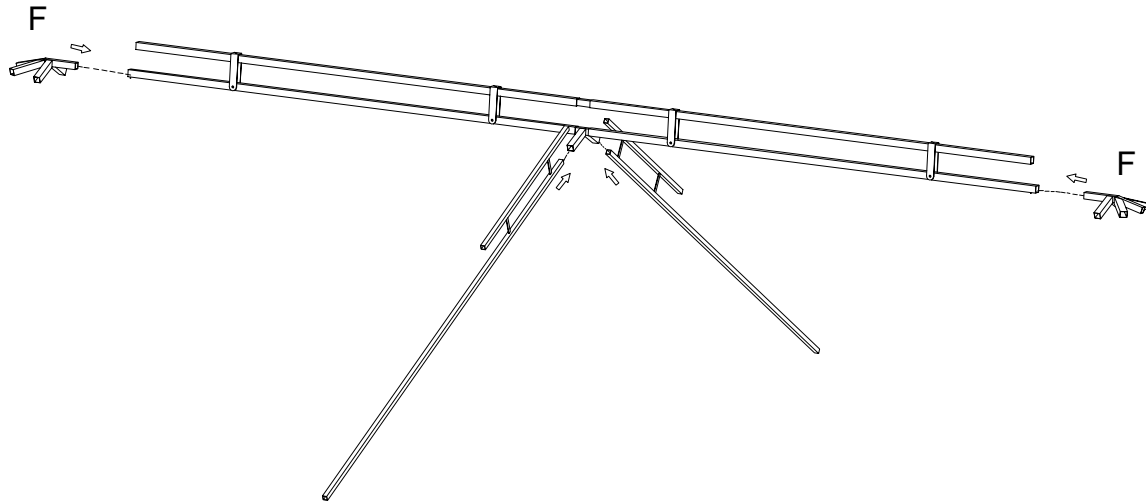


1.5

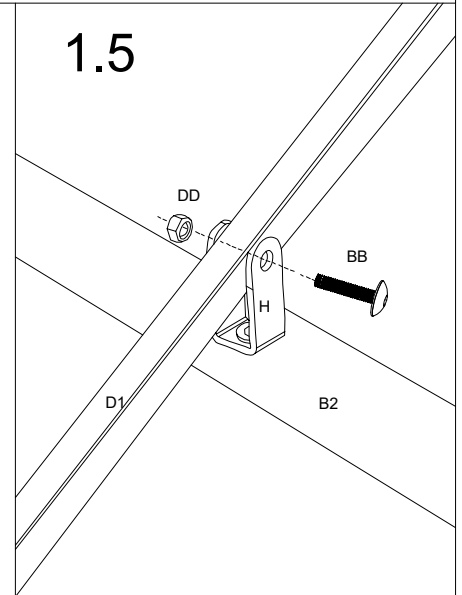

Need 2 people to set up the ladder operation

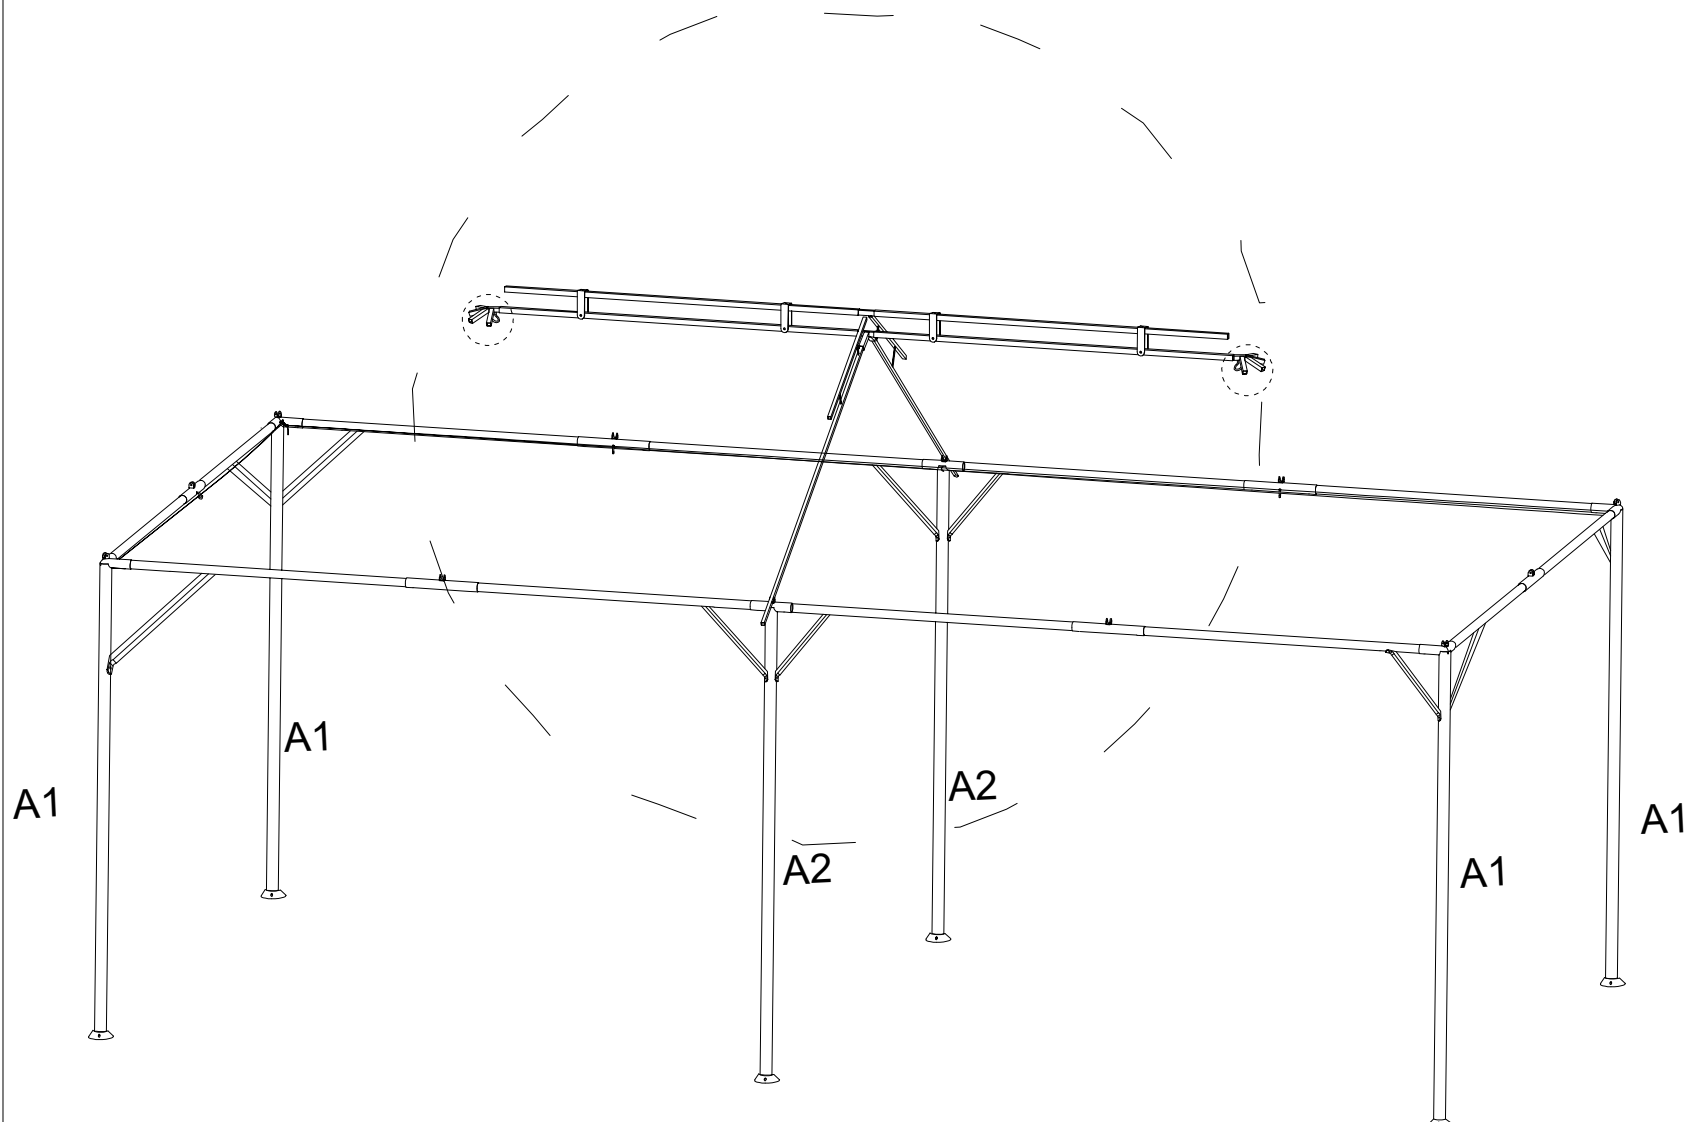


10

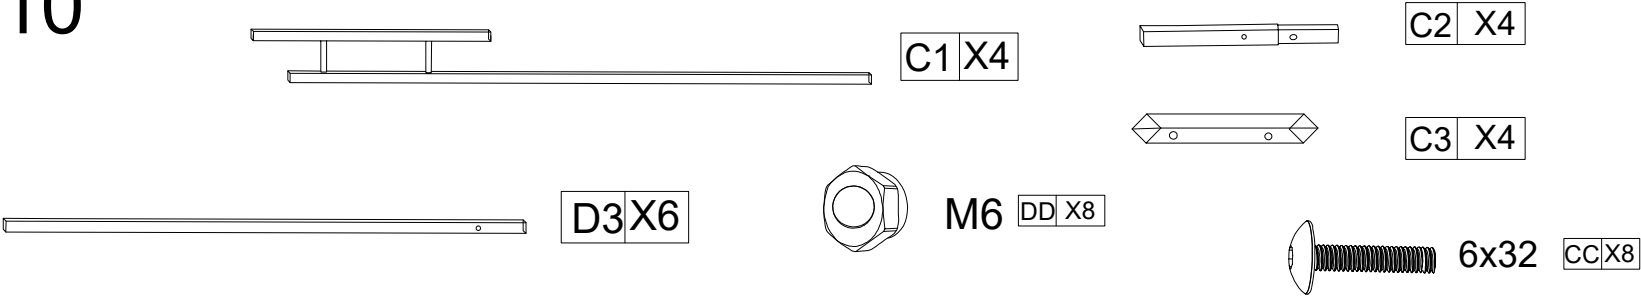

1.1












1.2

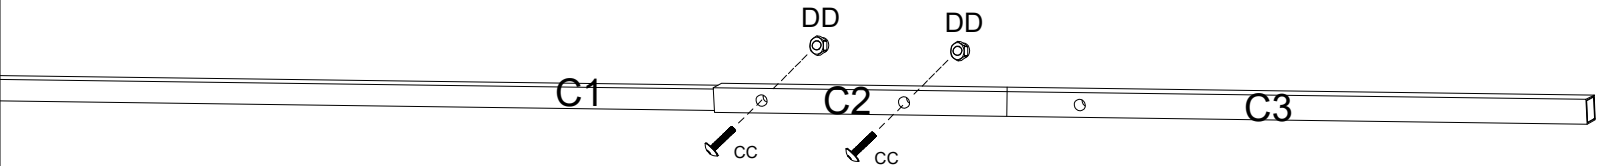


1.3

Need 2 people to set up the ladder operation

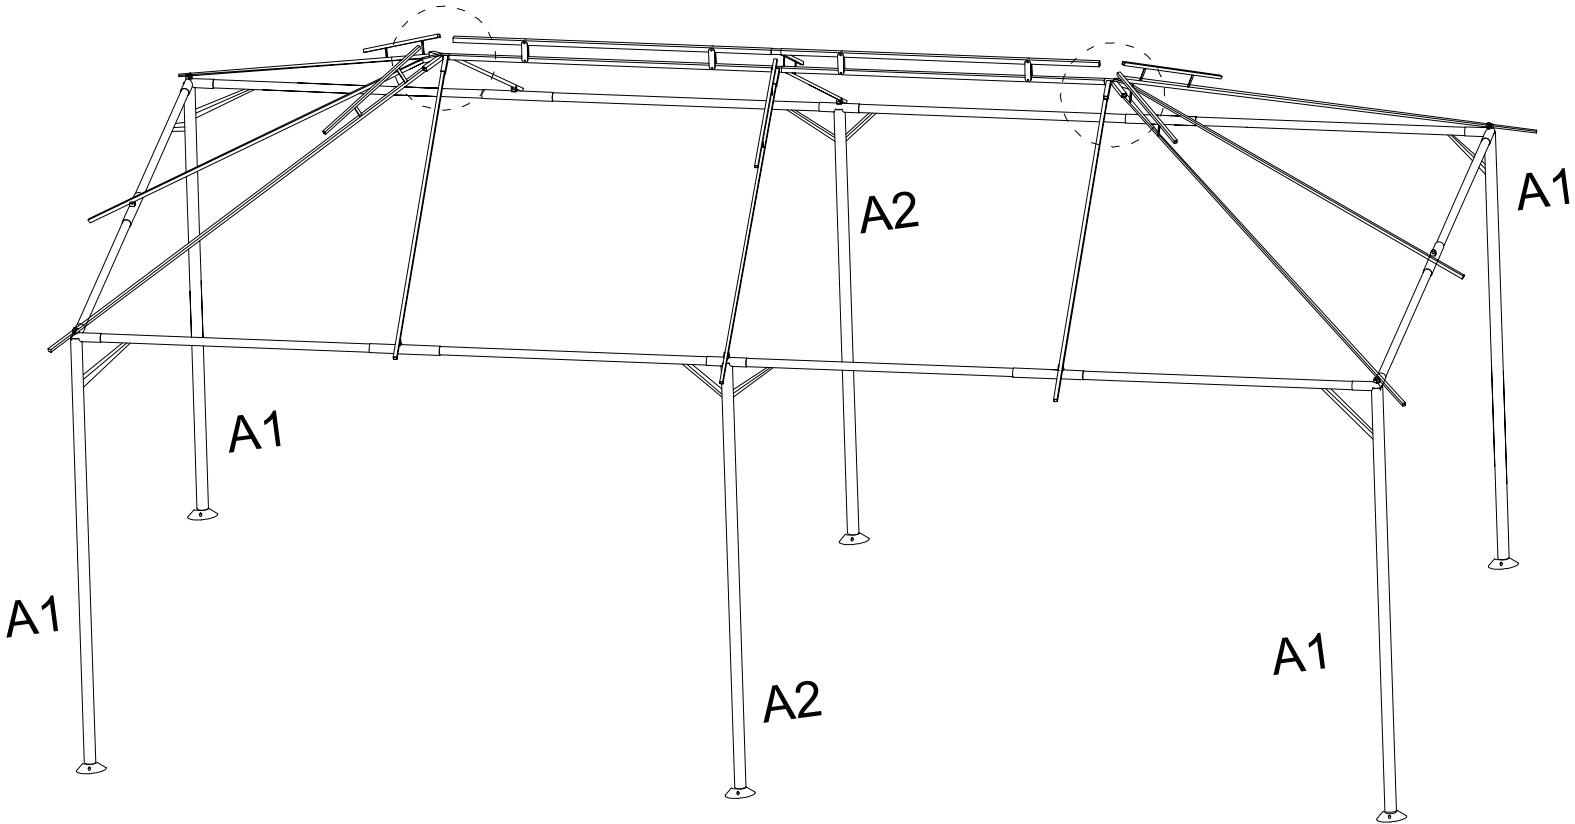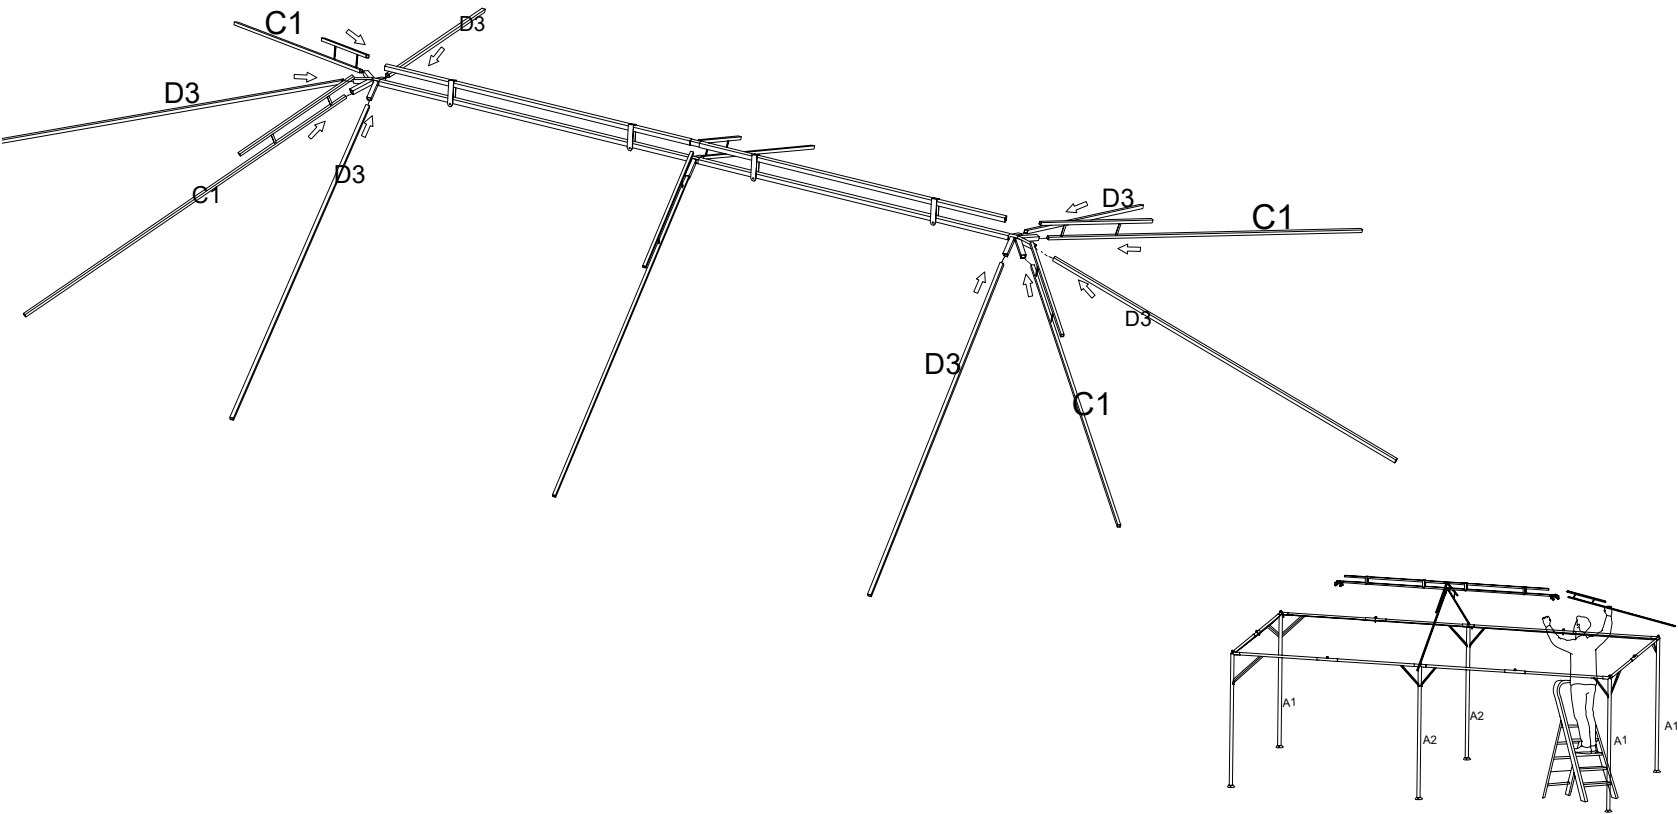


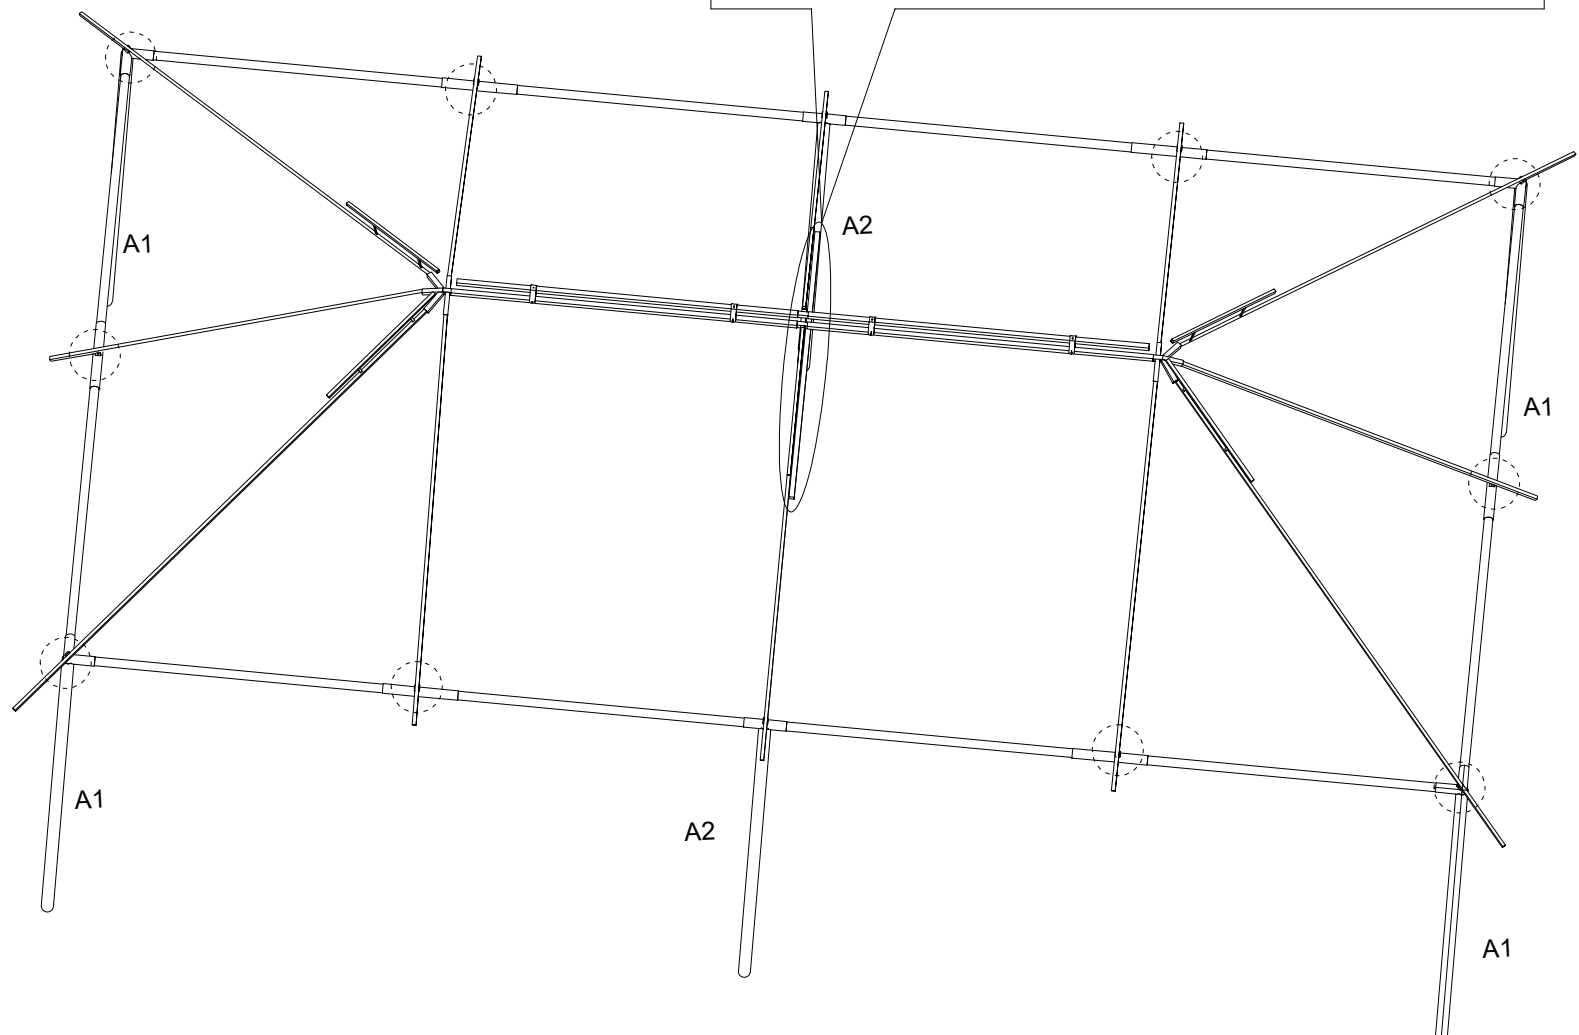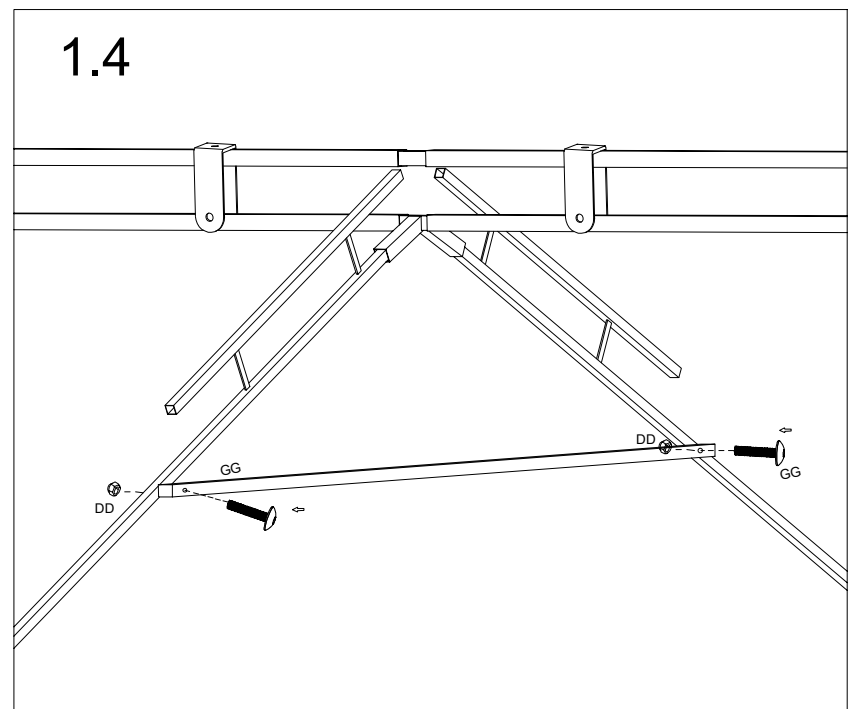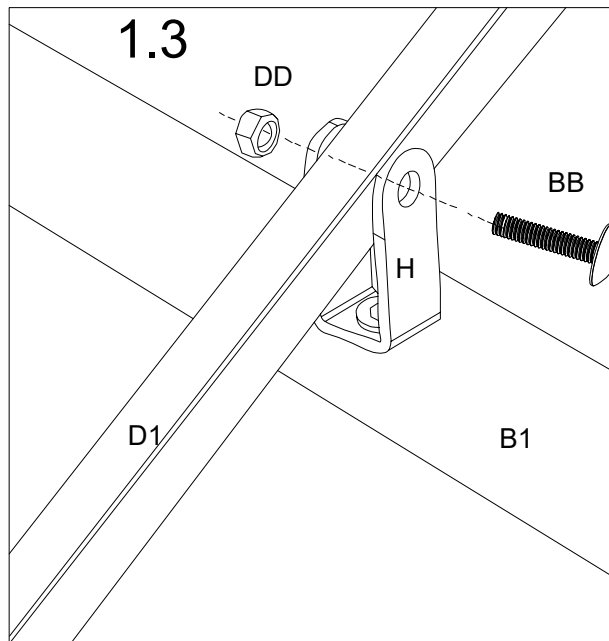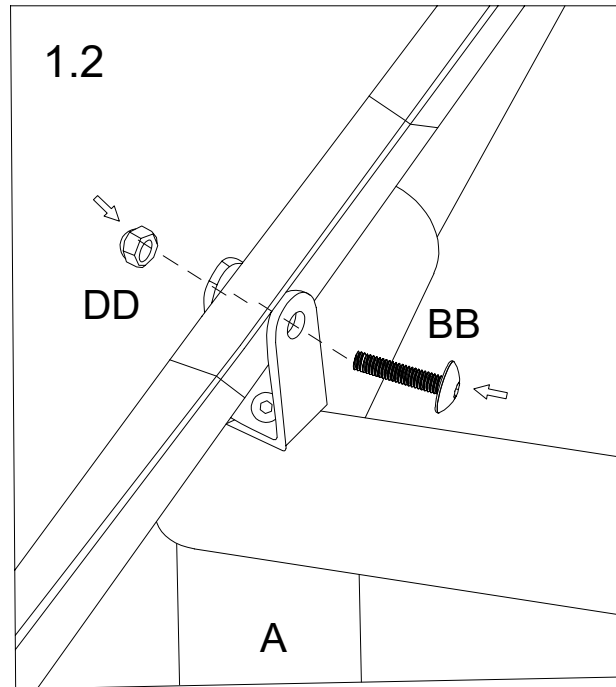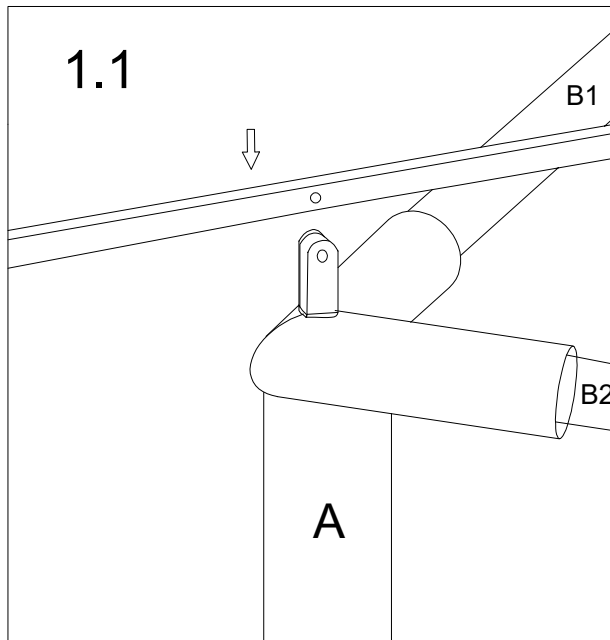



12

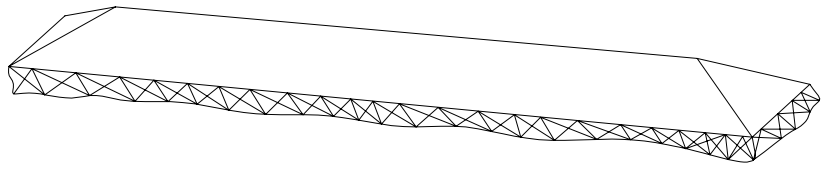


K X1

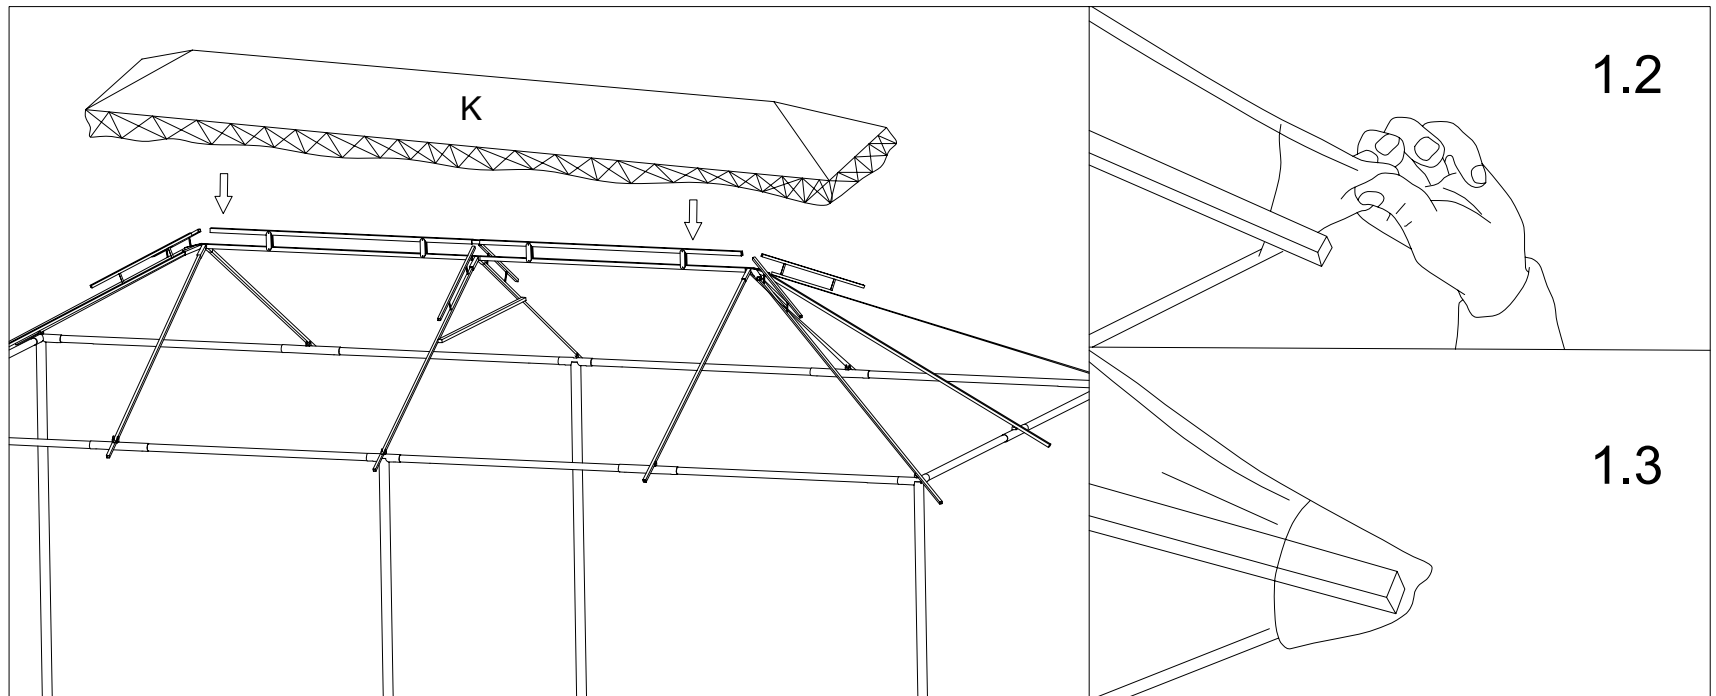

Set the small top cover K over the top frame.

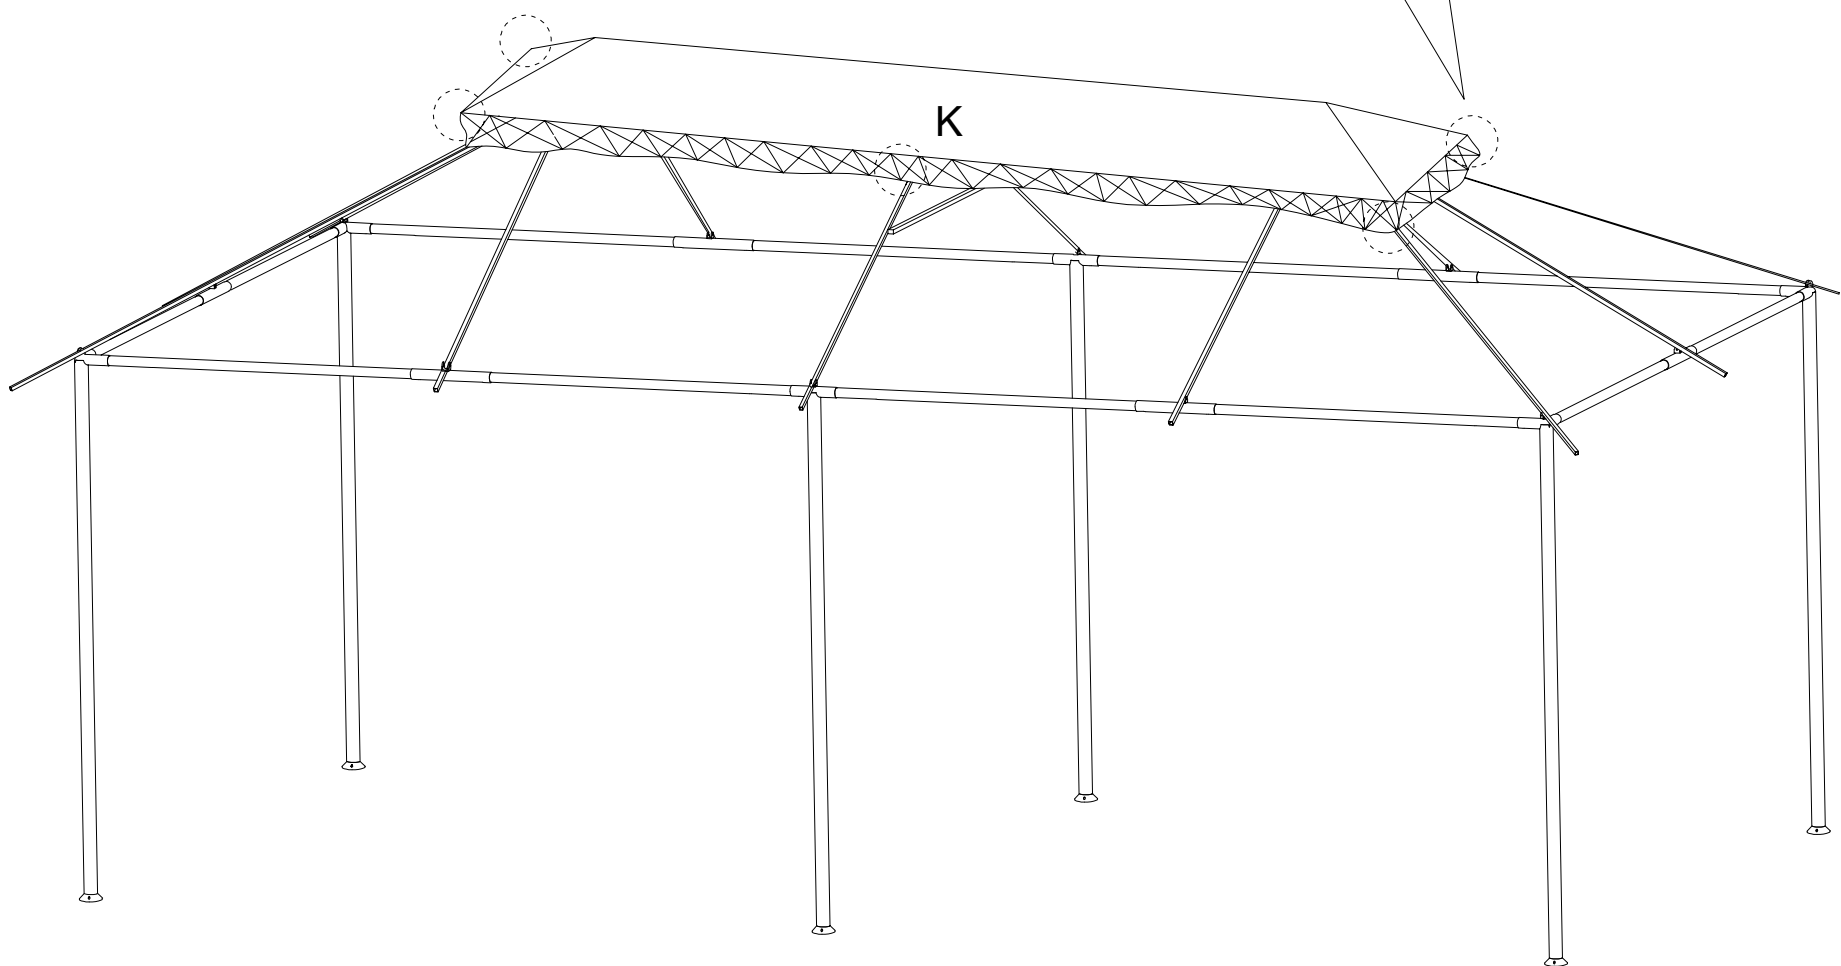


13

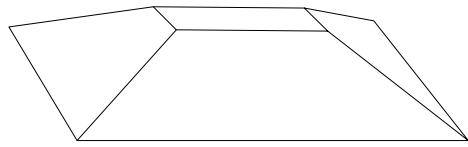



L	X1
---	----

Loose set of top cover L on the top frame.

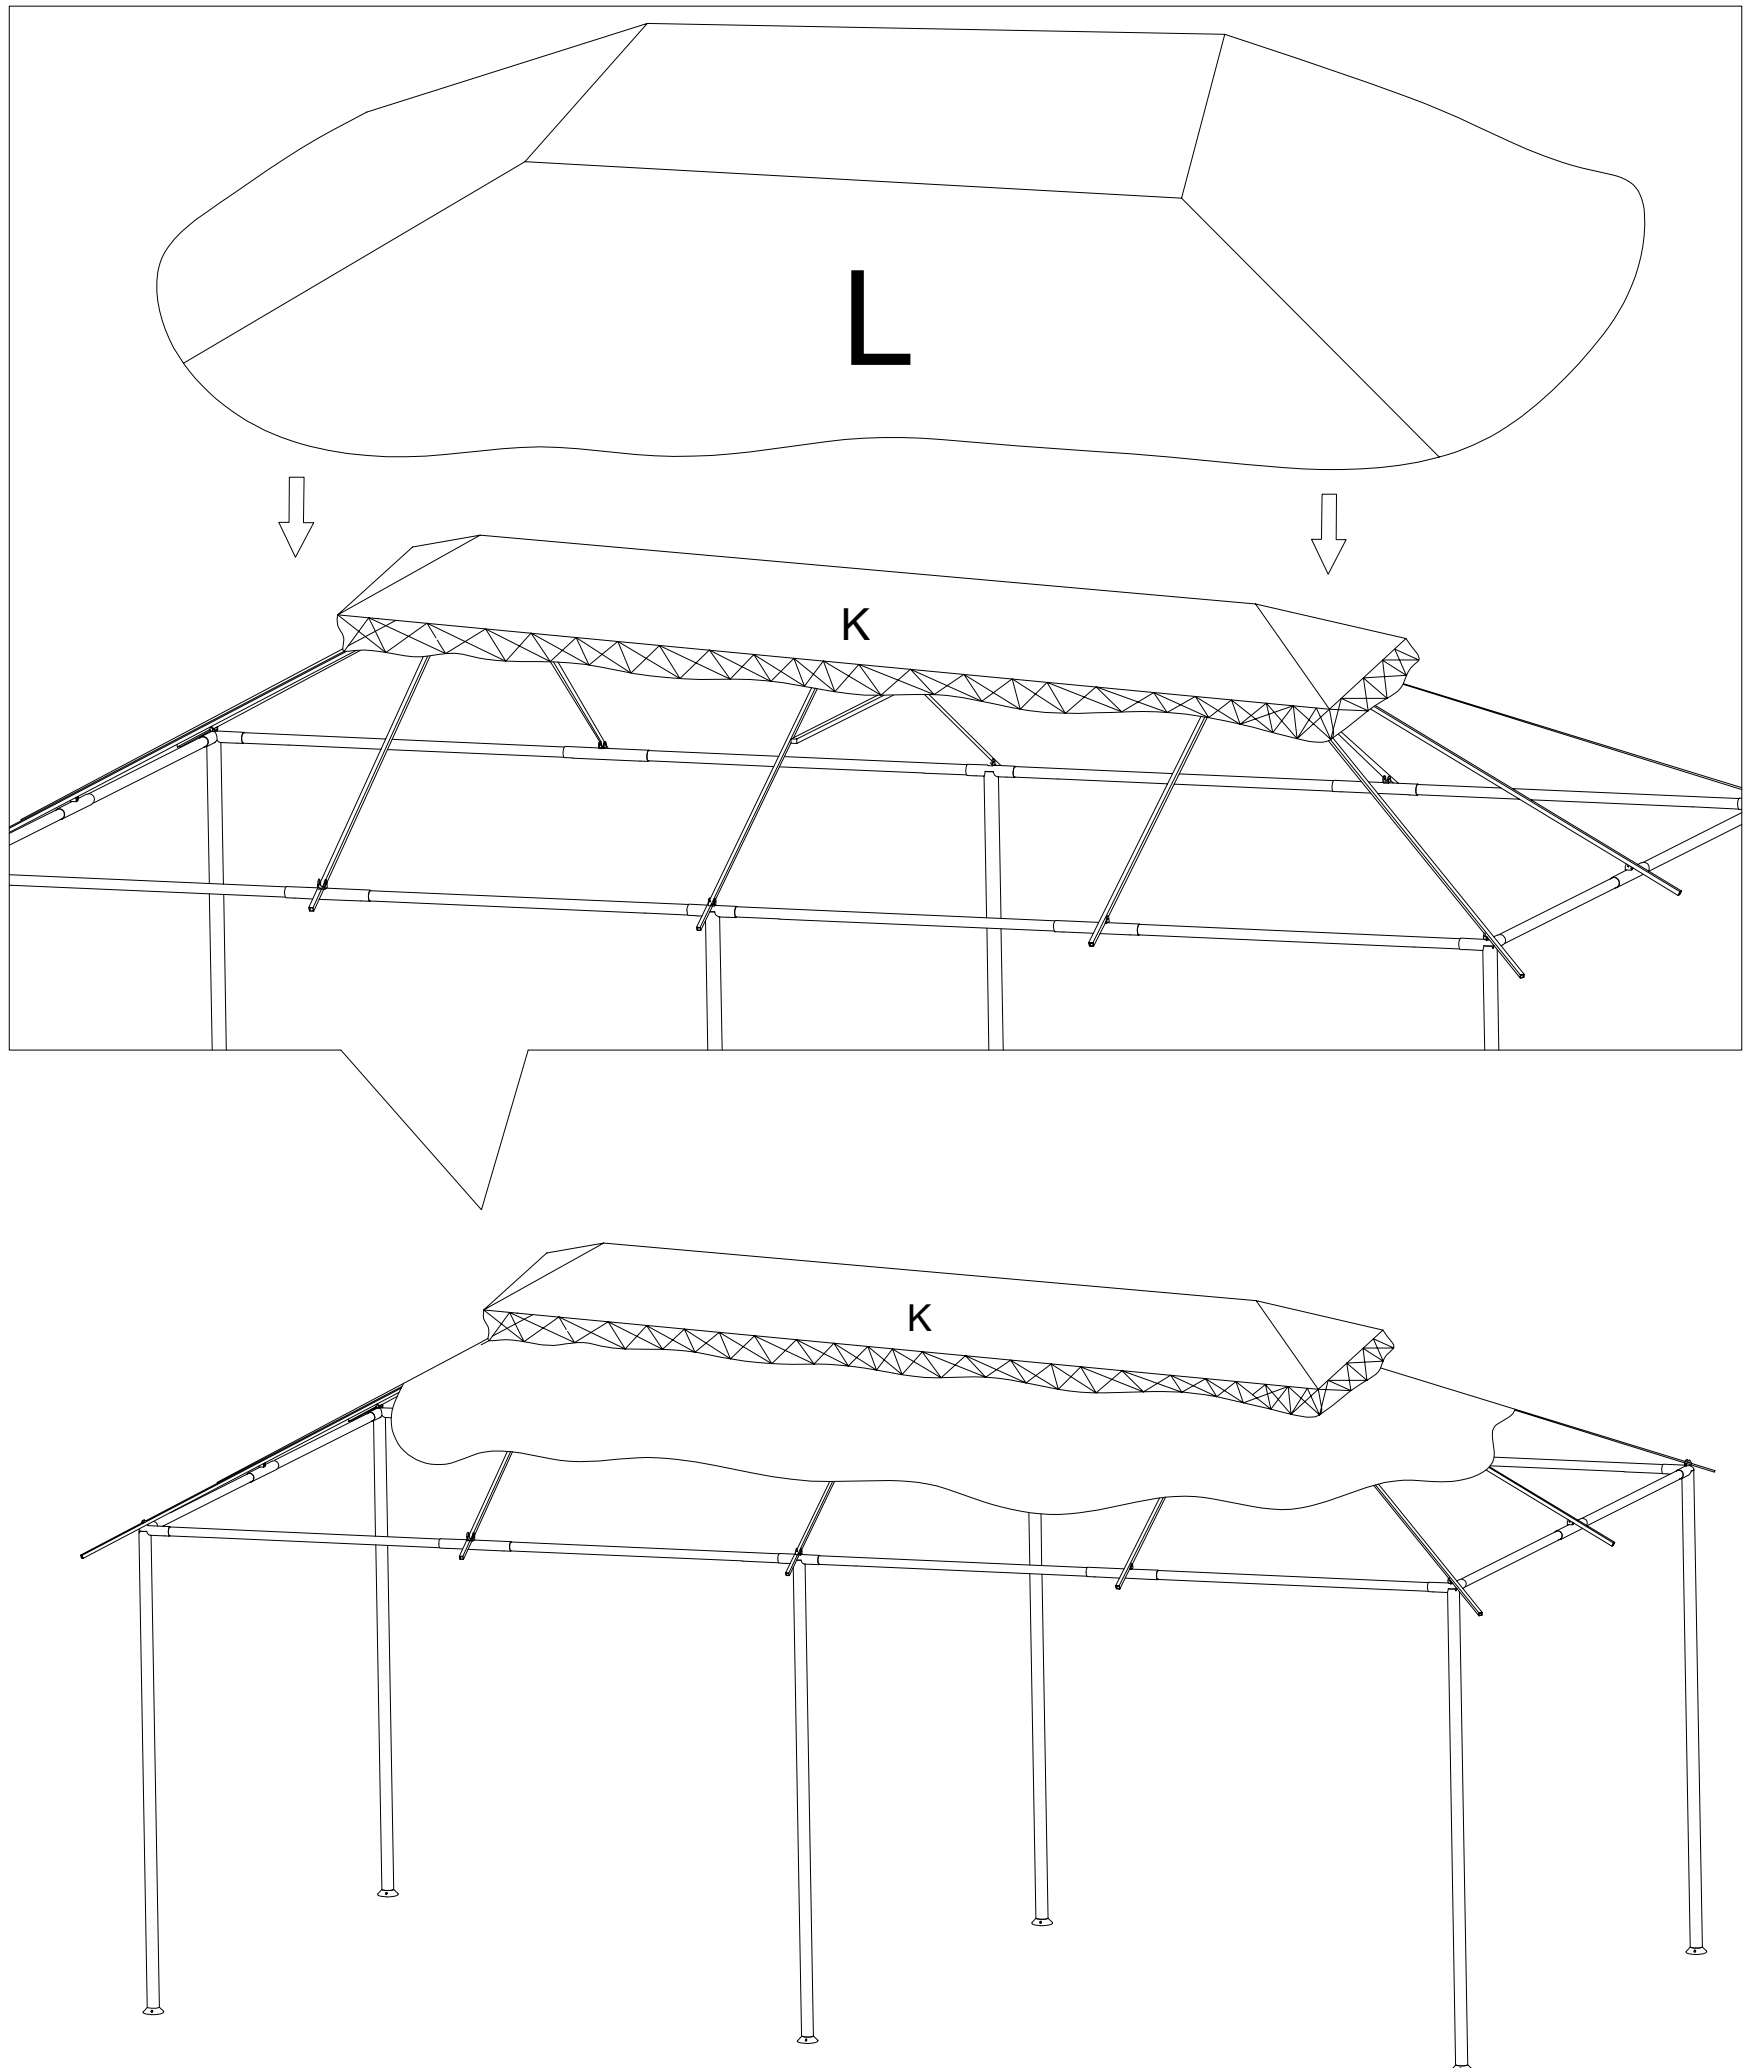




Set the top 4 sides fixed to the frame.

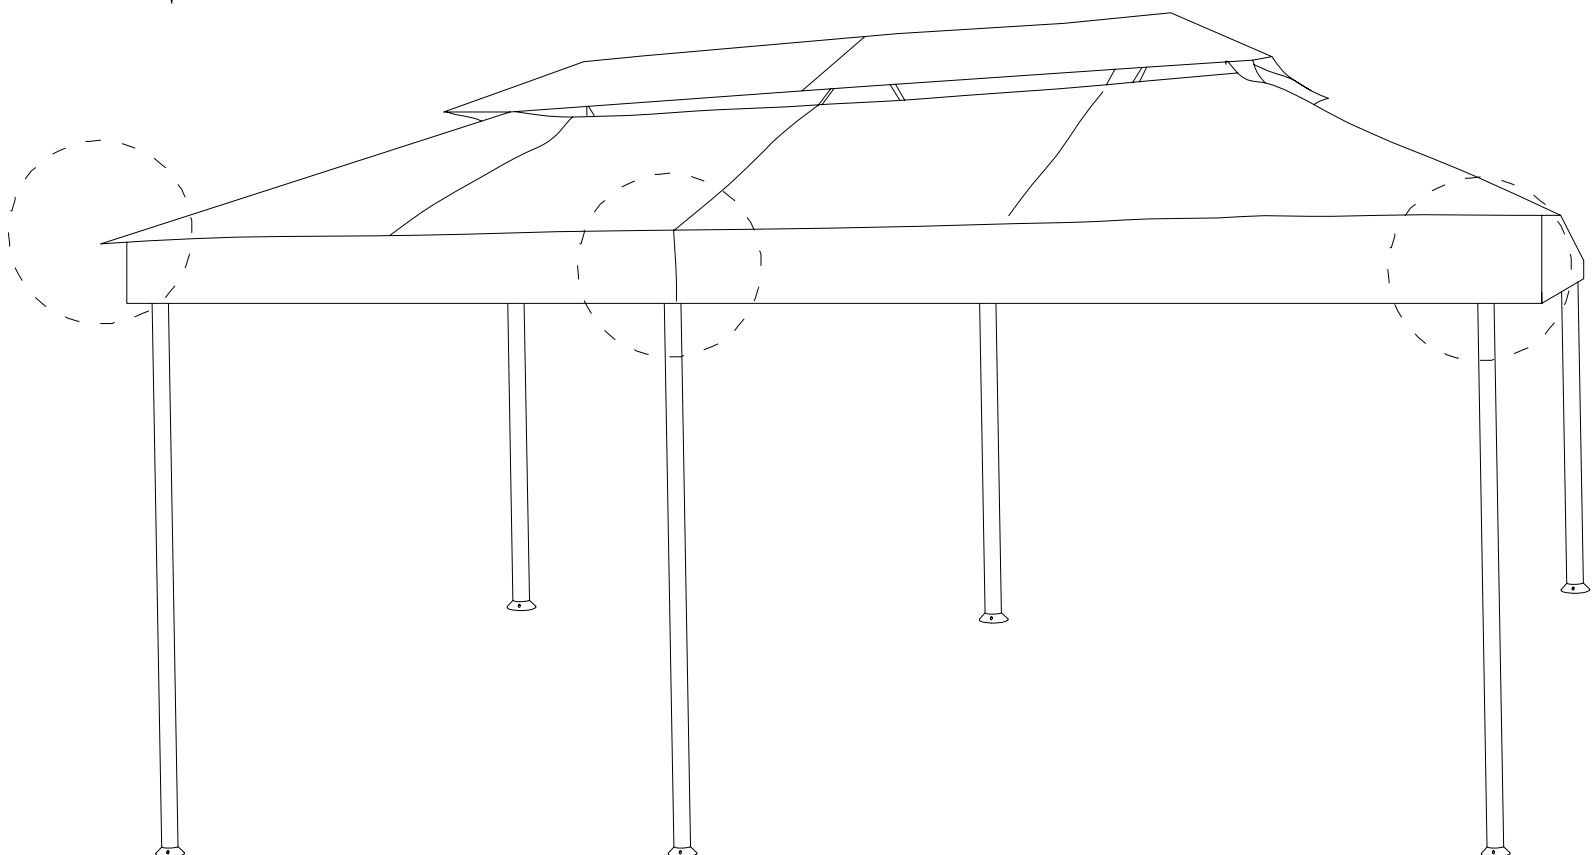

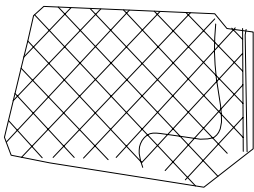


N	X4
---	----

Mosquito Mesh

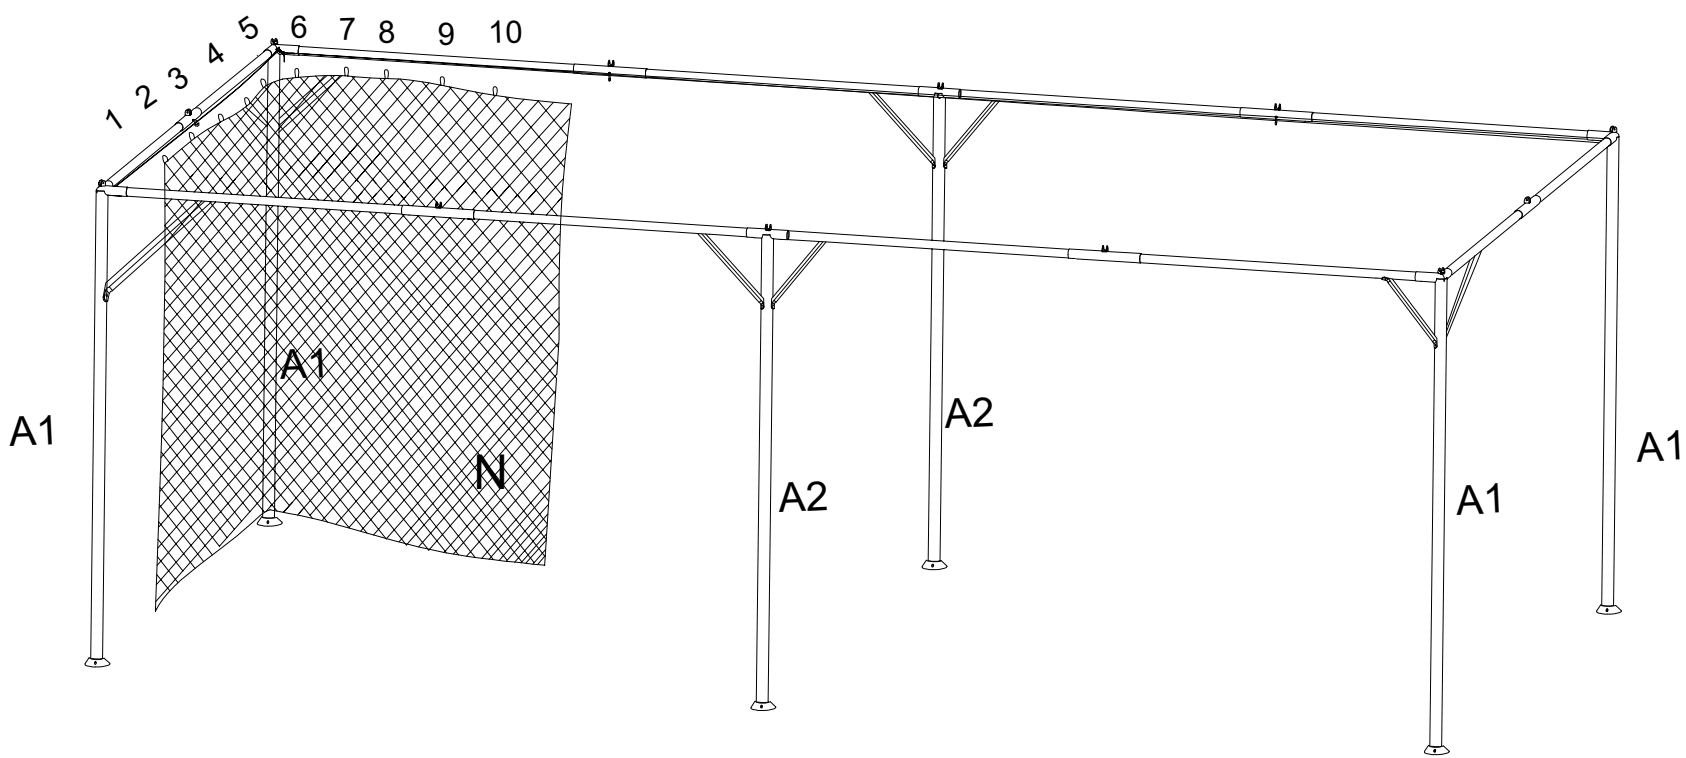
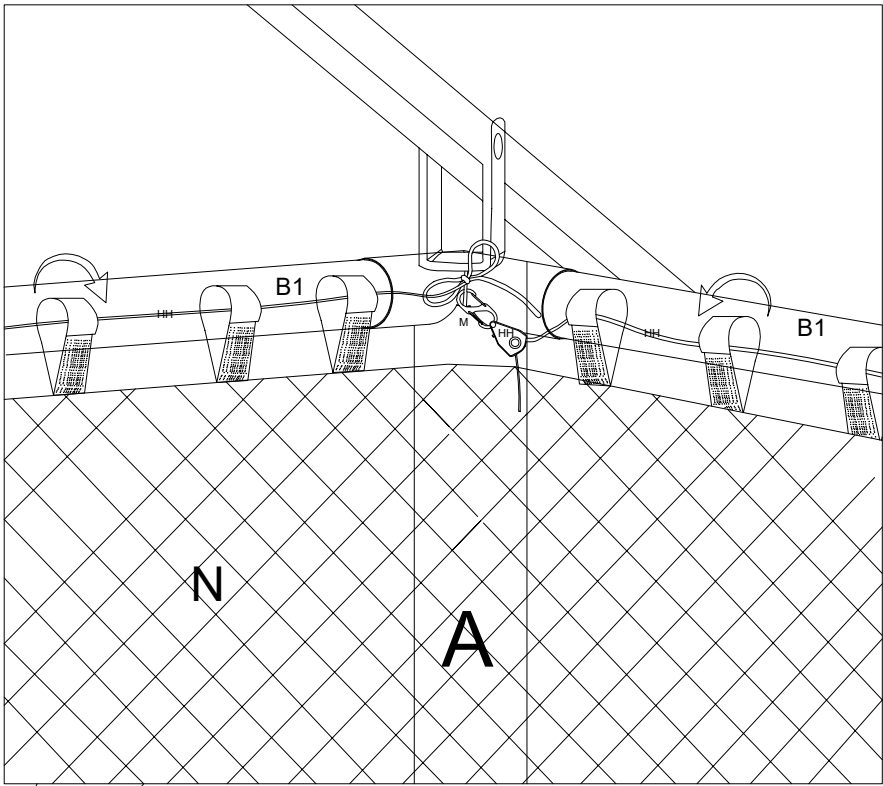
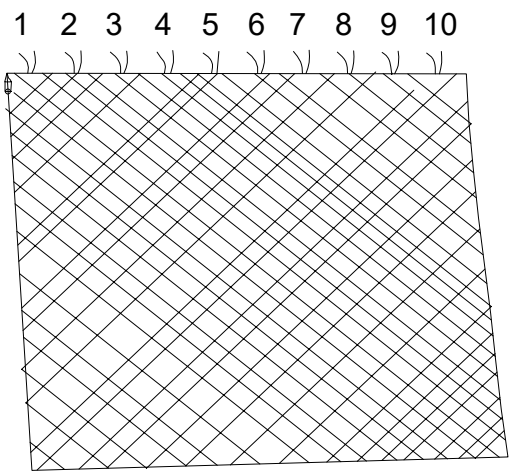


Fix it on the rope with the strap on the mosquito net.



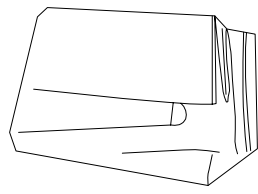



M X4

Privacy Curtain

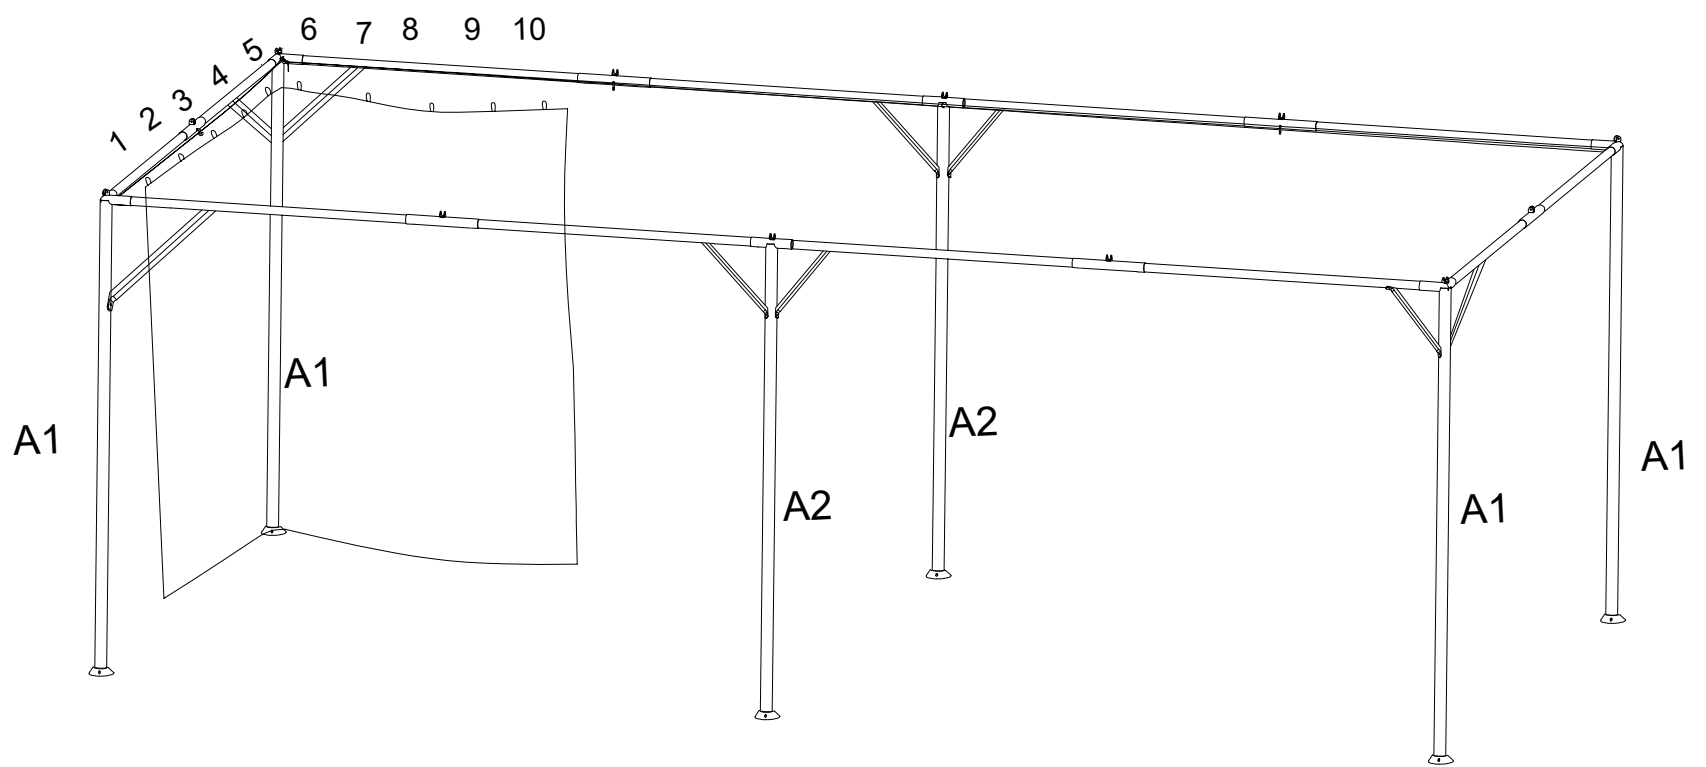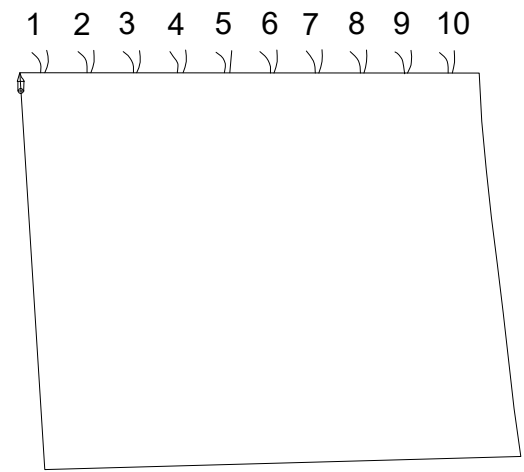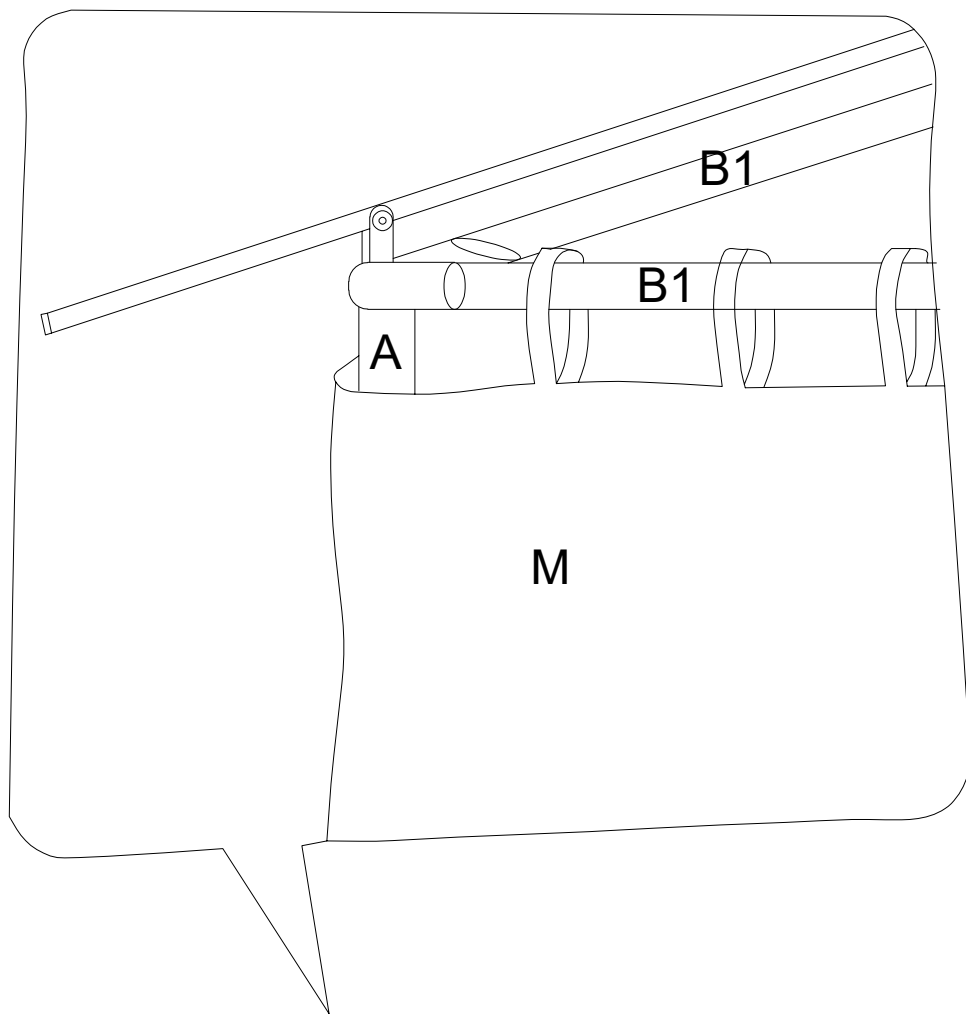

The netting N and the curtains M can be fixed to the frame A by the straps when net/curtains are not using.


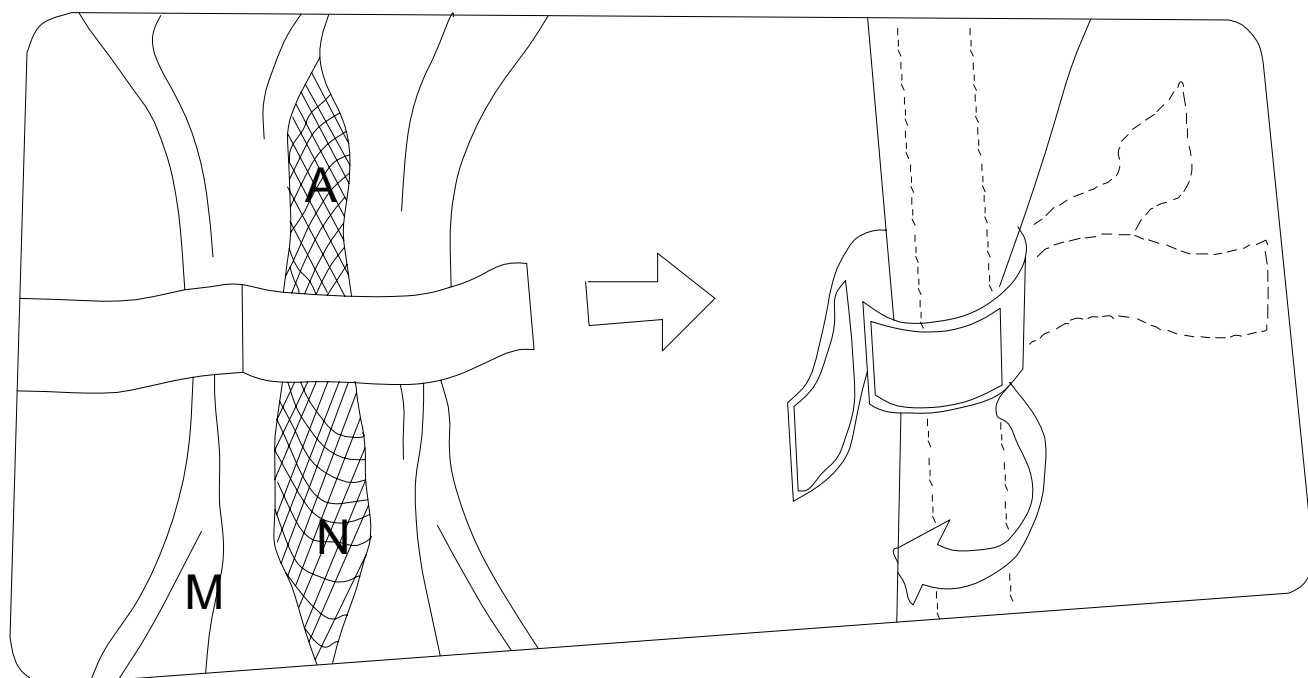
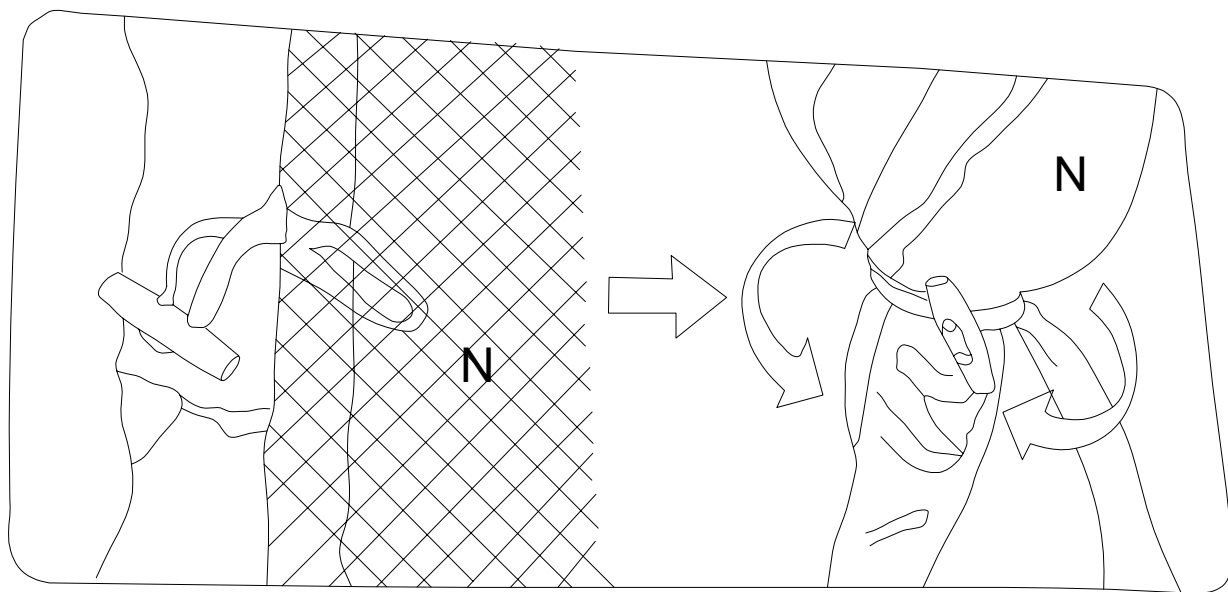
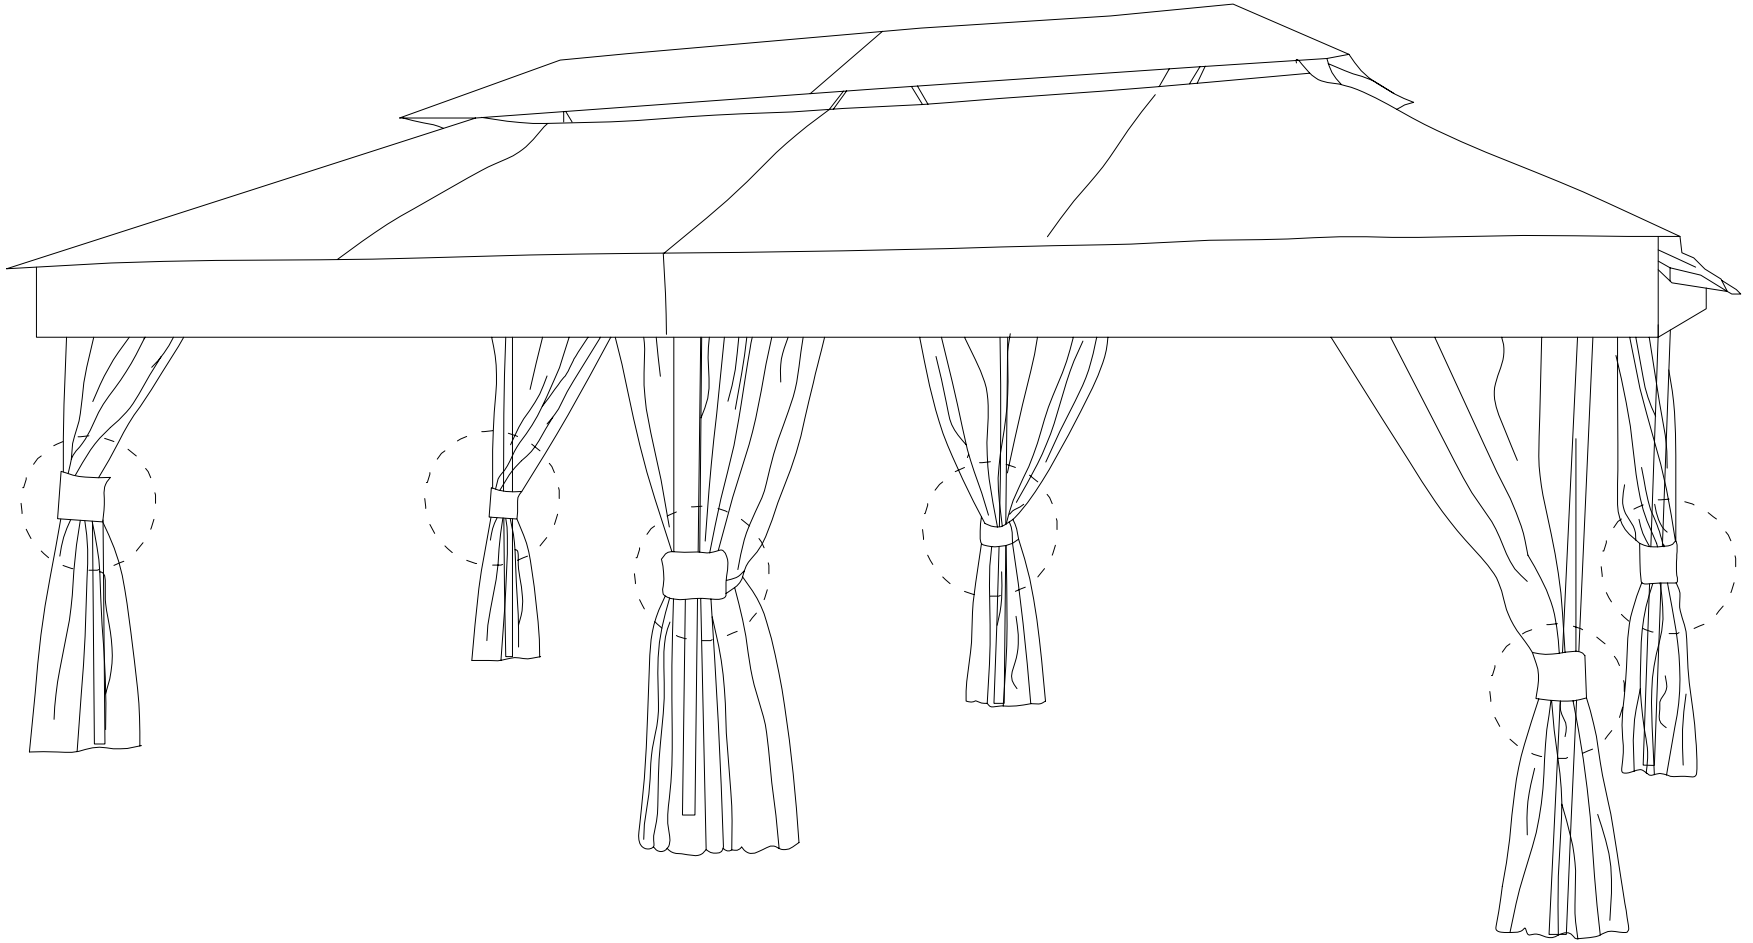





S X6




T X18

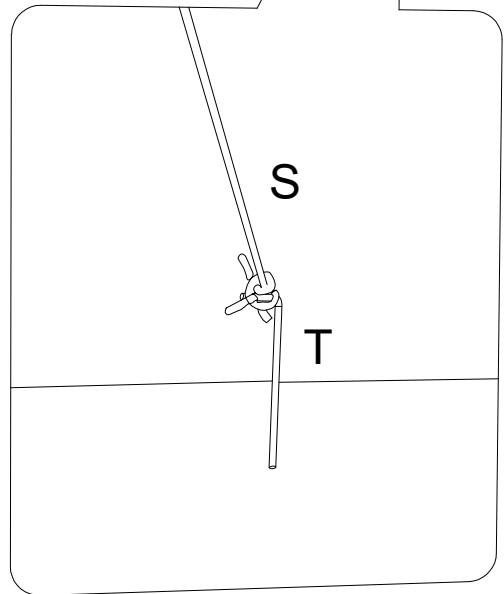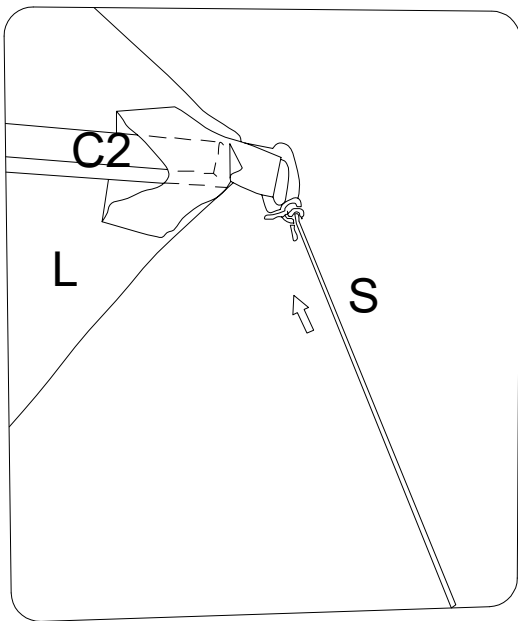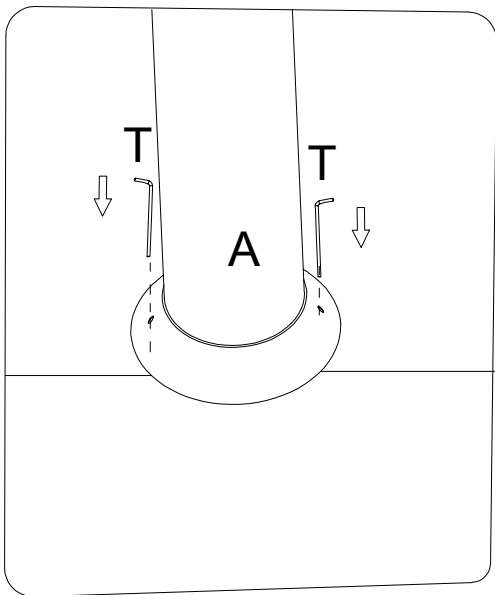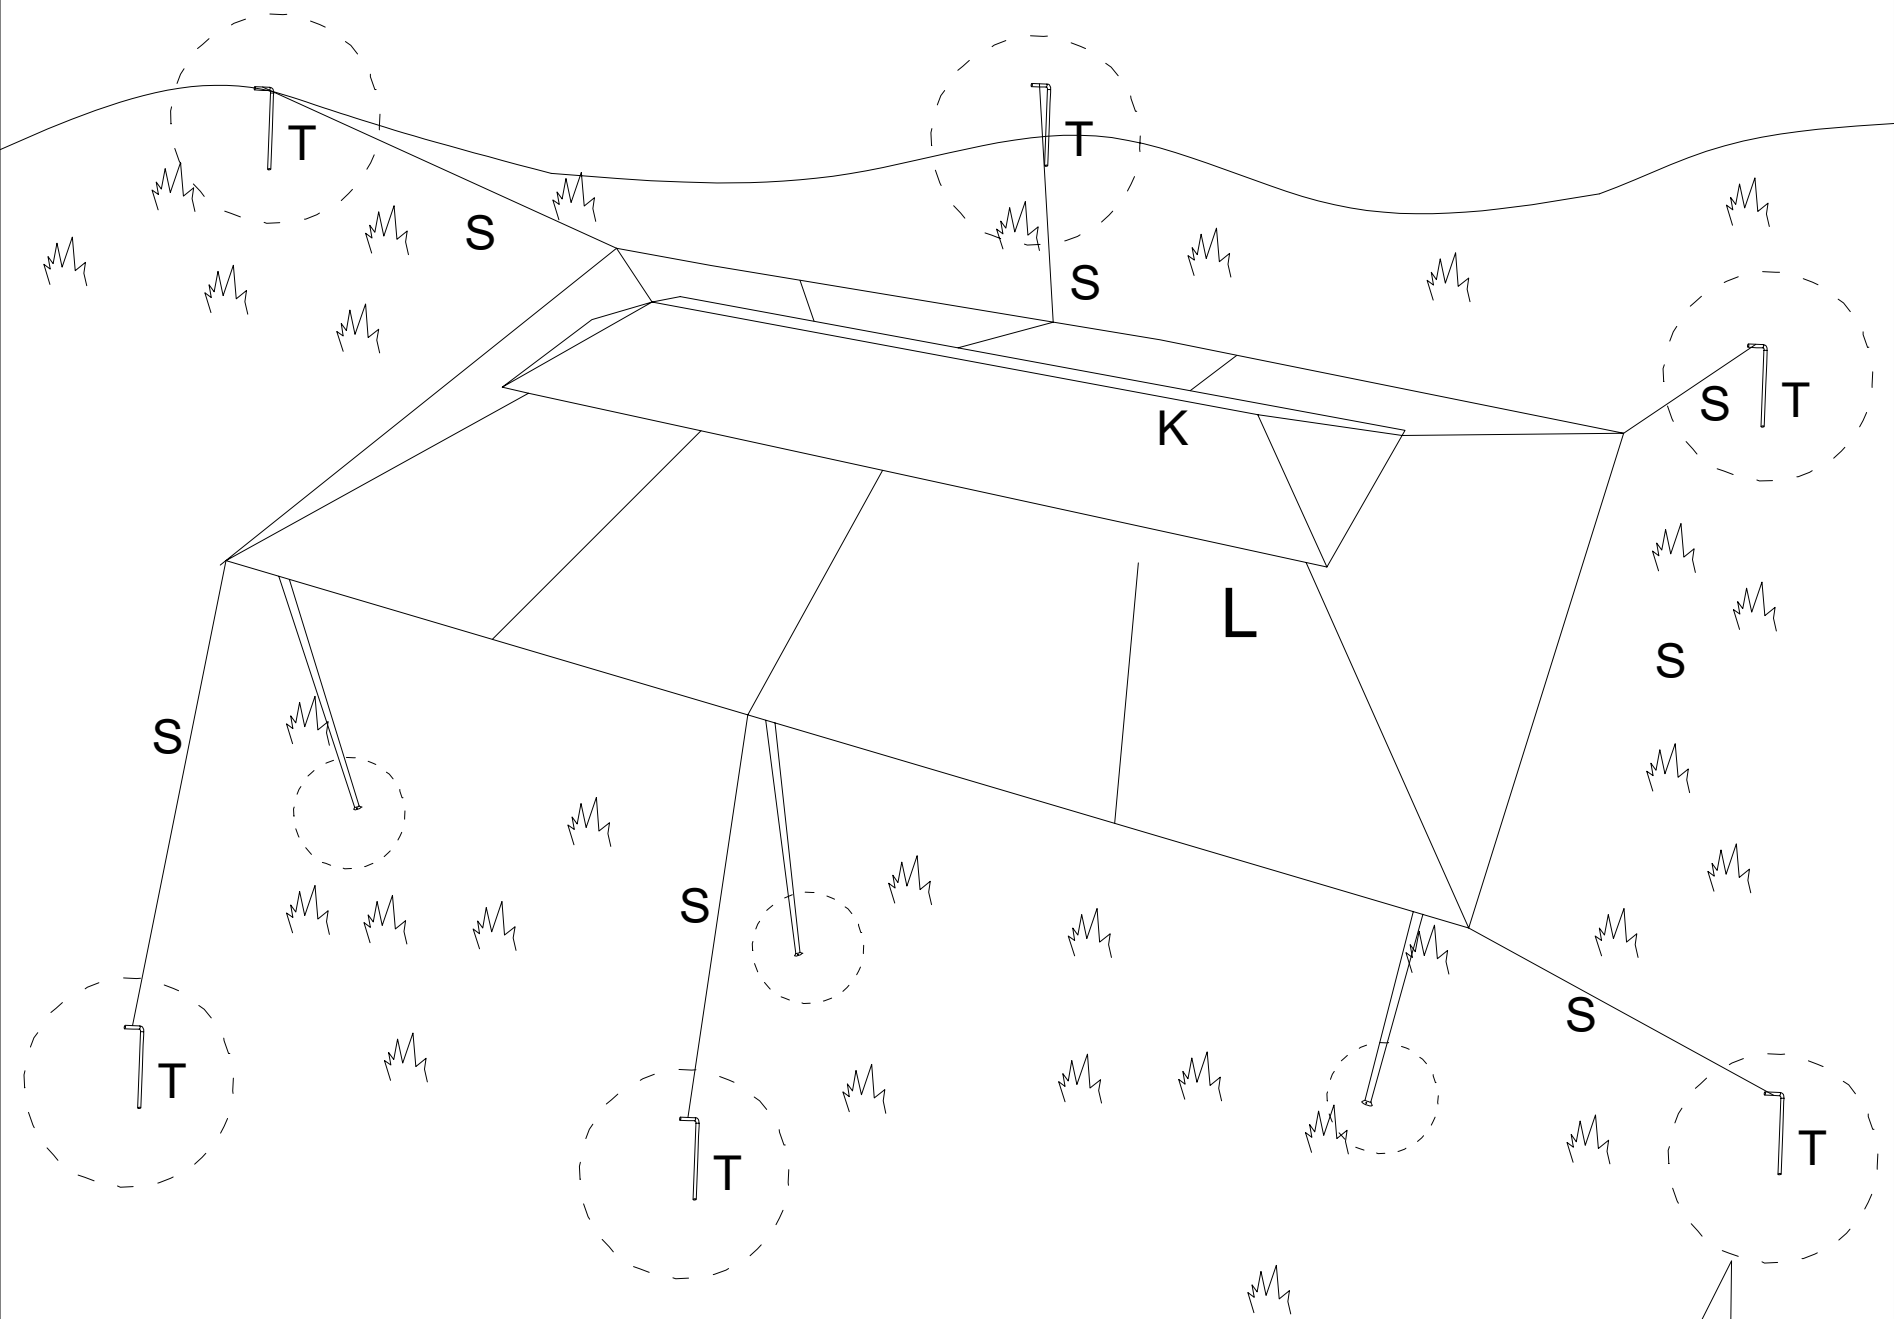

Suitable for soft ground such as grass




Q X12

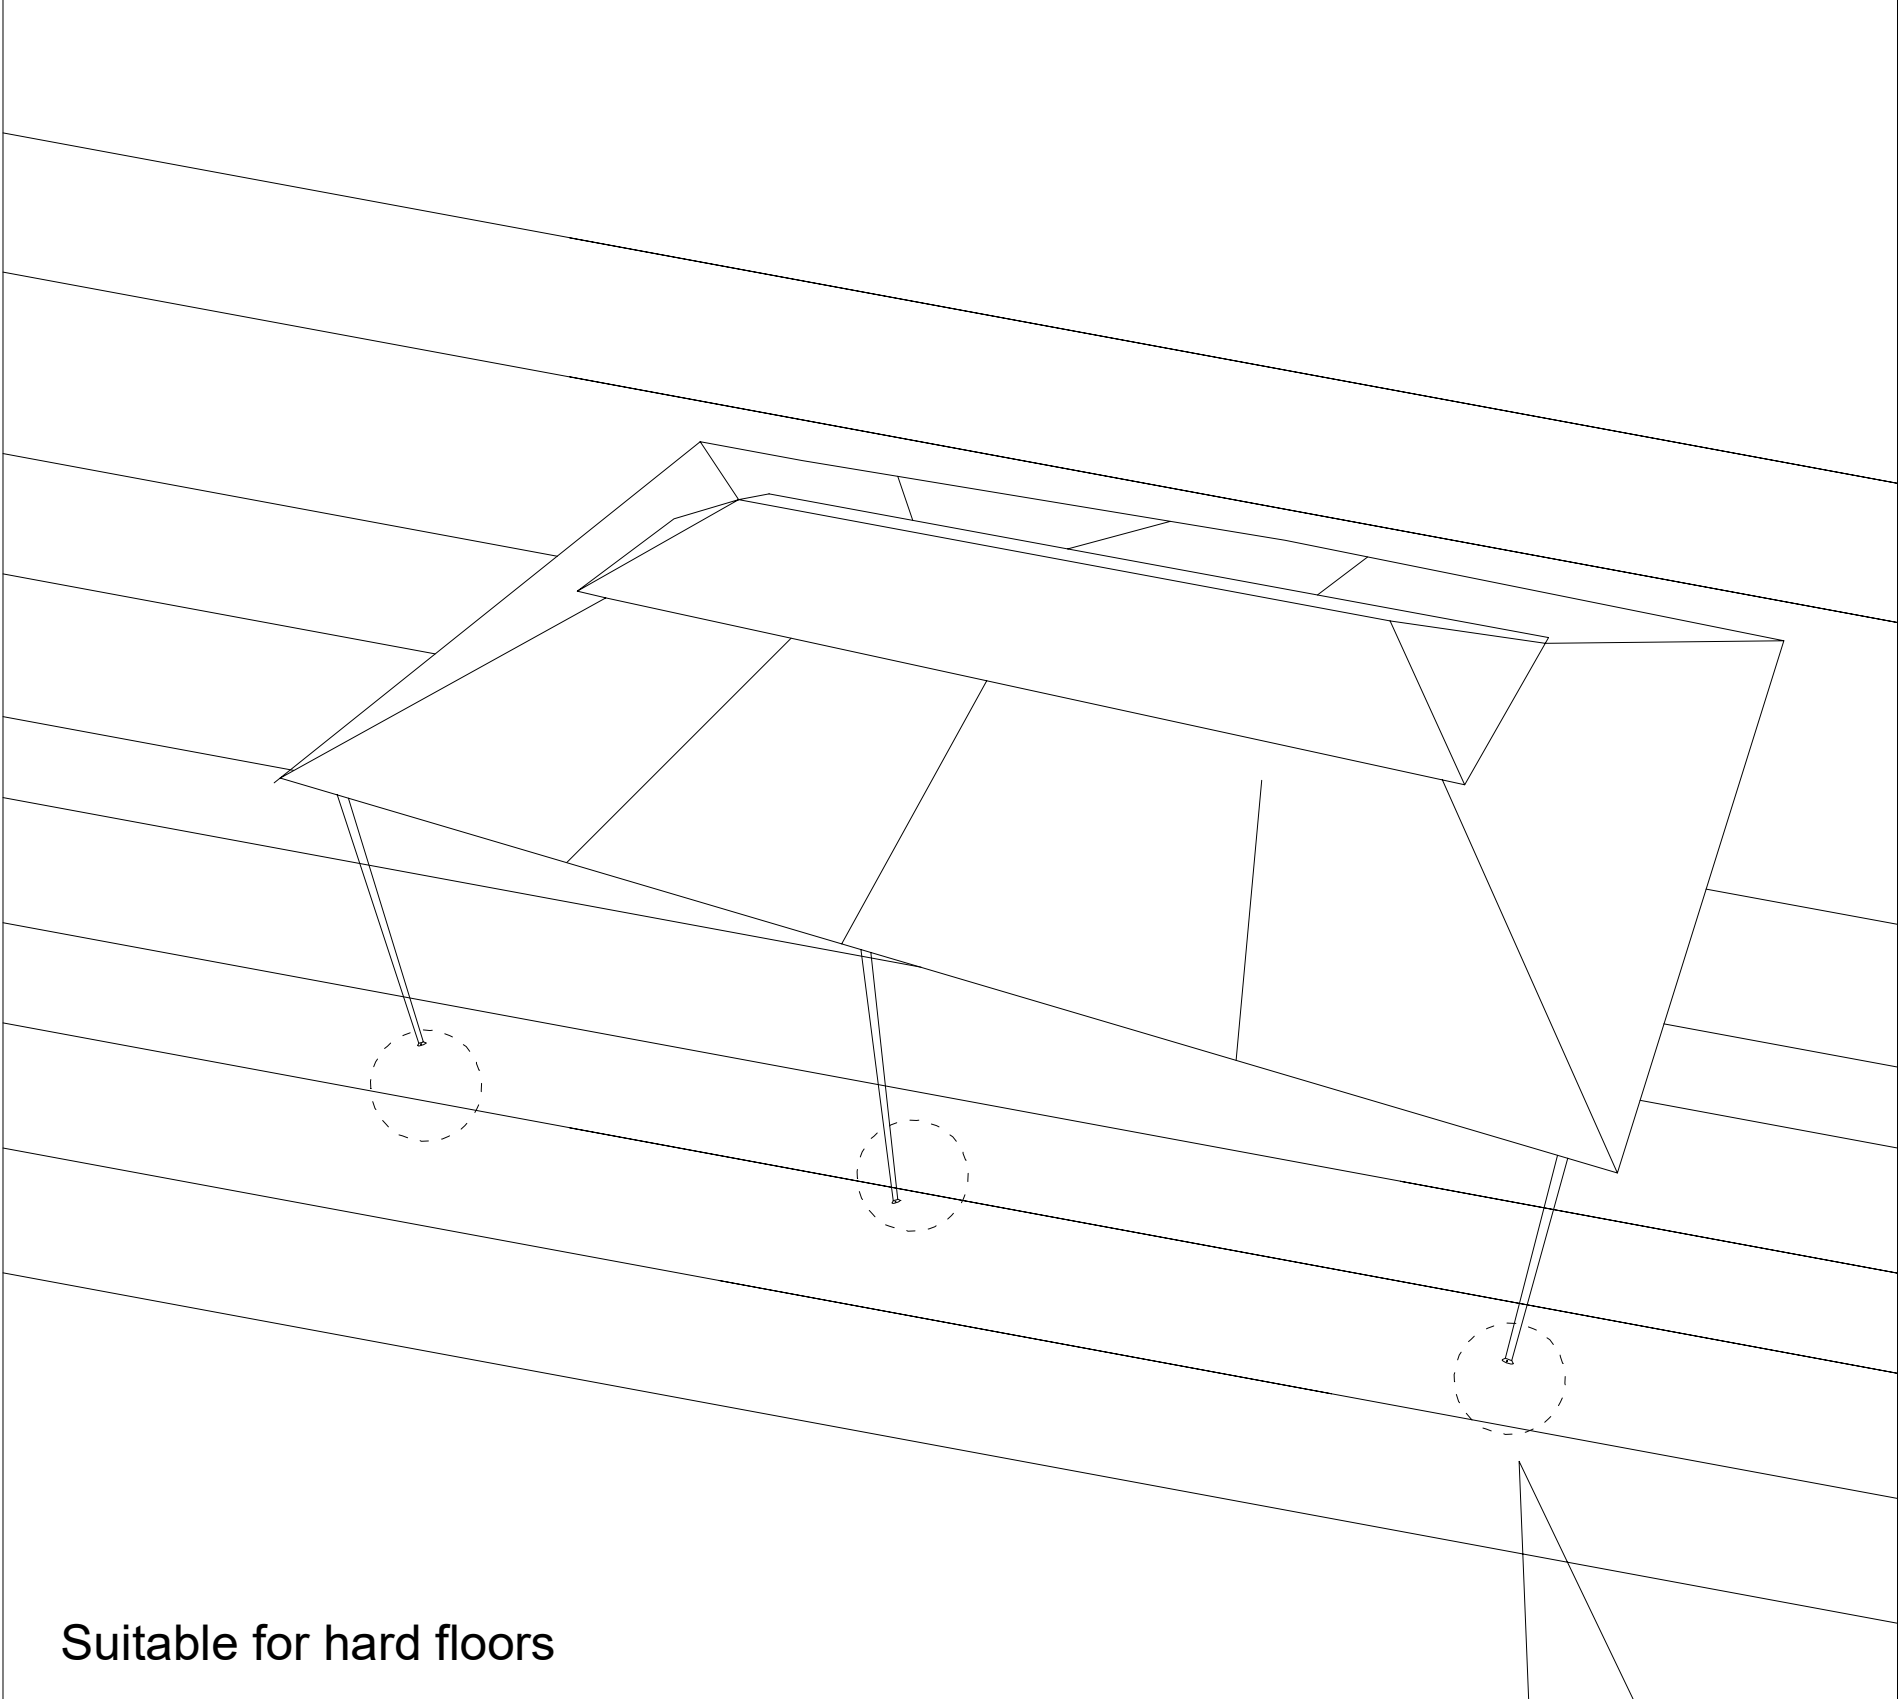


Suitable for hard floors

1.1 Ø10*70mm	1.2	1.3
------------------------	------------	------------


1.4	1.5
------------	------------



S X6



R X6

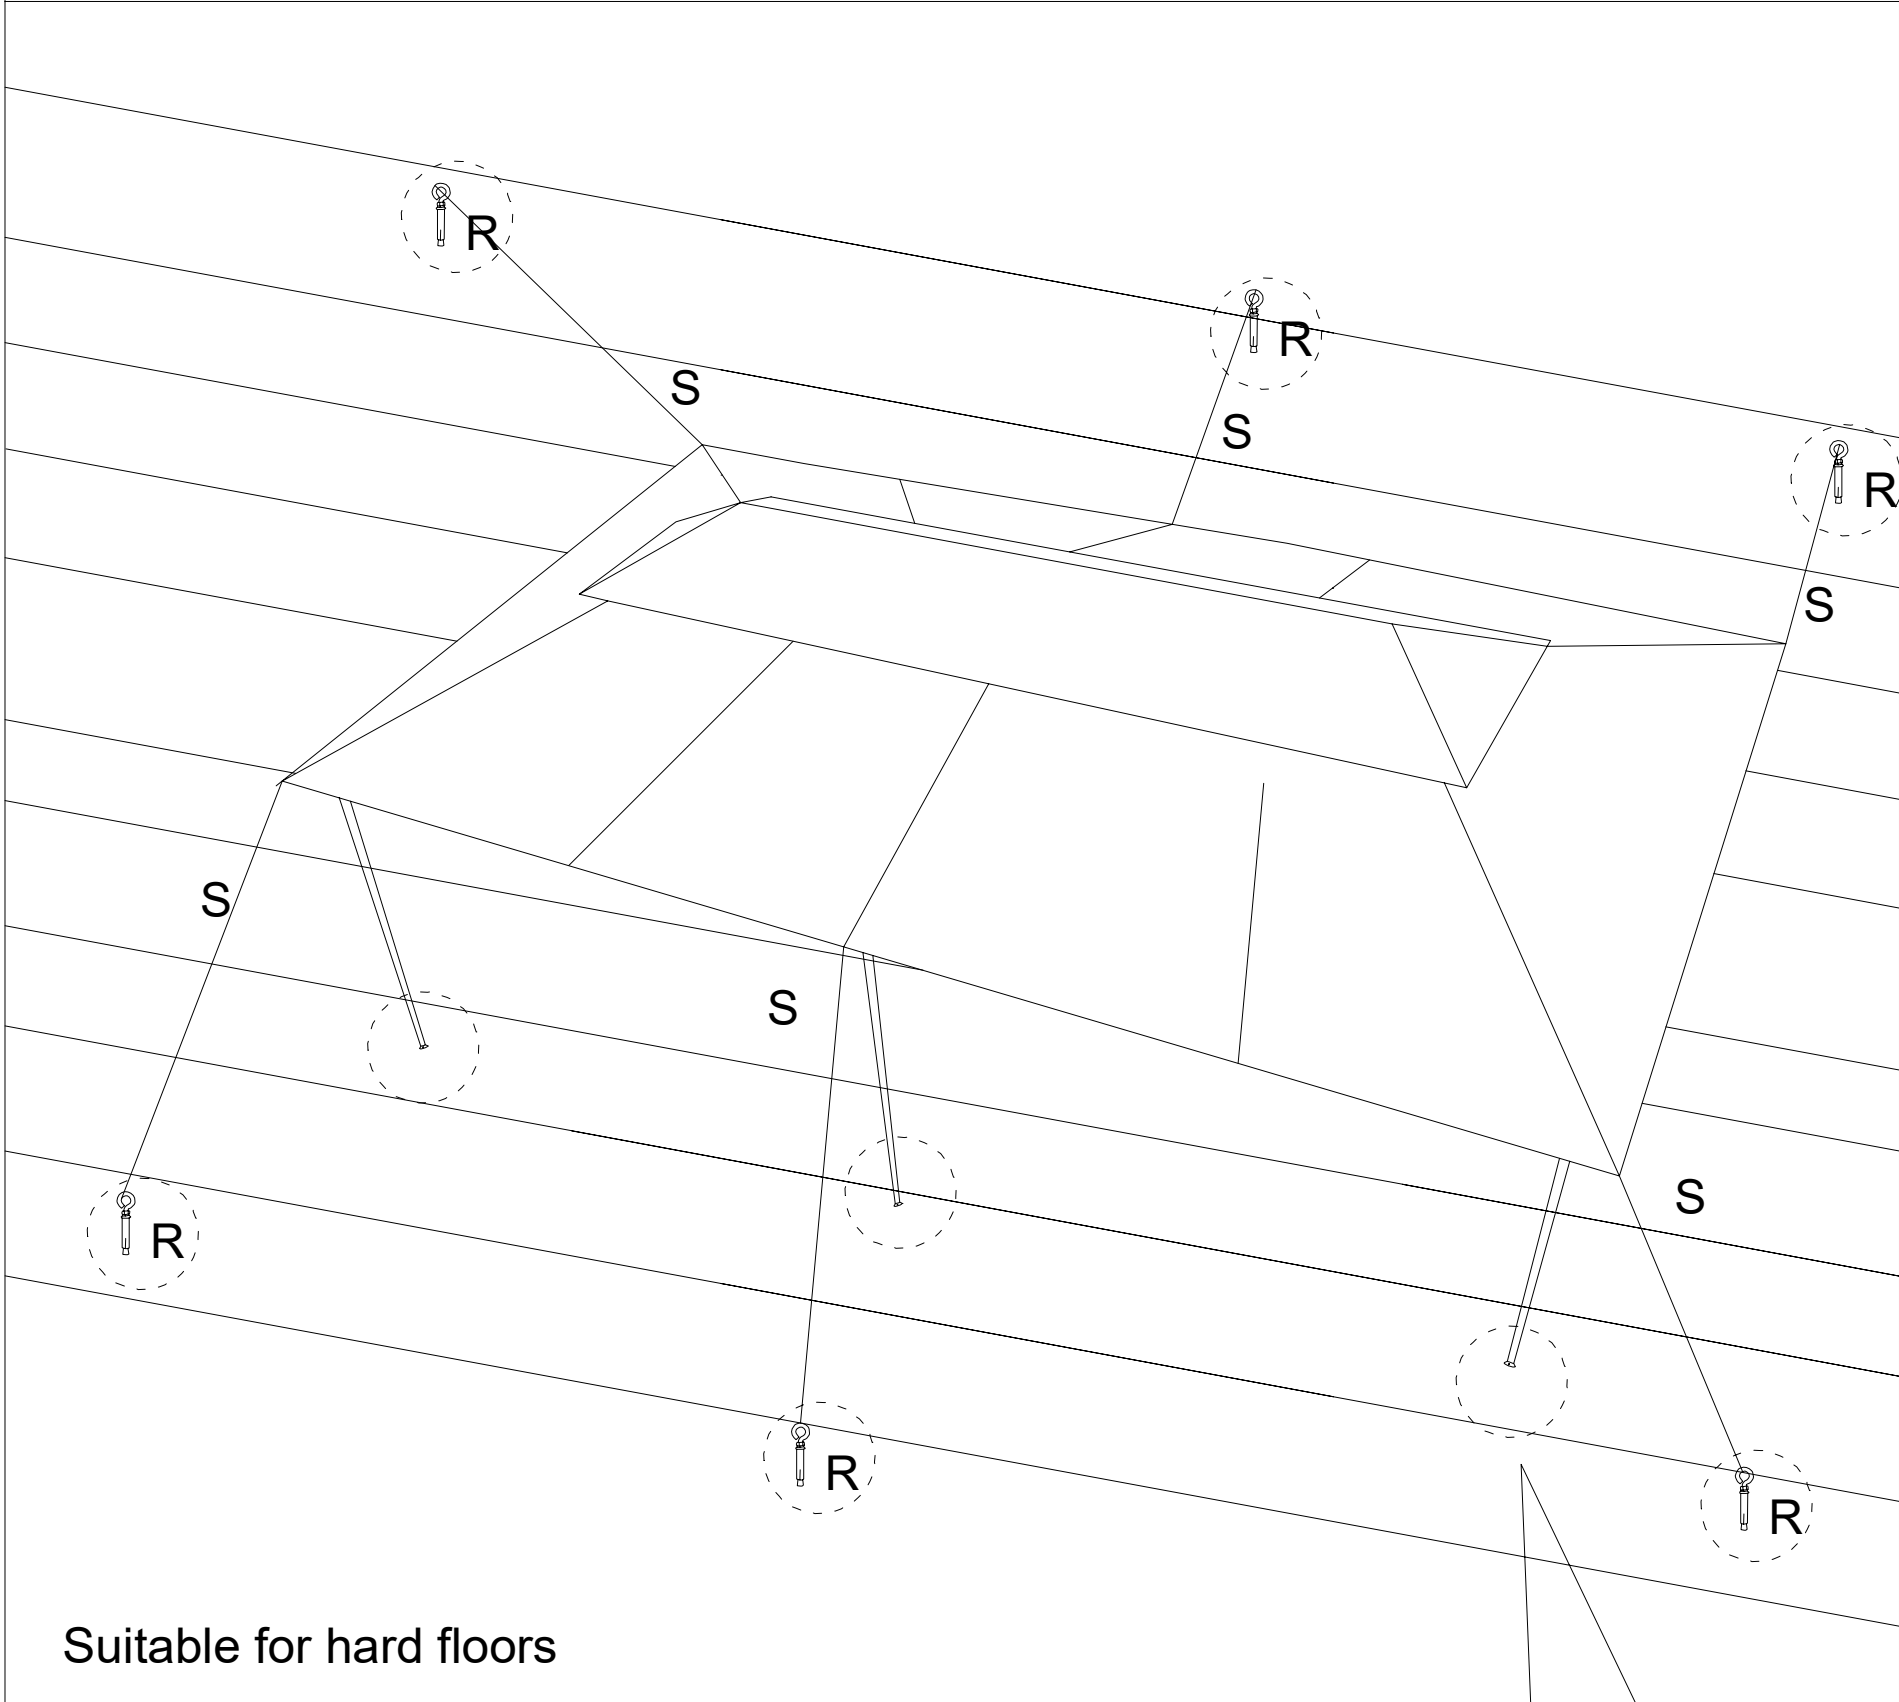

Suitable for hard floors

