

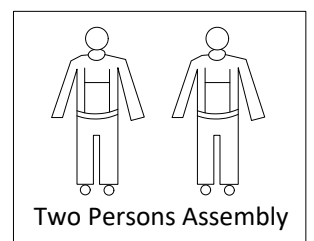
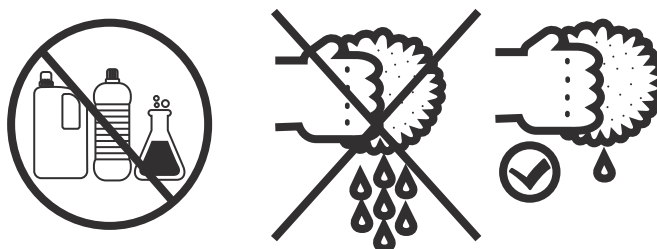
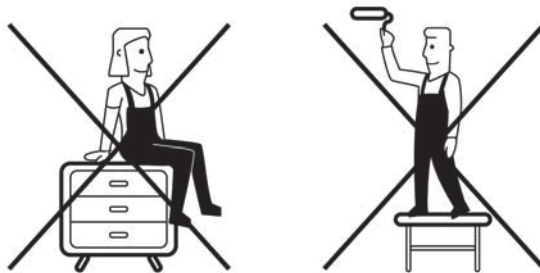



# ASSEMBLY INSTRUCTIONS

Item NO.: YJJ250018

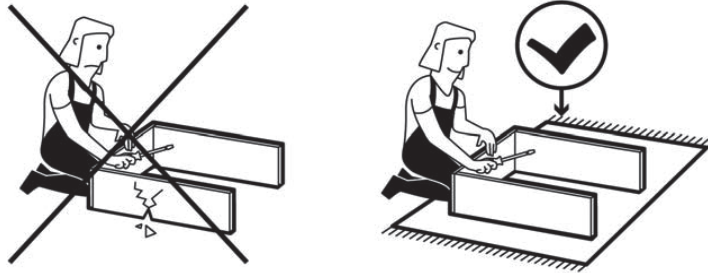

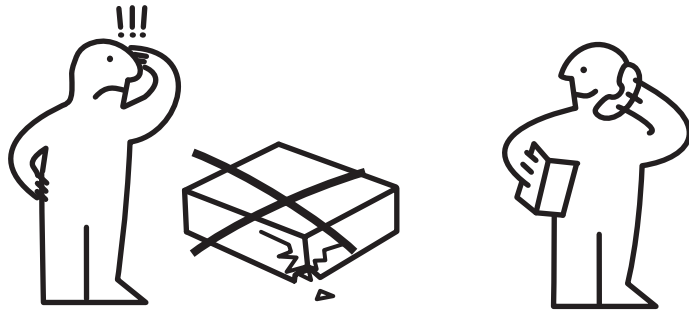


# ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

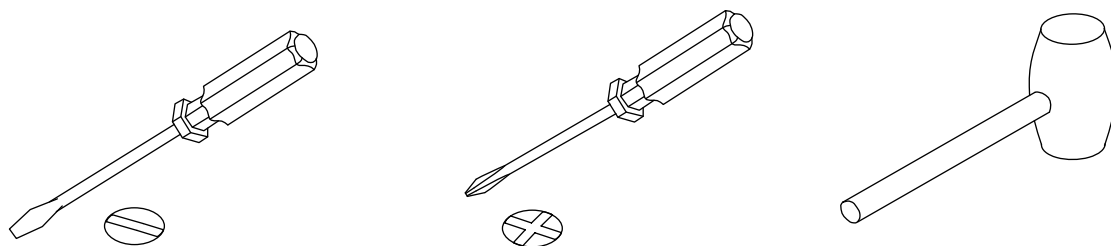

- \* Before discarding packing materials, please check all parts and hardware are presented.
- \* Please follow the instructions closely.
- \* After few days of initial assembly, the product may have acclimated to new environment, please tighten all hardware again.




## Dowel Installation

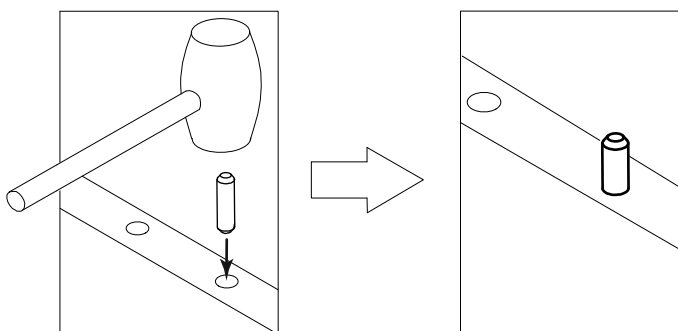

Gently tap dowel into hole with rubber mallet.





## CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten

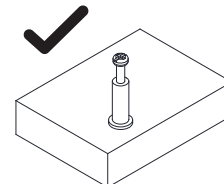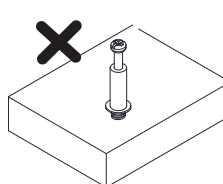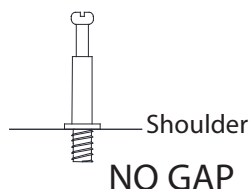


## WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT  
BEFORE YOU INSERT CONNECTING CAM-PILLAR  
TURN CLOCKWISE UNTIL SECURE

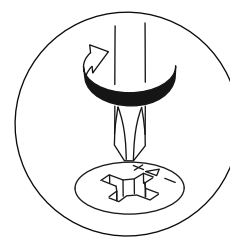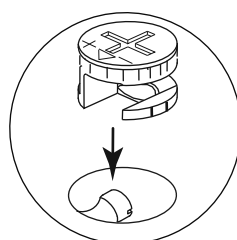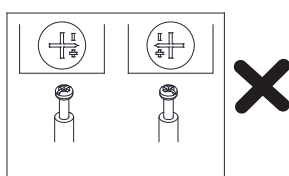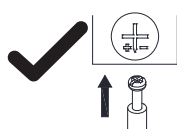

Laying out all the parts and hardware and identifying each part as shown below. It may help you when you assemble the item.

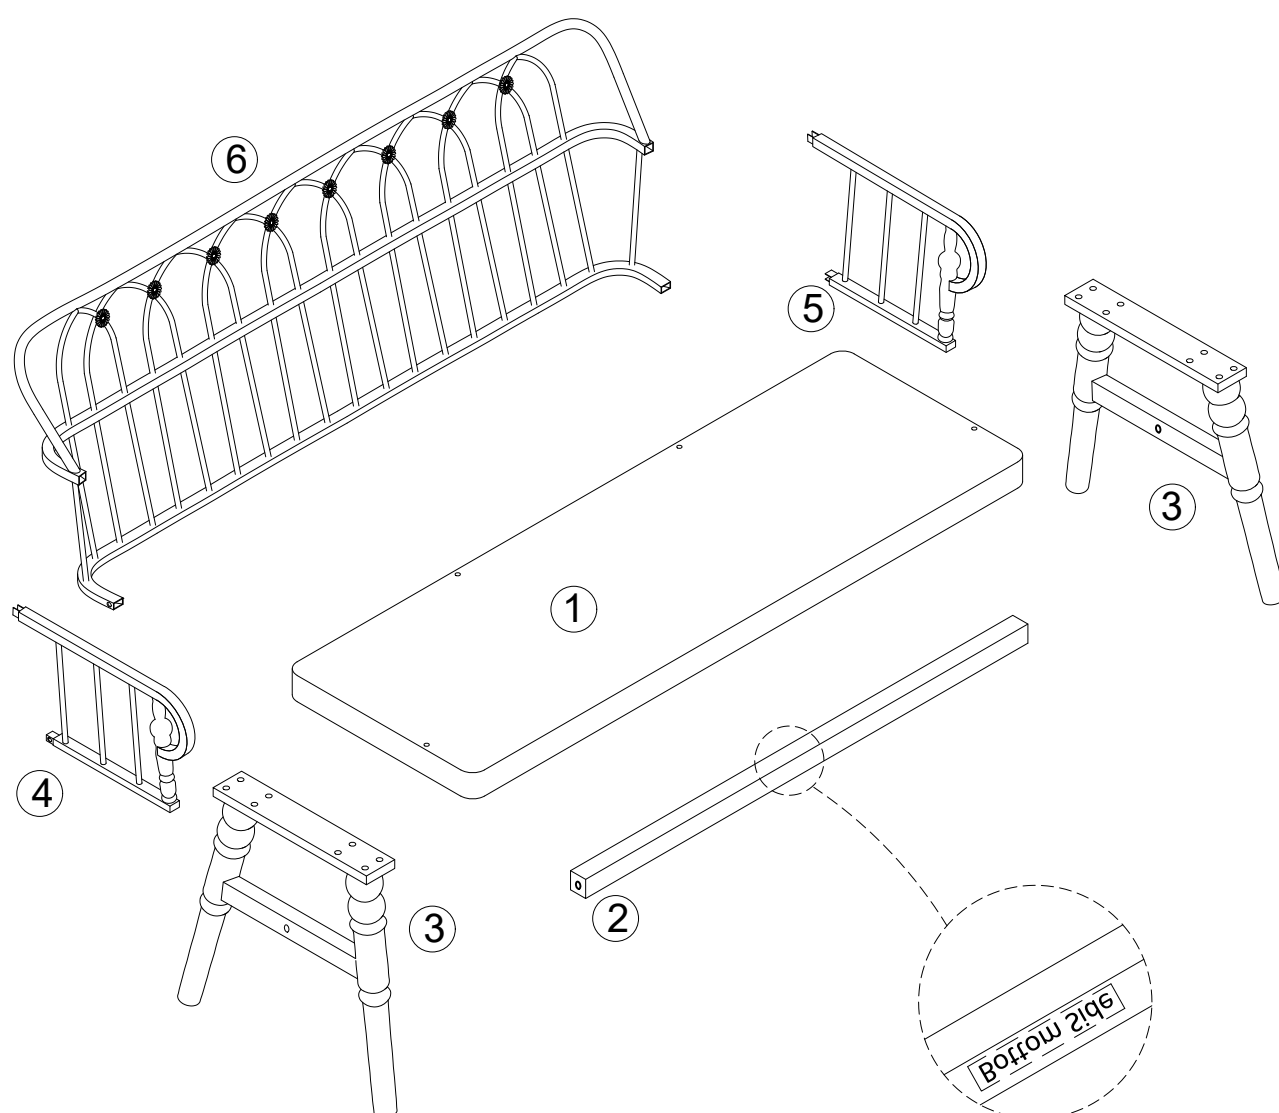

① × 1

② × 1

③ × 2


④ × 1


⑤ × 1


⑥ × 1

|                                                                                   |              |
|-----------------------------------------------------------------------------------|--------------|
| A                                                                                 | ×16+1(Spare) |
|  |              |
| M6×35mm                                                                           |              |

|                                                                                   |              |
|-----------------------------------------------------------------------------------|--------------|
| B                                                                                 | ×26+2(Spare) |
|  |              |
| ø17×8mm                                                                           |              |


|                                                                                   |    |
|-----------------------------------------------------------------------------------|----|
| C                                                                                 | ×4 |
|  |    |
| M6×12mm                                                                           |    |

|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| D                                                                                   | ×2 |
|  |    |
| M6×40mm                                                                             |    |





|                                                                                     |    |
|-------------------------------------------------------------------------------------|----|
| E                                                                                   | ×1 |
|  |    |
| M4                                                                                  |    |

|                                                                                   |    |
|-----------------------------------------------------------------------------------|----|
| F                                                                                 | ×4 |
|  |    |
| M6×60mm                                                                           |    |


1

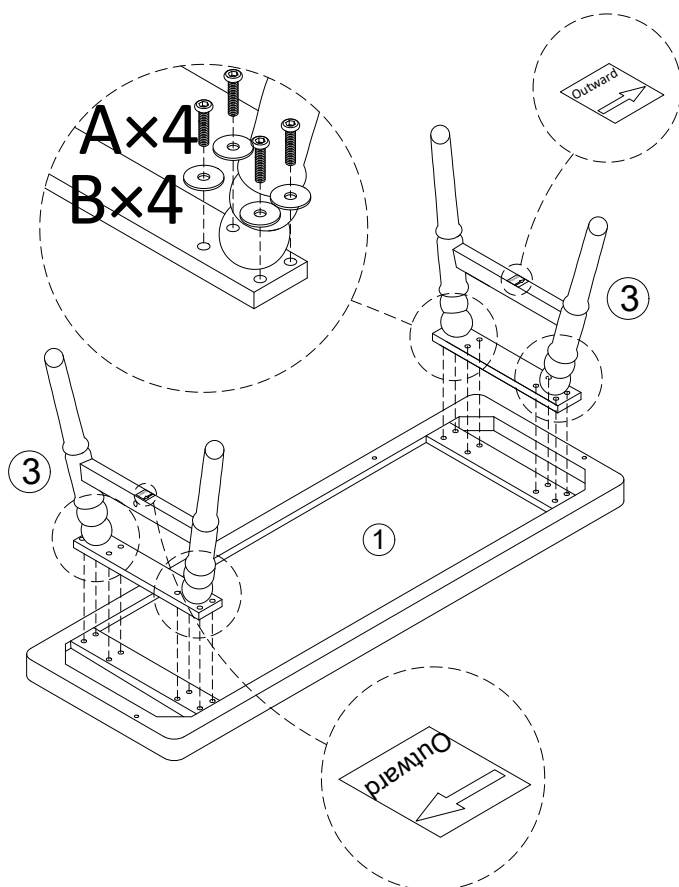




Note: after you complete the legs assembly in this step, please check the gestures of the legs, if the legs are tilted outward as shown below, it is correct, then going to next step.

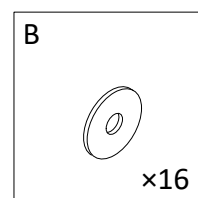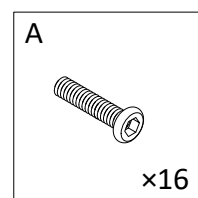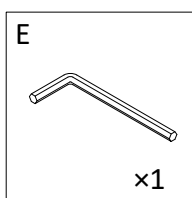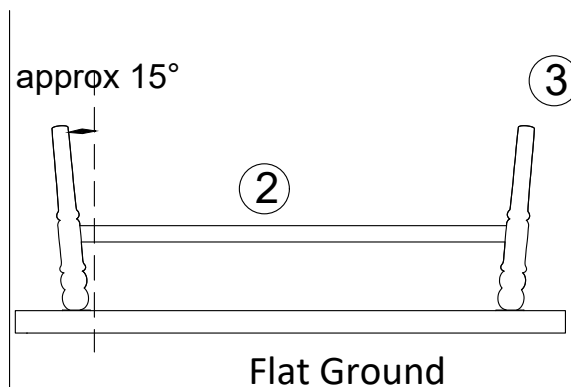


2

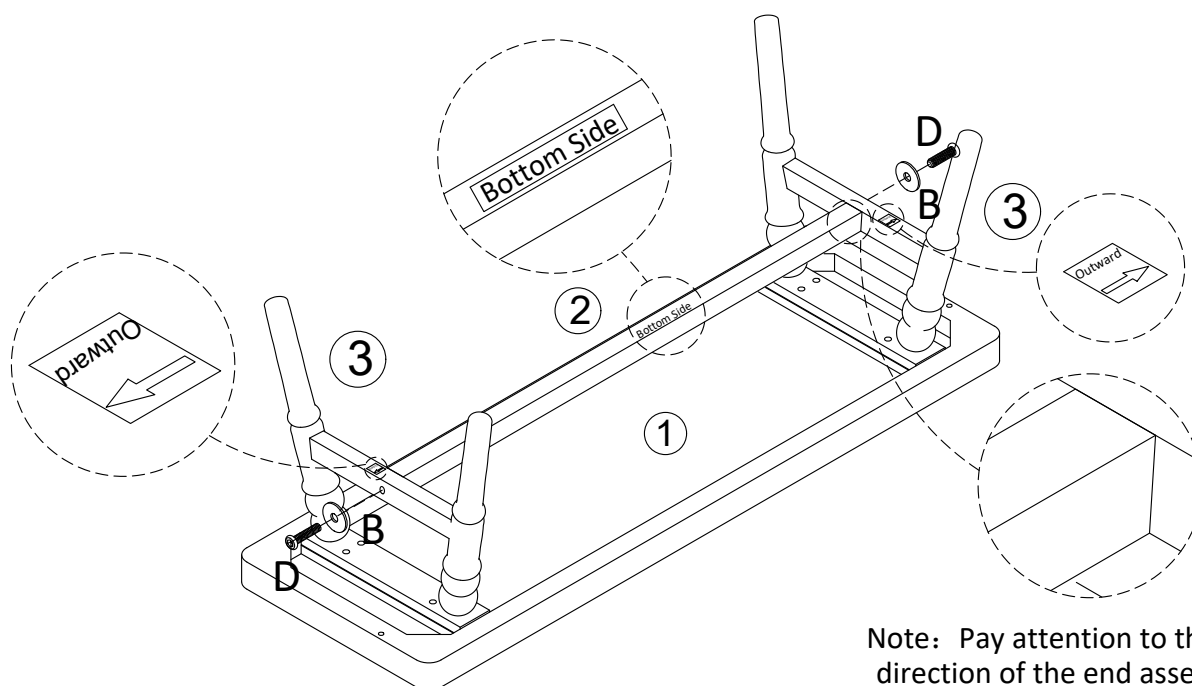




Note: Pay attention to the slope direction of the end assembly

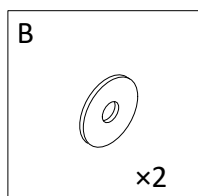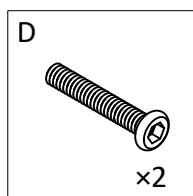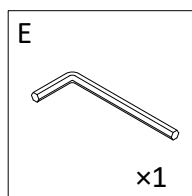





3

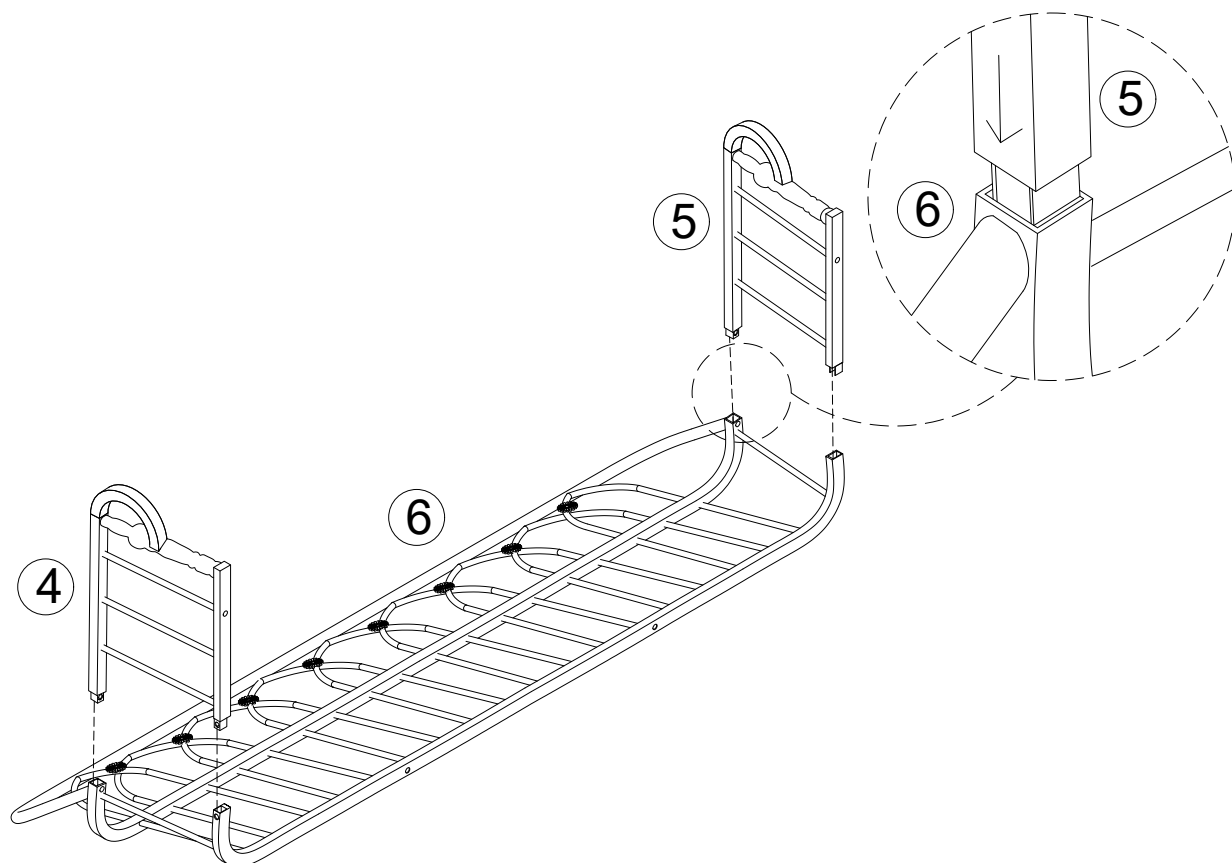

4

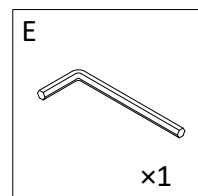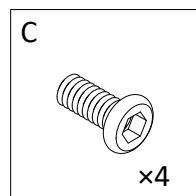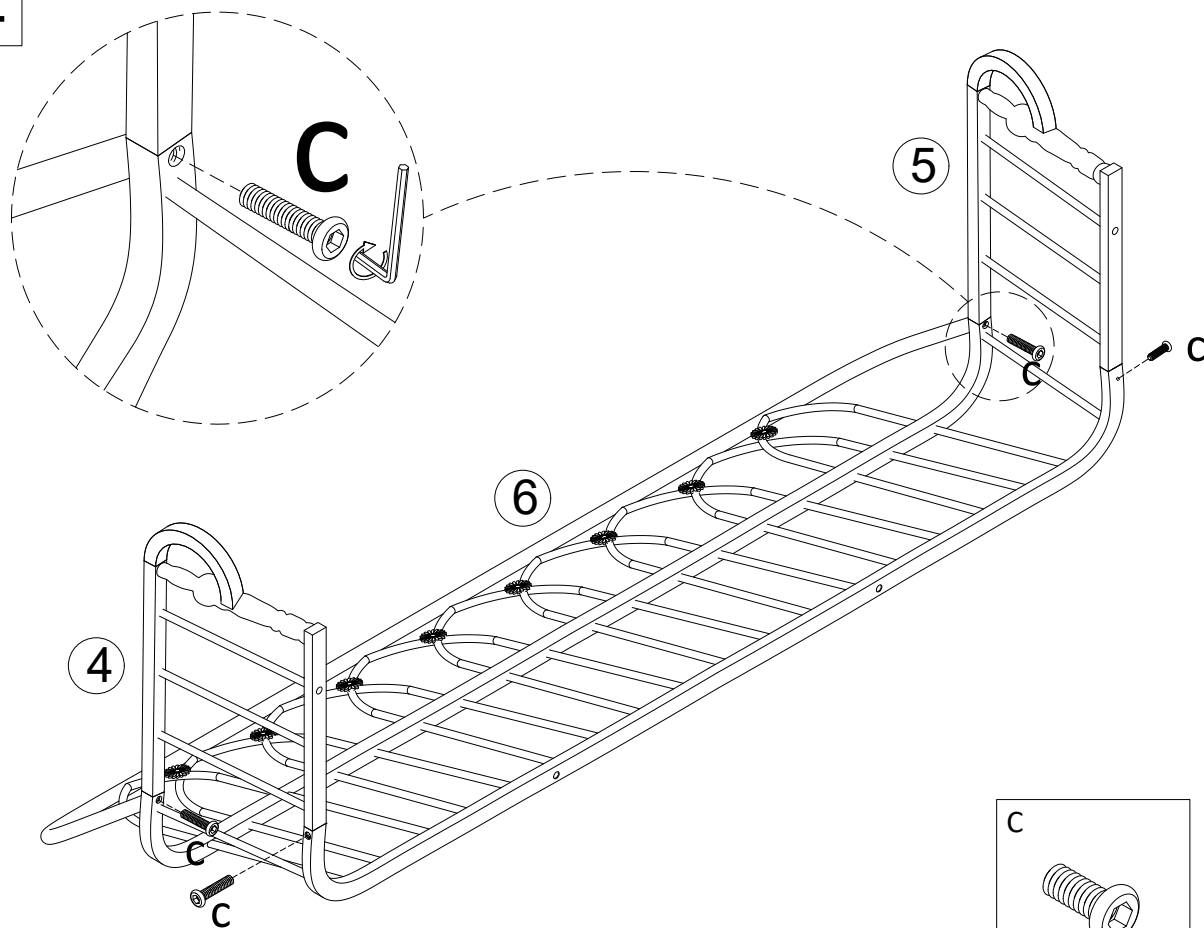

5

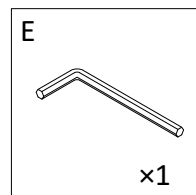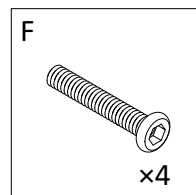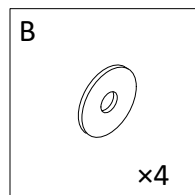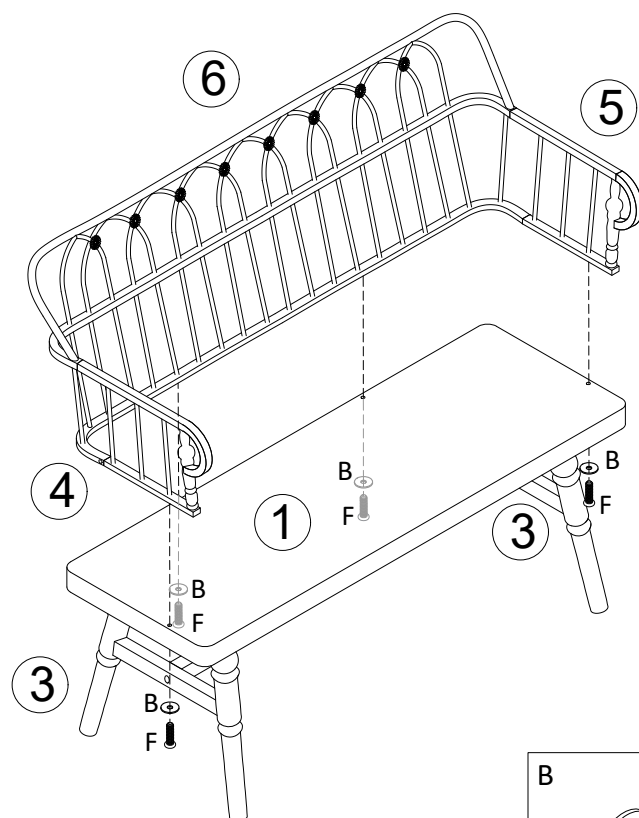

6

