


ASSEMBLY INSTRUCTIONS




20 INCH BATHROOM VANITY (COMBO)

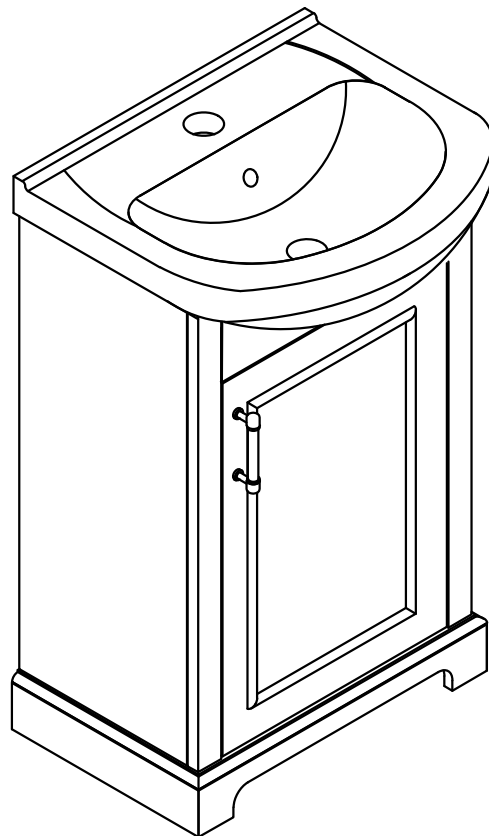


Thank you for purchasing this quality product. Please check all packaging materials carefully for small parts that may have come loose inside the carton during shipment. Separate, identify, and count all parts and hardware. Compare with the parts list to ensure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


- 
- Using power tools to assemble this product will invalidate any claim and damage this product, making it unsafe!!!
 - Please assemble on a clean, soft surface to avoid damage

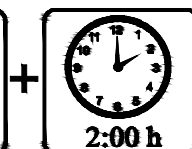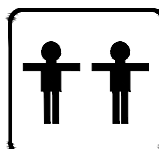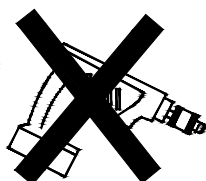

Tool Require




(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTIONS BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

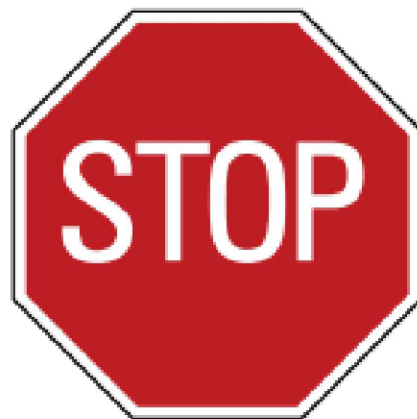

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.

Before Installation









Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

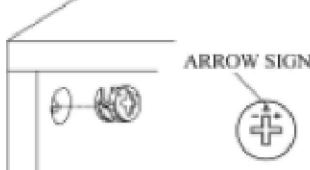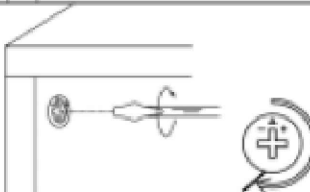		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>


Detail View - CABINET

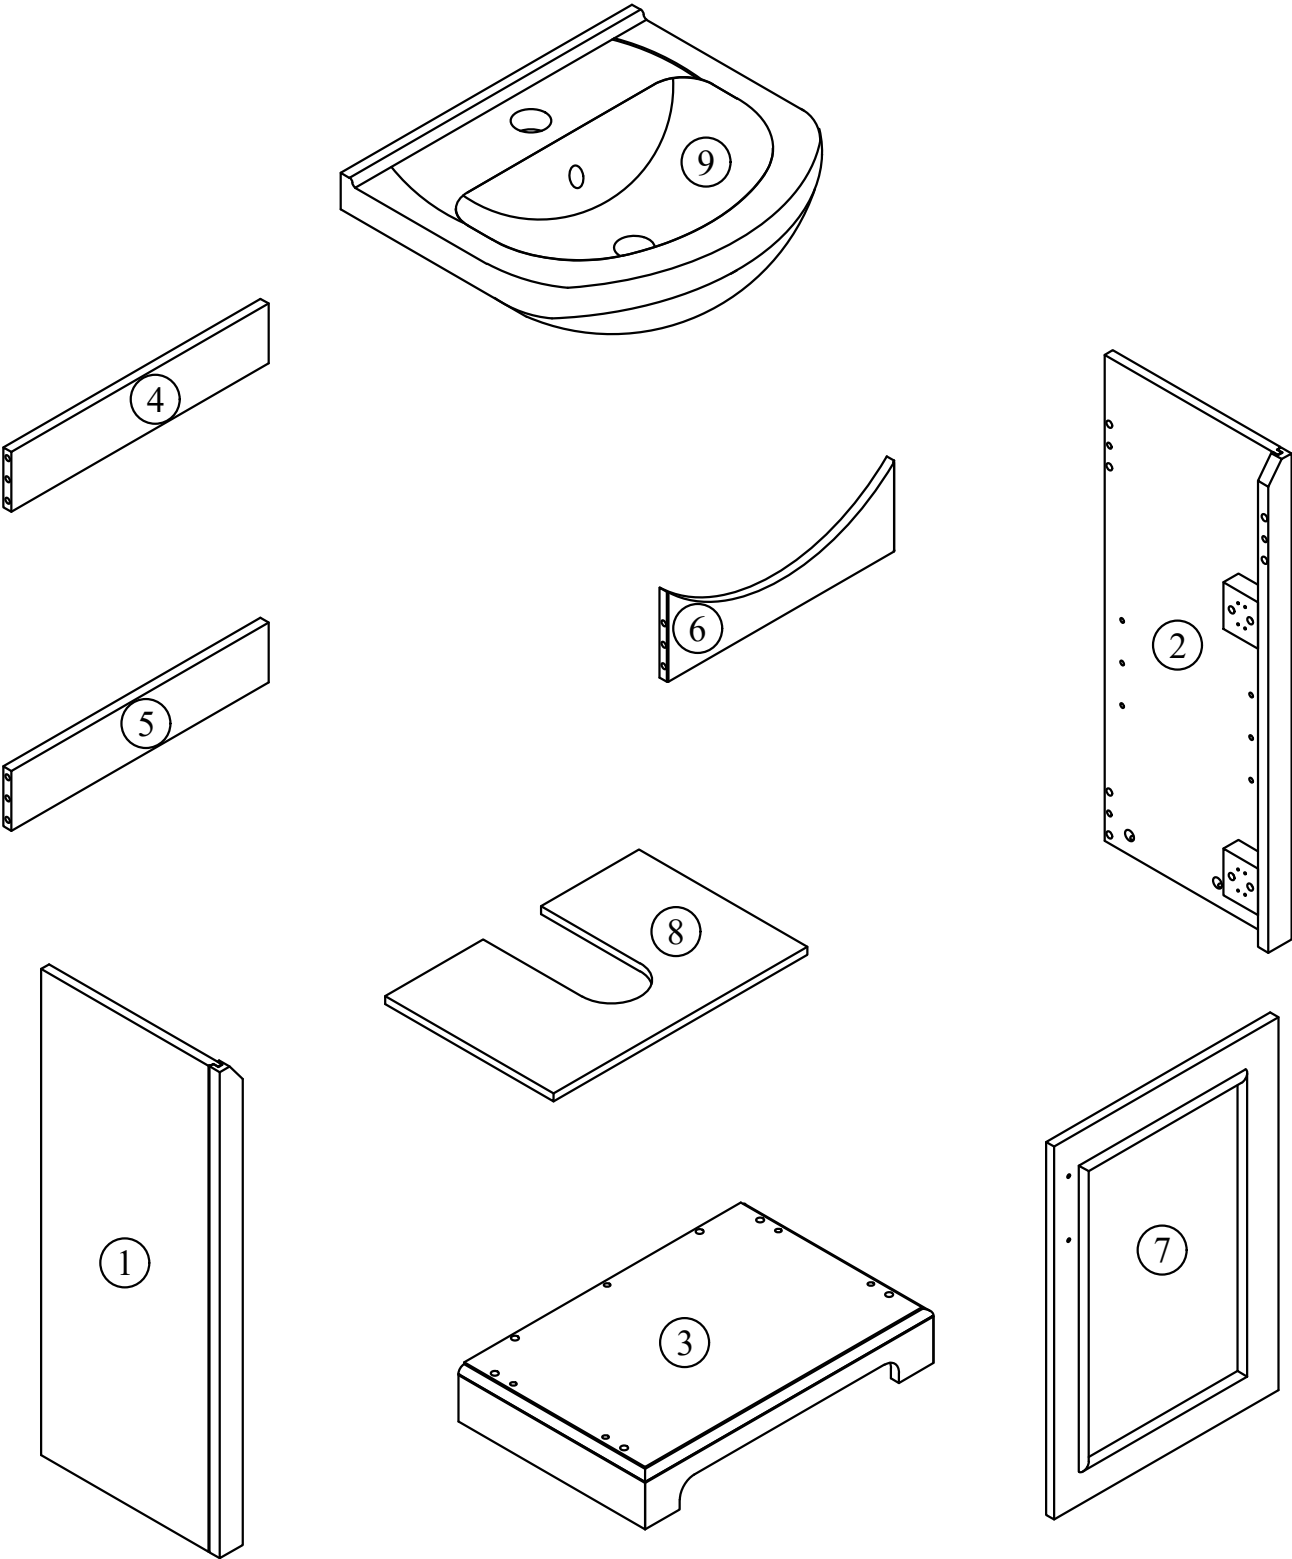

Identifying the Hardware-Identify the hardware using the illustrations below.


Part List

1




Side Panel (L) - 1pc

2




Side Panel (R) - 1pc

3

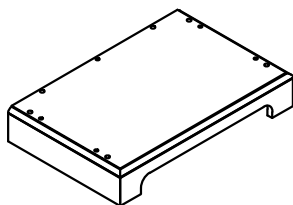


Bottom Frame - 1pc

4

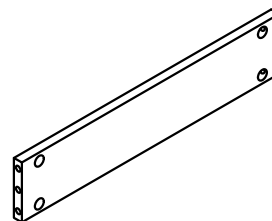


Top Panel Rear - 1pc

5

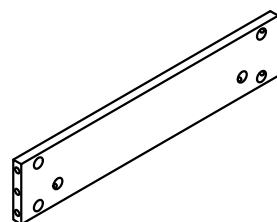


Bottom Panel Rear - 1pc

6

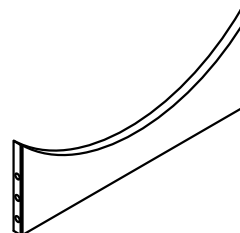


Top Bar Front - 1pc

7

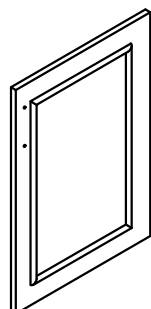


Door - 1pc

8

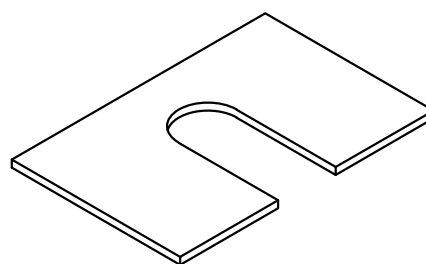









Adjustable Shelf - 1pc

9

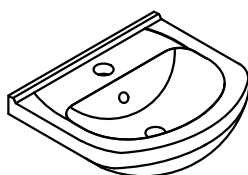


Sink - 1pc


Hardware List

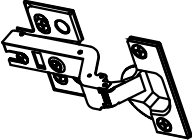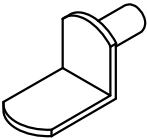A  ø6x35mm	B  ø14.5x12mm	C 
Three in one bolts(18pcs)	Three in one lock(18pcs)	Handle (1pc)
D  ø5/32"x20mm	E  ø8x30mm	F 
Handle screw (2pcs)	Wood dowel(11pcs)	Damping hinge (2 pcs)
G  Ø7xØ3.5x12mm	H 	I 
Flat head screw(12pcs)	Shelf Pin(4pcs)	bracket (1PC)
J  ø6xø3x12mm	K 	
Round head screw (2pcs)	Anti fall hardware (2sets)	


STEP: 1

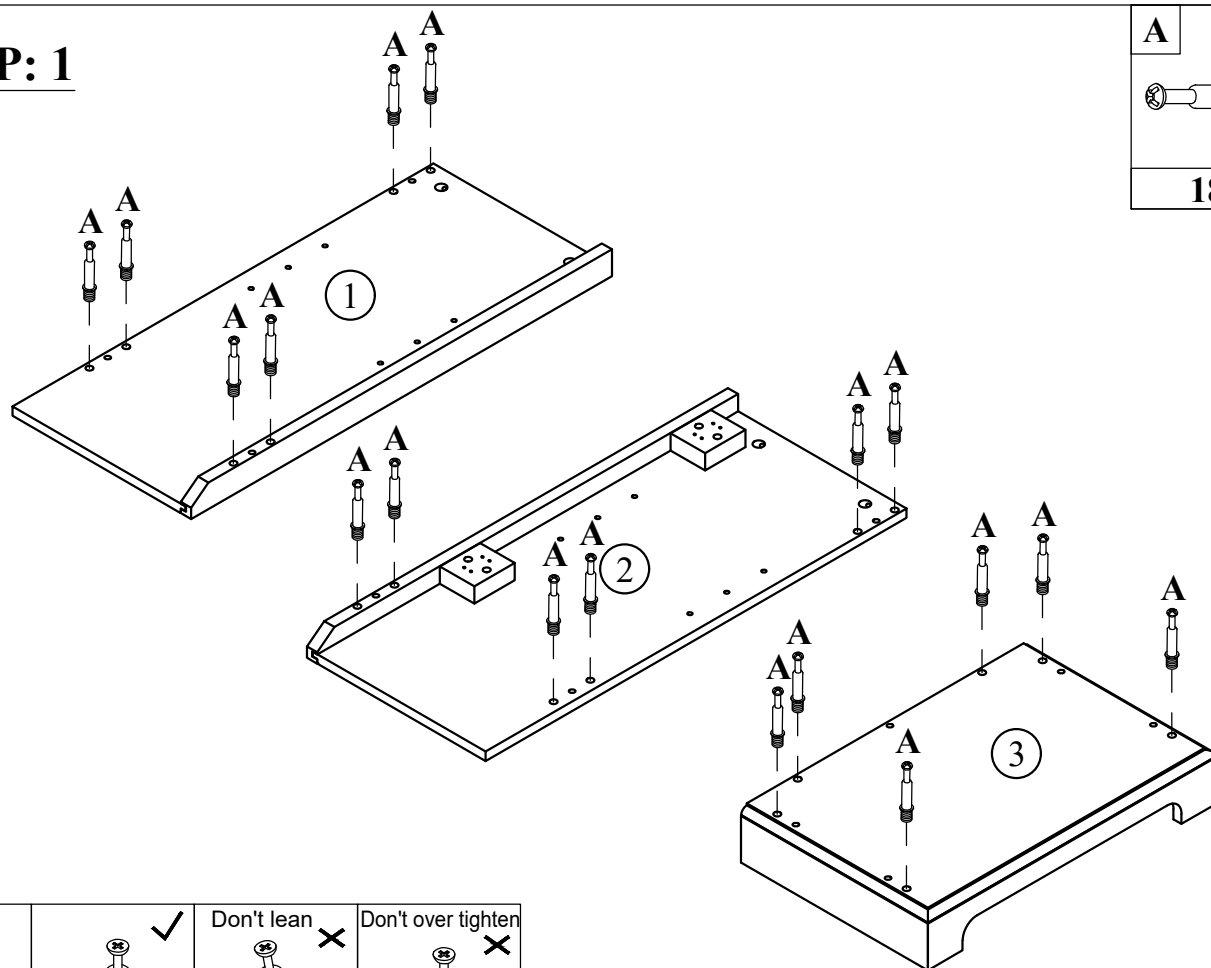


A



18PCS

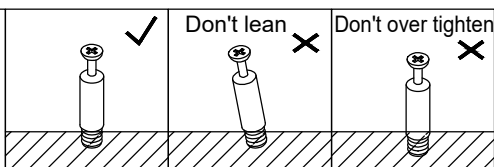

STEP: 2

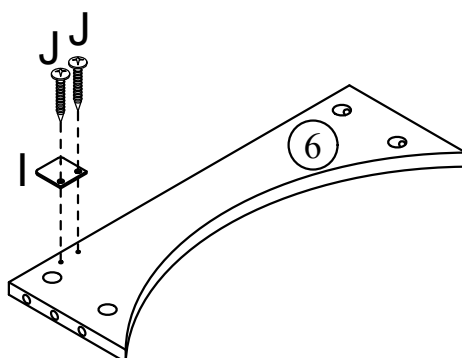

I




1PC

J




2PCS


STEP: 3

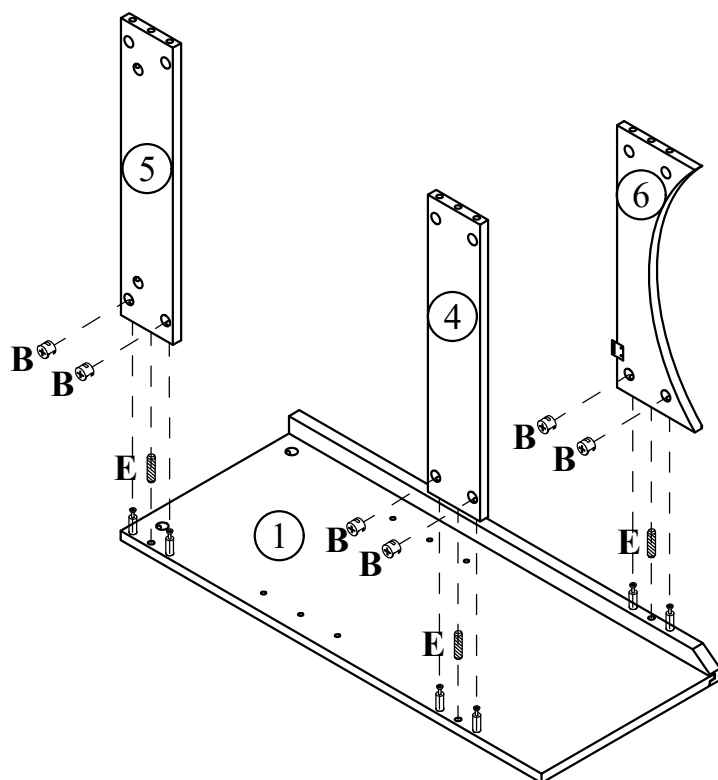

B	E
	
6 PCS	3 PCS

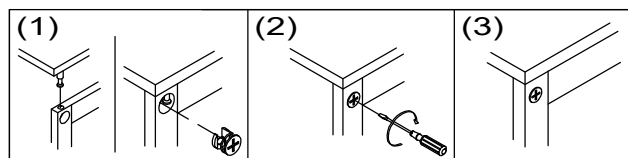


STEP: 4

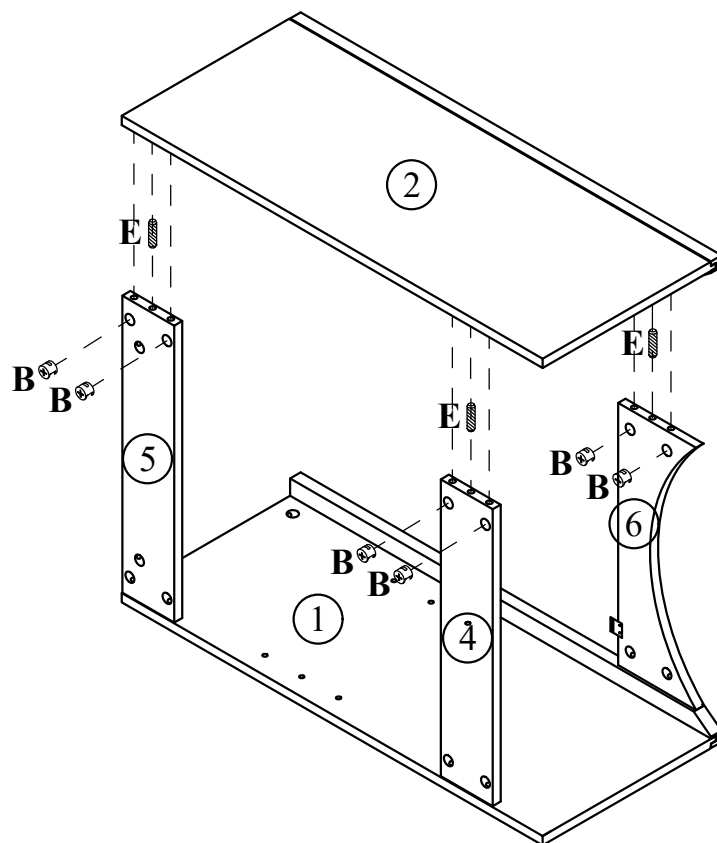


B	E
	
6 PCS	3 PCS



STEP: 5

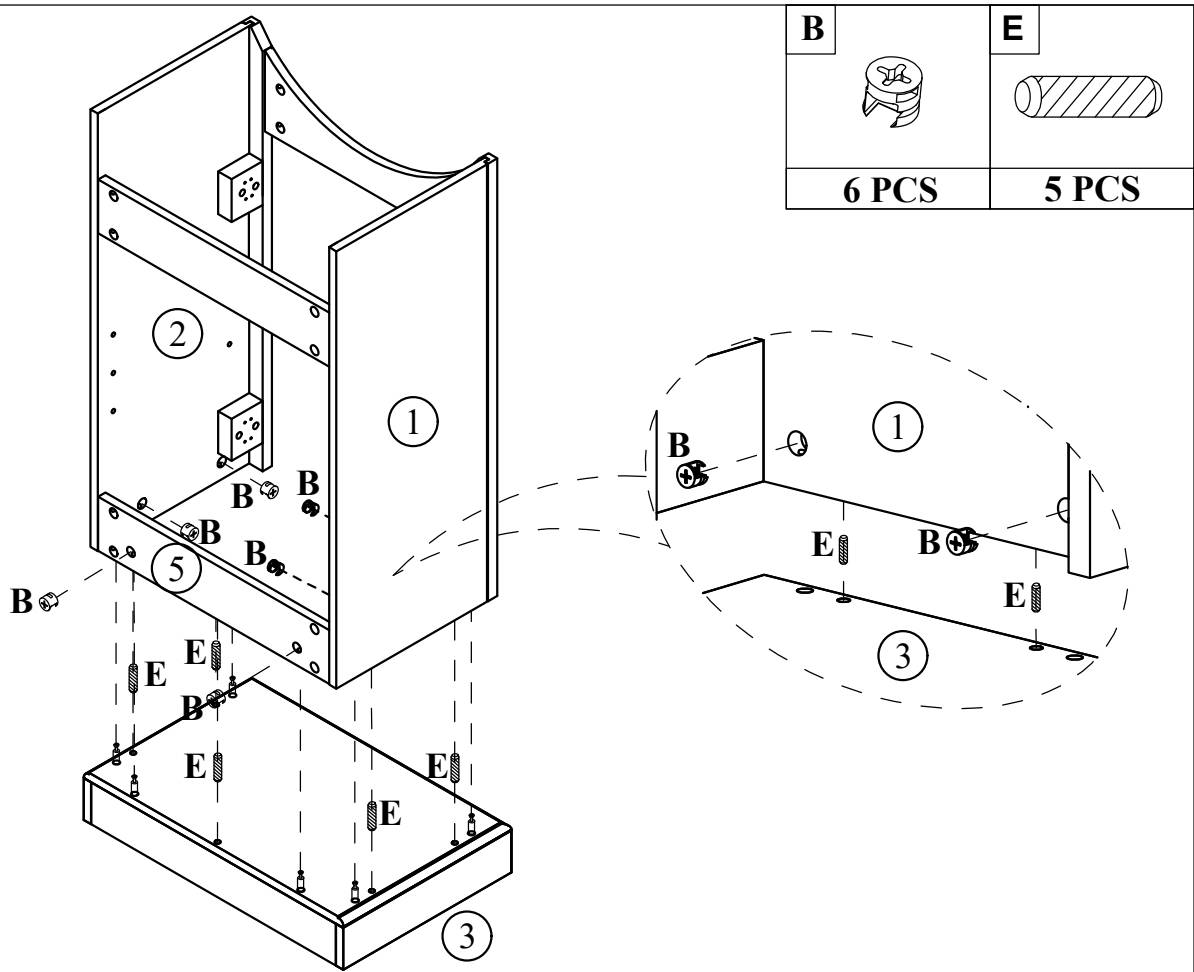

STEP: 6

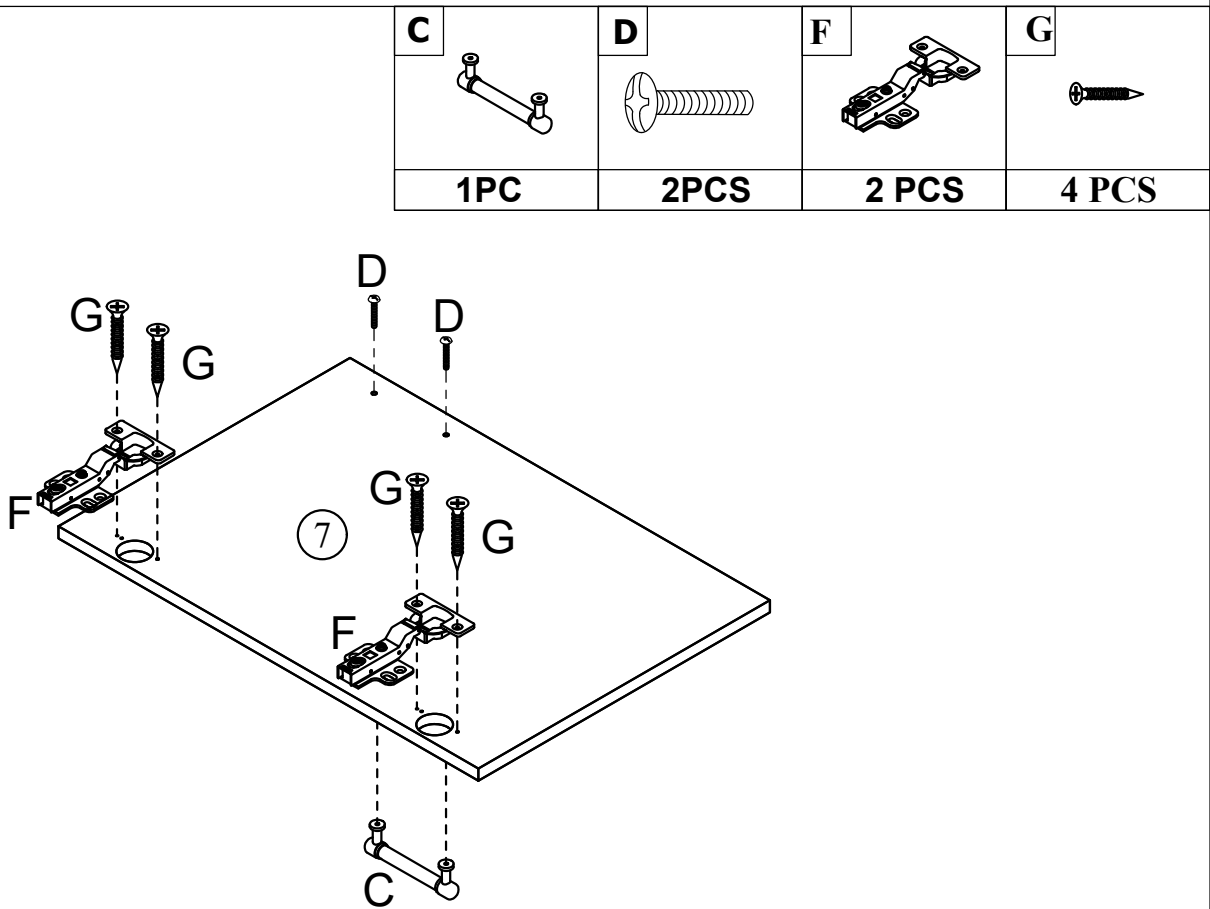

STEP: 7

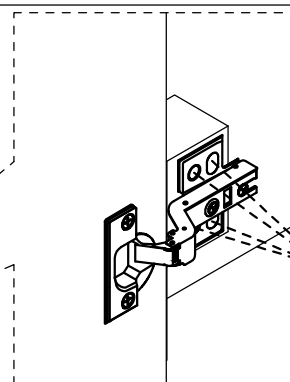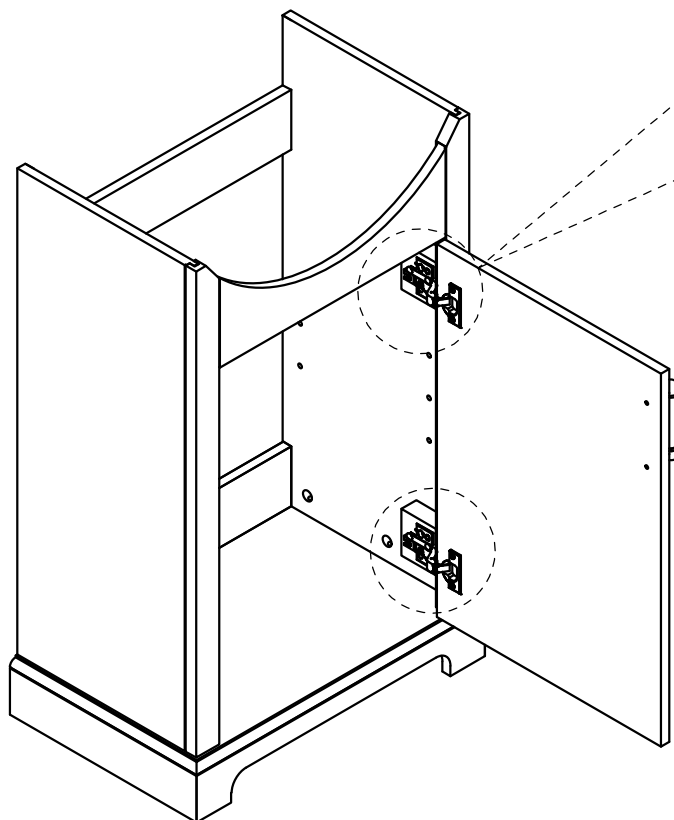


G




8 PCS


Use the screws to adjust up or down

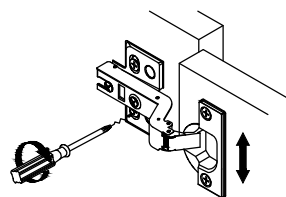


Use the screws to permanent

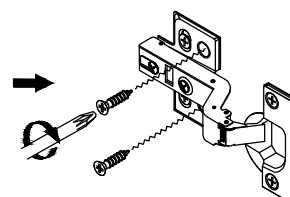


Use the screws to adjust left or right

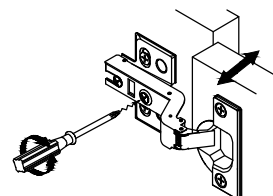


Use the screws to adjust in or out

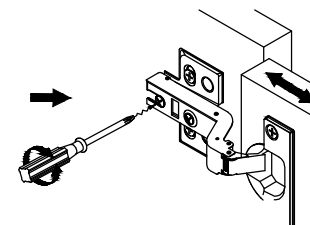


STEP:8

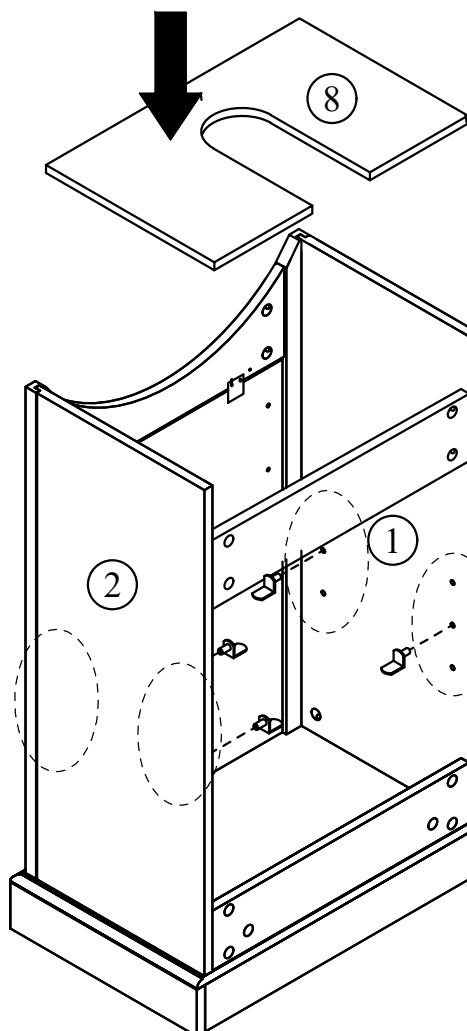


H



4PCS

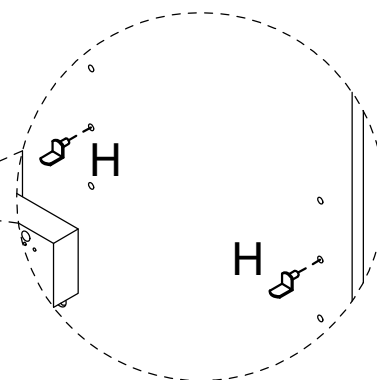


STEP:9

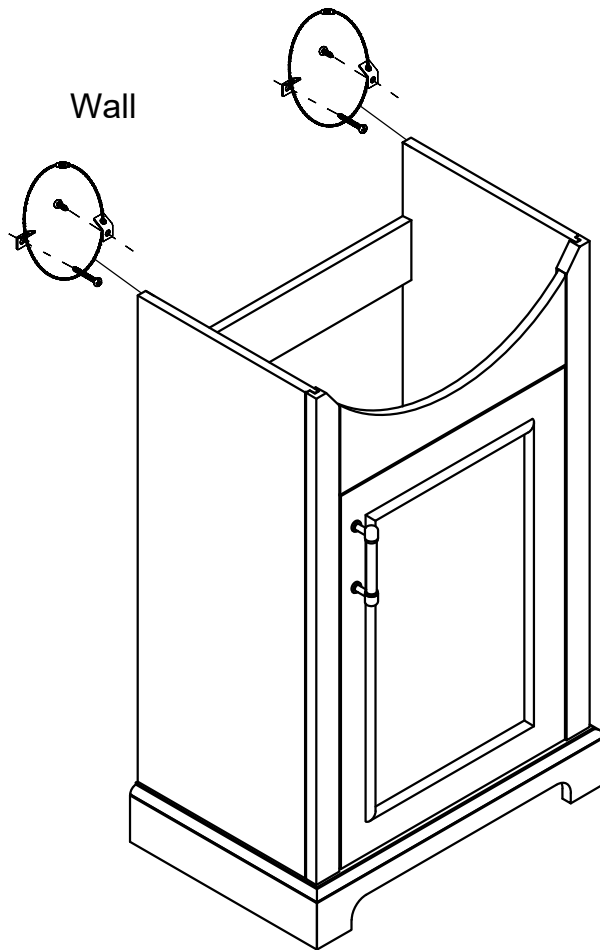**K****2SETS**



STEP: 10

Install the sink on the cabinet with glue.
Let stand for 20 hours

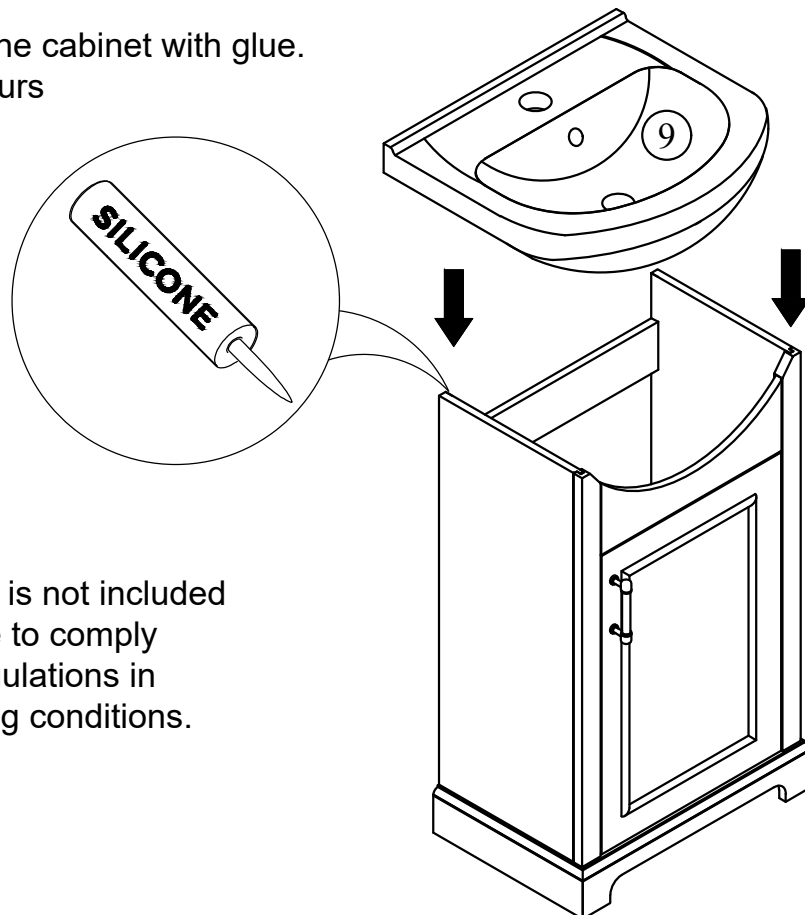


*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 11

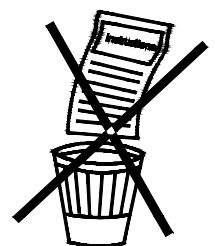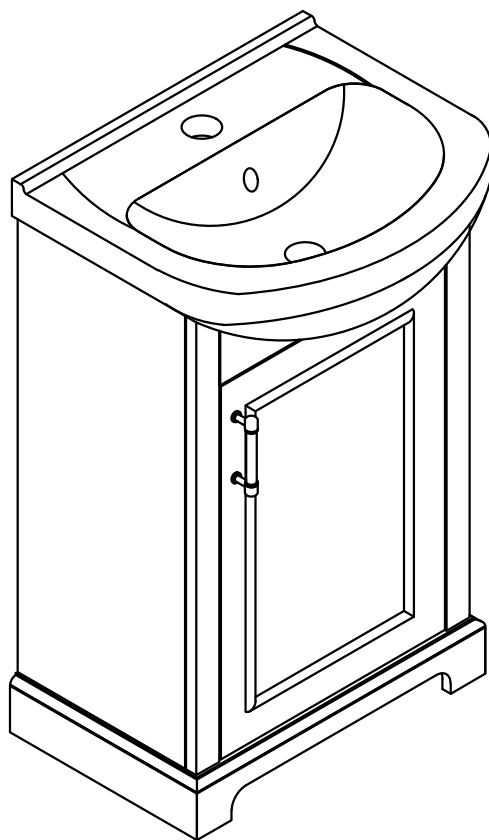


HINGE ADJUSTMENTS

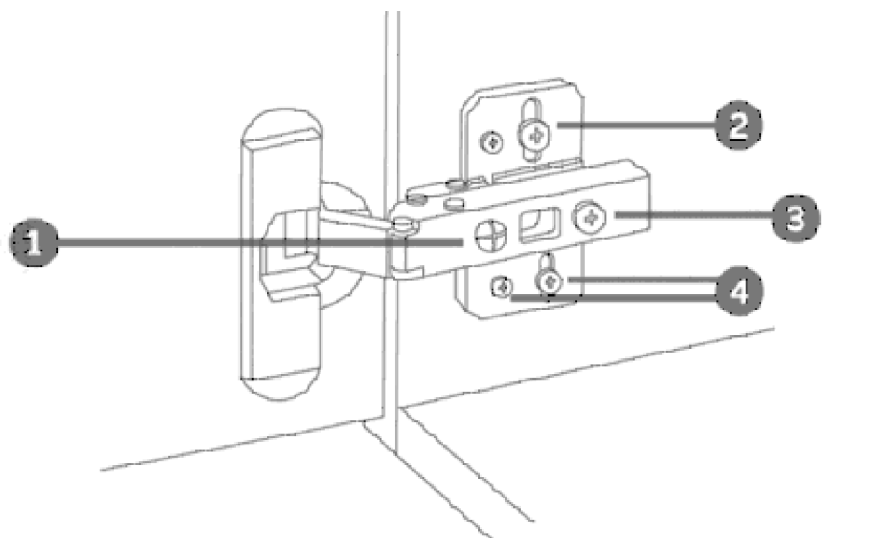


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

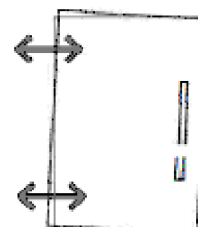

2 4 Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

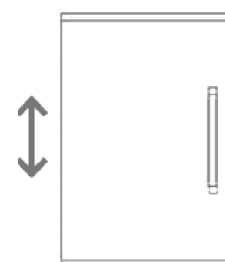

3 Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

