
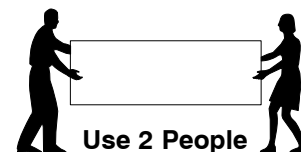


# 97132 Twin Bed

## Assembly Instructions

WII-0720

### 1 Assembled View

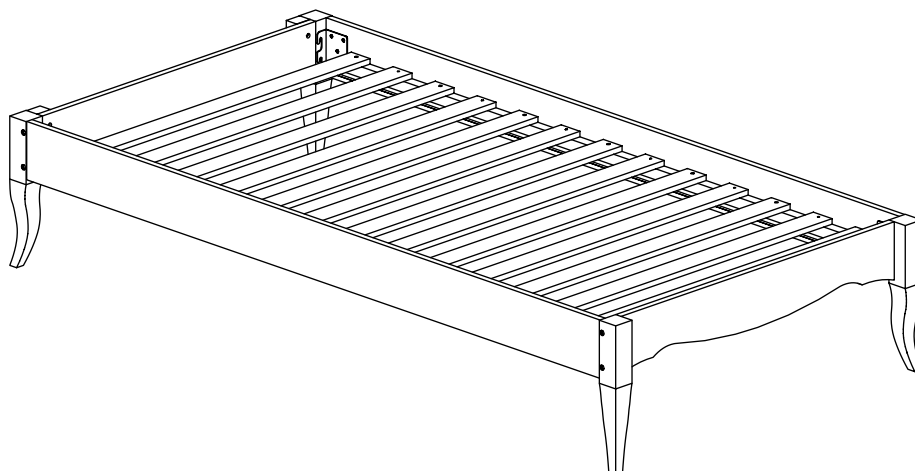

Use 2 People




**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Parts List



**A** Headboard Panel x 1

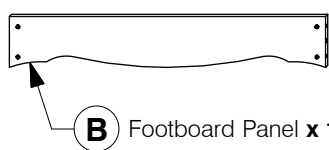

**B** Footboard Panel x 1

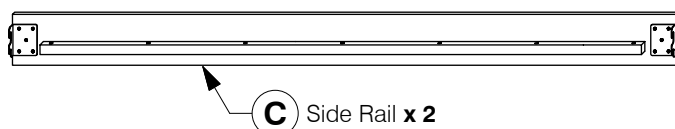


**C** Side Rail x 2



**D** Post (Left hand) x 2



**E** Post (Right hand) x 2

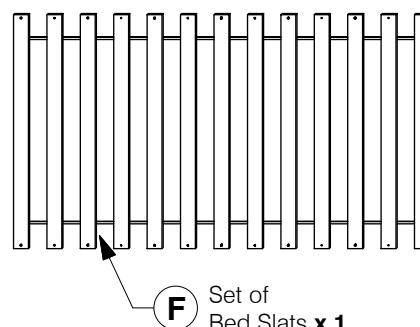

**F** Set of Bed Slats x 1

### 3 Hardware List




**1** M6 x 90mm JCB x 8



**2** M6 x 40mm JCB x 14



**3** M6 x 20mm JCB x 8



**4** Wood Dowel (10 x 40mm) x 4




**5** Barrel Nut x 8



**6** Spring Washer x 8



**7** Flat Washer x 8



**8** Wood Screw (M4 x 32mm) x 16




**9** M4 Allen Key x 1

# 97132 Twin Bed

## Assembly Instructions

WII-0720

- 4** Assemble the Post (D & E) to the Headboard Panel (A).  
Use Wood Screws 32mm (8) to tighten the Post & Panel together.

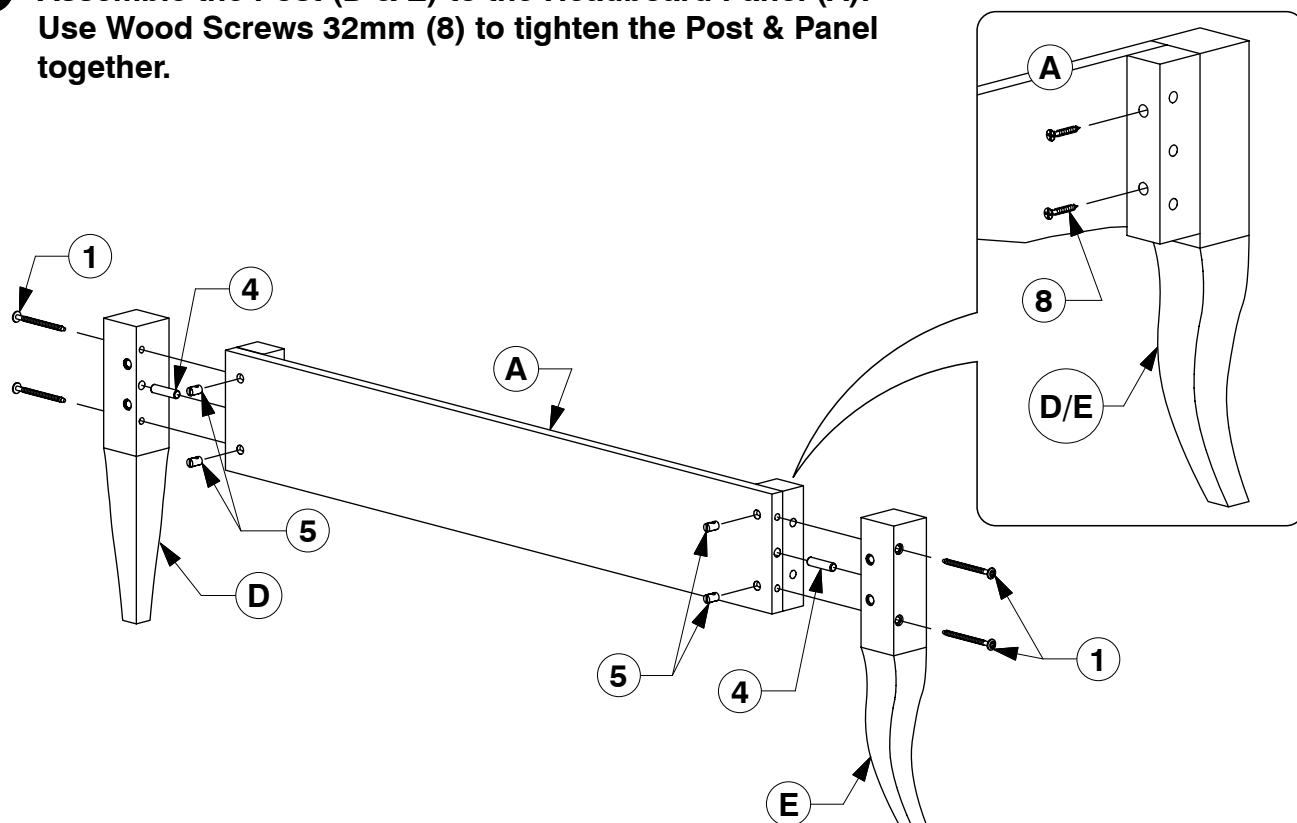

- 5** Assemble the Post (D & E) to the Footboard Panel (B).

