



MOUNTING INSTRUCTIONS

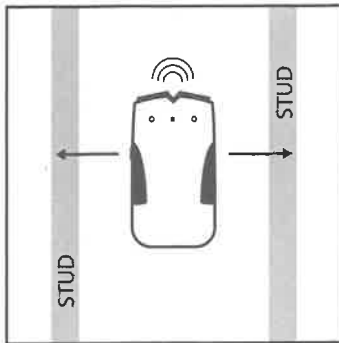


STEP 1.

Locate wall studs. Mark the stud with a pencil. Use a studfinder if available.

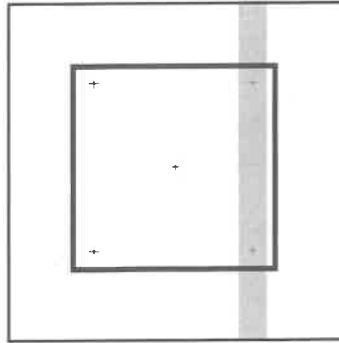


STEP 2.

Overlay the template onto a located stud(s).

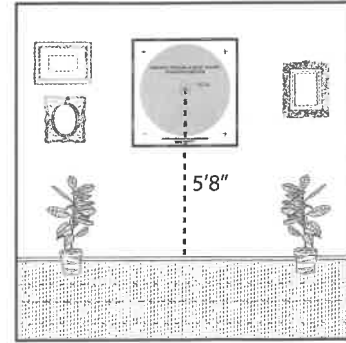


STEP 3.

Adjust the height so the center point is 5'8" from the floor. Have a friend hold the template while you measure. Use a level on one of the horizontal edges of the template to ensure your cabinet will be even.

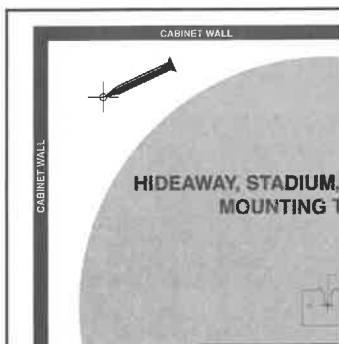


STEP 4.

Take a nail and gently puncture the template and indent the wall on each of the four cross hairs located in each corner. Remove the template and use the indents to make your pilot holes. Dry wall anchors are provided. If drilling into any other surface, use the appropriate type of hardware.

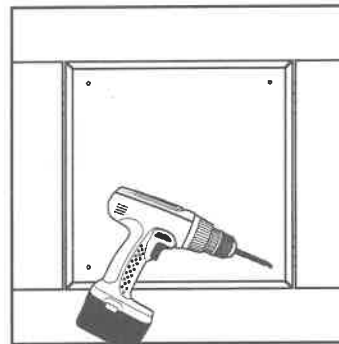

STEP 5.

If not using wall anchors, place cabinet onto wall and align the predrilled holes with the pilot holes. Use included screws to fasten cabinet to wall.

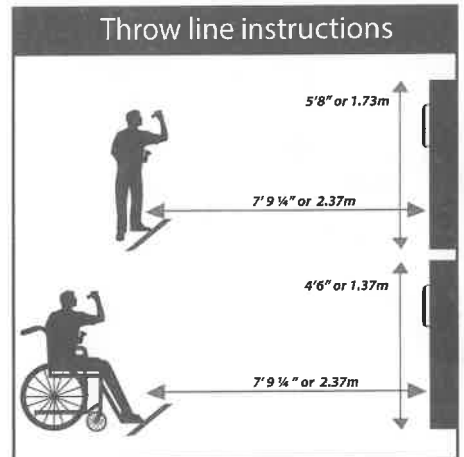

Follow the diagram above to set up your throwline for regulation steel tip distance. Distance begins from the face of the bullseye.

Distance from the center of the bullseye to the floor is 5'8".

