


ASSEMBLY INSTRUCTIONS

ITEM:LD24002-N

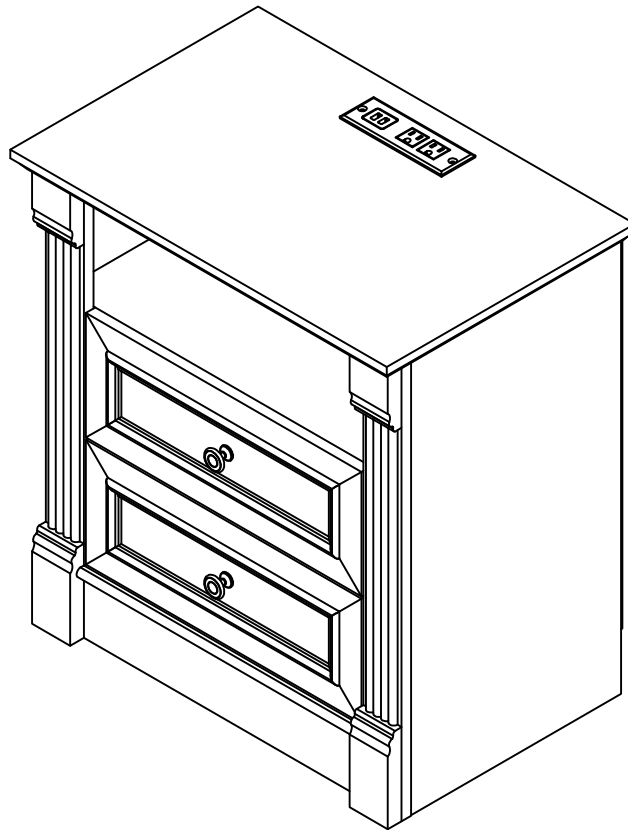


Please scan this QR code and contact us if you have any questions! If your products has damages, missing parts, problems with installation and use, or you are not 100% satisfied with our products, please scan the QR code and contact us!

LD24002-N

Email:vimitty-service@outlook.com

SUPPORT : +18882062161

PACKAGE INCLUDE

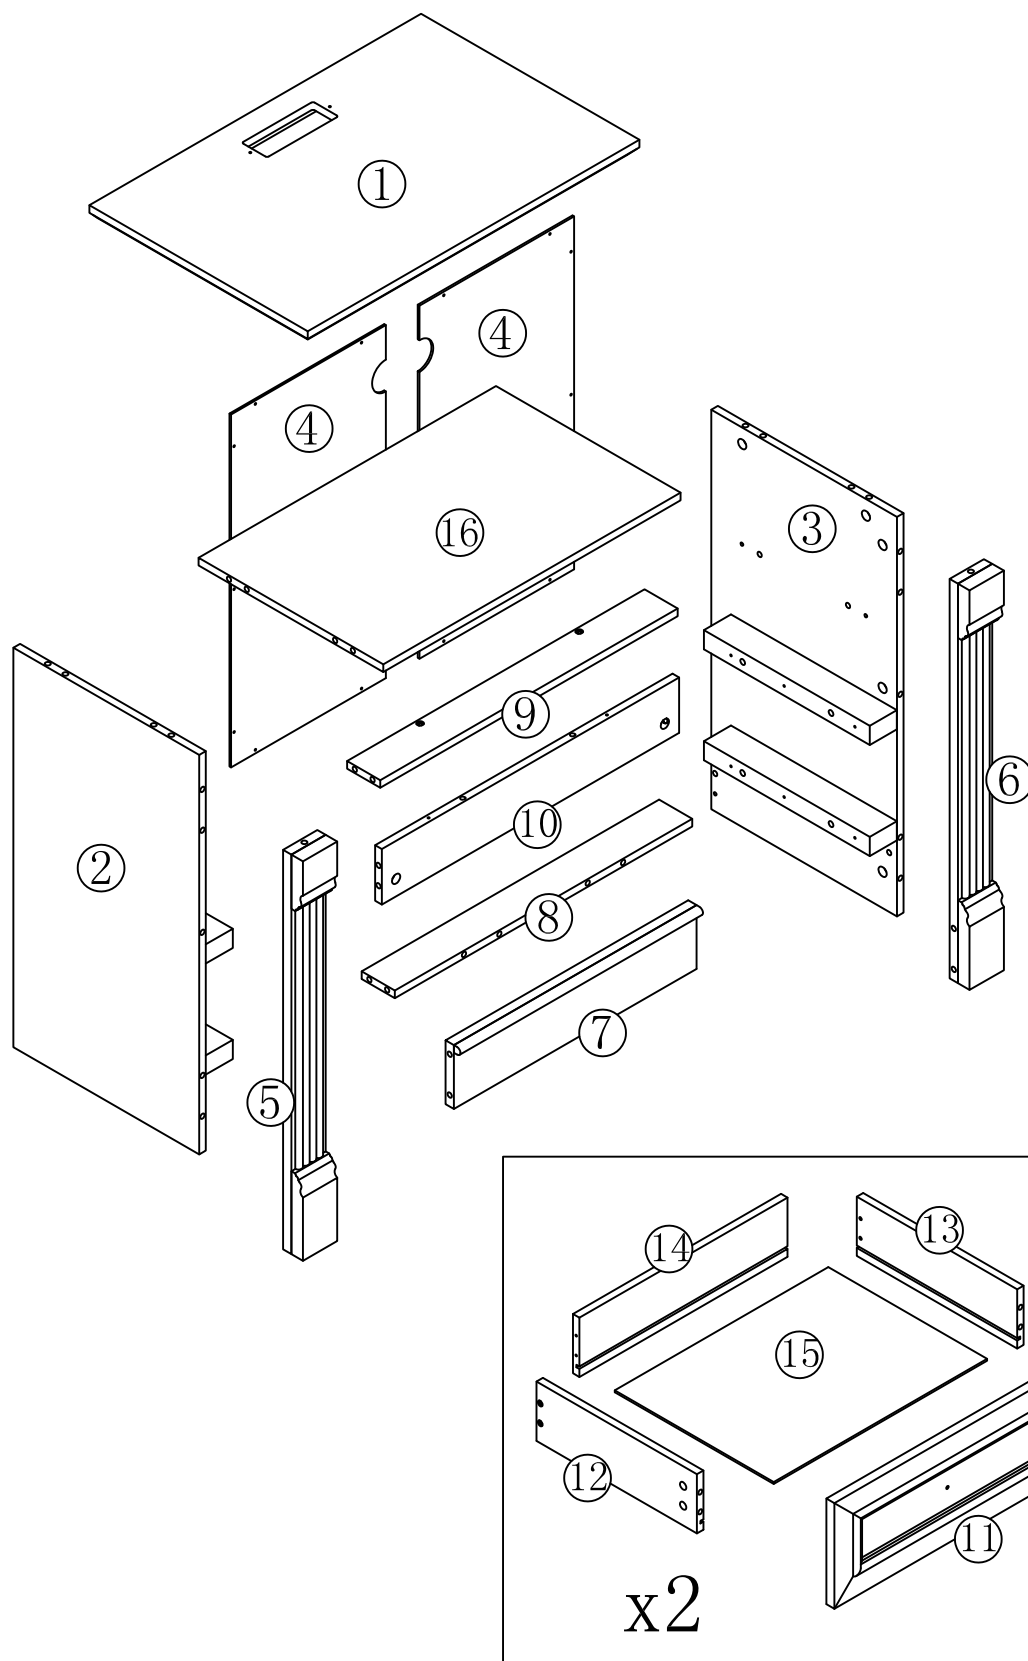

SUPPORT : +18882062161


PACKAGE INCLUDE

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Back Panel	2
5	Left Trim Panel	1
6	Right Trim Panel	1
7	Front Footboard	1
8	Front Bottom Panel	1
9	Rear Bottom panel	1
10	Back Footboard	1
11	Drawer Top Panel	2
12	Drawer Left Side Panel	2
13	Drawer Right Side Panel	2
14	Drawer Back Panel	2
15	Drawer Bottom Panel	2
16	Middle Plate	1

SUPPORT: +18882062161

PACKAGE CONTENT


Ø6X30MM



A

28X+1


Ø3.5X12MM



B


20X+1

4X35MM




C

10X+1



D


2X

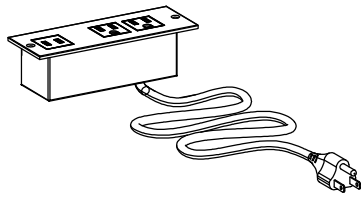

E


1X

Ø3X12MM



F


18X+1



G


2X

Ø3X12MM



H

2X



J


30X+2

Ø 15X10MM



K

30X+2

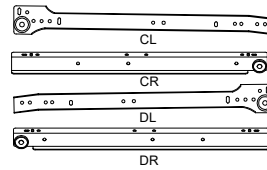


L


2X

SUPPORT: +18882062161


How to use the cam lock system

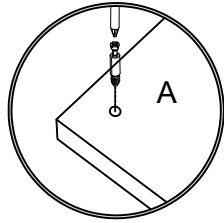


1. Screw cam bolt into panel

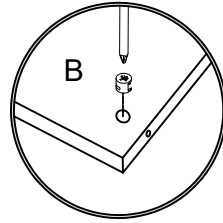


2. Push cam into panel - arrow feature on cam top points to panel edge

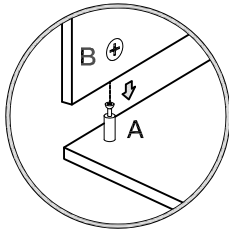

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)


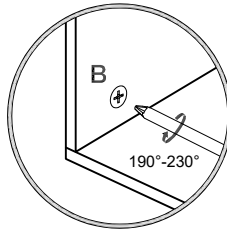


4. Rotate cam(s) clockwise 190°-230° to lock panels together

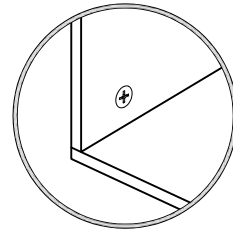

5. Panels should be tight against each other and connection should be rigid

Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

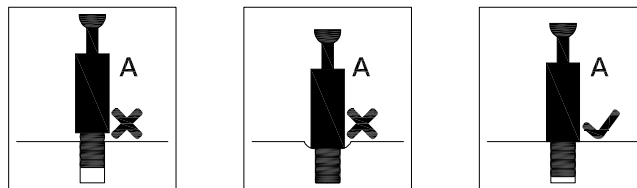
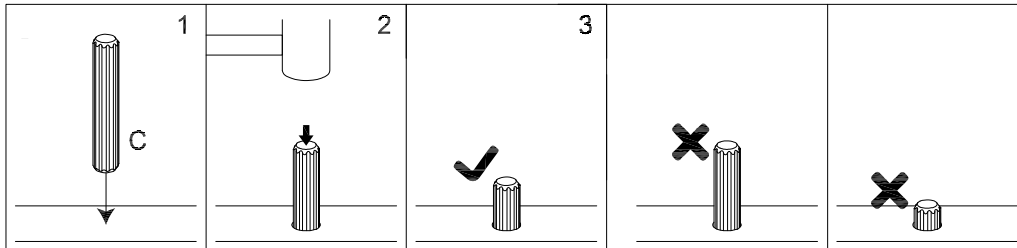


⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.



SUPPORT : +18882062161

STEP 1

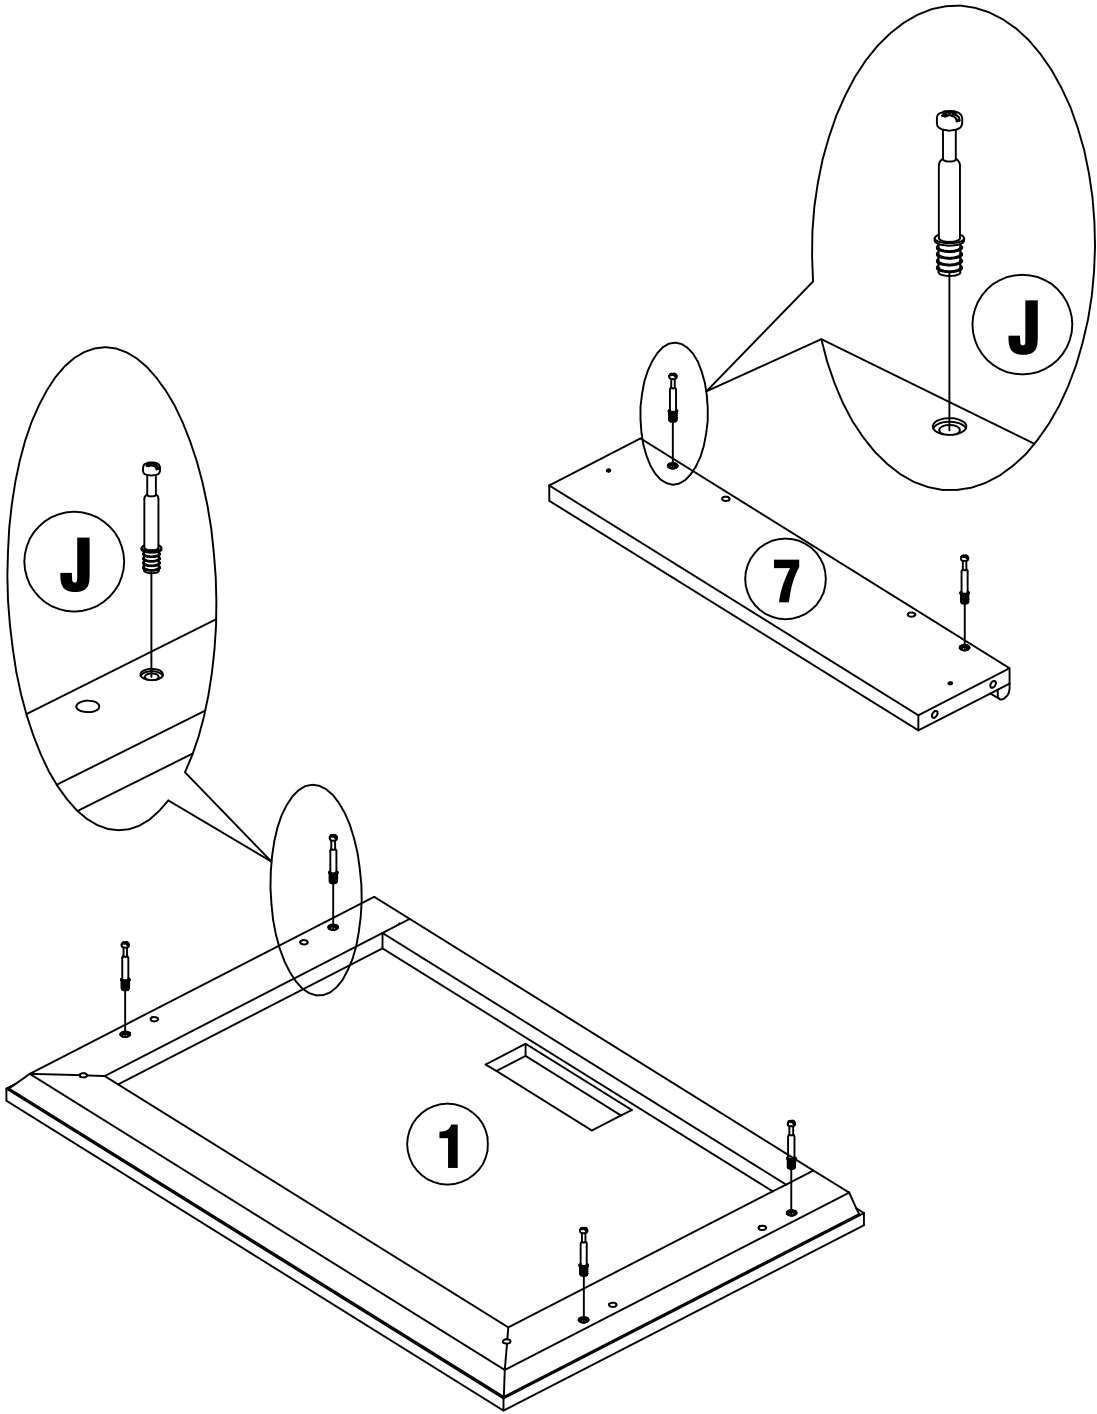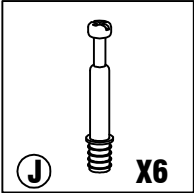


STEP 2


	
A	K
X2	X2

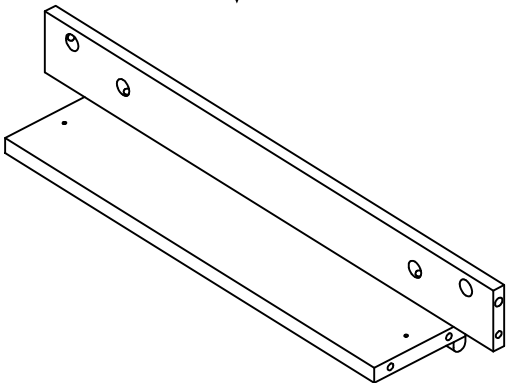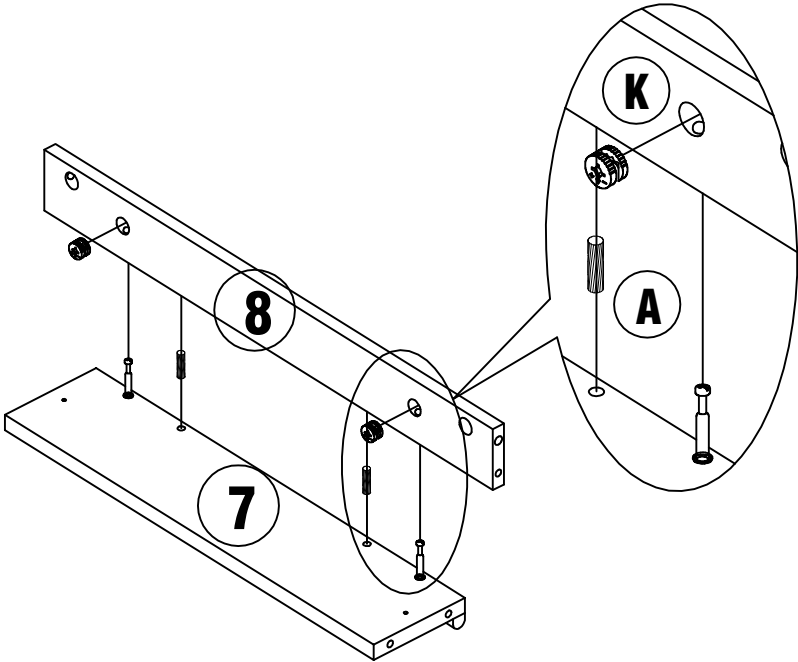

SUPPORT: +18882062161


STEP 3

	
A	C
X2	X2

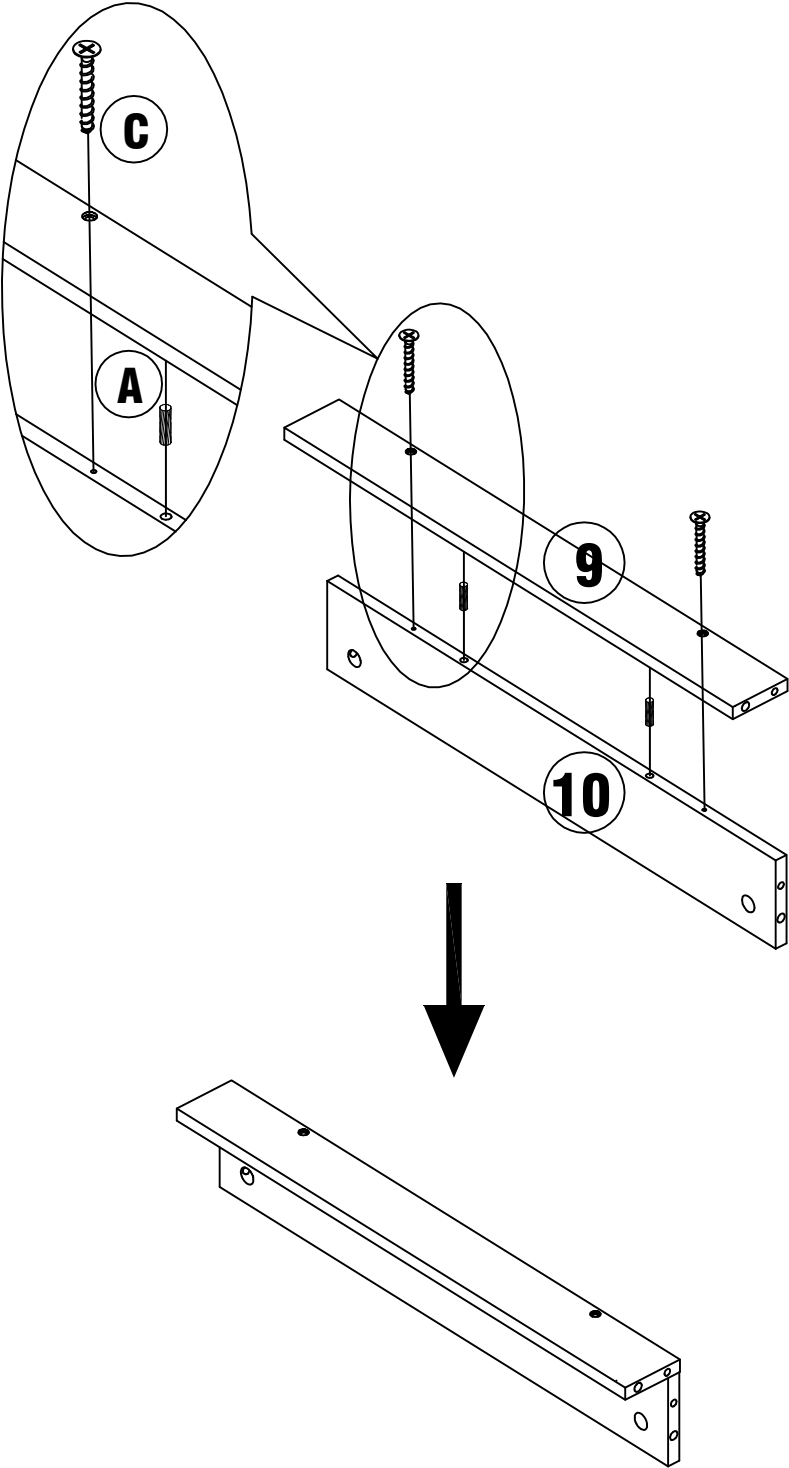



STEP 4




		
A X 4	J X 16	K X 6

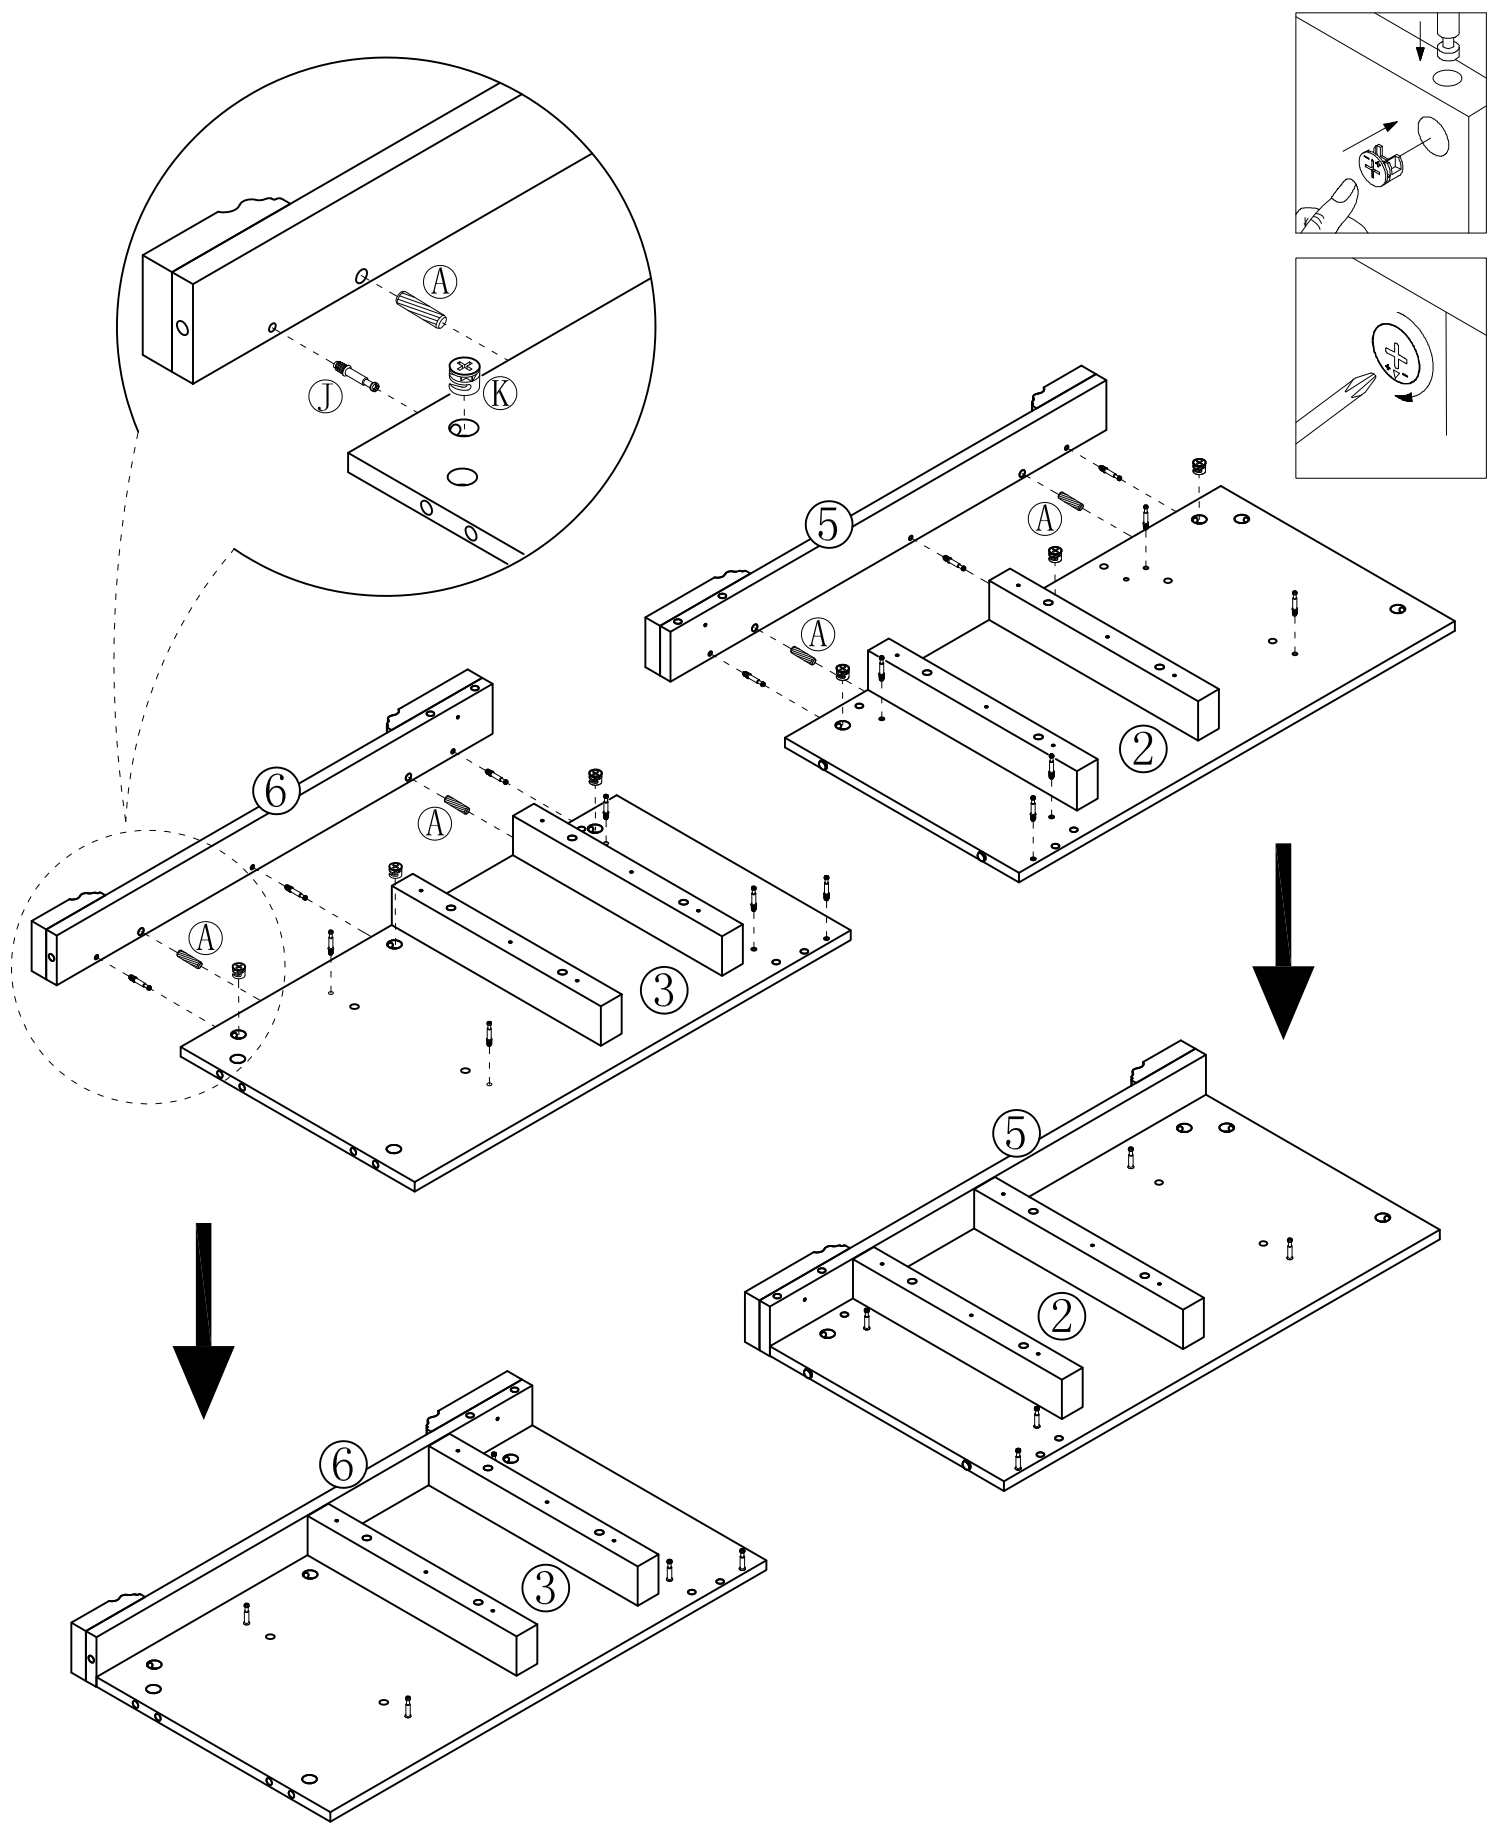

SUPPORT : +18882062161

STEP 5





			
			
(B)	X 12	(L)	X 2

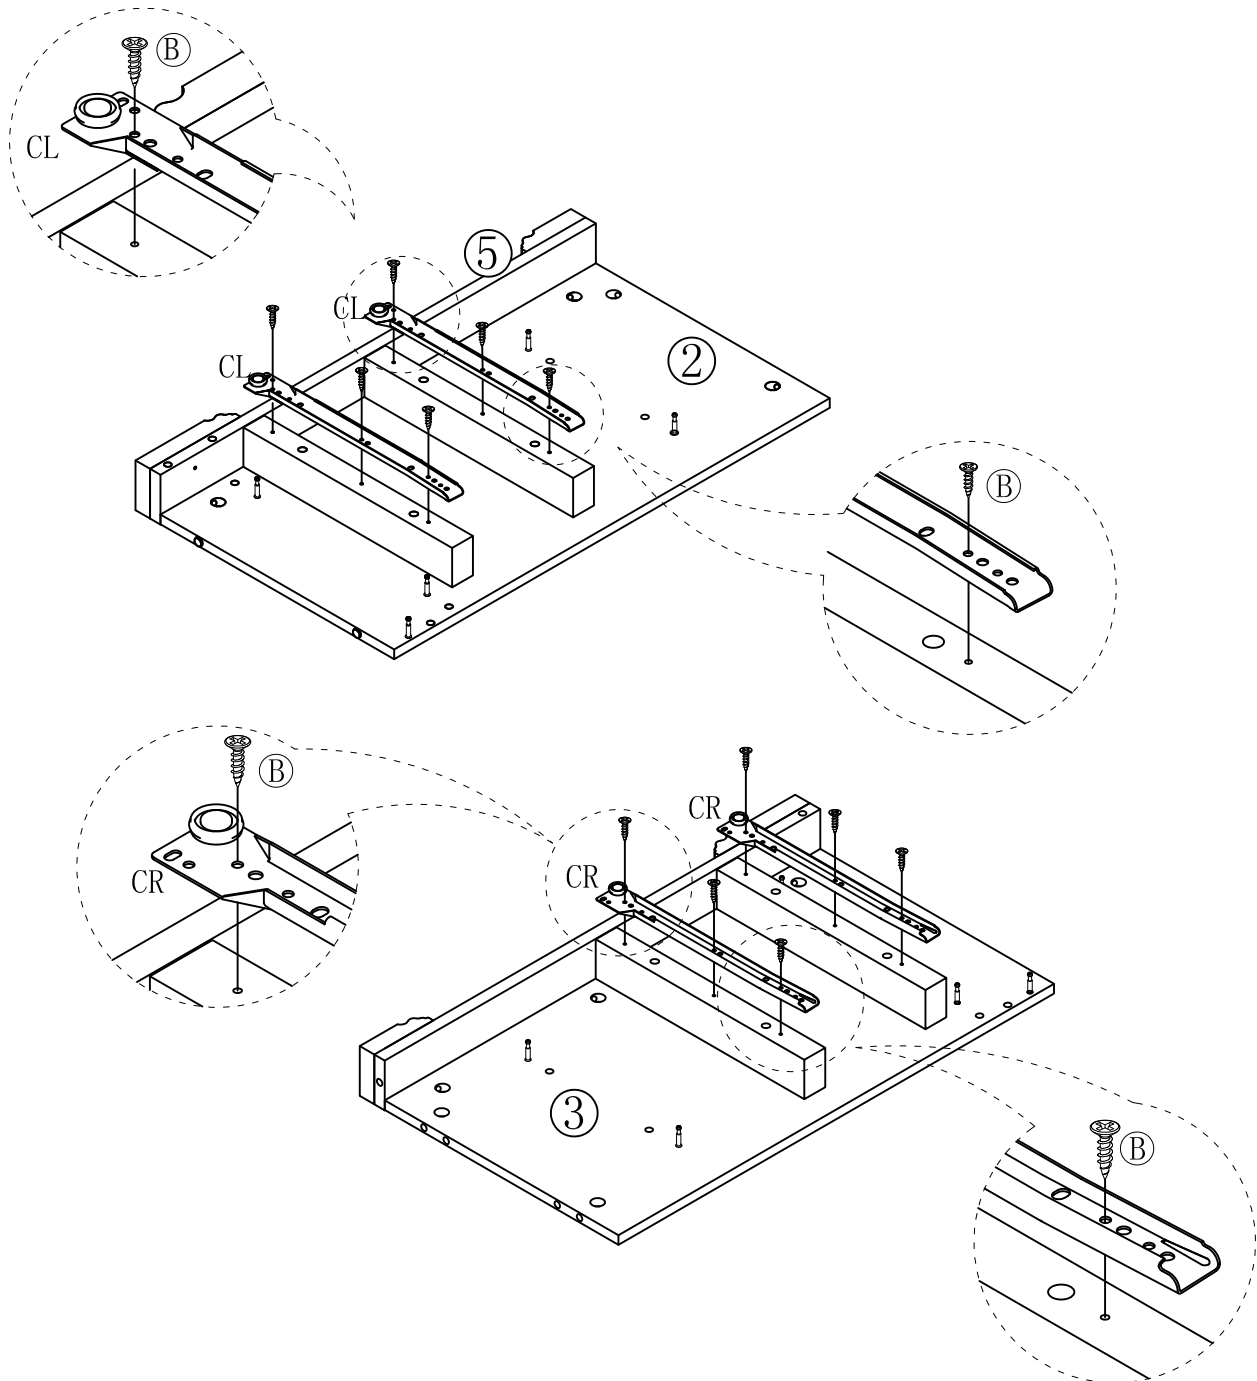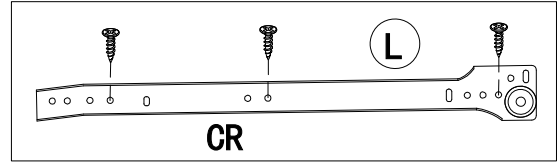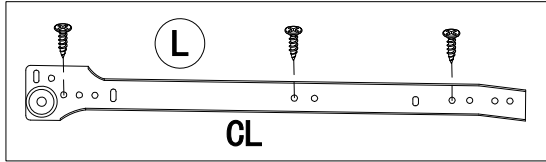

SUPPORT : +18882062161

STEP 6





	
A X 7	K X 5

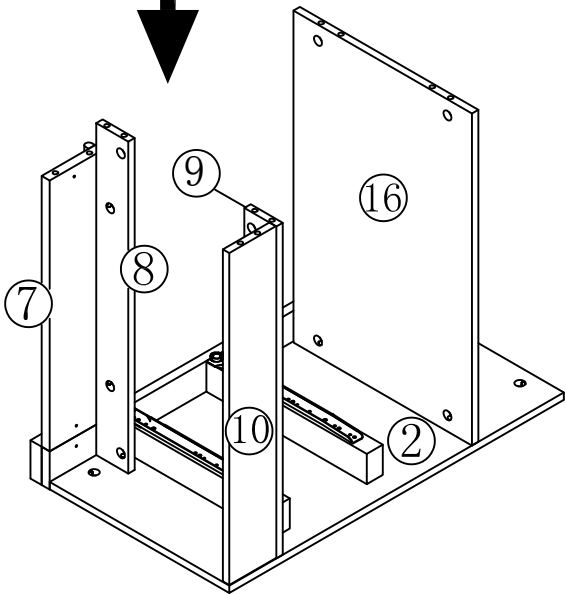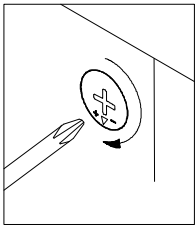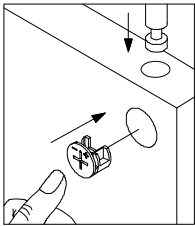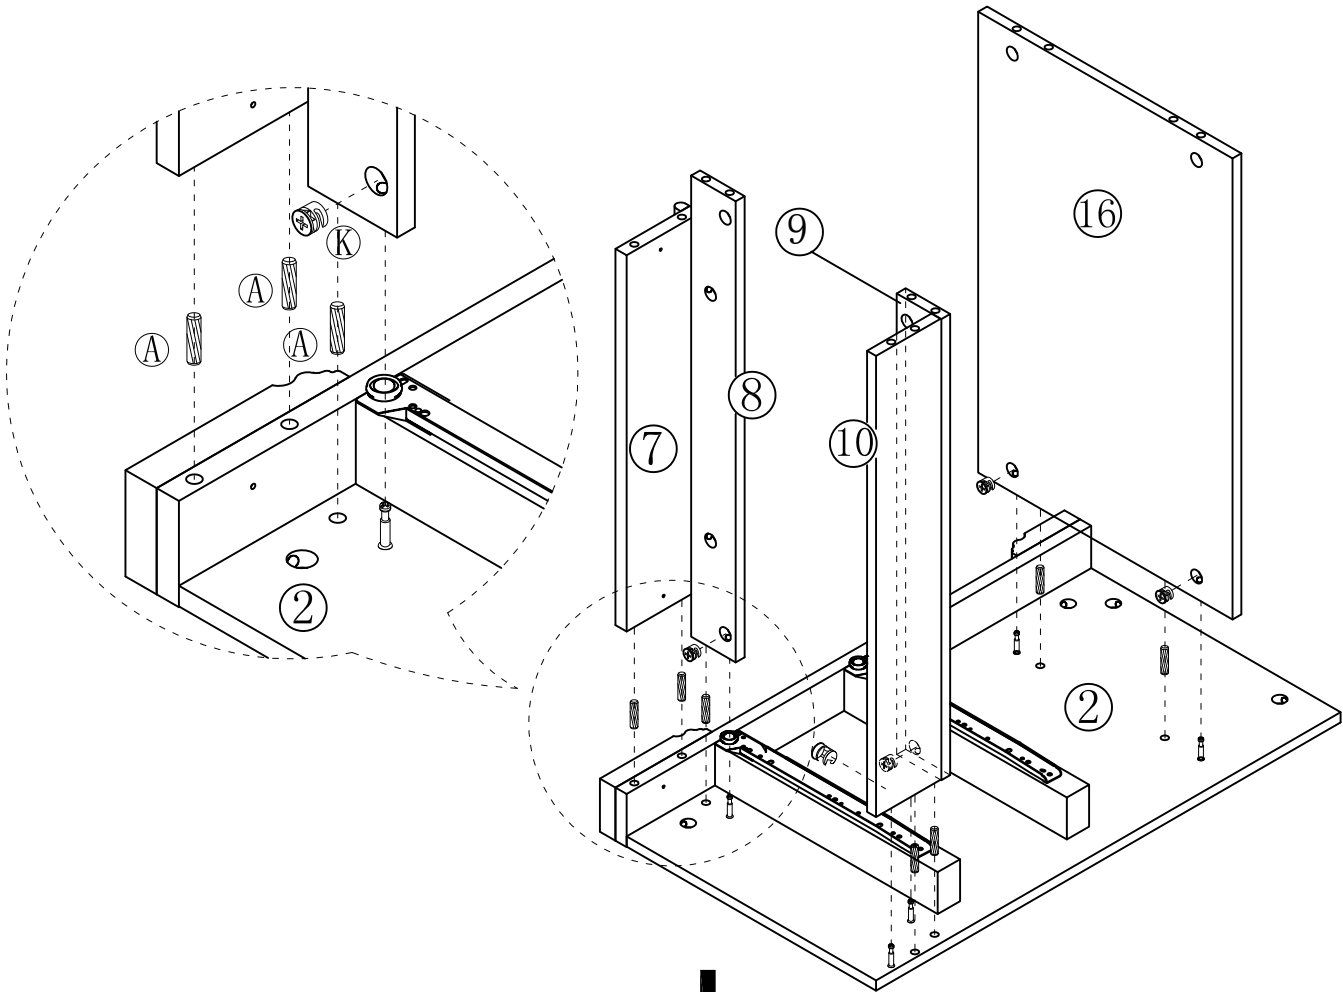

SUPPORT : +18882062161






STEP 7

	
Ⓐ X 7	Ⓚ X 5

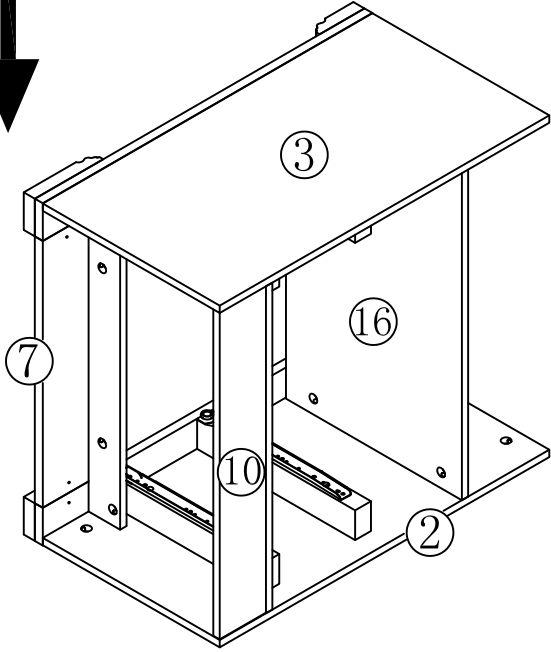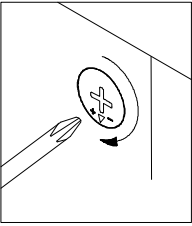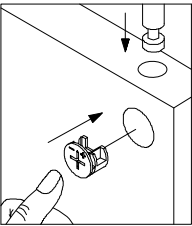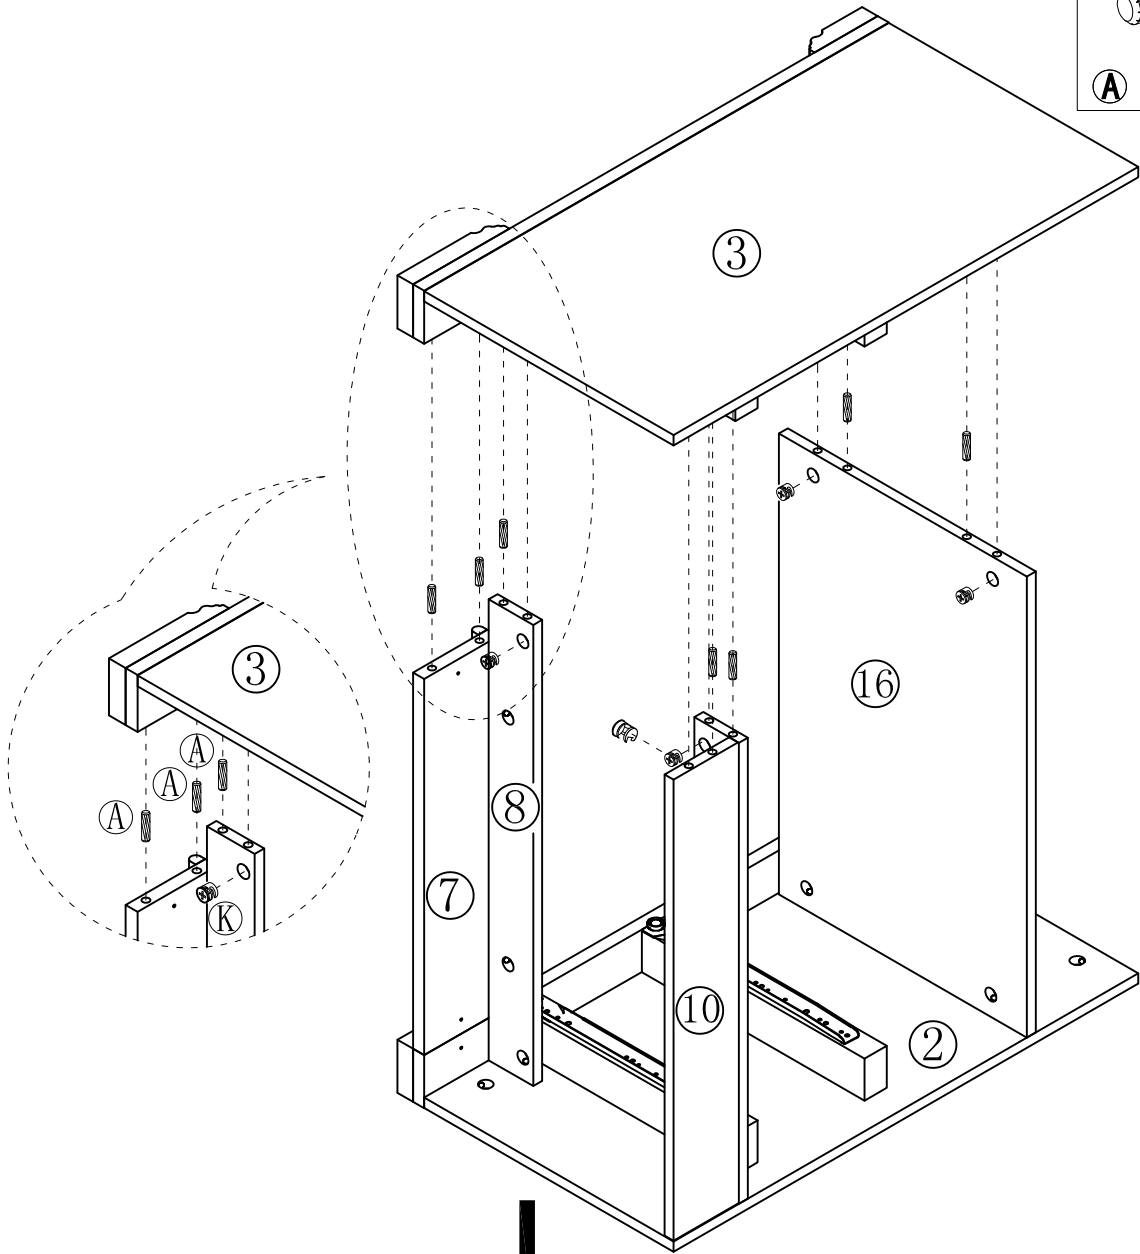

SUPPORT : +18882062161


STEP 8

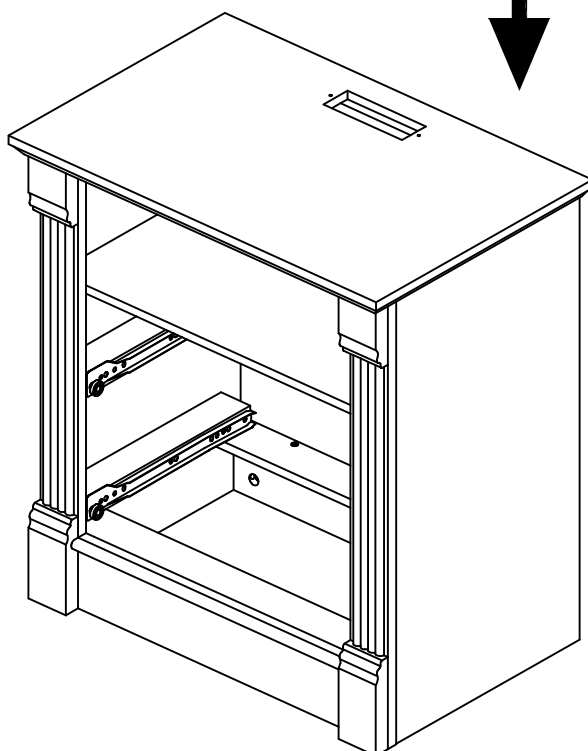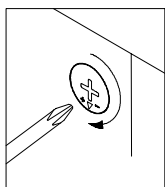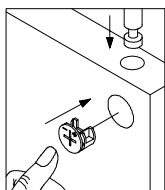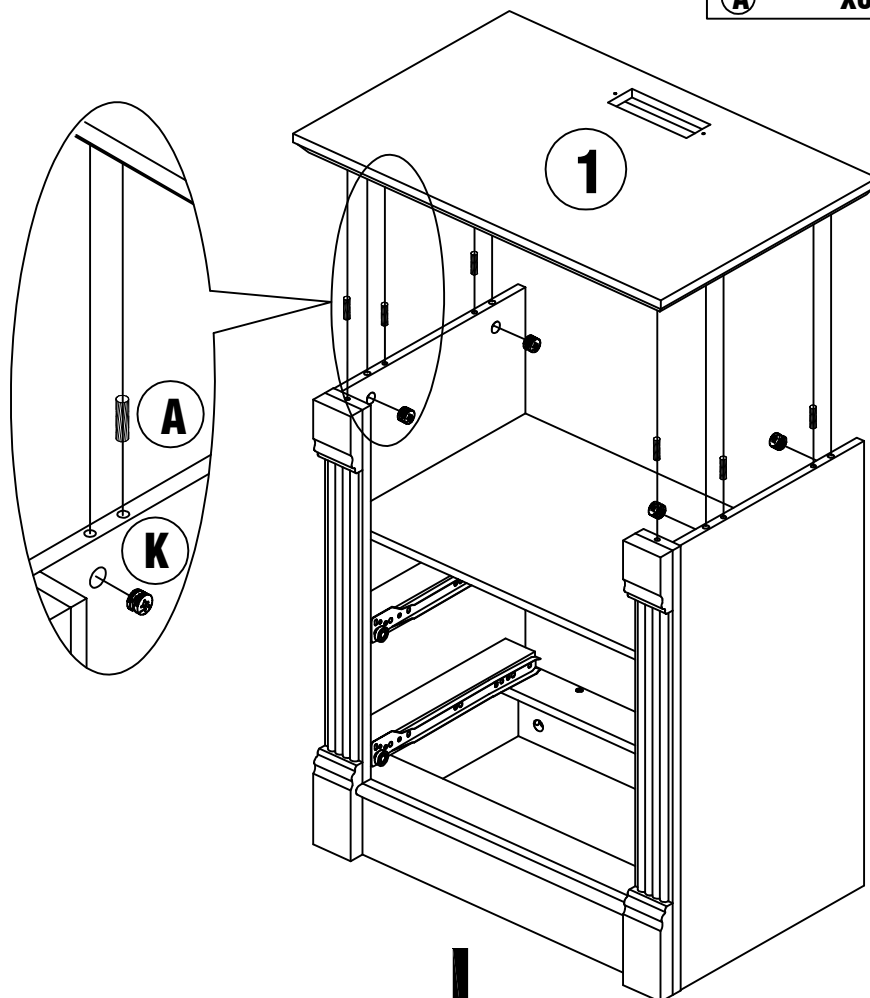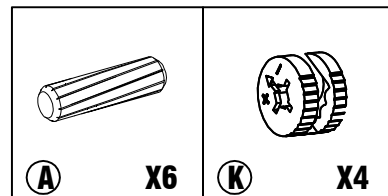

SUPPORT: +18882062161

STEP 9

	
F	G
X4	X2

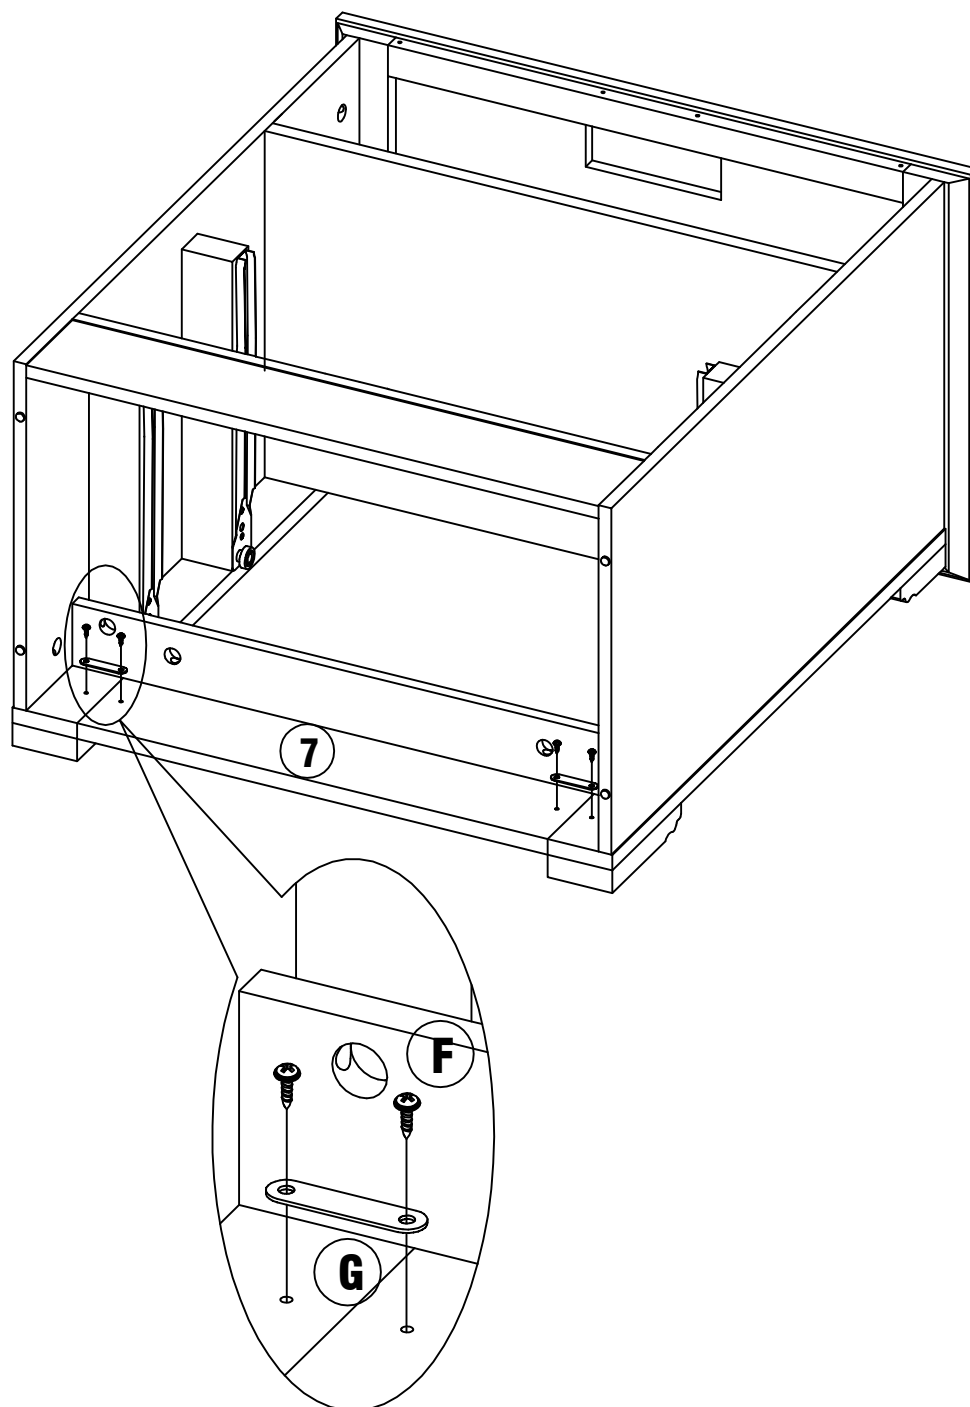


STEP 10





F

X14


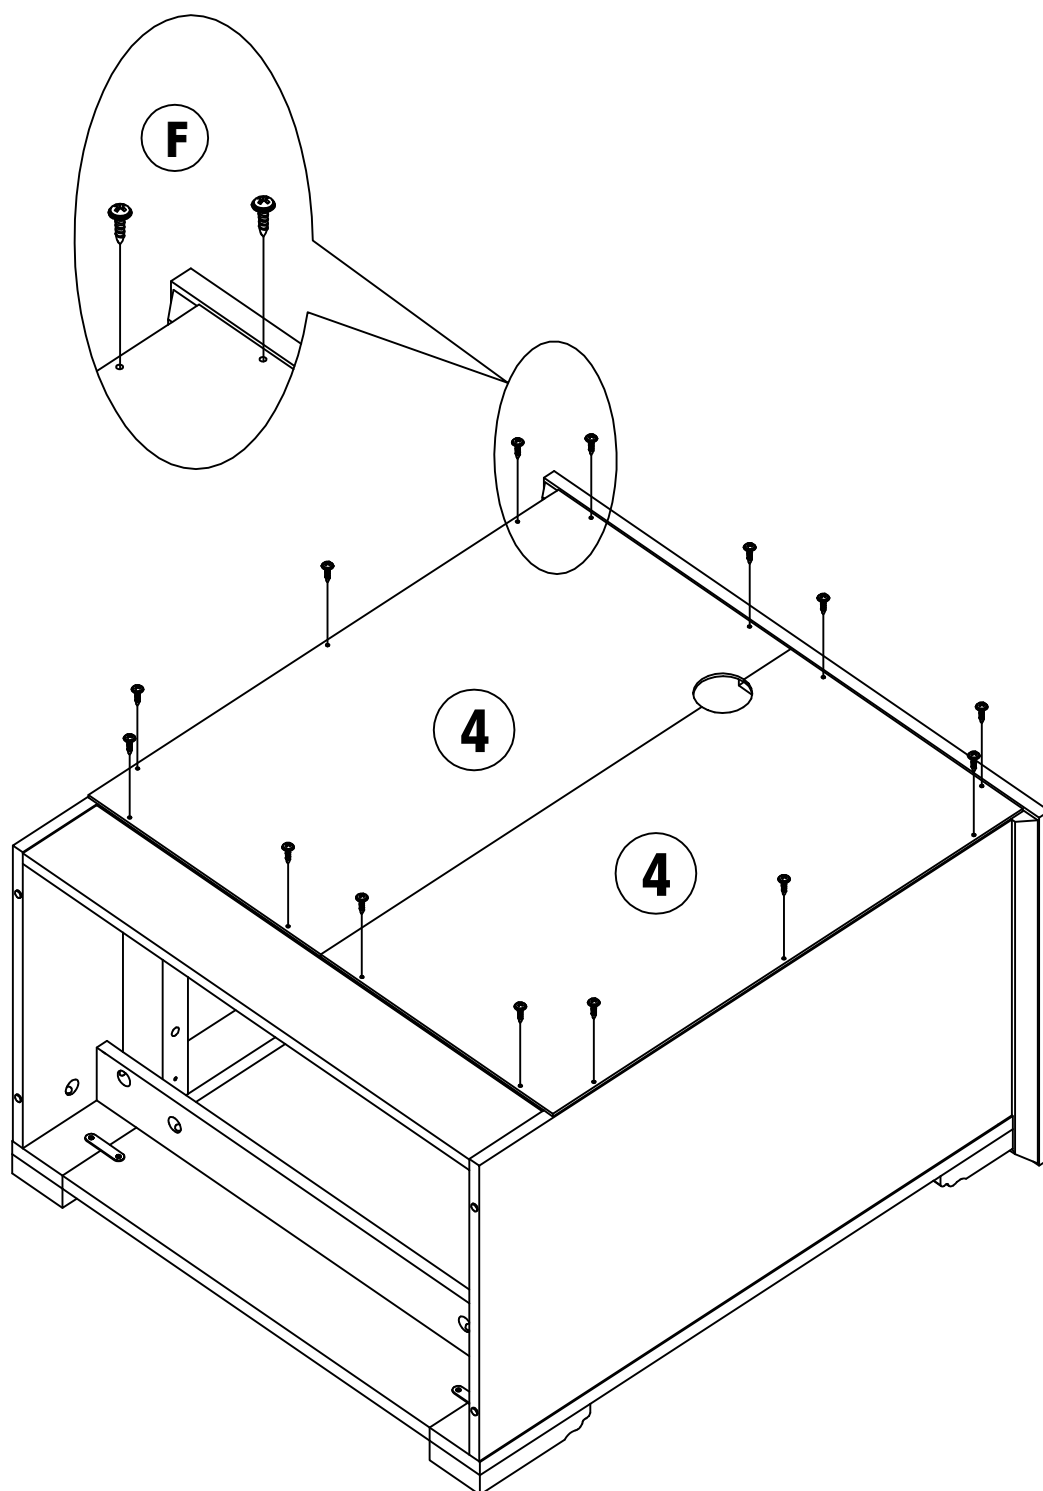


SUPPORT: +18882062161

STEP 11

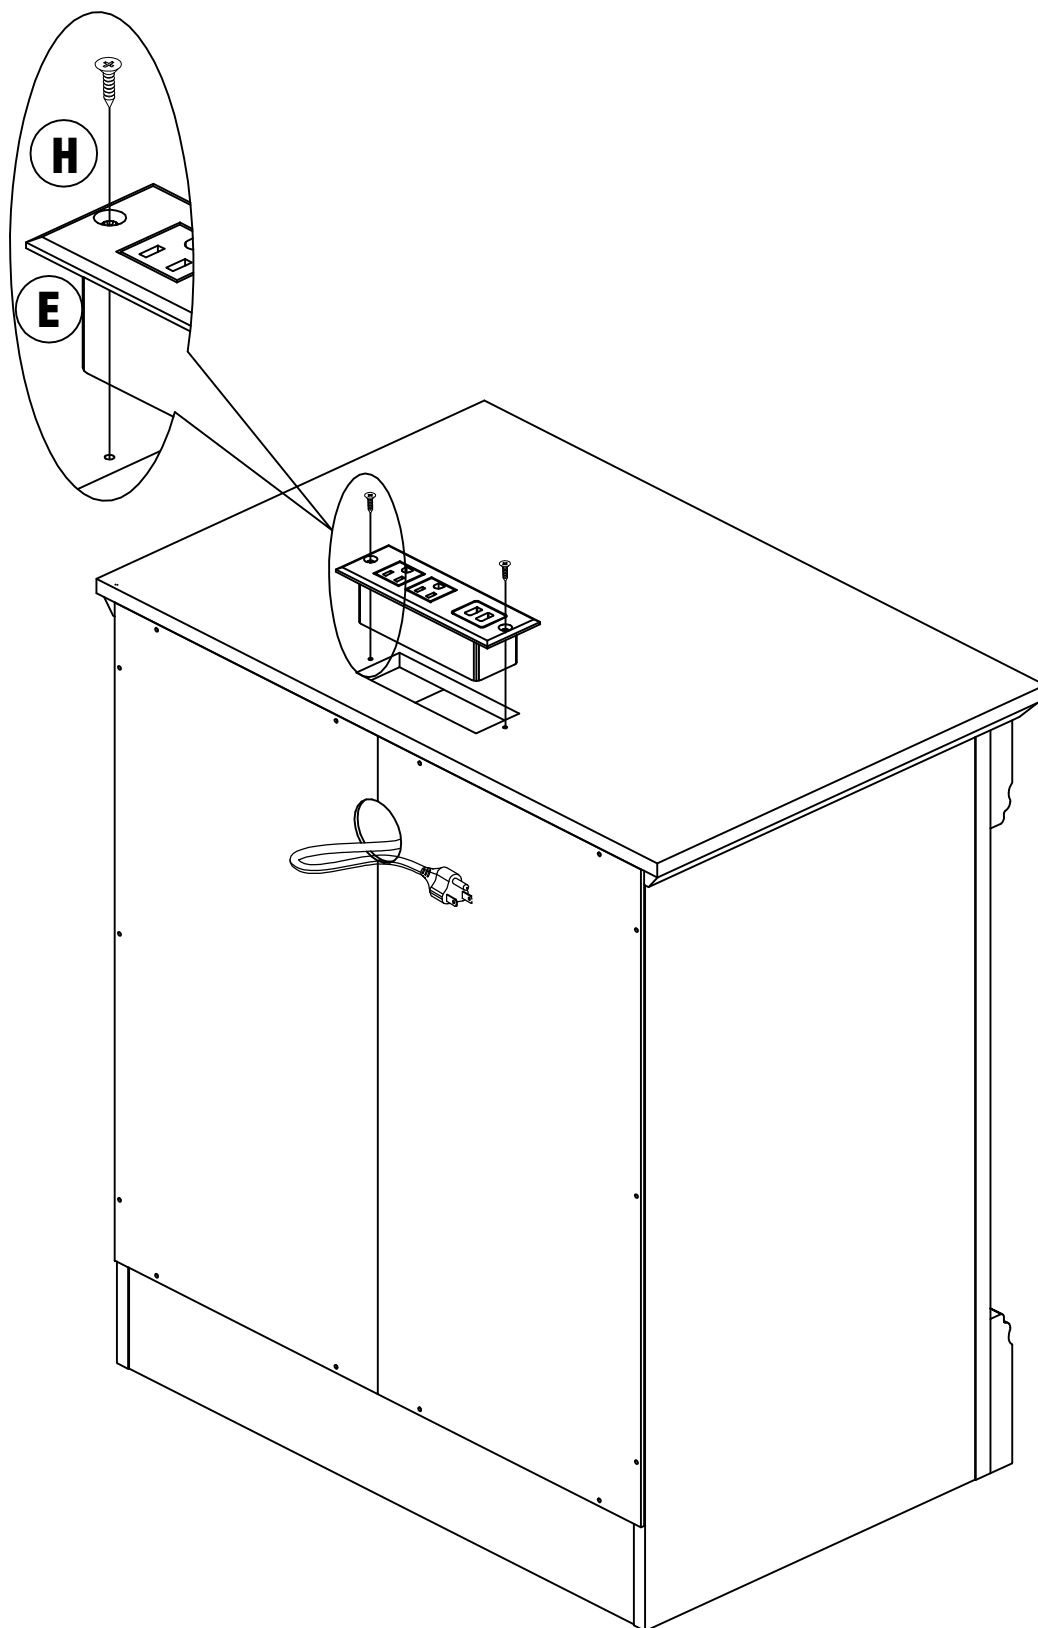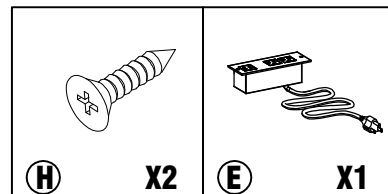


STEP 12

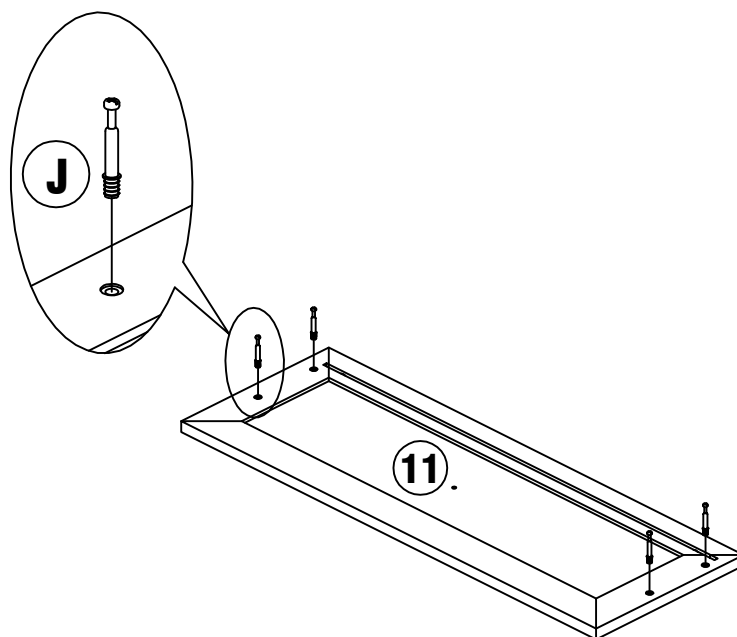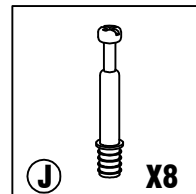

X2




STEP 13

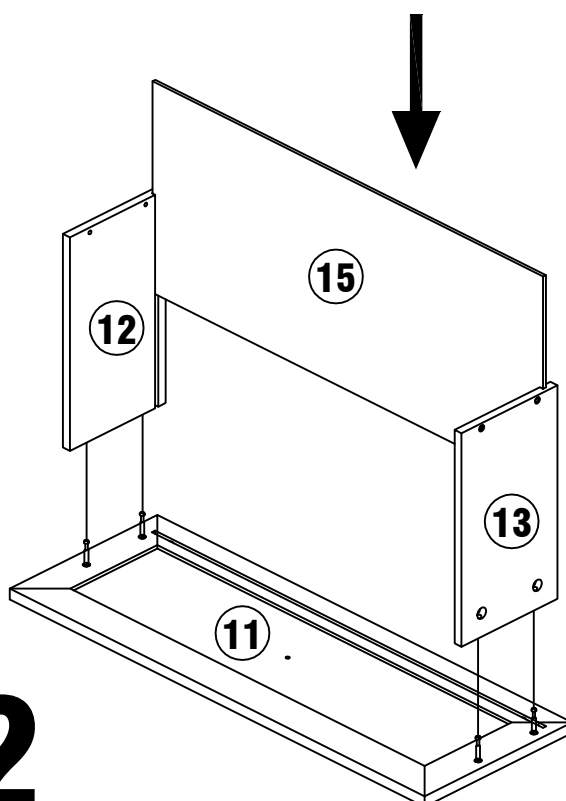

X2



SUPPORT: +18882062161
-16-

STEP 14

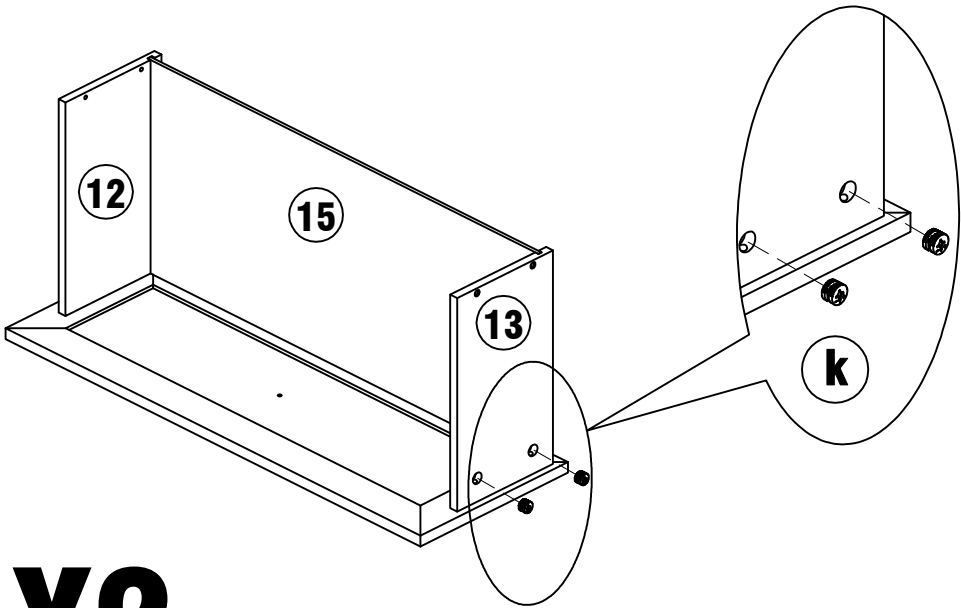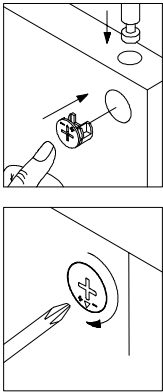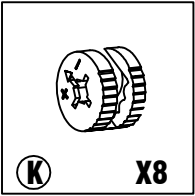



X2




STEP 15

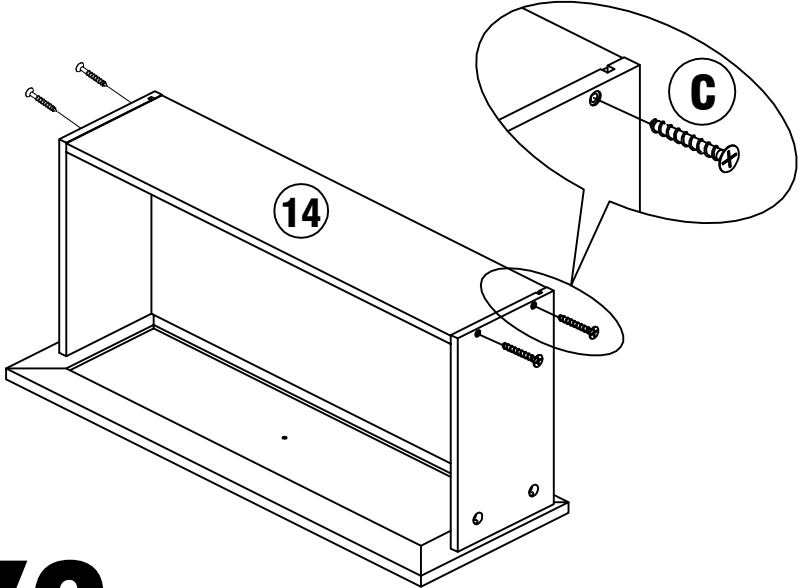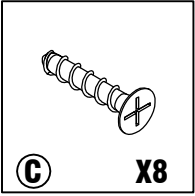

X2



STEP 16

	
B	X8
L	X2

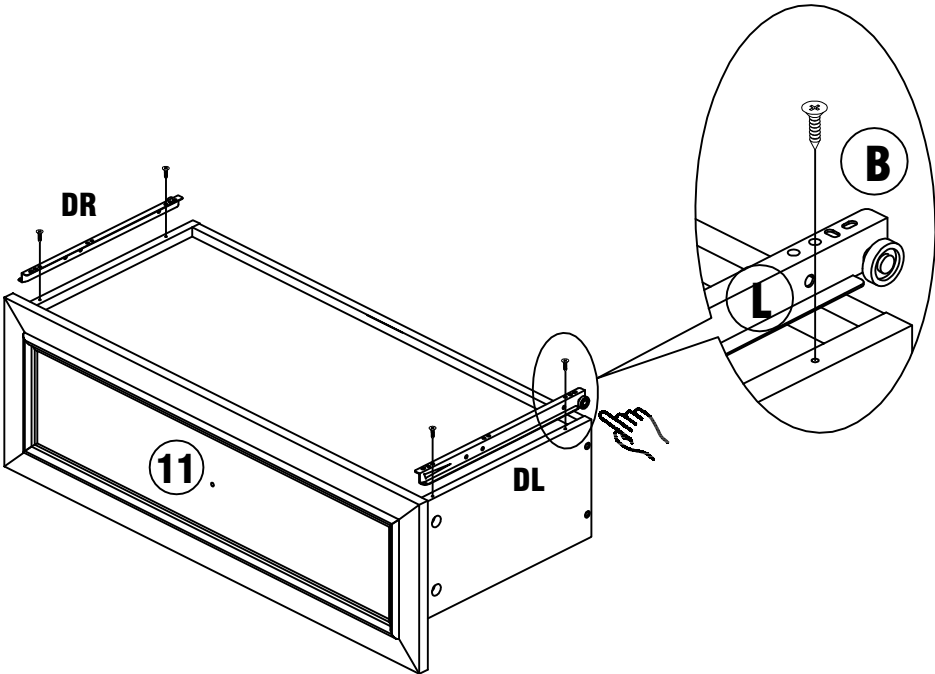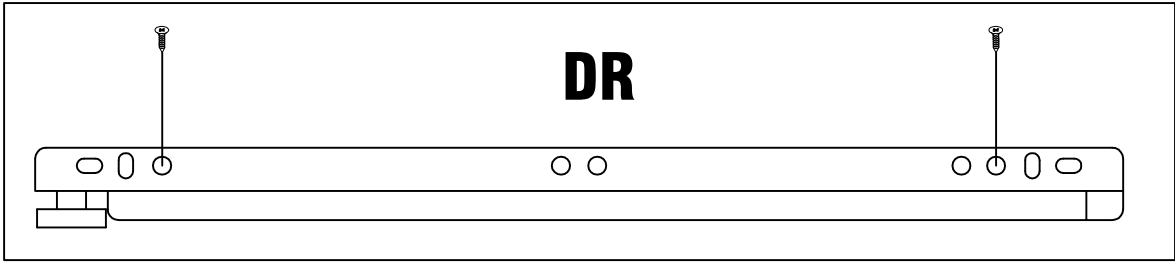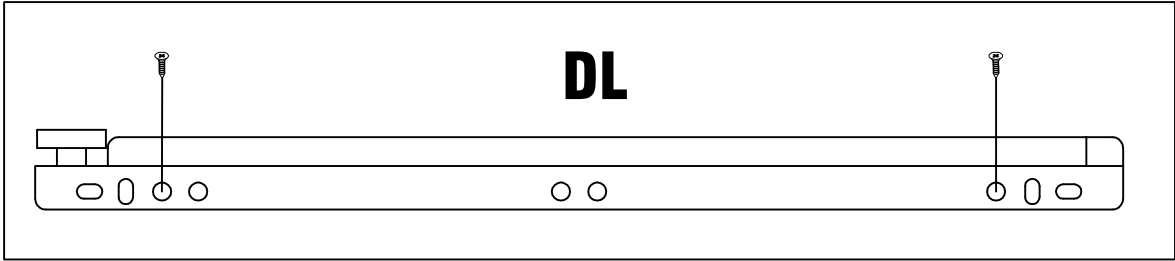

X2

STEP 17

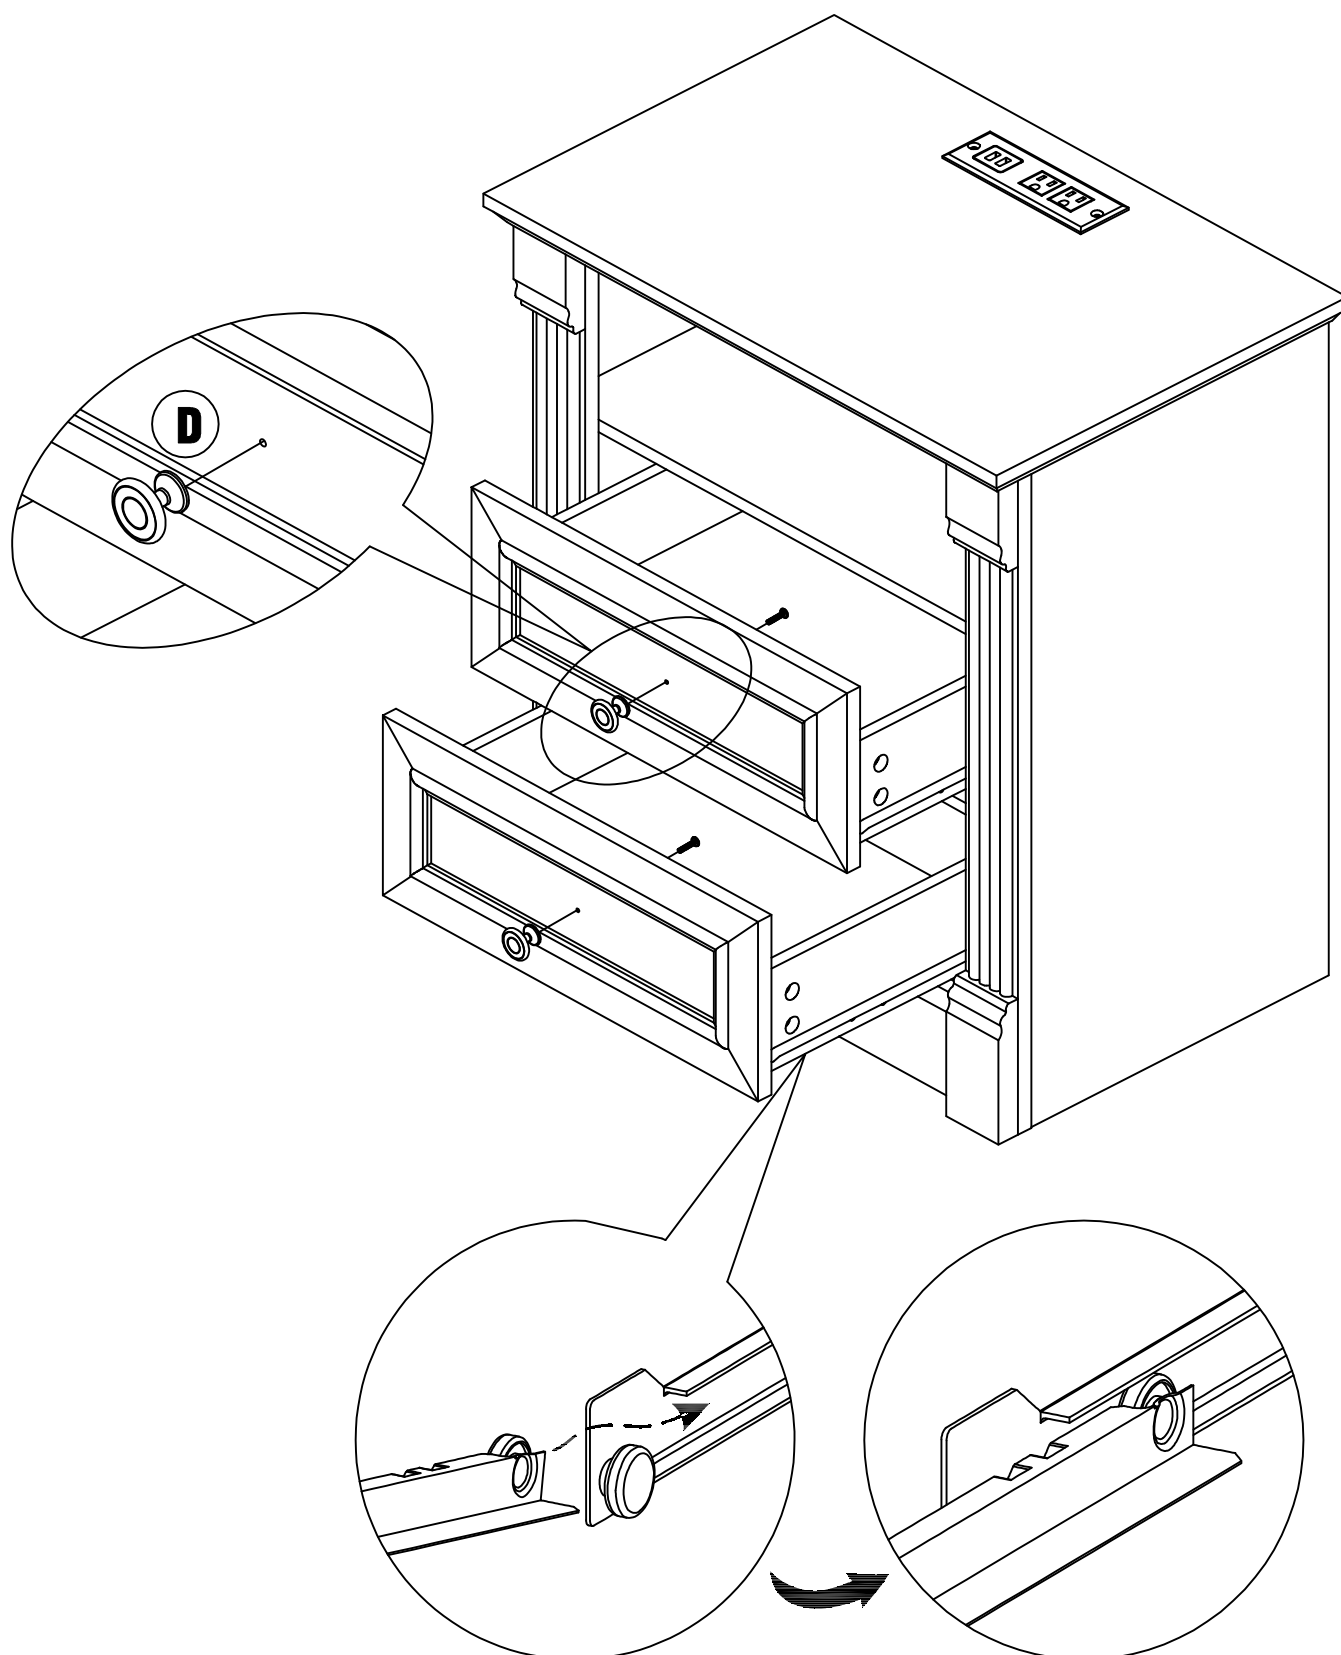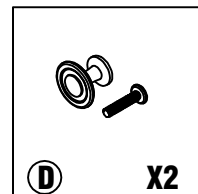

STEP 18

