




Parts and Operation Elements




① 1PC




② 1PC




③ 3PCS



④ 1PC




⑤ 1PC




⑥ 1PC




⑦ 1PC




⑧ 1PC



⑨ 1PC



⑩ 1PC



⑪ 2PCS



⑫ 1PC




⑬ 1PC




⑭ 1PC




⑮ 1PC




⑯ 2PCS

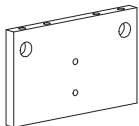


⑰ 2PCS

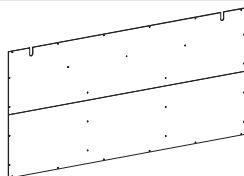


⑱ 1PC

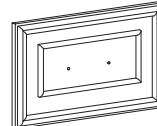


⑲ 4PCS

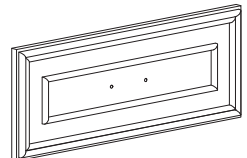

⑳ 6PCS

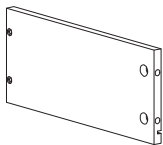

㉑ 10PCS

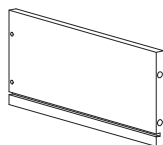


㉒ 10PCS




㉓ 4PCS



㉔ 6PCS

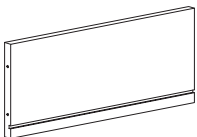


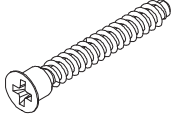








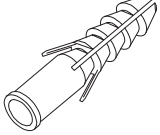

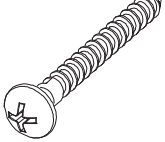

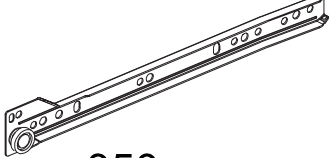
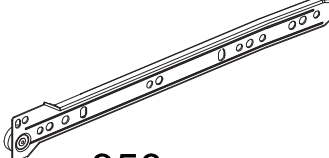
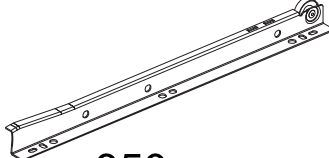

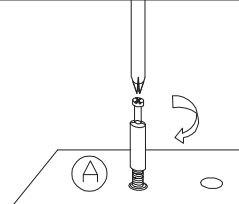
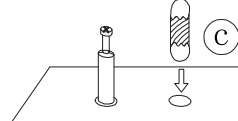
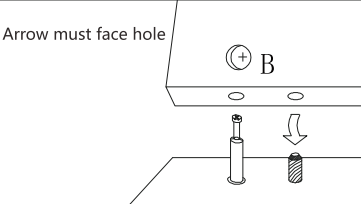
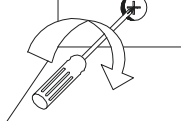


㉕ 4PCS





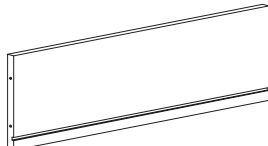


㉖ 6PCS

Hardware


 6x33.5mm Cam Bolt A x92+2	 15x9mm Cam Lock B x92+2	 6x30mm Dowel C x48+2	 5x48mm Screw D x16+2
 4x30mm Screw E x40+2	 3.5x12mm Screw F x140+2	 30mm G x92+2	 6x25mm Screw H x4
 6x10mm Screw I x2	 J x10	 4x16mm Screw K x20+2	 L x2
 M x2	 4x14mm Screw N x2	 4x38mm Screw O x2	 3x14mm Screw P x29+2
 CL x10	 CR x10	 DL x10	 DR x10
 Gently screw cam bolt into the threaded anchor.	 Insert the wood dowel halfway into hole.	 Arrow must face hole	 Screw the camlock firmly into locked position.

Please kindly note the following points when you assemble the sliders of the drawers

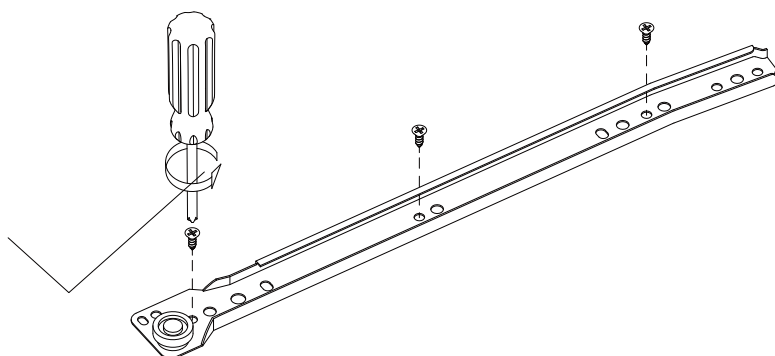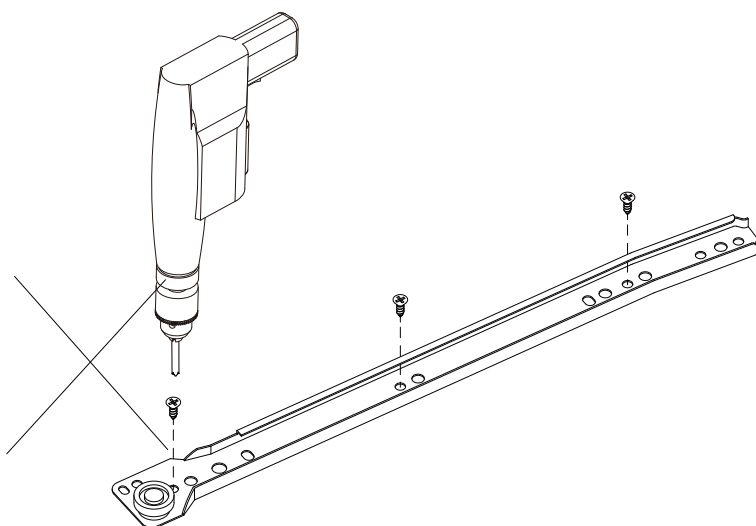
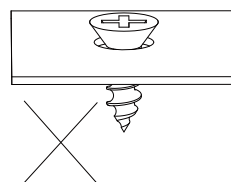
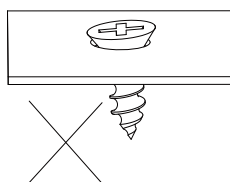
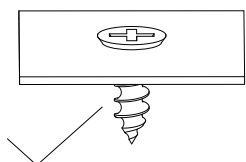


1






A






x12

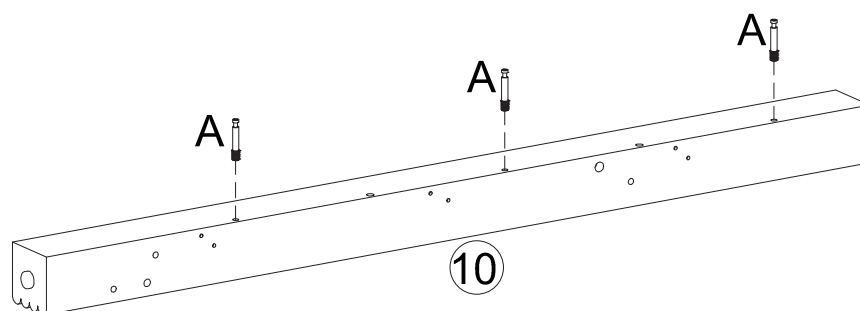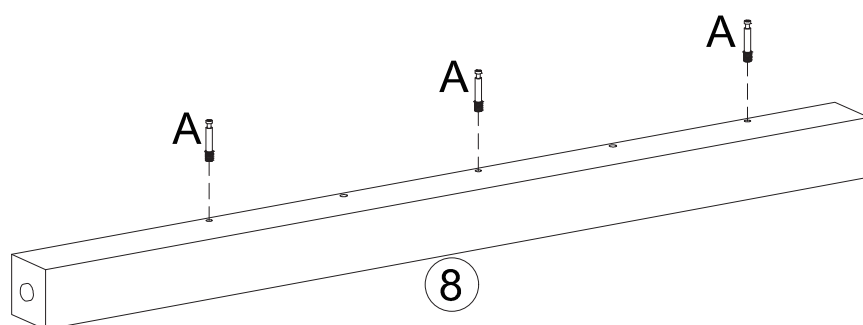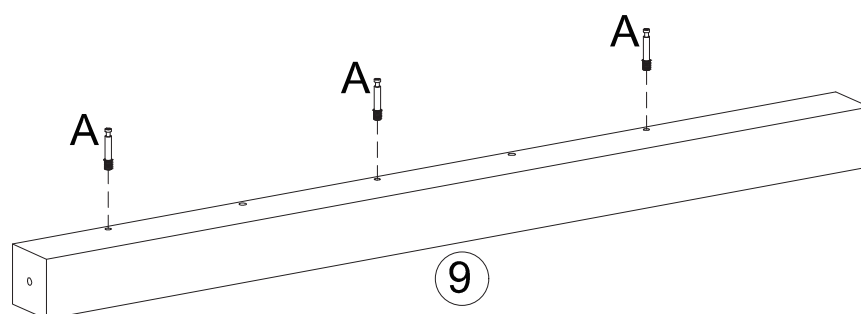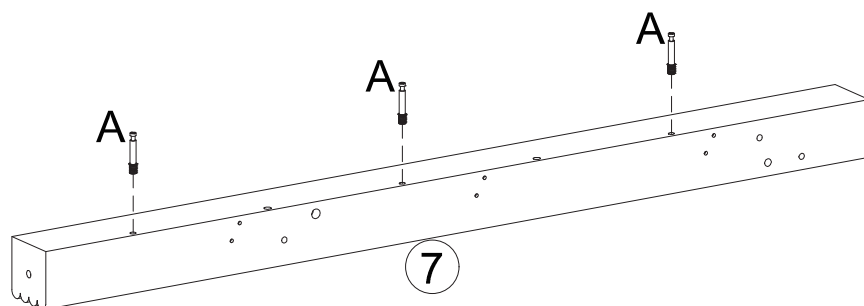

2

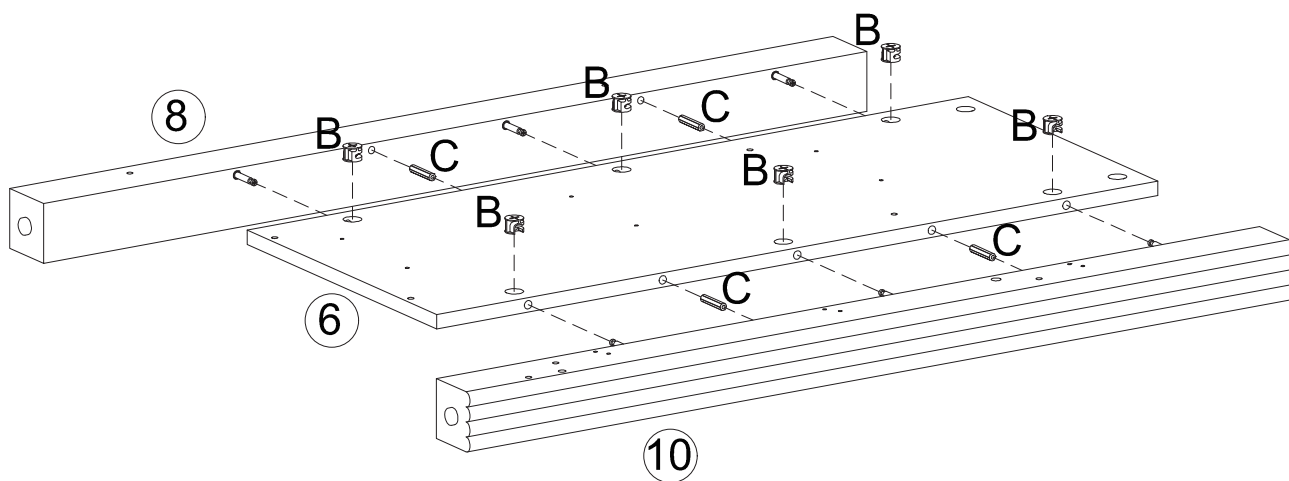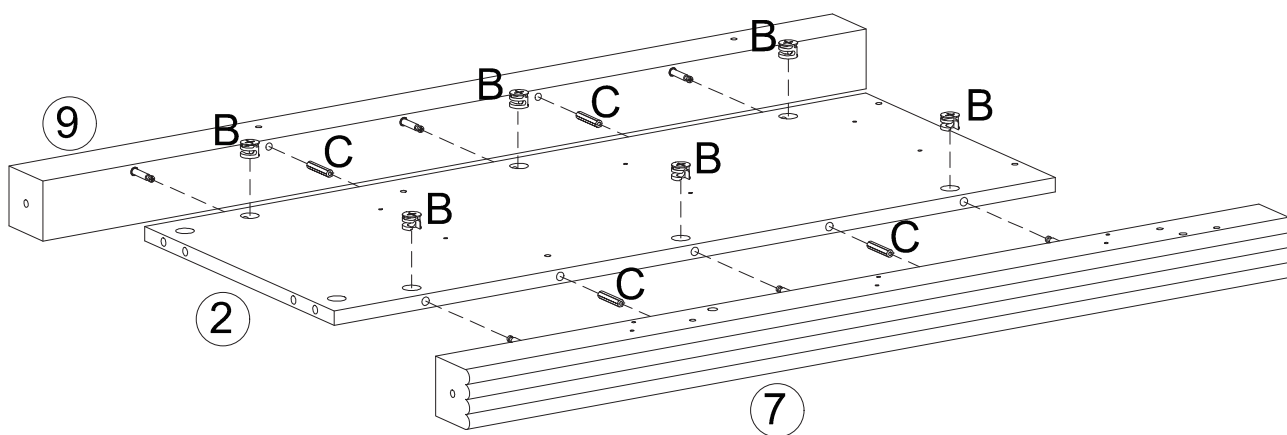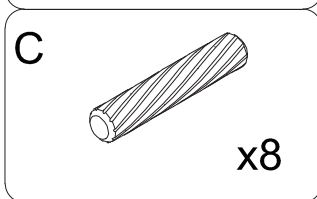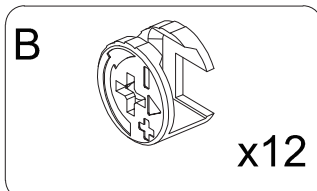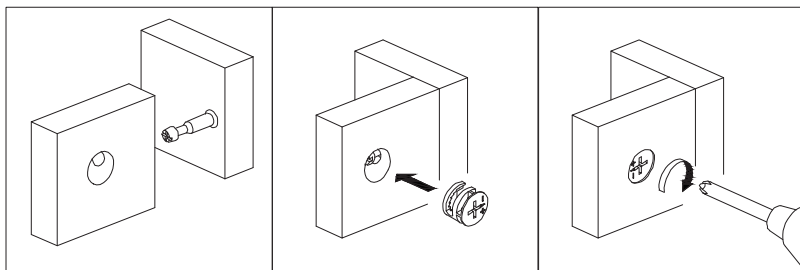


3

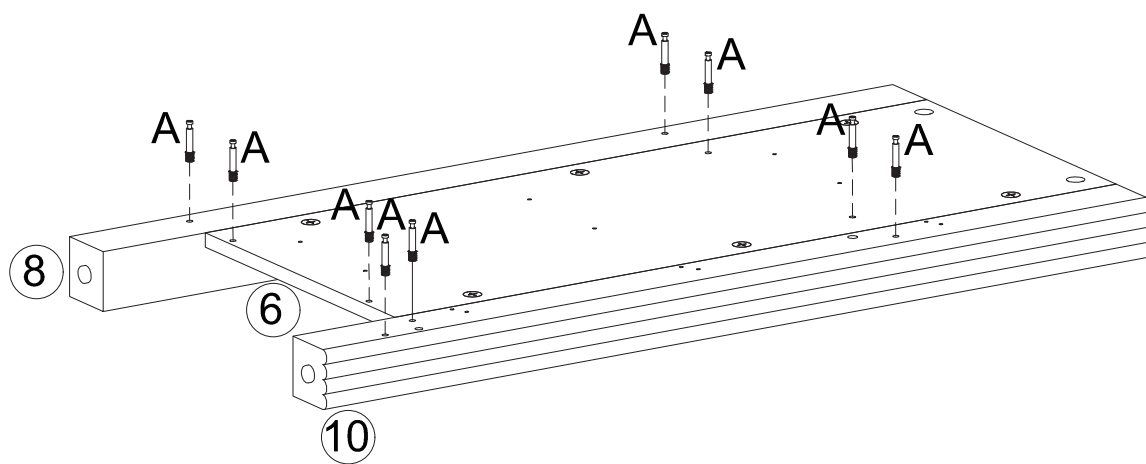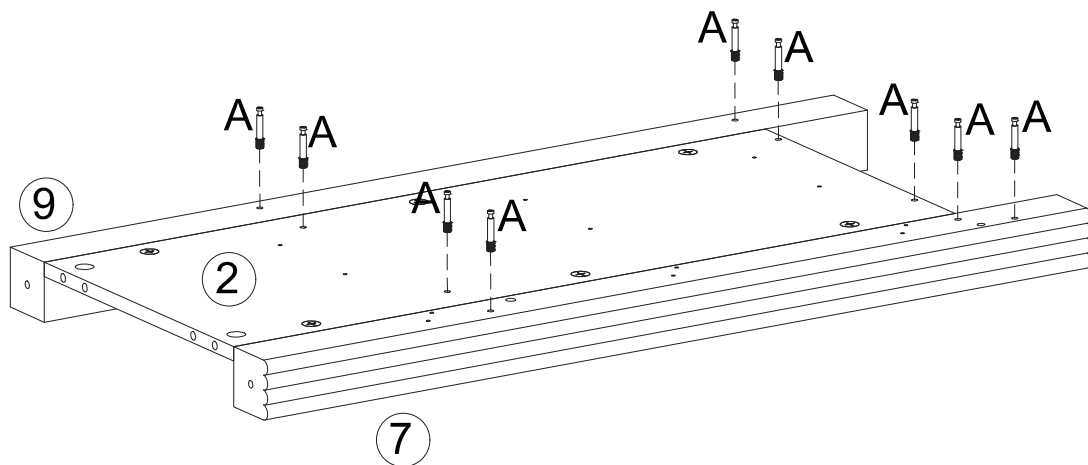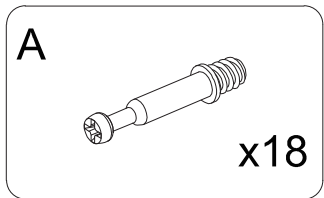


4

F




x24

CL




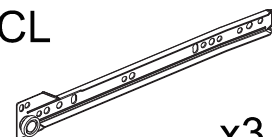


x3









CR

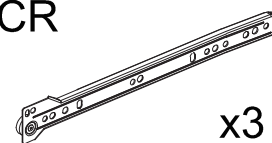

x3




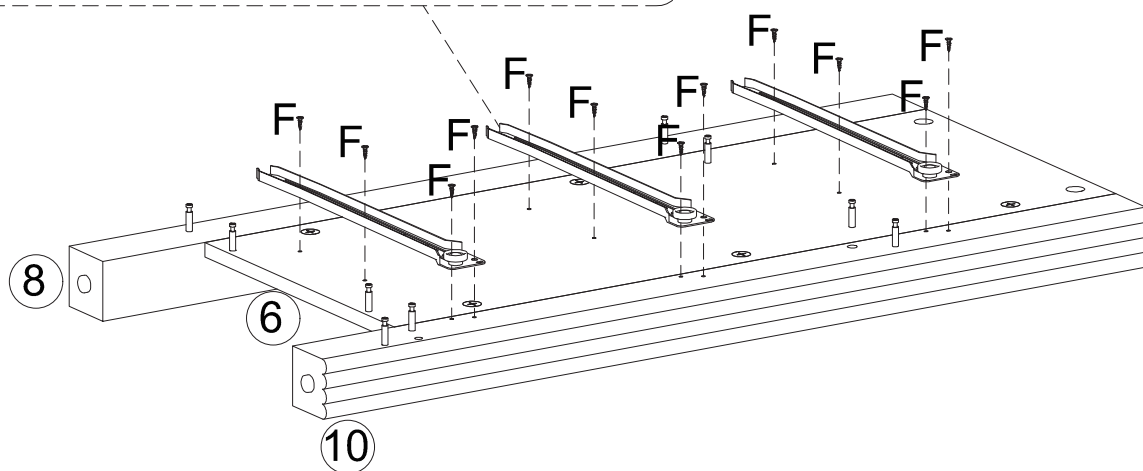
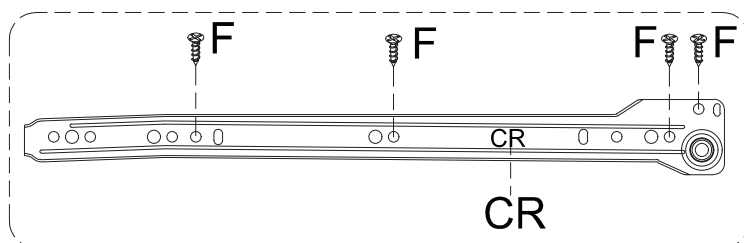
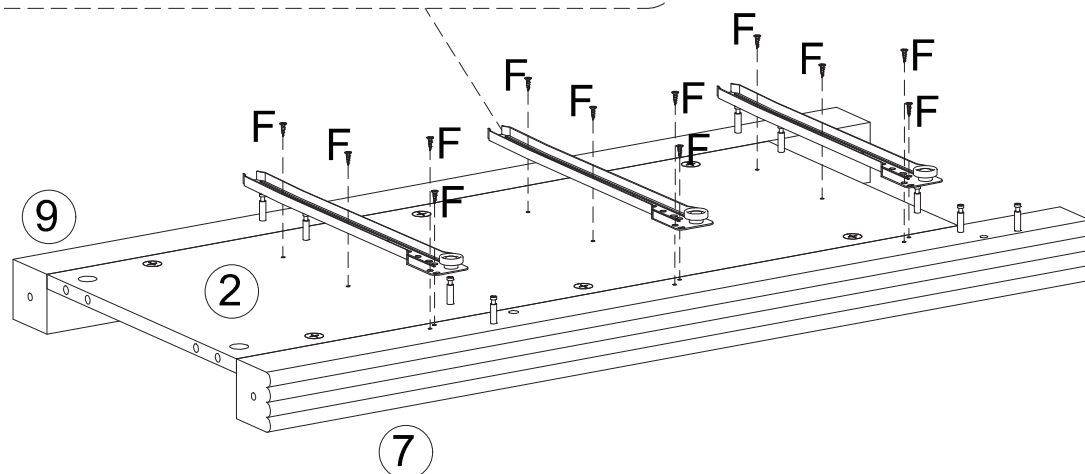
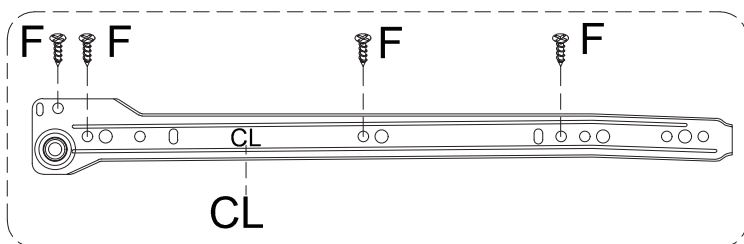


5

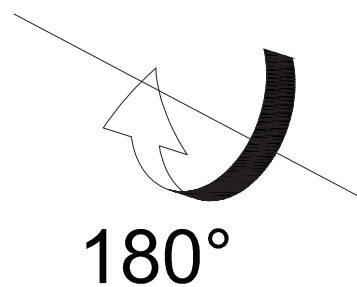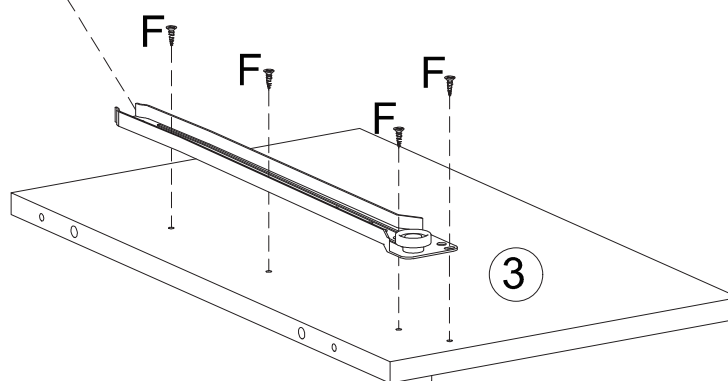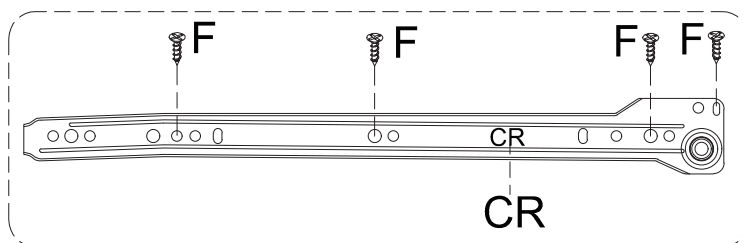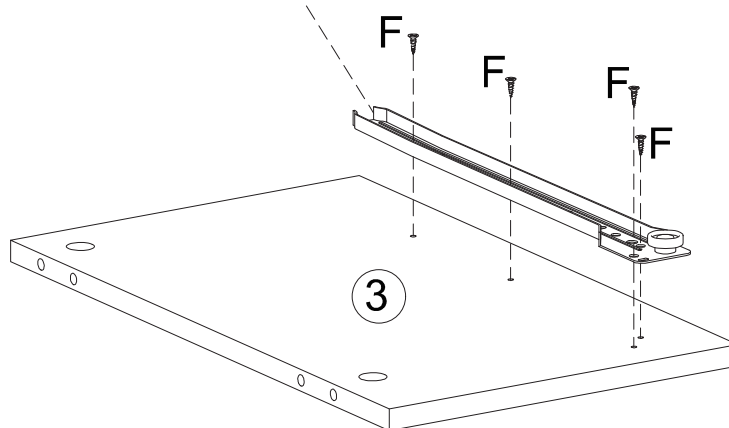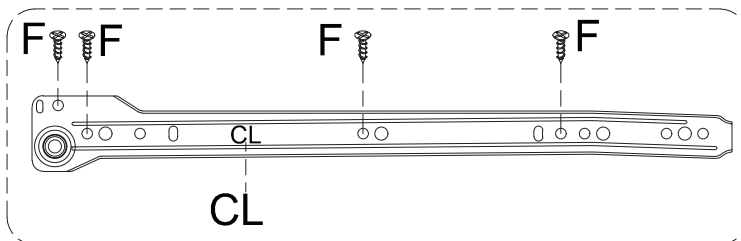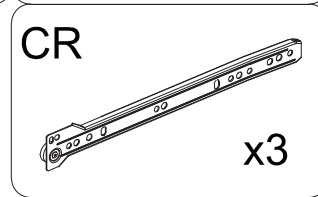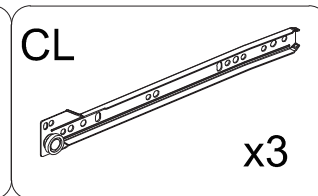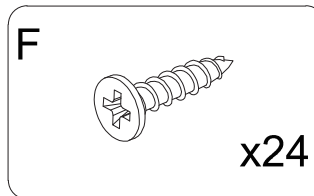


x3

6

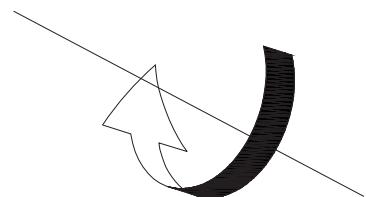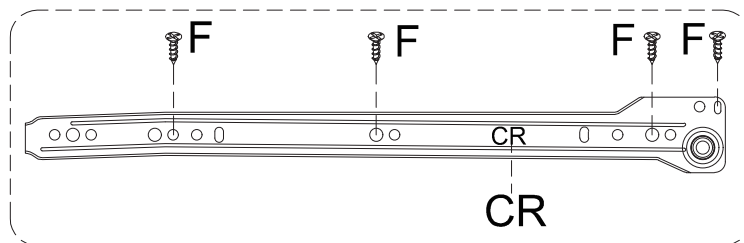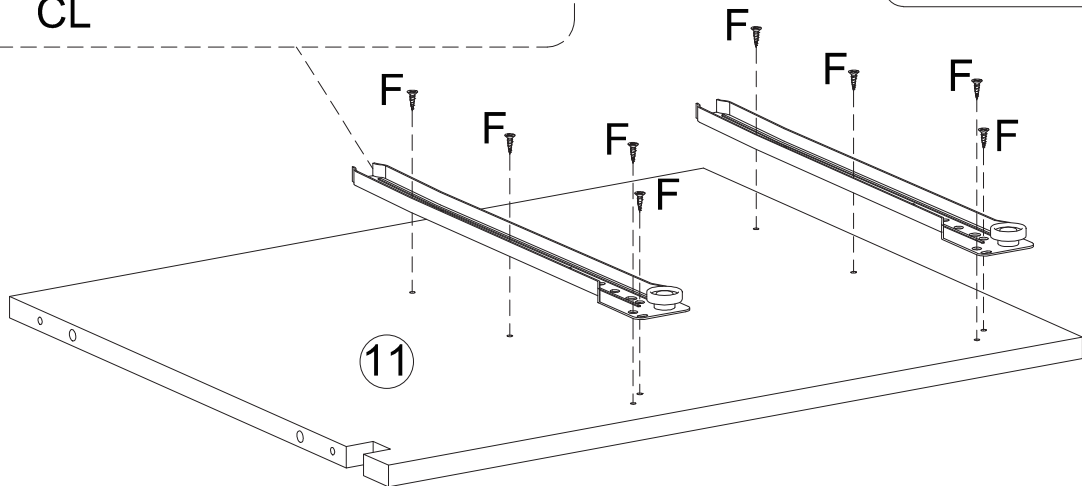
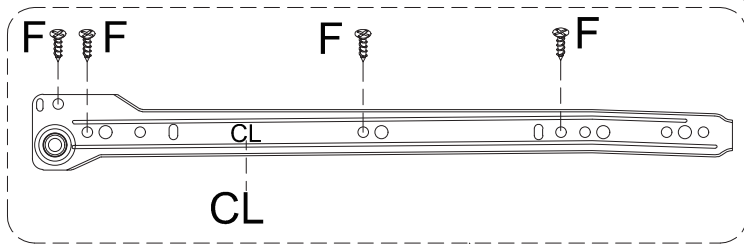
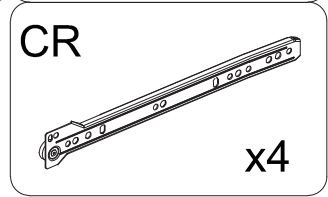
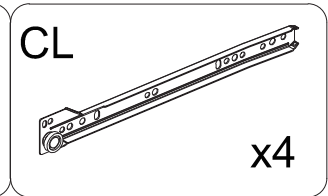
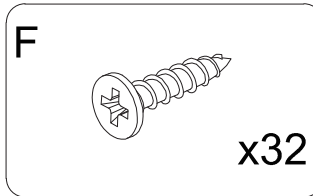


180°


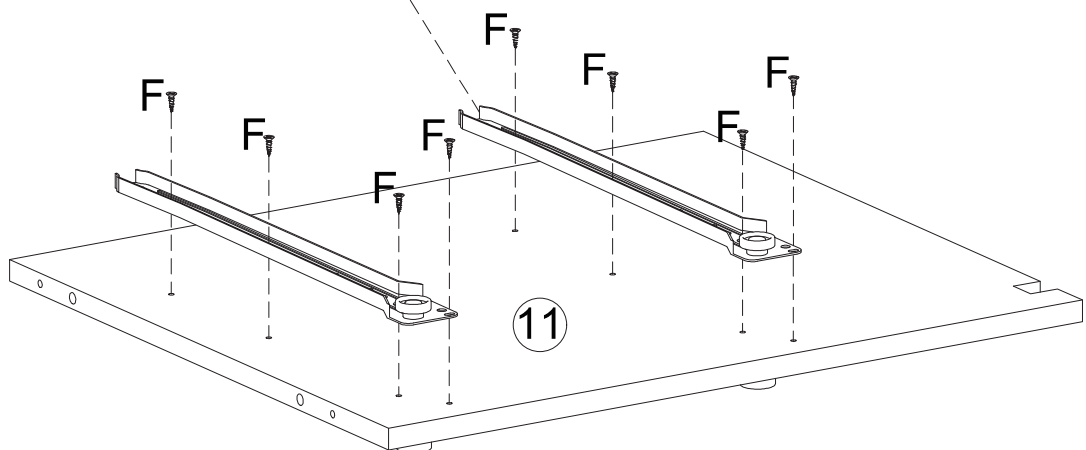


x2

7

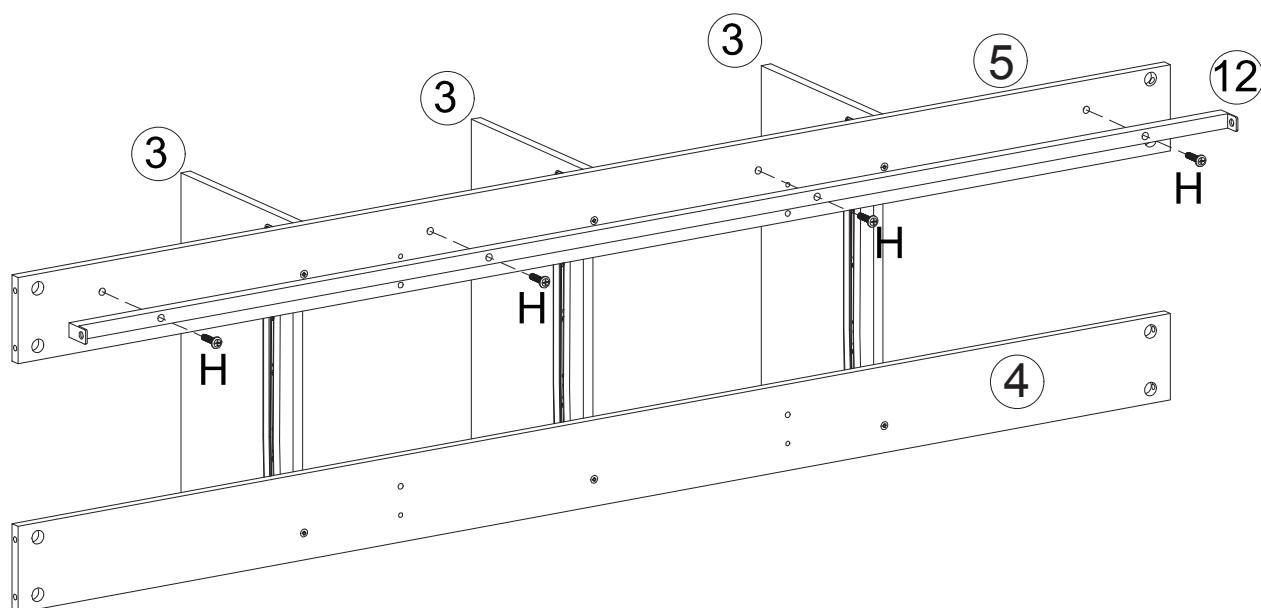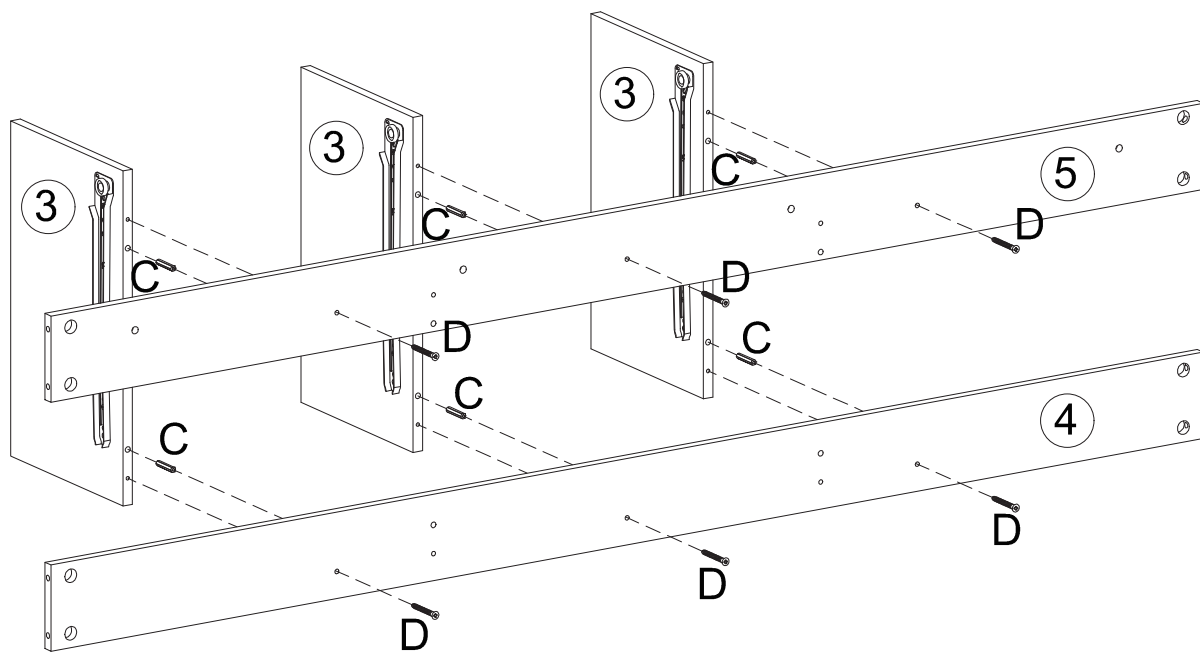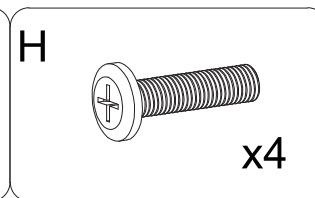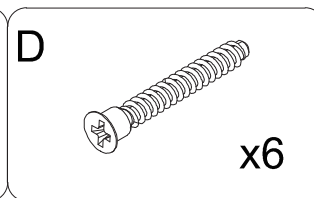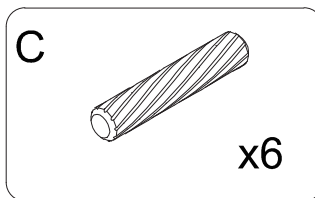


8

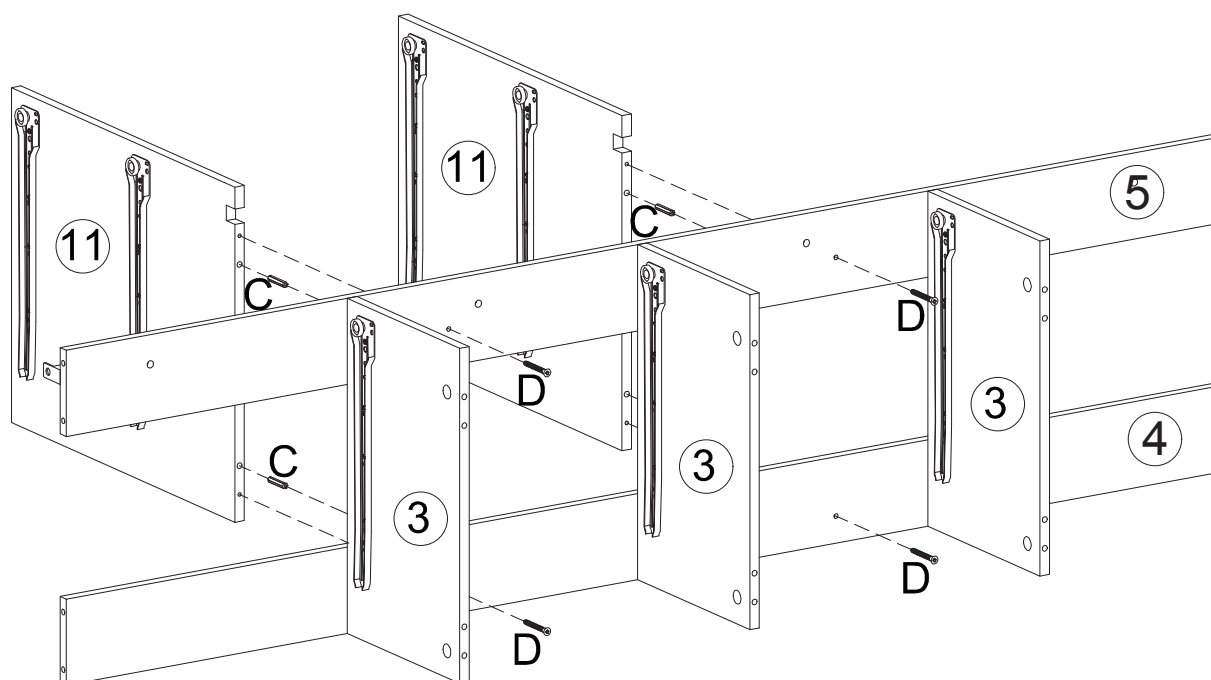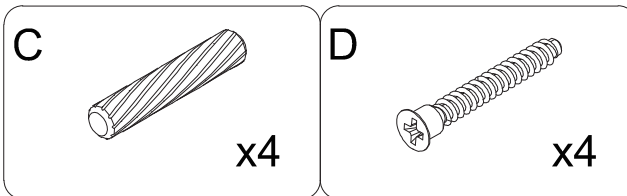


9

A




x4

B



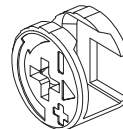


x4




C

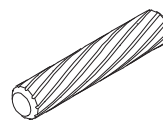





x4

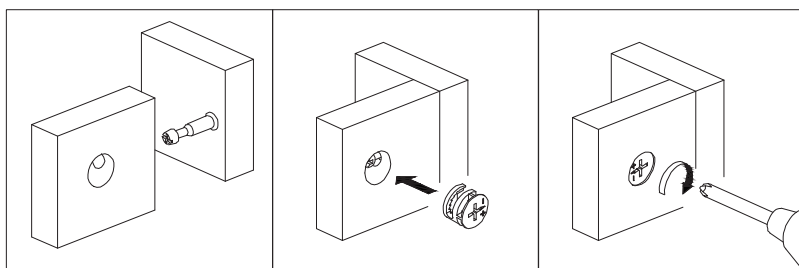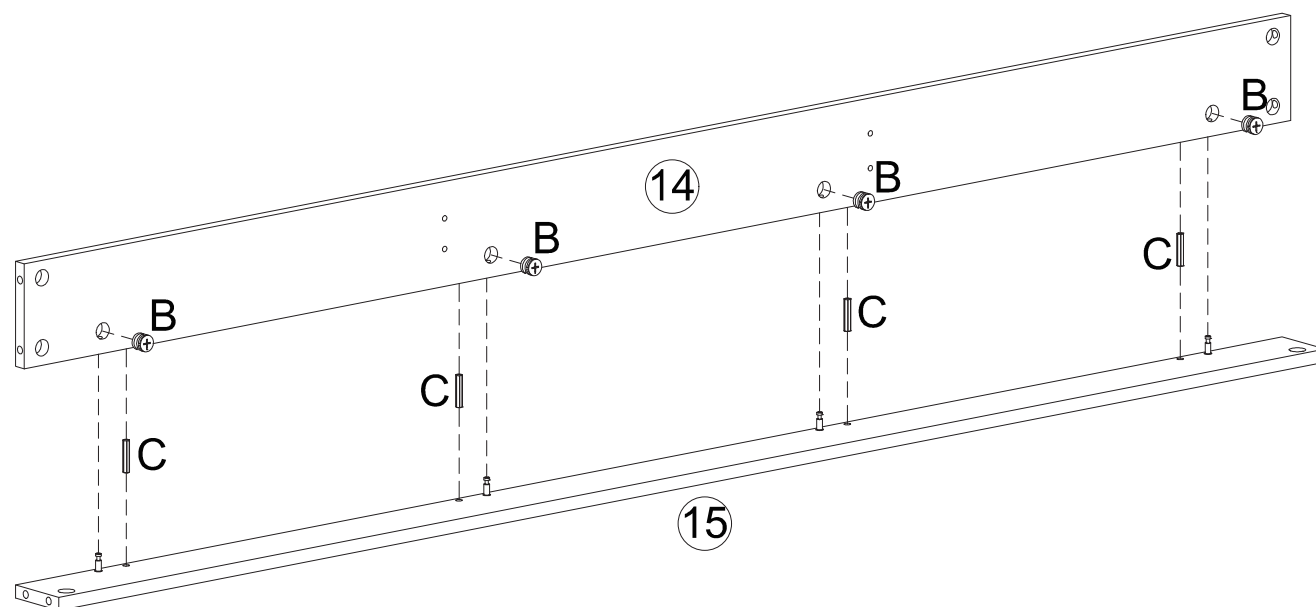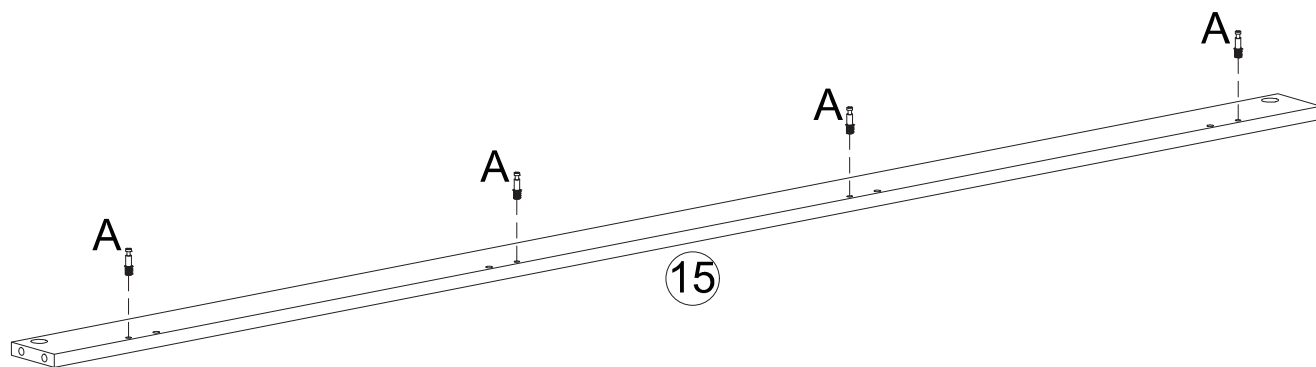








10

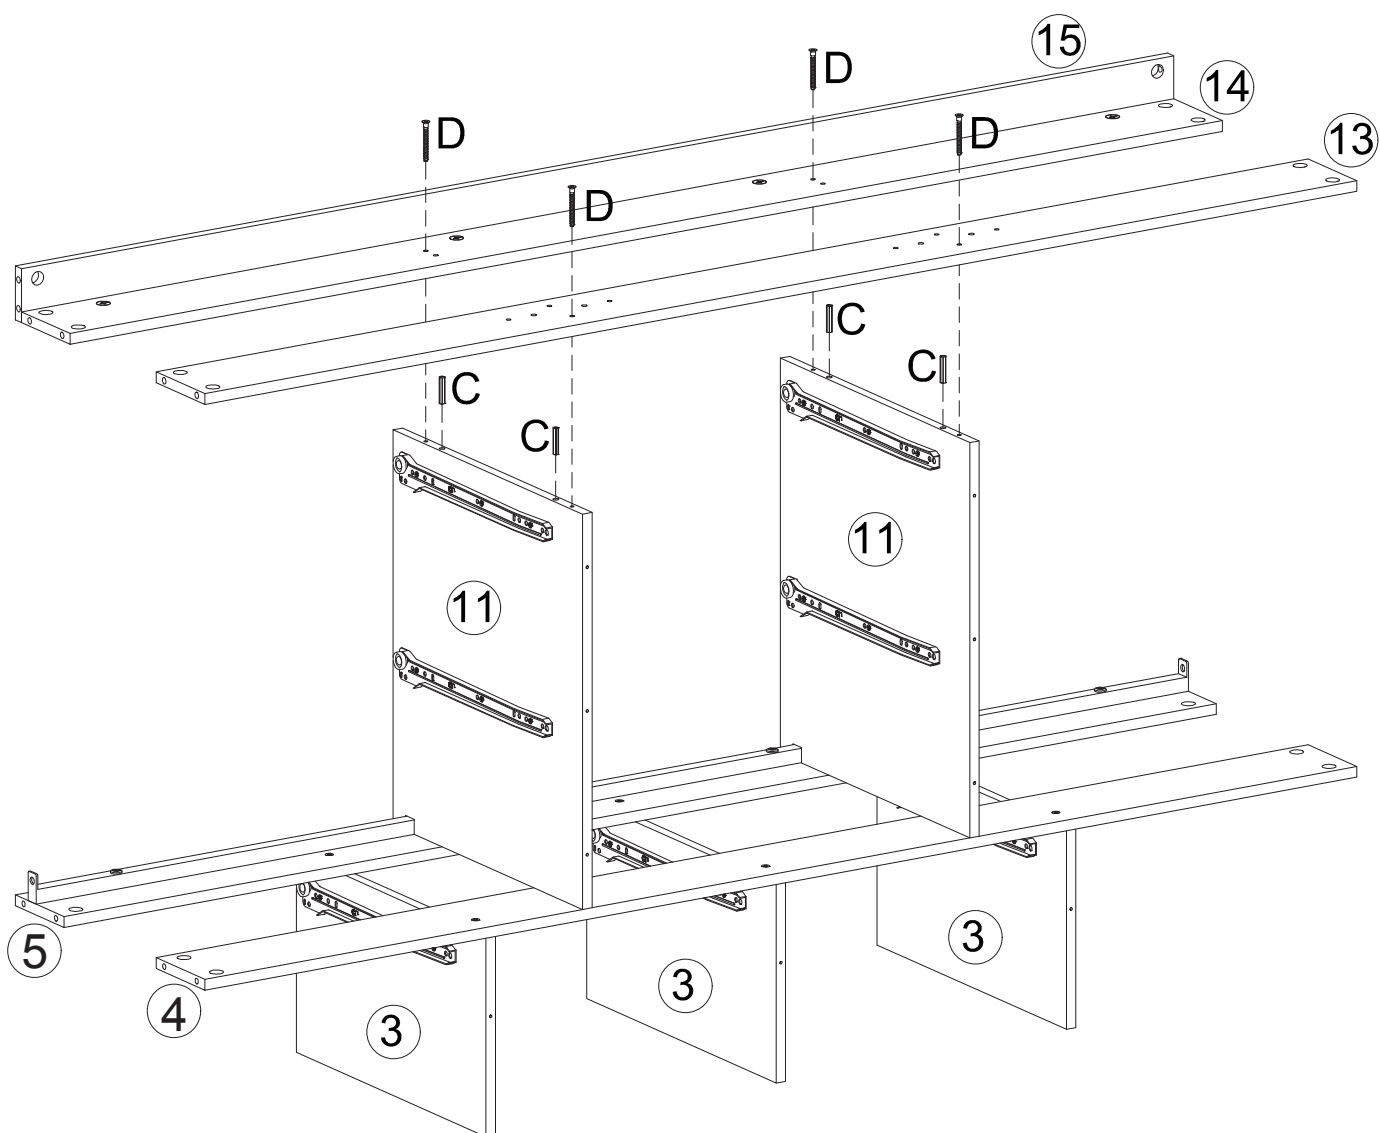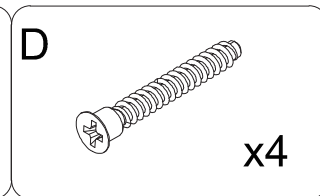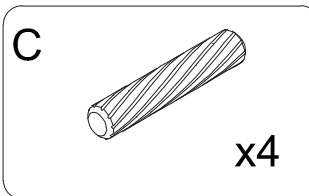





11

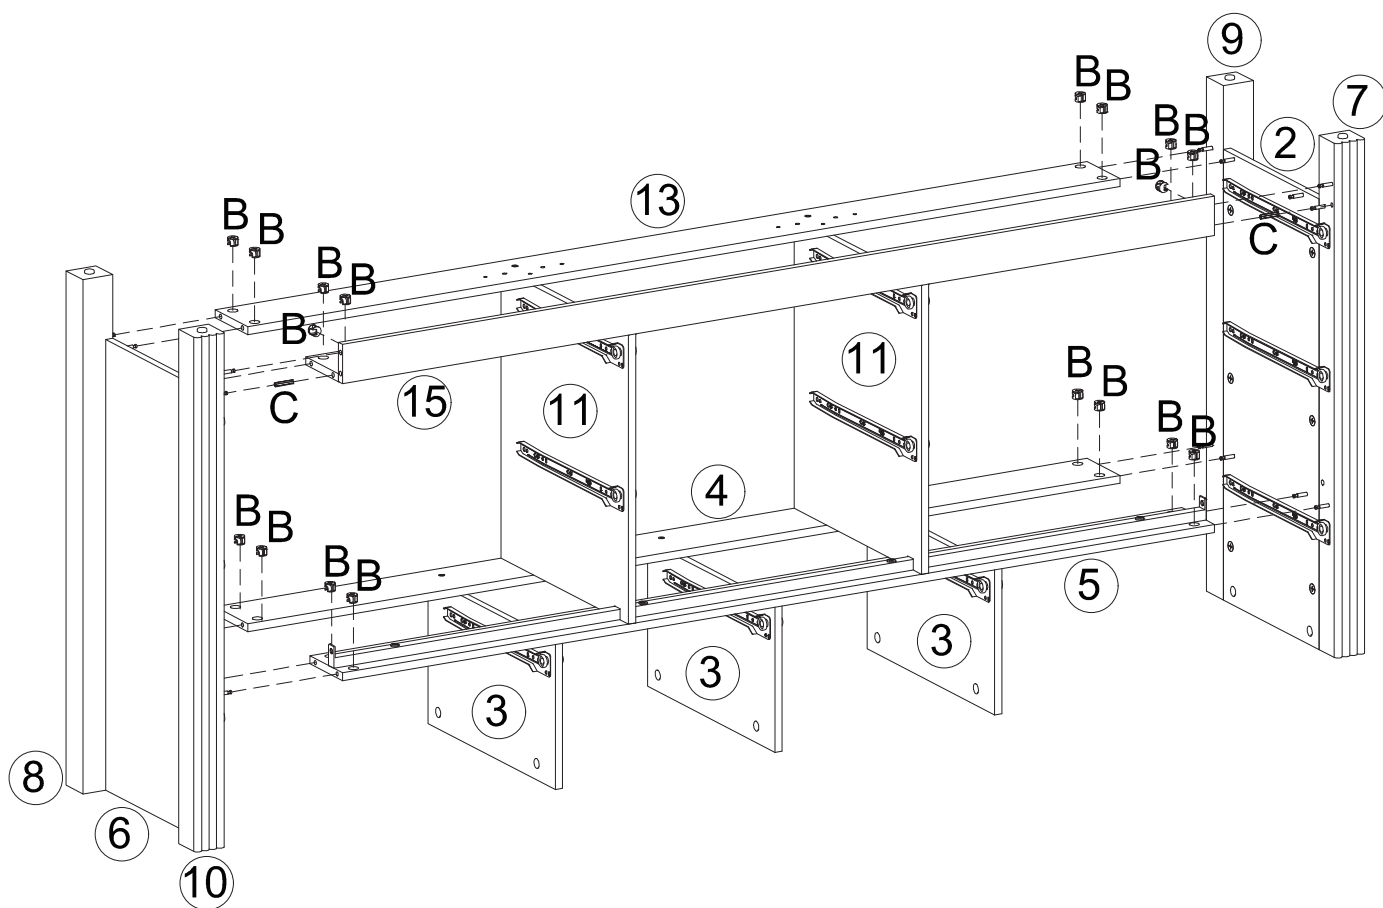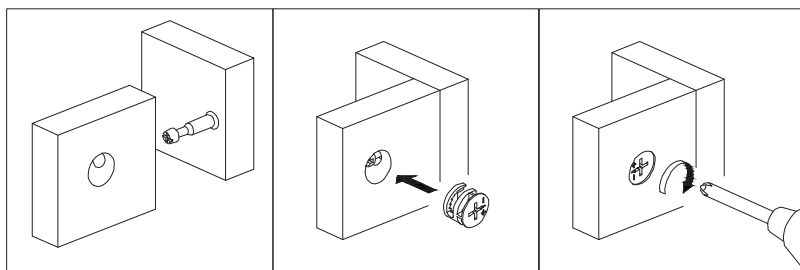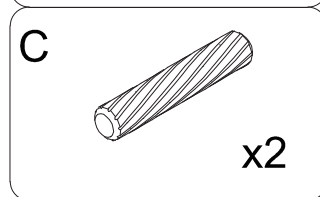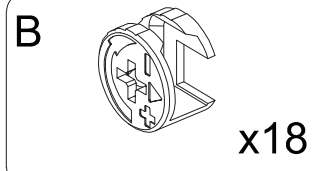




12

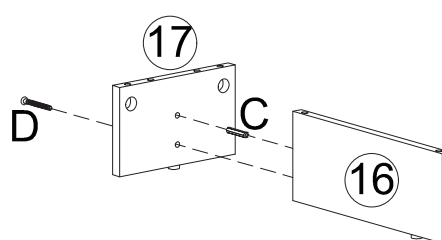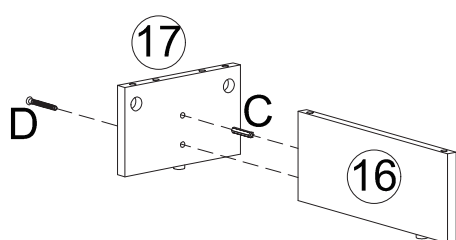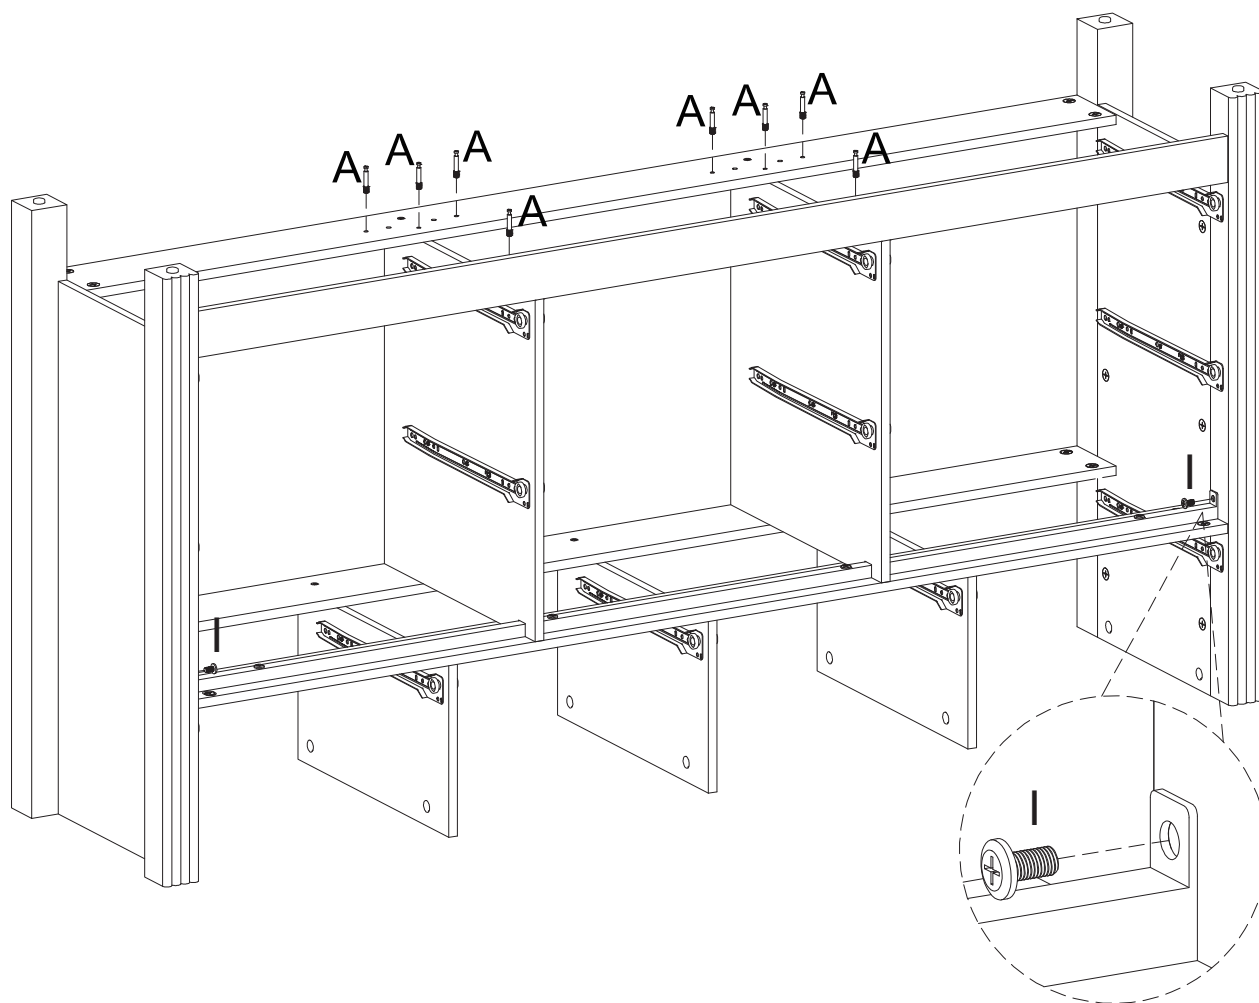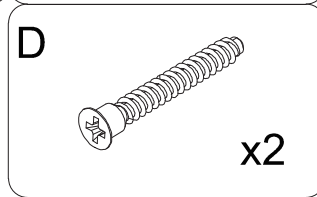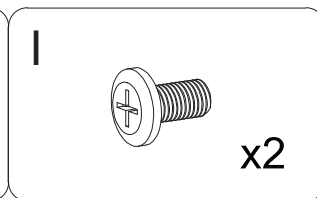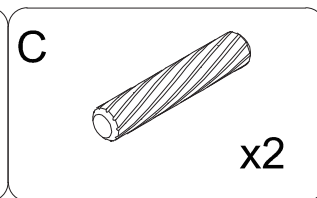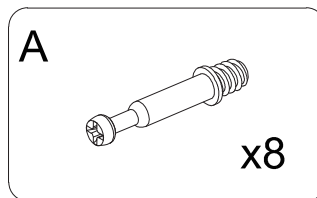

13

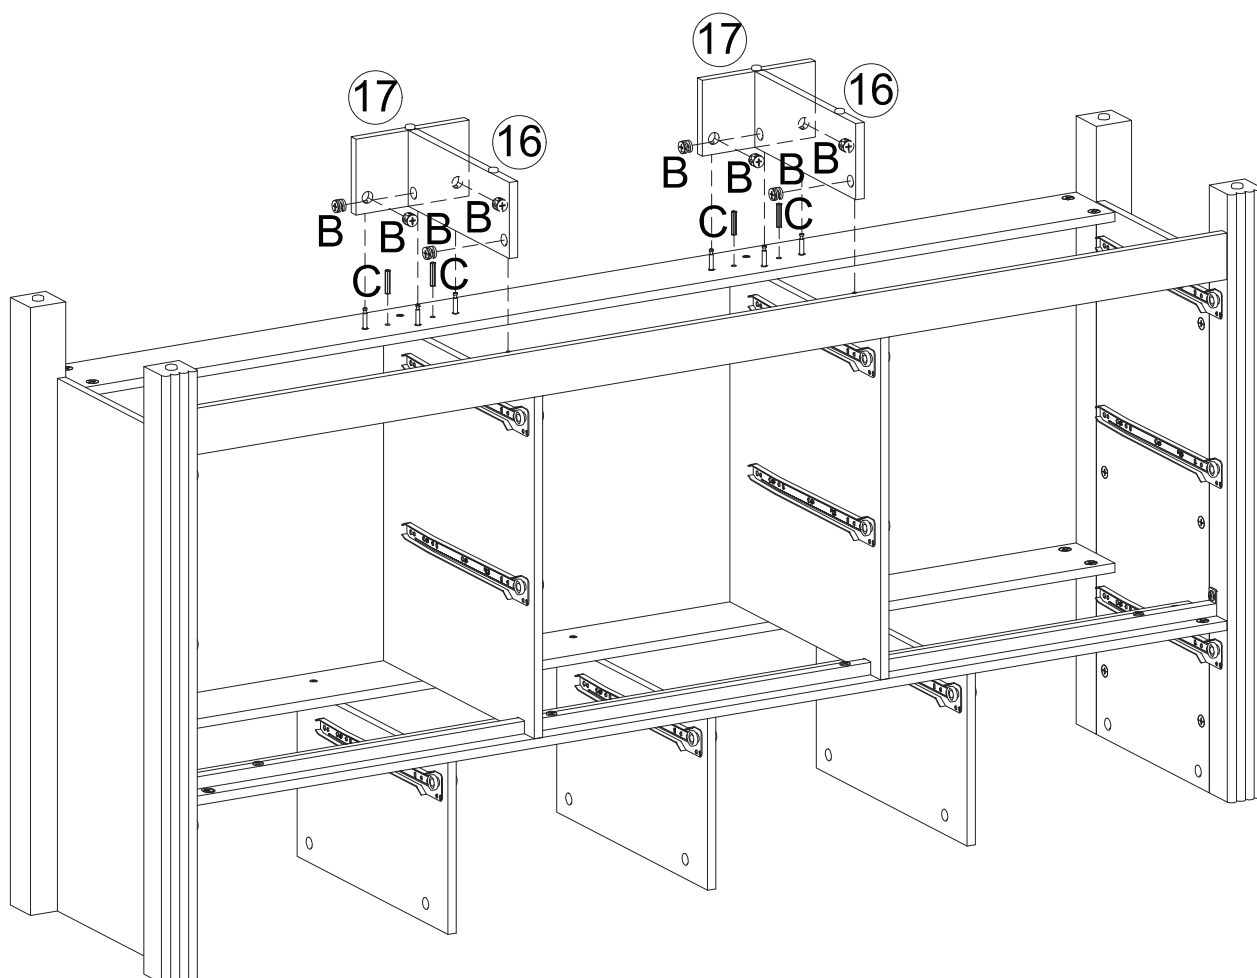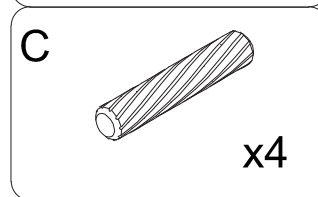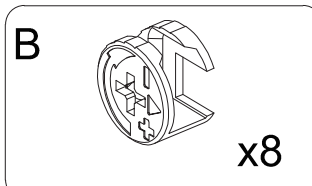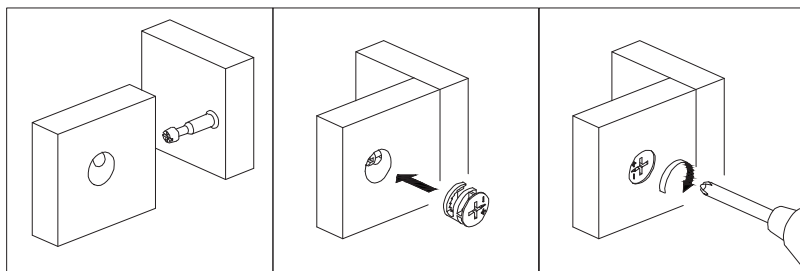


14

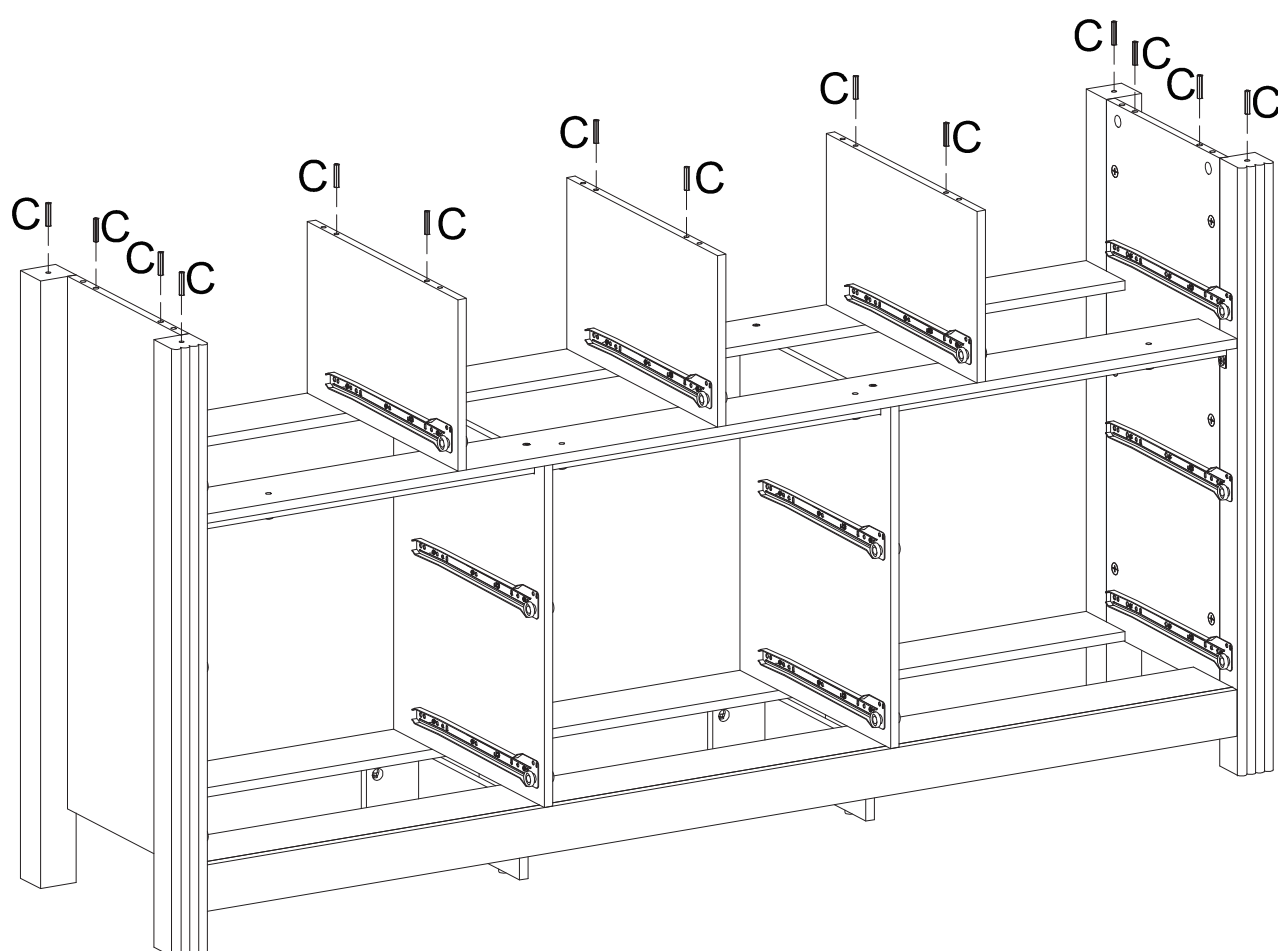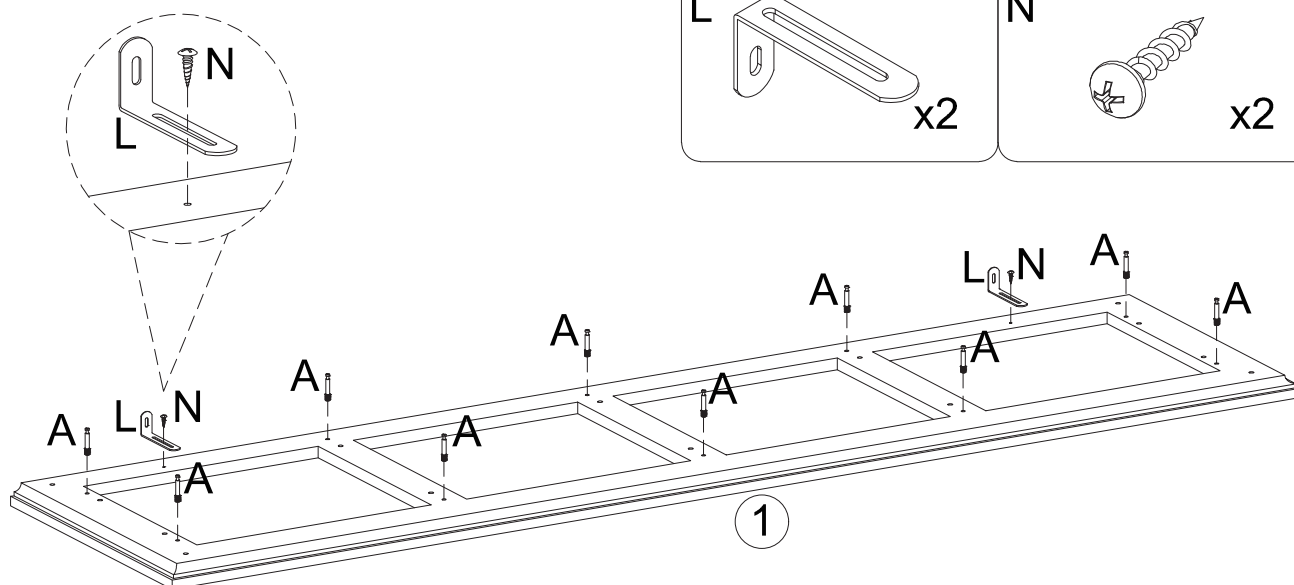
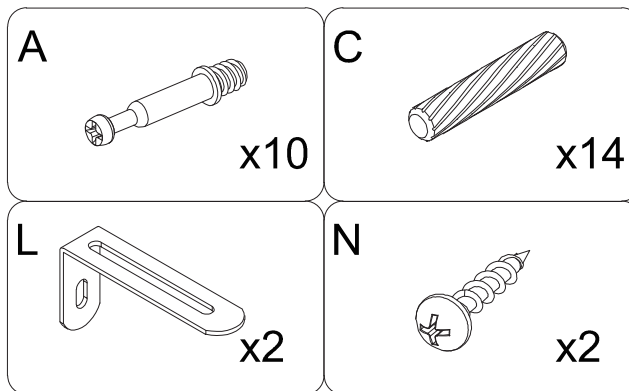


15

B

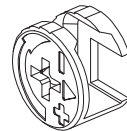

x10

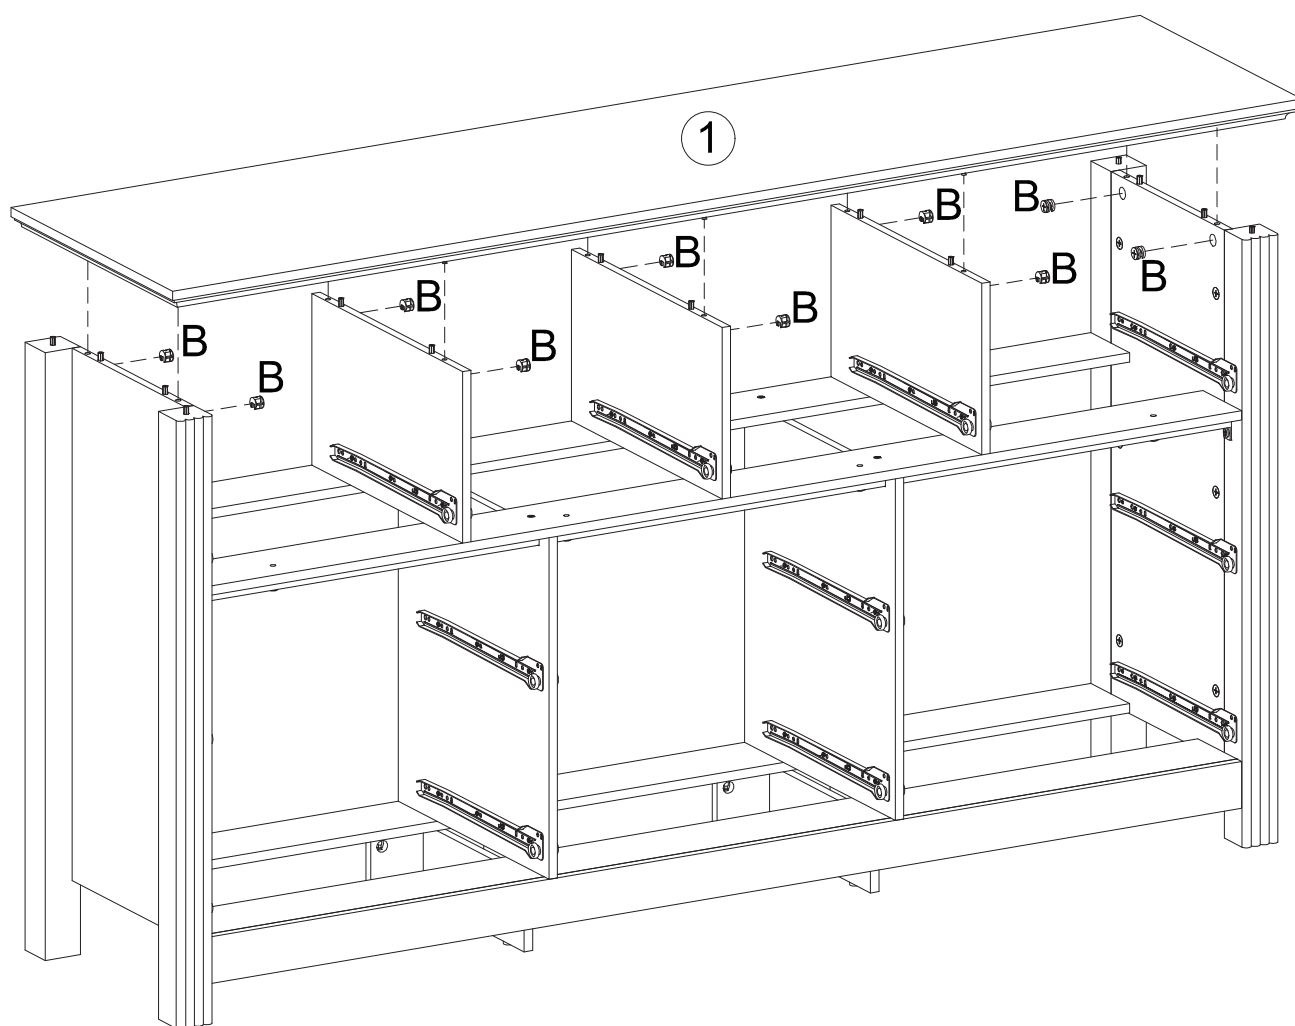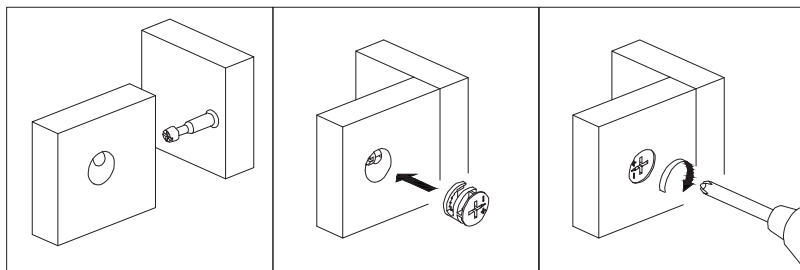


16




P



x29



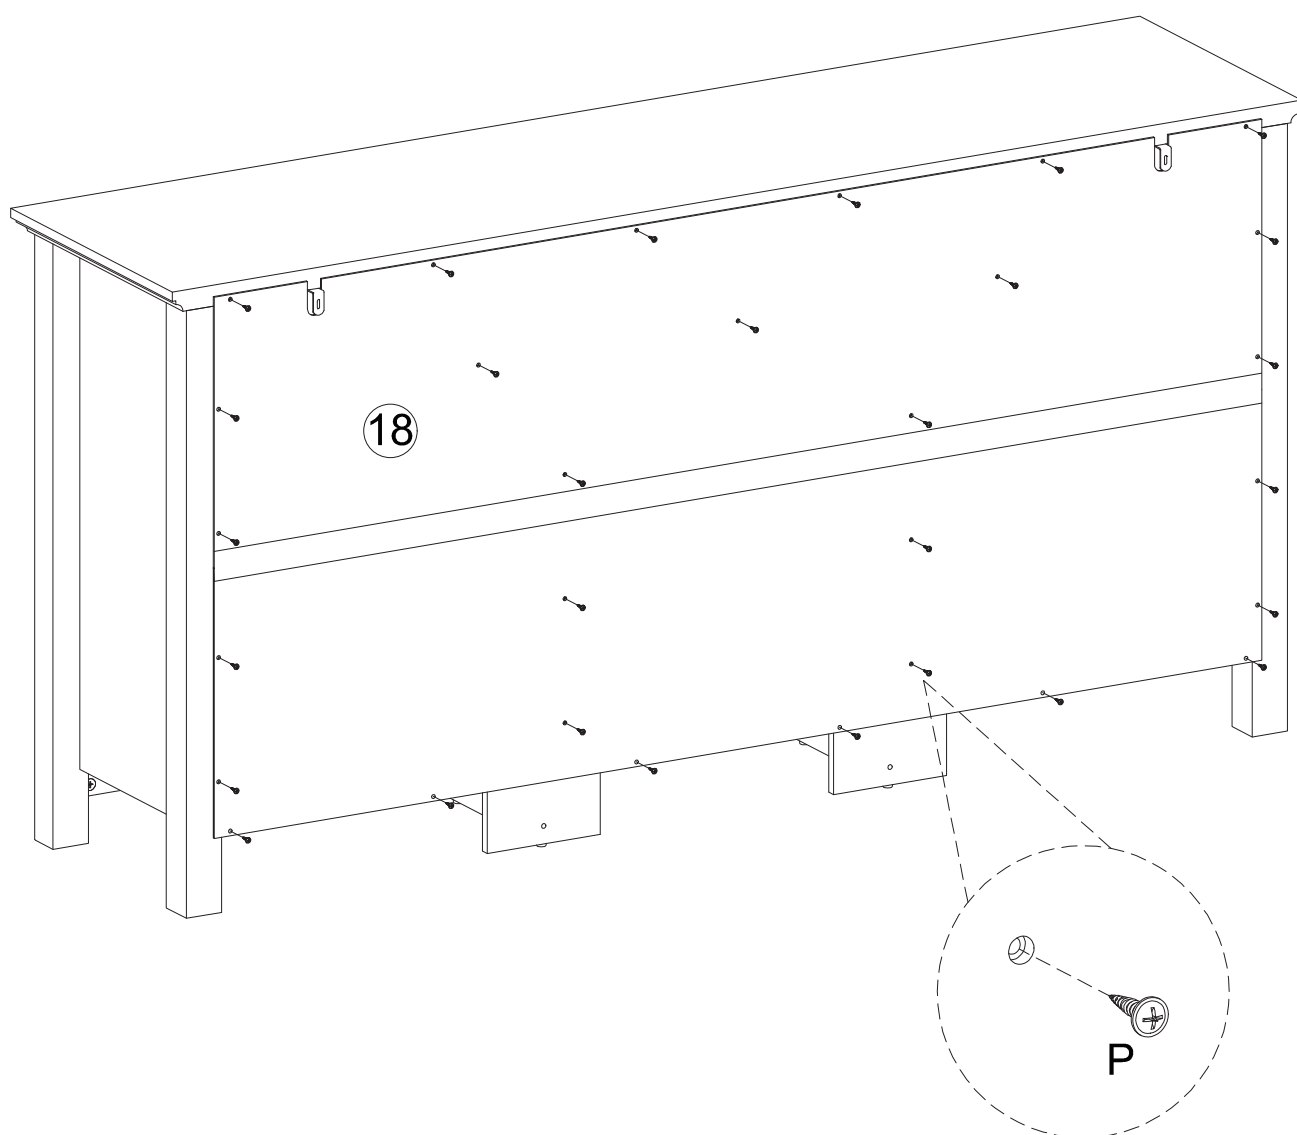


17

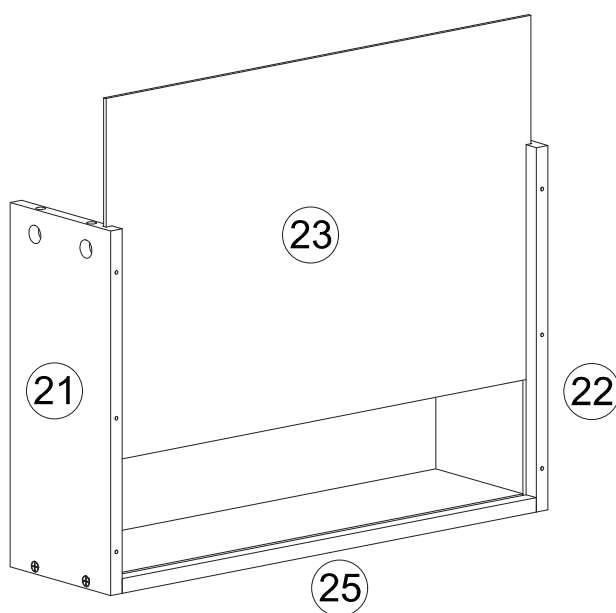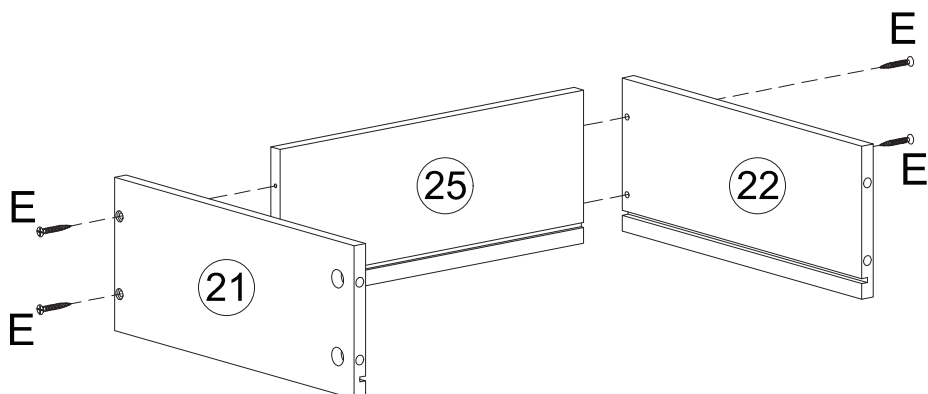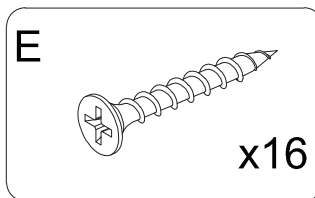








x4

18

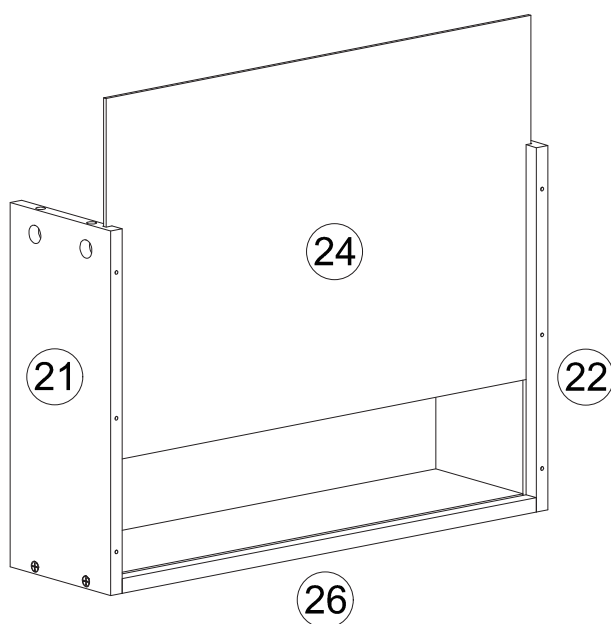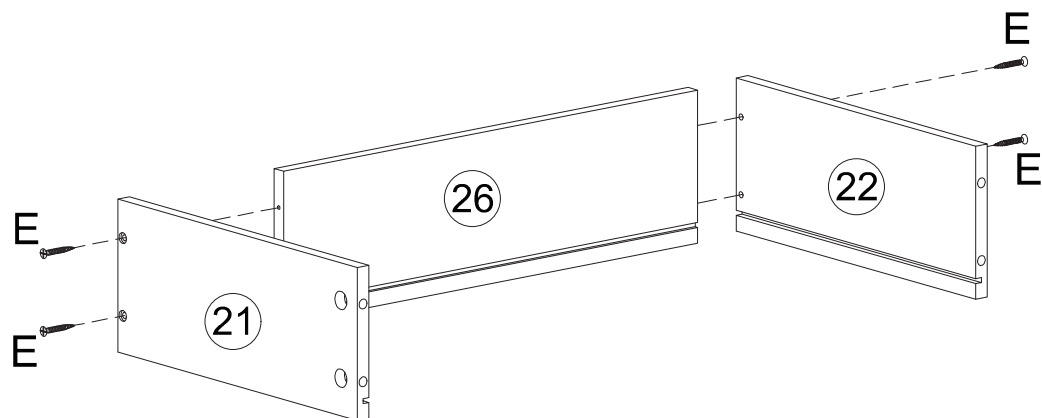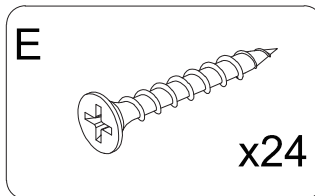








x6

19

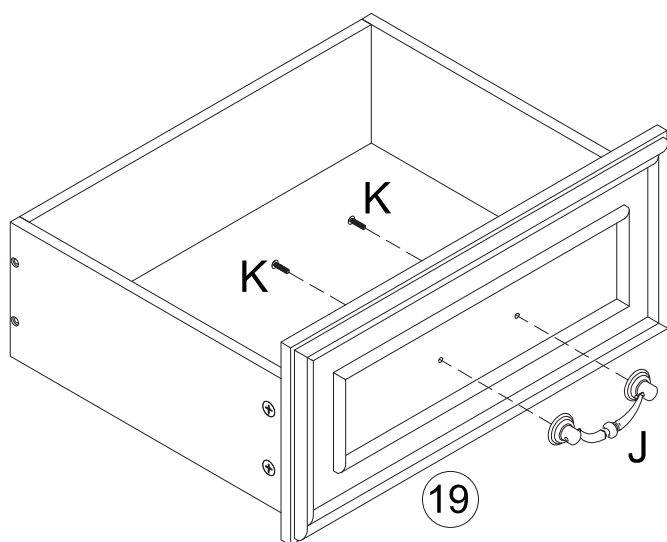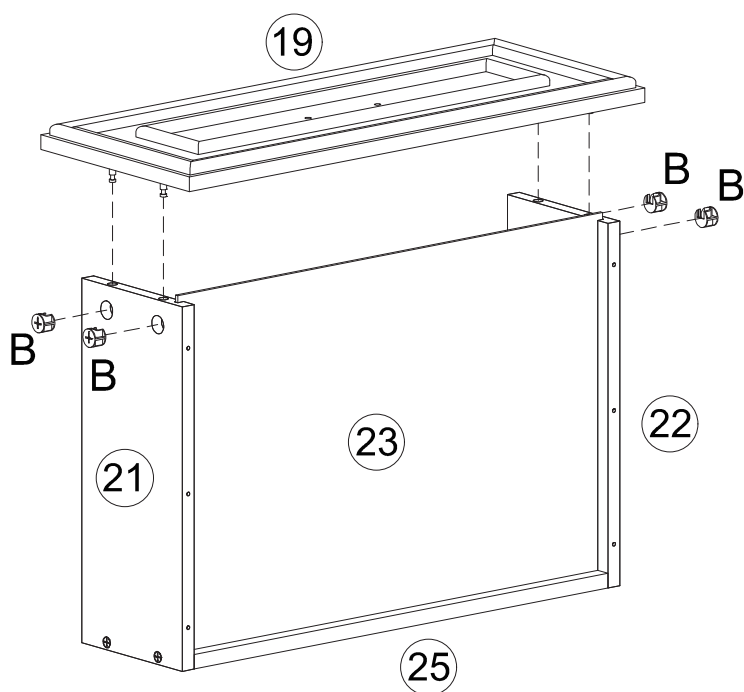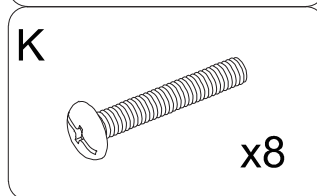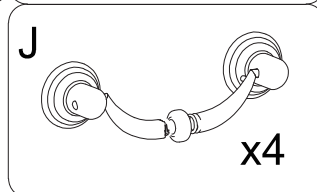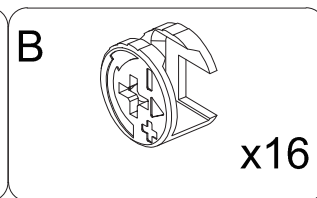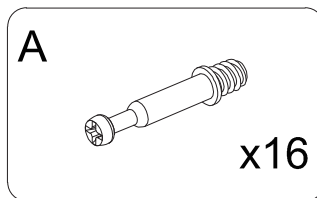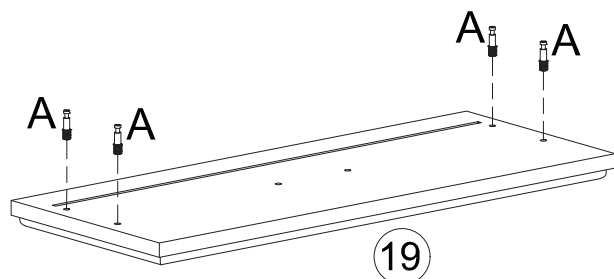

x4


20

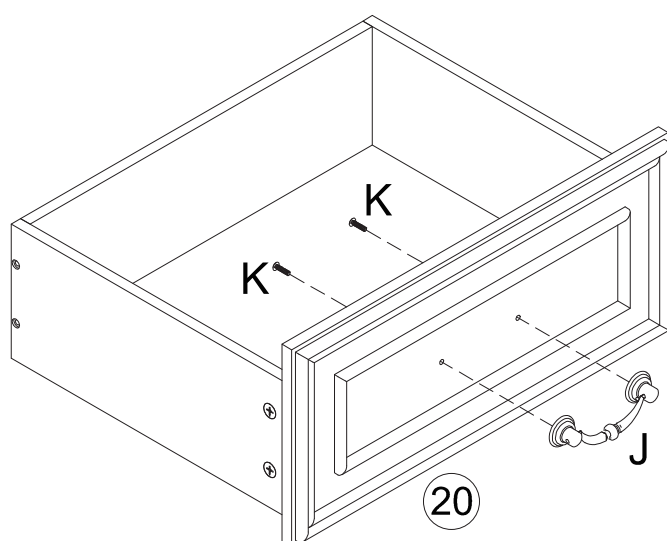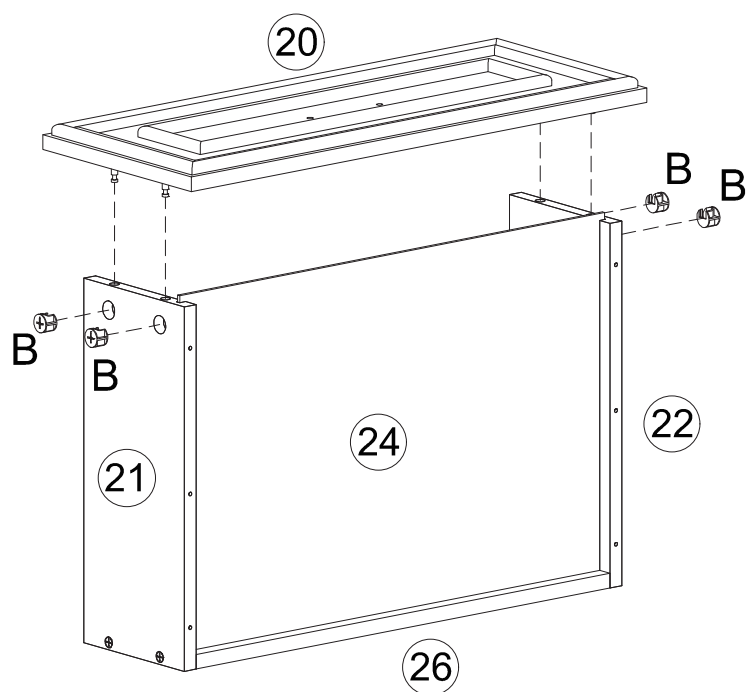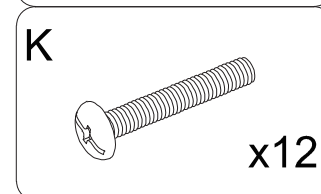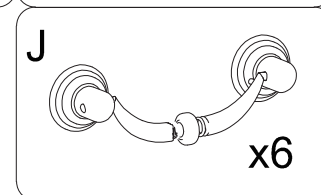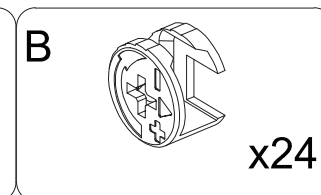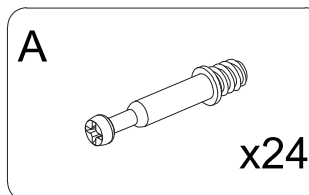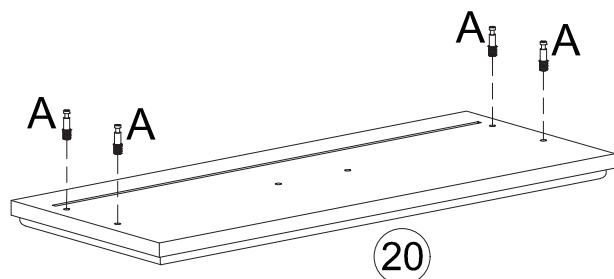

x6


21

F




x60

DL

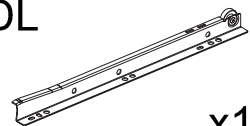


x10

DR


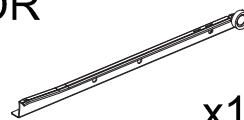


x10

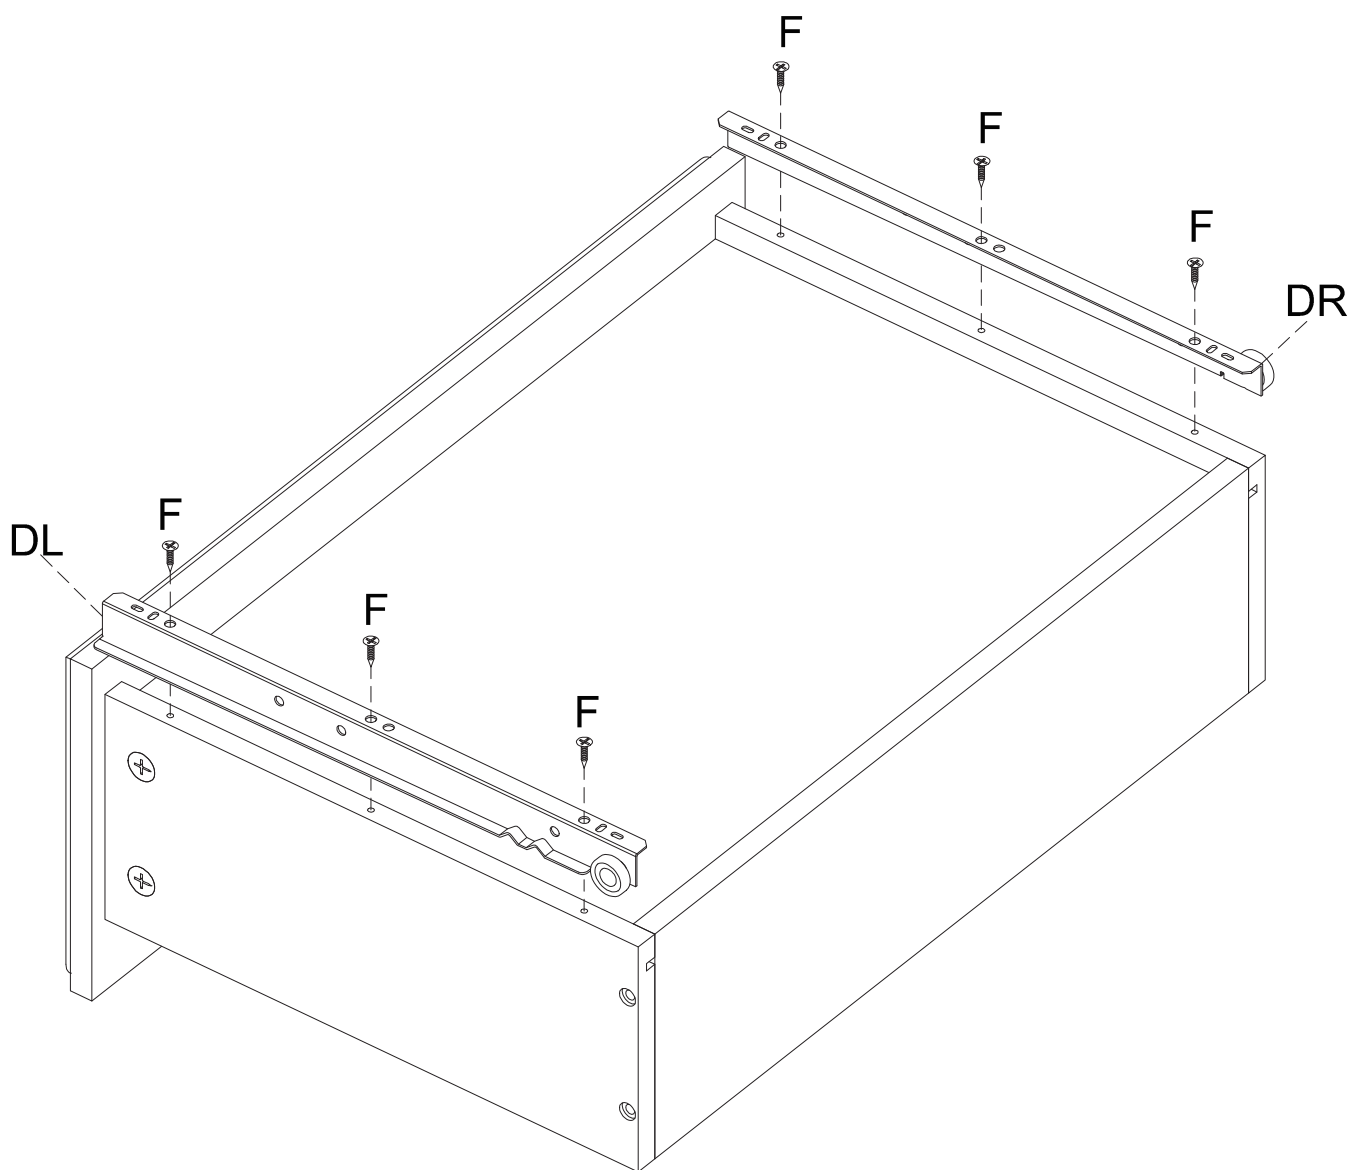



x10

22

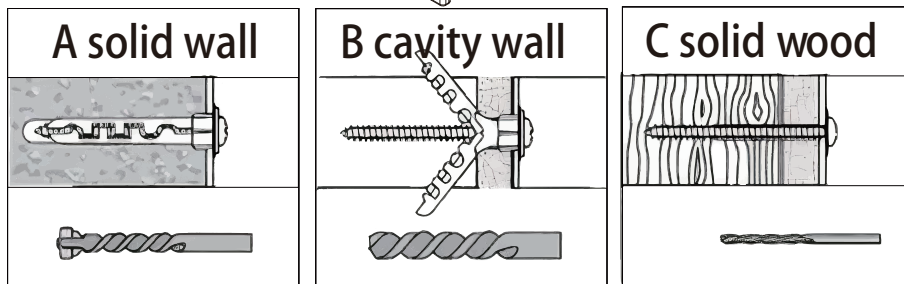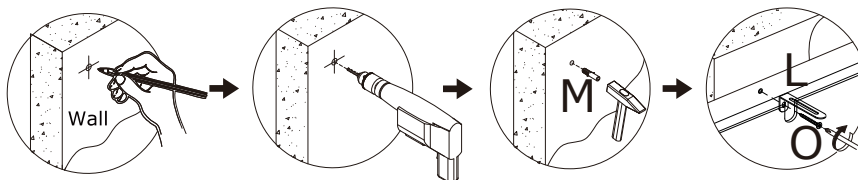


! Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

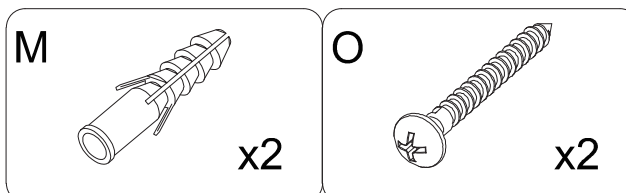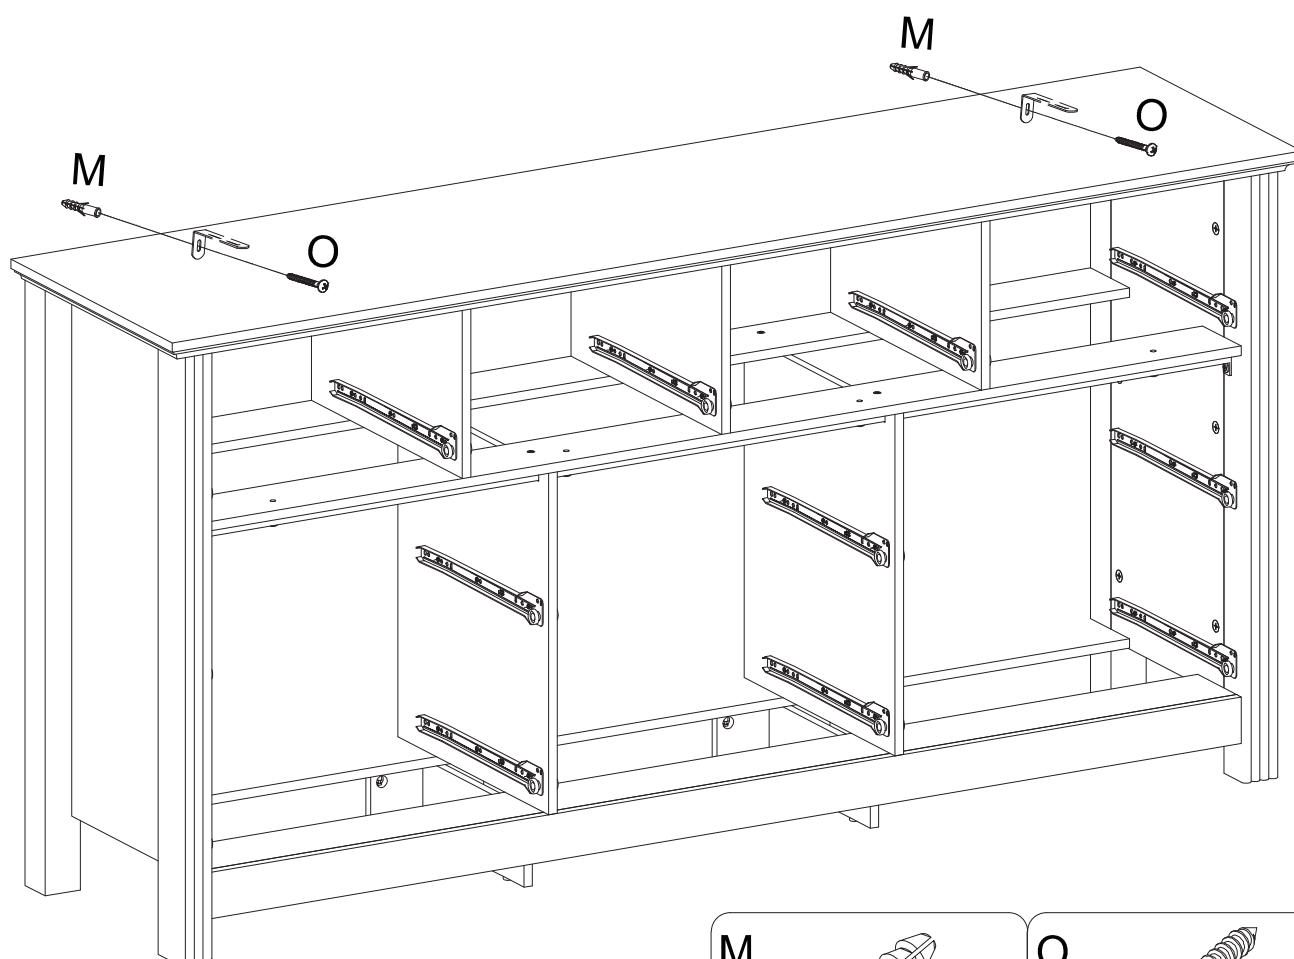

23

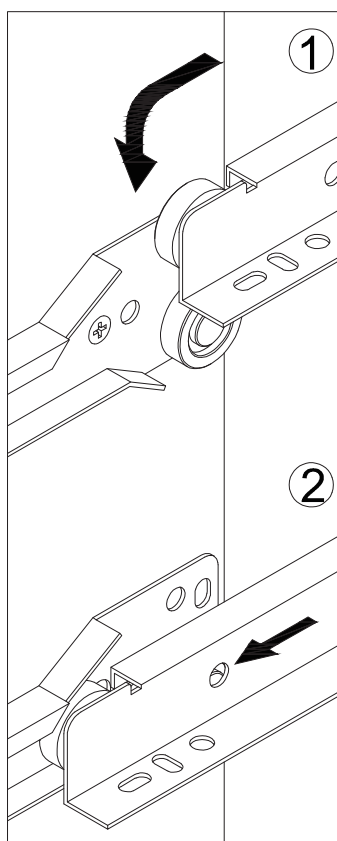

G



x92

