
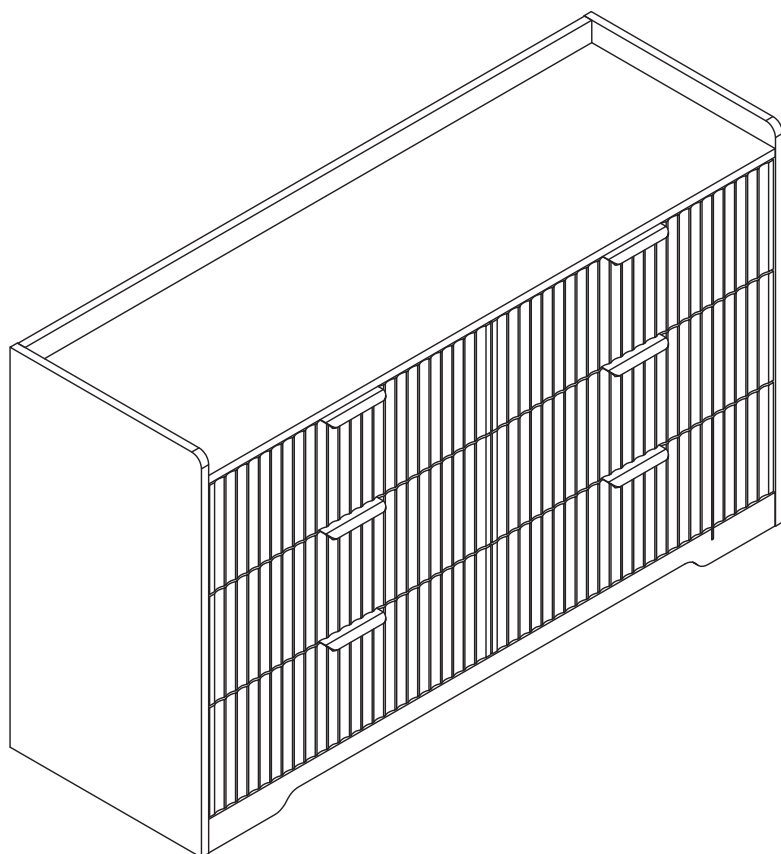
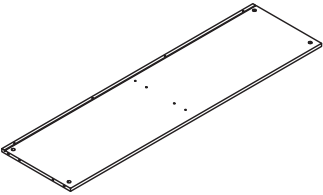
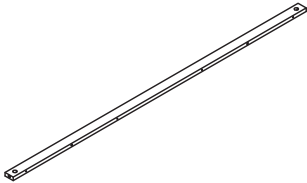


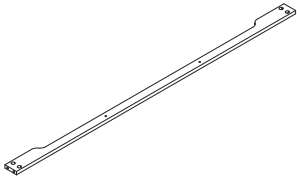
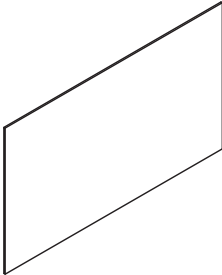
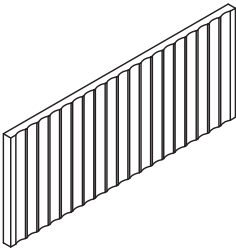
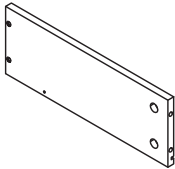
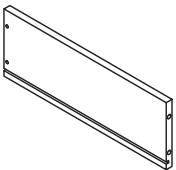
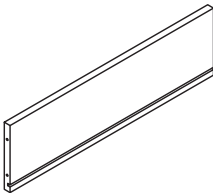
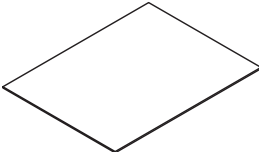
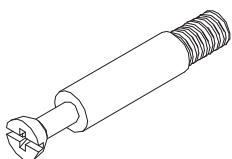
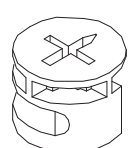
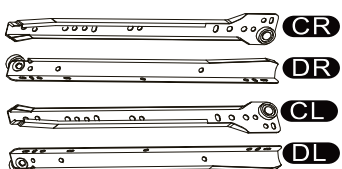


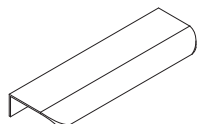

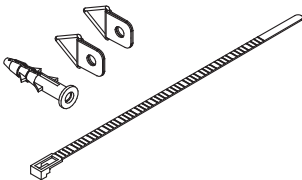


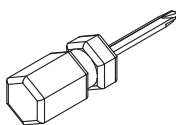

User Manual

Accessories


① ×1 	② ×1 	③ ×1 	④ ×1 
⑤ ×1 	⑥ ×1 	⑦ ×2 	⑧ ×2 
⑨ ×2 	⑩ ×4 	⑪ ×6 	⑫ ×6 
⑬ ×6 	⑭ ×6 	⑮ ×6 	

A ×55  M6×35mm	B ×55  Ø15×10mm	C ×8  Ø6×30mm	D ×6  CR DR CL DL
E ×69  Ø3.5×12mm	F ×27  Ø4×35mm	G ×16  Ø3×14mm	H ×16 
J ×6  120mm	K ×18  Ø7×9.5mm	L ×18  Ø3.5×25mm	M ×3 
N ×24 	P ×1 		

Assembly Instructions



Step1:

Thread screw (L) through slide rail (CL) and washer (K), and fix it on wooden board (3).

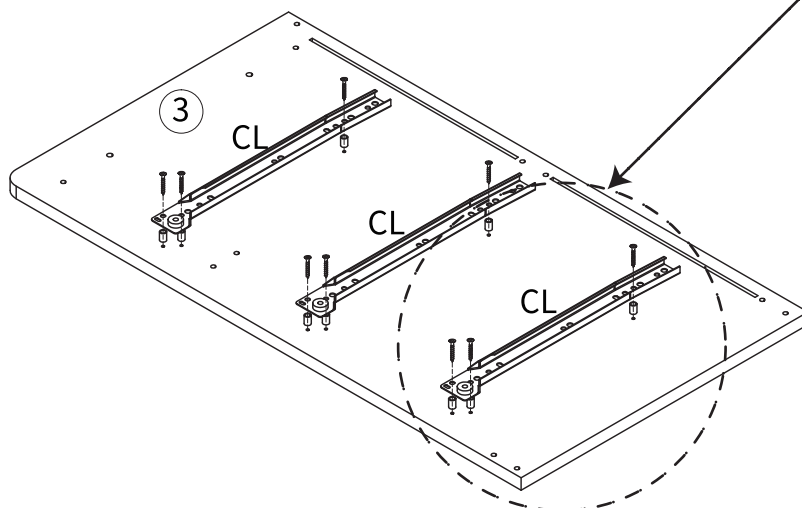

Please identify the correct hole for the screw (E).


Fix Screw (A) onto wooden board (3).

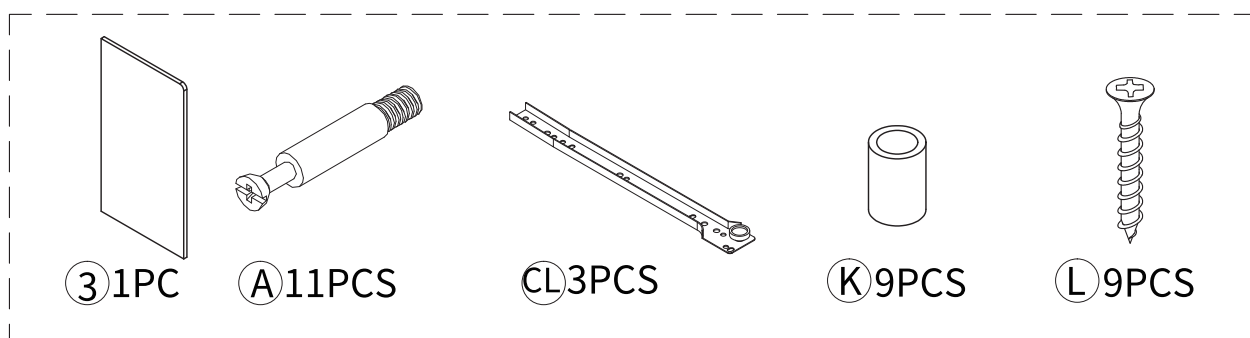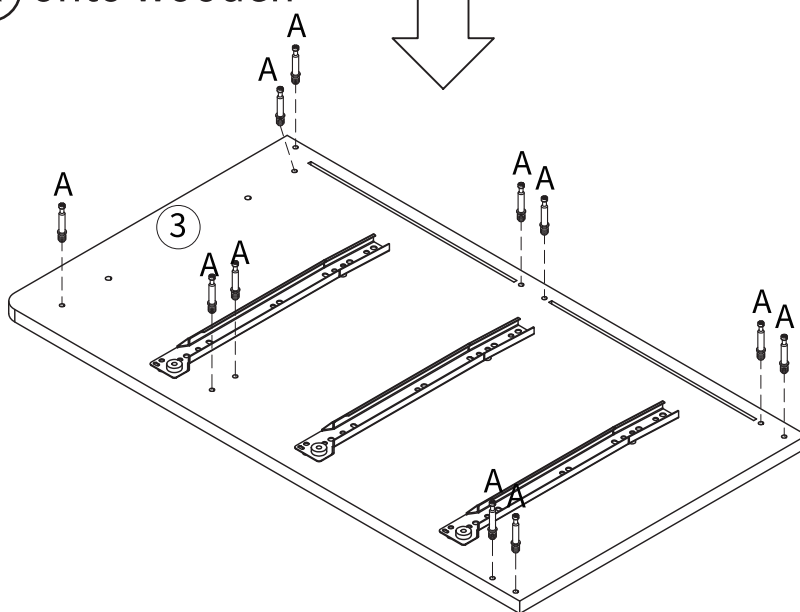

Assembly Instructions



Step2:

Thread screw (L) through slide rail (CR) and washer (K), and fix it on wood board (4) .

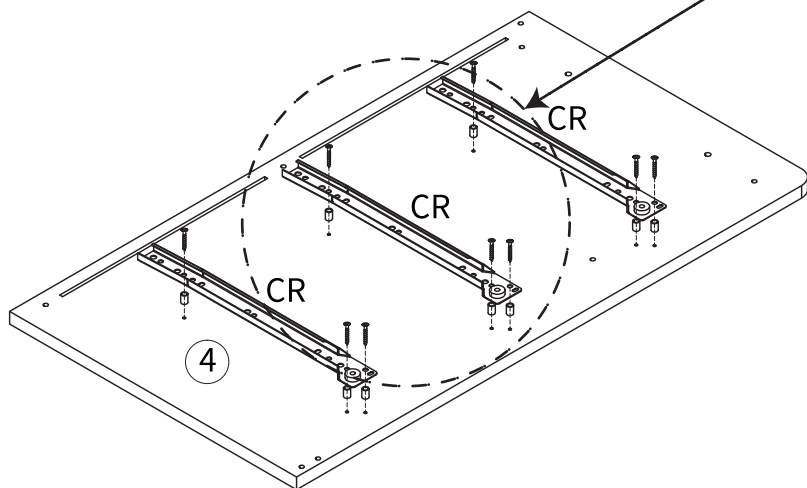

Please identify the correct hole for the screw (E).


Fix Screw (A) onto wooden board (4) .

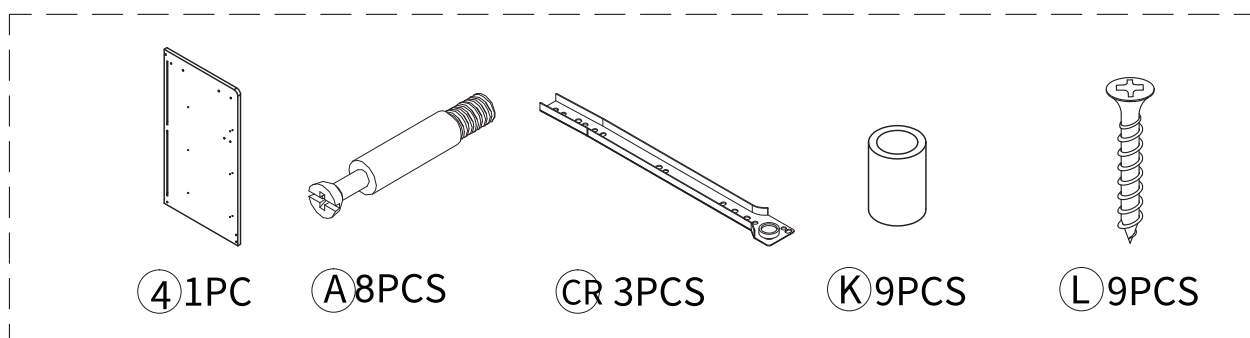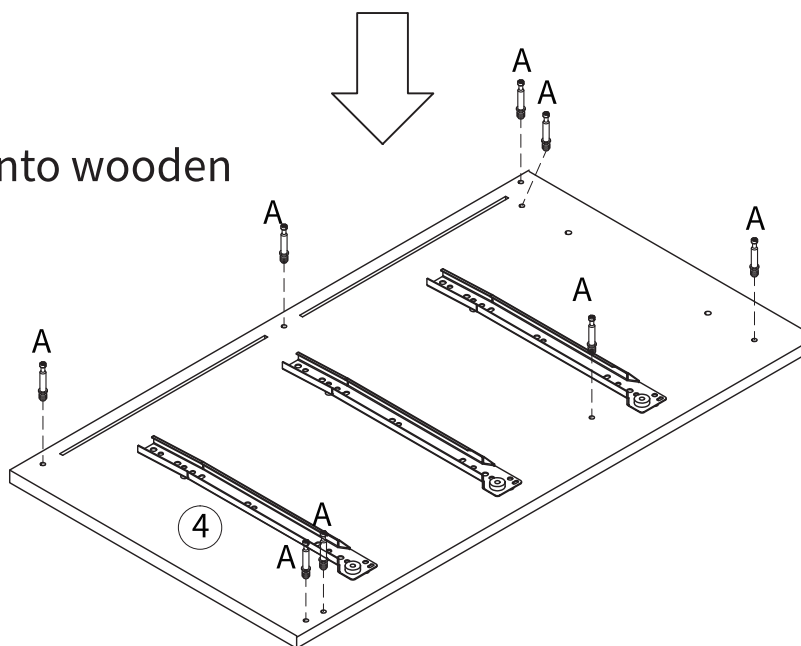

Assembly Instructions

Step3:



Use screw (E) to fix slide rail (CL) and (CR) on both sides of the board (5).

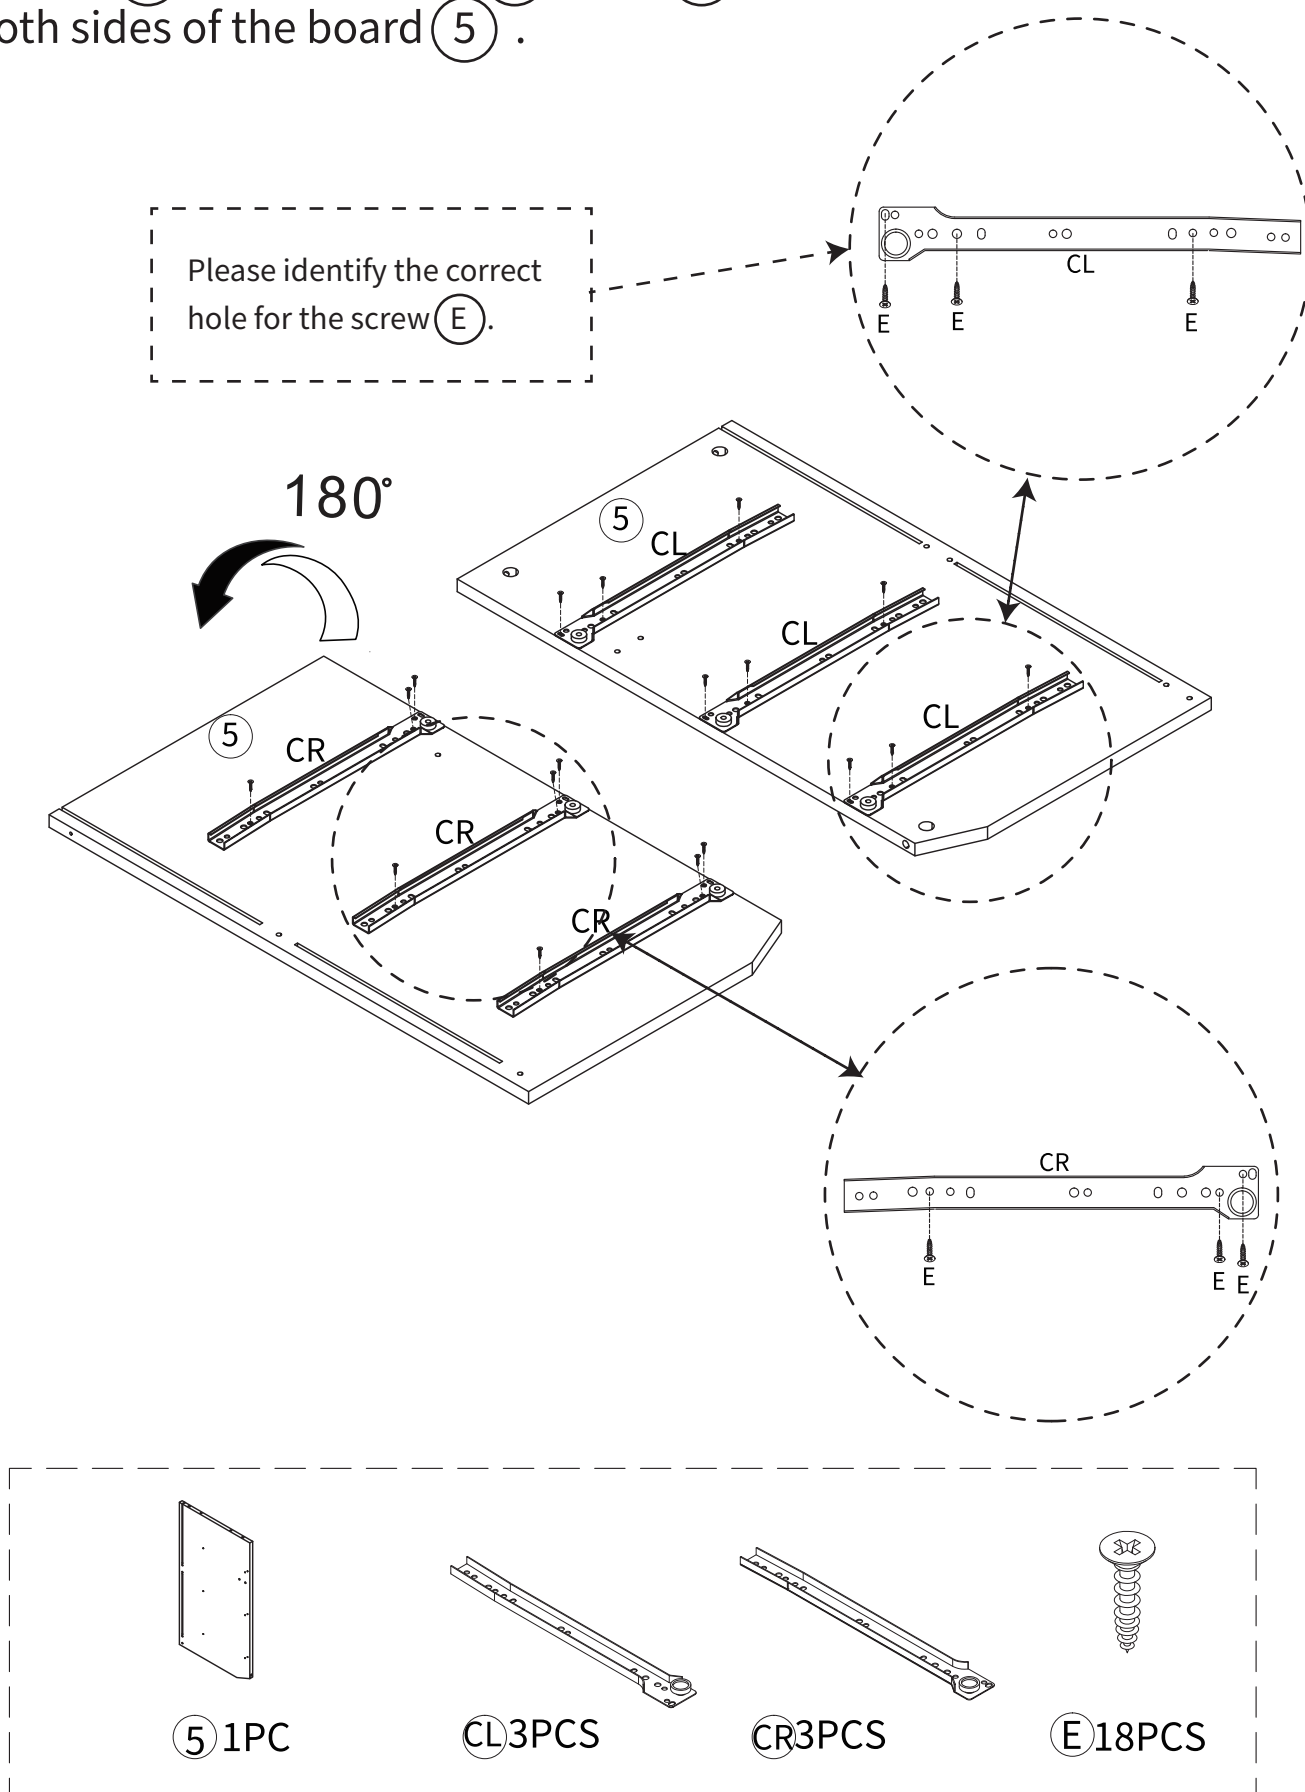

Assembly Instructions

Step4:

Fix screw (A) on both sides of board (5) .

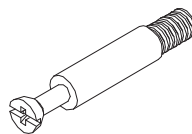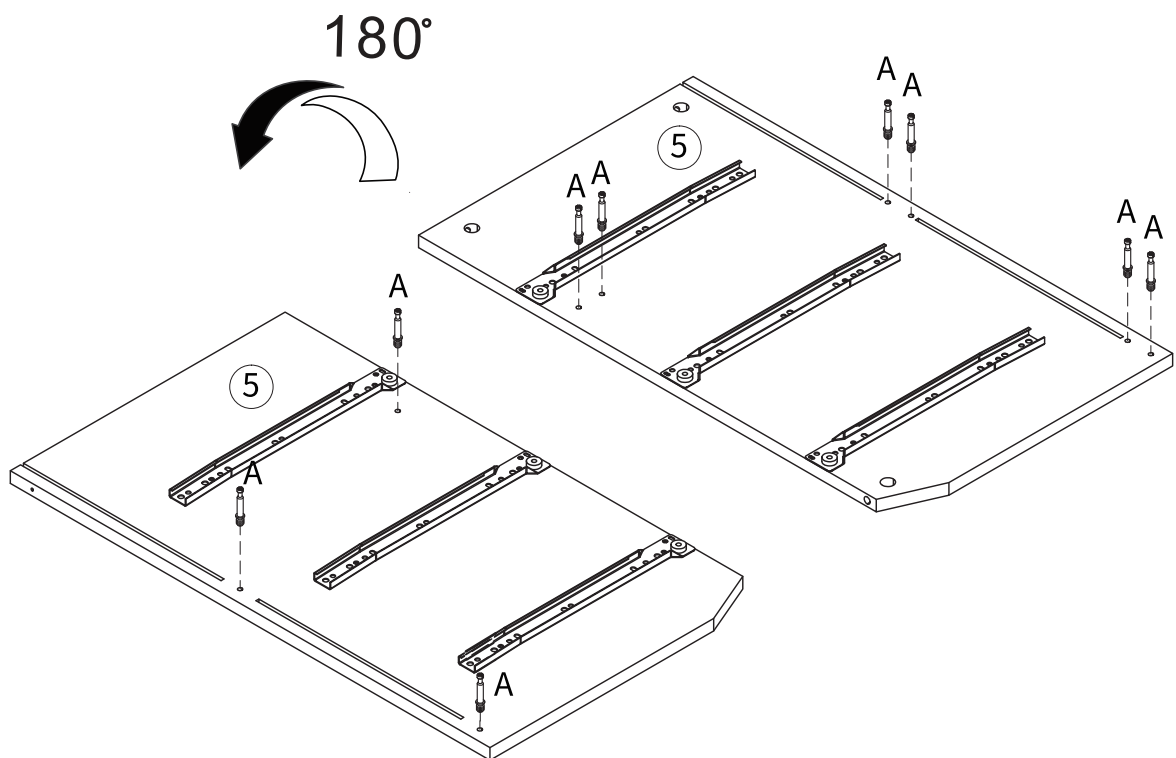


(A) 9PCS


Assembly Instructions

Step5:

Fix screw (A) in the middle of board (6) .

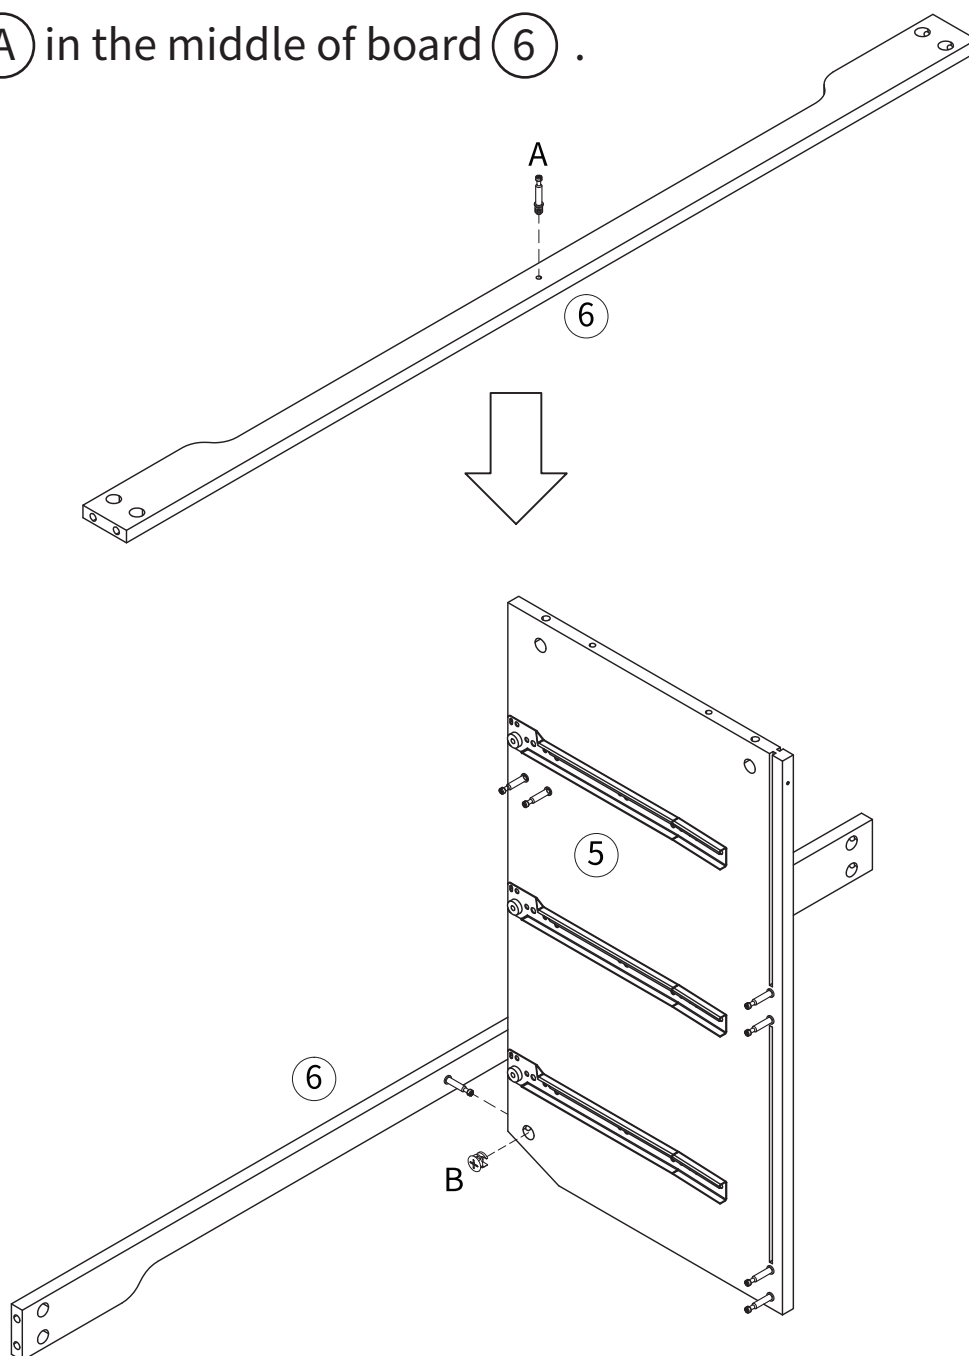



Insert the installed board (6) into board (5) and secure it with screw (B) .

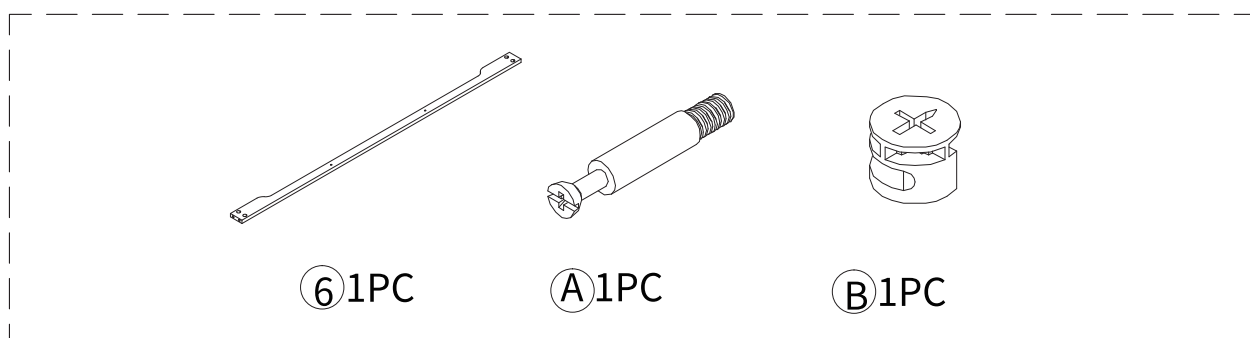



Assembly Instructions

Step6:


Fix screw (A) onto wooden board (1) .

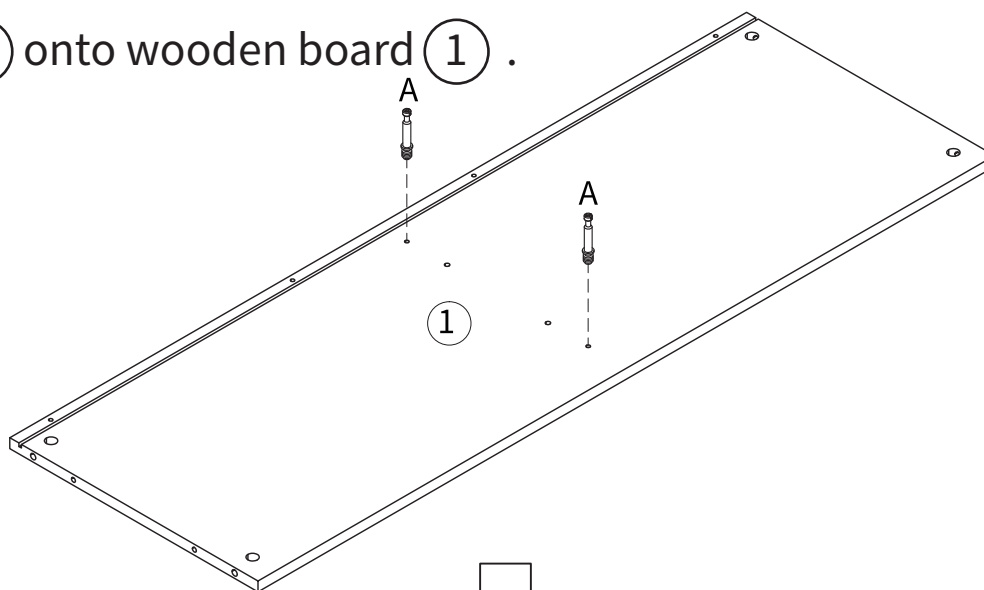


Connect board (1) and board (2) using wood pin (C) and fix them with screw (F) .

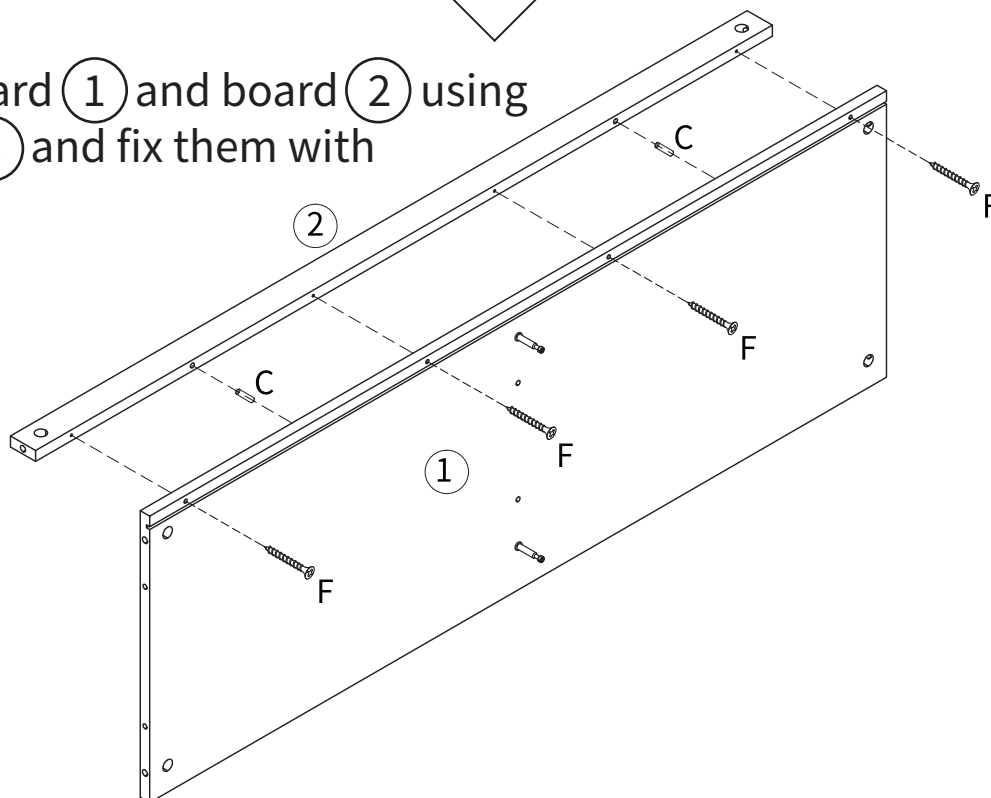

① 1PC



② 1PC

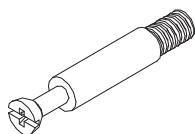

Ⓐ 2PCS



Ⓒ 2PCS





Ⓕ 4PCS

Assembly Instructions

Step7:

Insert wood pin (C) between board (1) and board (5), lock it with screw (B) .

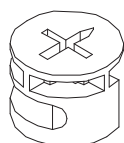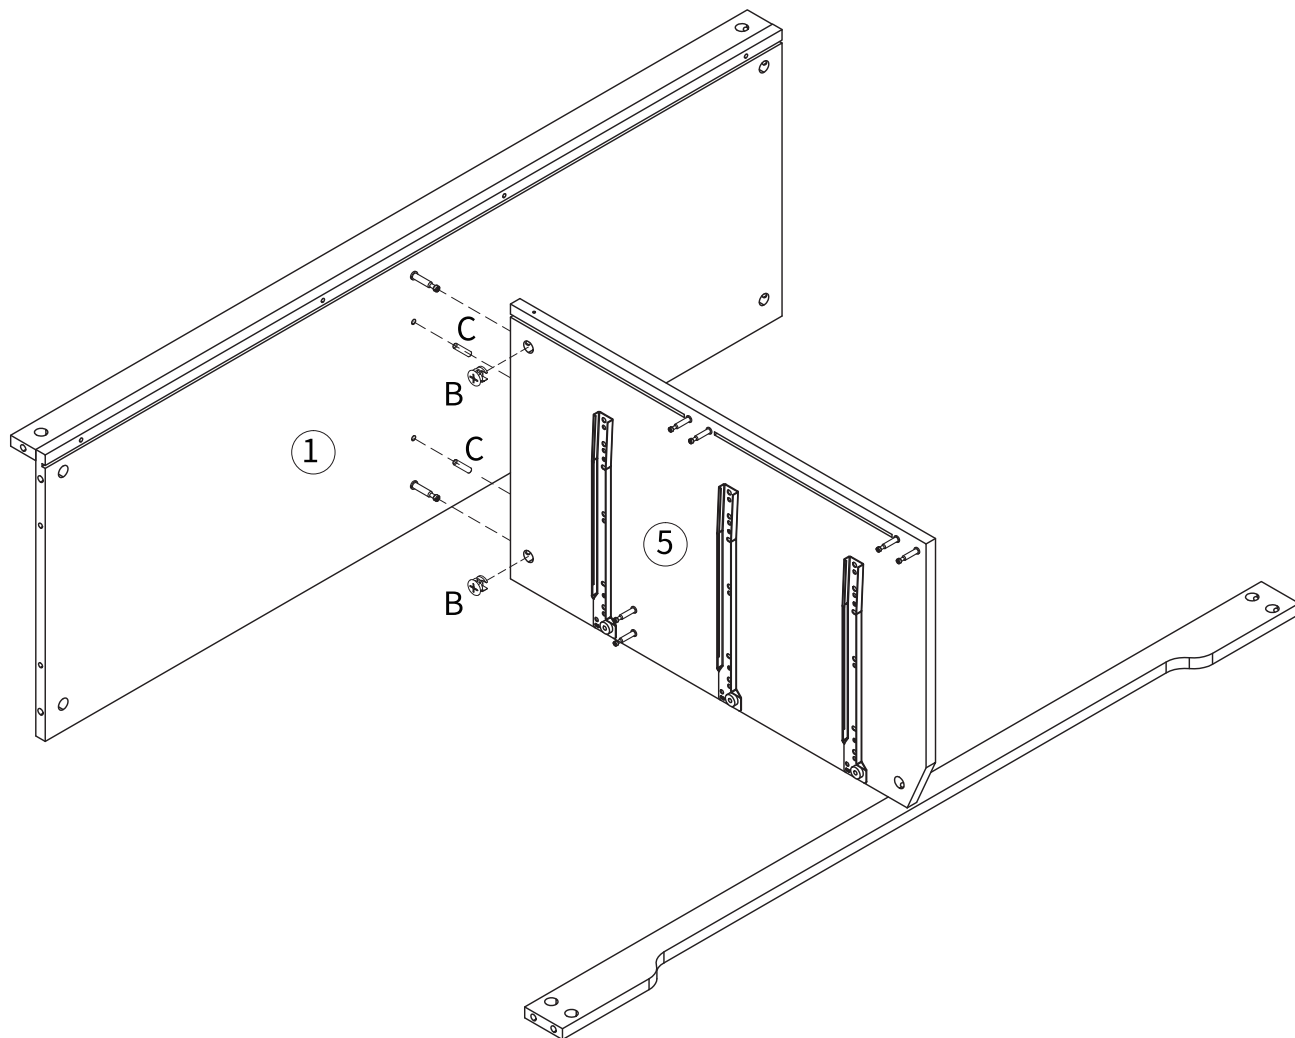

(B) 2PCS





(C) 2PCS

Assembly Instructions

Step8:



Lock the board ⑦ , ⑧ , ⑨ on the board ⑤ with screw ② .

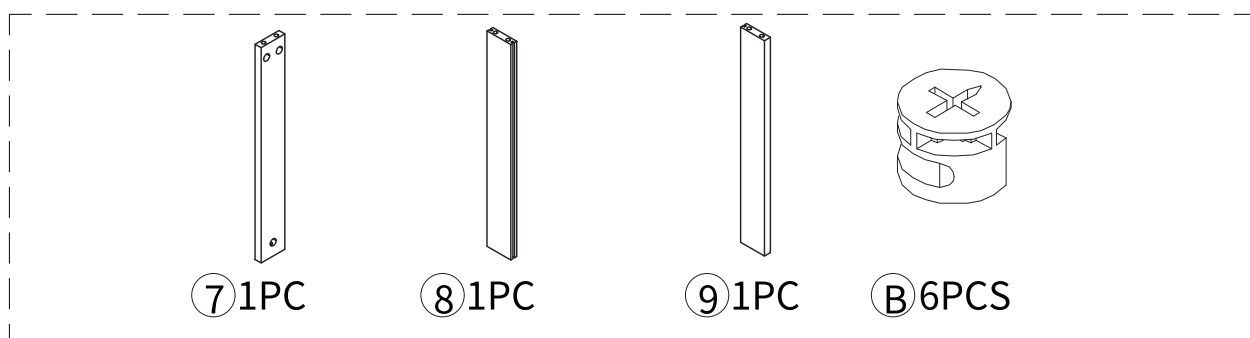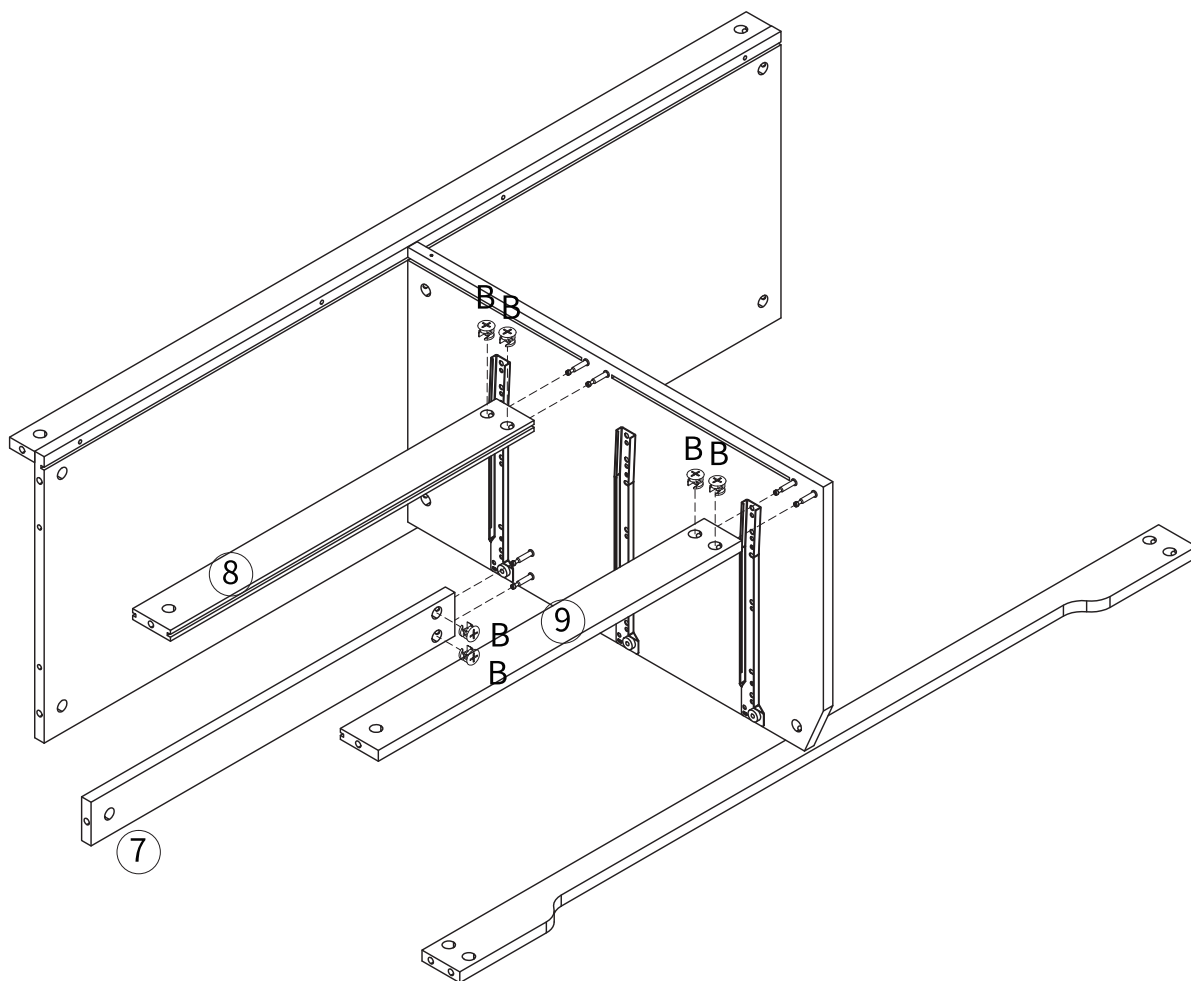

Assembly Instructions

Step9:



Insert panel ⑩ between board ⑧ & ⑨.

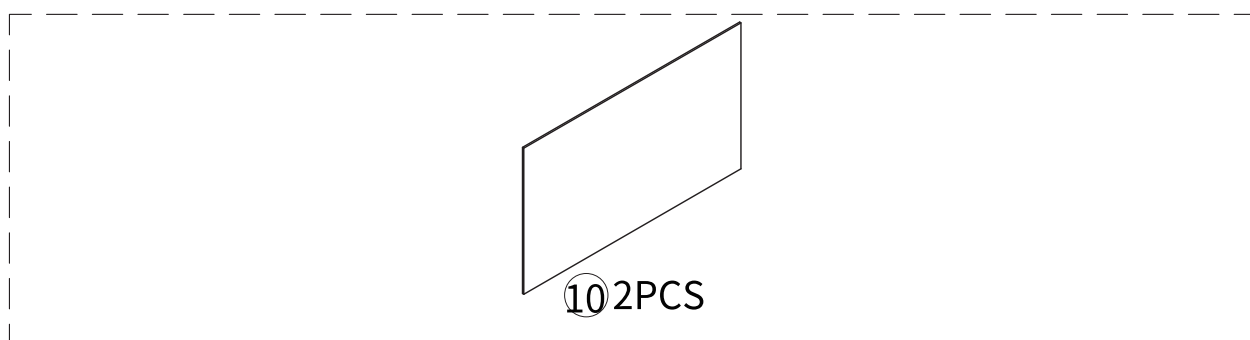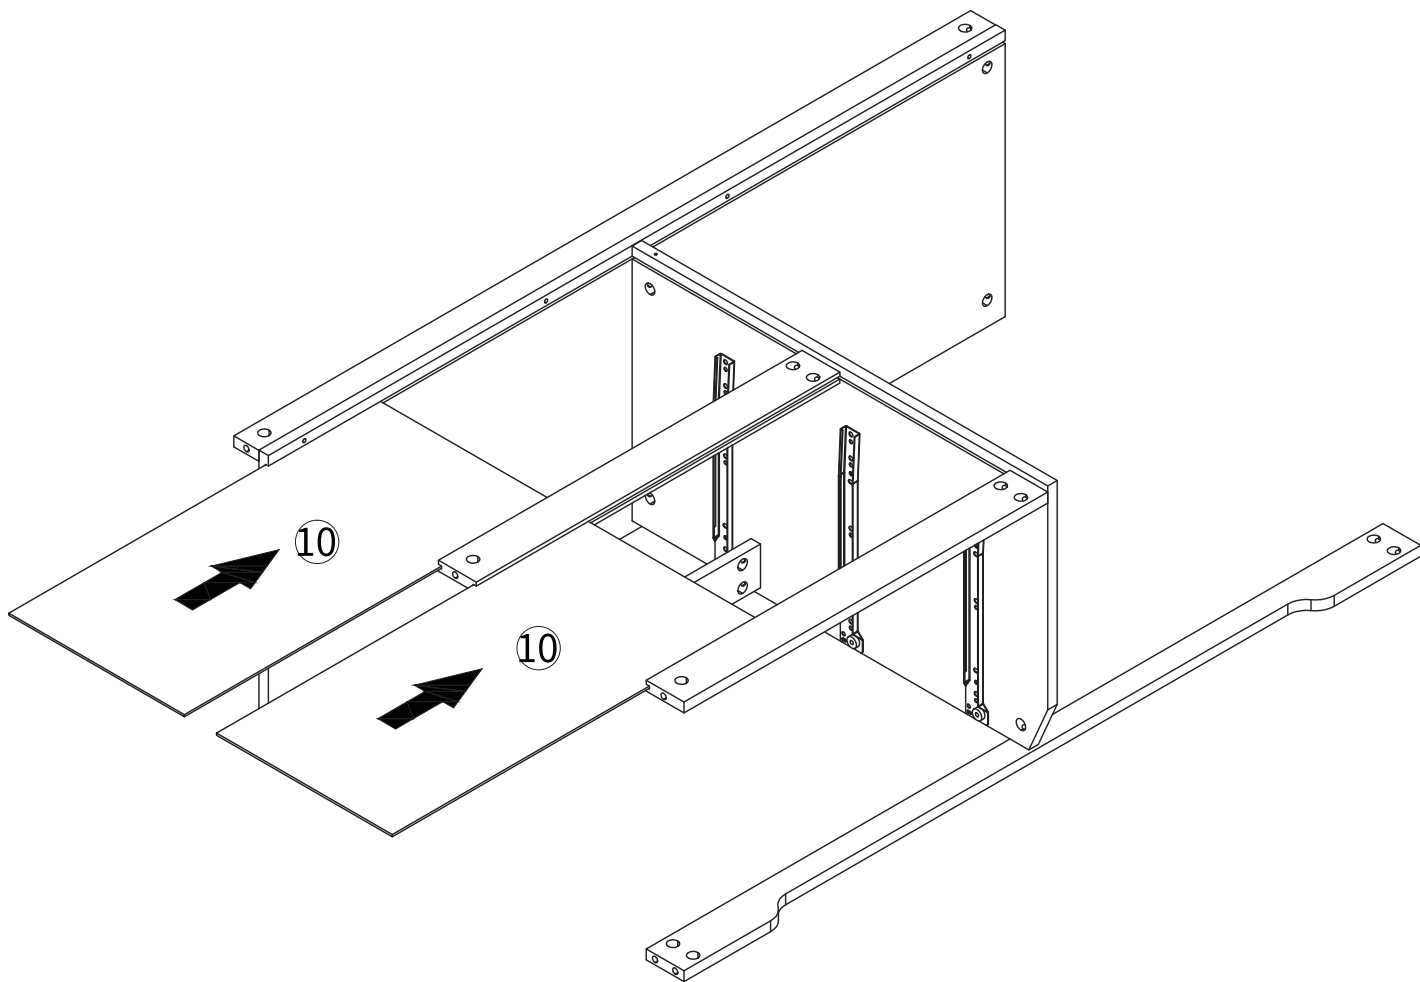

Assembly Instructions

Step10:

Connect board ④ to the main body using wood pin ③ and lock it with screw ②.

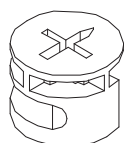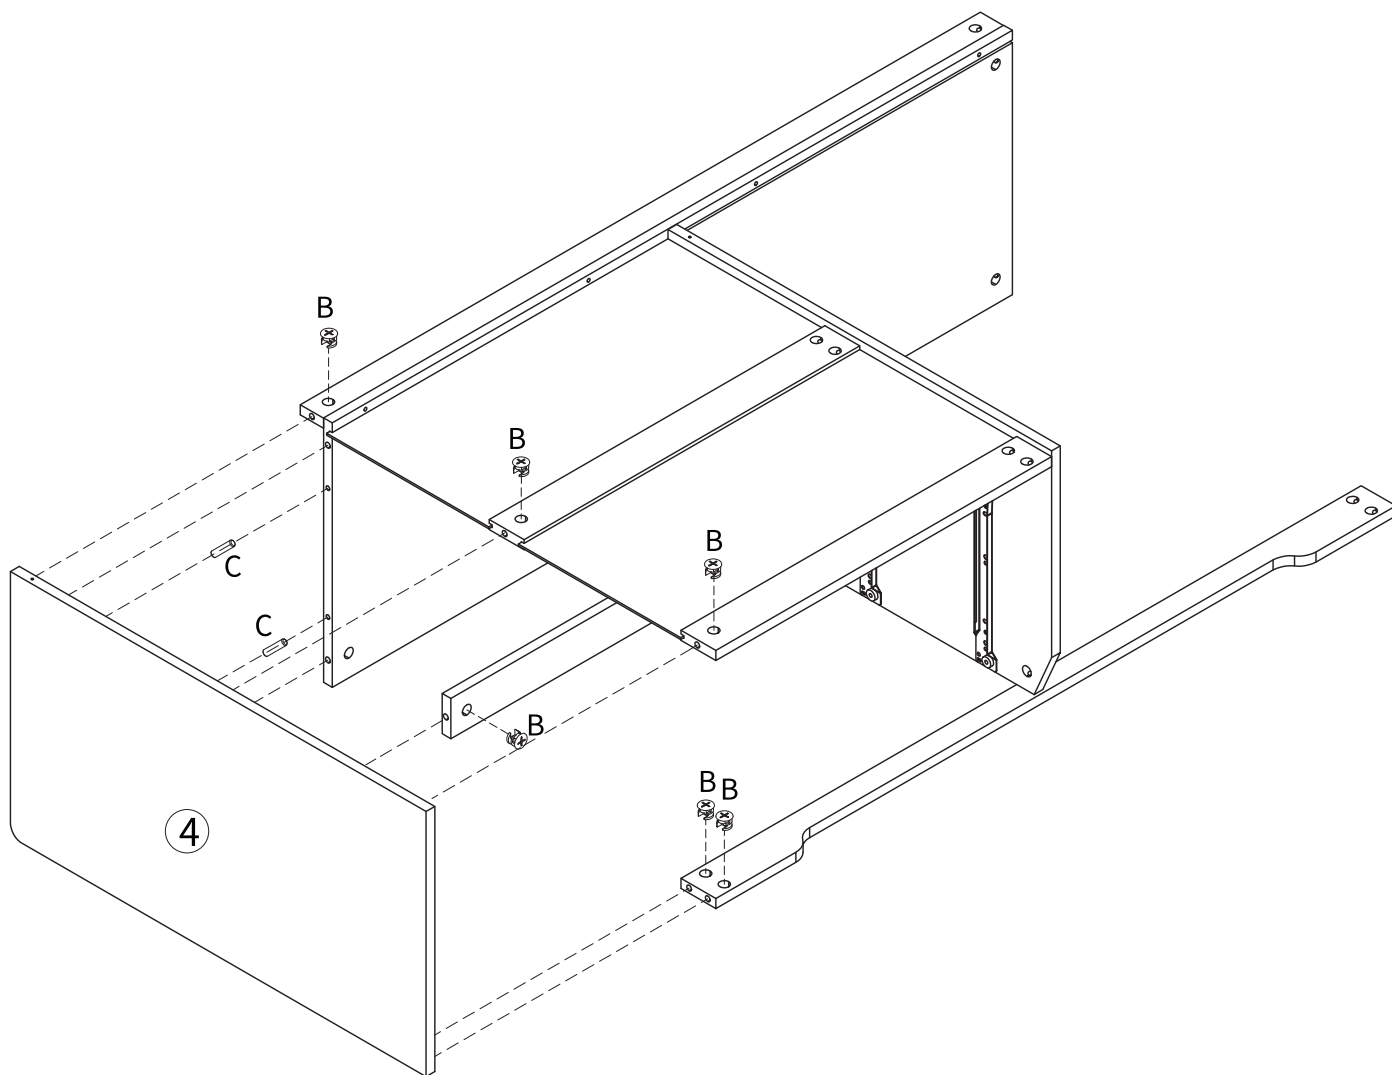

② 6PCS





③ 2PCS

Assembly Instructions

Step11:



Fix board ⑦ ⑧ and ⑨ on the other side of board ⑤.

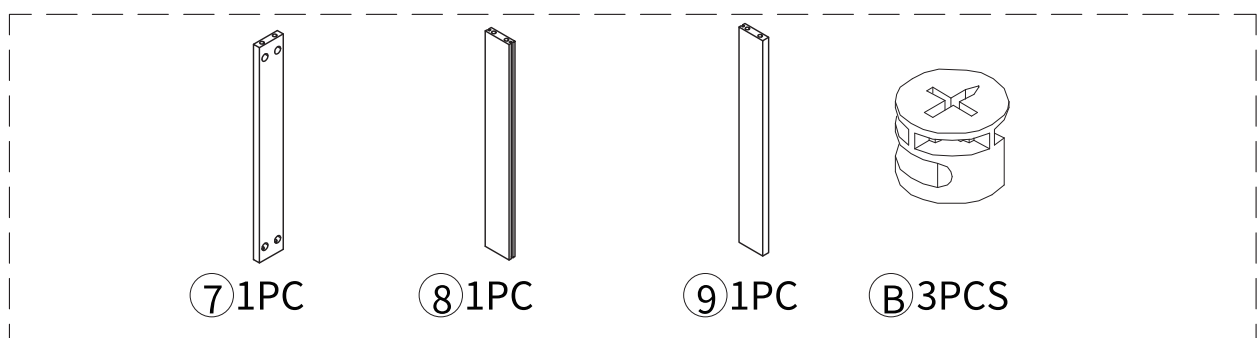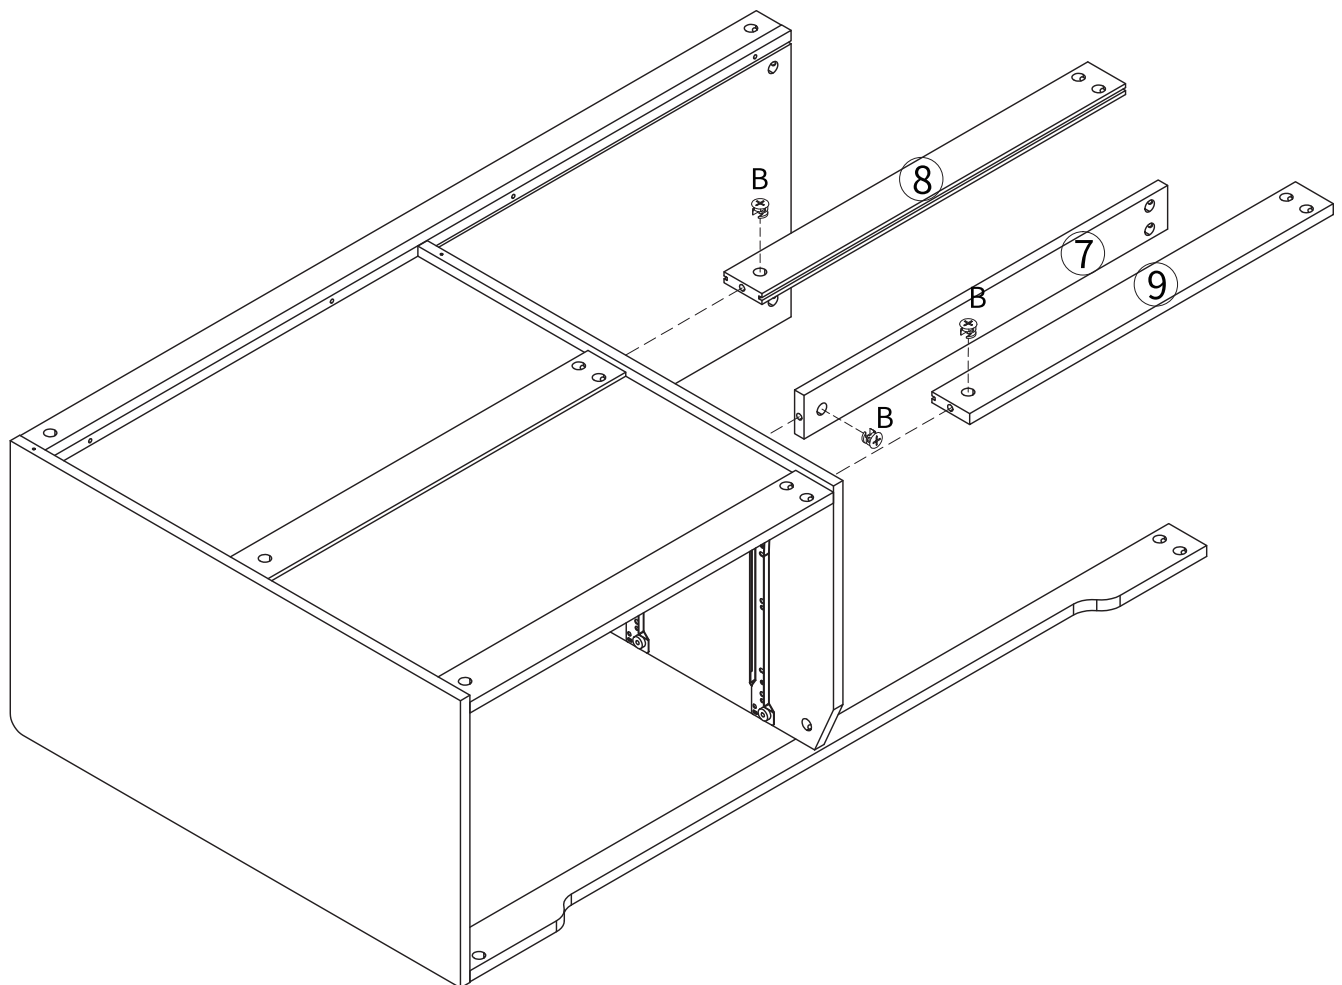

Assembly Instructions

Step12:



Insert panel ⑩ between board ⑧ & ⑨ .

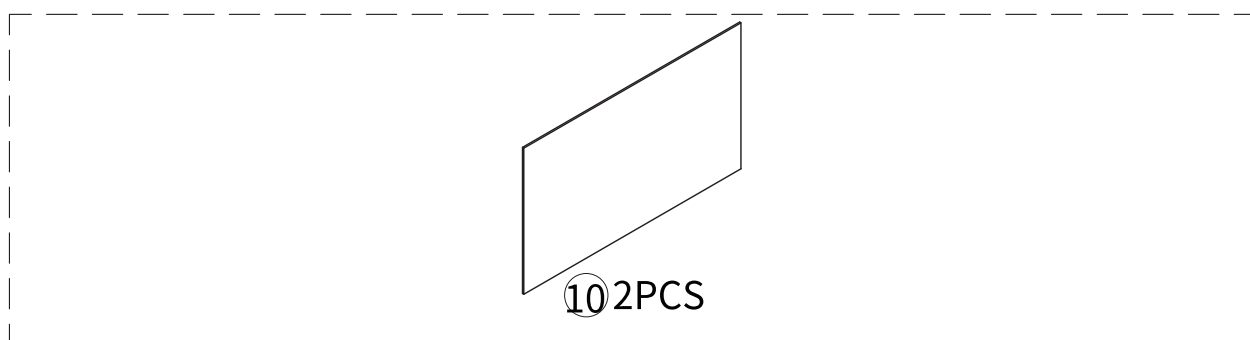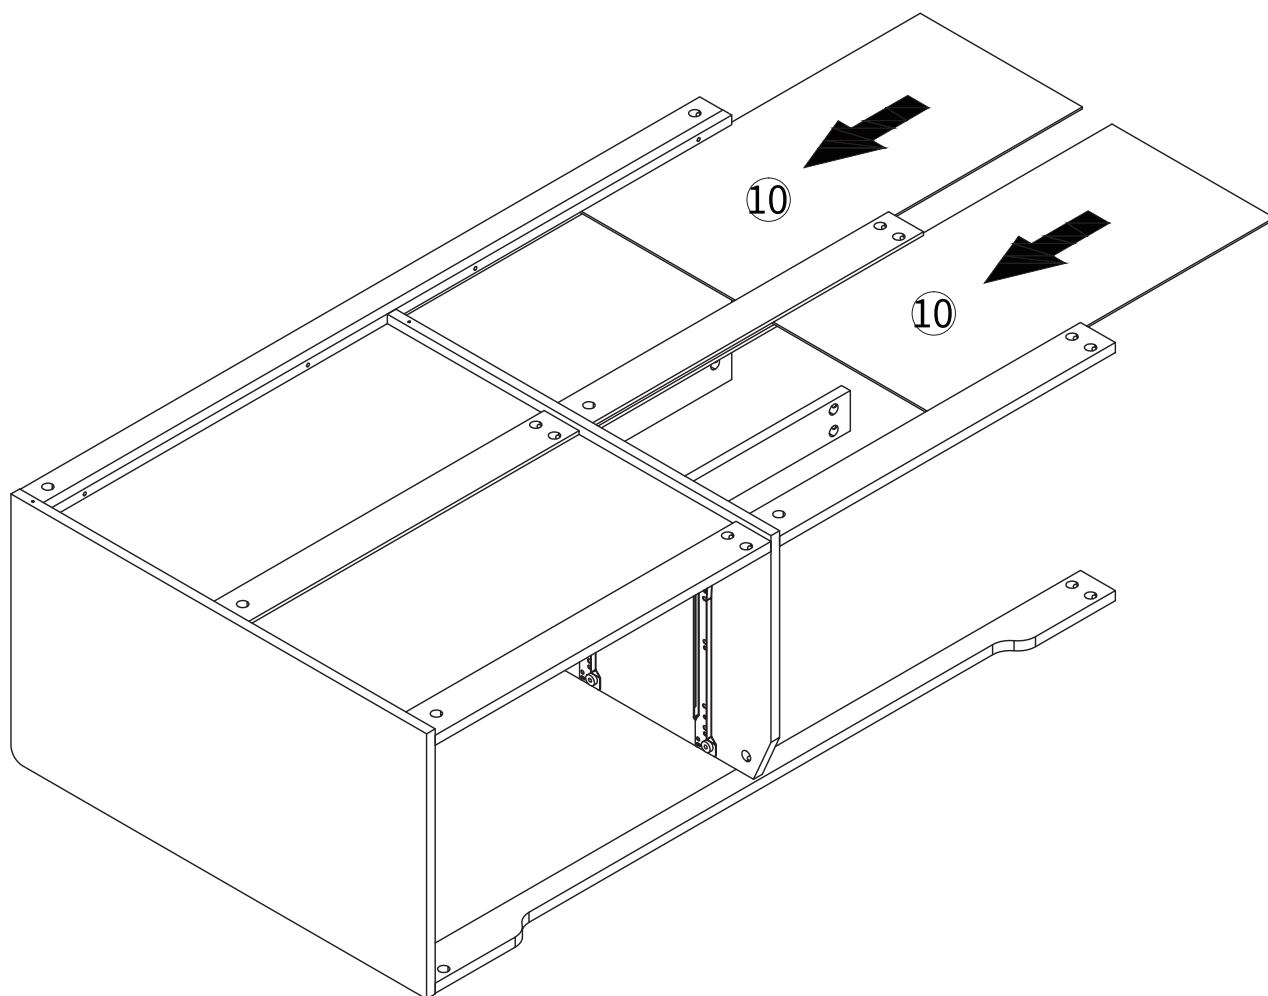

Assembly Instructions

Step13:

Connect board ③ to the main body using wood pin ① and lock it with screw ② .

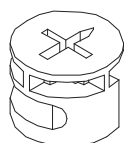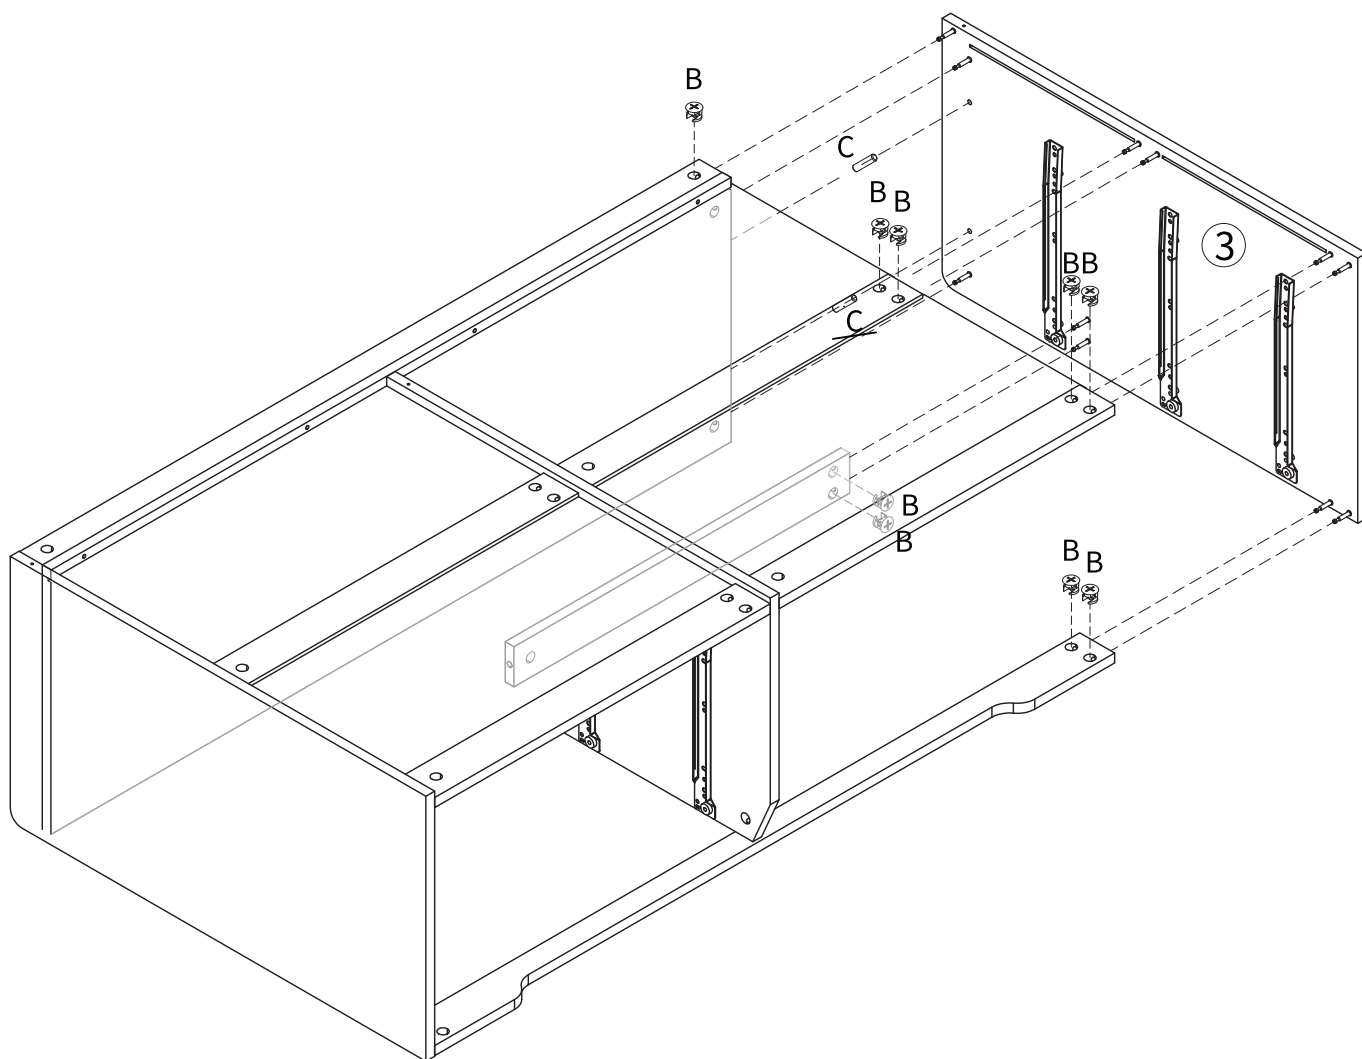

②9PCS





①2PCS

Assembly Instructions

Step14:

Fix the top board ① with screw ② .

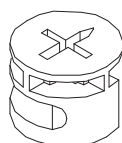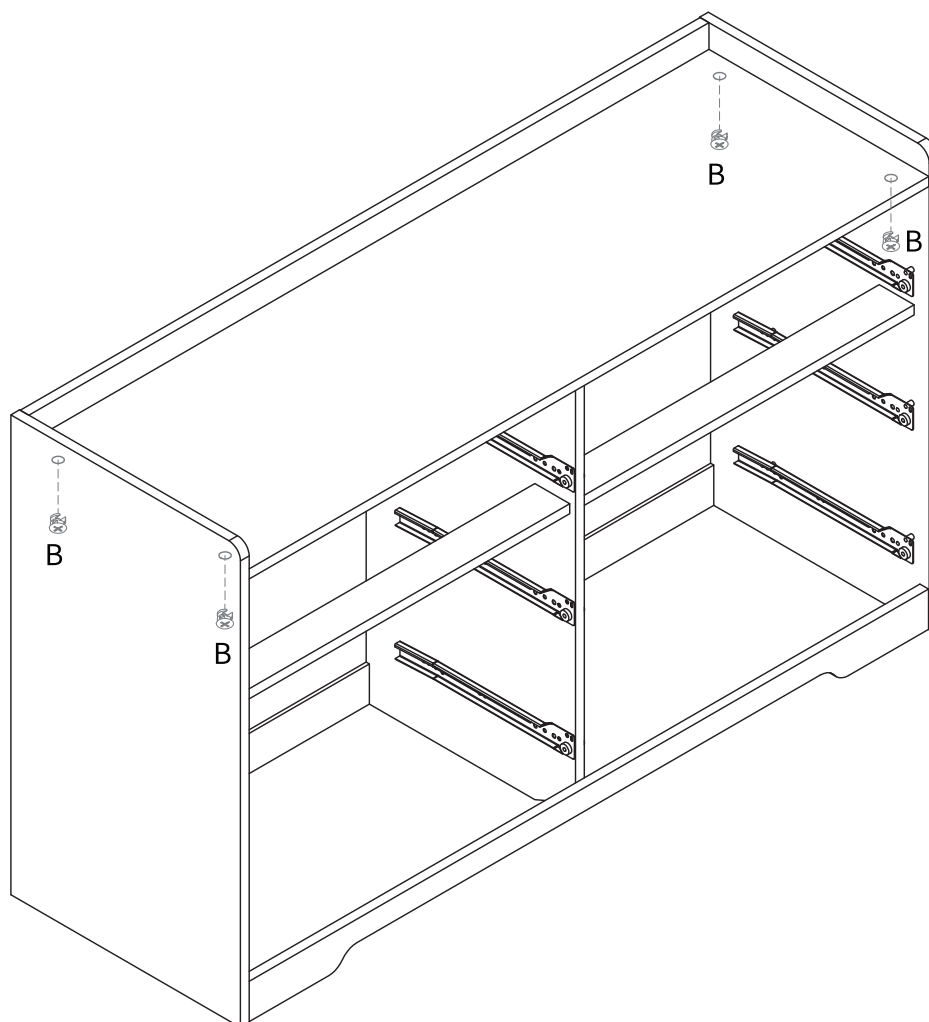


② 4PCS


Assembly Instructions

Step15:

Fix the back panel with part (H) and screw (G) .

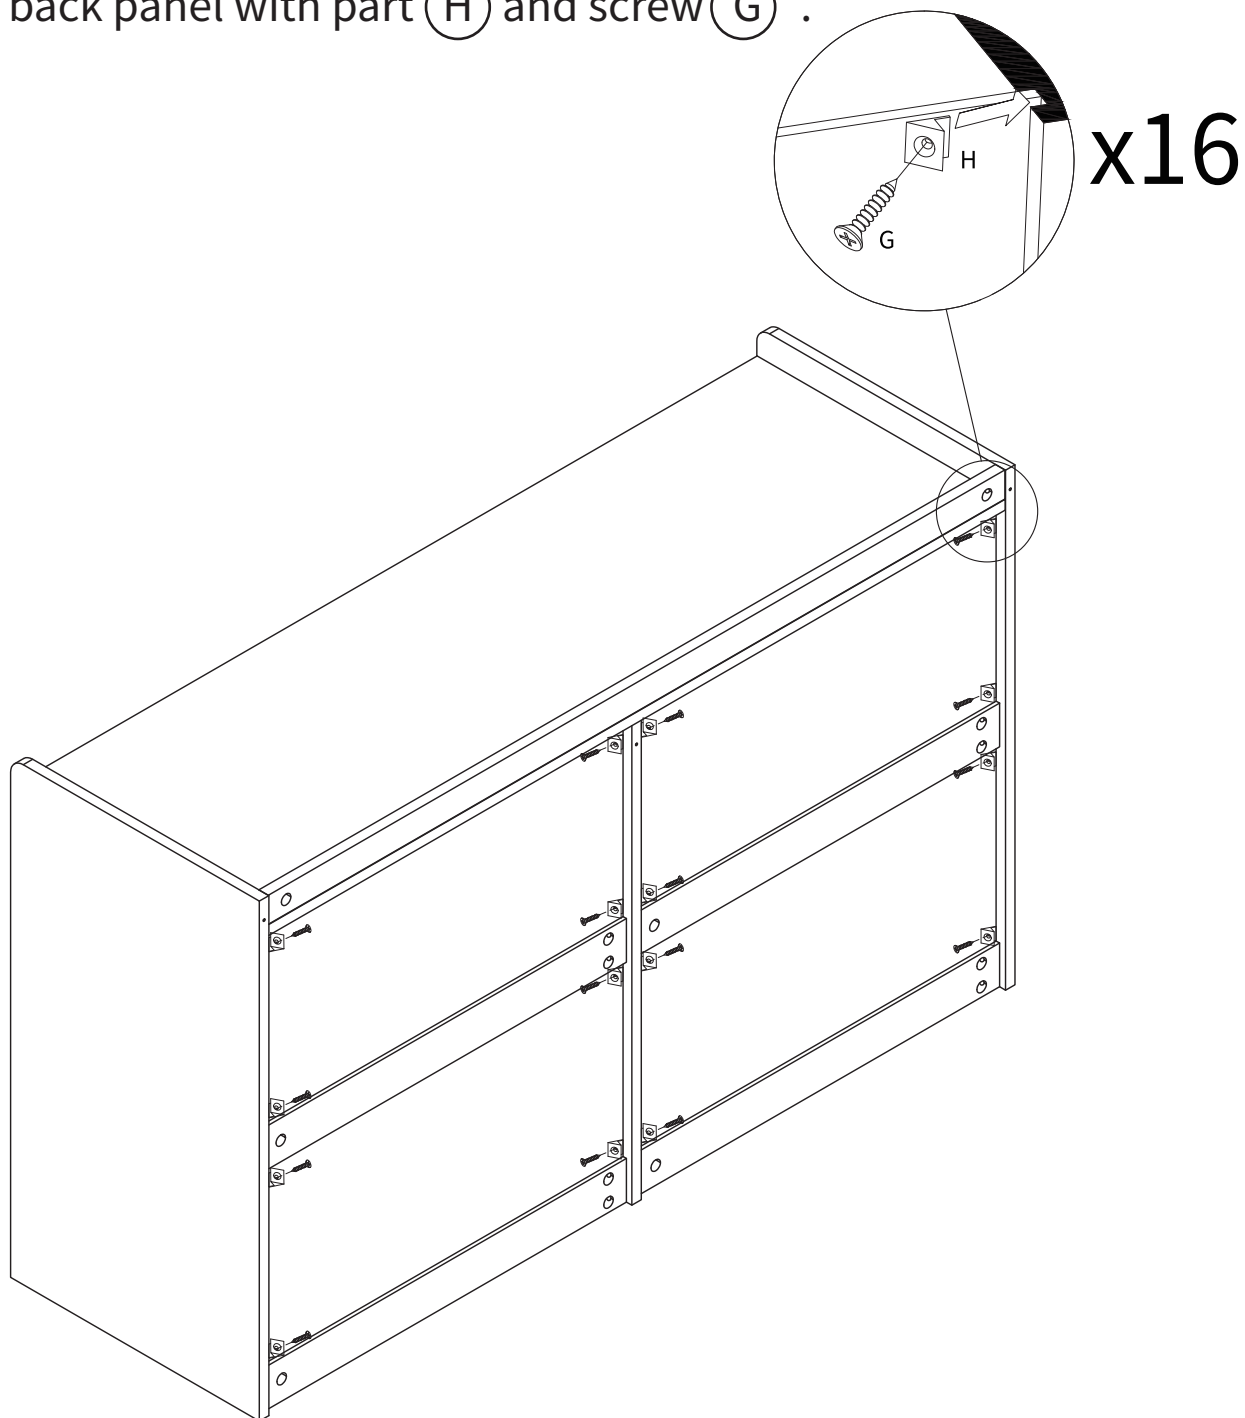

Ⓒ16PCS




Ⓗ16PCS

Assembly Instructions


Step16:

Connect the board (12) & (13) on the board (14) with screw (F).

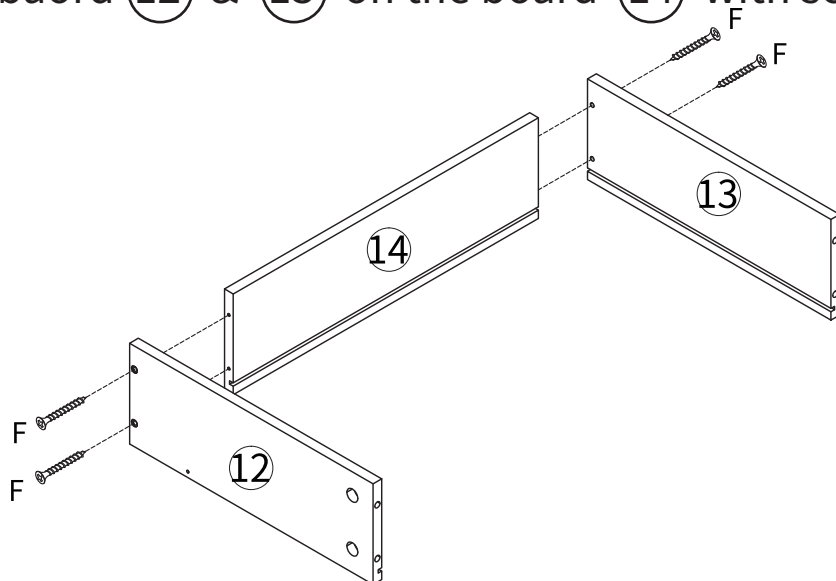


× 6

Insert the bottom plate (15).

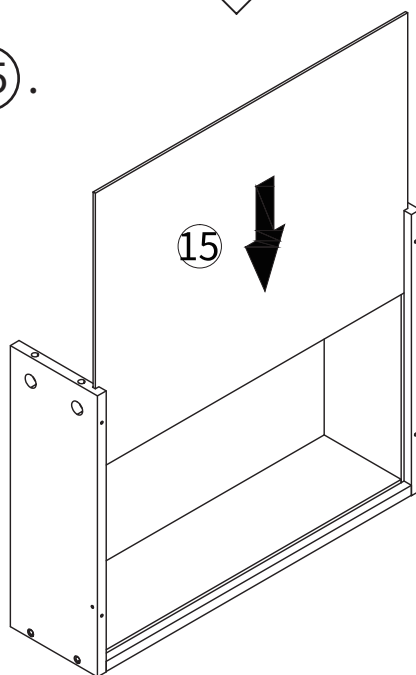


× 6

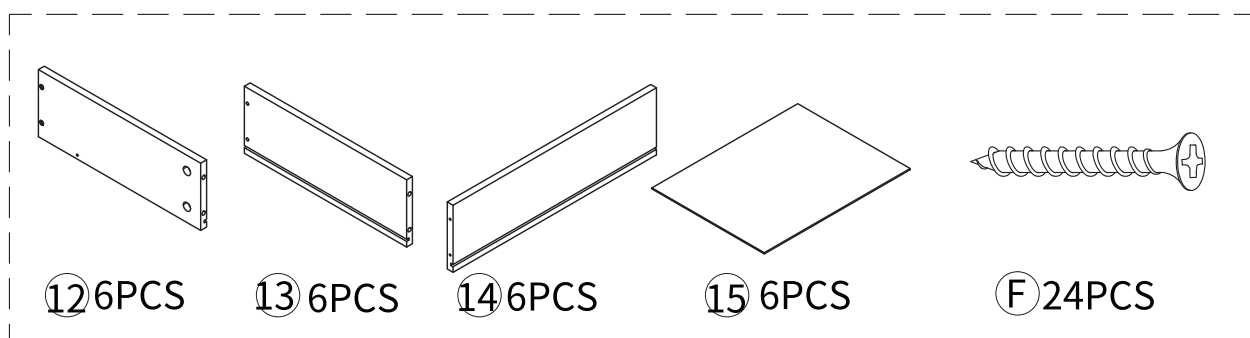



Assembly Instructions

Step17:


Fix screw (A) onto drawer panel (11) .

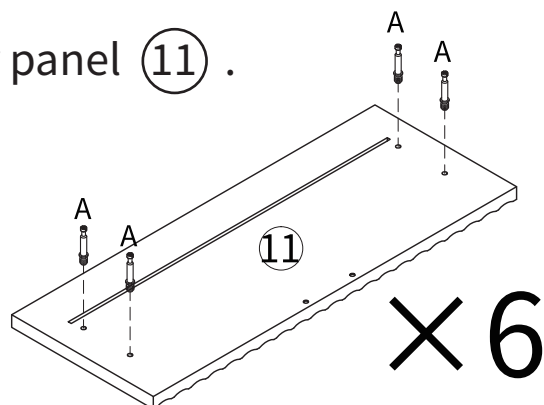

Install board (11) on board (12) & (13) , and secure it with screw (B) .

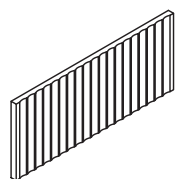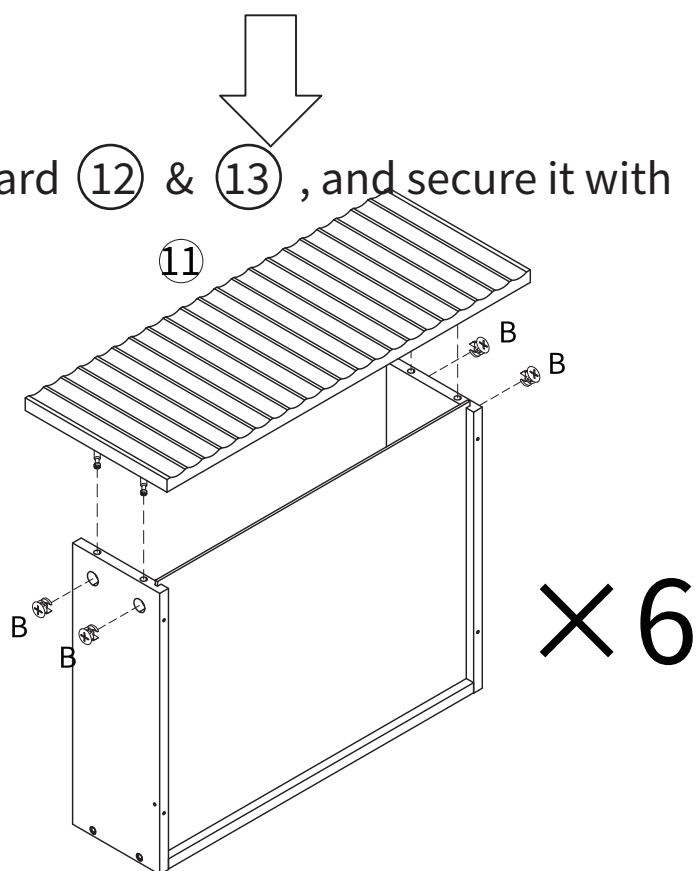

(11) 6PCS

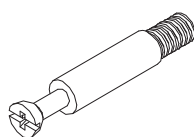

(A) 24PCS





(B) 24PCS



Assembly Instructions

Step18:

Fix the slide rails (DL) and (DR) onto the drawer using screw (E) .

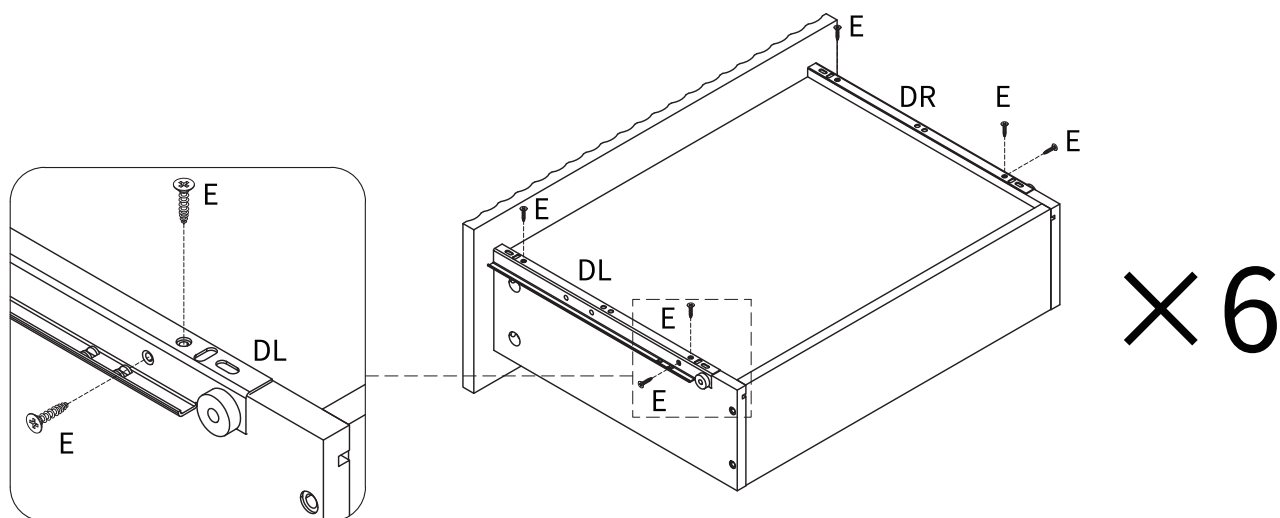


Use screw (E) to secure the handle (J) to the drawer .

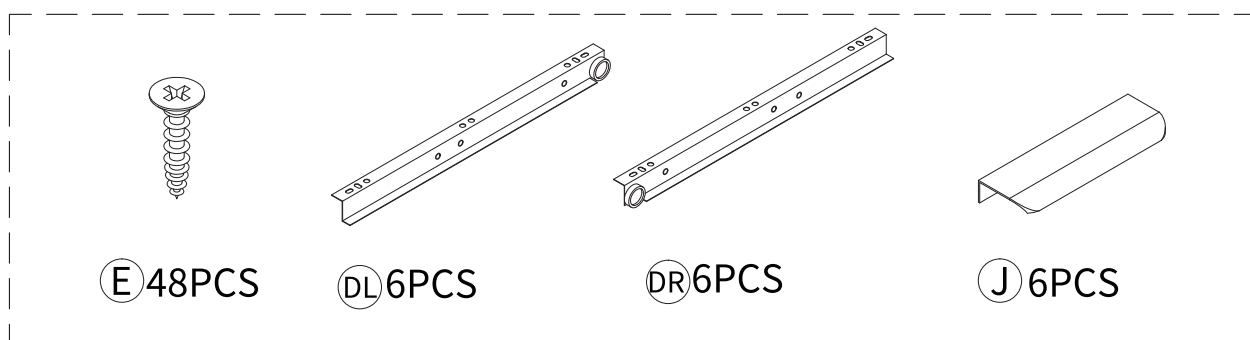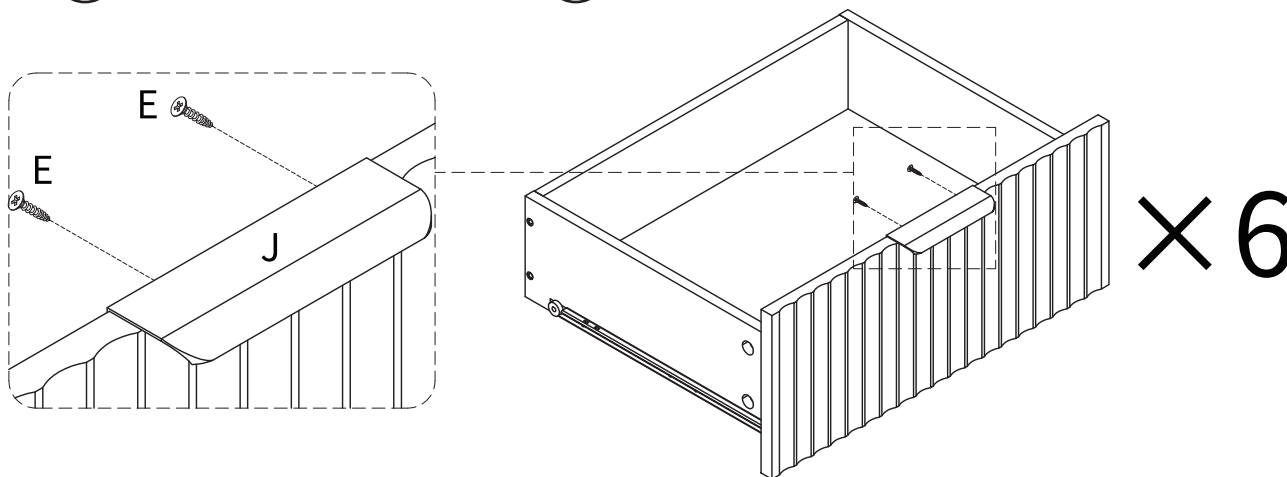

Assembly Instructions

Step19:

Cover the screw hole with component (N) .

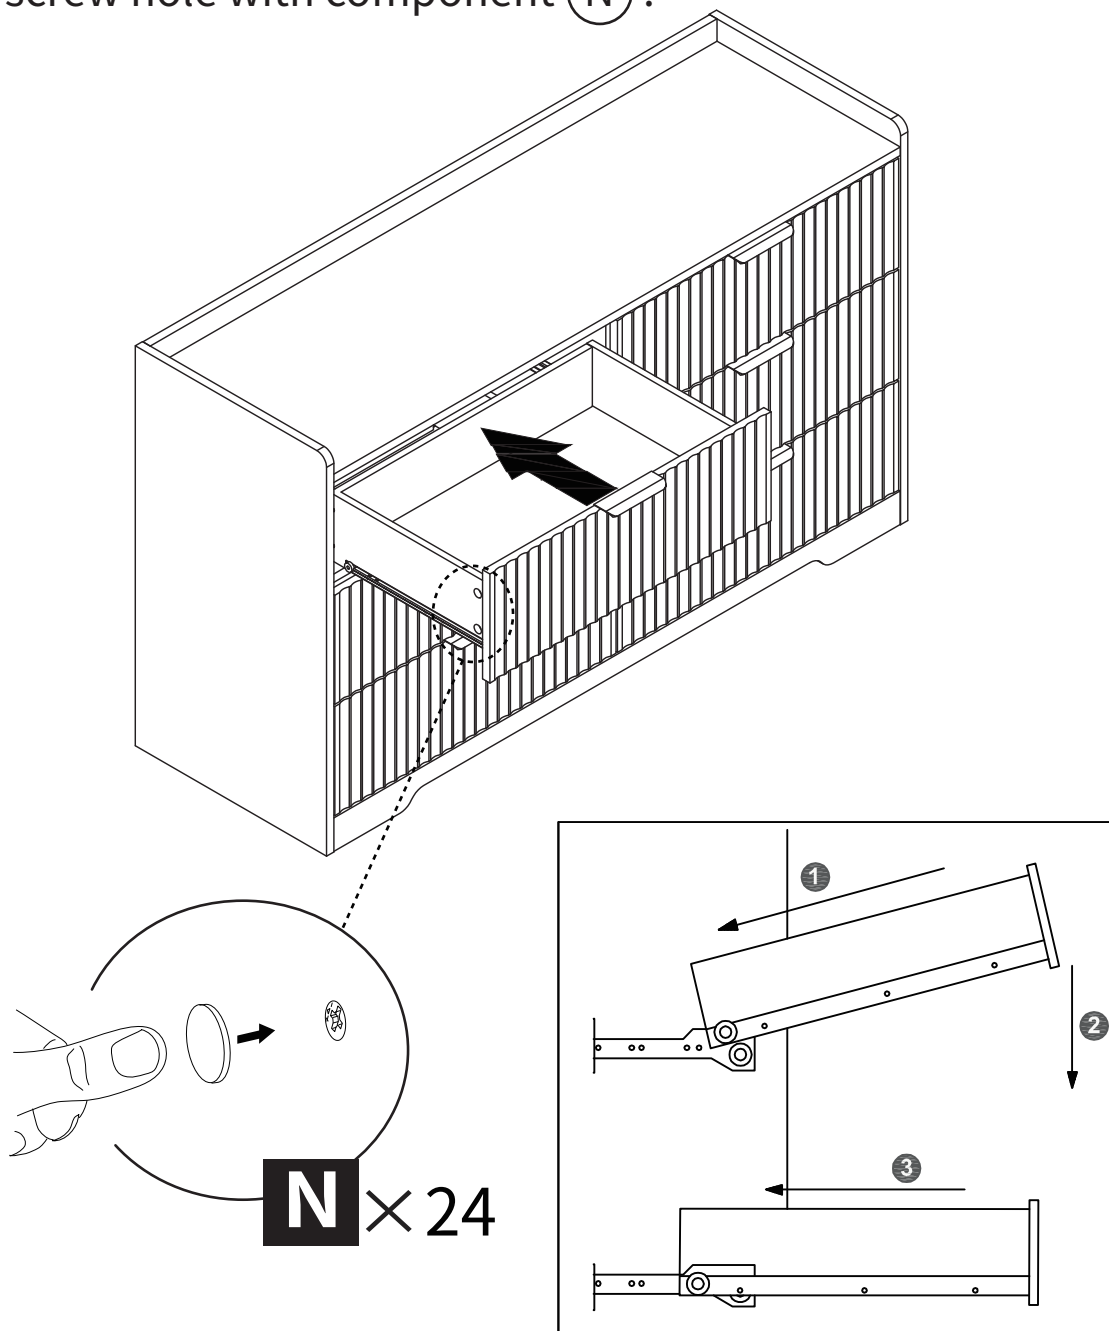


(N)24PCS


Assembly Instructions

Step20:

Install the anti drop kit (M) with screw (E) behind the dresser .

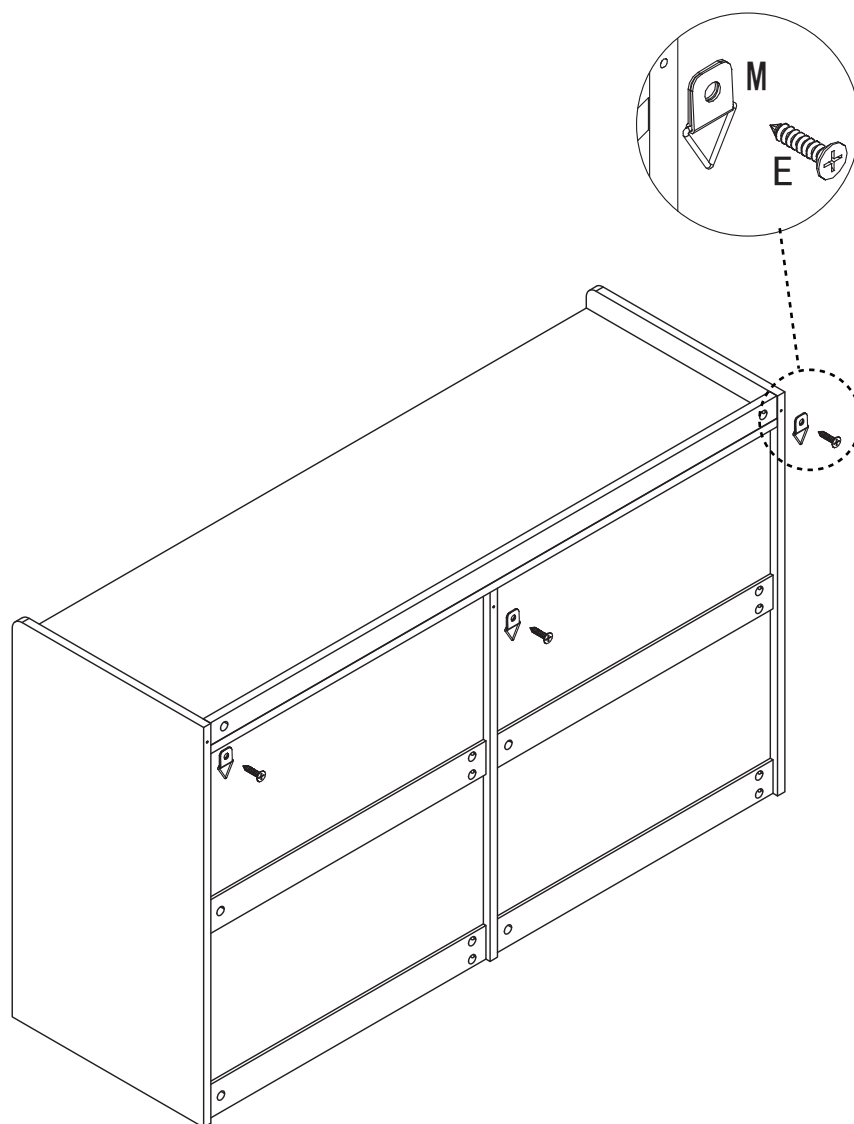


(E) 3PCS




(M) 3PCS

Assembly Instructions



Step21:

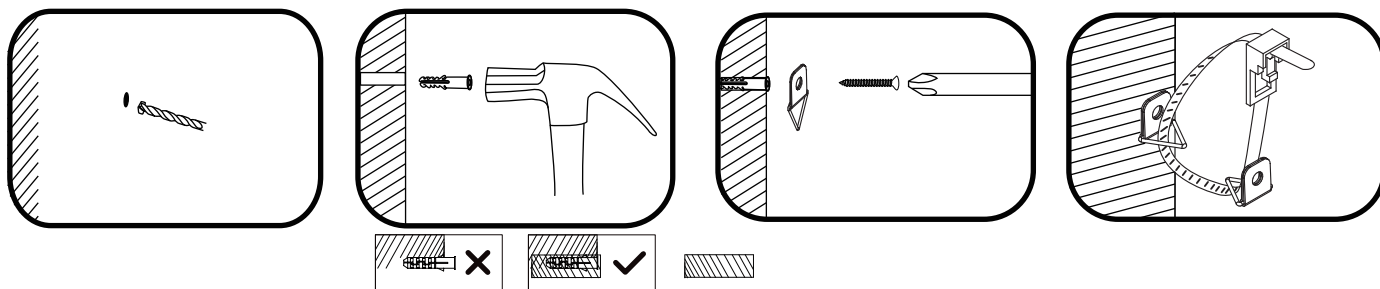

After drilling holes on the wall, screw the expansion screw into the wall, use screw (F) to fix component (M) to the wall, and use straps to fix component (M) on the wall and the back of the cabinet .

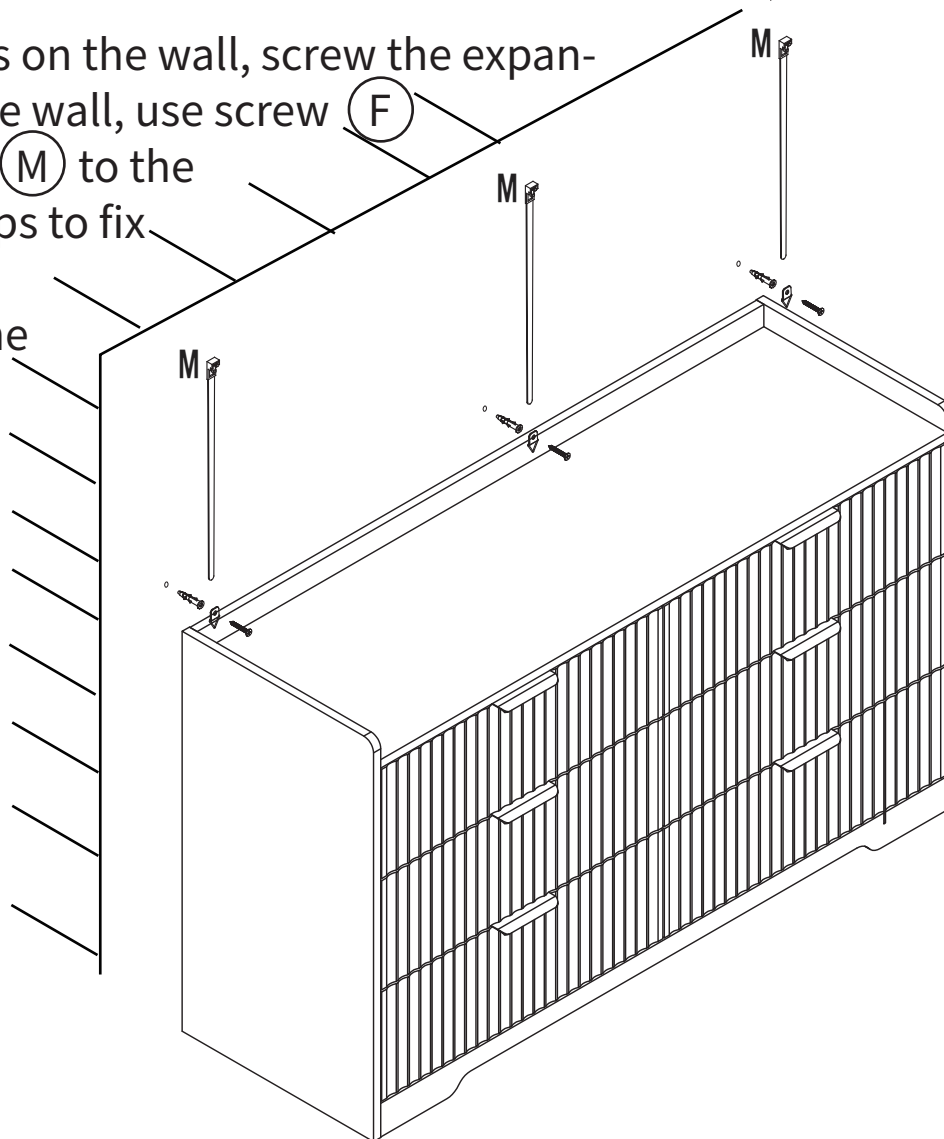

(F) 3PCS

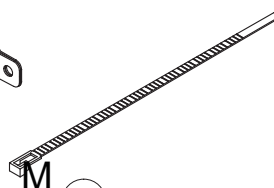

(M) 3PCS