



Computer Desk

Installation Option I



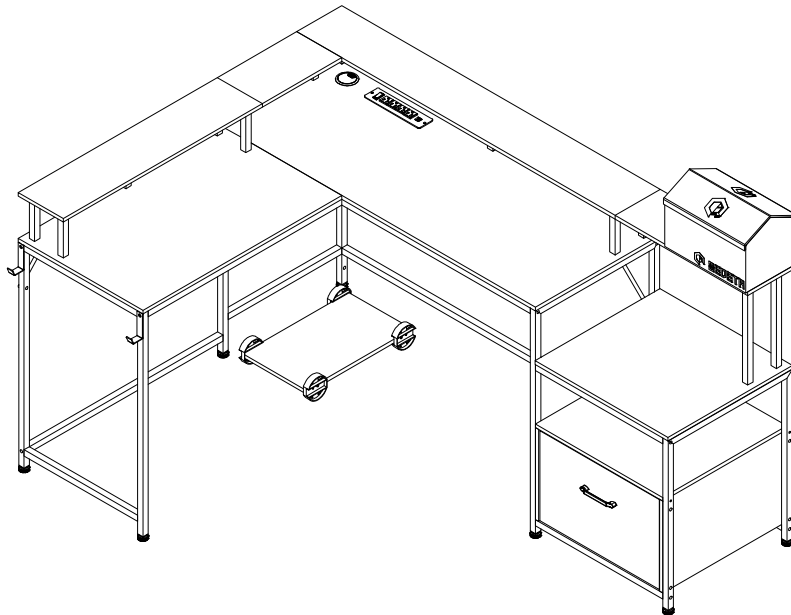


Installation Option II

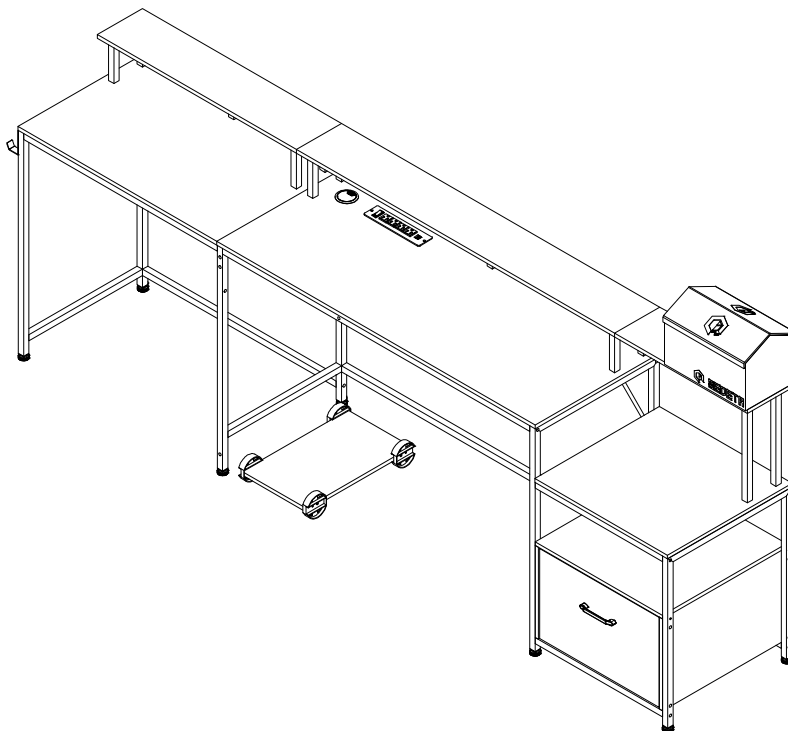











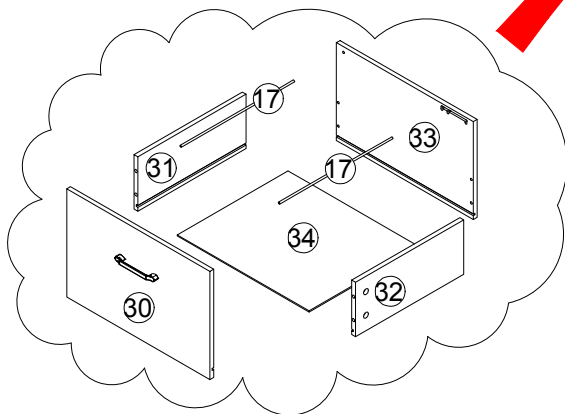
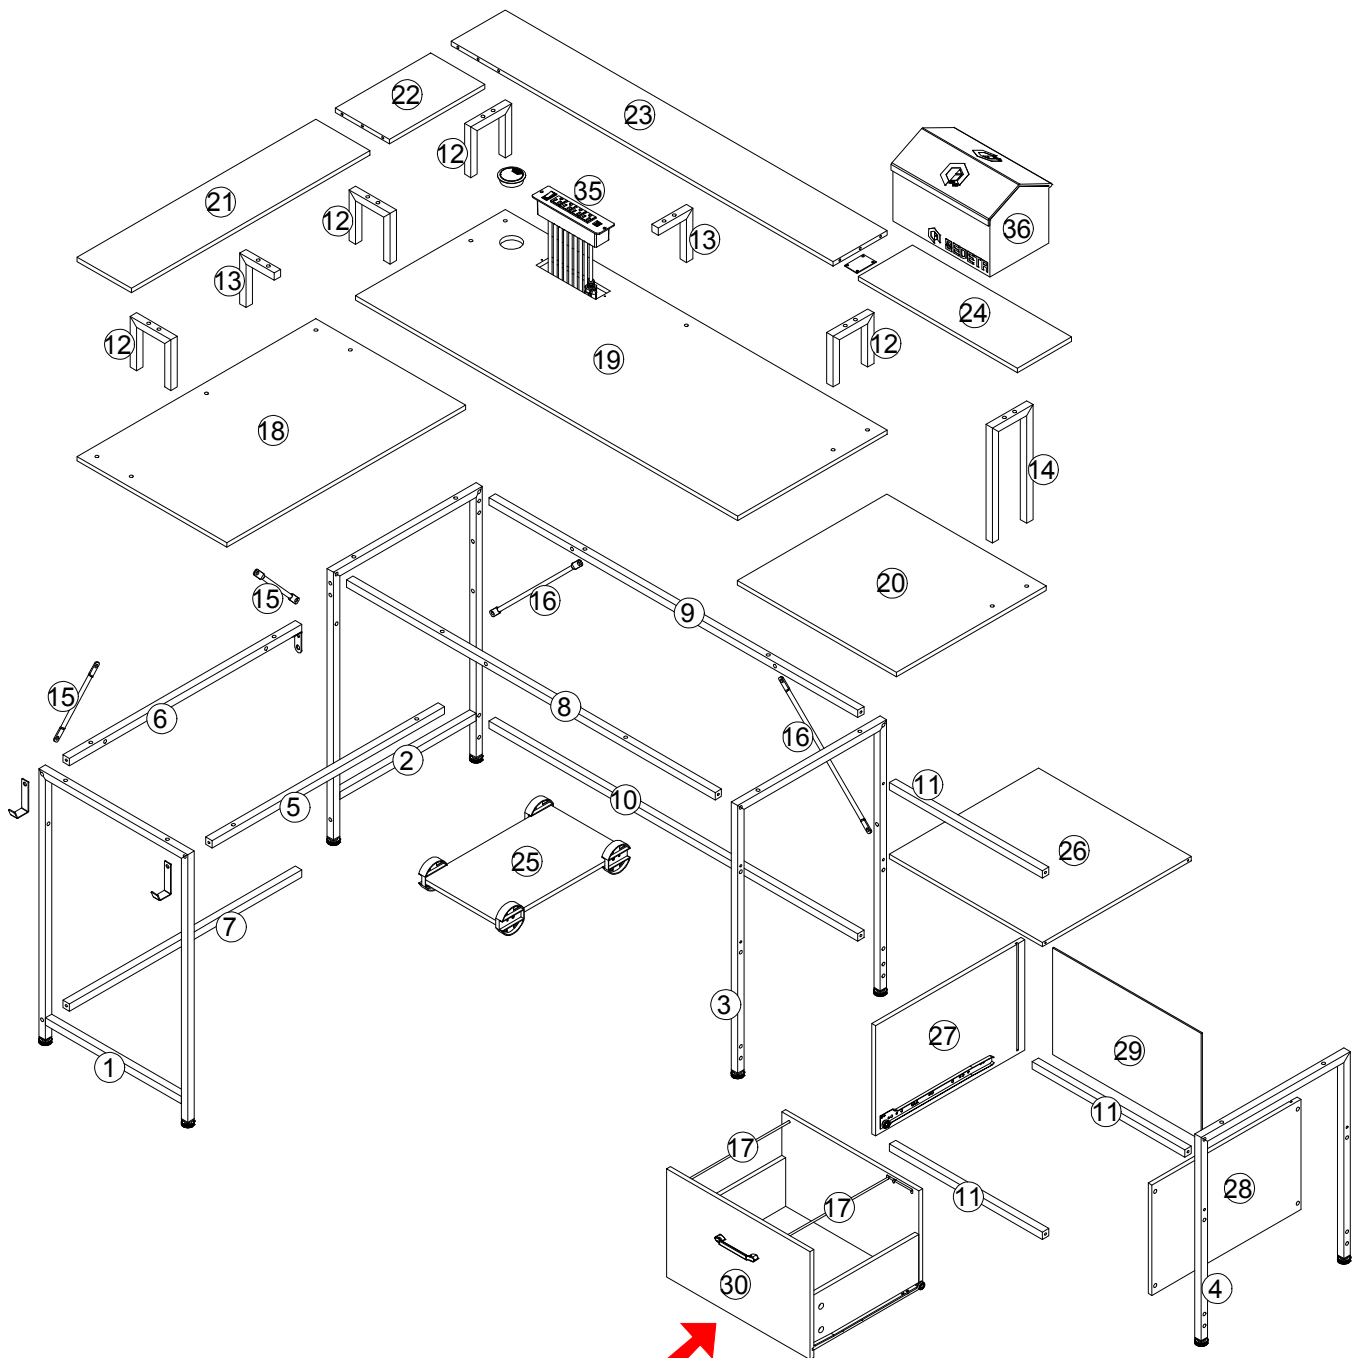






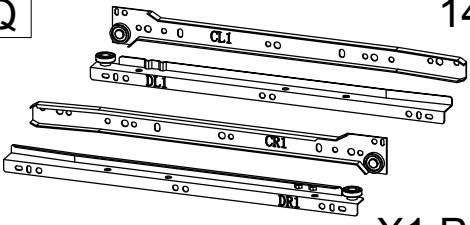






Version :1.0

ASSEMBLY INSTRUCTION




If you have any questions, please contact us
Service Email: sedetahelp@gmail.com

ASSEMBLY INSTRUCTION


A M6*40mm  X17+1	B M6*30mm  X22+2	C M6*25mm  X38+2	D M5*40mm  X10+1
E M6*40mm   9.5 X4	F M4*16mm  X2  X1 X1	G M3.5*14mm  X10+2	H M3.5*12mm  X13+2
I M6*55mm  X1	J Ø6*35mm  X9+1	K M6*12  X10+1	L M8  X8
M  X2	N Ø53  X1	O Ø73  X4	P 40*60mm  X1
Q  14" X1 PC	R  X1	 → 4 X1	
 X1	 X1	 4# X1	 3# X1

ASSEMBLY INSTRUCTION

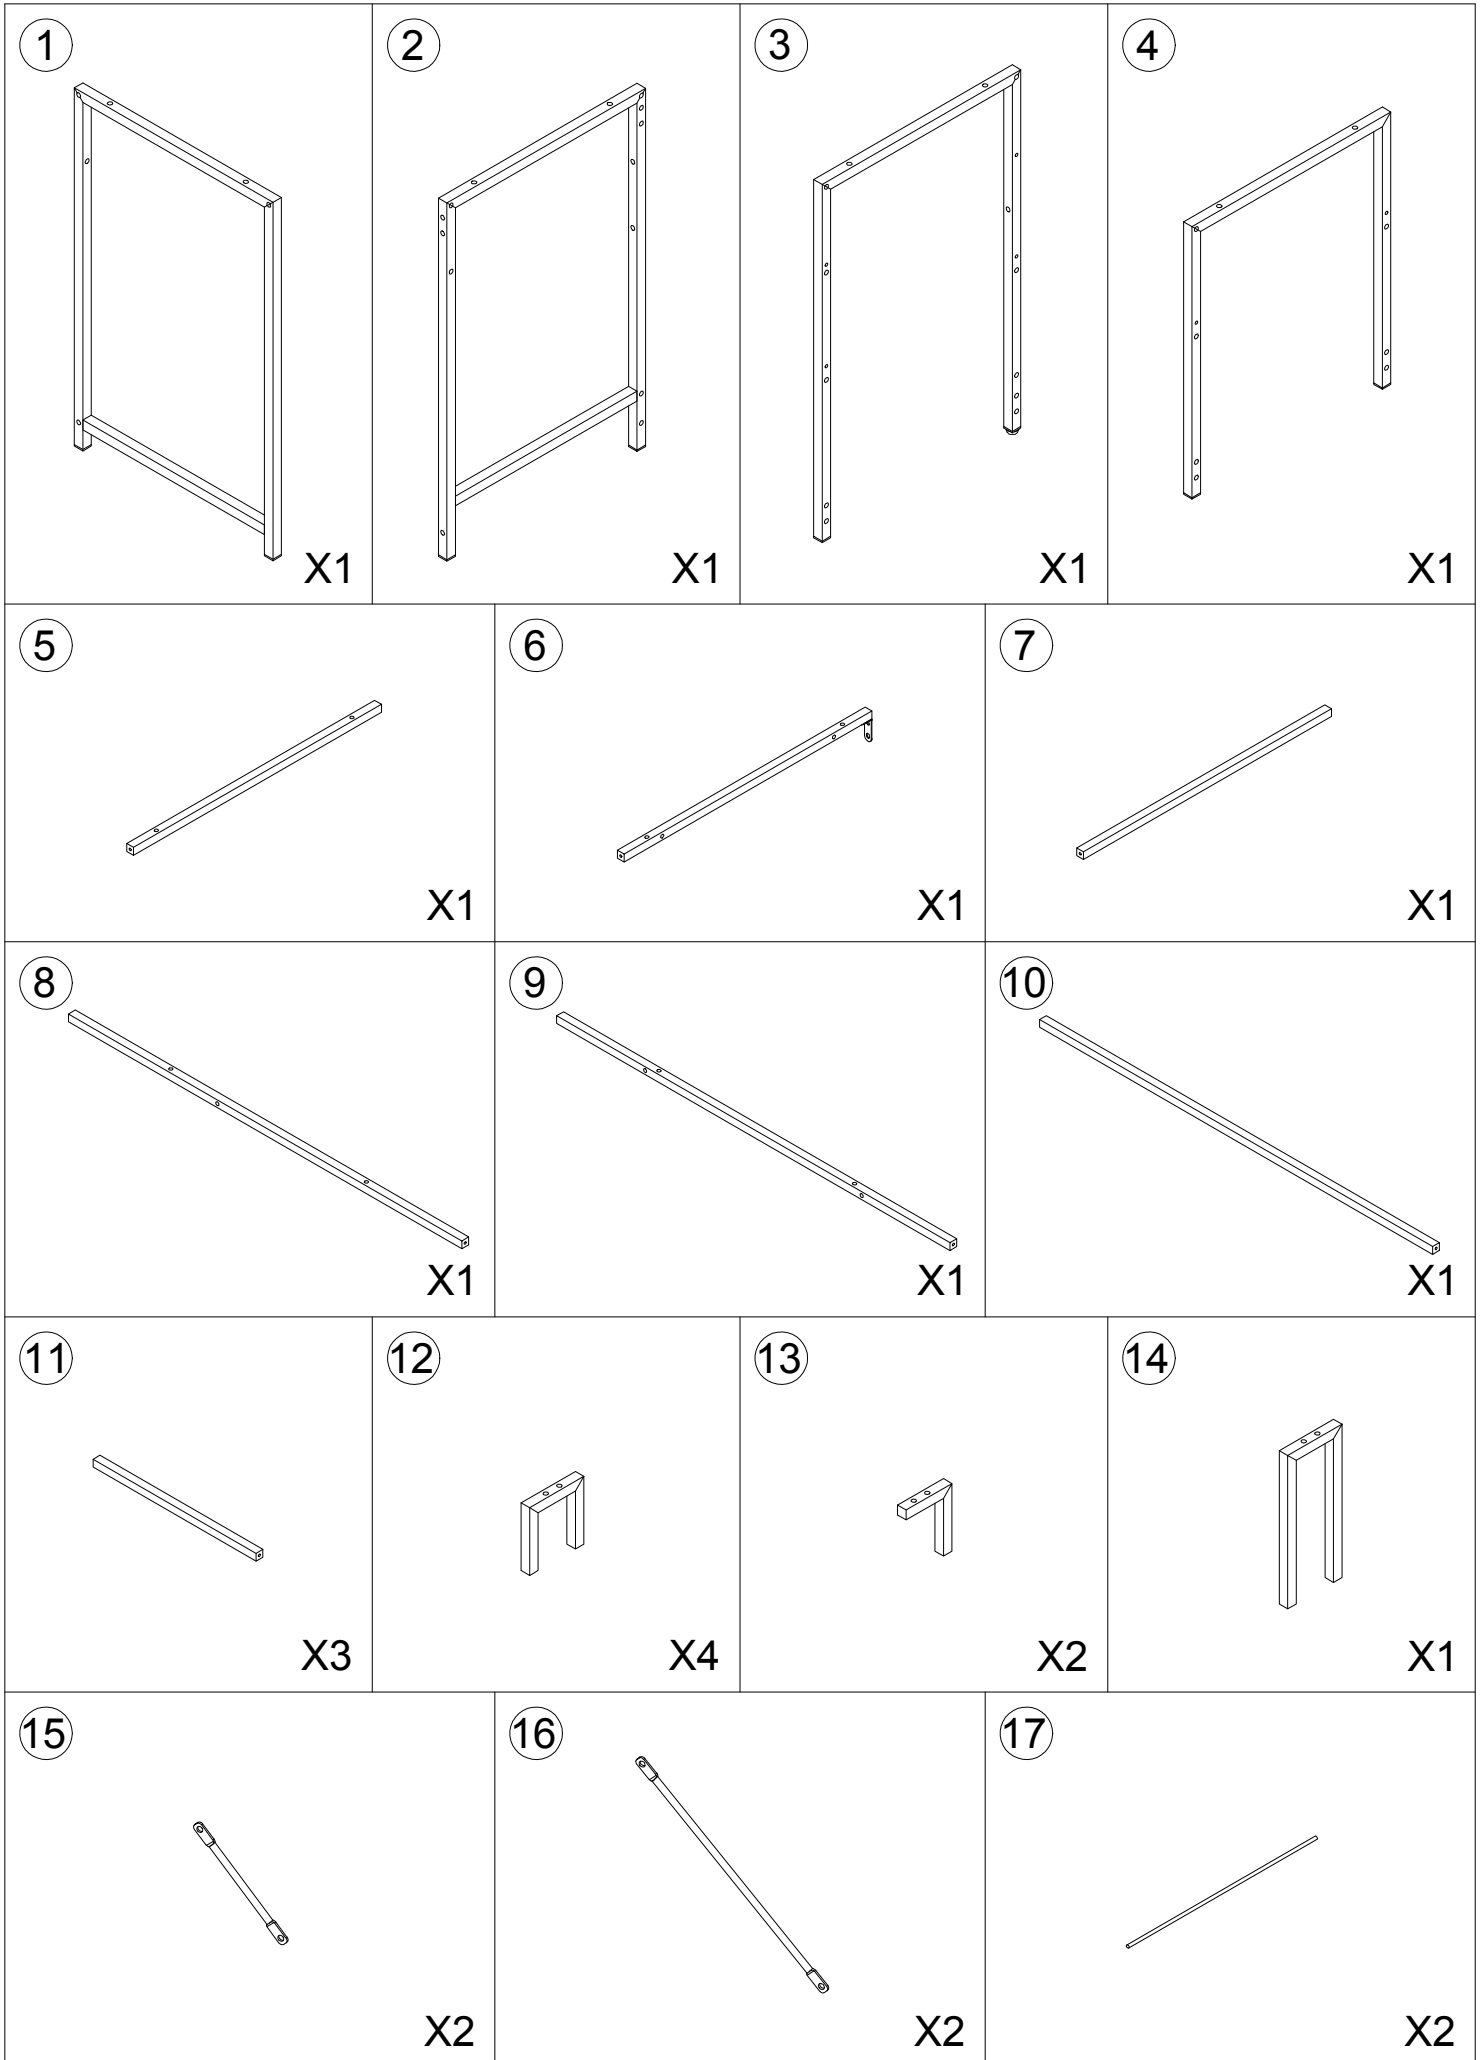


ASSEMBLY INSTRUCTION

18

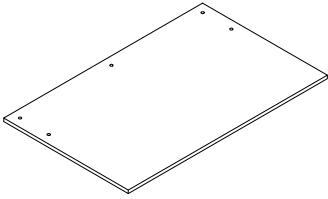


X1

19

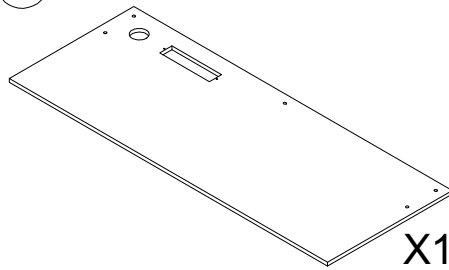


X1

20

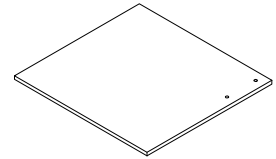


X1

21

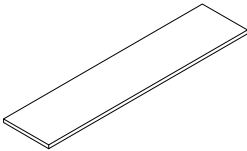


X1

22




X1

23

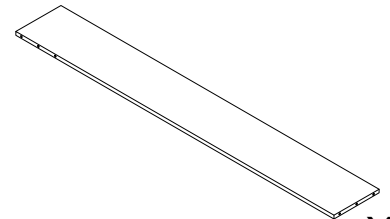


X1

24




X1

25




X1

26

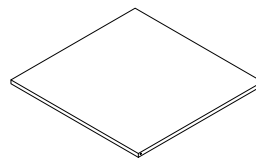


X1

27

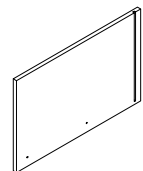


X1

28

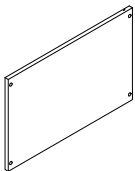


X1

29

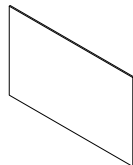


X1

30

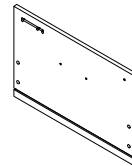


X1

31




X1

32




X1

33

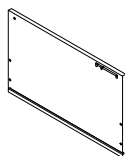


X1

34

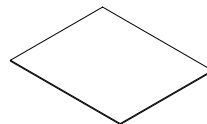


X1

35

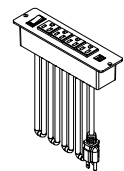


X1

36

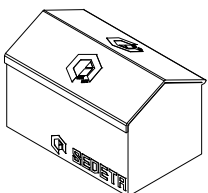

X1


37

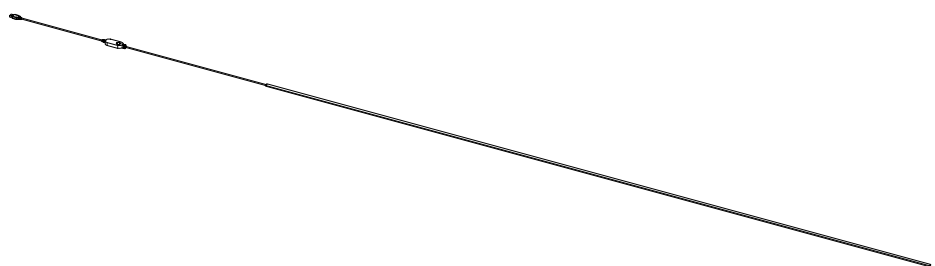


X1

ASSEMBLY INSTRUCTION


1.Matters needing attention

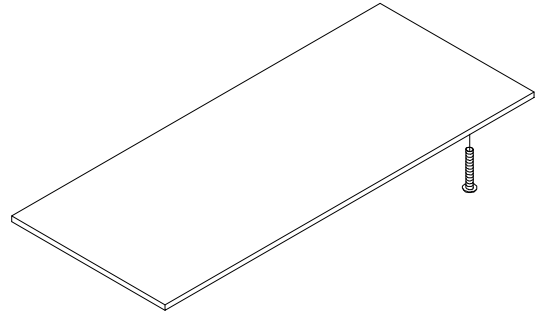

Be sure to use the proper screws to avoid damaging the parts


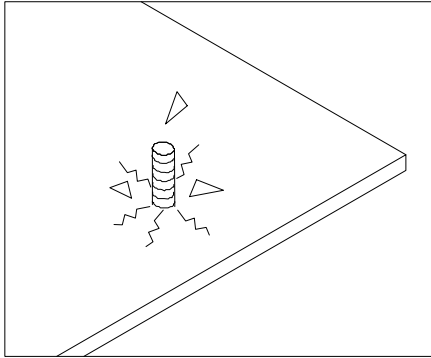


Wrong screws can cause the plank to crack

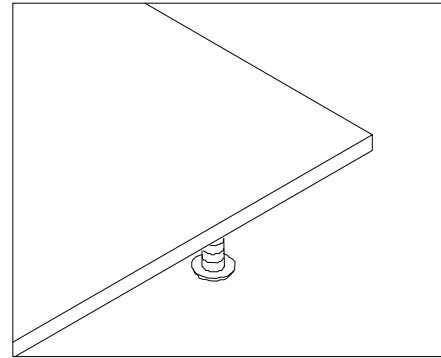

The right screw is the right size

2.Matters needing attention

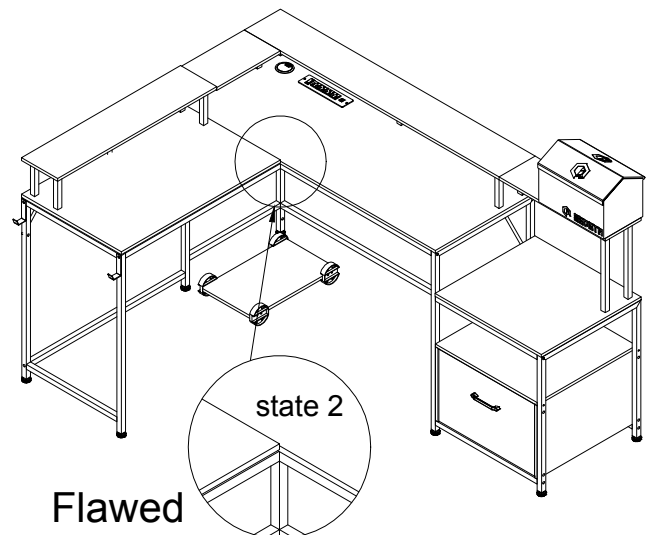
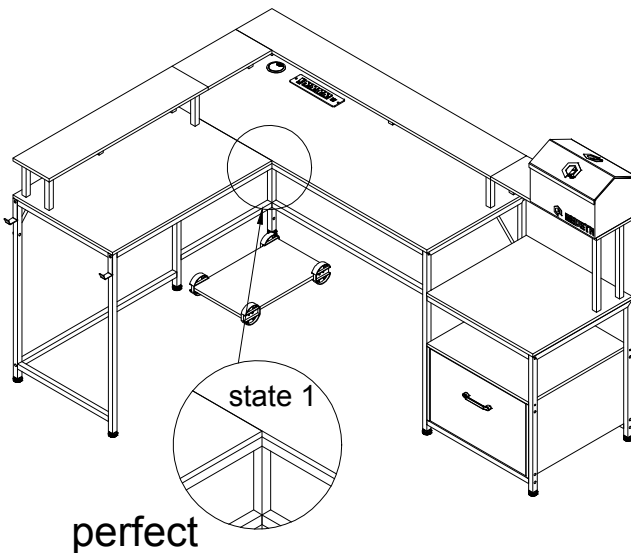


If you encounter "state 2" during the installation process, please loosen the corresponding screws of each part in time, adjust slowly, and then slowly tighten all the screws after the adjustment is completed.



ASSEMBLY INSTRUCTION

Matters needing attention

- (1) When installing the screws in the installation step, the screws do not need to be tightened.
After this installation step is confirmed and the holes are aligned, then tighten all the screws.
- (2) If the screws are tightened during the installation process, it will cause problems such as misalignment of the screw holes and misalignment of the board in subsequent installations.

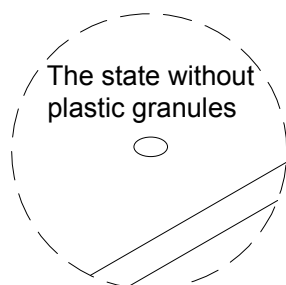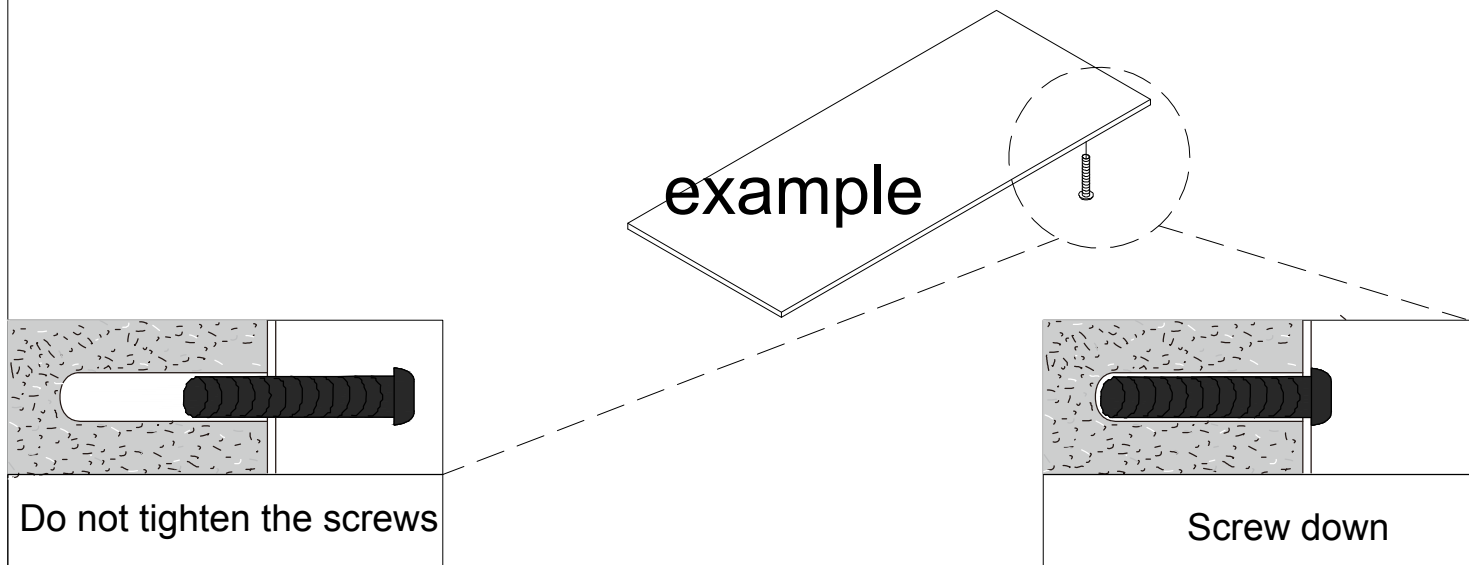


The state without plastic granules

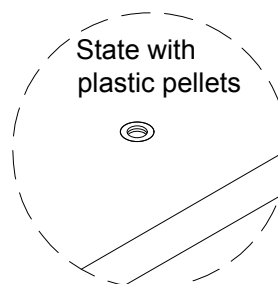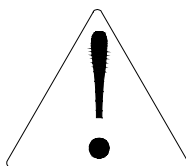

State with plastic pellets

Note that if you find that there are no plastic granules on the wooden block, the table cannot be assembled, please don't worry, please use the spare plastic granules in the screw bag

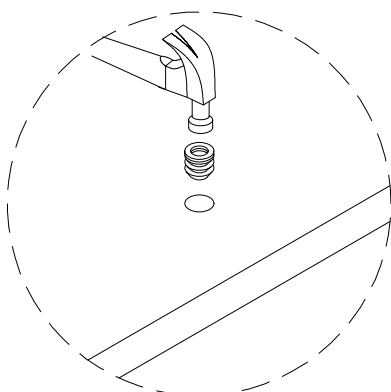


Note, please use a tool to carefully align the plastic pellets with the holes and then knock them down


ASSEMBLY INSTRUCTION

There are 2 ways to install this table, each with different steps.
Please choose one type and follow its unique assembly method.

Type 1: Please refer to Step 10 ~ Step 30.

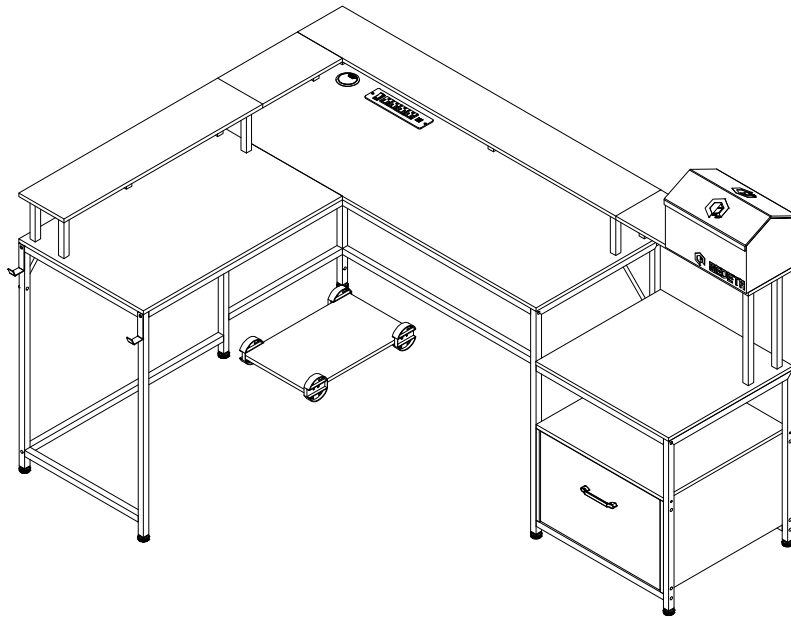


Type 2: Please refer to Step 31 ~ Step 49.

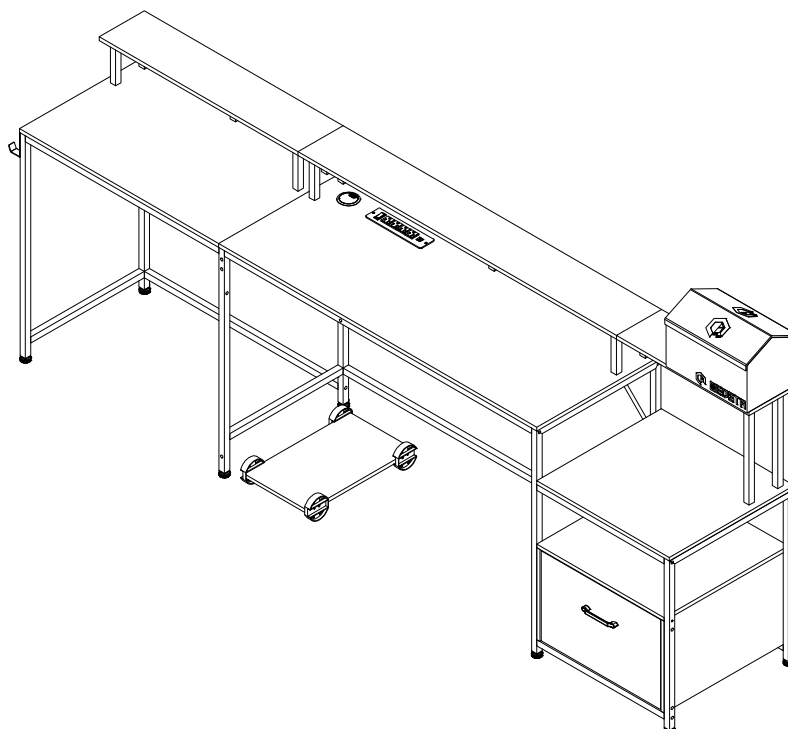


ASSEMBLY INSTRUCTION

STEP 1

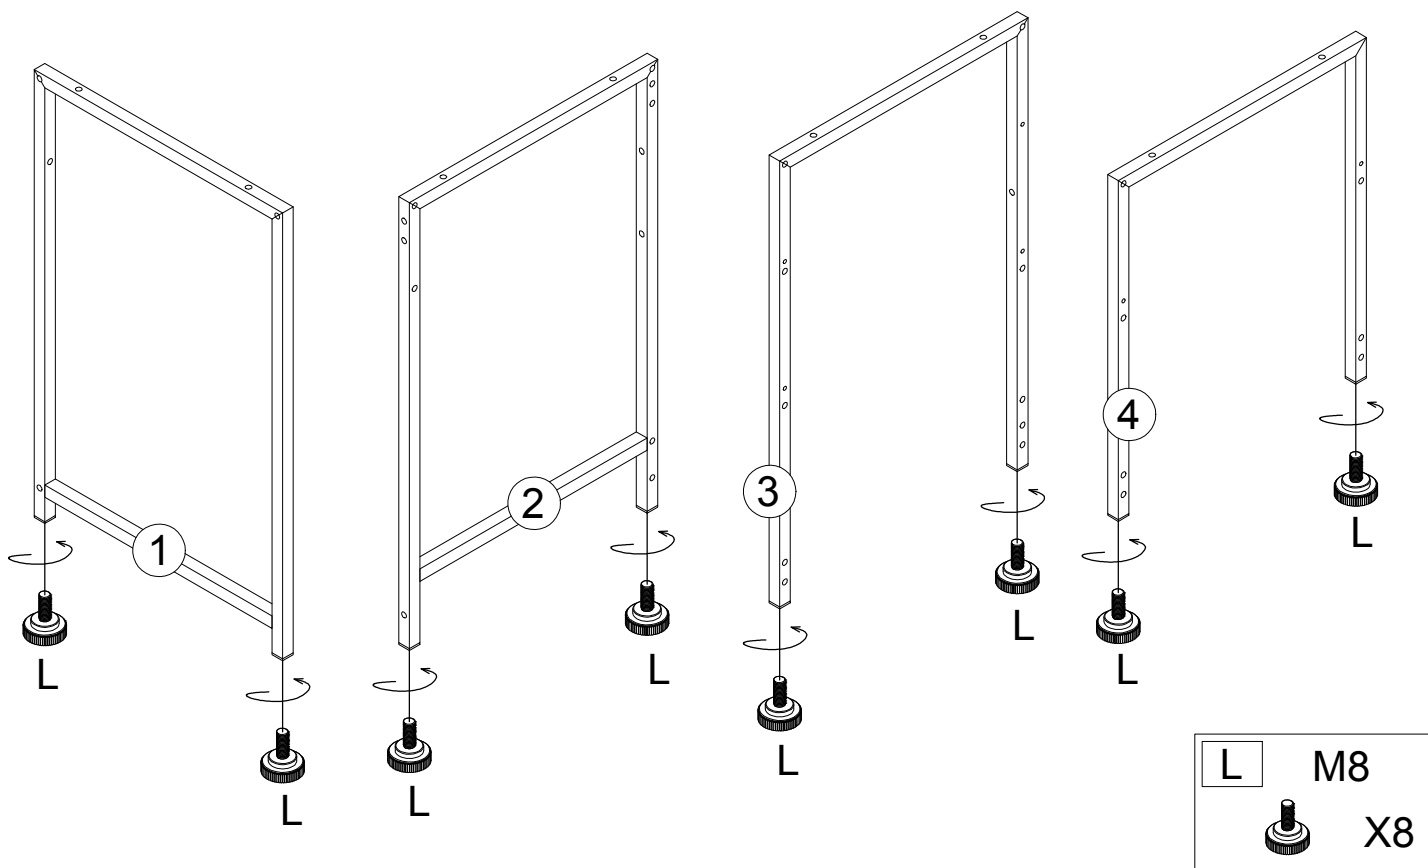


STEP 2


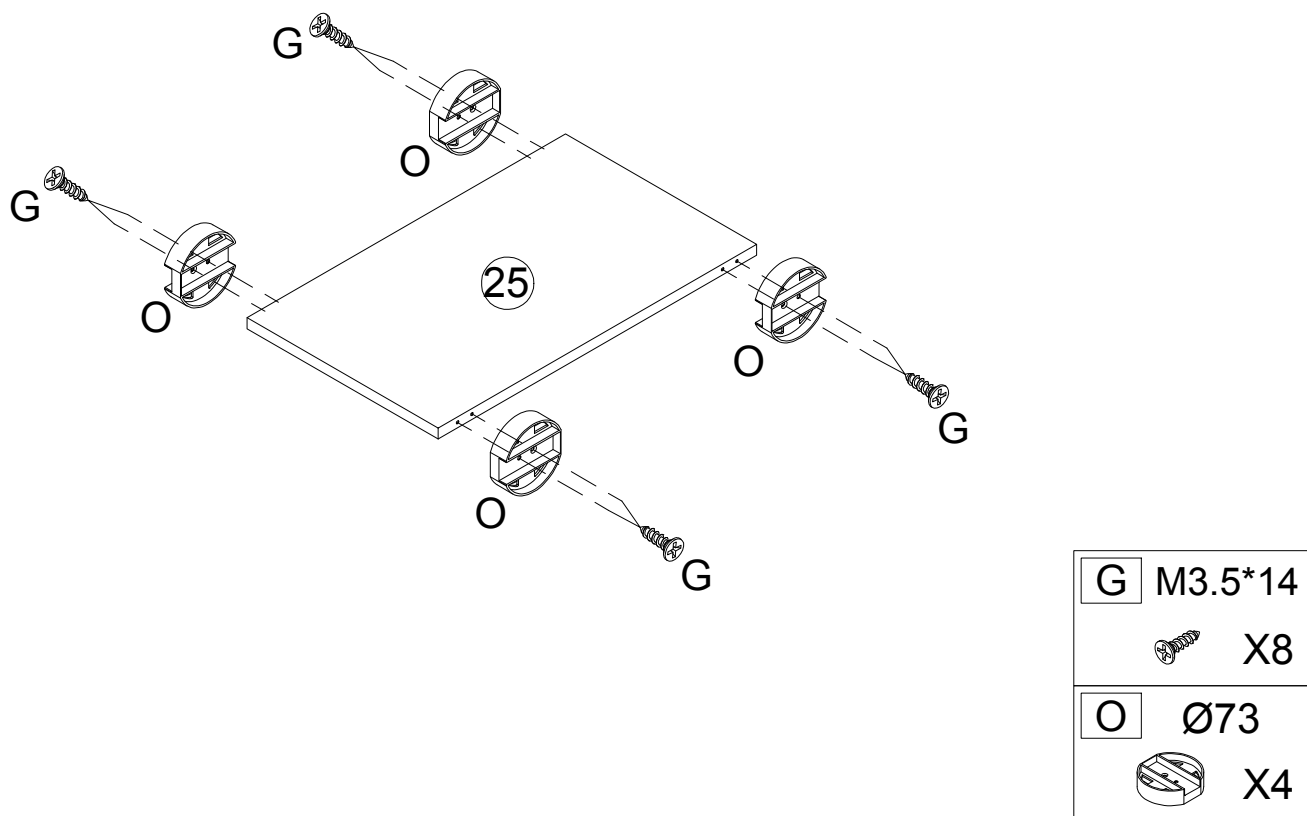


ASSEMBLY INSTRUCTION

STEP 3

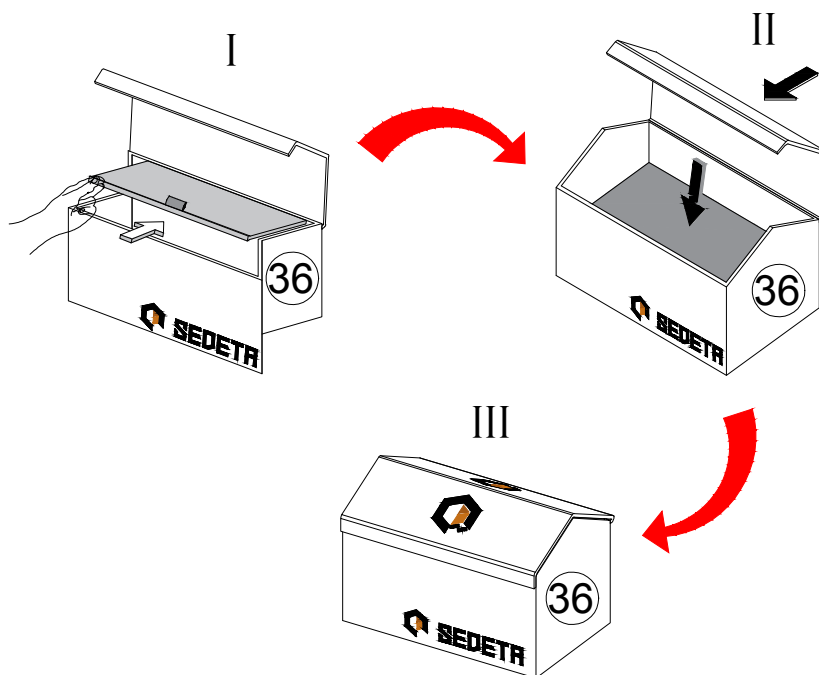


STEP 4

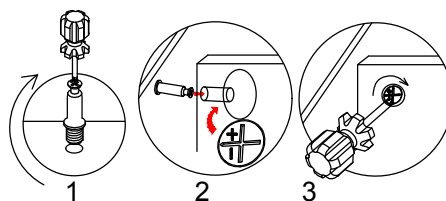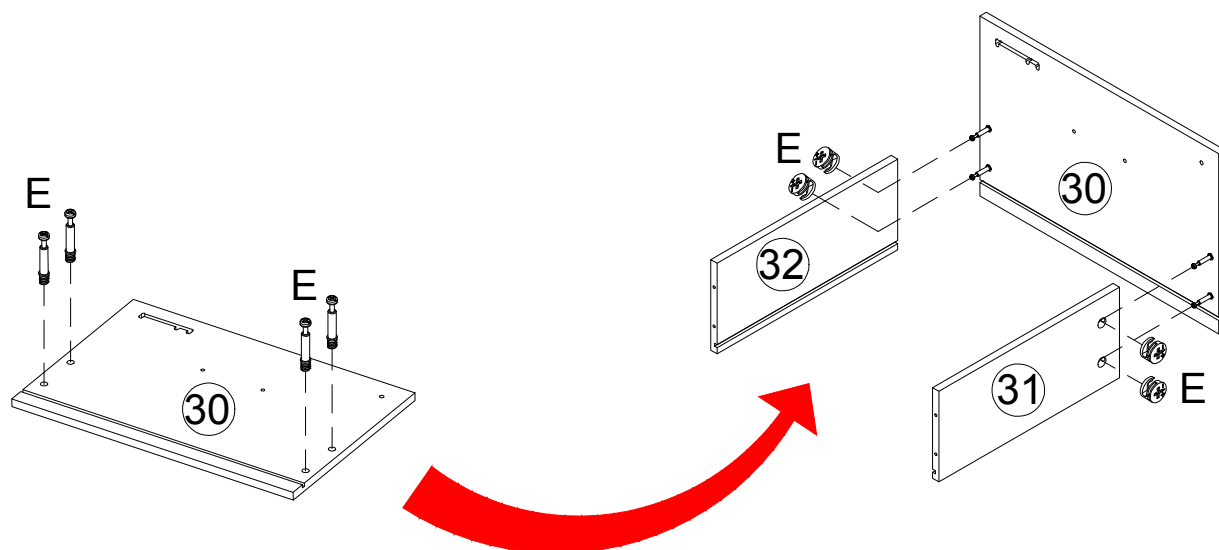


E	M6*40
	X4
E	
	X4


ASSEMBLY INSTRUCTION





STEP 5

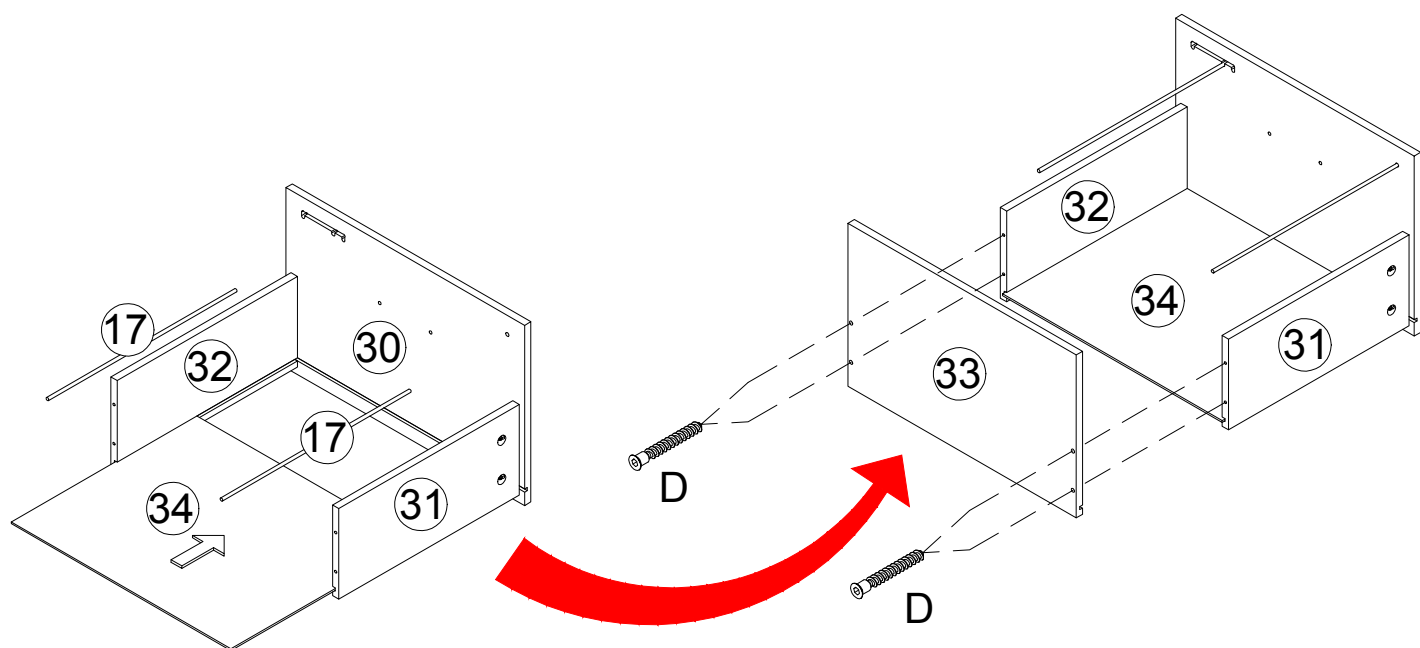

D	M5*40
	X4


STEP 6

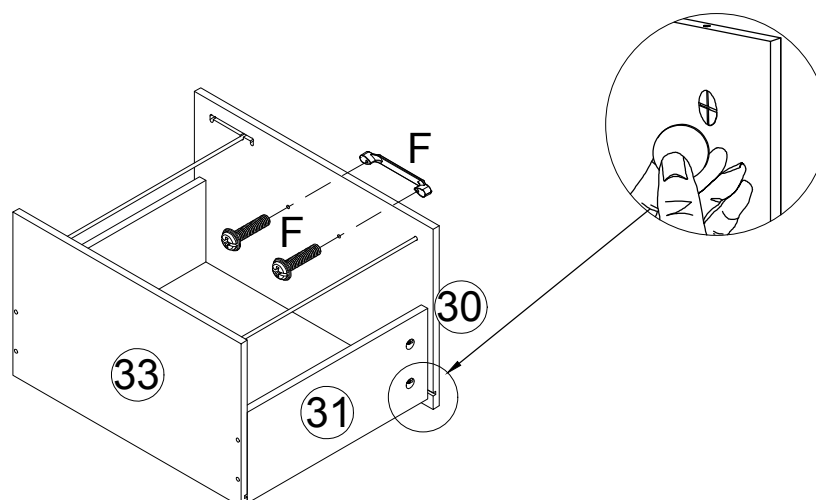


F	M4*16
	X2
F	
	X1
	X1

ASSEMBLY INSTRUCTION


STEP 7

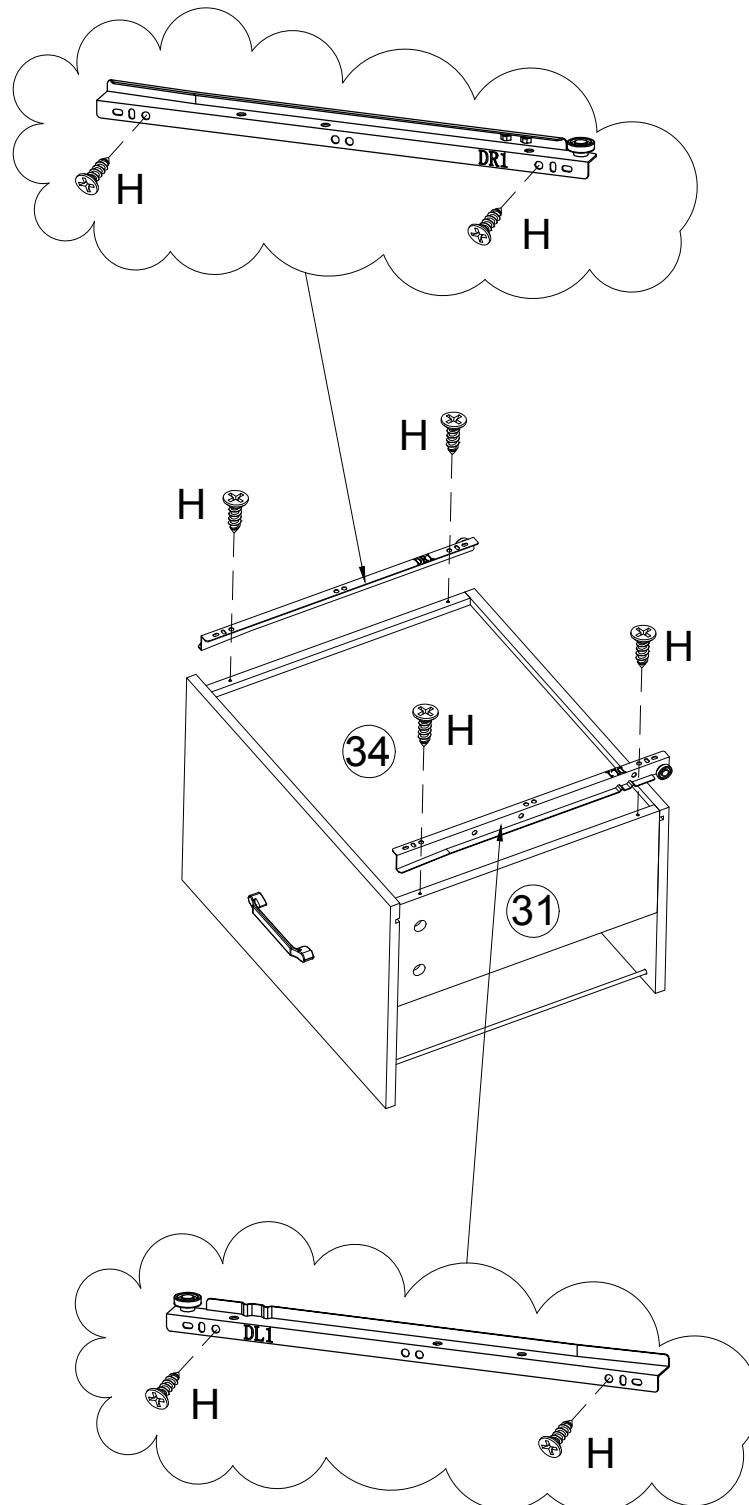


H	M3.5*12
	X4


ASSEMBLY INSTRUCTION


STEP 8

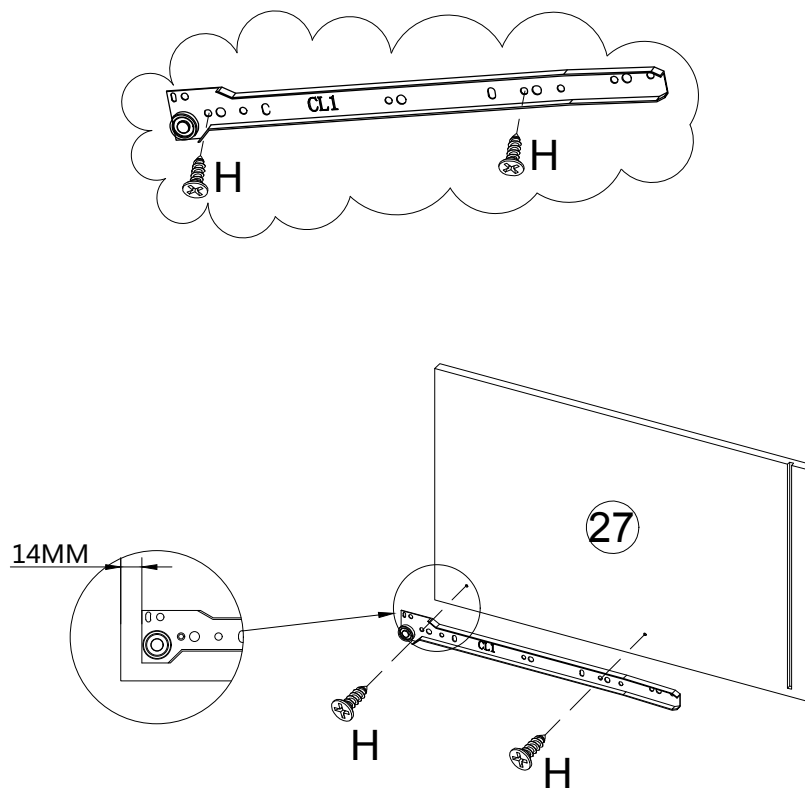

H	M3.5*12
	X2


STEP 9

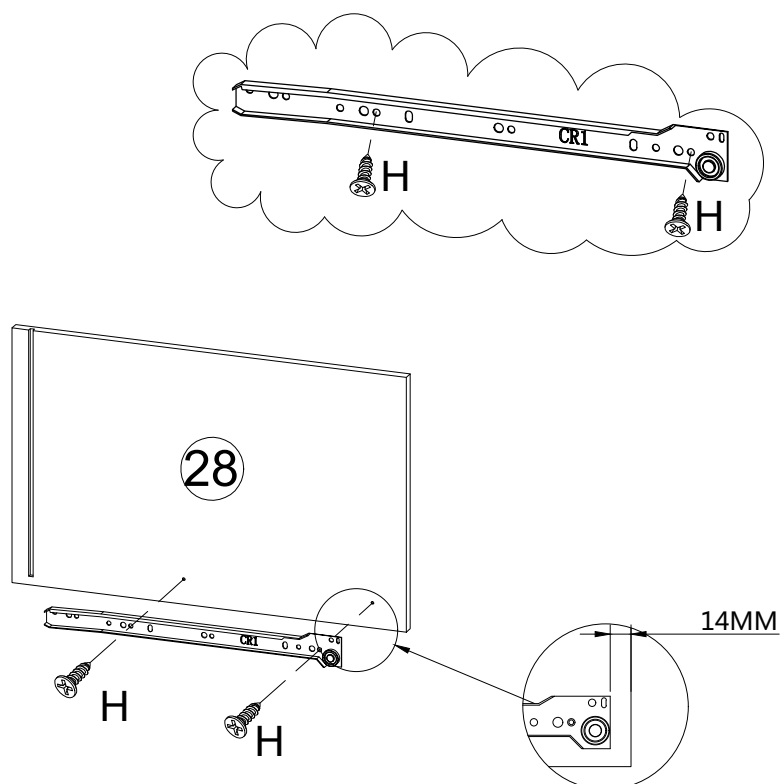


H	M3.5*12
	X2


ASSEMBLY INSTRUCTION



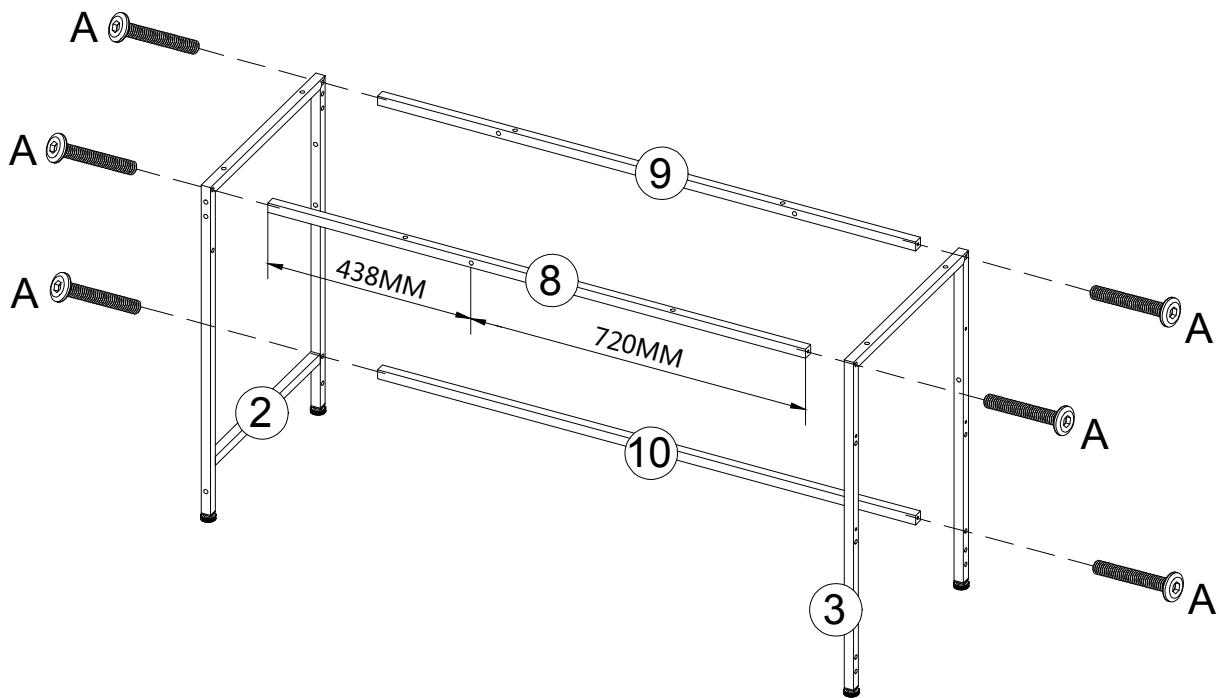

STEP 10

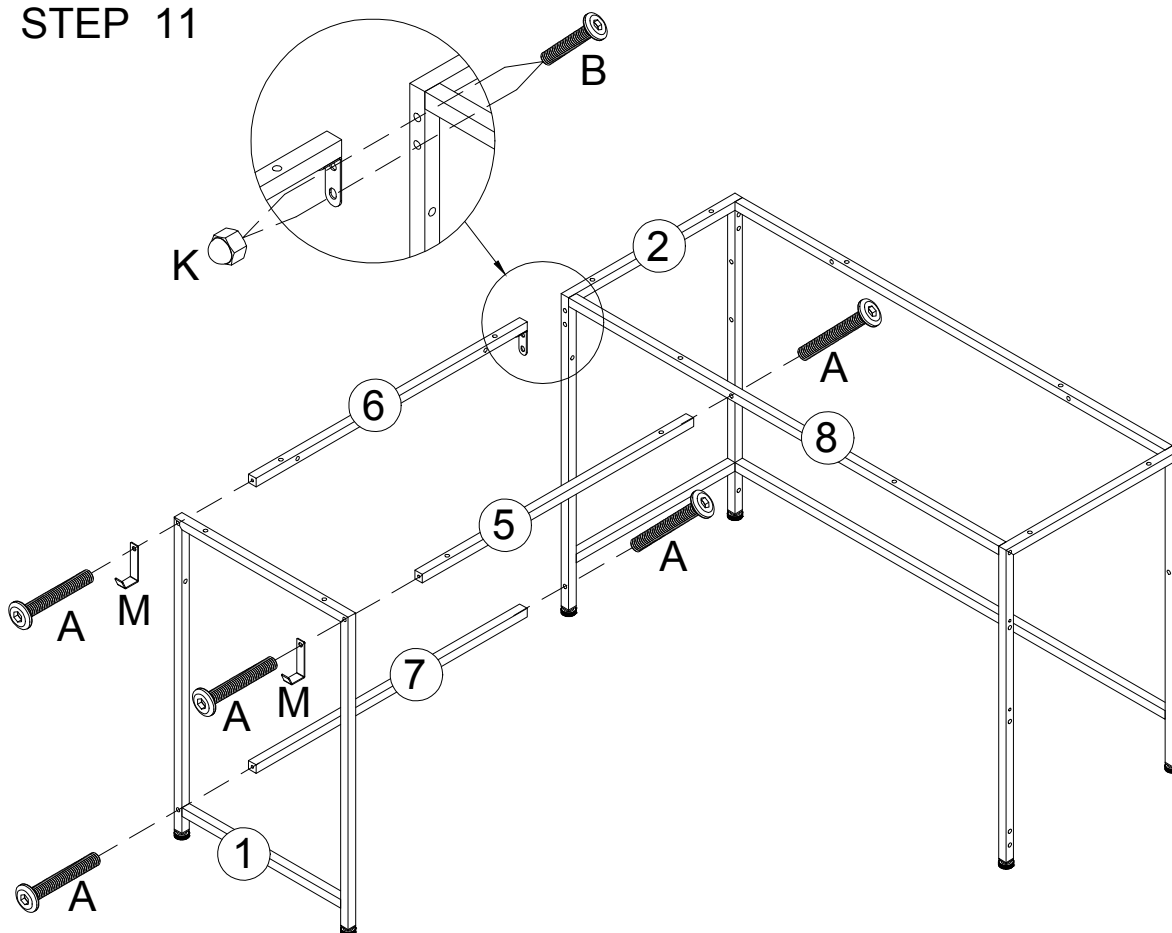

A	M6*40
	X6


STEP 11




A	M6*40
	X5
B	M6*30
	X2
K	M6*12
	X2
M	
	X2


ASSEMBLY INSTRUCTION

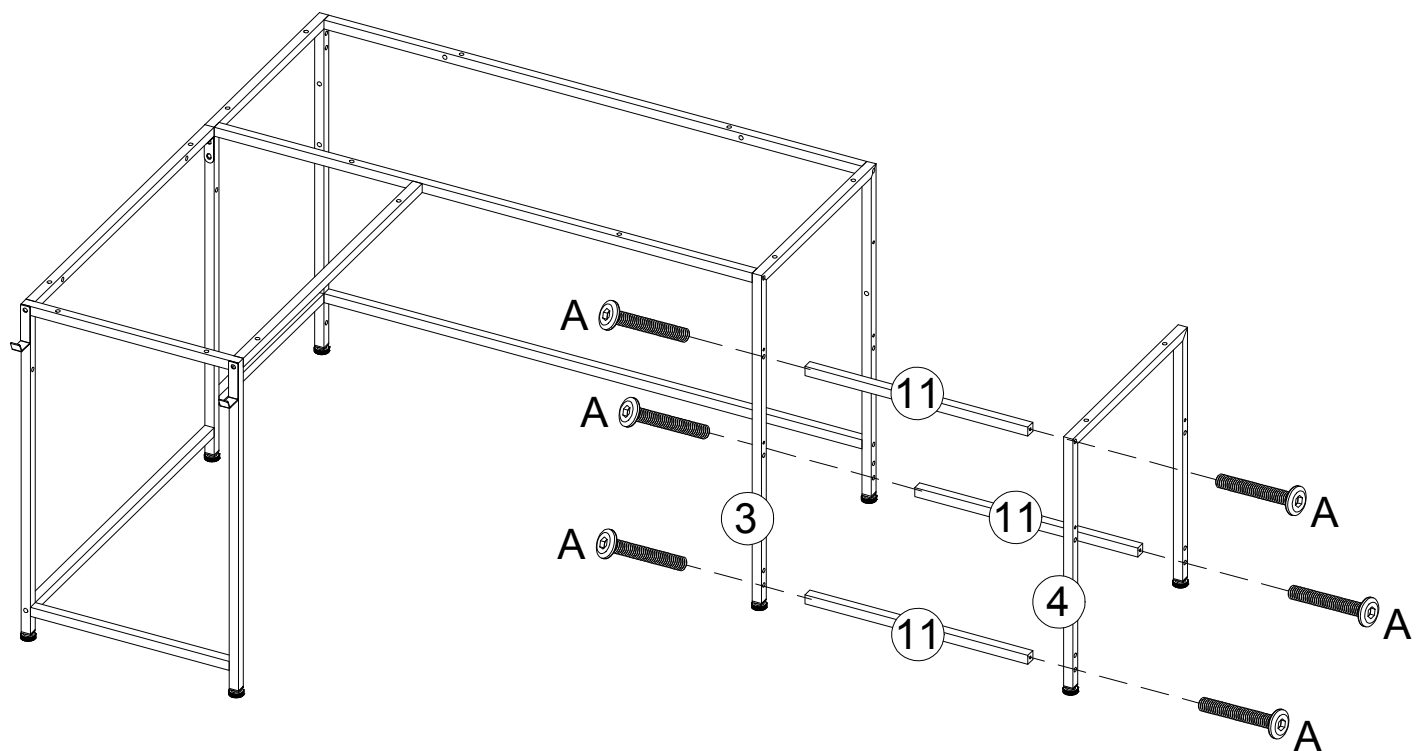

STEP 12



A	M6*40
	X6

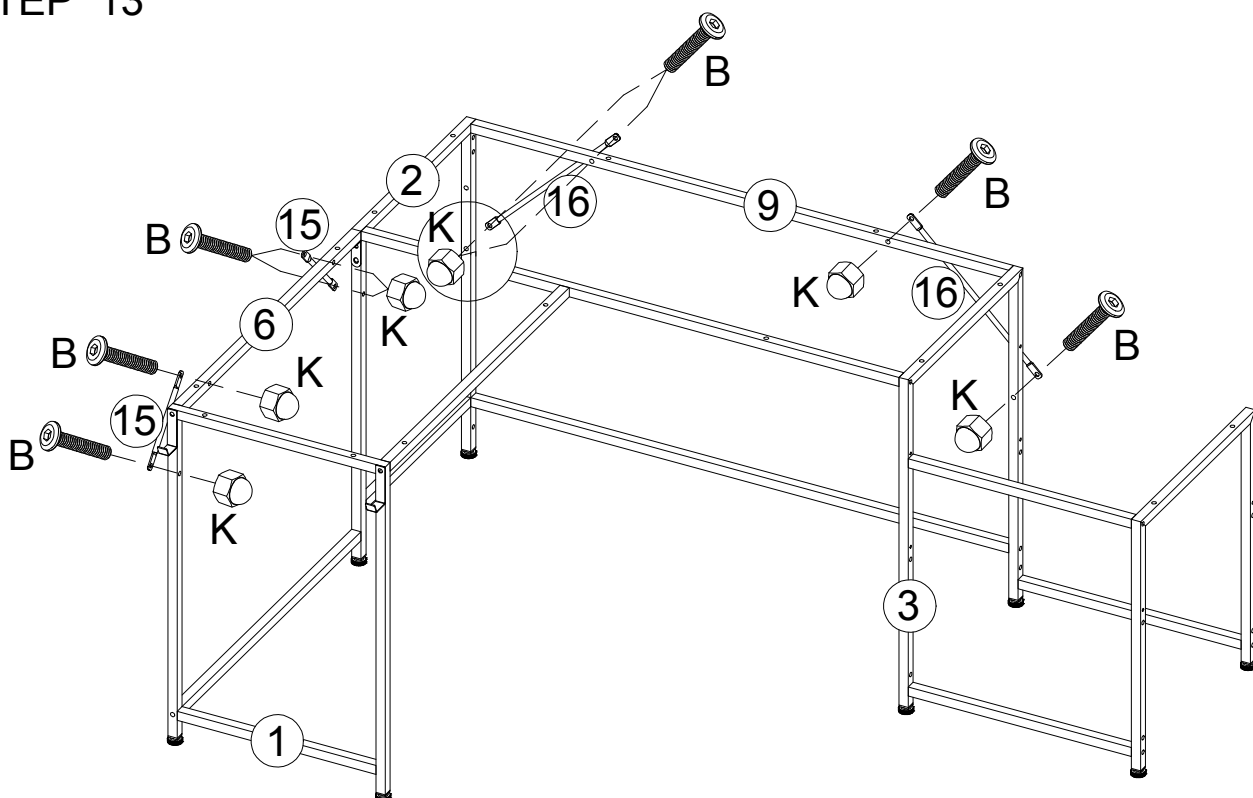
STEP 13



B	M6*30	K	M6*12
	X8		X8


ASSEMBLY INSTRUCTION

STEP 14

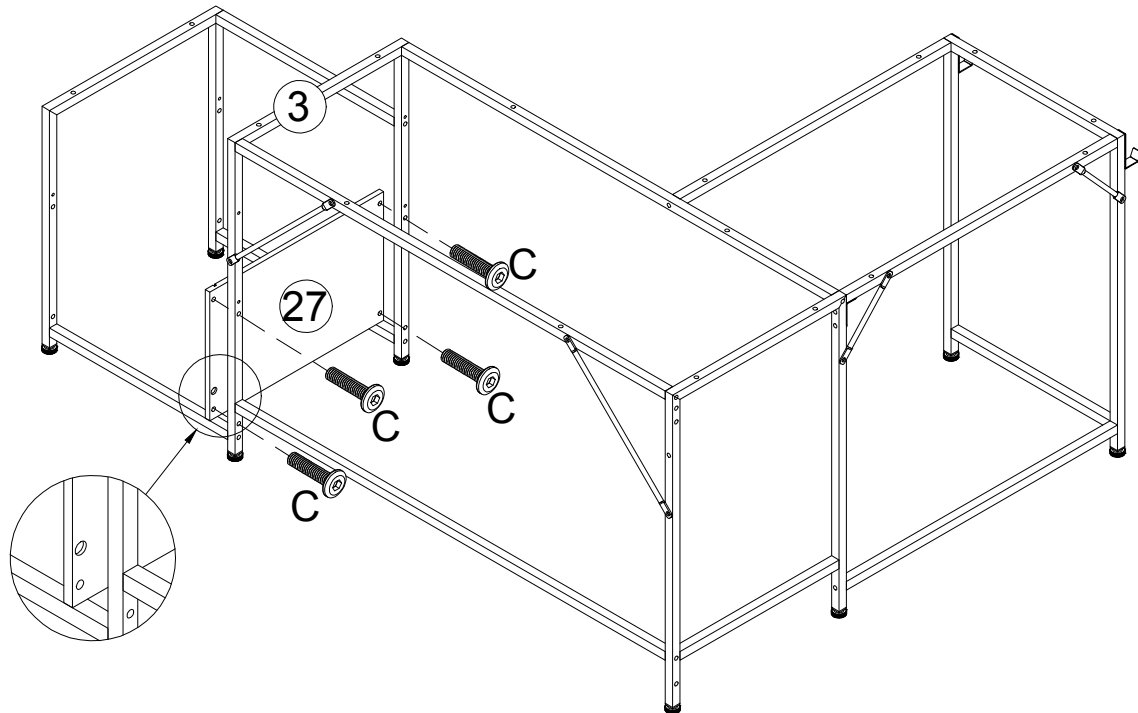

C M6*25
X4


STEP 15

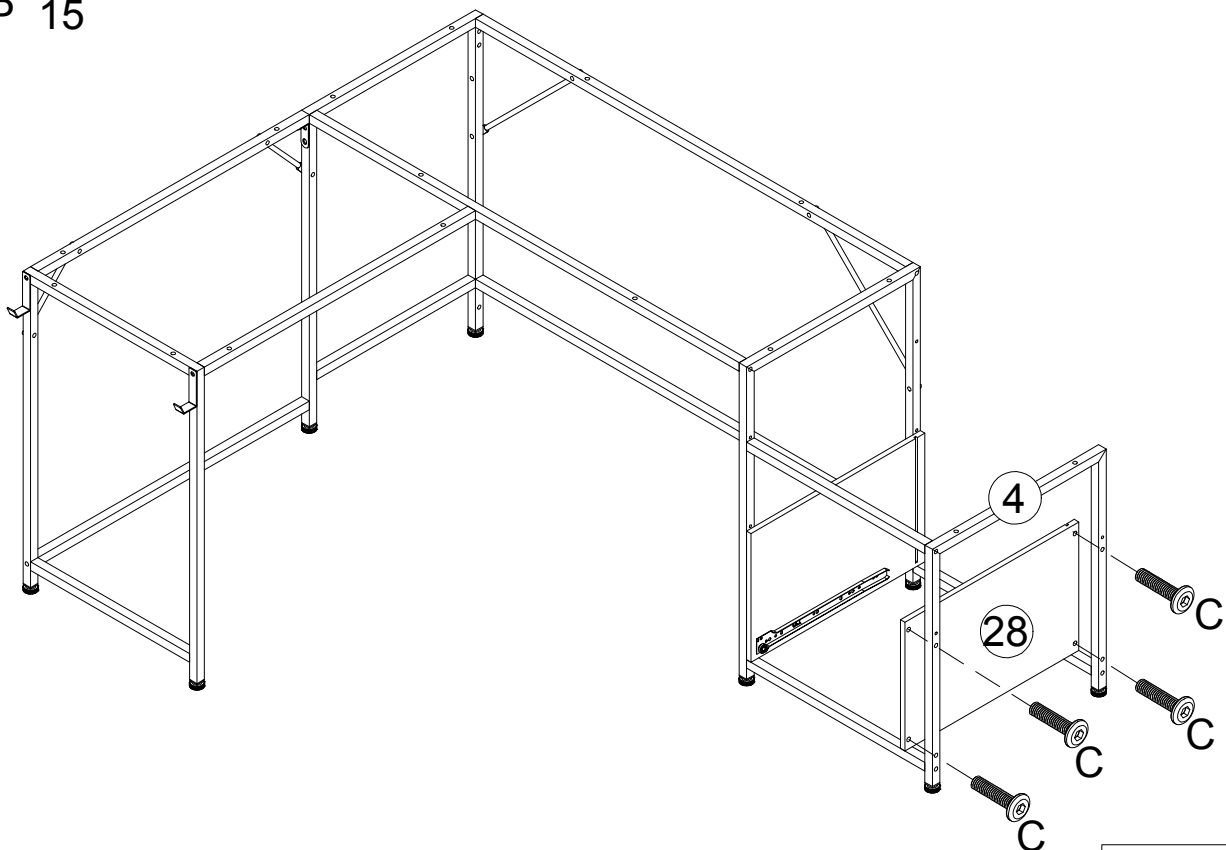


C M6*25
X4


ASSEMBLY INSTRUCTION

STEP 16

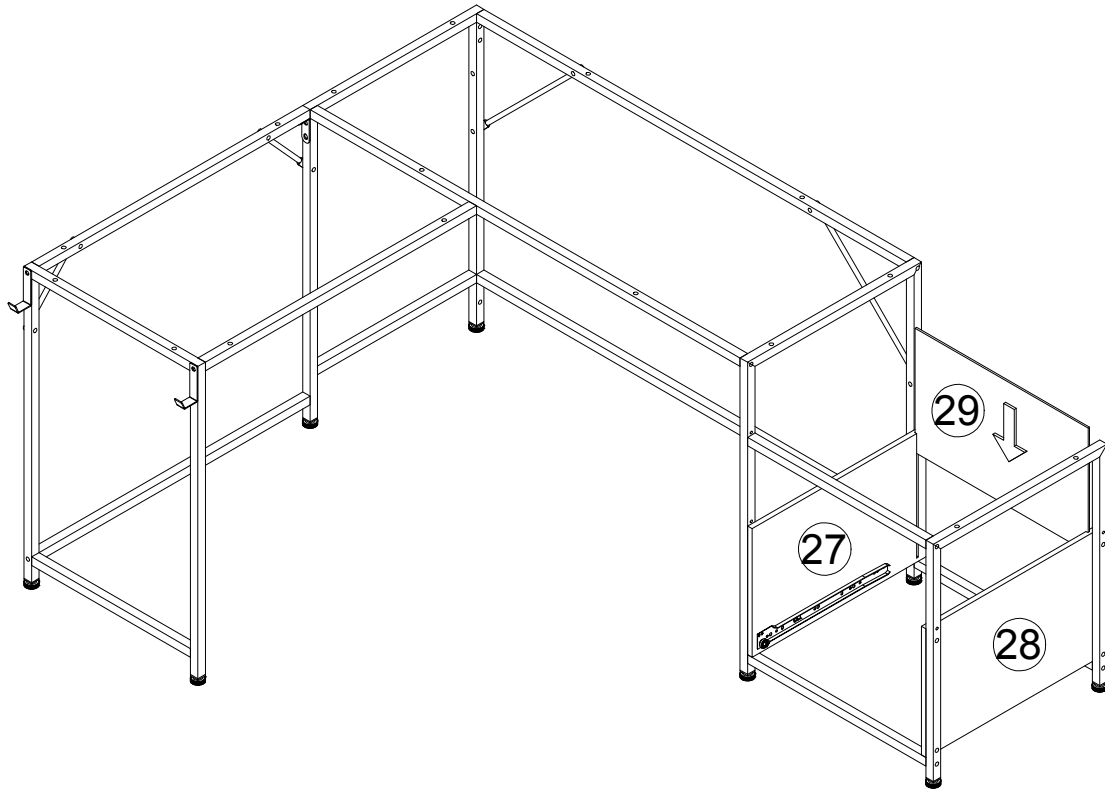


STEP 17

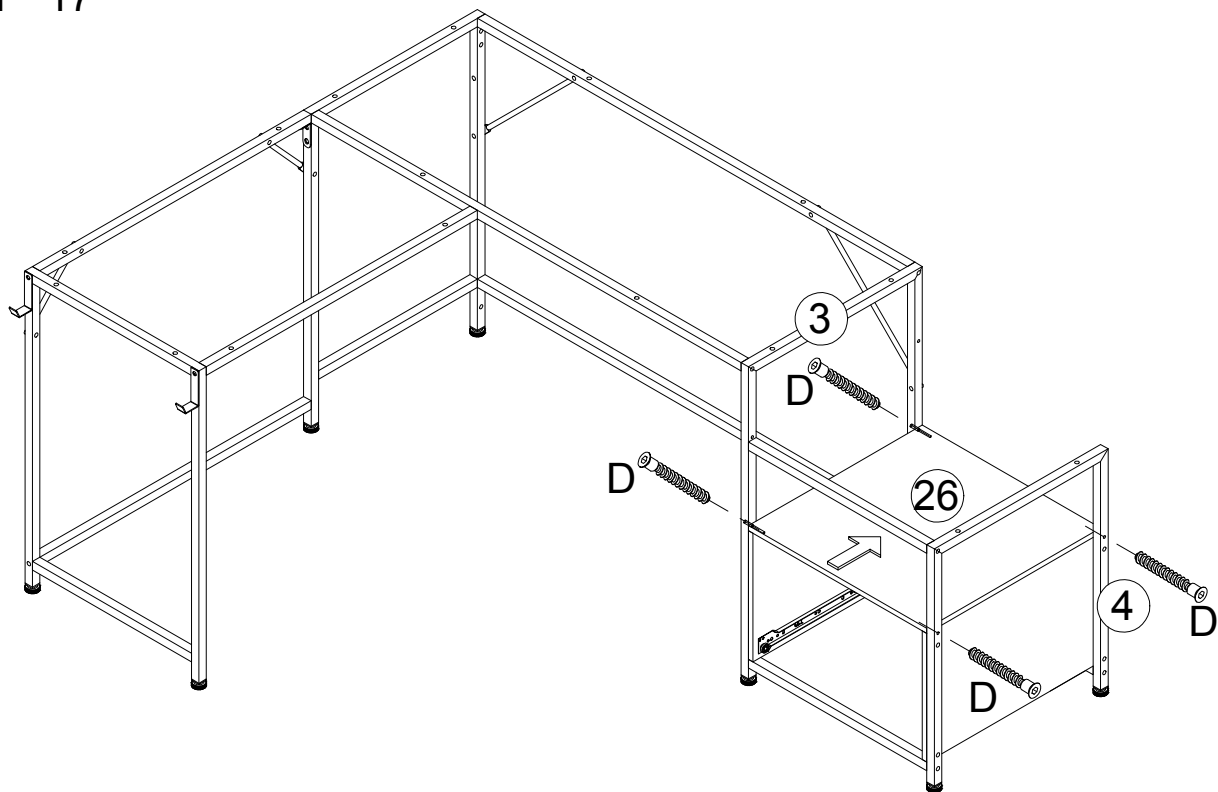



D	M5*40
	X4

ASSEMBLY INSTRUCTION

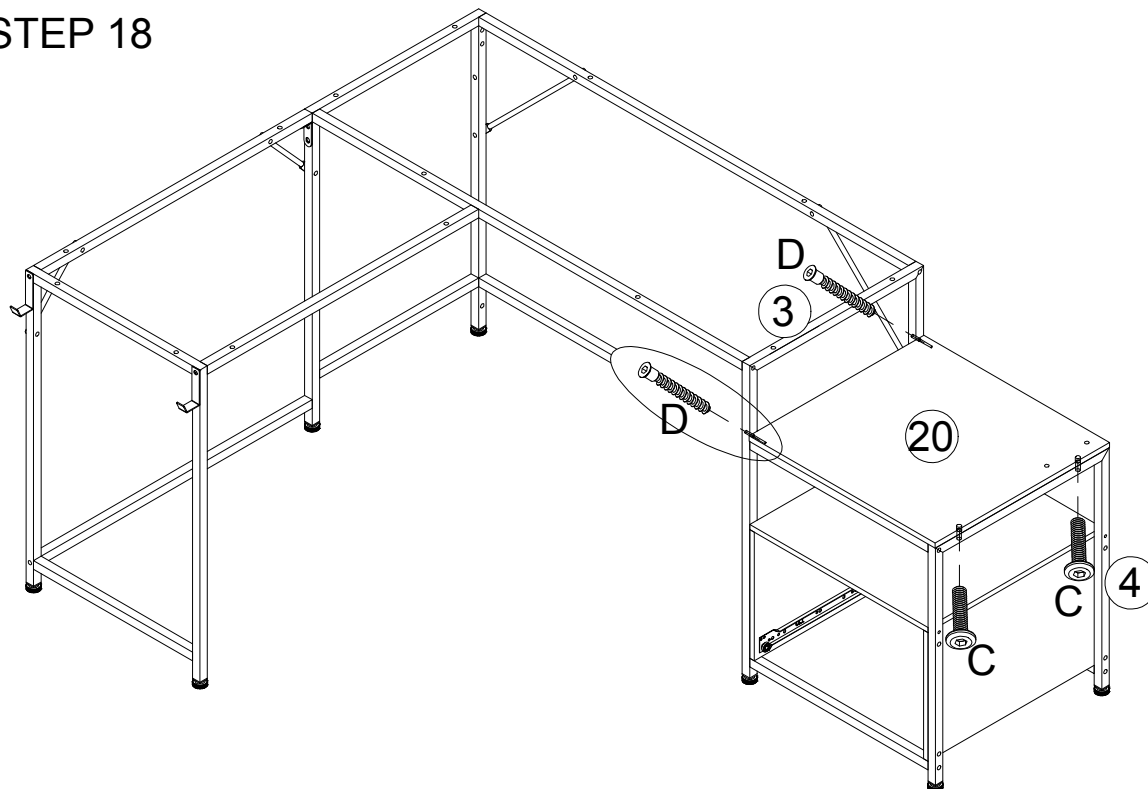
STEP 18





C	M6*25
	X2

D	M5*40
	X2

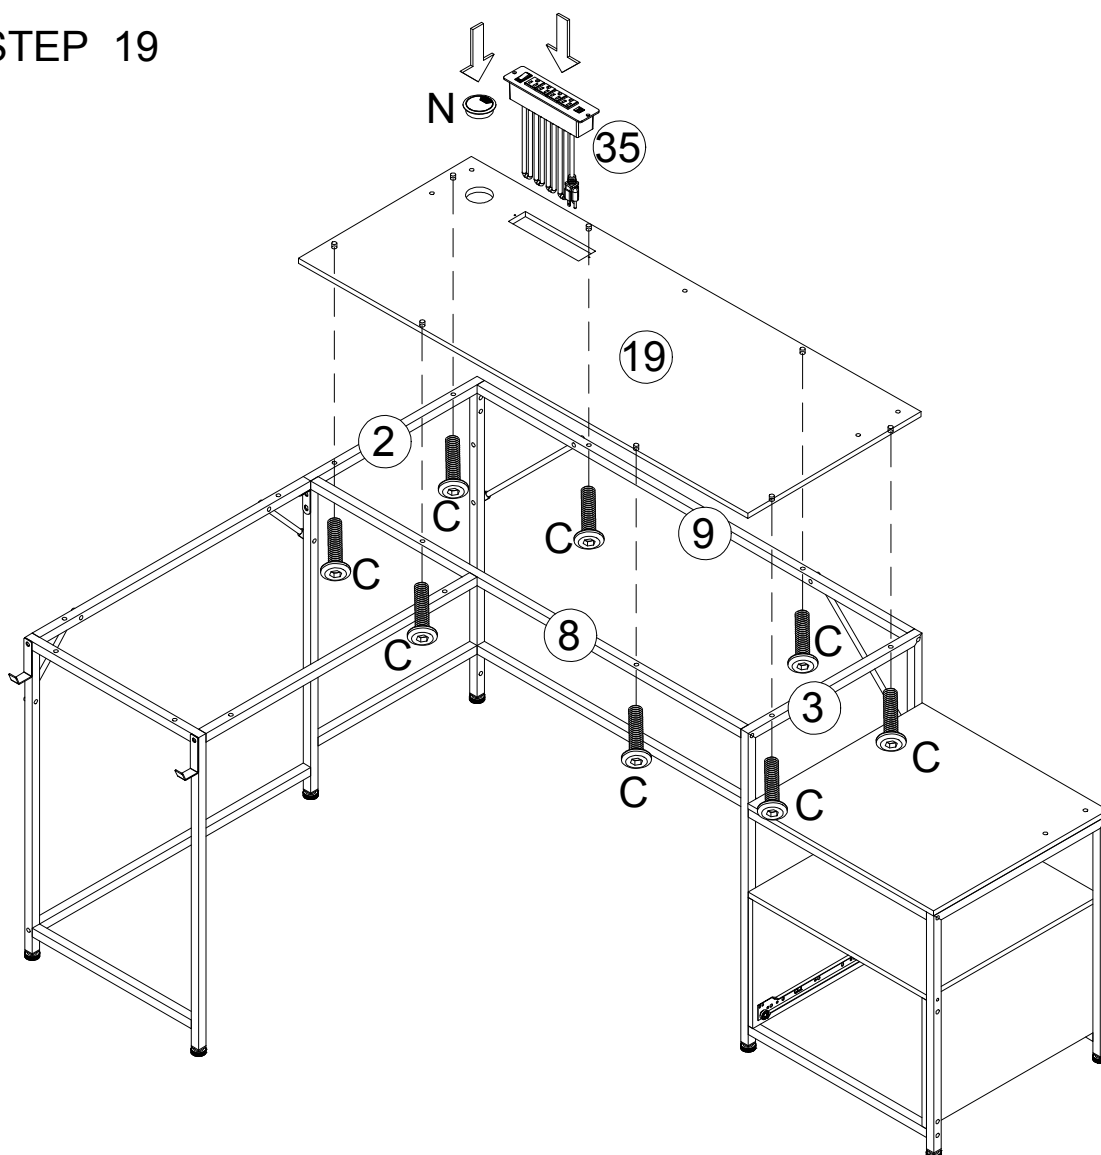STEP 19






C	M6*25
	X8

N	Ø53
	X1

ASSEMBLY INSTRUCTION

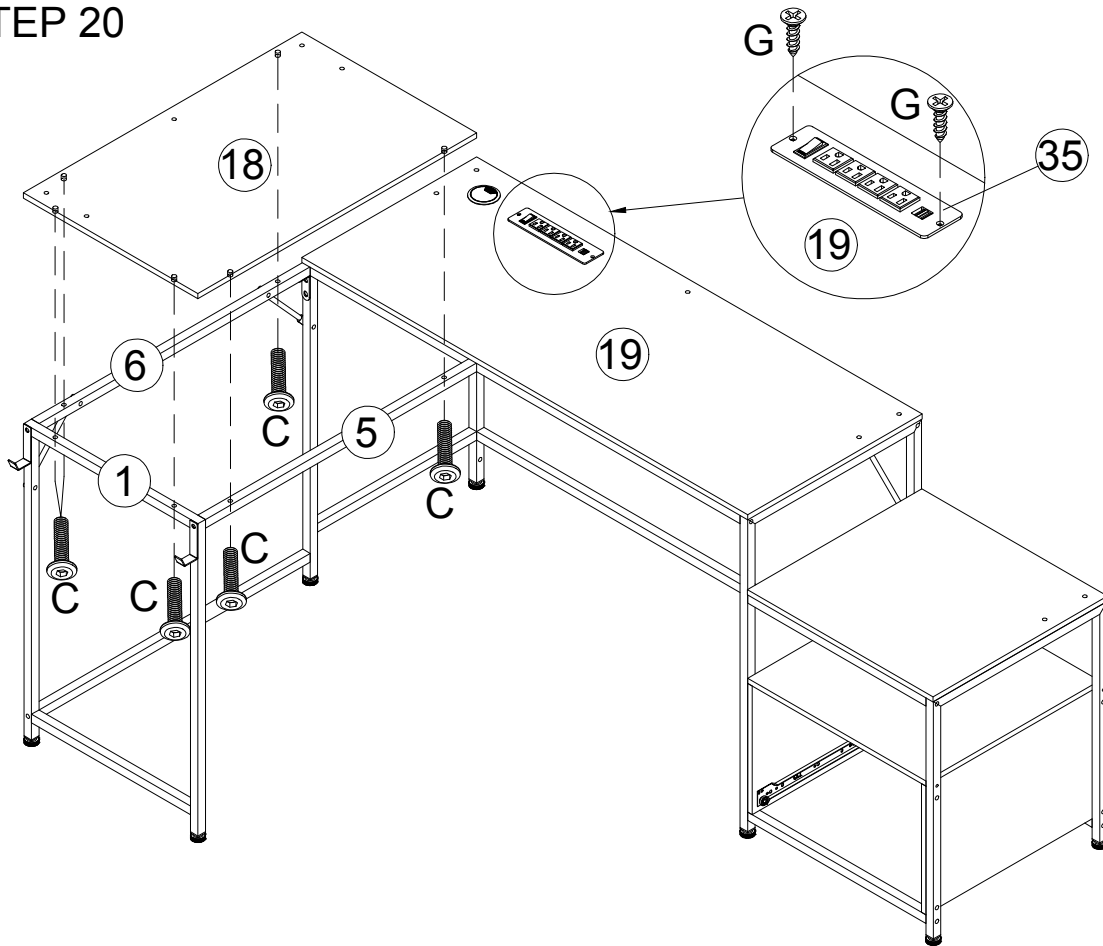
STEP 20



C	M6*25
	X6
G	M3.5*14
	X2




STEP 21

Note that when the drawer is installed, it is inclined upward and the bottom wheel of the drawer is stuck in the CR or CL rail grooves.


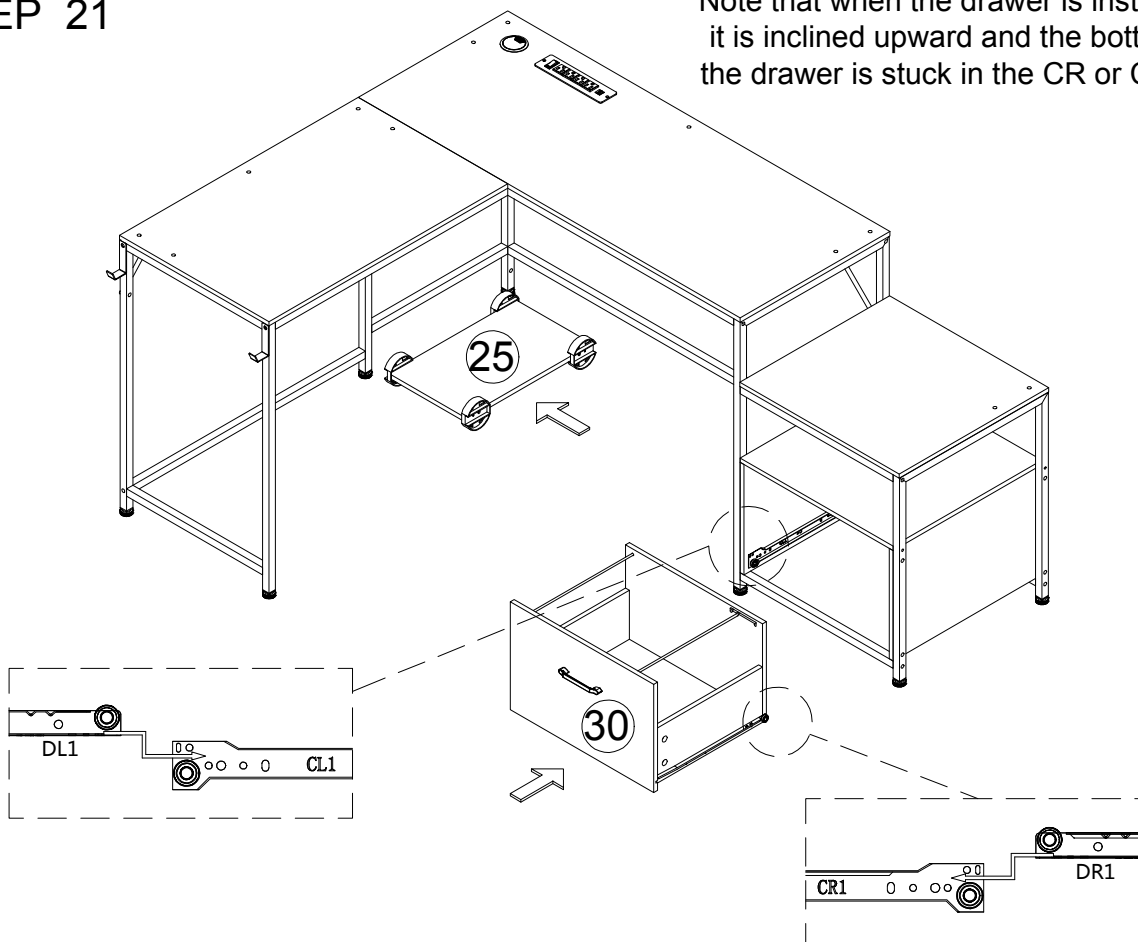


ASSEMBLY INSTRUCTION

STEP 22

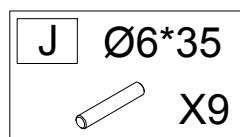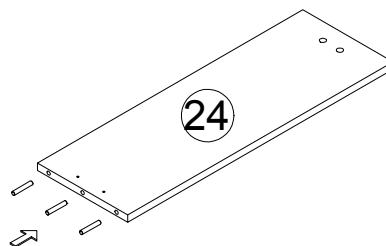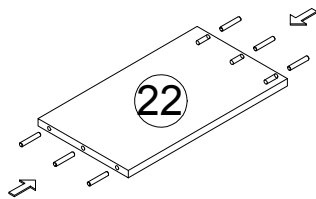

STEP 23

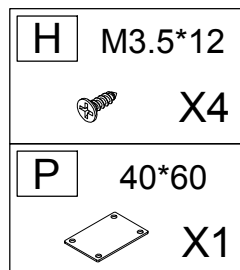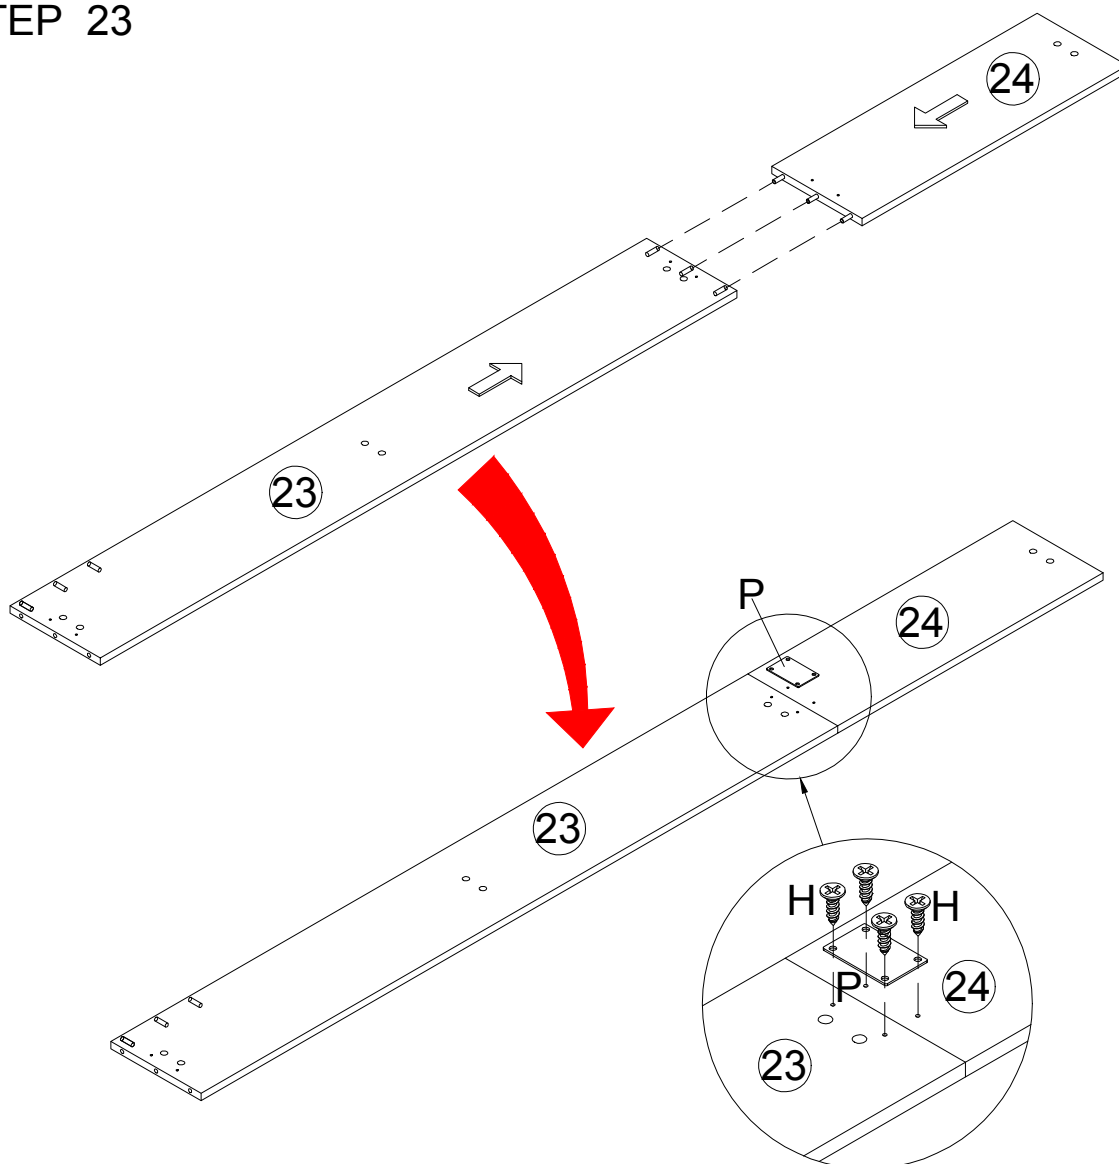


ASSEMBLY INSTRUCTION


STEP 24



Note the direction of Iron Piece No. 13

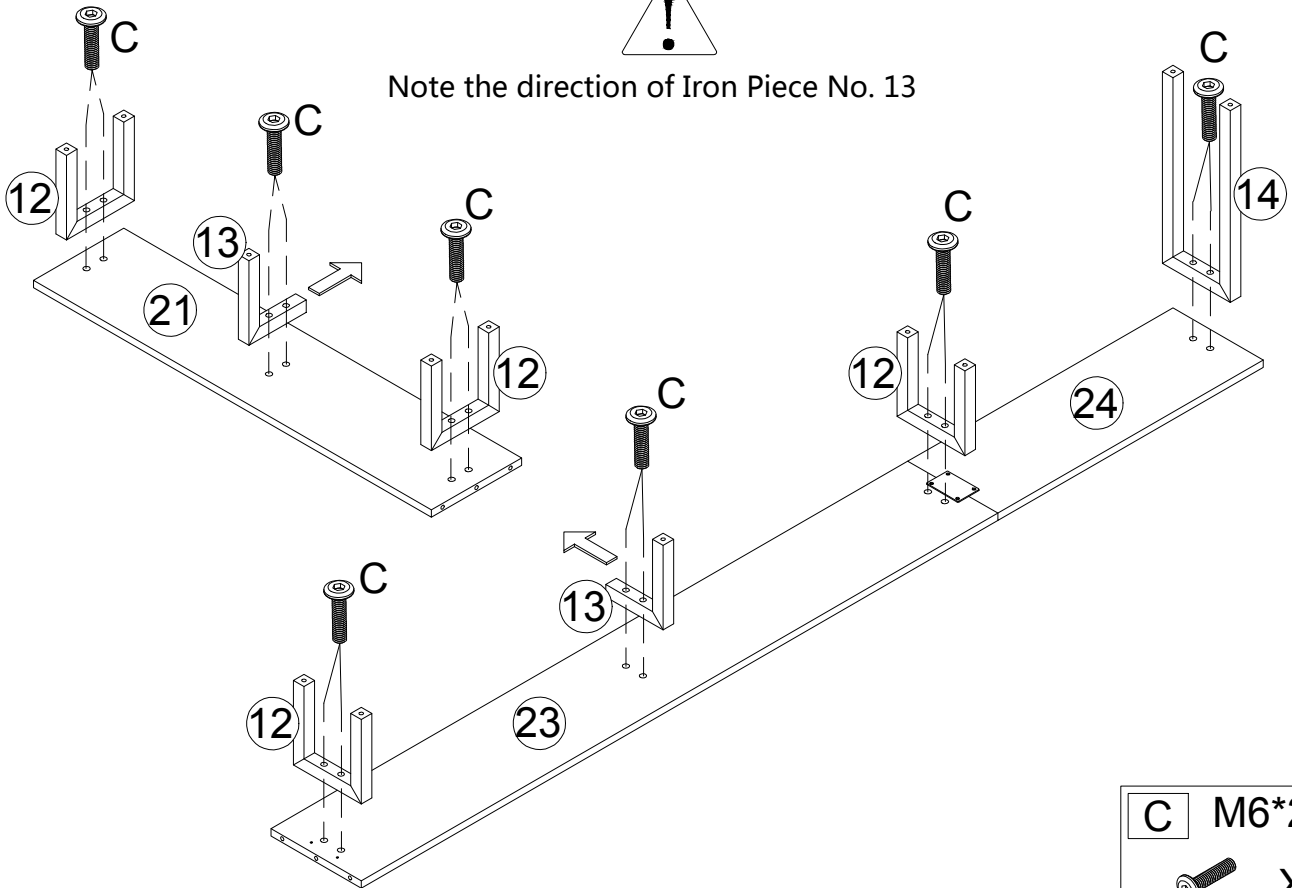


STEP 25

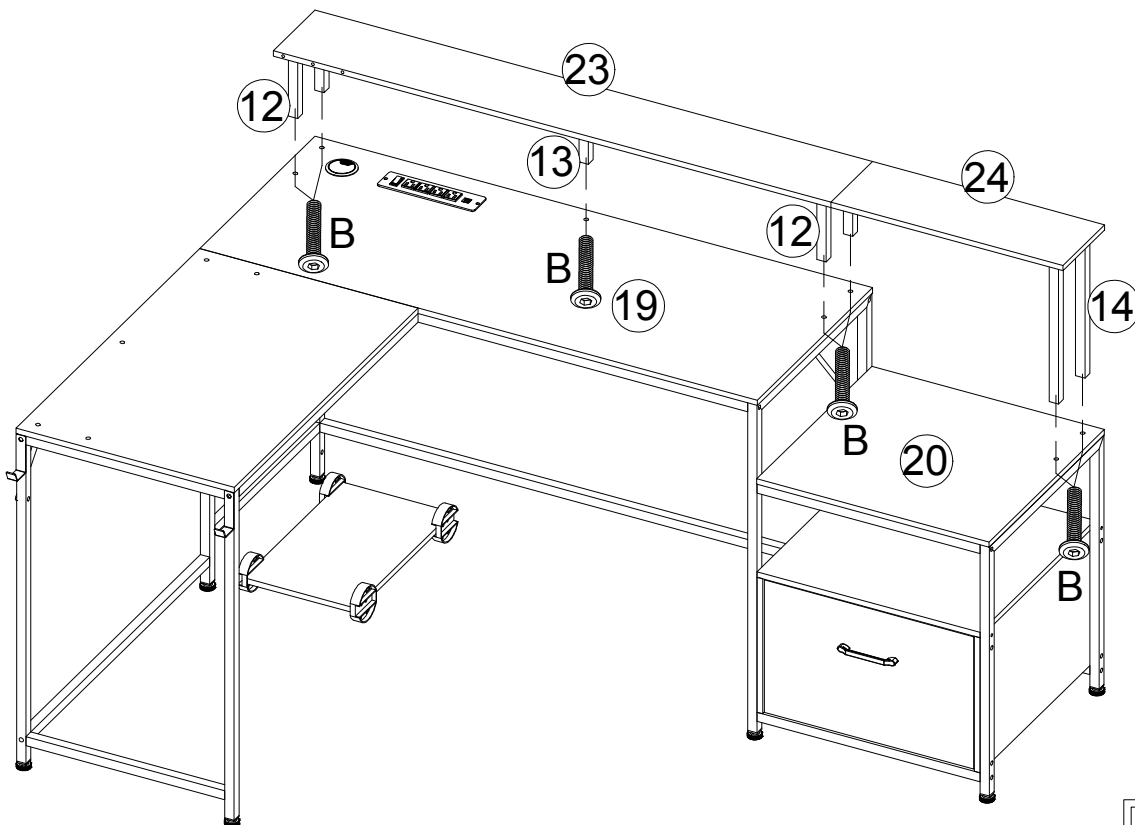


ASSEMBLY INSTRUCTION

STEP 26

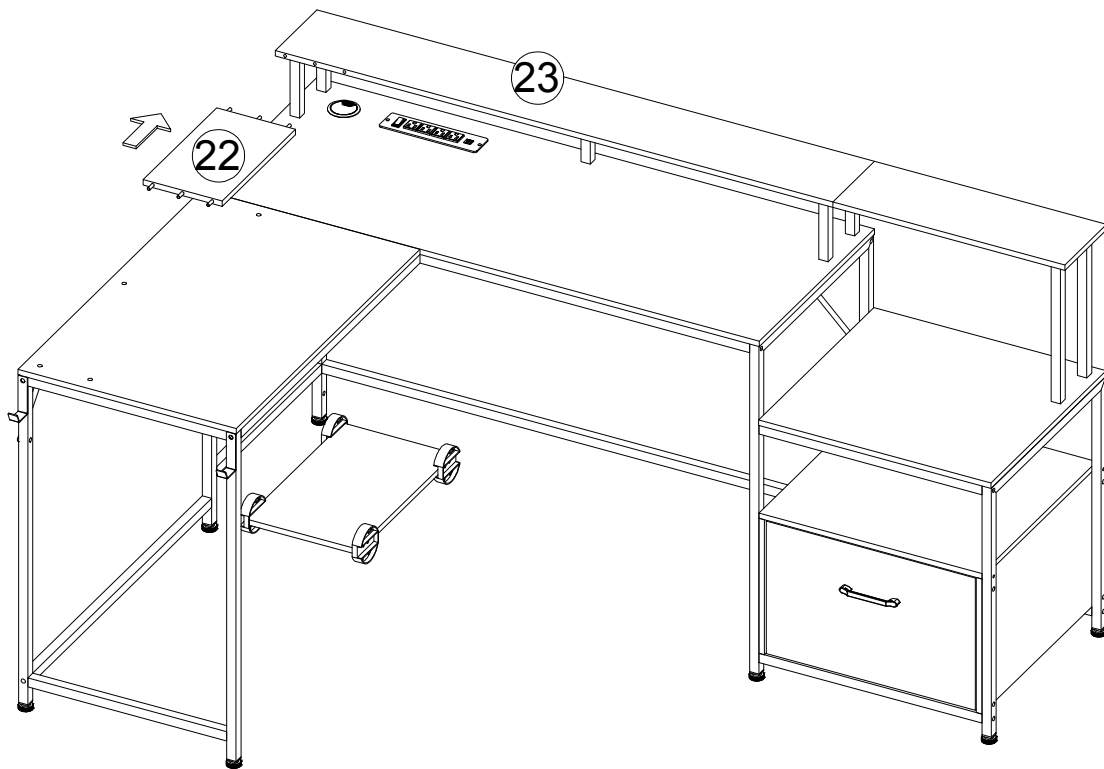


STEP 27

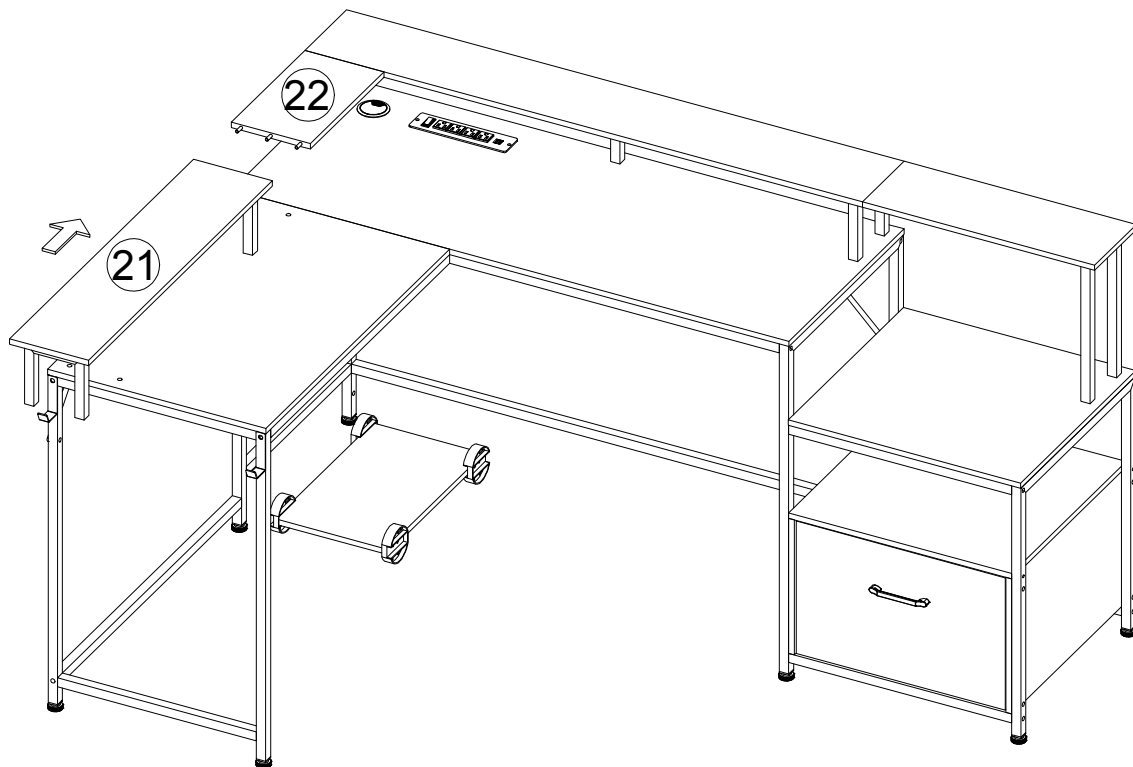


ASSEMBLY INSTRUCTION

STEP 28

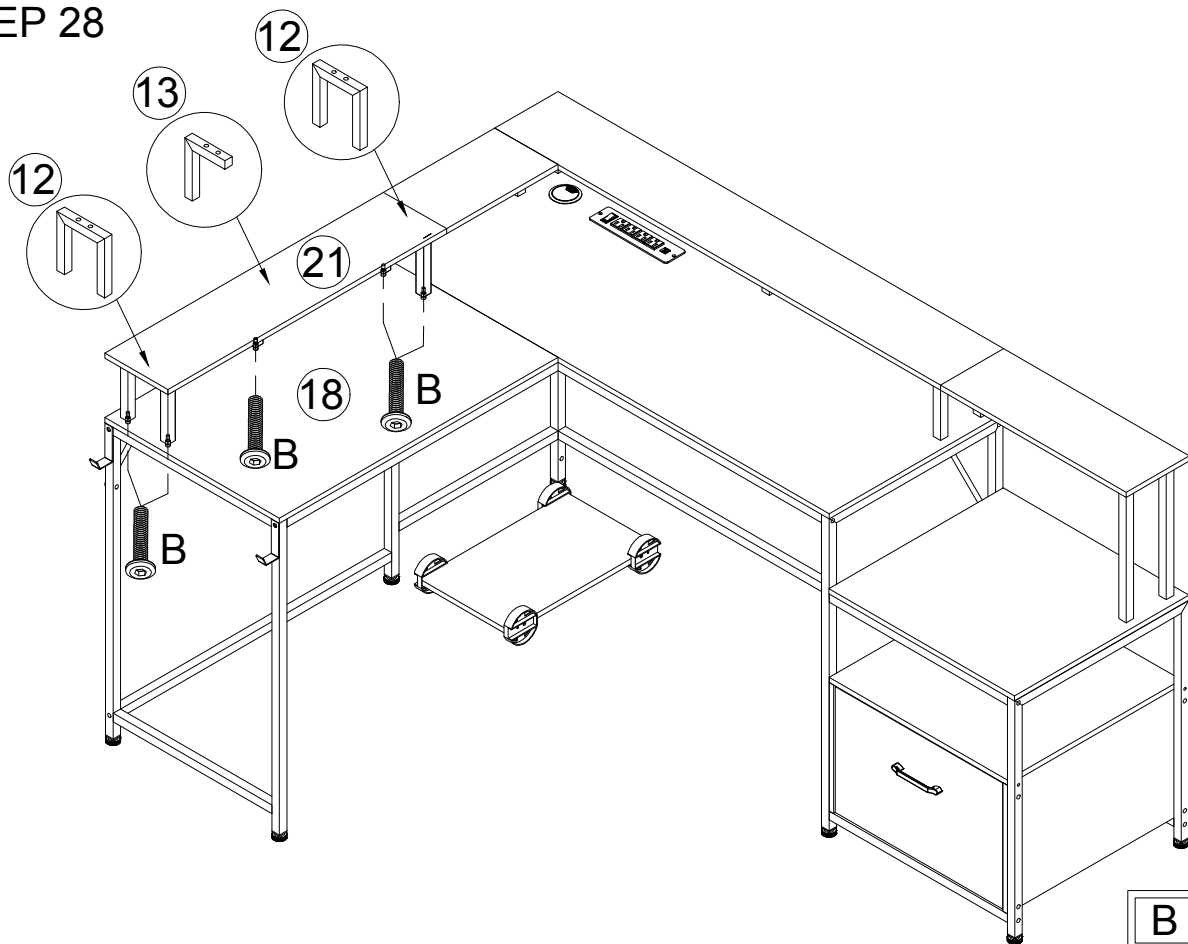


B M6*30
X5

STEP 29

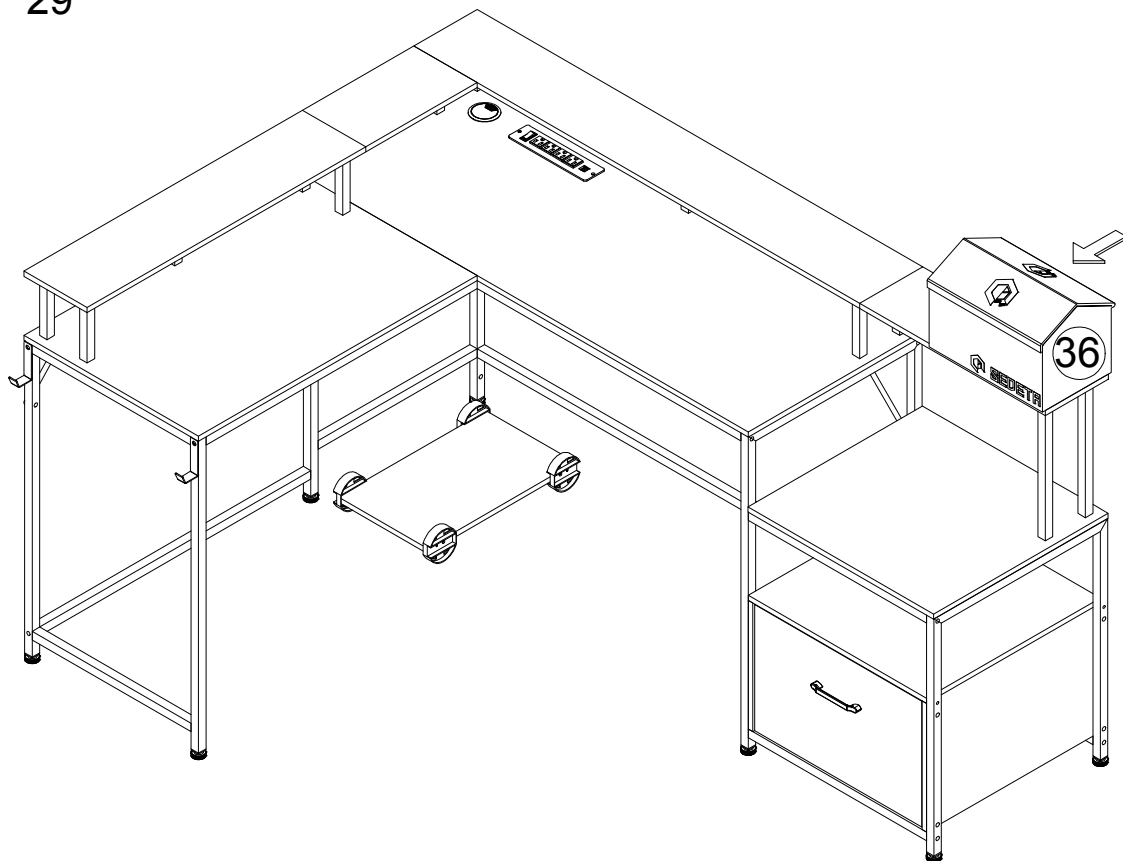



ASSEMBLY INSTRUCTION

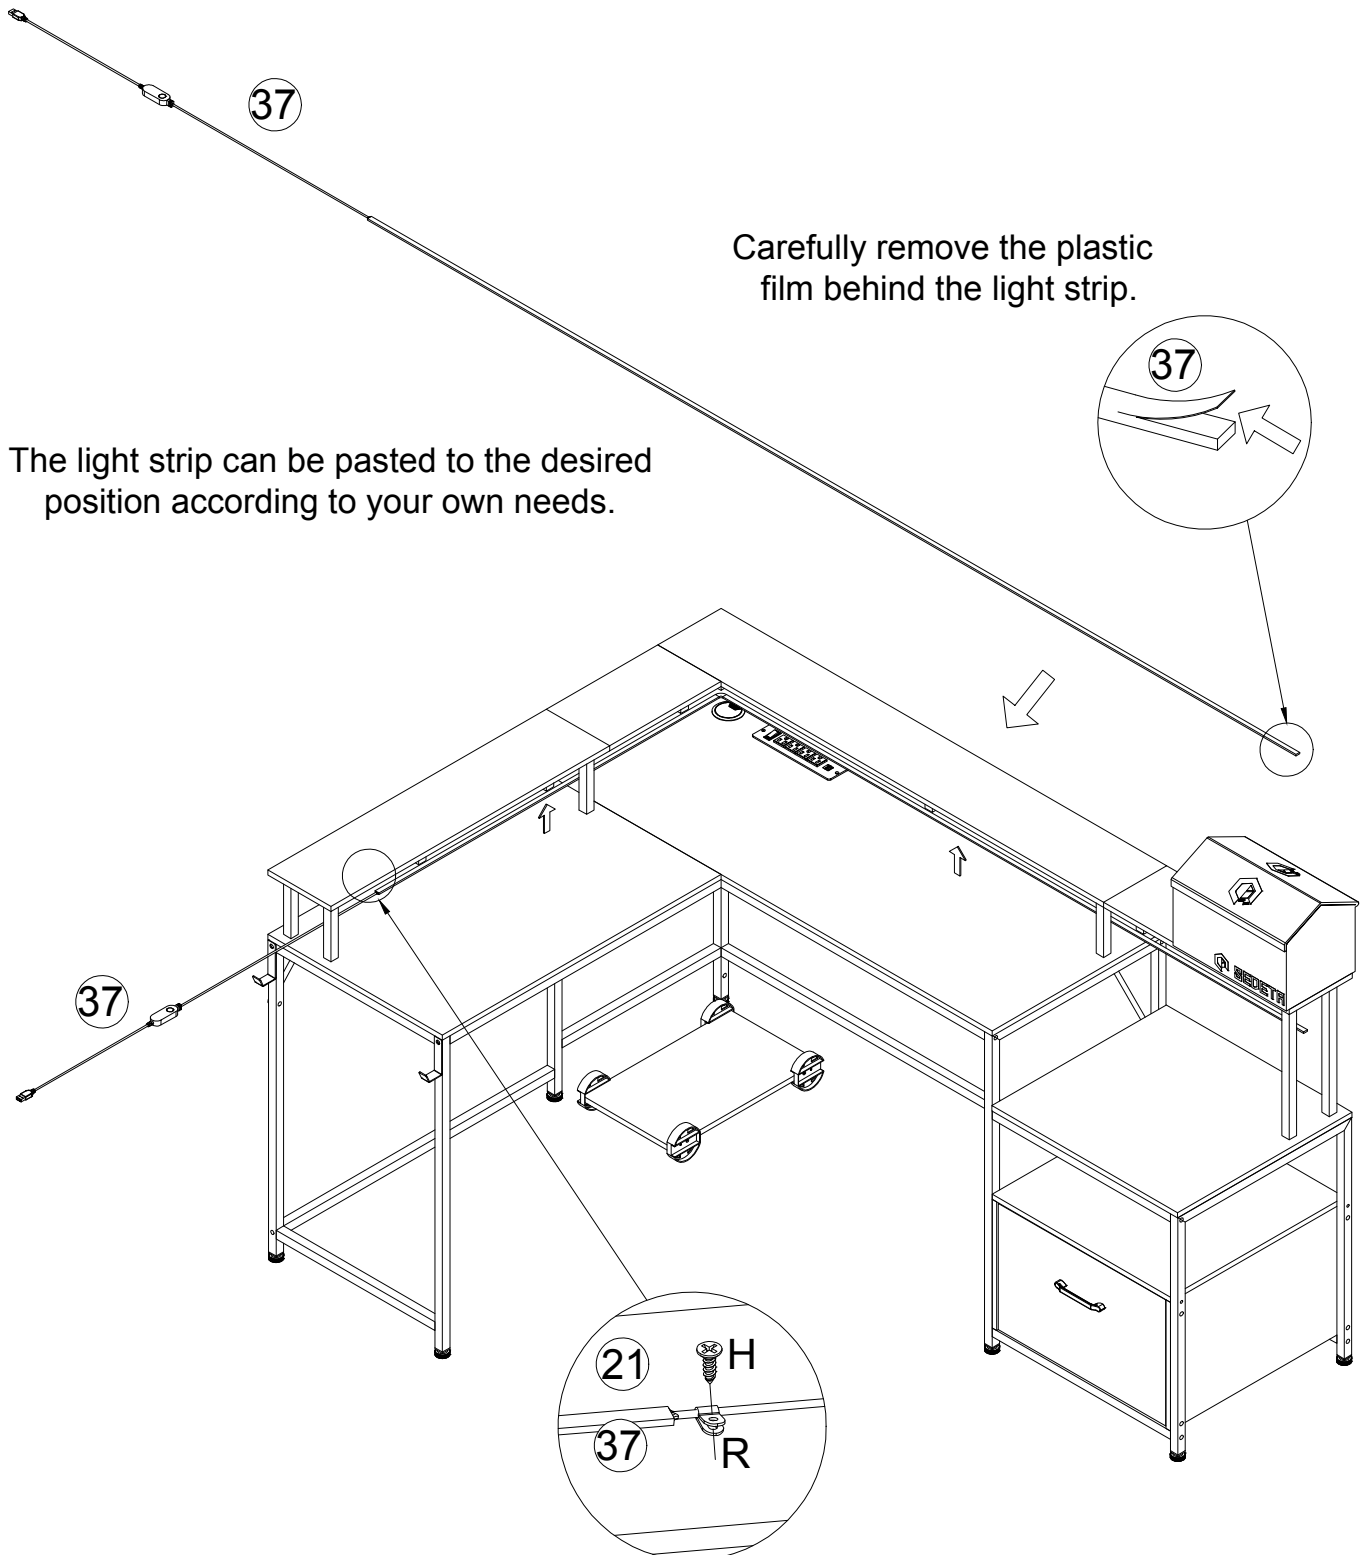STEP 30




Note: Install R accessories, can better prevent the 37 lamp belt from falling, you can choose to install or not install R accessories.


H	M3.5*12
	X1
R	
	X1

ASSEMBLY INSTRUCTION

STEP 31

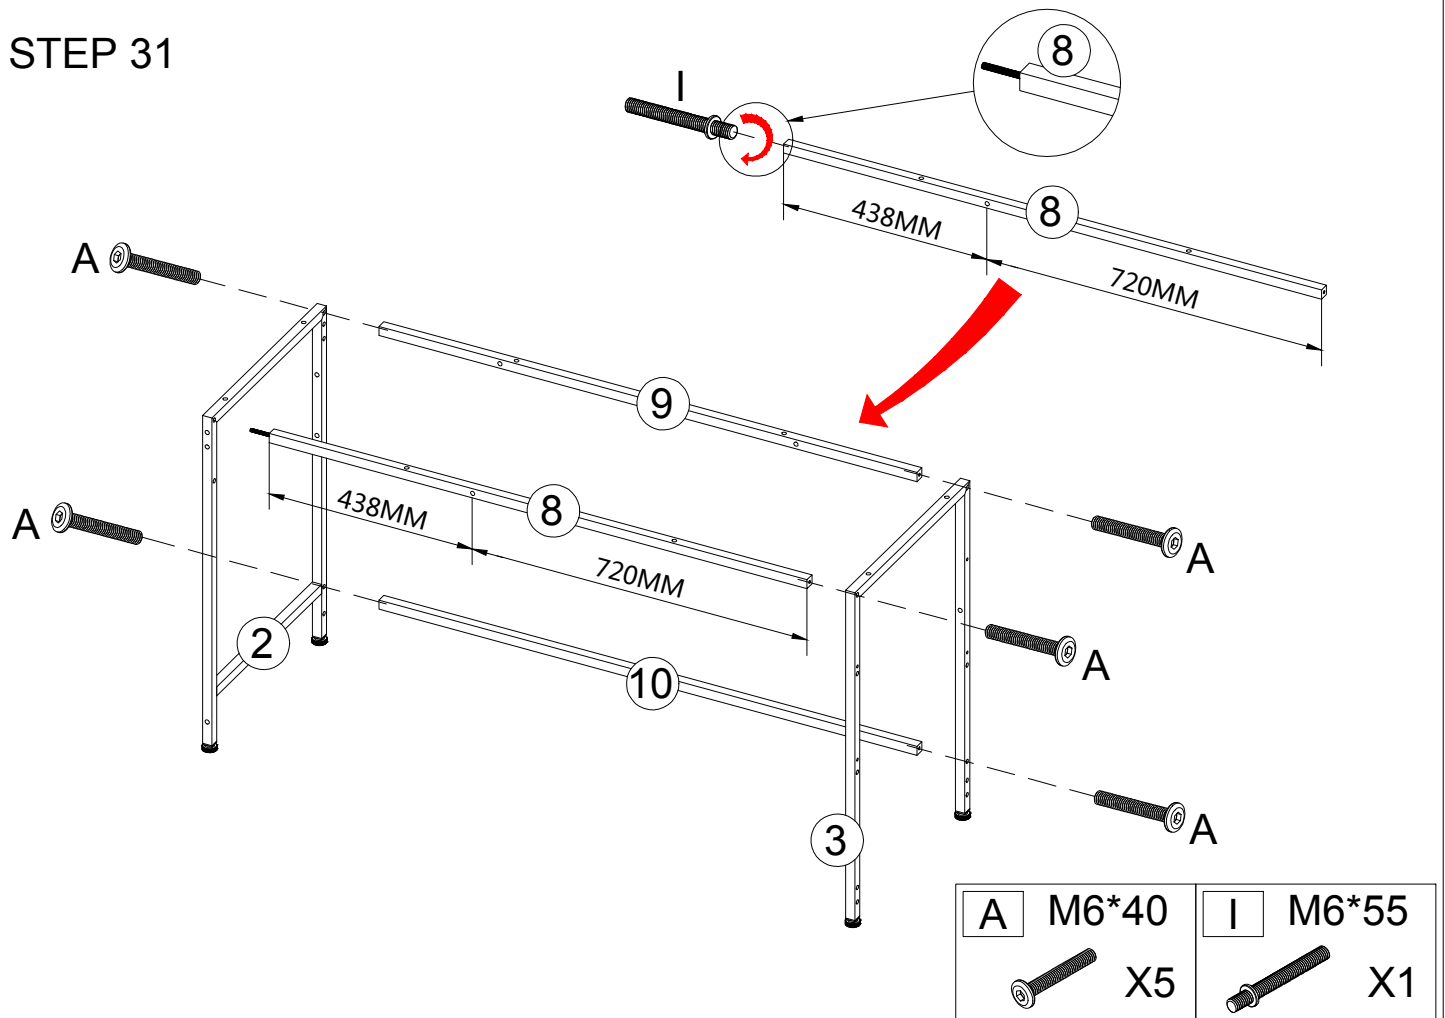

STEP 32

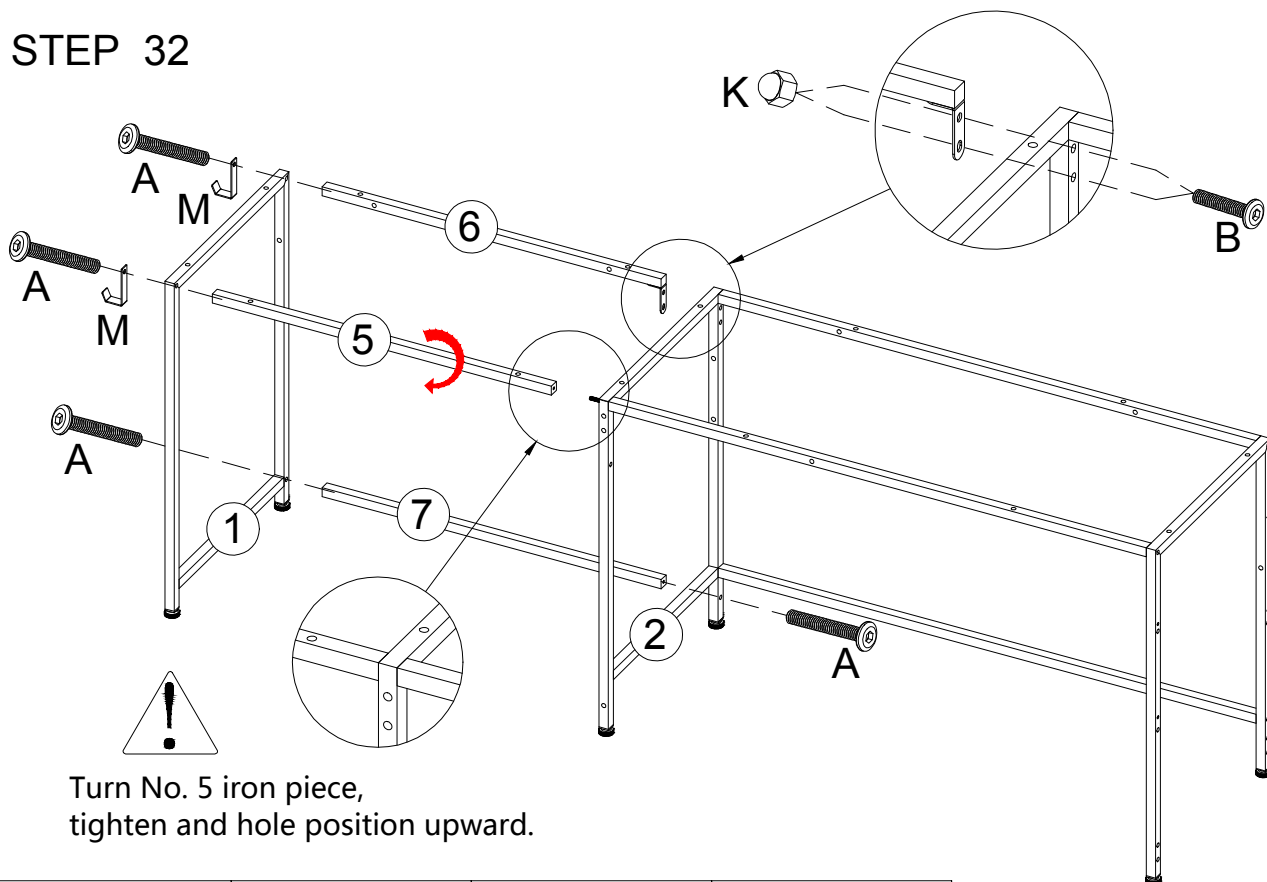


Turn No. 5 iron piece,
tighten and hole position upward.


A	M6*40	B	M6*30	K	M6*12	M	
	X4		X2		X2		X2

ASSEMBLY INSTRUCTION

STEP 33


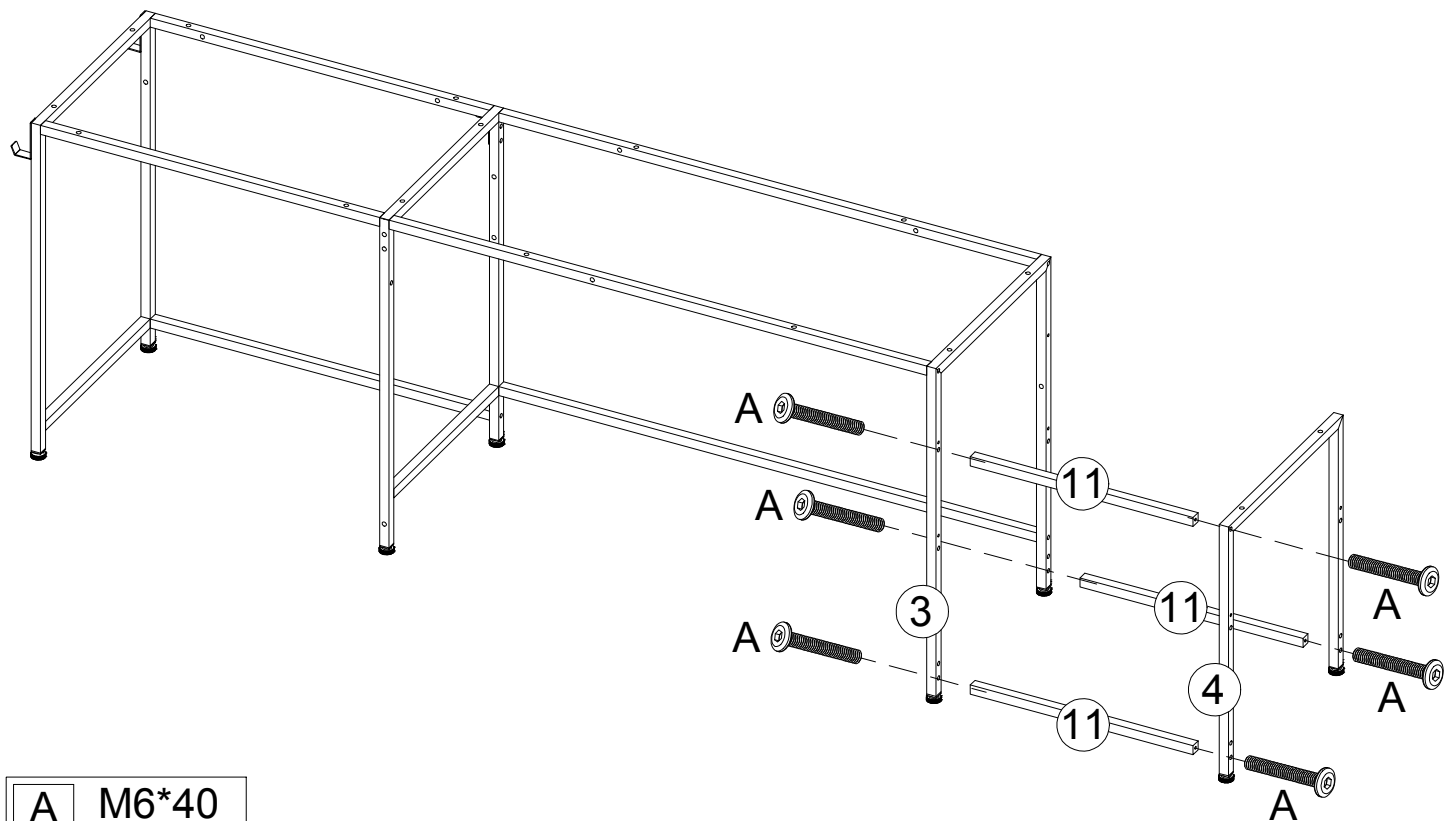


STEP 34


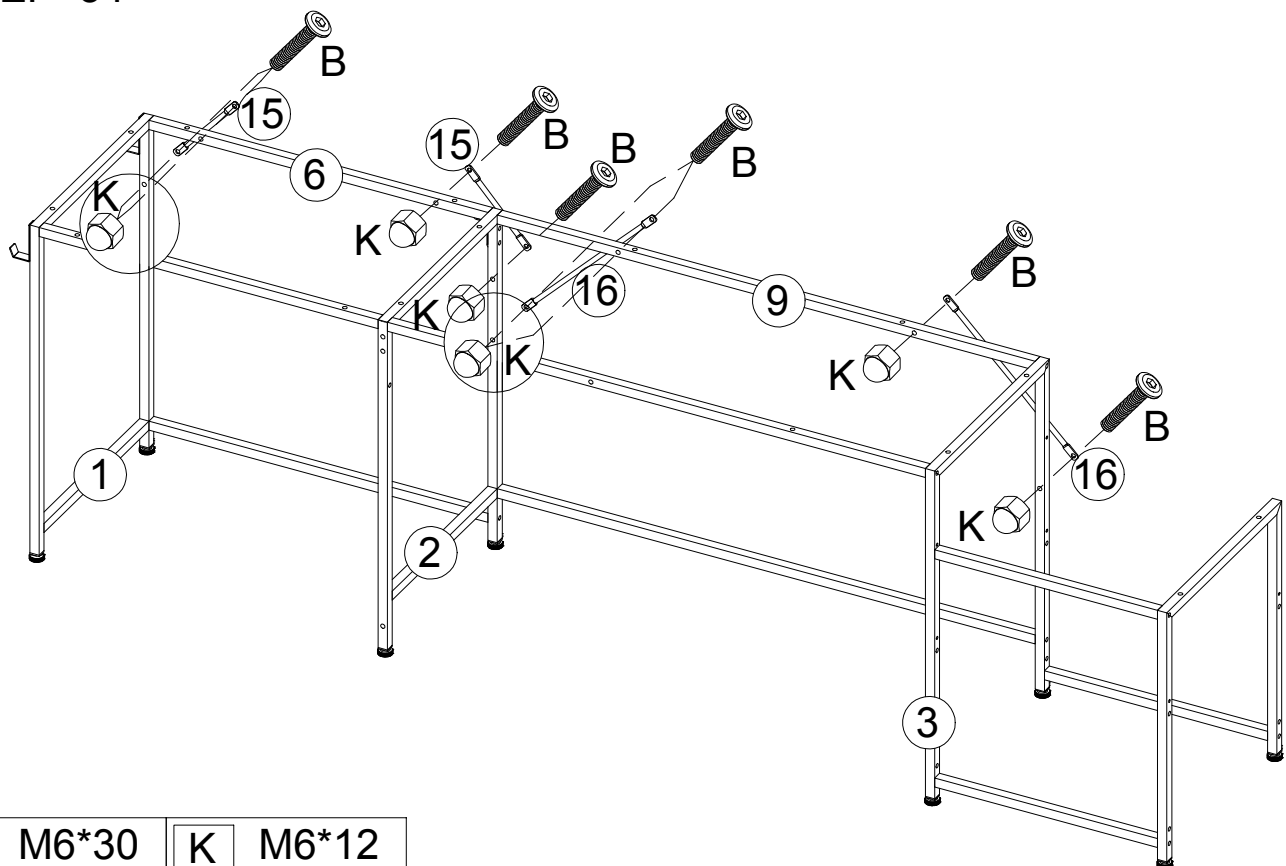


ASSEMBLY INSTRUCTION

STEP 35

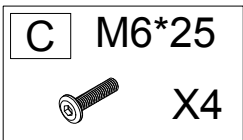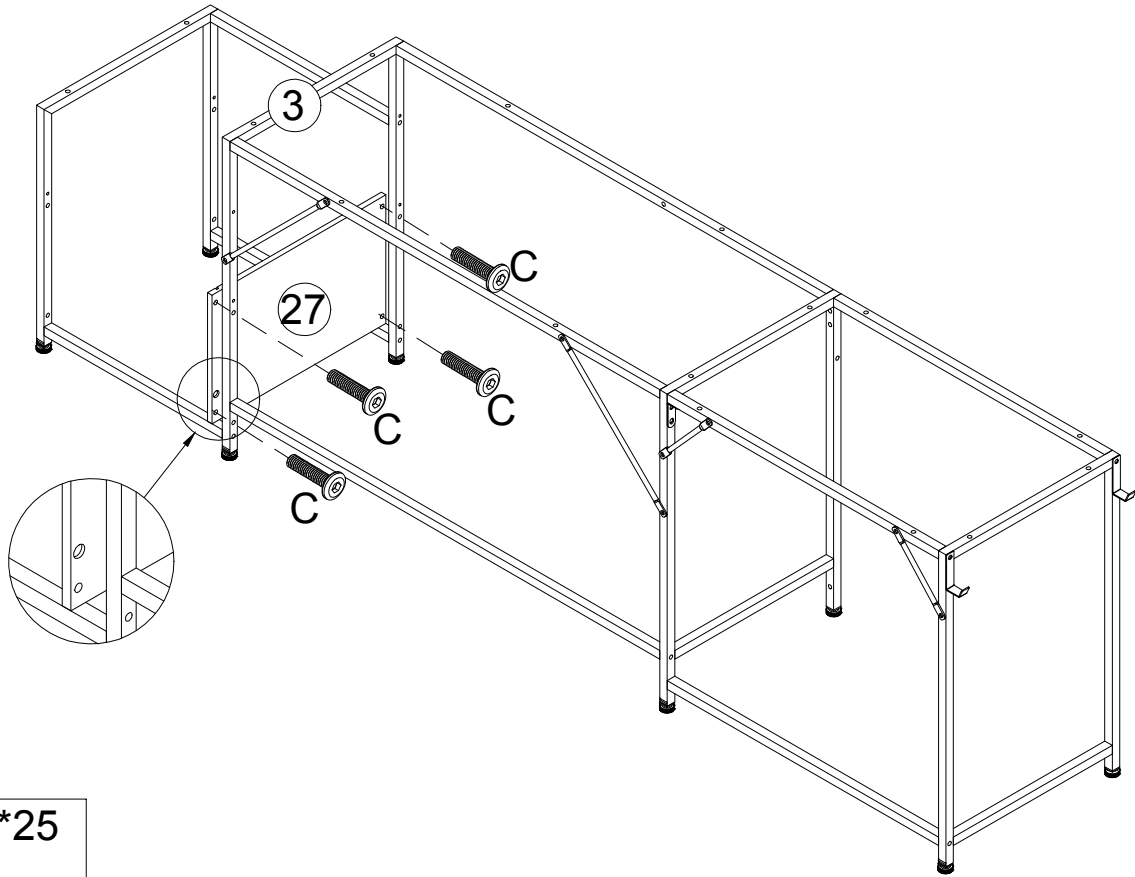


STEP 36

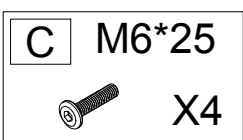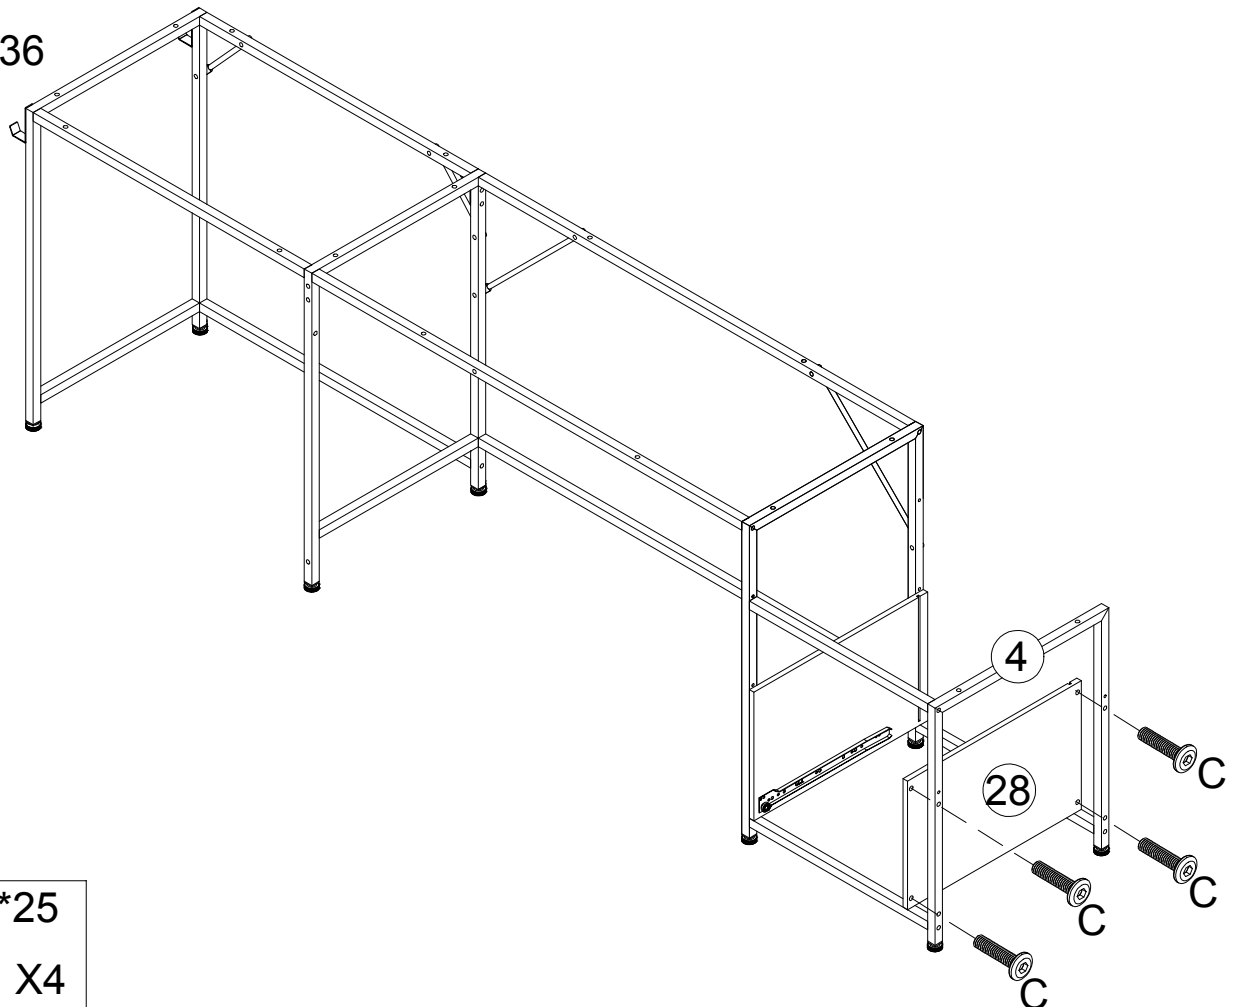


ASSEMBLY INSTRUCTION

STEP 37

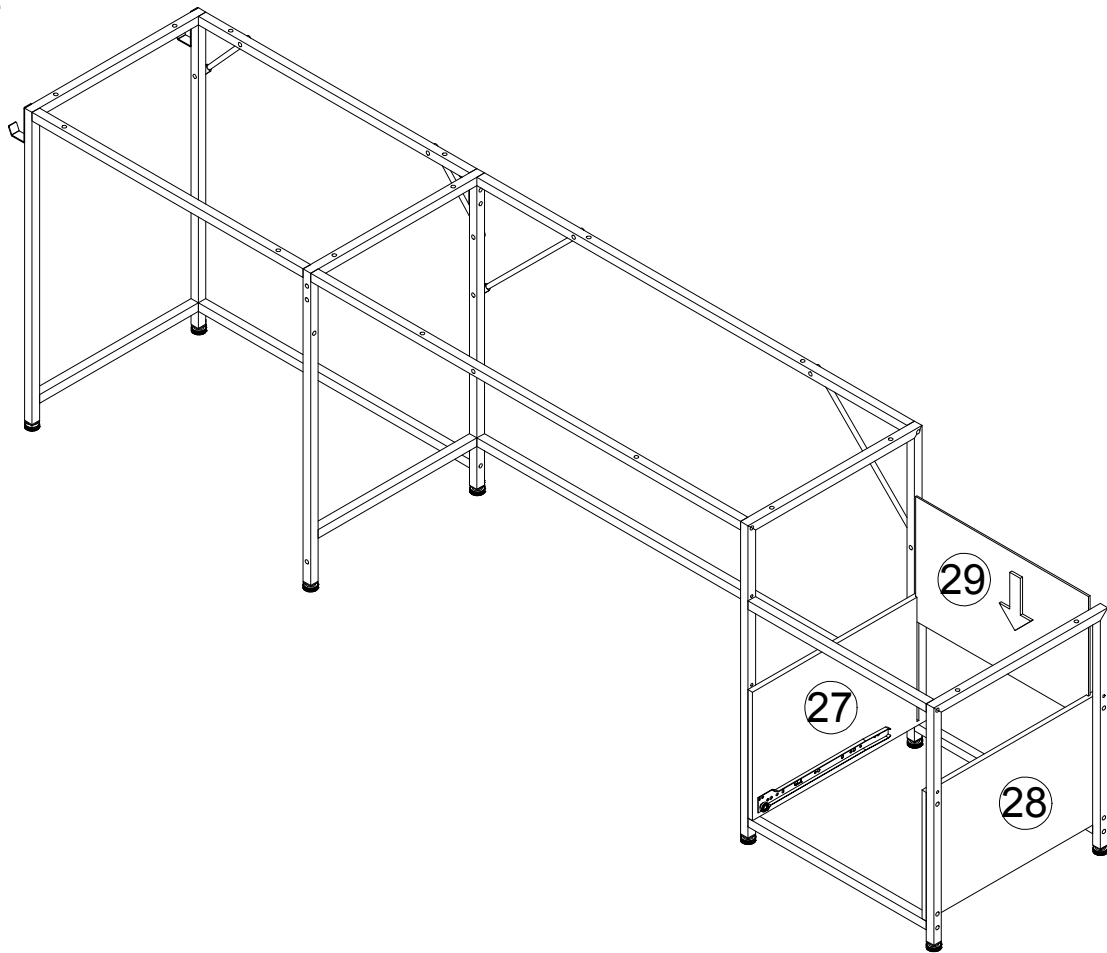


STEP 38

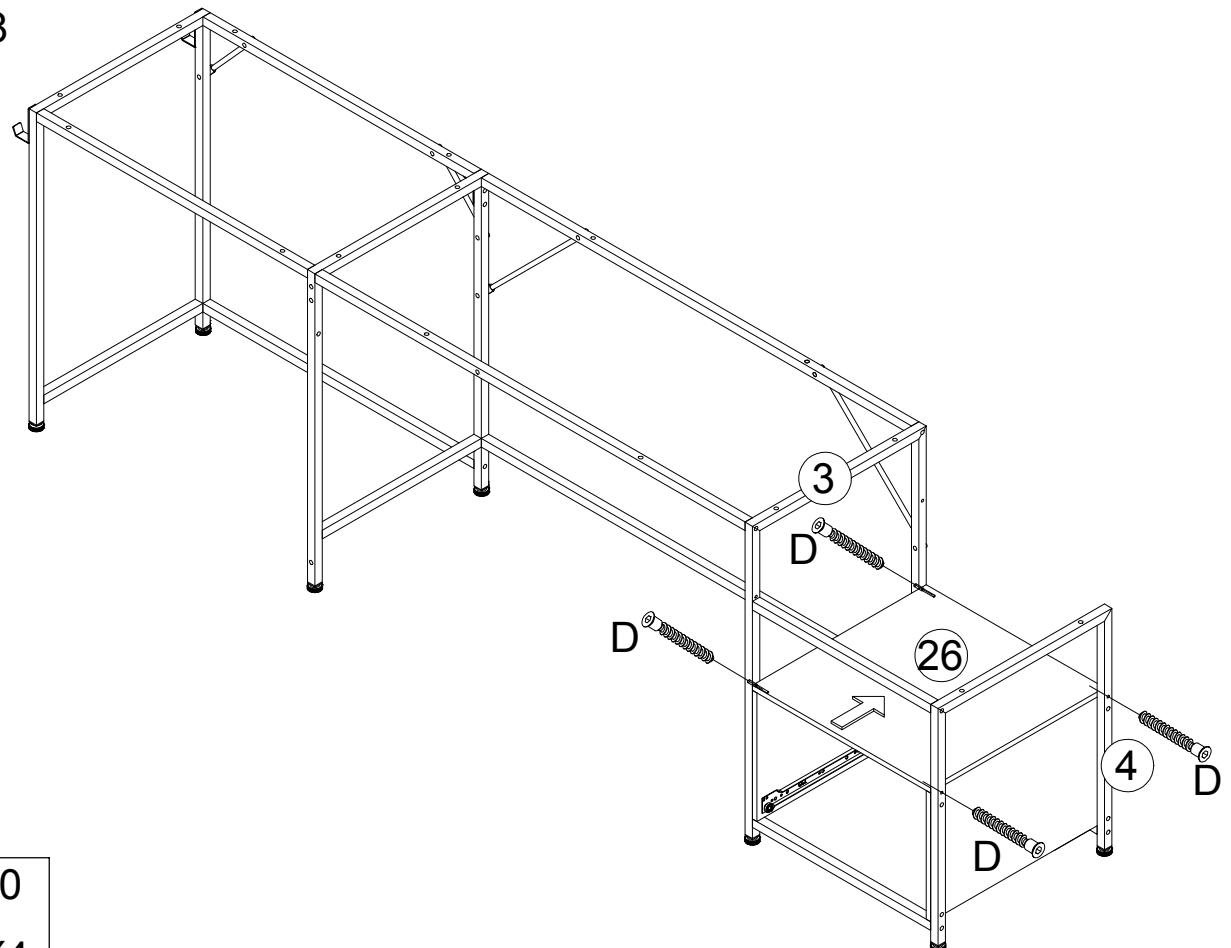



D M5*40
X4


ASSEMBLY INSTRUCTION

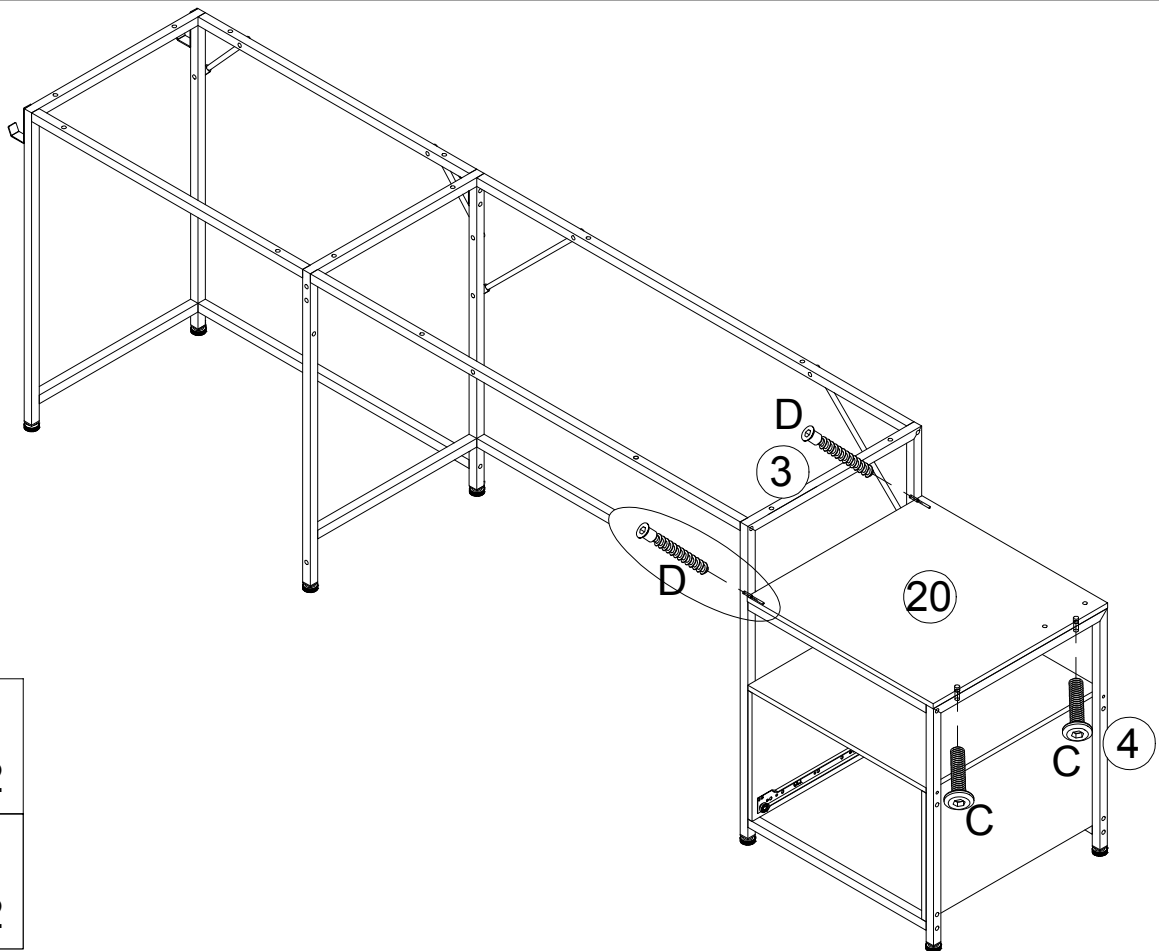

STEP 39



C	M6*25
	X2
D	M5*40
	X2

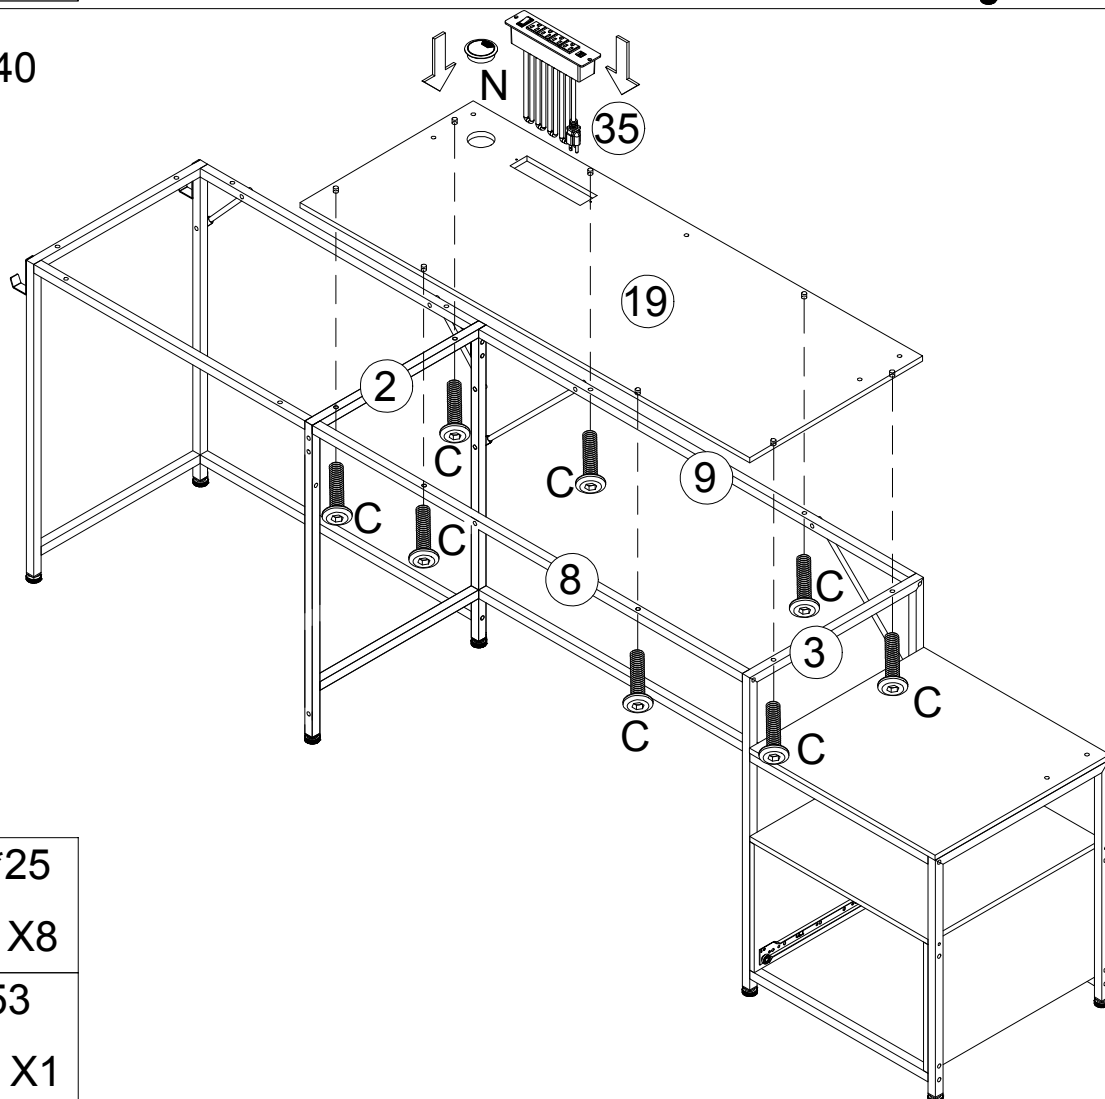
STEP 40



C	M6*25
	X8
N	Ø53
	X1


ASSEMBLY INSTRUCTION

STEP 41

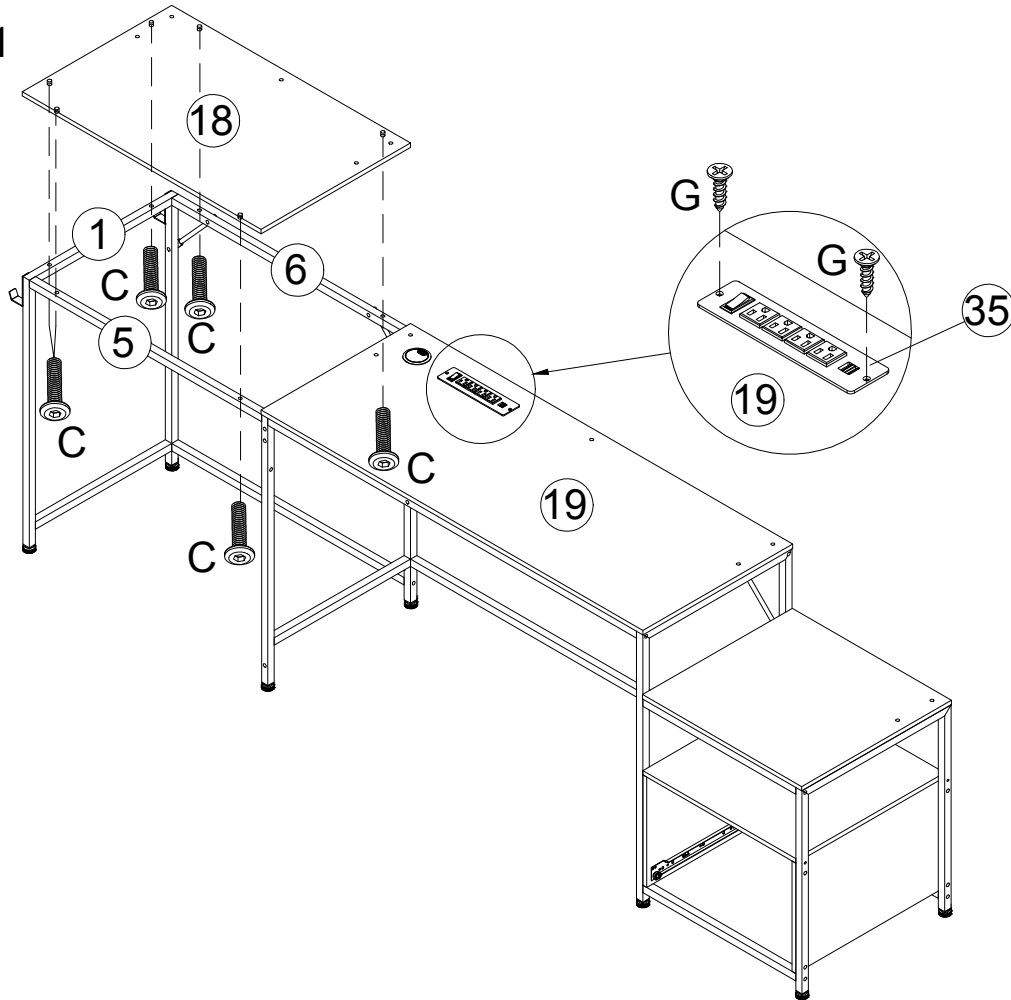


STEP 42


Note that when the drawer is installed, it is inclined upward and the bottom wheel of the drawer is stuck in the CR or CL rail grooves.

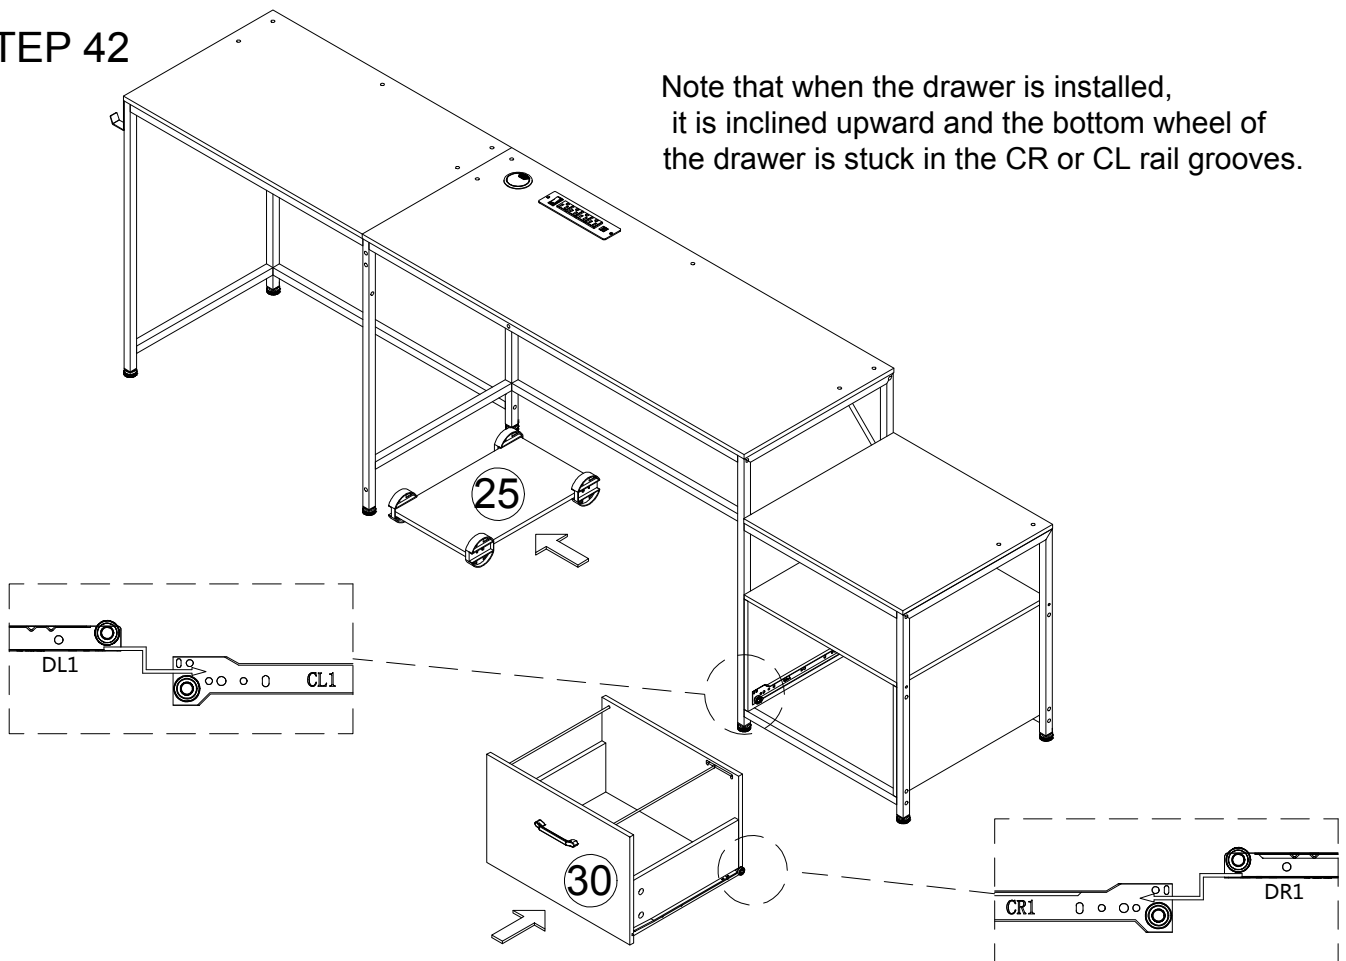


ASSEMBLY INSTRUCTION

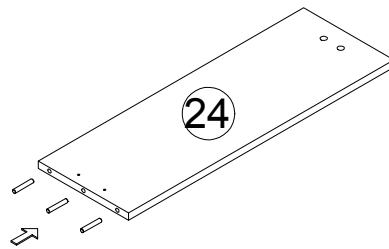

STEP 43



J	Ø6*35
	X3

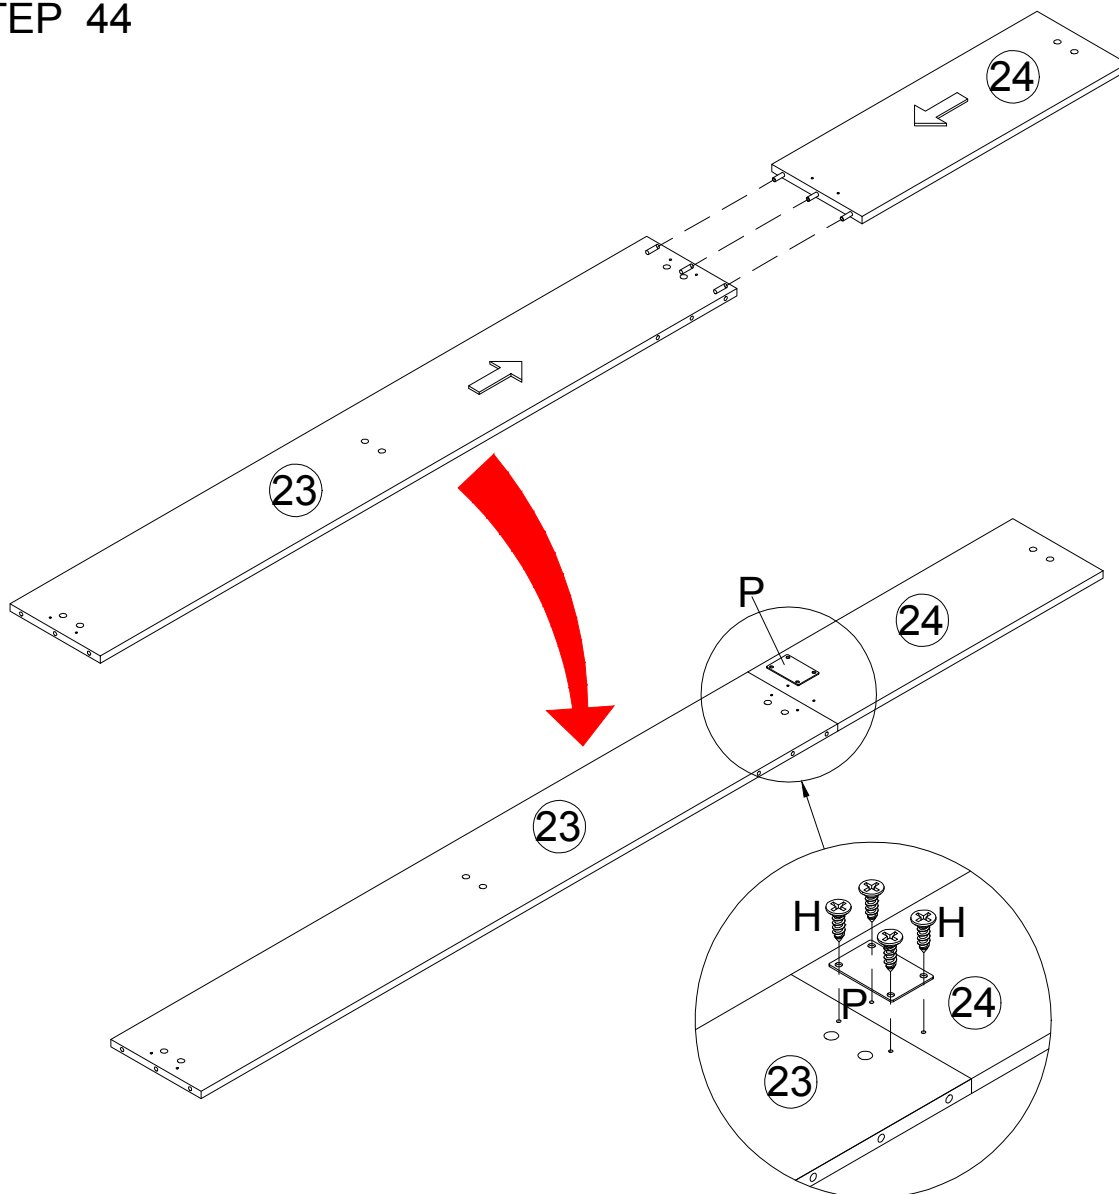
STEP 44




H	M3.5*12
	X4
P	40*60
	X1

ASSEMBLY INSTRUCTION

STEP 45

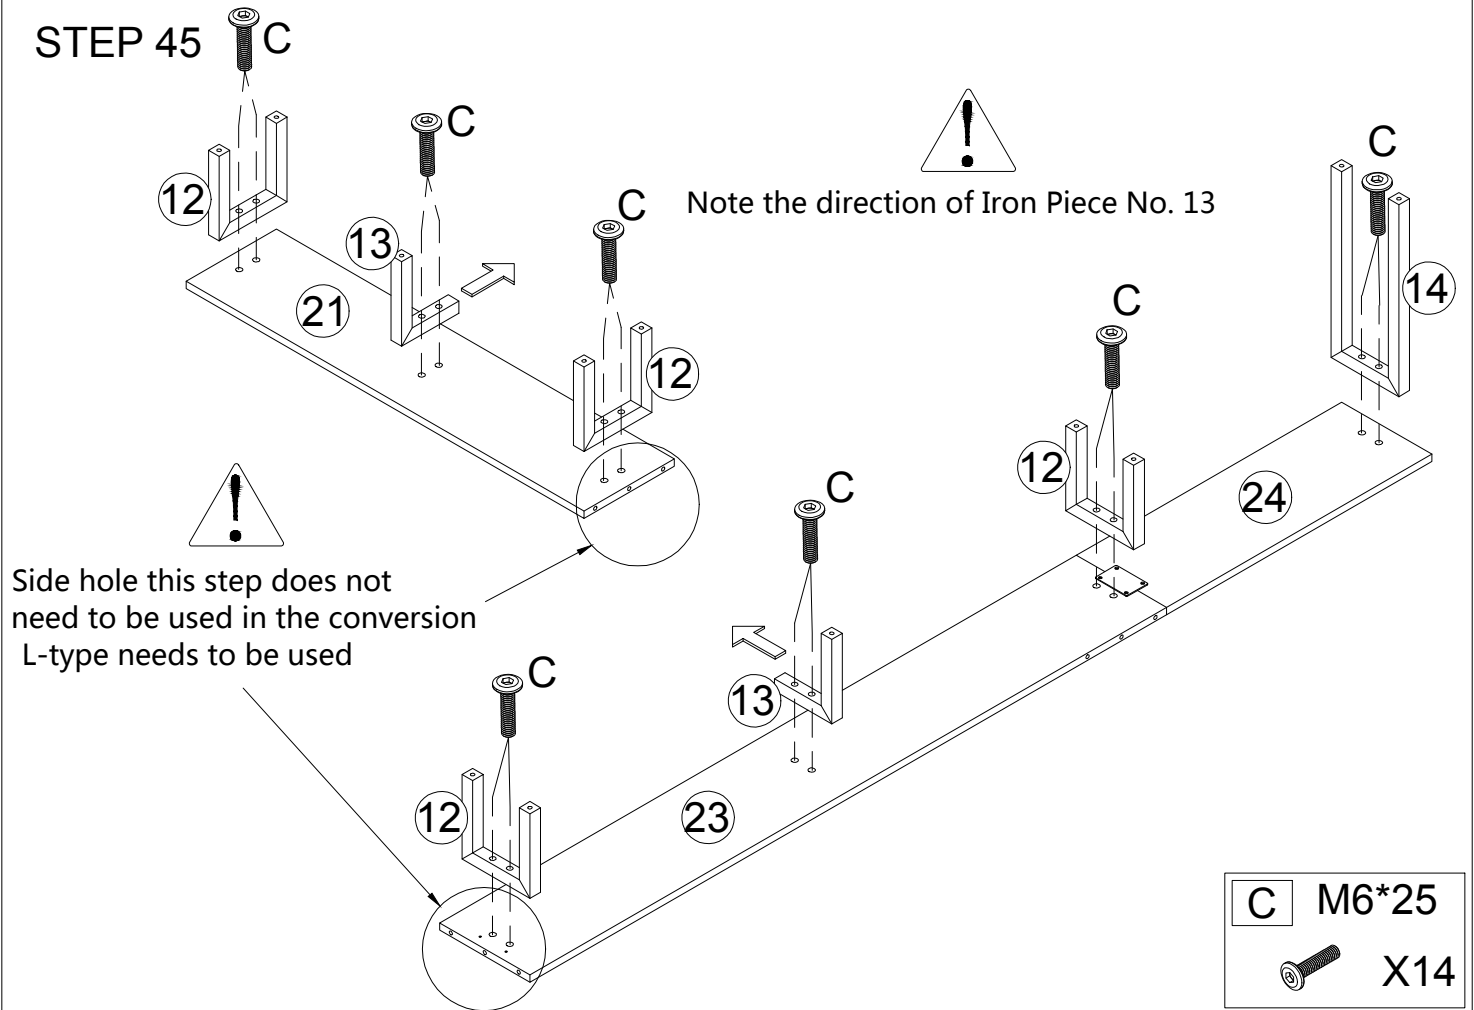


STEP 46

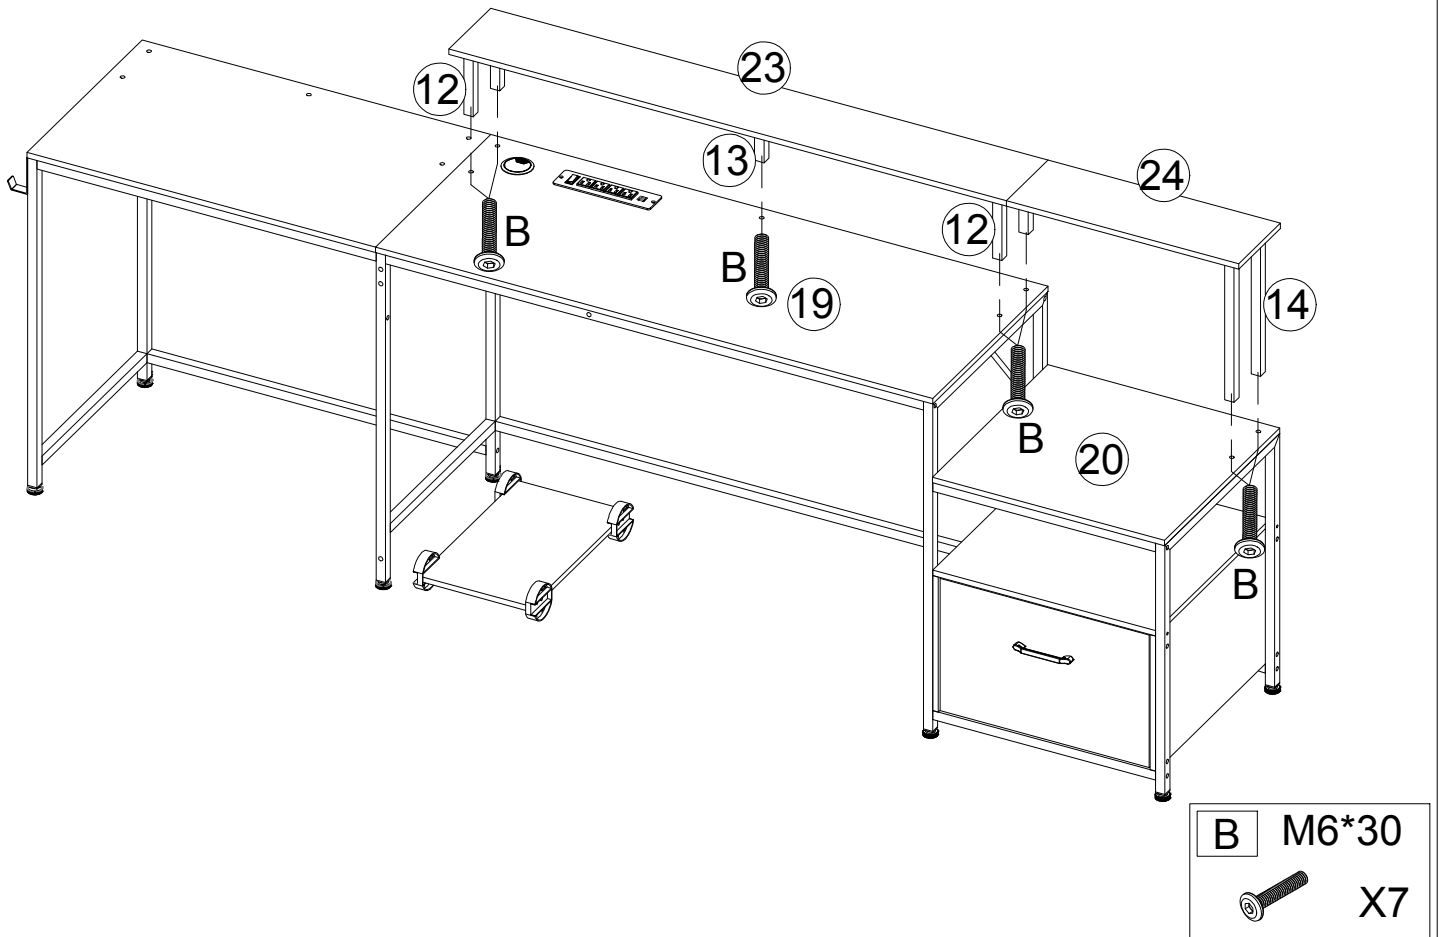

ASSEMBLY INSTRUCTION

STEP 47

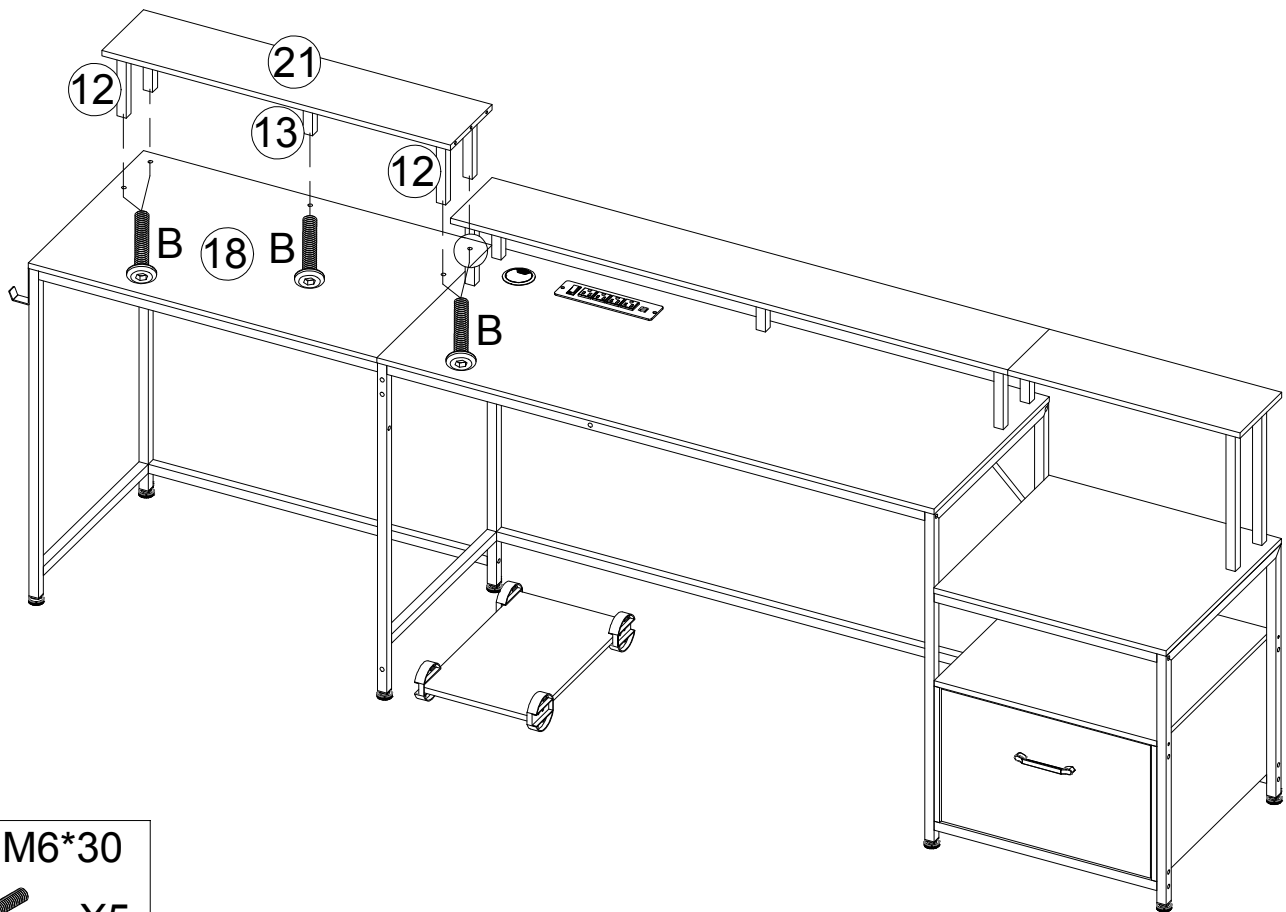


B M6*30



X5

STEP 48

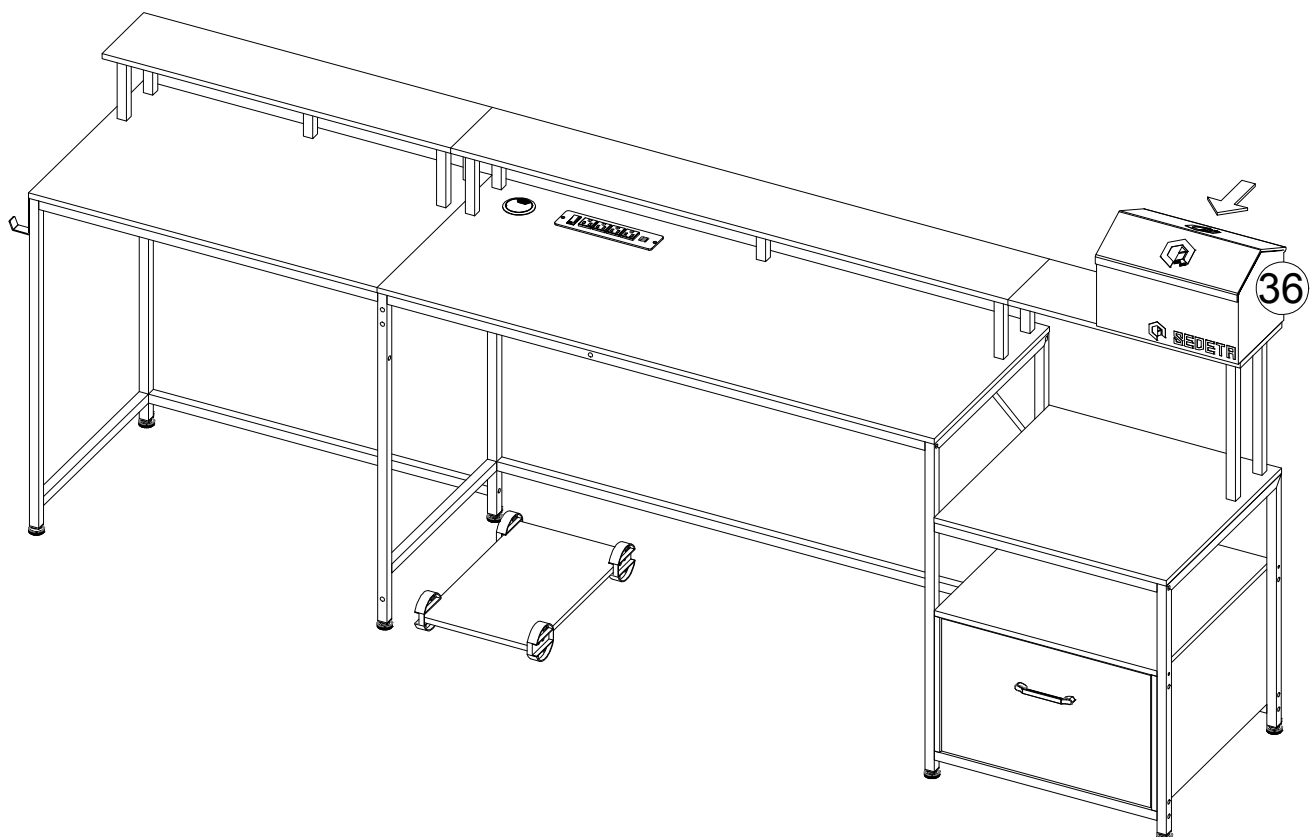


ASSEMBLY INSTRUCTION



STEP 49

The light strip can be pasted to the desired position according to your own needs.

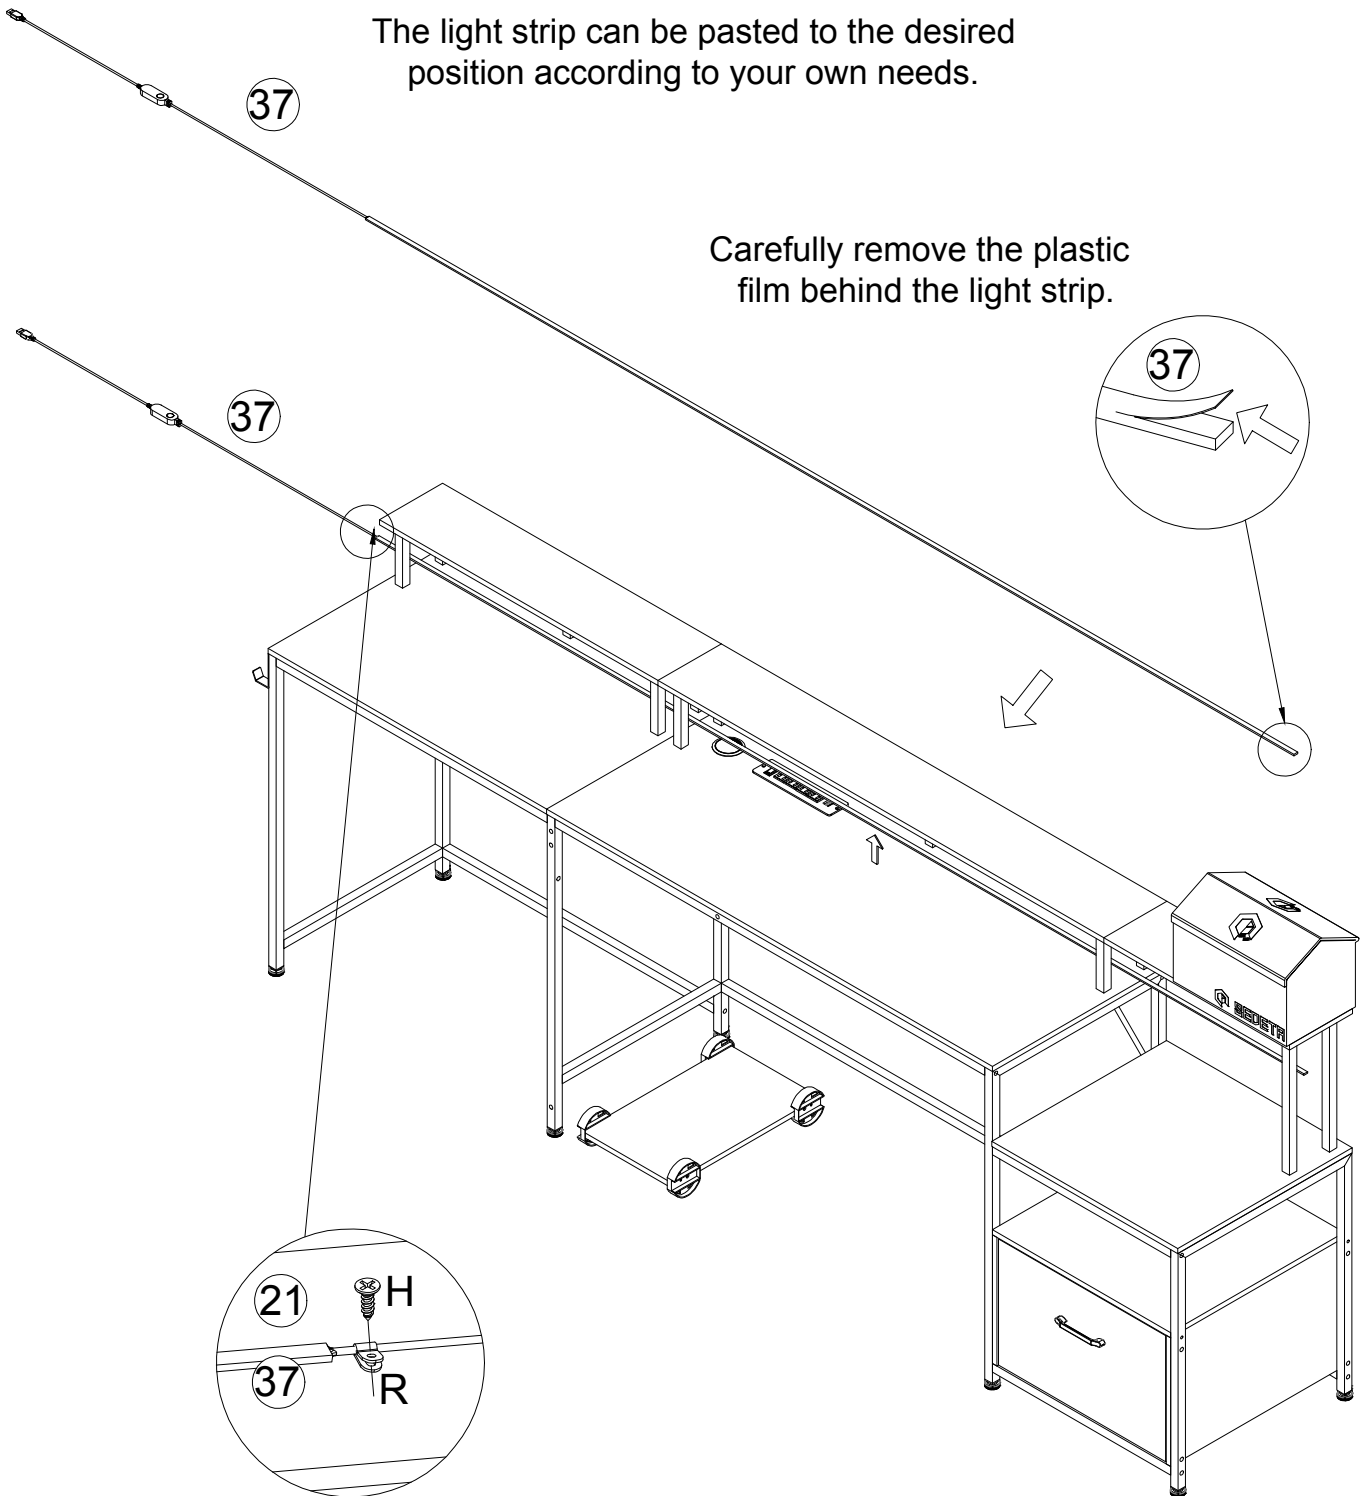Carefully remove the plastic film behind the light strip.



Note: Install R accessories, can better prevent the 37 lamp belt from falling, you can choose to install or not install R accessories.

H	M3.5*12
	X1
R	
	X1