
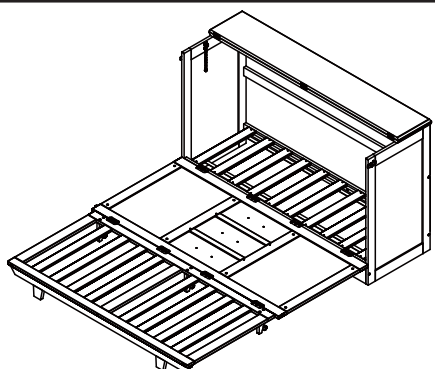


FULL > QUEEN

ASSEMBLY INSTRUCTIONS

Before assembling your Murphy bed, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726

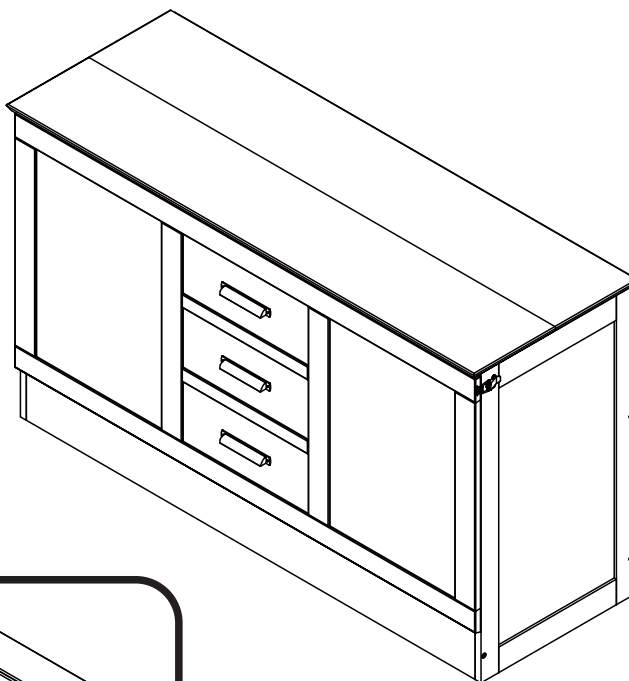

CODE	ITEM	
MB-CB-CST	C-6731X	C-6741X
MB-DOP-CST	C-6732X	C-6742X

PO :

HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

- A** Wood dowel - 16 pcs
Spare - 2 pcs
- B** JCB M6 X 25mm - 4 pcs
Spare - 1 pc
- C** Wood screw 1/2" - 24 pcs
Spare - 2 pcs
- D** Wood screw 5/8" - 36 pcs
Spare - 2 pcs
- E** Wood screw 1" - 20 pcs
Spare - 2 pcs
- F** Barrel nut M6 X 14mm - 20 pcs
Spare - 1 pc
- G** JCB M6 X 30mm - 6 pcs
Spare - 1 pc
- H** JCB M6 X 65mm - 6 pcs
Spare - 1 pc
- I** JCB M6 X 100mm - 14 pcs
Spare - 1 pc
- J** Spring Clip - 2 Set
Set with screw
- K** Library Pull - 3 pcs
Set with screw
- L** Allen wrench - 1 pc
Spare - 1 pc

FULL > QUEEN PARTS LIST

01 HARDWARE — C-6731X C-6741X

02 TOP PANEL 1PC

03 BACK PANEL 2 PCS

04 MIDDLE BACK RAIL 1PC

05 BOTTOM FRONT RAIL 1PC

06 BOTTOM BACK RAIL 1PC

07 TOP DOOR RAIL 1PC

08 BOTTOM DOOR RAIL 1PC

09 DOOR SIDE RAIL 2PCS

10 MIDDLE DOOR RAIL 2PCS

11 DOOR HORIZONTAL MID RAIL 2PCS

12 TOP FOOTBOARD RAIL 1PC

13 BOTTOM FOOTBOARD RAIL 1PC

14 SLAT 1 1PC

15 SLAT 2 1PC

16 SLAT 3 1PC

17 FOOTBOARD LEG 1PC

18 MIDDLE LEG 3PCS

19 DOOR PANEL 2PCS

20 DOOR PANEL 2 3PCS

21 SLAT 4 8PCS

22 SLAT KIT 2 SET

23 LEFT SIDE PANEL 1PC

24 RIGHT SIDE PANEL 1PC

25 FOLDING MATTRESS
SOLD SEPARATELY

C-6731X



C-6741X

1 BOX

C-6732X



C-6742X

1 BOX

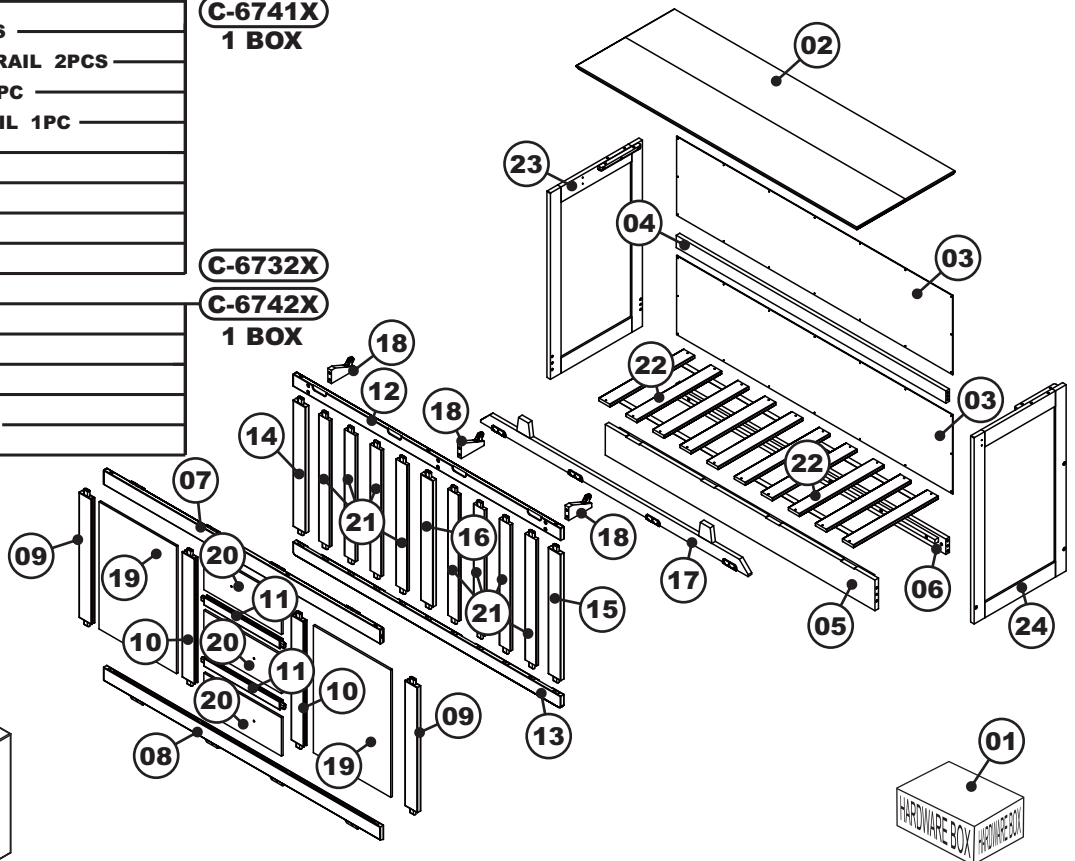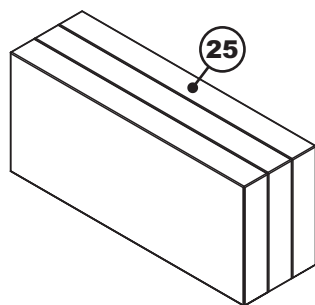

STEP 1


Insert wooden dowels (A) to the locator holes as shown below.

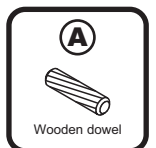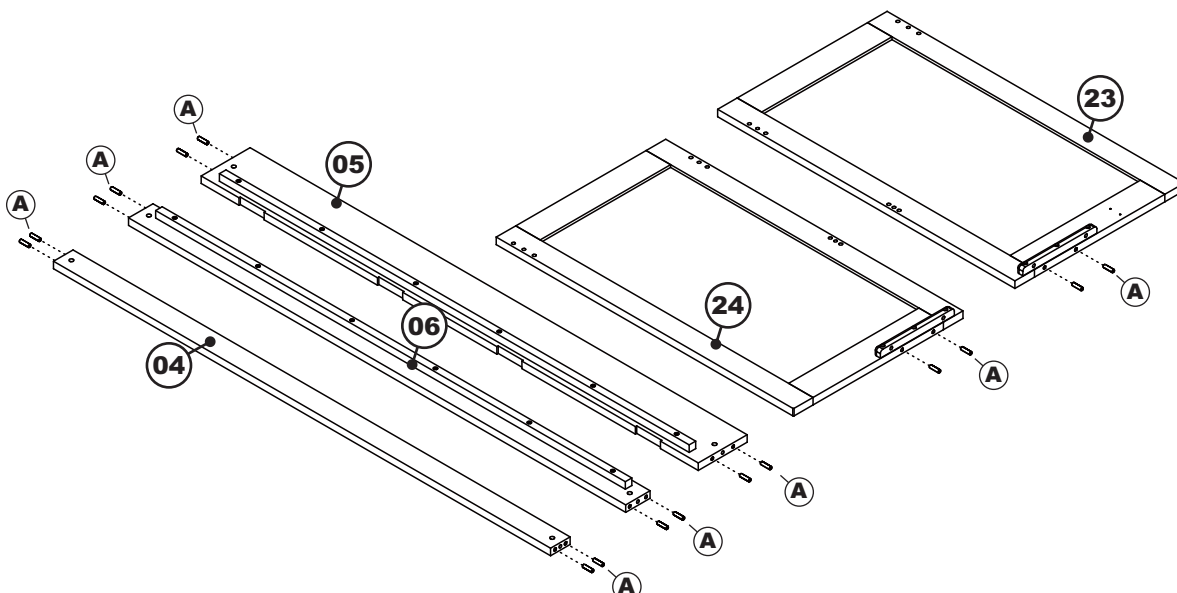

FULL > QUEEN


STEP 2

Attach botto front rail, bottom back rail and middle back rail (05)(06)(04) to the left right side panel (23) (24) as shown below, using JCB (H) and barrel nut (F). Tighten with Allen wrench (L).

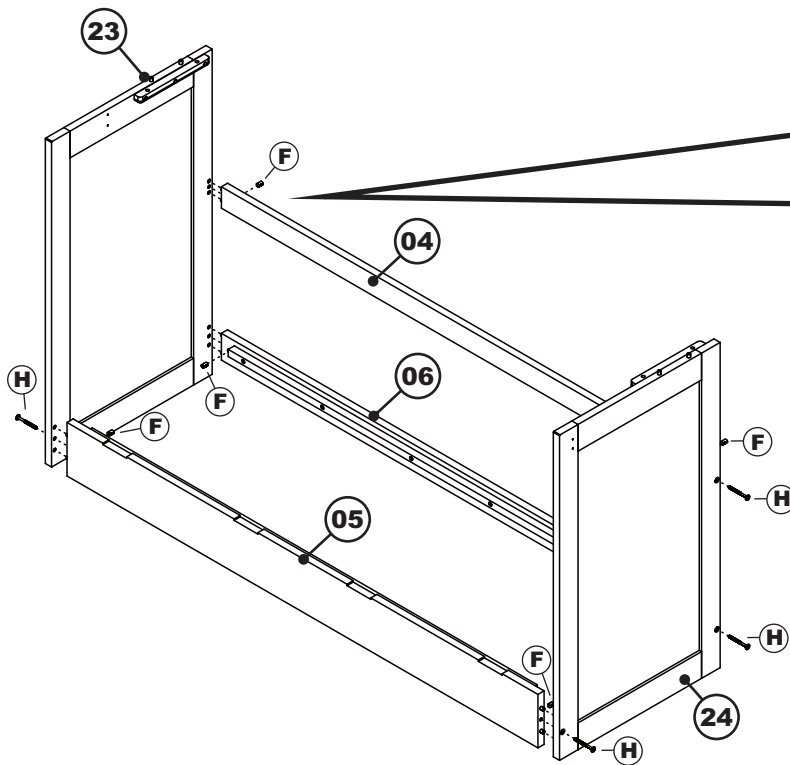

STEP 3

Evenly space 2 set slat kit (22). Attach slat kit (22) to the front (05) and back (06) rail assemblies as shown below, using wood screw (E). Tighten with Phillips head screwdriver. (Customer supplied)

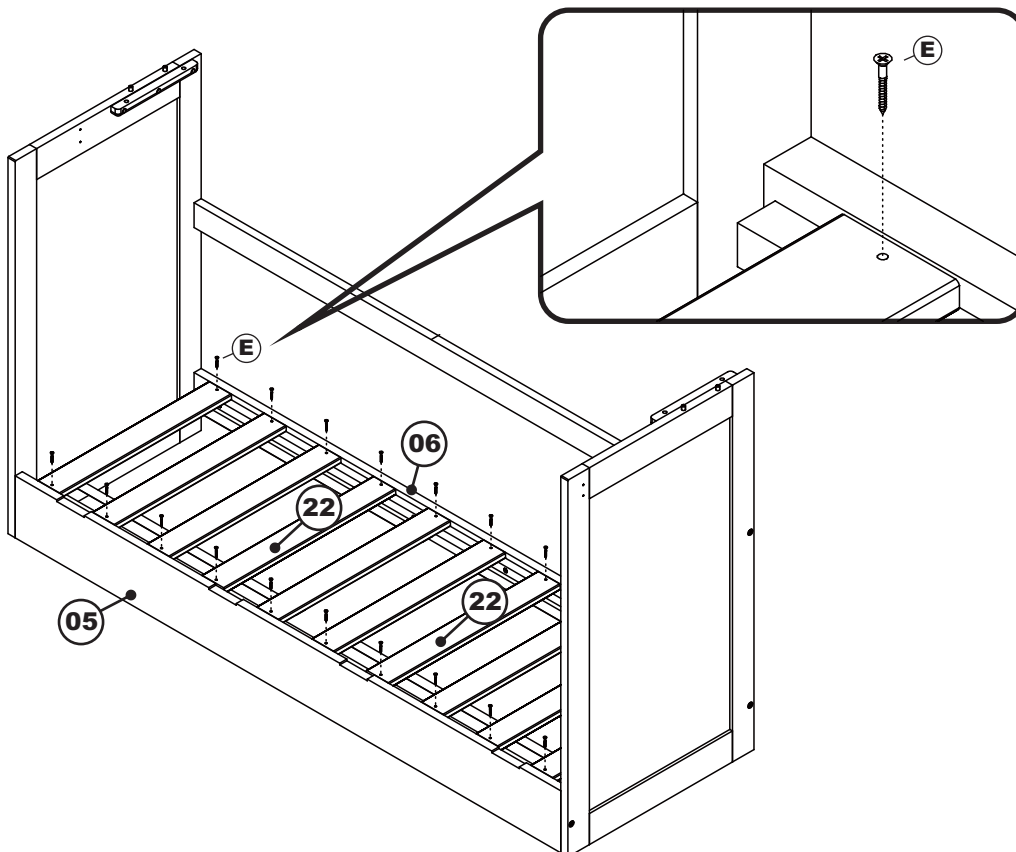


Customer supplied

FULL > QUEEN


STEP 4

Attach top panels (02) to left (23) and right (24) side panel assemblies as shown below, using JCB (B). Tighten with Allen wrench (L).

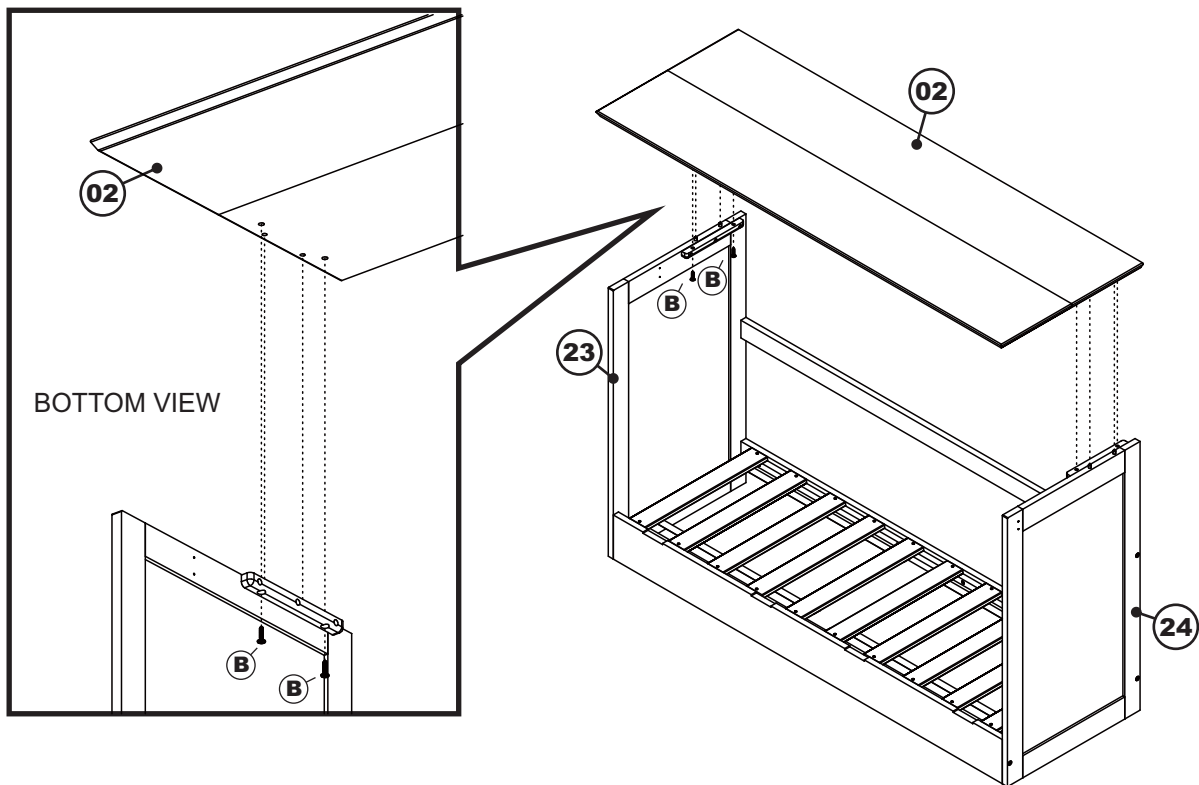

STEP 5



Attach door horizontal mid rail (11) and door panel 2 (20) to the middle door rail (10) as shown below, using wood screw (C). Tighten with Phillips head screwdriver. (Customer supplied)

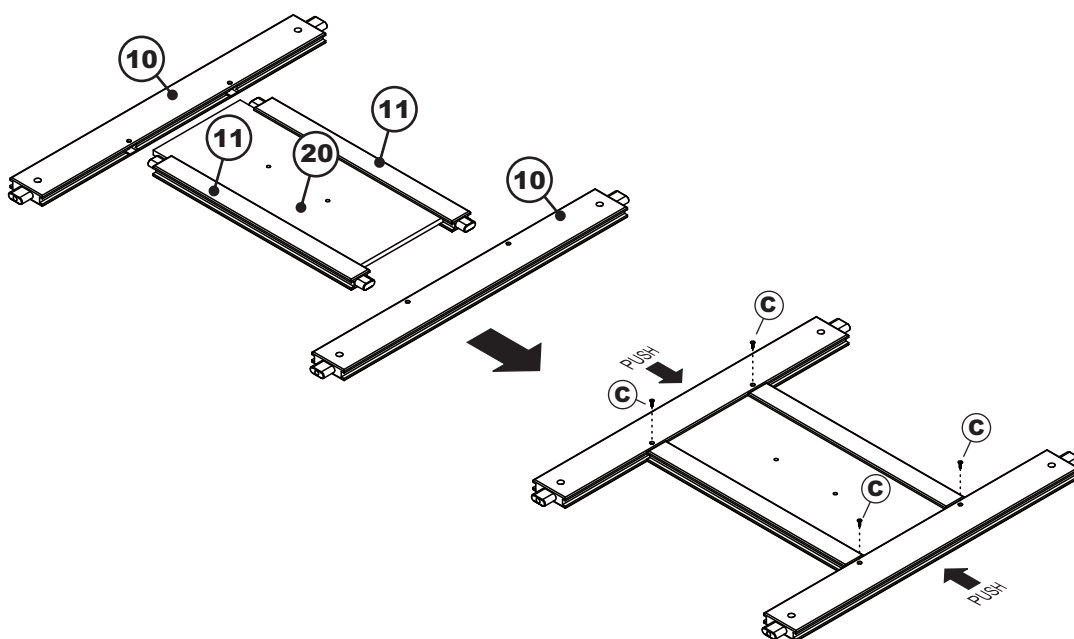

FULL > QUEEN


STEP 6

Insert door panel 2 (20) into grooves of middle door rails (10). Attach top door rail (07) to the middle door assemblies as shown below, using JCB (I) and barrel nut (F). Tighten with Allen wrench (L).

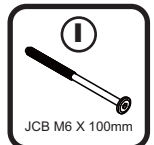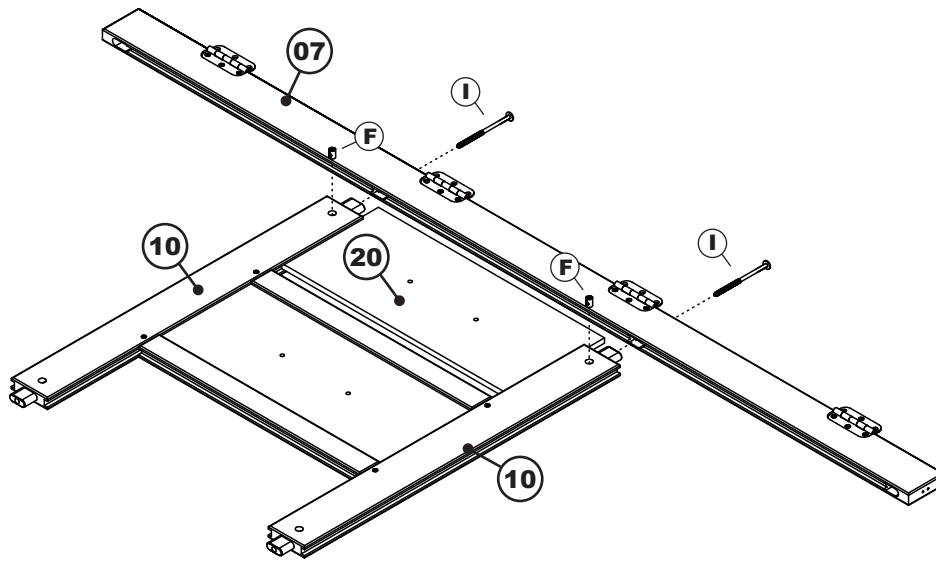

STEP 7



Attach door side rail (09) to the top door rail (07) as shown below, using JCB (I) and barrel nut (F). Tighten with Allen wrench (L). Insert door panel (19) and door panel 2 (20) into groove of door rail.

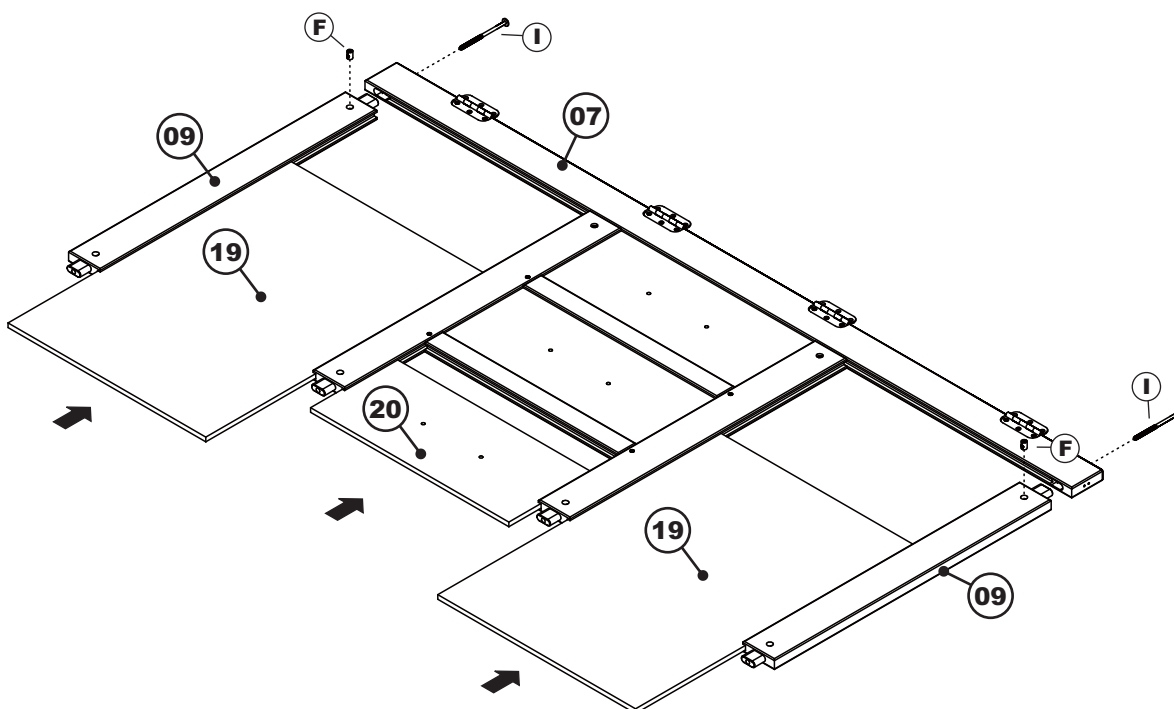

FULL > QUEEN



STEP 8

Attach bottom door rail (08) to the door assemblies as shown below, using JCB (I) and barrel nut (F). Tighten with Allen wrench (L).

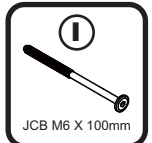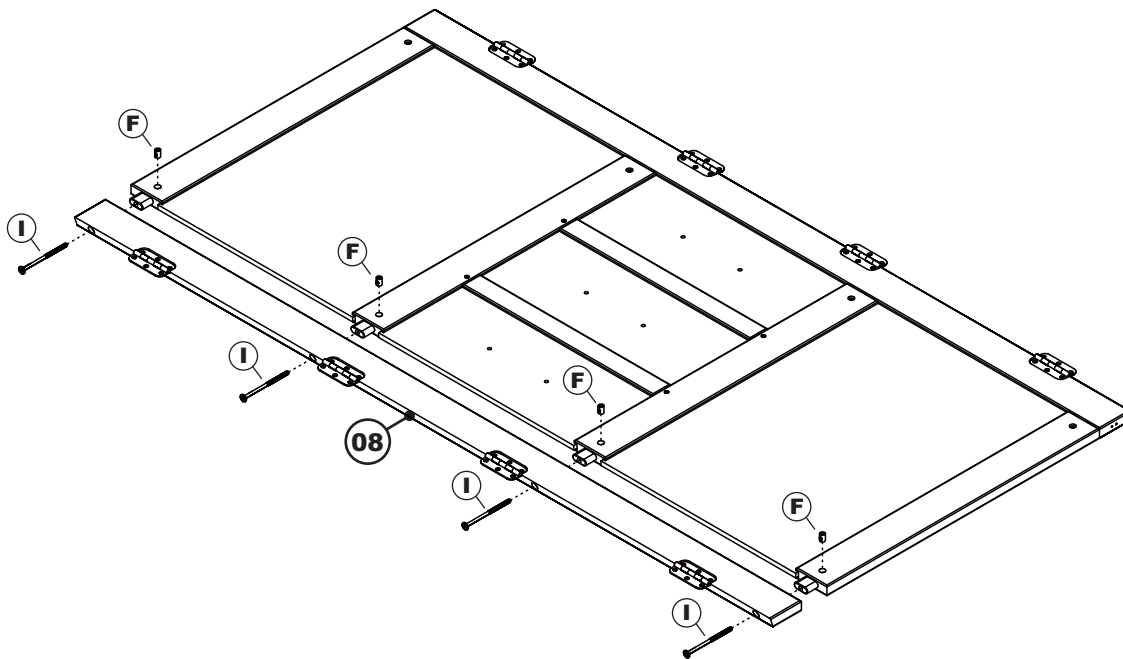


STEP 9

Attach slat 1, 2, 3, 4 (14) (15) (16) (21) to the top footboard rail (12) as shown below, using JCB (I) and barrel nut (F). Tighten with Allen wrench (L).

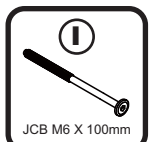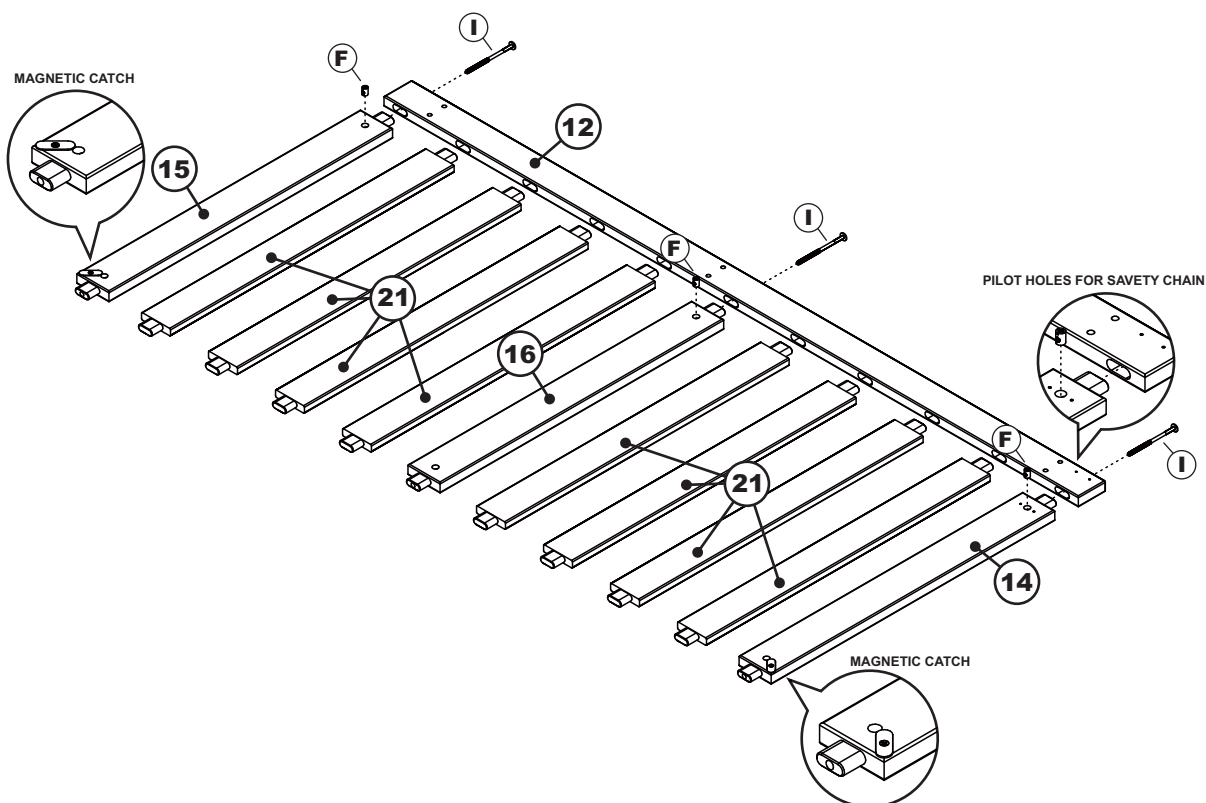


FULL > QUEEN


STEP 10 Attach bottom footboard rail (13) to the slat assemblies as shown below, using JCB (I) and barrel nut (F). Tighten with Allen wrench (L).

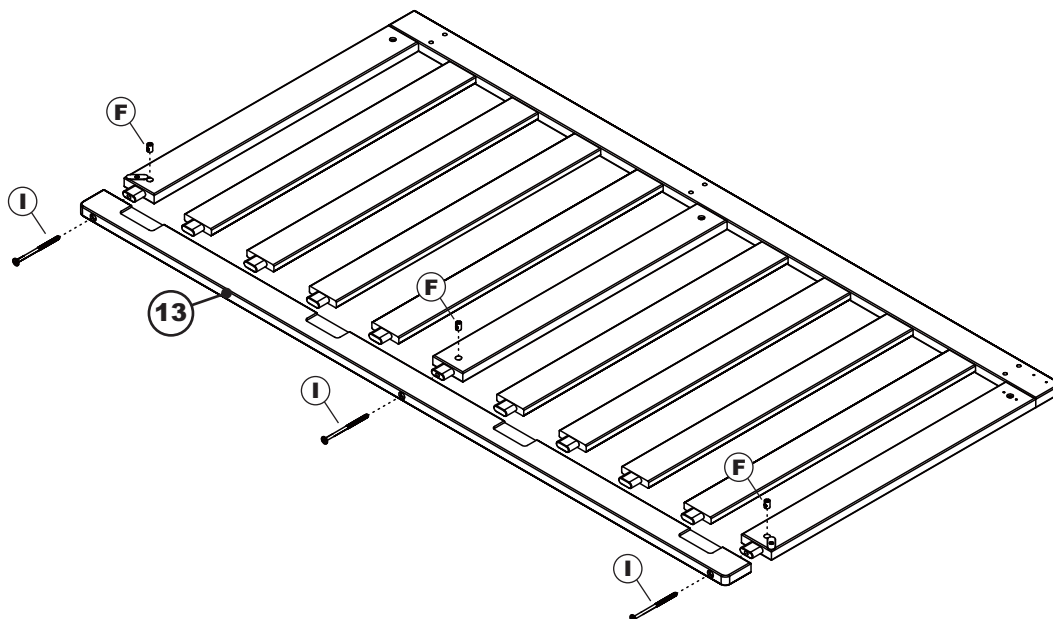

Adult assembly

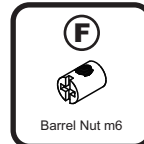

Barrel Nut m6

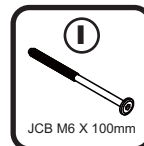


JCB M6 X 100mm



Allen wrench

STEP 11 Attach footboard leg (17) to the footboard rail assemblies as shown below, using wood screw (D) tighten with Phillips head screwdriver. (Customer supplied)

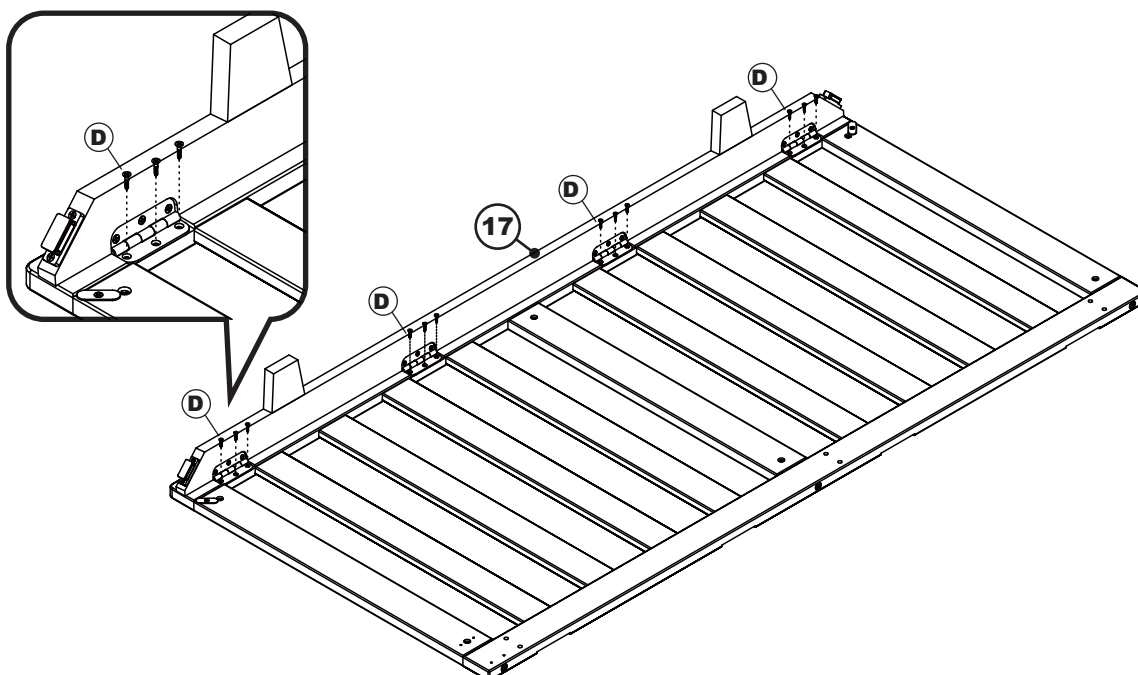


Adult assembly




Wood screw 5/8"

FULL > QUEEN

STEP 12 Attach middle leg (18) to the footboard rail assemblies as shown below, using JCB (G). Tighten with Allen wrench (L).

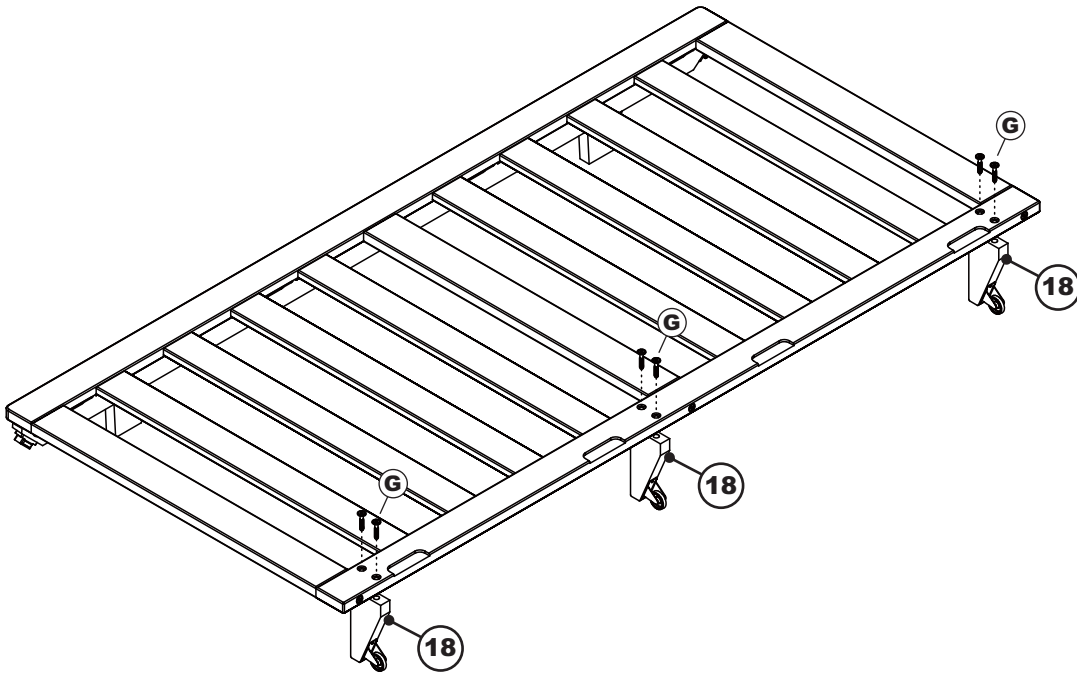



STEP 13 Install library pull (K) and spring clip (J) as shown below, using library pull screw and spring clip screw, tighten with Phillips head screwdriver. (Customer supplied)

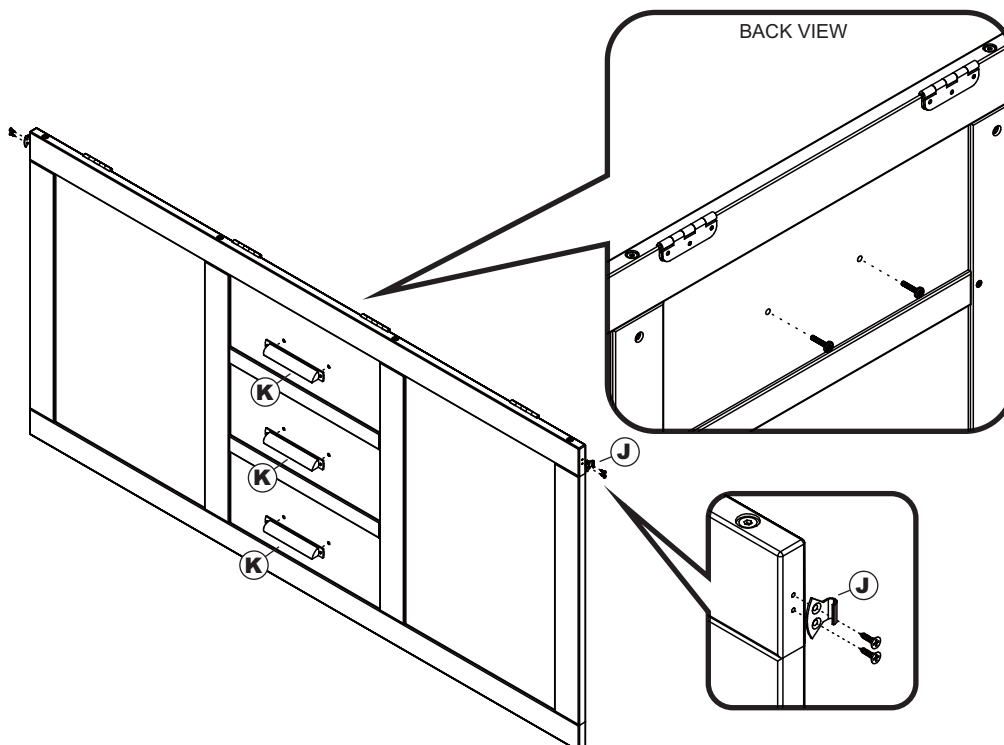

FULL > QUEEN

STEP 14

Attach footboard rail assemblies to the door assemblies as shown below, using wood screw (D) tighten with Phillips head screwdriver. (Customer supplied)



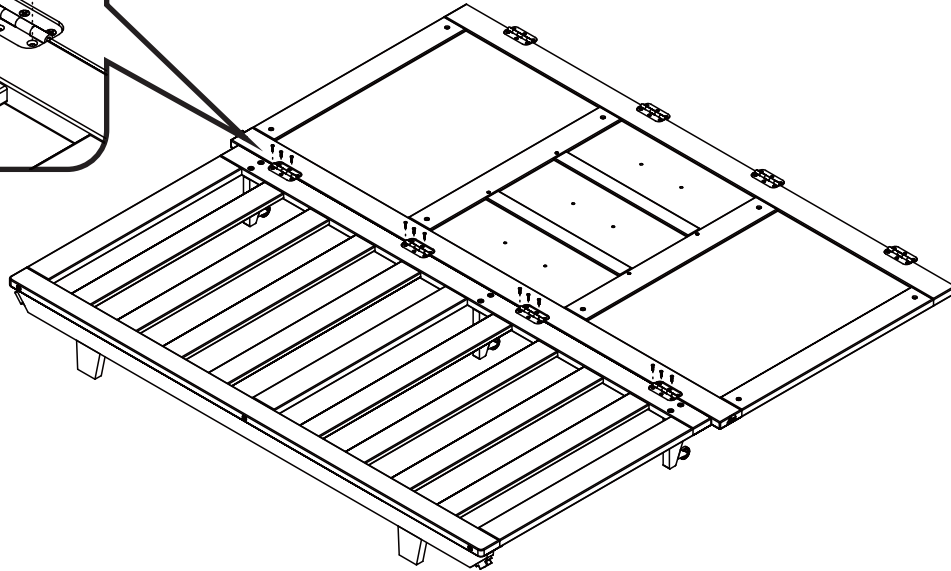
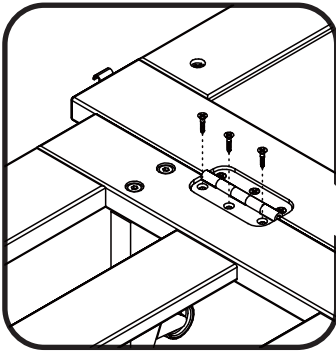


STEP 15

Lay the door down flat as shown below. Attach door hinges to the front rail, using wood screw (D). Tighten with Phillips head screwdriver. (Customer supplied)

Note: Be sure to align door with side panels in this step.


Install spring clip set with screw (J) part (b) to side panels as shown below. Tighten with Phillips head screwdriver.

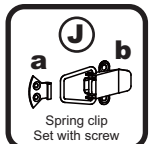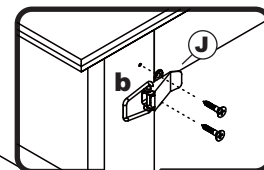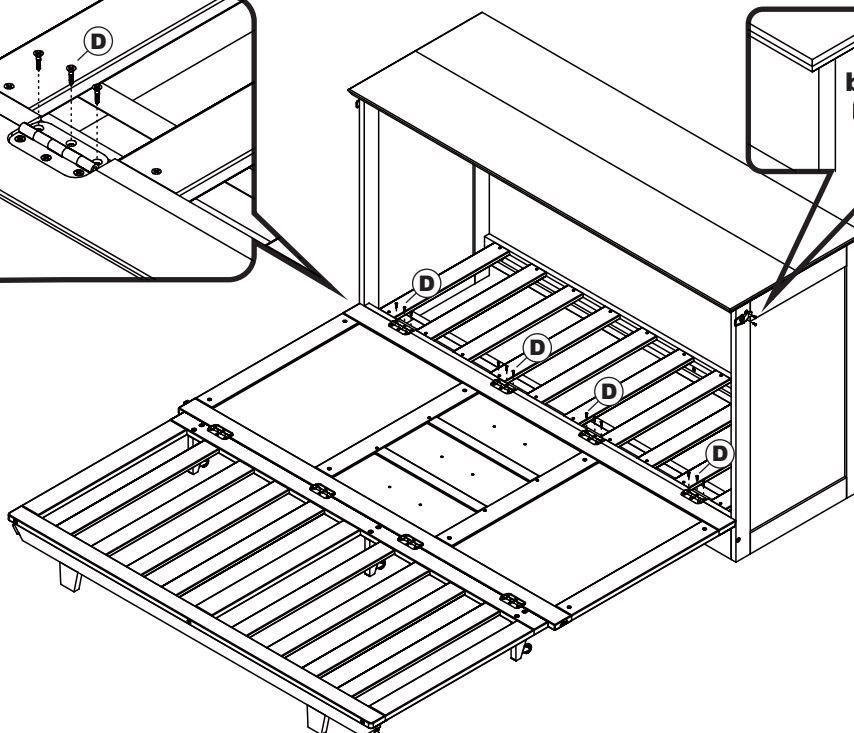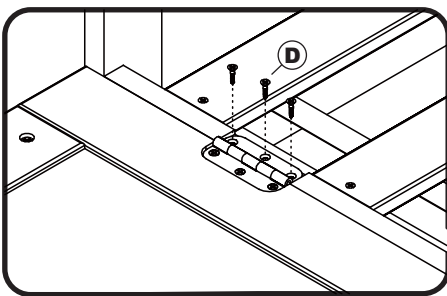


Customer supplied

STEP 16

- ① Lift the door and fold as shown below.

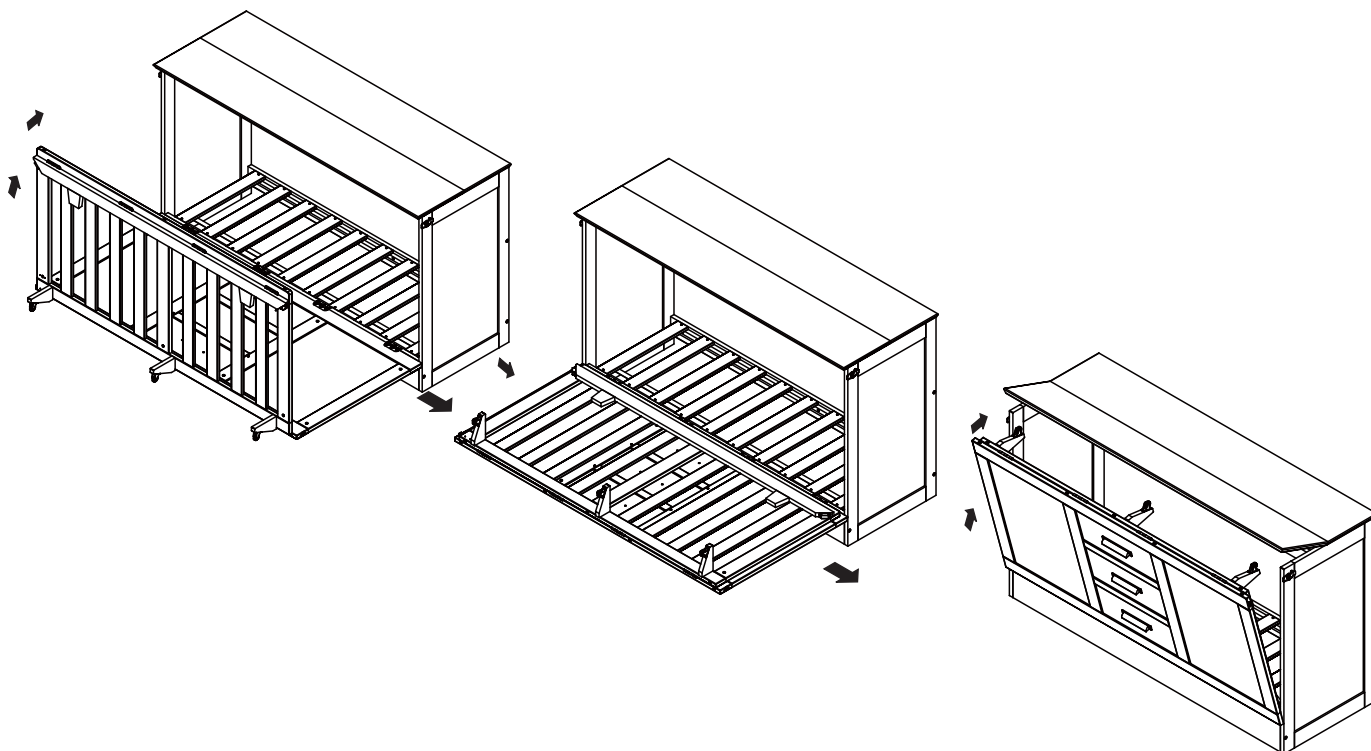


- STEP 17** Hold the door closed and latch both sides as shown below, using spring clip set (J).

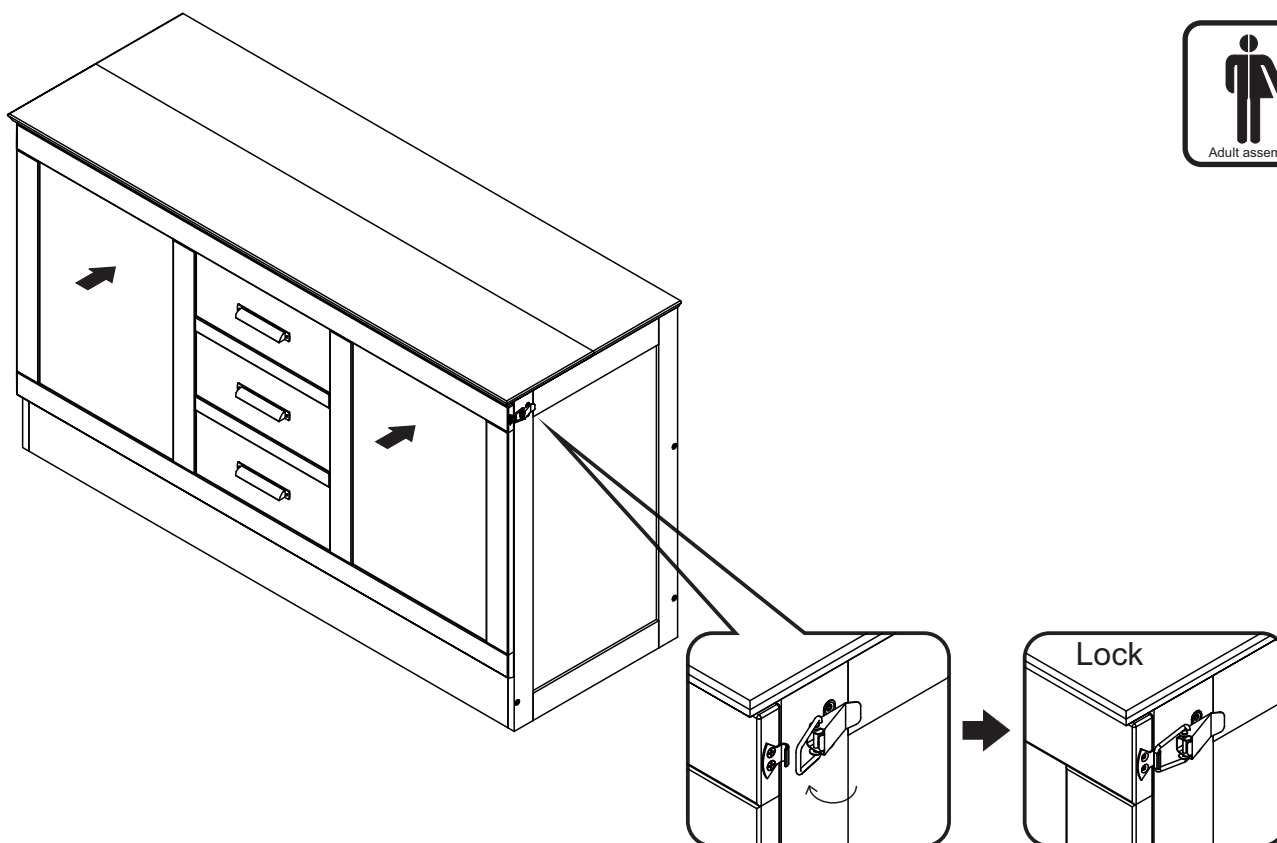


FULL > QUEEN

STEP 18 Attach back panels (03) to the back of cabinet as shown below, using wood screw (C). Tighten with Phillips head screwdriver (customer supplied).

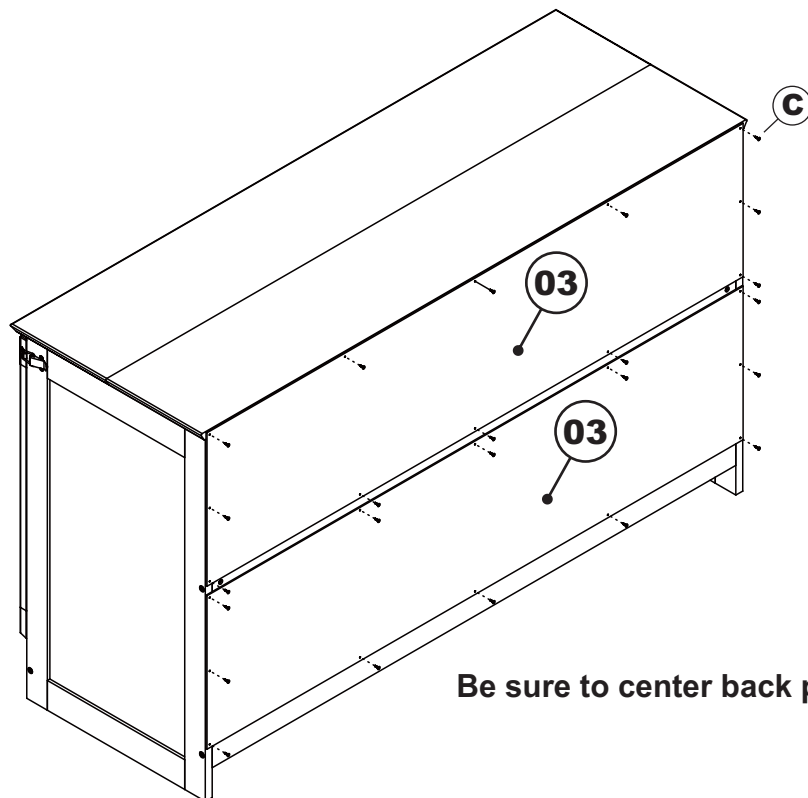



Be sure to center back panel.

STEP 19 Unlatch the door and lower carefully, folding down as shown.

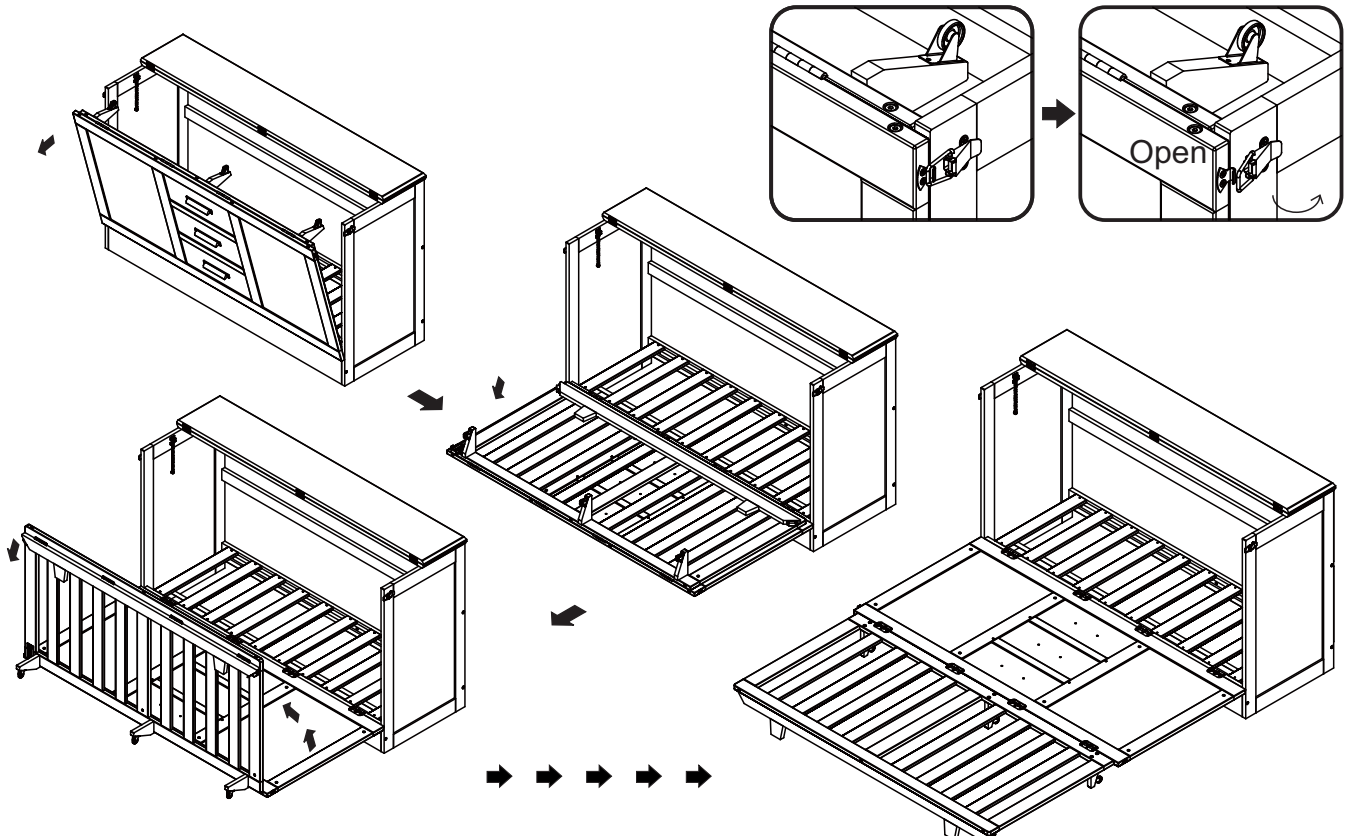

FULL > QUEEN

STEP 20 Install folding mattress (25) sold separately to the bed.

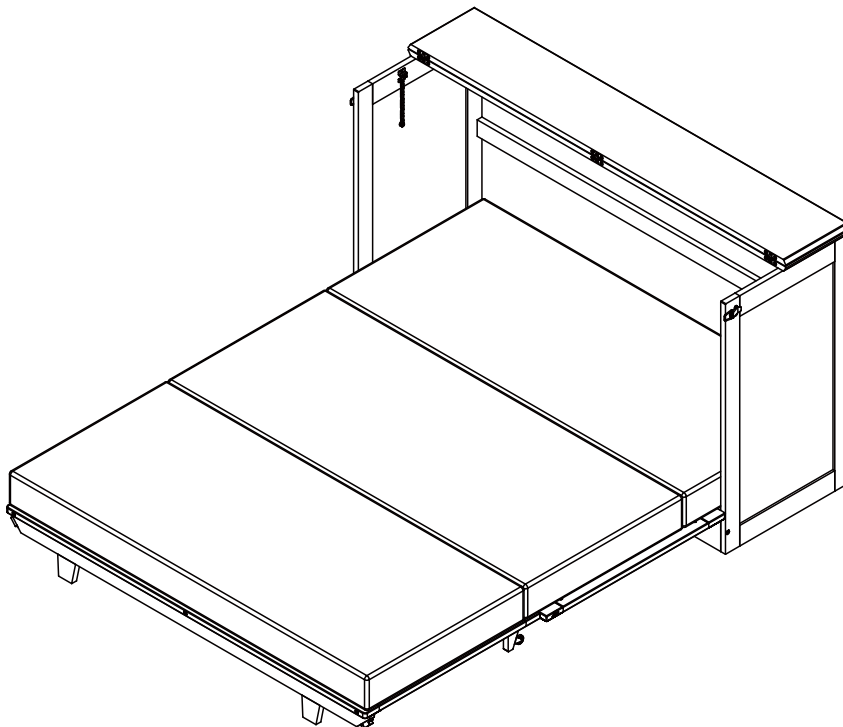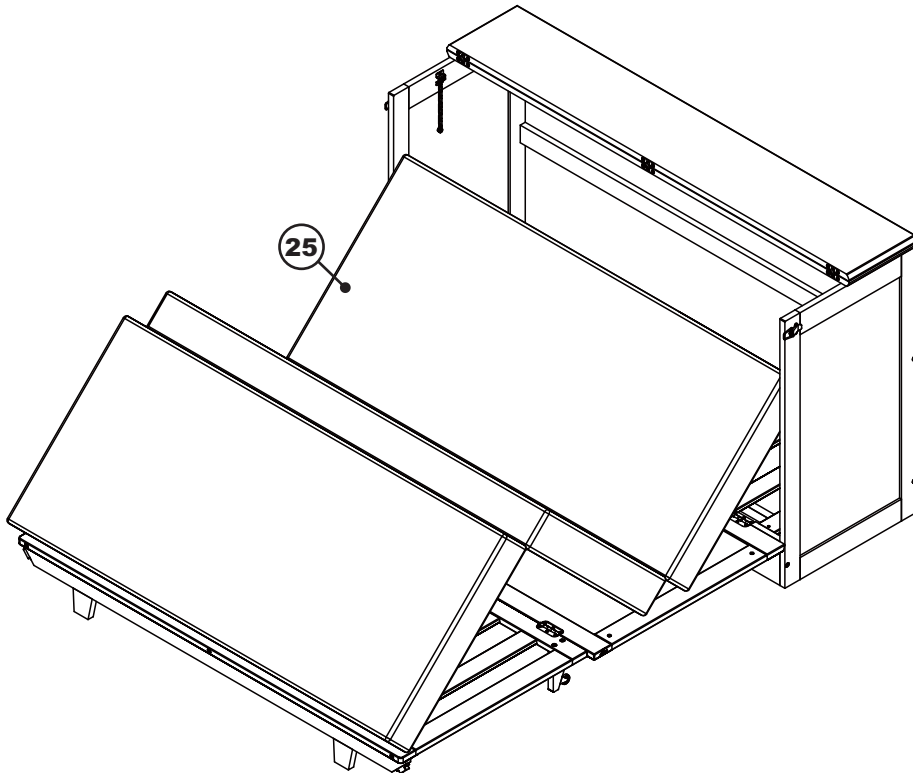

Congratulations!

Your Murphy bed is now ready for use.

We recommend that you recheck that all screws are tight,
and that all parts are secure before use to ensure lasting Safety.