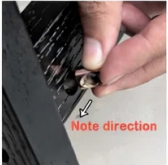
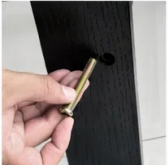


Accessories Show

					
cushion	seat cushion	armrest*2	Seat frame	bottom bracket	Leg*2
					
M6*4	M8*4	A*4	B*4	M4+M5	Silent stickers*4

Installation Instructions

				
Insert screw b into the small holes of the bottom bracket one by one	Align the bottom bracket (already inserted in #b) with the small hole in the leg	Insert #A into the pre-drilled holes on the leg in sequence	Use the M8 to align with the holes on the legs and screw it on one by one	Tighten M5 and M8 in sequence
				
Place the seat frame on top of the installed leg and bottom supports	recline the chair forward	Use the M6 to align with the holes on the bottom bracket and tighten them one by one	Tighten all the screws of the M6 screws by using the M4	Apply the Silent sticker to the bottom of the leg
				
Place the seat cushion on the assembled frame	Place the cushion on the assembled frame	Place the armrest padded zipper facing inwards on the leg	Tie the armrest straps	Installation complete